

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016 - 510 West Hastings Street
Vancouver, B.C. V6B 1L8

Telephone: 604-688-2568

Fax: 604-688-2578

ASSESSMENT REPORT

describing

**PROSPECTING, MAPPING, GEOCHEMICAL SAMPLING AND DIAMOND
DRILLING**

at the

SUN PROPERTY

Sun 1-40 YC61044-YC61083

NTS 116I/16

Latitude 66°51'N; Longitude 136°20'W

in the

Dawson Mining District
Yukon Territory

prepared by

Archer, Cathro & Associates (1981) Limited

for

SOUTHAMPTON VENTURES INC.

and

STRATEGIC METALS LTD.

by

Matthew R. Dumala, B.A.Sc., EIT
November 2007

TABLE OF CONTENTS

INTRODUCTION	1
PROPERTY LOCATION, CLAIM DATA AND ACCESS	1
HISTORY	1
GEOMORPHOLOGY	2
REGIONAL GEOLOGY	2
PROPERTY GEOLOGY	3
MINERALIZATION AND GEOCHEMISTRY	4
DIAMOND DRILLING	6
DISCUSSION AND CONCLUSIONS	7
REFERENCES	8

APPENDICES

I	STATEMENT OF QUALIFICATIONS
II	CERTIFICATES OF ANALYSIS
III	GEOLOGICAL AND GEOTECHNICAL LOGS

FIGURES

<u>No.</u>	<u>Description</u>	<u>Follows Page</u>
1	Property Location	1
2	Claim Location	1
3	Tectonic Setting	2
4	Property Geology	3
5	Stratigraphic Section	3
6	Sample Locations	4
7	Geochemistry	4
8	Drill Plan	4

TABLES

<u>No.</u>	<u>Description</u>	<u>Page</u>
I	Regional Lithological Descriptions	2
II	Drill Hole Data	4

INTRODUCTION

The Sun property hosts a thin, sheet-like massive sulphide layer enriched with nickel, molybdenum and zinc. It is located in north-central Yukon and is owned 100% by Shawn Ryan. The property and seven others are under option to Southampton Ventures Inc. as part of the NiMo Project.

This report describes exploration work that was conducted between June 24 and August 27, 2007 by Archer, Cathro & Associates (1981) Limited on behalf of Southampton Ventures. The work was supervised by the author and consisted of prospecting, mapping, geochemical sampling and diamond drilling. The author's statement of qualifications appears in Appendix I.

PROPERTY LOCATION, CLAIM DATA AND ACCESS

The Sun property consists of 40 contiguous mineral claims located in north-central Yukon Territory on NTS map sheet 116I/16 at latitude 66°51'N and longitude 136°20'W (Figure 1). The claims are registered with the Dawson Mining Recorder in the name of Shawn Ryan. Claim data are listed below while the locations of individual claims are shown on Figure 2.

<u>Claim Number</u>	<u>Grant Number</u>	<u>Expiry Date*</u>
Sun 1-40	YC61044-YC61083	February 22, 2012

* Expiry date includes 2007 work which has been filed for assessment credit but not yet accepted.

The Sun property is located 60 km north of Eagle Plains Lodge and is accessible via the Yukon highway system using the Klondike Highway and Dempster Highway. The property is situated 926 km by road north of Whitehorse.

In 2007, daily access to the property from Eagle Plains Lodge was by truck or by Bell 206B and 206L helicopters operated by Fireweed Helicopters Ltd.

HISTORY

The potential for mineralization along the contact between the Earn and Road River Groups within the Eagle Plain Basin was first recognized during a reconnaissance-scale mineral potential assessment conducted by the Yukon Geological Survey in 1997 (Héon, 2006). This assessment identified a number of anomalies over which Shawn Ryan staked the Sun property in 2007.

There has been little previous mineral exploration in the immediate vicinity of the Sun property. The closest significant work programs in 2007 were at the Nor property, 80 km to the southeast and in the Wernecke Mountains, 180 km to the southeast. Both of these programs explored for IOCG type deposits in Proterozoic basement rock.

The Eagle Plain Basin, located about 20 km southwest of the property, was the focus of extensive petroleum exploration between the mid 1950s and mid 1980s. This work included

**SOUTHAMPTON VENTURES INC.
STRATEGIC METALS LTD.**

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED


FIGURE 1


**PROPERTY LOCATION
SUN PROPERTY
NiMo PROJECT**

0 50 100 150 200 km


FILE: ...2007/NIMO/SUN-F_1-LOCATION.DWG

NOVEMBER 2007

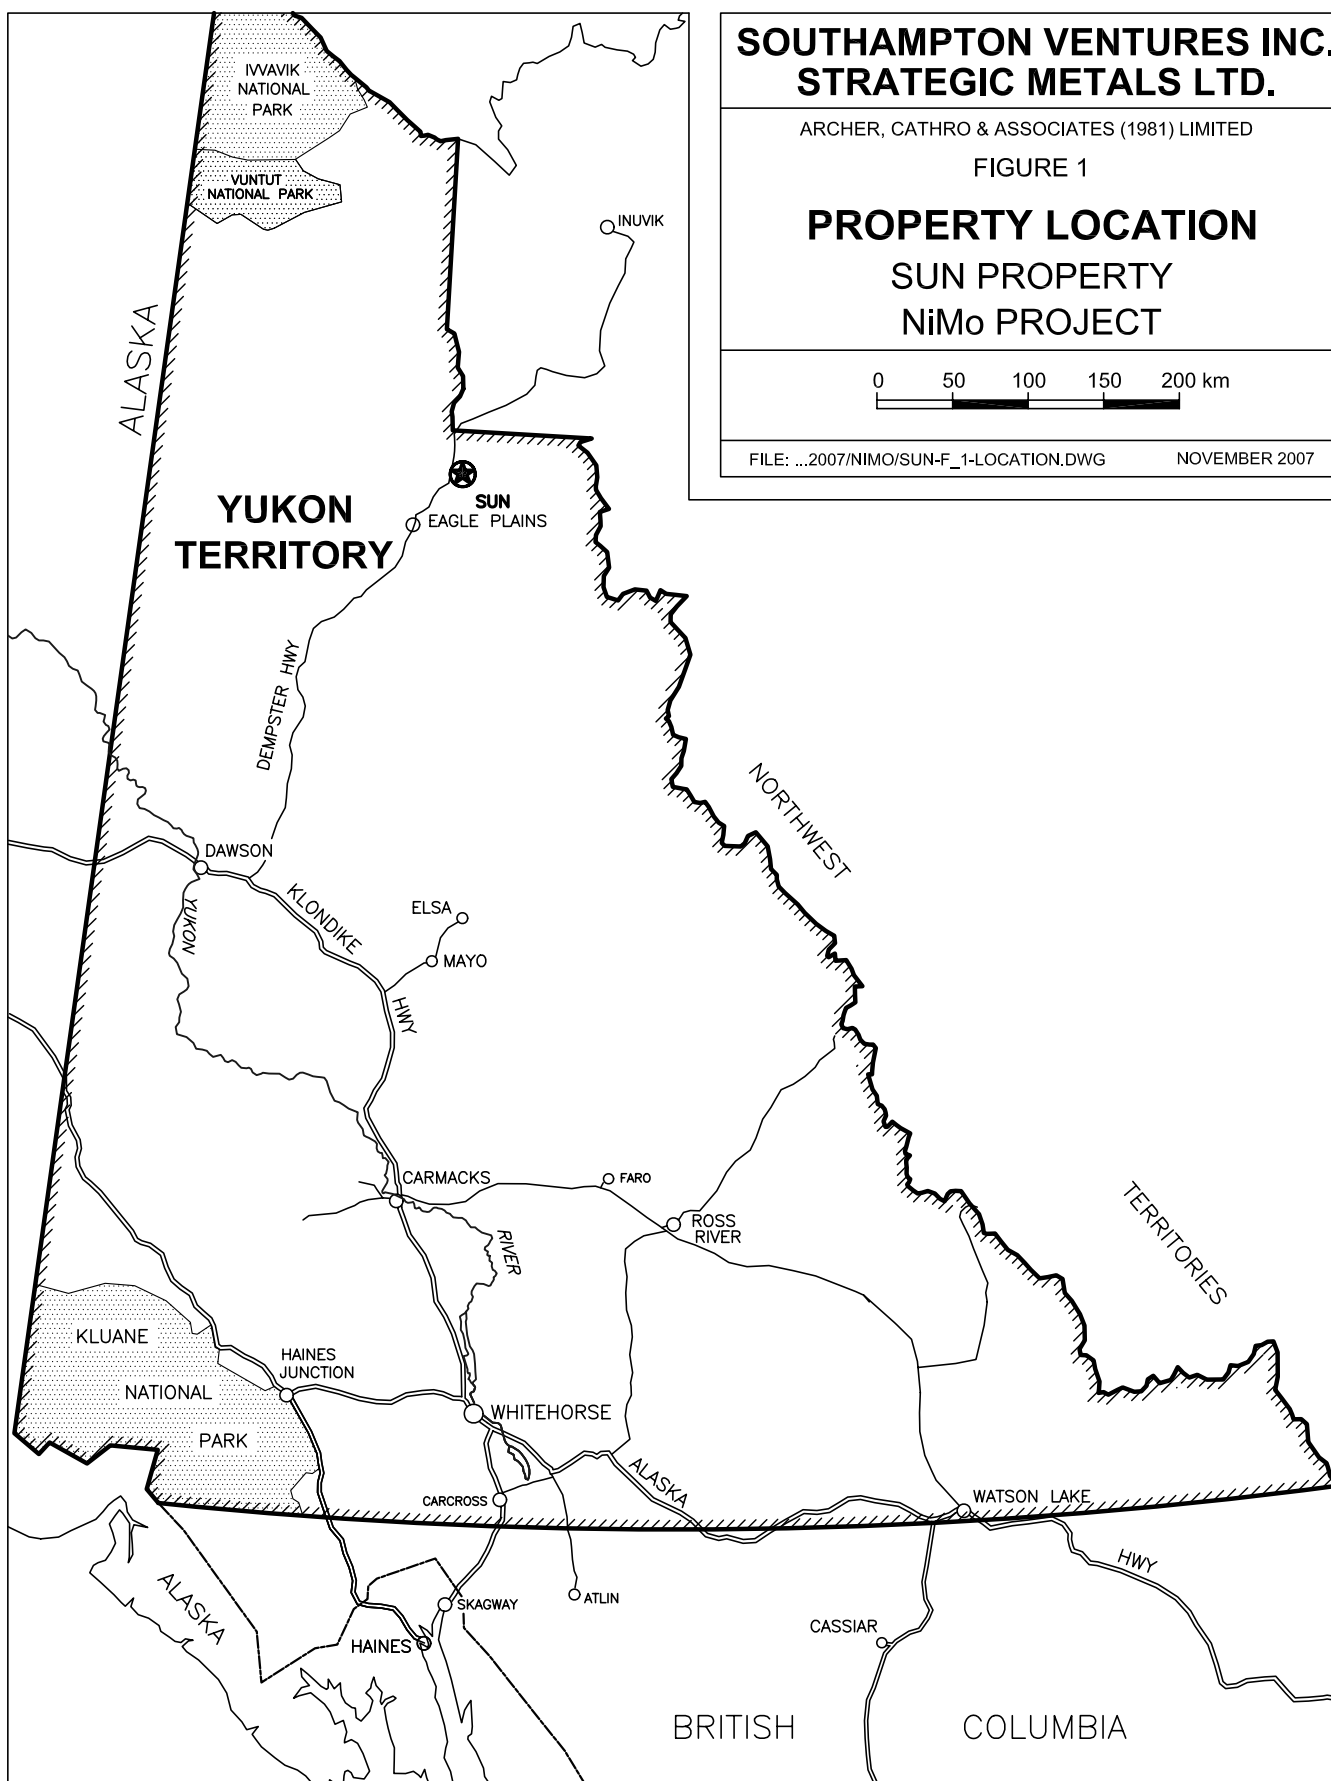

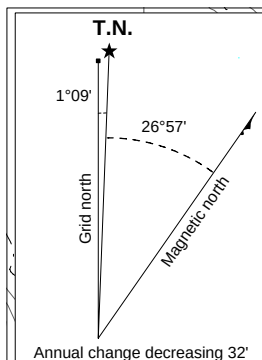

Dempster Highway

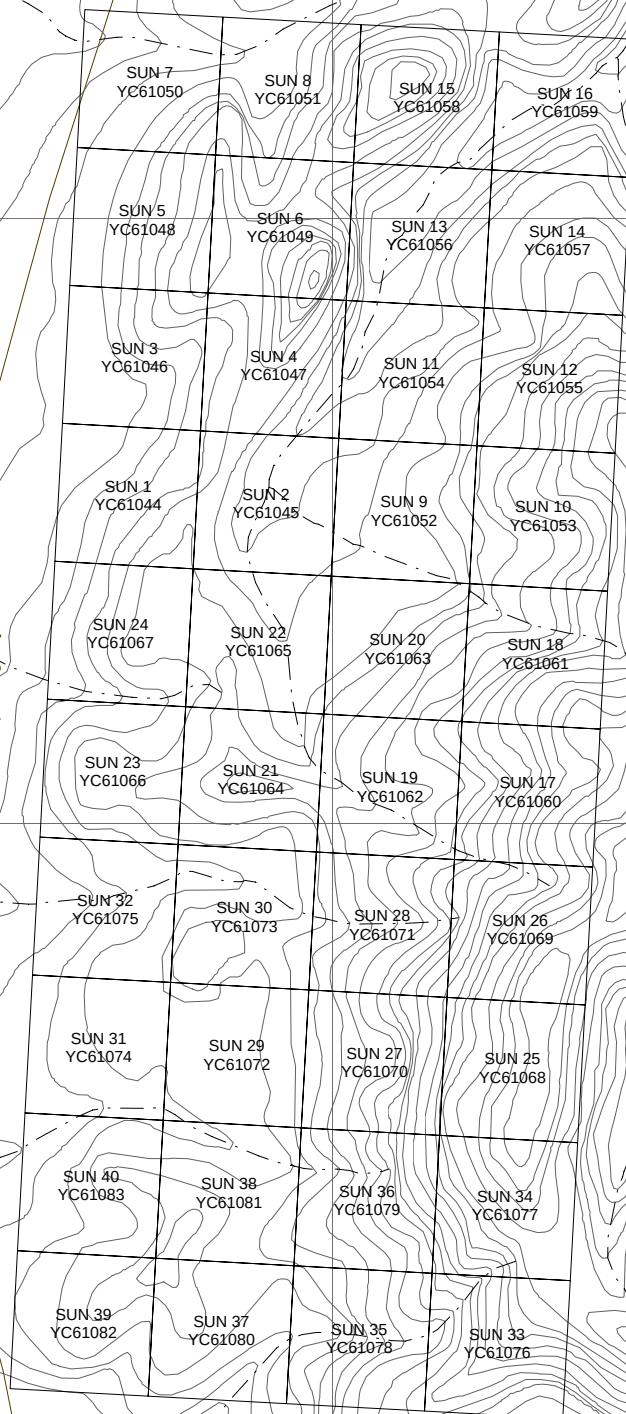

7 416 000 mN


7 416 000 mN

7 412 000 mN

SOUTHAMPTON VENTURES INC. STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
FIGURE 2

CLAIM LOCATION SUN PROPERTY NiMo PROJECT



FILE: ...2007/NIMO/SUN-F_2-CLAIMS.WOR

DATE: NOVEMBER 2007

drilling of 33 wells and 9952 line-km of reflection seismic surveys. A total of 83.7 Bcf of natural gas and 11.05 MMbbls of crude oil was identified within the basin (Osadetz, 2005).

GEOMORPHOLOGY

The Sun property is located within foothills on the western edge of the Richardson Mountains. The property is drained by tributaries of the Rock River, which ultimately flows into the Bering Sea via the Porcupine and Yukon Rivers.

Local elevations ranging from about 470 m near the Dempster Highway on the west side of the property up to 800 m atop a small hill to the southeast. Outcrop is only found along some of the more mature drainages and on steep hillsides. Vegetation consists of stunted spruce, buckbrush, moss and grass.

REGIONAL GEOLOGY

The Sun property lies along the western margin of the Richardson Fault Array, a cluster of north-trending curvilinear, near vertical faults. Episodic reactivation of the Richardson Fault Array in Early and Middle Paleozoic formed a north to northwest trending intracratonic depression known as the Richardson Trough (Figure 3). Deep water shale and argillaceous limestone of the Ordovician to Silurian Road River Group were deposited within the trough atop Cambrian and Proterozoic-age strata. Younger Paleozoic sediments unconformably cap the Road River Group within the trough and elsewhere in a surrounding broader basin. The entire stratigraphic section is folded by a large-scale anticline that plunges to the north. This anticline is called the Richardson Anticlinorium and its axis approximately coincides with the centre of the trough. To the east, the Richardson Trough is bound by the Trevor Fault and to the west, by the Deception Fault.

The following table summarizes the main lithologies in the Sun area from youngest to oldest.

Table I: Regional Lithological Descriptions (after Norris, 1975)

QUATERNARY

Fluvial silt, sand and gravel.

-UNCONFORMITY-

PERMIAN

Jungle Creek Formation: mudstone, calcareous, cherty; limestone, and silty micrite.

-UNCONFORMITY-



UPPER CARBONIFEROUS

Ettrain Formation: cherty limestone.

Hart River Formation: limestone, dolomite and chert.

UPPER DEVONIAN TO LOWER CARBONIFEROUS

Ford Lake Shale: siliceous shale, chert and limestone.

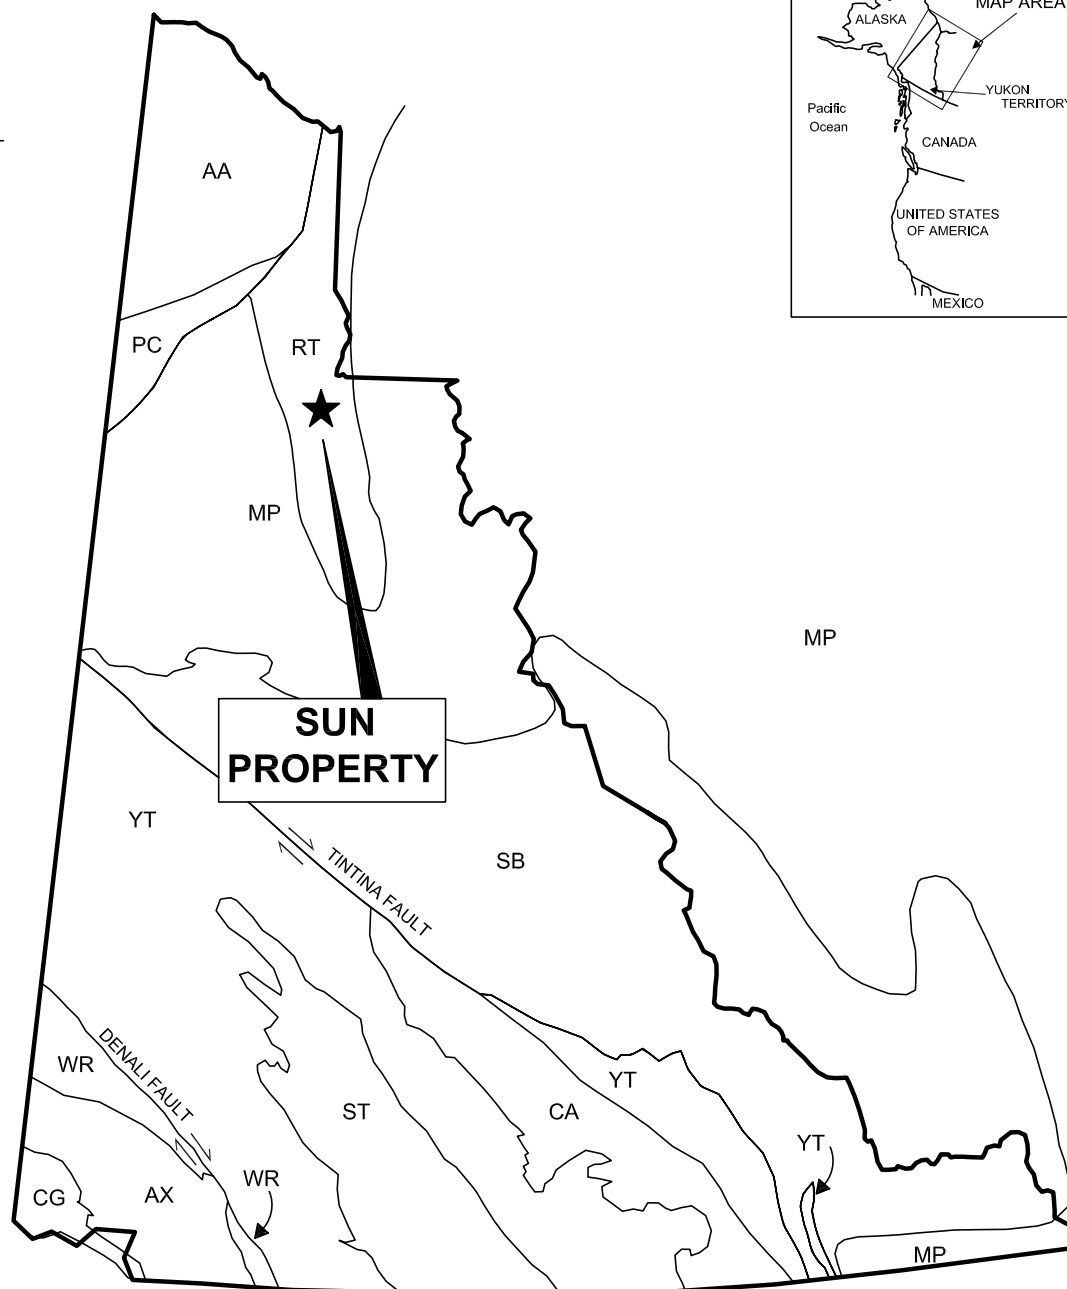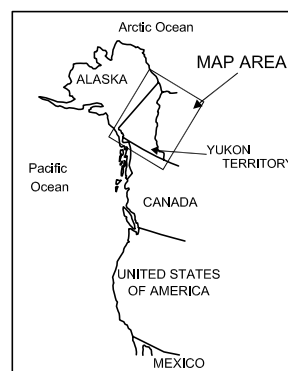

ANCESTRAL NORTH AMERICA

- | | |
|----|--------------------|
| MP | Mackenzie Platform |
| SB | Selwyn Basin |
| RT | Richardson Trough |

TERRANES

Displaced Continental Margin

- | | |
|----|---------------|
| AA | Arctic Alaska |
| CA | Cassiar |
| PC | Porcupine |

Pericratonic Terranes

- | | |
|----|-------------------------------|
| YT | Yukon-Tanana / Slide Mountain |
|----|-------------------------------|

ACCRETED TERRANES

- | | |
|----|------------------------|
| ST | Stikinia / Cache Creek |
| AX | Alexander |
| WR | Wrangellia |
| CG | Chugach |

SOUTHAMPTON VENTURES INC. STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED

FIGURE 3

TECTONIC SETTING SUN PROPERTY NiMo PROJECT

0 100 200 km

MIDDLE TO UPPER DEVONIAN

Earn Group: a conformable marine sequence consisting of upper Imperial Formation and basal Canol Formation. Imperial Formation consists of sandstone, siltstone and shale. The Canol Formation is a sequence of siliceous shale representing a rapid rise of sea level in early Late Devonian

-UNCONFORMITY-

ORDOVICIAN TO SILURIAN

Road River Group: a 150 to 750 m thick sequence of fossiliferous limestone and calcareous shale.

-UNCONFORMITY-

LOWER AND MIDDLE CAMBRIAN

Slats Creek Formation: siltstone, conglomerate, sandstone and limestone.

PROPERTY GEOLOGY



The Sun property is situated over shallow (15-20°) west dipping shales, which belong to the Middle to Upper Devonian Earn Group and Ordovician to Silurian Road River Group (Figure 4). The Earn Group comprises sandy shale belonging to the Imperial Formation, which crops out west of the property, and conformably underlying siliceous shale of the Canol Formation, which forms a narrow north-south band across the property. The Earn Group sits unconformably above calcareous shale belonging to the Road River Group, which is exposed to the east. Figure 5 shows a generalized stratigraphic section.

On other properties belonging to the NiMo Project, the contact between the Earn Group and Road River Group is often marked by a unique lithological sequence consisting of a phosphatic chert member, sulphide horizon, nodular shale and limestone ball member. Due to the limited exposure on the Sun property, these distinctive lithologies are not seen in outcrop but most have been observed in drill core (see Diamond Drilling section).

MINERALIZATION AND GEOCHEMISTRY

A thin, nickeliferous, massive sulphide layer, known as the NiMo horizon is found in drill core at the Sun property along the contact between the Canol Formation and Road River Group. Due to limited outcrop on the property, this horizon is not seen on surface. Similar mineralization is found at the same stratigraphic location at the Nick property, 245 km to the south.

At the Nick property this massive sulphide layer covers an area greater than 80 km² and is comprised of pyrite, vaesite, melnikovite-type pyrite, sphalerite and wurtzite hosted in a gangue of phosphatic-carbonaceous chert, silica and bitumen (Hulbert et al, 1992). Typical assays from the Nick property average 3.01% nickel, 0.20% molybdenum, 0.82% zinc, 0.82% vanadium, 310 ppb platinum and 150 ppb palladium. Anomalous rhenium (up to 61 ppm), uranium (up to 107.7 ppm), barium (up to 4300 ppm), selenium (up to 2400 ppm) and arsenic (up to 4200 ppm) were also reported.

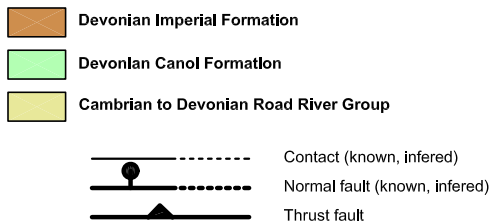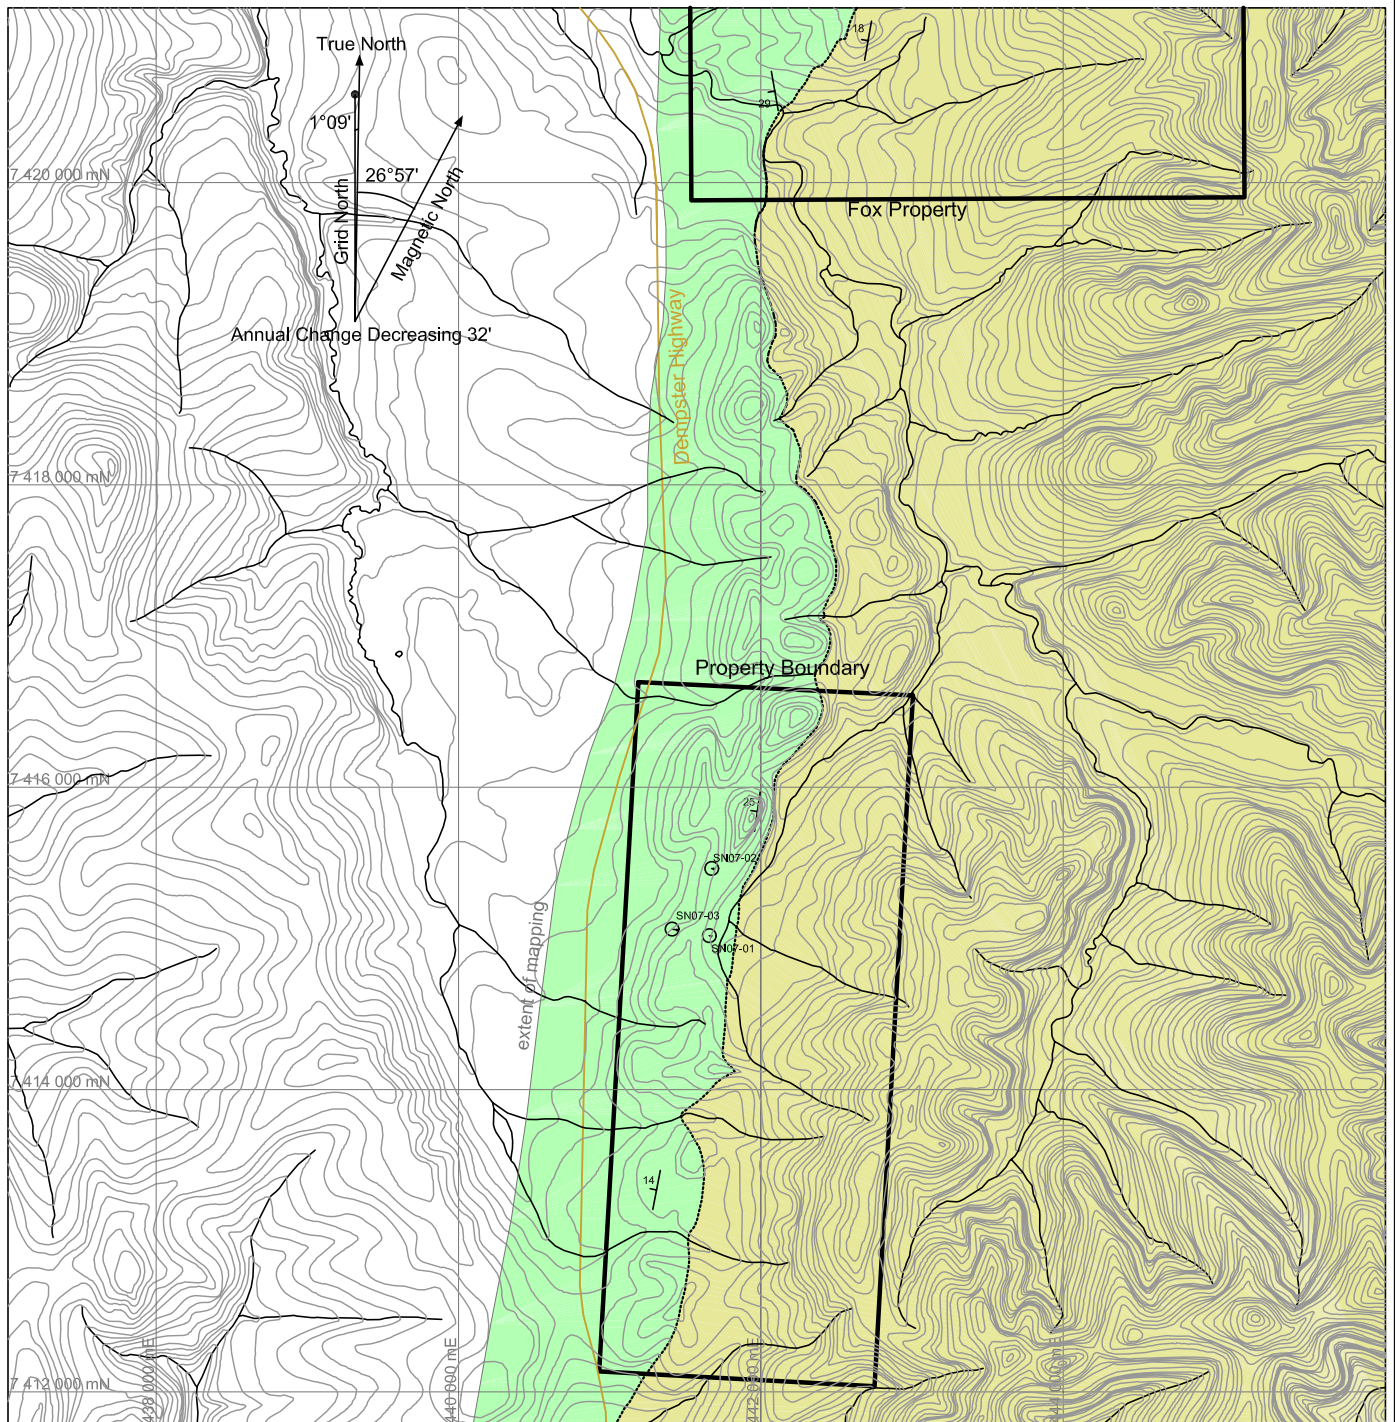


SOUTHAMPTON VENTURES INC. STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED

FIGURE 4


PROPERTY GEOLOGY SUN PROPERTY NiMo PROJECT



FILE: 2007/NIMO/SUN/F_5-GEO.DWG

DATE: NOVEMBER 2007

ROAD RIVER GROUP	EARN GROUP	
	CANOL FORMATION	IMPERIAL FORMATION
ORDOVICIAN TO SILURIAN	MIDDLE TO UPPER DEVONIAN	UPPER DEVONIAN

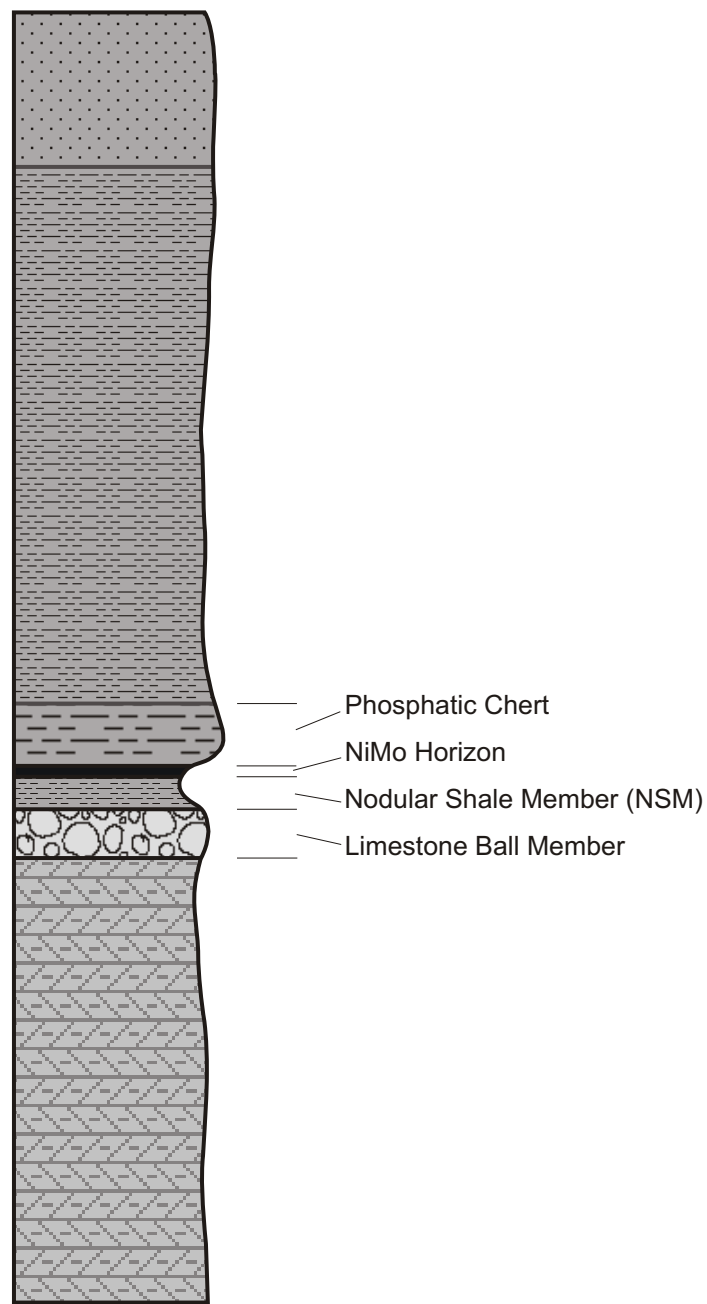

SOUTHAMPTON VENTURES INC.
STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
 FIGURE 5
STRATIGRAPHIC SECTION
SUN PROPERTY
NiMo PROJECT

not to scale

...2007/NIMO/SUN/F_5-STRAT.CDR

NOVEMBER 2007

Soil samples collected in 2005 from what is now the Sun property by Shawn Ryan returned up to 590 ppm nickel, 620 ppm molybdenum and 6831 ppm zinc. The strongest values came from a sample line, which parallels a creek that is eroding along the contact between the Canol Formation and Road River Group.

In 2007, 126 soil and 2 silt samples were collected on the Sun property. All samples were sent to ALS Chemex in North Vancouver. Samples were analyzed for 32 elements using the inductively coupled plasma technique (ME-MS41). Sample locations are illustrated on Figure 6 while geochemical results for nickel, molybdenum and zinc are shown on Figure 7.

Soil samples returned an average of 95 ppm nickel, 36 ppm molybdenum and 544 ppm zinc with maximum values of 382 ppm nickel, 106.5 ppm molybdenum and 3930 ppm zinc near the inferred NiMo horizon. Elsewhere in the district samples collected near the surface trace of the NiMo horizon yielded an average of 108 ppm nickel, 30 ppm molybdenum and 600 ppm zinc with maximums of 1190 ppm nickel, 253 ppm molybdenum and 8060 ppm zinc.

DIAMOND DRILLING

General


Drilling was done between August 21 and 27 and was contracted to North Star Drilling Services Inc. of Delta, BC. The work was completed with a heliportable JKS Super-300 diesel powered drill using BTW equipment. A total of 295.66 m of diamond drilling was done in 3 holes to test for NiMo mineralization along the prospective contact (Figure 8). All drill sites were constructed by hand atop of the natural ground cover using 6"x 6" timbers. Drill data for the holes is listed in Table II.

Table II: Drill Hole Data

<u>Hole</u>	<u>Easting</u>	<u>Northing</u>	<u>Elevation (m)</u>	<u>Azimuth</u>	<u>Angle</u>	<u>Depth (m)</u>
SN07-01	441659	7415018	643	100°	-83°	121.92
SN07-02	441675	7415462	650	100°	-75°	48.77
SN07-03	441410	7415060	645	100°	-75°	124.97

Core was transported from the drill sites to a central logging area on the property, where recovery was measured and geological and geotechnical logging were performed. Geologically and mineralogically favourable intervals from each hole were transported by truck to Eagle Plains where they were sawn with one-half bagged and sent for analysis and the other half returned to the core box. Core boxes containing sawn core were shipped to Whitehorse and placed in storage; all other core is stored on the property. Appendix III contains the geological and geotechnical logs.

Core samples were transported from Eagle Plains to Whitehorse by truck, escorted by a representative of Archer Cathro. The samples were then shipped to ALS Chemex in North Vancouver. Core samples were dried and crushed to 70% minus 2 mm, before a 1.5 kg split was taken and pulverized to better than 85% minus 75 microns. A split of the pulverized fraction was dissolved in aqua regia and analyzed for 49 elements using the inductively coupled plasma

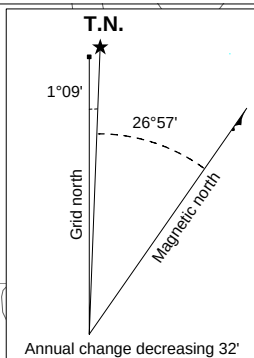

Dempster Highway

Property Boundary


7 414 000 mN

- 2005 soil sample
- 2007 soil sample
- * 2007 silt sample

SOUTHAMPTON VENTURES INC. STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
FIGURE 6


SAMPLE LOCATIONS SUN PROPERTY NiMo PROJECT




FILE: ...2007/NIMO/SUN-F_6-SAMPLES.WOR

DATE: NOVEMBER 2007


442 000 mE


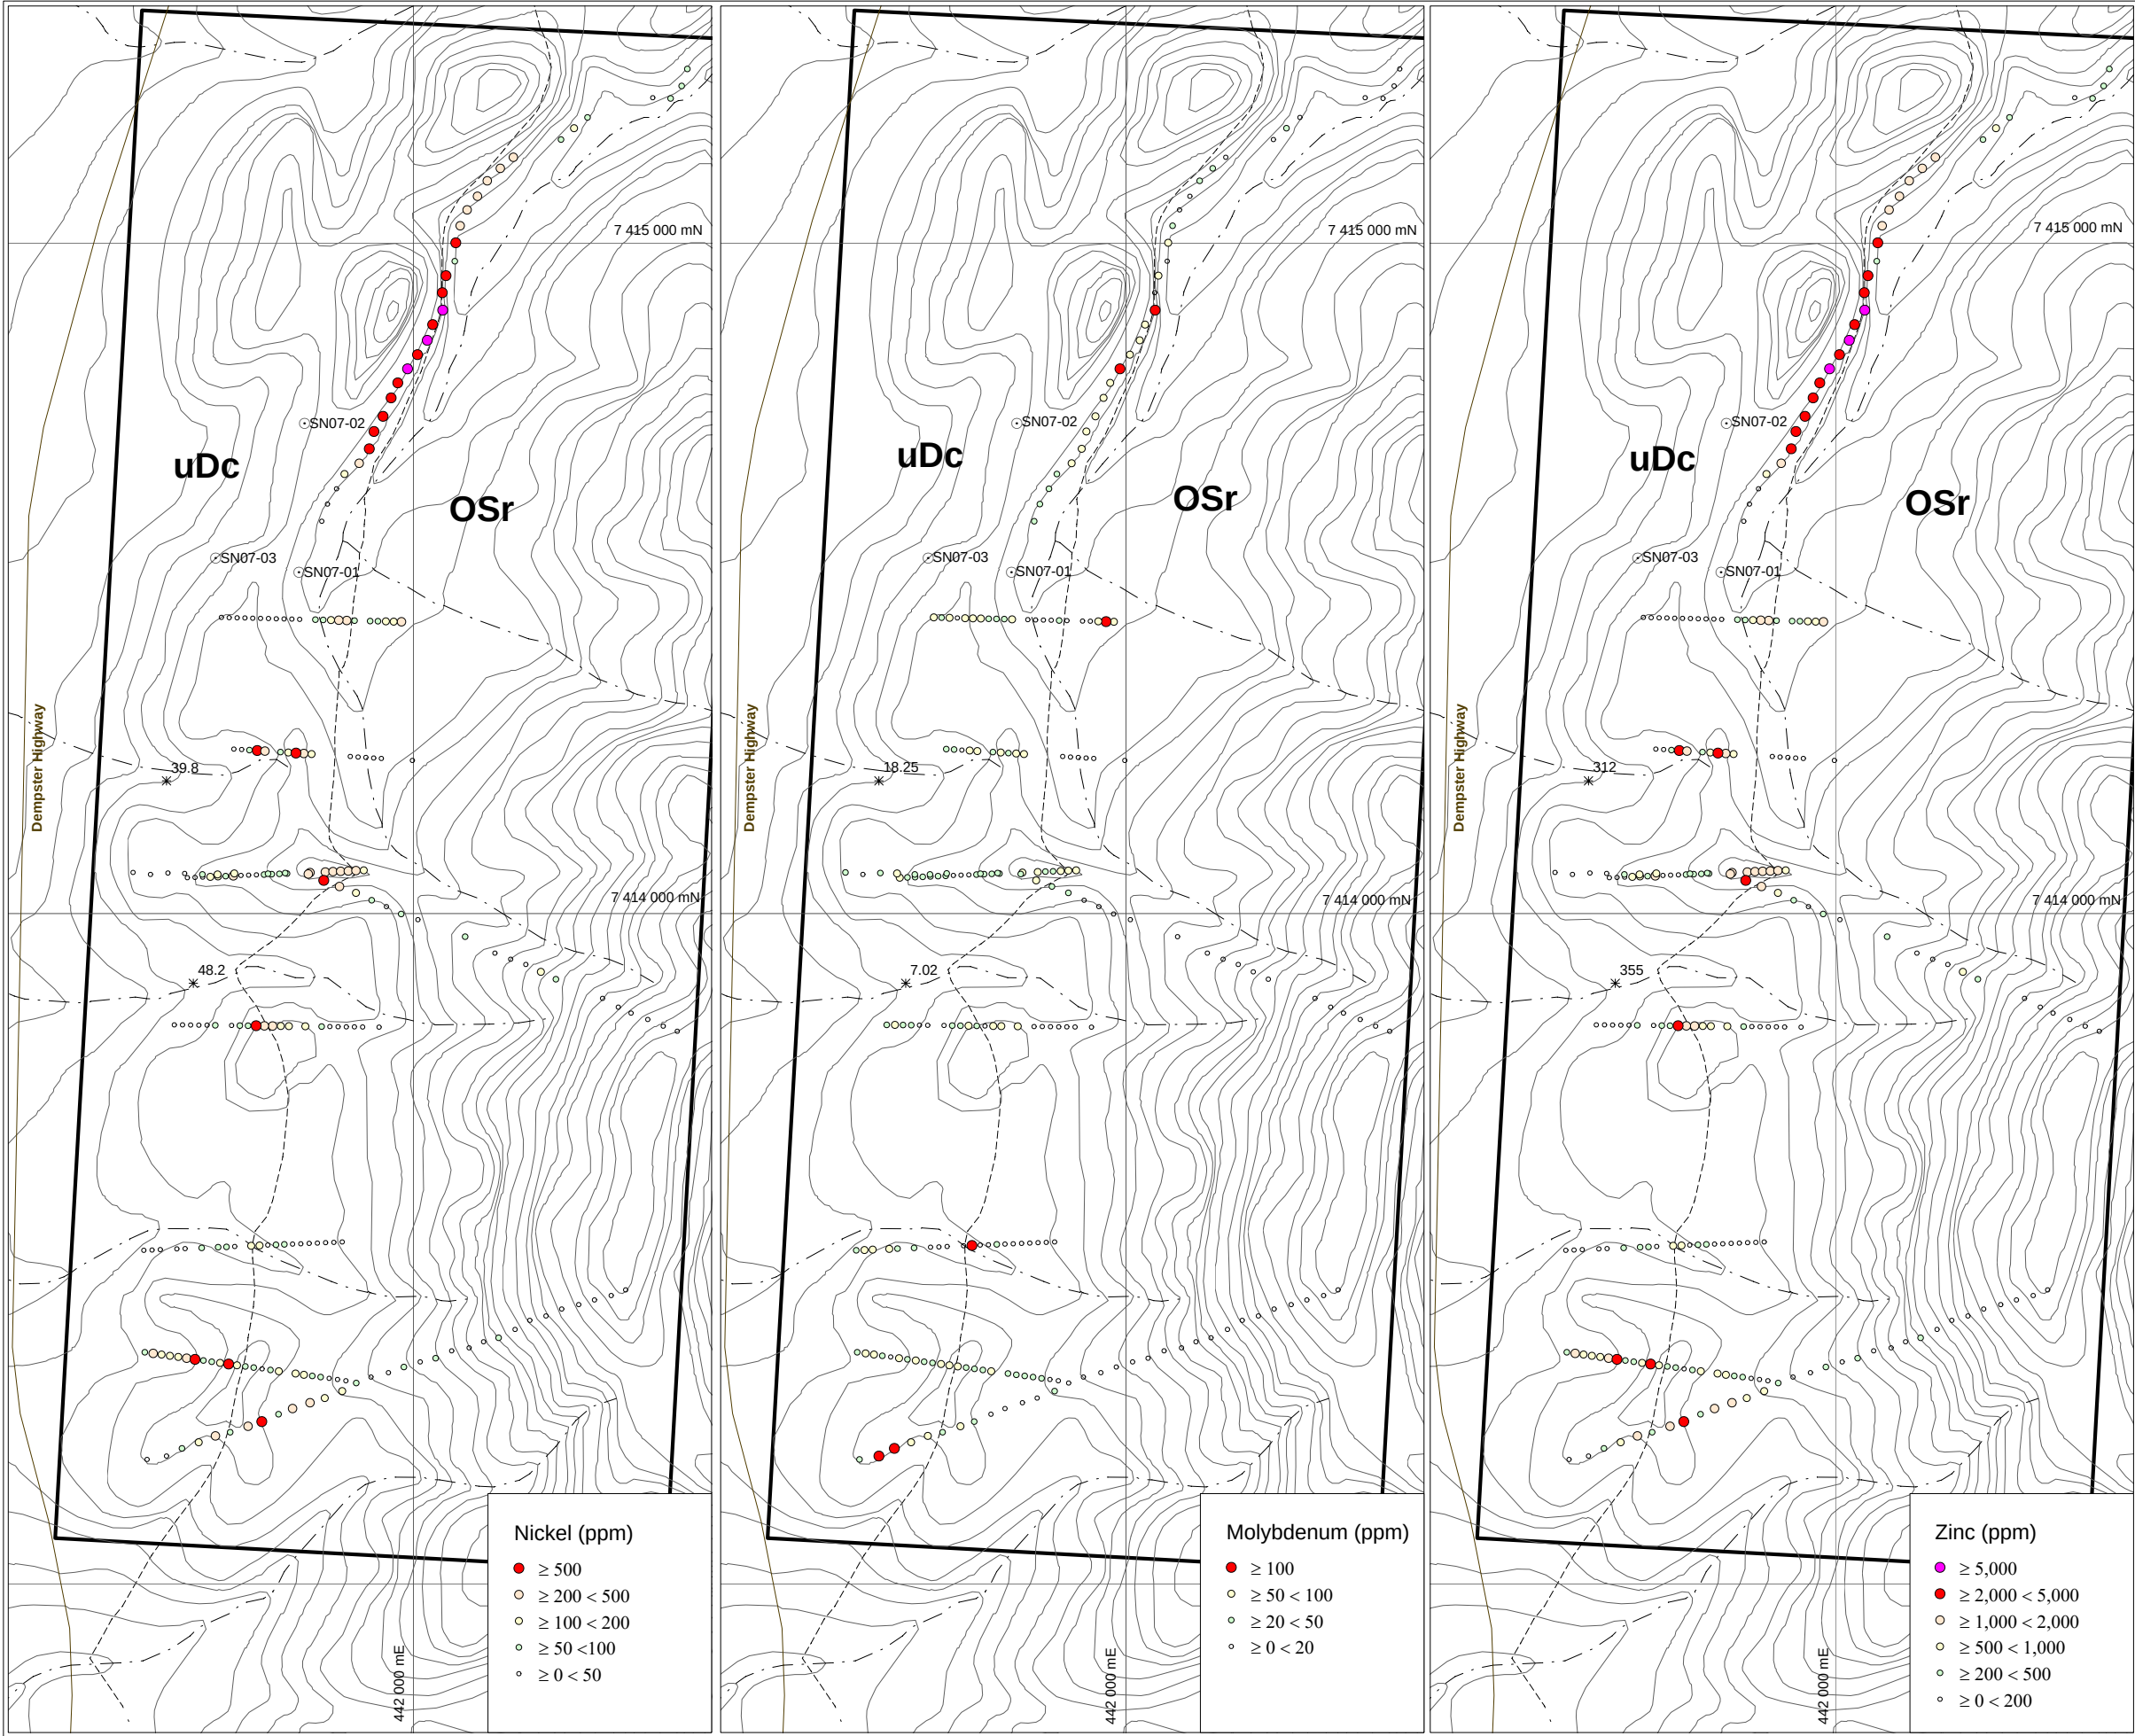


- Contact
- Soil sample location
- Silt sample location (Mo or Cu value in ppm)
- Diamond drill hole
- uDc Devonian Canol Formation
- OSr Ordovician to Silurian Road River Group

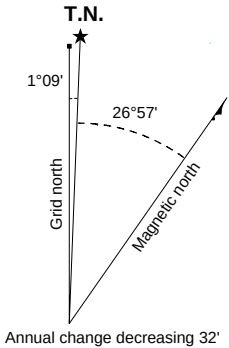

**SOUTHAMPTON VENTURES INC.
STRATEGIC METALS LTD.**
ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
**FIGURE 7
GEOCHEMISTRY
SUN PROPERTY
NiMo PROJECT**



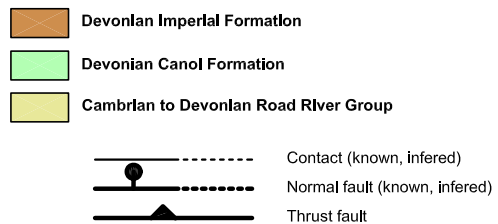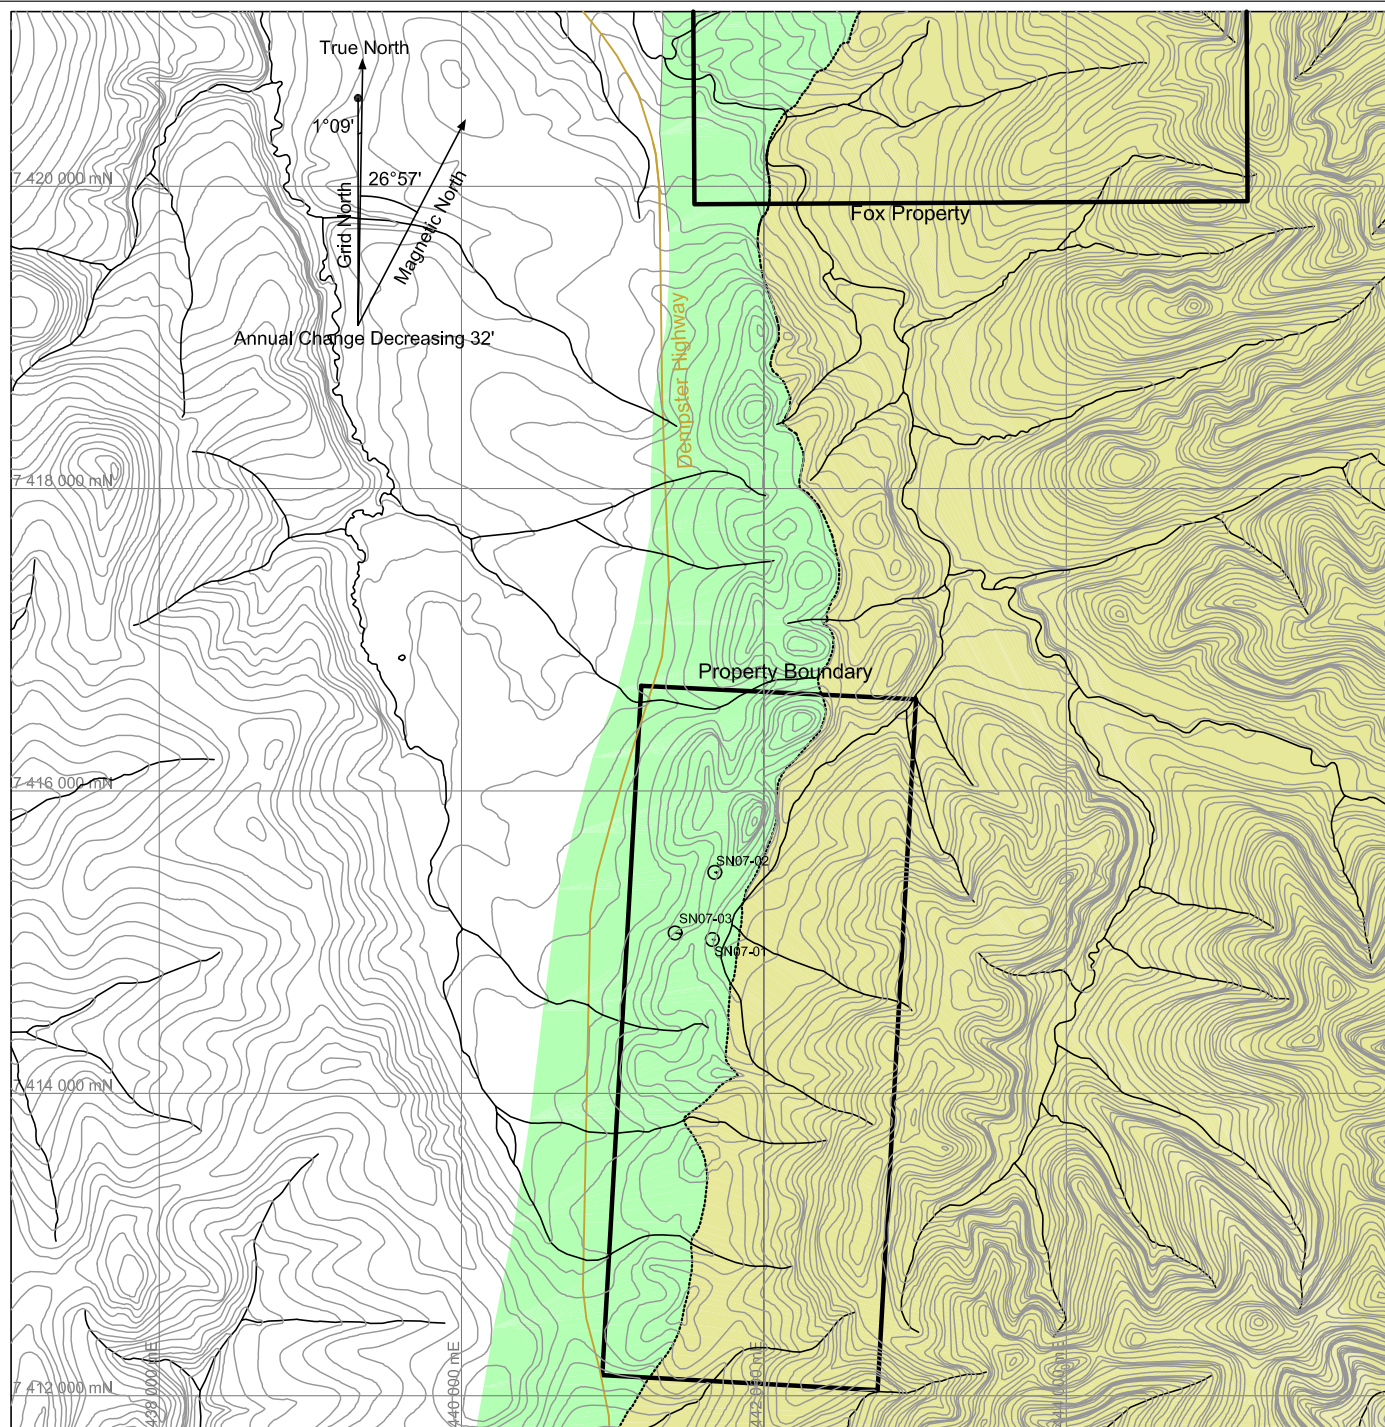

SOUTHAMPTON VENTURES INC. STRATEGIC METALS LTD.

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED

FIGURE 8

DRILL PLAN SUN PROPERTY NiMo PROJECT

0 3.0 km

UTM ZONE 8W, NAD83
116116

FILE: ...2007/NIMO/SUN/F_8-DRILL.DWG

DATE: NOVEMBER 2007

technique (ME-MS61m). Samples that exceed the upper detection for nickel, molybdenum and zinc were assayed. Samples from the NiMo horizon were also assayed for nickel, molybdenum, zinc and rhenium (Ni-AA62, Mo-AA62, Zn-AA62 and Re-MS42 respectively) and for gold, platinum and palladium (PGM-ICP23). Certificates of Analysis are found in Appendix II.

Results

Diamond drilling intersected shales belonging to the Canol Formation and Road River Group in holes SN07-02 and -03, but hole SN07-01 recovered only Road River strata, which put it too deep in section to intersect the NiMo horizon.

In drill core, the Canol Formation shale is black, non-calcareous and finely laminar. It is slightly to moderately weathered, fissile and somewhat friable. Barite rich nodules, phosphate rich nodules, cherty layers, micrite and carbonate laminae/beds are also present towards the contact with the Road River Group. The Canol Formation also exhibits rare to common, thinly bedded, sulphide rich laminae and lenses, as well as finely laminar, non fossiliferous, grey to black micritic limestone beds up to several centimetres thick.

The Road River Group is composed of calcareous, finely laminar black shale that is distinguished from shale belong to the Canol Formation by its vigorous reaction with dilute hydrochloric acid. Distinct brecciated limestone balls commonly occur within one to three metres of the Canol-Road River contact. Lower in the stratigraphy, crinoid stem fragments are often found within limestone beds that exhibit a grainstone texture. The Road River Group also contains finely laminar, fine-grained sulfides (dominantly pyrite) in bands, lenses and beds and in disseminated form.

Regionally the NiMo horizon is located along the contact between these two formations and comprises very fine-grained, bronze-to-gold, sulphide-rich laminae. Individual laminae range in thickness from < 1 mm up to about 2 mm and are wavy and commonly exhibit a pinch-and-swell texture. Mild to moderate bioturbation and physical disruption of individual laminae are characteristic of the horizon. Hole SN07-02 intersected the contact area within a heavily weathered interval near surface so that the NiMo horizon may have been leached out. Only hole SN07-03 intersect visible NiMo mineralization. This intersection was <1 cm thick and appeared pinched in places.

Samples of Road River taken from holes SN07-01 and SN07-02 averaged 263 ppm nickel, 56.9 ppm molybdenum, 1800 ppm zinc and 2.92 ppm silver. The samples collected from SN07-02 were taken within 3 m of the favourable contact, while samples from SN07-01 were taken over 5.5 m approximately 65 m below the favourable contact. Elsewhere in the district, the Road River Group averages 200 ppm nickel, 50 ppm molybdenum, 490 ppm zinc and 0.40 ppm silver.

The NiMo intersection from SN07-03 returned 3.01% nickel, 1220 ppm molybdenum, 6300 ppm zinc, 65 ppb gold, 171 ppb platinum, 97 ppb palladium, 19.3 ppm rhenium and 2.5 ppm silver. A sample collected 4.89 m above that sample graded 2570 ppm nickel, 13.75 ppm molybdenum, 8320 ppm zinc and 80.6 ppm uranium over 4 cm.

DISCUSSION AND CONCLUSIONS

The nickel rich, NiMo horizon occurs at a predictable stratigraphic location and has demonstrated considerable lateral continuity. These factors coupled with the horizon's diverse metal suite and consistently high metal value makes it an attractive exploration target.

Soil samples collected from the Sun property in 2005 and 2007 traced the favourable contact over a strike length of 3.5 km. The most anomalous samples were collected in 2005 from a line that follows the contact between the Canol Formation and Road River Group. While these samples confirm the presence and location of the NiMo horizon, they do not provide a reliable indication of its thickness.

Diamond drilling in 2007 attempted to test the Canol-Road River contact for NiMo mineralization, but only one hole intersected the prospective horizon. The grade of this intersection is similar to the grade seen at the Nick property and elsewhere in the district but the thickness is less than 1 cm. A second intersection in this hole contained subdued yet still anomalous levels of some NiMo indicator elements. This suggests that a second, lower grade horizon is present.

The two holes that did not intersect NiMo mineralization contained zinc and silver values above normal backgrounds for these metals in the Canol Formation and Road River Group. It is possible that these values are from disseminated mineralization that was not identified in the field.

Due to the limited outcrop exposure, surface mapping of the NiMo horizon is difficult. Instead silt and soil sampling must be used to identify the surface trace of the horizon. However, no reliable method has yet been identified that will predict the thickness of the NiMo horizon prior to drilling. While the only intersection to date on the property is less than 1 cm, it has been demonstrated elsewhere that dramatic thickness variations can occur over short distances. Further systematic drilling will be necessary to determine whether or not thicker sections are present on this property.

Due to the lack of water sources on the property, the 2007 drill program was terminated early. It is recommended that any further drilling be carried out at the earliest possible opportunity in the spring when water levels are higher. An early start should also ensure that assay results are available prior to the July 30, 2008 anniversary date of the option agreement.

Respectfully submitted,

ARCHER, CATHRO & ASSOCIATES (1981) LIMITED

Matthew R. Dumala, B.A.Sc. EIT.

REFERENCES

- Coveney, R.M., Murowchick, J.B., Grauch, R.I., Nansheng, C. and Glascock, M.D.
 1992 Field Relations, Origins, and Resource Implications for Platiniferous Molybdenum-Nickel Ores in Black Shales of South China; Exploration Mining Geology, Vol. 1, No. 1, pp 21-28.
- Héon, D
 2006 Mineral Assessment of the Eagle Plain Study Area, Yukon; Yukon Geological Survey Open File 2006-3.
- Hulbert, L.J., Grégoire, D.C., Paktunc, D. and Carne, R.C.
 1992 Sedimentary Nickel, Zinc, and Platinum-group-element Mineralization in Devonian black Shales at the Nick Property, Yukon, Canada: A New Deposit Type; Exploration Mining Geology, Vol. 1, No. 1, pp 39-62.
- Lott, D.A., Coveney, R.M., Murowchick, J.B. and Grauch, R.I.
 1999 Sedimentary Exhalative Nickel-Molybdenum Ores in South China; Economic Geology, Vol. 94, pp 1051-1066.
- Norris, D.K.
 1975 Geology, Eagle River (116I), Yukon Territory; Geological Survey of Canada, Map 1523A.
- Osadetz, K.G., Chen, Z. and Bird, T.D.
 2005 Petroleum Resource Assessment, Eagle Plain Basin and Environs, Yukon Territory, Canada; Yukon Geological Survey Open File 2005-2; Geological Survey of Canada Open File 4922.

APPENDIX I
STATEMENT OF QUALIFICATIONS

STATEMENT OF QUALIFICATIONS

I, Matthew R. Dumala, geological engineer, with business addresses in Vancouver, British Columbia and Whitehorse, Yukon Territory and residential address in Vancouver, British Columbia, do hereby certify that:

1. I graduated from the University of British Columbia in 2002 with a B.A.Sc in Geological Engineering, Option I, mineral and fuel exploration.
2. I am registered as an Engineer in Training in the Province of British Columbia.
3. From 2003 to present, I have been actively engaged in mineral exploration in the Yukon Territory.
4. I have personally participated in the fieldwork reported herein.

Matthew R. Dumala, B.A.Sc., EIT

APPENDIX II

CERTIFICATES OF ANALYSIS



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: 30-OCT-2007

Account: MTT

CERTIFICATE EL07115444

Project: NIMO-SN

P.O. No.: SN-07-01

This report is for 12 Drill Core samples submitted to our lab in Vancouver, BC, Canada on 10-SEP-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICE

DOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
CRU-31	Fine crushing - 70% <2mm
SPL-21	Split sample - riffle splitter
PUL-36	Pulverize 1.5 kg to 85% <75 um

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS61	48 element four acid ICP-MS
Hg-CV41	Trace Hg - cold vapor/AAS
	FIMS

The results of this assay were based solely upon the content of the sample submitted. Any decision to invest should be made only after the potential investment value of the claim or deposit has been determined based on the results of assays of multiple samples of geological materials collected by the prospective investor or by a qualified person selected by him/her and based on an evaluation of all engineering data which is available concerning any proposed project.

To: STRATEGIC METALS LTD.
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - A

Total Pages: 2 (A - D)

Finalized Date: 30-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115444

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Recvd Wt.	Ag	Al	As	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs	Cu
		kg	ppm	%	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.2	10	0.05	0.01	0.01	0.02	0.01	0.1	1	0.05	0.2
G087001		1.74	2.78	2.32	36.2	200	1.26	0.1	3.45	43.6	25.3	4.8	133	3.5	97.5
G087002		0.89	3.52	2.45	47.7	260	1.52	0.11	2.34	54.6	32.3	5.4	172	3.91	152
G087003		0.59	2.88	2.53	39.7	220	2.05	0.12	2.07	62.6	31	7.3	115	4.13	132
G087004		0.20	13.15	2.64	257	120	1.57	0.86	2.95	21.8	47.1	13.5	169	3.42	213
G087005		0.57	2.1	2.38	33.8	160	1.17	0.1	1.68	27.4	31	6.6	80	3.14	95.4
G087006		0.86	3.18	2.75	61.6	170	1.27	0.21	0.99	17.65	31.9	16.2	87	3.34	66.4
G087007		1.78	3.6	2.37	41.5	180	1.39	0.18	1.36	23.7	34.6	11.4	184	3.17	124.5
G087008		0.99	0.02	0.27	<5	30	0.11	0.01	19.05	0.13	2.02	1.7	3	0.48	2.7
G087009		1.24	2.17	3.64	30.5	190	2.14	0.18	3.48	7.18	33.7	5.7	312	4.39	160
G087010		0.36	0.59	1.28	30	440	0.77	0.03	22.5	6.54	15.95	2.4	107	1.24	150
G087011		0.59	1.97	4.08	45.7	130	2.71	0.19	6.05	14.4	37.6	7.6	286	4.97	175
G087012		0.90	1.66	3.17	44.4	150	2	0.14	8.46	21.7	36.3	6	141	4.29	140

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - B

Total Pages: 2 (A - D)

Finalized Date: 30-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115444

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	Hg-CV41	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb	Ni
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.05	0.1	0.01	0.005	0.01	0.5	0.2	0.01	5	0.05	0.01	0.1	0.2
G087001		6.23	0.21	1	0.48	0.024	0.79	20.5	7.8	0.33	60	48.4	0.08	3.7	235
G087002		6.98	0.21	1	0.58	0.033	0.88	26.9	8.2	0.38	55	56.9	0.08	4	258
G087003		7.94	0.24	1.2	0.58	0.033	0.9	22.3	11.1	0.44	64	71.1	0.1	4	242
G087004		6.51	0.43	1.1	1.00	0.011	0.95	20.5	9.3	0.43	152	49.8	0.08	3.9	219
G087005		5.82	0.19	1	0.34	0.016	0.88	20.8	6.8	0.62	90	68.3	0.12	4.1	219
G087006		6.34	0.19	1.1	0.36	0.017	1.03	17.6	7.3	0.41	96	53.8	0.15	4.9	205
G087007		6.12	0.2	1.1	0.39	0.019	0.85	21.7	6.7	0.34	66	30.3	0.12	4.3	196
G087008		0.63	0.05	0.1	0.01	0.005	0.05	1	1.1	12.05	198	0.38	0.05	0.7	4.8
G087009		11.75	0.19	1.9	0.31	0.044	1.34	20.9	17.2	0.81	78	15.6	0.11	7.4	269
G087010		4.71	0.1	1.2	0.16	0.013	0.53	10.9	6.7	1.42	89	8.08	0.04	2.4	116
G087011		12.85	0.19	2.2	0.34	0.049	1.54	22.2	22.7	1.71	114	18.15	0.14	8.6	307
G087012		9.95	0.14	1.7	0.36	0.038	1.21	22.7	17.6	2.23	114	58.3	0.09	7.4	318

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - C

Total ... ages: 2 (A - D)

Finalized Date: 30-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115444

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti	Ti
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm
		0.5	0.1	0.002	0.01	0.05	0.1	1	0.2	0.2	0.05	0.05	0.2	0.005	0.02
G087001		11.5	49.8	0.124	1.44	21.5	6.5	38	0.8	364	0.23	0.17	2.8	0.104	2.57
G087002		11.9	53.2	0.131	1.54	40.4	7.9	37	0.9	248	0.24	0.2	2.9	0.119	3.03
G087003		12.7	55.6	0.085	1.74	38.7	6.7	36	1.1	193	0.24	0.23	3.2	0.124	3.65
G087004		68.8	53.5	0.058	>10.0	75.5	7.5	66	0.8	223	0.25	1.33	2.8	0.114	11.95
G087005		9.7	50.5	0.063	1.62	33.1	5.9	34	0.8	169.5	0.24	0.22	2.8	0.119	4.17
G087006		19.9	60.7	0.062	2.59	17.75	5.4	36	0.9	105.5	0.28	0.31	3.1	0.141	5.37
G087007		16.3	51.2	0.104	1.89	36.2	7	34	0.8	206	0.26	0.24	2.8	0.115	3.11
G087008		1.7	2	<0.002	0.02	0.14	0.8	3	<0.2	61.2	<0.05	<0.05	0.2	0.022	0.02
G087009		9.2	85.1	0.095	2.1	18.1	9.2	32	1.5	430	0.44	0.16	4.7	0.178	2.14
G087010		2.6	27.4	0.049	0.58	13.45	3.7	8	1	1665	0.14	0.09	1.9	0.063	0.71
G087011		11.4	91.6	0.112	2.12	18.3	9.4	24	1.8	437	0.46	0.21	5.6	0.202	2.42
G087012		10.2	77.6	0.125	1.85	24.4	8.9	20	1.3	584	0.41	0.14	5.1	0.152	3.11

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - D

Total Pages: 2 (A - D)

Finalized Date: 30-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115444

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm
		1	0.1	0.1	2	0.5
G087001		2500	0.6	45.4	2520	46.4
G087002		2970	0.7	50	3270	47.4
G087003		2790	0.8	42.4	3490	47.5
G087004		2130	0.9	43.2	1090	47
G087005		2100	0.8	35.5	1615	43.2
G087006		1960	0.9	38.7	1030	49
G087007		1740	0.6	43.6	1295	47.3
G087008		9	0.1	1.4	21	2.9
G087009		575	0.9	63.9	1145	89.4
G087010		267	0.3	32.9	661	72.9
G087011		774	0.9	60.9	1210	95.9
G087012		1450	0.9	53.3	1675	89.6

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: 29-OCT-2007

Account: MTT

CERTIFICATE EL07115443

Project: NIMO-SN

P.O. No.: SN-07-02

This report is for 8 Drill Core samples submitted to our lab in Vancouver, BC, Canada on 10-SEP-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICE

DOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
CRU-31	Fine crushing - 70% <2mm
SPL-21	Split sample - riffle splitter
PUL-36	Pulverize 1.5 kg to 85% <75 um

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS61	48 element four acid ICP-MS
Hg-CV41	Trace Hg - cold vapor/AAS
	FIMS

The results of this assay were based solely upon the content of the sample submitted. Any decision to invest should be made only after the potential investment value of the claim or deposit has been determined based on the results of assays of multiple samples of geological materials collected by the prospective investor or by a qualified person selected by him/her and based on an evaluation of all engineering data which is available concerning any proposed project.

To: STRATEGIC METALS LTD.
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - A

Total Charges: 2 (A - D)

Finalized Date: 29-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115443

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Recvd Wt.	Ag	Al	As	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs	Cu
		kg	ppm	%	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.2	10	0.05	0.01	0.01	0.02	0.01	0.1	1	0.05	0.2
G087013		1.57	2.58	3.1	60.7	390	1.81	0.11	6.05	37.3	25.4	8.2	72	3.02	193
G087014		1.00	1.93	3.21	48.8	490	1.88	0.14	2.81	31.3	28	7.2	81	3.45	69
G087015		0.65	1.87	3.1	39	340	1.94	0.13	1.21	25.1	28	7.3	86	3.52	63.7
G087016		0.35	2.32	3.24	48.6	330	2.14	0.15	1.29	17.4	29.6	8.8	90	5.03	67.2
G087017		0.67	1.87	2.64	39.3	330	1.83	0.12	3.72	20.3	22.4	6.6	79	3.47	62.5
G087018		1.50	0.01	0.06	<5	30	0.08	0.06	21	0.19	1.15	1	<1	0.16	2.3
G087019		0.96	2.76	2.46	53.7	380	1.79	0.12	2.43	24.5	29.6	5.4	75	3.37	182.5
G087020		1.70	1.71	2.24	29.8	210	1.18	0.12	4	27.6	22.5	4.9	88	3.34	74.2

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Detection limits on samples requiring dilutions for Hg-CV41, due to interferences or high concentration levels, have been increased according to the dilution factor.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - B

Total Pages: 2 (A - D)

Finalized Date: 29-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115443

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	Hg-CV41	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb	Ni	P
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm	ppm	ppm
		0.05	0.05	0.1	0.01	0.005	0.01	0.5	0.2	0.01	5	0.05	0.01	0.1	0.2	10
G087013		6.42	0.2	1.2	0.3	0.019	1.02	18.1	7	1.81	320	75.2	0.18	4.4	316	1600
G087014		7.07	0.22	1.5	0.2	0.016	1.09	19.1	7.6	0.62	123	73.6	0.19	5.3	310	1580
G087015		7.2	0.22	1.3	0.3	0.02	1.03	19.2	8.4	0.68	108	57.3	0.17	4.7	309	810
G087016		8.07	0.23	1.5	0.3	0.023	1.14	19.3	11.8	0.72	108	93.8	0.07	5.4	396	280
G087017		6.76	0.21	1.2	<1	0.022	0.9	15.8	9.5	0.76	120	91	0.08	4.2	300	260
G087018		0.33	0.22	<0.1	<0.1	<0.005	0.03	0.6	0.9	12.35	193	0.65	0.01	0.2	2	170
G087019		6.72	0.23	1.1	<1	0.021	0.81	23	10.6	0.6	92	78.6	0.09	3.8	265	950
G087020		6.22	0.18	1	0.37	0.029	0.82	16.4	11.7	0.67	101	76.2	0.1	4	254	290

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Detection limits on samples requiring dilutions for Hg-CV41, due to interferences or high concentration levels, have been increased according to the dilution factor.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - C

Total Pages: 2 (A - D)

Finalized Date: 29-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115443

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti	Tl
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm
		0.5	0.1	0.002	0.01	0.05	0.1	1	0.2	0.2	0.05	0.05	0.2	0.005	0.02
G087013		10.3	48.6	0.116	1.07	74.6	7.1	33	0.8	546	0.27	0.16	3.5	0.137	3.67
G087014		11.4	56.4	0.117	1.16	33.6	7.7	34	0.8	276	0.32	0.23	3.8	0.156	3.85
G087015		11.5	53.8	0.116	1.52	25.1	6.7	32	0.9	124	0.28	0.2	4.2	0.144	4.58
G087016		12.2	61.8	0.125	2.17	19.35	8.5	38	1	99.1	0.31	0.32	4.1	0.164	7.38
G087017		11.1	47.9	0.112	1.76	17.35	6.7	31	0.9	231	0.24	0.23	3	0.128	5.41
G087018		1.4	1.3	<0.002	0.02	0.19	0.5	1	<0.2	44.2	<0.05	<0.05	0.4	<0.005	0.03
G087019		10.9	44.6	0.091	1.47	79	6.8	30	0.9	176	0.26	0.18	3.6	0.113	4.41
G087020		11.9	45.9	0.106	1.5	21.4	5.6	31	0.9	294	0.24	0.14	2.9	0.115	4.41

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Detection limits on samples requiring dilutions for Hg-CV41, due to interferences or high concentration levels, have been increased according to the dilution factor.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - D

Total Charges: 2 (A - D)

Finalized Date: 29-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115443

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		V	W	Y	Zn	Zr
		ppm 1	ppm 0.1	ppm 0.1	ppm 2	ppm 0.5
G087013		2510	0.7	36.3	2610	60.3
G087014		2380	0.9	39.3	1760	74.5
G087015		2570	0.8	30.1	1510	58.4
G087016		3080	0.8	34.9	1450	70
G087017		2540	0.9	25.9	1820	52.3
G087018		10	0.1	0.9	21	0.5
G087019		2800	0.6	30.1	1990	45.2
G087020		2620	0.7	28.6	2250	45.1

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Detection limits on samples requiring dilutions for Hg-CV41, due to interferences or high concentration levels, have been increased according to the dilution factor.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: 28-OCT-2007

Account: MTT

CERTIFICATE EL07115442

Project: NIMO-SN

P.O. No.: SN-07-03

This report is for 14 Drill Core samples submitted to our lab in Vancouver, BC, Canada on 10-SEP-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICE

DOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
CRU-31	Fine crushing - 70% <2mm
SPL-21	Split sample - riffle splitter
PUL-36	Pulverize 1.5 kg to 85% <75 um

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS61	48 element four acid ICP-MS
Hg-CV41	Trace Hg - cold vapor/AAS
	FIMS

The results of this assay were based solely upon the content of the sample submitted. Any decision to invest should be made only after the potential investment value of the claim or deposit has been determined based on the results of assays of multiple samples of geological materials collected by the prospective investor or by a qualified person selected by him/her and based on an evaluation of all engineering data which is available concerning any proposed project.

To: STRATEGIC METALS LTD.
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - A

Total Pages: 2 (A - D)

Finalized Date: 28-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115442

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Recvd Wt.	Ag	Al	As	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs	Cu	Fe
		kg	ppm	%	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%
		0.02	0.01	0.01	0.2	10	0.05	0.01	0.01	0.02	0.01	0.1	1	0.05	0.2	0.01
G087021		2.67	0.29	1.48	12.5	590	0.85	0.06	0.19	1.86	13.25	6	36	1.73	19.5	2
G087022		2.71	0.2	1.08	12.1	1140	0.66	0.04	1.54	1.39	12.3	6.7	29	1.14	15.6	1.76
G087023		1.68	0.18	1.29	11.1	1290	0.68	0.06	3.12	1.94	20.6	4.1	28	1.53	18	1.3
G087024		0.81	0.24	1.53	15.5	640	0.9	0.06	0.08	3.43	9.2	4.8	35	1.95	23.4	1.65
G087025		0.24	0.72	3.15	34	560	1.59	0.16	0.12	4.74	16.85	10.8	52	3.23	56.2	2.91
G087026		0.64	0.61	2.43	23	440	1.06	0.1	0.07	2.1	17.6	7.9	45	2.08	39.5	2.69
G087027		2.60	0.44	2.1	15.2	330	1.26	0.08	0.69	1.92	22.3	7.1	43	2.65	29.3	2.17
G087028		2.65	0.42	1.92	14.9	420	0.99	0.07	1.69	0.49	11.4	8.8	35	2.53	28.3	2.33
G087029		1.19	0.01	0.07	<5	40	0.07	0.02	20.9	0.09	0.99	0.9	<1	0.14	1.9	0.45
G087030		0.83	0.42	1.68	14.4	300	0.84	0.06	1.24	0.31	27.5	5	37	2.35	23.7	1.73
G087032		0.98	0.29	3.46	16	260	1.79	0.09	12.35	2.45	22.8	7.3	36	5.79	19.9	1.56
G087033		2.41	0.32	4.22	16.2	220	2	0.1	9.5	2.67	26.6	9.1	40	7.41	21.2	2.08
G087034		2.56	0.4	5.25	25.5	740	2	0.14	1.76	4.05	30.4	9.6	61	9.18	31.6	2.38
G087035		0.14	0.13	4.76	19.8	1280	3.36	0.17	1.94	7.35	69.6	161	10	3.51	6.4	22.2

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - B

Total Charges: 2 (A - D)

Finalized Date: 28-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115442

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	Hg-CV41	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb	Ni	P
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm	ppm	ppm
		0.05	0.05	0.1	0.01	0.005	0.01	0.5	0.2	0.01	5	0.05	0.01	0.1	0.2	10
G087021		3.35	0.12	0.7	0.04	0.008	0.44	7.7	33.9	0.09	127	29	0.04	2.6	161	420
G087022		2.33	0.12	0.5	0.04	0.006	0.27	7.5	32.2	0.06	154	22.9	0.03	1.8	156.5	300
G087023		3.01	0.12	0.6	0.04	0.008	0.37	11.3	18.7	0.13	86	24.9	0.05	2.3	109	340
G087024		3.69	0.12	0.7	0.05	0.015	0.42	5.3	13	0.08	80	31.7	0.04	2.9	142	410
G087025		7.09	0.17	1.8	0.12	0.029	0.93	8.7	13.1	0.18	123	72.3	0.03	7.1	350	740
G087026		4.66	0.15	1.2	0.08	0.008	0.77	7.6	22.9	0.11	121	53.1	0.03	4.5	248	460
G087027		5.27	0.13	0.9	0.06	0.014	0.67	11.9	9.2	0.14	118	37.5	0.04	3.6	181.5	260
G087028		4.72	0.14	0.9	0.06	0.009	0.62	6.6	8	0.15	152	40.2	0.04	3.8	204	250
G087029		0.32	0.19	<0.1	<0.01	<0.005	0.02	0.5	1	12.45	204	0.58	0.02	0.2	2.8	170
G087030		4.37	0.17	0.8	0.05	0.007	0.56	14.7	17.4	0.43	116	40.6	0.04	3.2	143	310
G087032		9.97	0.2	1.4	0.05	0.03	1.02	13.1	11	6.3	372	24.4	0.09	5.8	87.3	1940
G087033		10.25	0.13	1.1	0.06	0.026	1.2	15.2	9.9	5.1	424	22.9	0.08	5.3	125.5	250
G087034		13	0.16	1.5	0.10	0.038	1.55	17.4	11.3	0.51	108	28.8	0.05	6.8	114	220
G087035		5.59	0.53	1.6	0.02	0.012	0.46	40.4	12.2	0.38	2120	13.75	0.26	10.9	2570	3130

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - C

Total . . ages: 2 (A - D)

Finalized Date: 28-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115442

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti	U
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm
		0.5	0.1	0.002	0.01	0.05	0.1	1	0.2	0.2	0.05	0.05	0.2	0.005	0.1
G087021		4.4	22.1	0.068	0.96	3.89	3	9	0.5	46.2	0.16	0.12	1.7	0.061	10.3
G087022		3.8	14	0.056	0.73	2.96	2.3	7	0.4	54.3	0.09	0.08	1.1	0.042	11.2
G087023		4	18.5	0.068	0.78	2.78	3.5	8	0.6	197	0.14	0.1	2.3	0.049	8.1
G087024		4.7	22.5	0.084	1.06	3.73	3.3	10	0.7	32.9	0.15	0.14	1.9	0.068	11.2
G087025		12.2	46.8	0.219	2.53	9.79	7.1	26	1.2	75.1	0.39	0.27	3.3	0.175	21.7
G087026		8	33.2	0.14	1.89	7.48	4.4	18	0.8	51.6	0.24	0.21	2.1	0.114	13.5
G087027		5.8	33.4	0.123	1.49	5.52	4.3	14	0.7	33.7	0.22	0.13	2.1	0.104	8.6
G087028		5.4	31.3	0.134	1.36	5.4	3.5	15	0.7	136.5	0.21	0.25	1.7	0.094	7.9
G087029		1.3	1.1	<0.002	0.03	0.1	0.4	2	<0.2	43.5	<0.05	<0.05	0.5	<0.005	1.1
G087030		4.8	28.3	0.127	1.21	5.83	4.7	17	0.6	99.4	0.17	0.31	2.1	0.081	11.6
G087032		6.1	69.7	0.051	1.69	7.99	8.5	20	1.3	914	0.32	0.14	3.9	0.137	6.1
G087033		6.7	79.1	0.019	1.91	8.81	7.2	9	1.3	630	0.32	0.07	3.7	0.154	4
G087034		9.7	98.8	0.022	2.46	11.75	9	12	1.6	105.5	0.41	0.08	4.9	0.221	5.3
G087035		6.6	23.9	0.014	0.33	1.63	20.9	11	0.5	395	1.04	<0.05	30.2	0.05	80.6

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SN

Page: 2 - D

Total .. ages: 2 (A - D)

Finalized Date: 28-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS EL07115442

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm
		1	0.1	0.1	2	0.5
G087021		210	0.3	12.6	355	28.8
G087022		142	0.3	12.5	548	20.3
G087023		193	0.2	12	218	22.7
G087024		303	0.4	12	326	31.7
G087025		675	0.8	21	453	76
G087026		434	0.6	12.8	255	49.5
G087027		446	0.4	12.4	401	39
G087028		267	0.4	15.2	463	36.6
G087029		9	0.1	0.8	19	0.7
G087030		175	0.4	31.1	142	37.6
G087032		484	0.6	35.3	257	37.7
G087033		495	0.6	21.5	750	43.9
G087034		767	0.8	14.5	438	52
G087035		393	0.7	293	8320	53.1

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. REE's may not be totally soluble in MS61 method.

**ALS Chemex****EXCELLENCE IN ANALYTICAL CHEMISTRY**

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: 9-NOV-2007

Account: MTT

CERTIFICATE VA07128843

Project: NIMO - SUN

P.O. No.:

This report is for 1 Drill Core sample submitted to our lab in Vancouver, BC, Canada on 5-NOV-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICEDOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
FND-02	Find Sample for Addn Analysis

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
ME-XRF05	Trace Level XRF Analysis	XRF

To: **STRATEGIC METALS LTD.**
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO - SUN

Page: 2 - A

Total Pages: 2 (A)

Finalized Date: 9-NOV-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07128843

Sample Description	Method Analyte Units LOR	ME-XRF05 Se ppm 2
G087031		762



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1
Finalized Dat 1-NOV-2007
Account: MTT

CERTIFICATE VA07119756

Project: NIMO-SUN

P.O. No.:

This report is for 1 Drill Core sample submitted to our lab in Vancouver, BC, Canada on 13-SEP-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICE

DOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
FND-02	Find Sample for Addn Analysis
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
ME-OG62	Ore Grade Elements - Four Acid	ICP-AES
Ni-OG62	Ore Grade Ni - Four Acid	VARIABLE
ME-MS61	48 element four acid ICP-MS	
Hg-CV41	Trace Hg - cold vapor/AAS	FIMS

To: **STRATEGIC METALS LTD.**
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SUN

Page: 2 - A

Total # of Cases: 2 (A - D)

Finalized Date: 11-NOV-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07119756

Sample Description	Method	WEI-21	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
	Analyte	Recvd Wt.	Ag	Al	As	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs	Cu	Fe
	Units LOR	kg	ppm	%	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%
		0.02	0.01	0.01	0.2	10	0.05	0.01	0.01	0.02	0.01	0.1	1	0.05	0.2	0.01
G087031		0.06	2.59	3.13	1195	390	1.67	0.54	6.39	56.8	13.6	108	47	4.63	93.7	10.9

Comments: Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SUN

Page: 2 - B

Total # of Tests: 2 (A - D)

Finalized Date: 11-NOV-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07119756

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	Hg-CV41	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61
		Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb	Ni
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.05	0.1	0.01	0.005	0.01	0.5	0.2	0.01	5	0.05	0.01	0.1	0.2
G087031		10.75	3.23	1.4	0.18	0.715	1.09	5.8	12.8	0.8	148	1155	0.04	5.7	>10000

Comments: Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO-SUN

Page: 2 - D

Total # of Pages: 2 (A - D)

Finalized Date: 11-NOV-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07119756

Sample Description	Method Analyte Units LOR	ME-MS61	ME-MS61	ME-MS61	ME-MS61	ME-MS61	Ni-OG62
		V	W	Y	Zn	Zr	Ni
		ppm 1	ppm 0.1	ppm 0.1	ppm 2	ppm 0.5	% 0.01
G087031		335	3.3	127	6070	56.2	3.02

Comments: Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown. REE's may not be totally soluble in MS61 method.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: 31-OCT-2007

Account: MTT

CERTIFICATE VA07103114

Project: NIMO - SUN

P.O. No.: SN07-03

This report is for 1 Drill Core sample submitted to our lab in Vancouver, BC, Canada on 13-SEP-2007.

The following have access to data associated with this certificate:

AL ARCHER
VANCOUVER OFFICE

DOUG EATON
BILL WENGZYNOWSKI

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
CRU-31	Fine crushing - 70% <2mm
PUL-31	Pulverize split to 85% <75 um
LOG-22	Sample login - Rcd w/o BarCode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
ME-ICP61	33 element four acid ICP-AES	ICP-AES
Hg-CV41	Trace Hg - cold vapor/AAS	FIMS
ME-OG62	Ore Grade Elements - Four Acid	ICP-AES
Ni-OG62	Ore Grade Ni - Four Acid	VARIABLE
ME-MS42	Up to 34 elements by ICP-MS	ICP-MS
Ni-AA62	Ore grade Ni - four acid / AA	AAS
Mo-AA62	Ore grade Mo - four acid / AA	AAS
Zn-AA62	Ore grade Zn - four acid / AAS	AAS
PGM-ICP23	Pt, Pd, Au 30g FA ICP	ICP-AES

To: STRATEGIC METALS LTD.
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO - SUN

Page: 2 - A

Total Pages: 2 (A - C)

Finalized Date: 31-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07103114

Sample Description	Method Analyte Units LOR	WEI-21	PGM-ICP23	PGM-ICP23	PGM-ICP23	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61
		Recvd Wt.	Au	Pt	Pd	Ag	Al	As	Ba	Be	Bi	Ca	Cd	Co	Cr	Cu
		kg	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm
		0.02	0.001	0.005	0.001	0.5	0.01	5	10	0.5	2	0.01	0.5	1	1	1
G087031		0.06	0.065	0.171	0.097	2.5	3.27	1400	240	1.7	<2	6.52	58.4	114	50	101



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO - SUN

Page: 2 - C

Total Charges: 2 (A - C)

Finalized Date: 31-OCT-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07103114

Sample Description	Method Analyte Units LOR	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	ME-ICP61	Ni-OG62	ME-MS42	Ni-AA62	Mo-AA62	Zn-AA62
		Sr	Ti	Th	Ti	U	V	W	Zn	Ni	Re	Ni	Mo	Zn
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	%	%	%
		1	0.01	20	10	10	1	10	2	0.01	0.001	0.01	0.001	0.01
G087031		1615	0.12	20	170	10	365	<10	6790	2.93	19.30	3.01	0.122	0.63



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

Page: 1
Finalized Date: -AUG-2007
Account: MTT

CERTIFICATE VA07077185

Project: NiMo

P.O. No.:

This report is for 199 Soil samples submitted to our lab in Vancouver, BC, Canada on 17-JUL-2007.

The following have access to data associated with this certificate:

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS41	51 anal. aqua regia ICPMS

To: STRATEGIC METALS LTD.
ATTN: JOAN MARIACHER
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

TO: STRATEGIC METALS LTD.

3100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - A

Total # of Tests: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt. kg	Ag ppm	Al %	As ppm	Au ppm	B ppm	Ba ppm	Be ppm	Bi ppm	Ca %	Cd ppm	Ce ppm	Co ppm	Cr ppm	Cs ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC27572		0.28	1.21	1.72	62.0	<0.2	<10	1010	0.45	0.28	0.07	0.54	21.50	1.8	44	2.56
CC27573		0.14	1.46	1.25	47.9	<0.2	<10	1290	0.39	0.30	0.05	0.64	18.40	1.5	27	2.69
CC27574		0.20	0.82	0.84	55.7	<0.2	<10	650	0.41	0.20	0.11	1.17	12.80	0.9	20	2.00
CC27575		0.32	0.43	0.52	73.2	<0.2	<10	810	0.34	0.18	0.10	0.83	15.50	4.9	23	0.88
CC27576		0.26	0.41	0.74	21.0	<0.2	<10	870	0.36	0.17	0.17	1.48	26.10	2.9	19	0.88
CC27577		0.16	0.58	0.91	9.9	<0.2	<10	1350	0.38	0.14	0.40	4.44	23.90	8.6	19	1.06
CC27578		0.14	0.79	1.23	9.6	<0.2	<10	3190	0.60	0.20	0.69	3.59	45.30	22.9	20	0.98
CC27579		0.12	0.67	1.42	12.2	<0.2	<10	3030	0.65	0.22	0.97	2.26	42.40	23.8	20	1.03
CC27580		0.12	0.68	1.23	5.3	<0.2	<10	3110	0.51	0.19	0.55	1.30	37.70	4.7	21	1.09
CC27581		0.18	3.08	1.23	18.3	<0.2	<10	2550	0.65	0.22	0.68	21.90	35.30	7.3	42	1.50
CC27582		0.14	1.58	1.08	130.0	<0.2	<10	1190	0.67	0.38	0.47	8.40	23.80	10.4	89	2.39
CC27583		0.24	0.98	1.22	10.7	<0.2	<10	2680	0.62	0.21	0.80	1.96	40.40	5.8	30	1.14
CC27584		0.18	1.90	0.97	25.1	<0.2	<10	2260	0.81	0.21	1.02	6.41	28.90	5.2	62	1.17
CC27585		0.28	1.43	0.81	22.5	<0.2	<10	2140	0.81	0.19	0.52	5.45	39.80	4.0	33	0.96
CC27586		0.18	0.50	1.32	7.7	<0.2	<10	3130	0.55	0.22	0.30	0.46	44.40	8.1	22	0.80
CC27587		0.32	0.40	1.30	9.5	<0.2	<10	3480	0.63	0.21	0.26	0.32	41.50	8.3	26	0.81
CC27588		0.26	0.48	1.17	12.3	<0.2	<10	3660	0.58	0.23	0.35	0.75	40.70	10.0	25	0.96
CC27589		0.32	0.57	1.12	12.6	<0.2	<10	3740	0.64	0.23	0.40	0.80	40.40	11.1	25	1.03
CC27590		0.28	0.77	0.99	13.3	<0.2	<10	3120	0.68	0.25	0.49	0.81	36.00	12.9	21	1.08
CC27591		0.20	0.66	0.83	13.3	<0.2	<10	4590	0.57	0.25	0.32	1.42	43.60	10.5	20	0.80
CC27592		0.28	0.33	0.97	8.1	<0.2	<10	2870	0.56	0.26	0.23	0.50	34.60	9.6	20	0.92
CC27593		0.18	1.03	0.94	27.9	<0.2	10	6640	0.96	0.16	1.14	5.52	37.60	6.7	41	1.01
CC27594		0.10	0.69	0.69	51.1	<0.2	10	4610	1.00	0.19	0.63	12.65	43.70	8.0	52	0.94
CC27595		0.10	1.31	0.51	28.2	<0.2	<10	2960	0.73	0.14	1.53	18.25	39.00	5.3	33	0.68
CC27596		0.14	1.82	0.54	37.9	<0.2	10	4850	0.84	0.17	1.60	10.15	35.10	4.8	65	0.53
CC27597		0.16	3.66	0.53	42.4	<0.2	10	>10000	0.55	0.16	2.64	7.37	19.40	5.0	119	0.62
CC27598		0.18	2.42	0.75	53.7	<0.2	10	4510	0.87	0.23	0.22	13.55	27.50	6.3	81	1.29
CC27599		0.10	6.69	0.72	61.1	<0.2	10	5950	0.82	0.24	0.74	35.90	22.60	13.0	106	1.16
CC27600		0.12	3.65	1.72	95.2	<0.2	<10	640	0.76	0.37	0.08	4.32	17.30	6.1	140	1.66
CC27601		0.12	2.35	0.70	46.0	<0.2	<10	3190	0.66	0.17	0.14	15.65	16.15	3.6	64	1.13
CC27602		0.10	3.46	0.65	44.6	<0.2	<10	2840	0.64	0.14	0.10	18.55	14.95	3.9	67	1.24
CC27603		0.14	5.30	0.99	69.5	<0.2	<10	2570	0.96	0.18	0.35	55.30	22.10	5.1	81	1.66
CC27604		0.16	2.28	0.89	57.4	<0.2	10	2180	0.79	0.17	0.08	21.30	17.25	7.2	52	1.35
CC27605		0.14	0.71	0.47	47.7	<0.2	<10	450	0.35	0.18	0.04	1.51	17.90	2.4	47	1.62
CC27606		0.10	1.77	0.44	23.9	<0.2	<10	260	0.35	0.10	0.08	1.83	12.55	1.2	65	1.08
CC27607		0.06	1.07	0.62	14.1	<0.2	<10	440	0.31	0.15	0.07	2.10	20.80	1.9	30	1.29
CC27608		0.08	1.17	1.17	46.3	<0.2	<10	480	0.37	0.27	0.08	5.20	20.40	4.4	53	1.32
CC27609		0.18	0.59	0.66	68.3	<0.2	<10	570	0.60	0.23	0.10	9.27	23.50	3.1	60	1.83
CC27610		0.26	1.14	0.82	34.3	<0.2	<10	1230	0.53	0.16	0.24	14.15	24.70	5.6	39	1.18
CC27611		0.12	3.29	1.64	37.4	<0.2	<10	1670	0.77	0.24	0.11	14.40	21.50	9.3	59	1.93

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

2/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - B

Total # r s: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu ppm	Fe %	Ga ppm	Ge ppm	Hf ppm	Hg ppm	In ppm	K %	La ppm	Li ppm	Mg %	Mn ppm	Mo ppm	Na %	Nb ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC27572		88.0	1.68	6.22	0.12	0.06	0.32	0.086	0.10	10.7	6.8	0.17	40	43.90	<0.01	0.39
CC27573		66.4	2.01	4.37	0.11	0.04	0.42	0.056	0.08	9.1	4.7	0.12	34	54.00	<0.01	0.38
CC27574		55.9	1.99	3.13	0.14	0.04	0.21	0.040	0.05	6.3	2.5	0.07	17	84.60	<0.01	0.25
CC27575		49.9	2.87	2.67	0.13	0.08	0.16	0.044	0.08	7.5	3.0	0.09	208	74.30	<0.01	0.20
CC27576		34.4	1.39	2.74	0.09	0.05	0.11	0.027	0.07	13.9	5.1	0.15	52	29.60	<0.01	0.27
CC27577		21.5	2.05	3.17	0.07	0.04	0.15	0.021	0.07	12.9	5.7	0.13	393	21.70	<0.01	0.20
CC27578		40.1	5.22	3.86	0.12	0.10	0.14	0.034	0.10	22.4	8.5	0.26	918	17.00	<0.01	0.24
CC27579		35.6	4.35	4.16	0.10	0.11	0.14	0.033	0.11	19.7	11.2	0.30	2390	5.10	<0.01	0.19
CC27580		33.6	1.55	3.92	0.07	0.07	0.15	0.031	0.10	20.0	10.1	0.25	61	1.29	<0.01	0.24
CC27581		80.4	1.64	4.27	0.09	0.08	0.48	0.036	0.11	19.0	9.5	0.25	129	9.94	<0.01	0.24
CC27582		110.5	3.53	7.86	0.16	0.03	0.05	0.060	0.18	15.4	6.1	0.14	153	104.50	<0.01	0.41
CC27583		38.2	2.07	3.84	0.09	0.08	0.19	0.034	0.10	21.2	11.1	0.27	114	4.96	<0.01	0.21
CC27584		78.0	1.79	3.65	0.08	0.07	0.23	0.032	0.10	17.6	6.4	0.17	113	15.15	<0.01	0.22
CC27585		77.0	1.46	3.18	0.08	0.06	0.35	0.028	0.08	20.8	6.5	0.14	95	42.40	<0.01	0.22
CC27586		33.1	2.48	4.34	0.09	0.06	0.10	0.035	0.11	22.7	11.7	0.31	317	5.84	<0.01	0.21
CC27587		33.1	2.73	4.25	0.09	0.04	0.13	0.036	0.12	20.9	9.8	0.25	225	4.36	<0.01	0.23
CC27588		38.9	2.66	3.69	0.08	0.05	0.14	0.042	0.13	20.7	6.9	0.21	171	3.94	<0.01	0.22
CC27589		45.2	3.37	3.41	0.09	0.06	0.18	0.043	0.14	21.2	6.5	0.22	288	3.79	<0.01	0.23
CC27590		51.9	3.65	2.82	0.10	0.06	0.19	0.051	0.13	19.2	4.5	0.17	263	4.87	<0.01	0.13
CC27591		54.6	3.28	2.35	0.10	0.07	0.16	0.042	0.14	21.3	3.7	0.15	111	8.13	<0.01	0.22
CC27592		34.1	3.06	3.28	0.08	0.04	0.06	0.043	0.10	18.2	6.0	0.13	262	6.60	<0.01	0.18
CC27593		66.4	1.98	4.15	0.10	0.13	0.41	0.033	0.13	22.0	6.4	0.15	209	43.40	<0.01	0.24
CC27594		87.8	1.69	3.69	0.10	0.10	0.35	0.030	0.09	27.8	8.7	0.09	102	95.10	<0.01	0.25
CC27595		84.3	1.25	2.42	0.09	0.09	0.27	0.023	0.05	25.5	3.1	0.11	126	54.90	<0.01	0.24
CC27596		94.4	1.30	3.15	0.09	0.12	0.44	0.029	0.07	24.3	5.6	0.20	132	44.00	<0.01	0.19
CC27597		144.0	1.47	3.09	0.13	0.07	0.36	0.030	0.08	14.1	2.9	0.64	202	11.70	<0.01	0.11
CC27598		93.6	1.96	4.83	0.10	0.06	0.33	0.033	0.11	17.6	7.1	0.09	40	54.10	<0.01	0.14
CC27599		118.5	2.03	3.66	0.13	0.06	0.79	0.038	0.12	15.7	4.4	0.14	205	37.30	<0.01	0.11
CC27600		109.0	2.99	7.78	0.13	0.05	0.30	0.058	0.15	9.9	12.5	0.17	117	56.60	<0.01	0.46
CC27601		85.3	1.35	3.30	0.08	0.03	0.21	0.026	0.07	11.1	2.0	0.04	22	35.20	<0.01	0.18
CC27602		72.0	1.24	3.49	0.08	0.03	0.51	0.023	0.08	11.1	3.0	0.06	32	42.20	<0.01	0.14
CC27603		139.5	1.87	4.88	0.12	0.06	1.18	0.033	0.10	15.4	8.0	0.18	67	60.00	<0.01	0.33
CC27604		90.5	1.69	3.74	0.12	0.04	0.24	0.023	0.09	11.7	4.7	0.08	252	76.40	<0.01	0.23
CC27605		34.1	1.40	5.09	0.09	<0.02	0.06	0.013	0.07	14.1	1.4	0.04	19	80.30	<0.01	0.25
CC27606		47.0	0.78	3.58	0.06	<0.02	0.10	0.016	0.06	10.6	1.0	0.03	28	38.00	<0.01	0.19
CC27607		30.1	0.95	4.88	<0.05	<0.02	0.06	0.016	0.05	13.3	1.3	0.04	24	21.10	<0.01	0.31
CC27608		37.5	2.60	7.76	0.07	<0.02	0.08	0.026	0.07	12.3	5.9	0.15	123	43.50	<0.01	0.82
CC27609		101.5	1.89	5.33	0.13	0.04	0.12	0.046	0.09	17.0	2.9	0.07	44	68.60	<0.01	0.10
CC27610		78.8	1.68	3.66	0.08	0.03	0.21	0.030	0.07	15.2	7.1	0.19	102	43.30	<0.01	0.34
CC27611		105.0	2.17	5.94	0.08	0.03	0.63	0.041	0.11	12.9	10.0	0.21	271	45.00	<0.01	0.40

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

TO: STRATEGIC METALS LTD.

3100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - C

Total # of Tests: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
	Units LOR	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2	% 0.005
CC27572		26.2	1720	18.6	16.4	0.006	0.14	12.40	8.3	20.1	1.0	212.0	<0.01	0.15	1.7	0.012
CC27573		20.6	1230	19.9	15.4	0.013	0.14	17.95	6.4	21.0	1.1	98.4	<0.01	0.24	1.1	0.012
CC27574		29.5	980	14.0	9.7	0.014	0.10	14.60	5.3	22.6	0.7	87.8	<0.01	0.19	1.1	0.009
CC27575		44.8	500	12.9	8.0	0.033	0.20	9.42	5.2	16.5	0.5	89.8	<0.01	0.41	3.7	0.010
CC27576		37.1	430	11.2	9.1	0.028	0.05	5.85	3.7	12.6	0.5	39.6	<0.01	0.15	3.9	0.010
CC27577		33.0	620	9.4	11.5	0.018	0.10	3.65	3.1	4.3	0.5	42.3	<0.01	0.05	2.0	0.005
CC27578		43.3	890	12.8	14.1	0.006	0.12	2.26	5.0	5.3	0.4	62.0	0.01	0.06	3.4	0.005
CC27579		51.0	940	13.8	18.1	0.010	0.12	1.44	4.9	4.6	0.4	70.8	0.01	0.08	2.9	<0.005
CC27580		31.9	620	12.8	13.9	0.010	0.11	1.33	4.8	4.1	0.4	47.3	<0.01	0.06	3.9	0.005
CC27581		98.5	1090	11.8	15.2	0.009	0.08	8.30	5.1	6.5	0.6	72.2	0.01	0.09	2.4	0.006
CC27582		189.0	680	26.0	23.0	0.003	0.22	50.80	3.4	21.1	1.3	55.7	<0.01	0.40	1.8	0.016
CC27583		40.2	1050	12.8	14.4	0.012	0.09	2.78	4.7	6.2	0.4	74.0	0.01	0.07	3.1	0.006
CC27584		126.5	1460	12.4	12.2	0.005	0.06	10.35	4.8	5.7	0.7	120.0	0.01	0.13	2.6	0.007
CC27585		137.5	550	9.7	10.2	0.004	0.05	8.85	4.8	3.5	0.7	65.3	0.01	0.14	2.4	0.007
CC27586		40.0	780	12.3	13.5	0.002	0.04	1.65	4.9	3.3	0.4	45.7	0.01	0.06	4.6	0.005
CC27587		32.3	860	11.6	13.8	0.003	0.03	1.84	4.9	3.4	0.5	49.4	<0.01	0.06	4.2	0.007
CC27588		36.4	910	14.4	14.1	0.002	0.03	2.11	5.8	2.2	0.5	52.3	<0.01	0.07	5.2	0.006
CC27589		45.1	920	13.1	13.3	0.003	0.04	1.85	6.7	2.7	0.4	63.6	0.01	0.07	5.9	0.007
CC27590		58.3	700	14.8	12.2	0.001	0.03	2.22	7.2	2.6	0.4	57.2	0.01	0.07	4.3	<0.005
CC27591		60.4	800	15.8	10.3	0.001	0.04	3.30	7.2	2.9	0.3	56.9	0.01	0.09	5.9	0.010
CC27592		29.9	610	14.0	11.4	0.001	0.03	1.95	3.8	2.9	0.4	25.9	<0.01	0.09	3.9	0.006
CC27593		197.0	1320	11.6	13.4	0.005	0.10	8.18	4.4	6.4	1.0	181.0	0.01	0.10	2.5	0.007
CC27594		249.0	620	15.3	11.3	0.002	0.10	18.00	3.3	9.7	0.8	115.0	0.01	0.15	1.2	0.005
CC27595		231.0	710	11.3	7.1	0.003	0.12	12.65	3.0	7.6	0.6	160.5	0.02	0.12	1.0	0.006
CC27596		174.5	1410	11.0	8.3	0.003	0.13	15.10	3.3	8.3	0.7	191.5	0.02	0.12	1.2	0.005
CC27597		180.5	4530	8.7	7.3	0.006	0.05	21.50	2.5	9.9	0.7	693.0	0.01	0.16	0.7	<0.005
CC27598		180.0	1170	16.2	14.8	0.003	0.09	24.60	1.8	10.8	0.9	78.7	0.01	0.18	0.6	0.006
CC27599		295.0	2340	15.6	11.2	0.004	0.10	30.60	3.4	15.8	1.0	179.5	<0.01	0.20	1.2	0.005
CC27600		127.5	1290	25.8	20.5	0.003	0.31	38.40	1.7	23.8	1.2	119.5	<0.01	0.34	0.4	0.009
CC27601		102.5	1390	17.1	11.3	0.003	0.13	20.40	0.4	11.6	0.5	45.2	0.01	0.22	<0.2	<0.005
CC27602		105.0	940	14.4	12.4	0.002	0.09	25.50	0.5	10.0	0.5	28.1	0.01	0.16	<0.2	<0.005
CC27603		258.0	610	17.0	15.0	0.004	0.04	36.30	6.9	14.0	0.7	74.2	0.01	0.16	1.9	0.015
CC27604		173.5	900	15.7	14.5	0.008	0.11	30.70	1.8	20.5	0.6	27.8	<0.01	0.18	0.4	0.008
CC27605		124.5	310	13.9	14.3	0.010	0.03	33.90	1.5	15.3	0.6	7.1	<0.01	0.21	0.4	0.012
CC27606		57.8	660	9.2	8.0	0.008	0.06	21.90	0.9	9.0	0.5	7.8	<0.01	0.14	0.2	0.009
CC27607		39.0	400	11.9	7.1	0.002	0.04	8.38	1.0	4.3	0.8	9.0	<0.01	0.10	0.2	0.013
CC27608		75.2	520	17.7	12.1	0.003	0.03	20.60	2.1	7.4	0.9	17.0	<0.01	0.13	0.5	0.023
CC27609		151.5	1140	18.6	13.0	0.010	0.03	36.50	1.2	20.7	0.8	27.6	<0.01	0.21	0.3	<0.005
CC27610		135.5	830	10.0	10.0	0.005	0.04	17.30	3.8	8.2	0.5	48.3	<0.01	0.11	1.6	0.014
CC27611		136.0	970	15.8	17.5	0.006	0.05	15.70	3.6	7.5	0.8	32.8	<0.01	0.14	0.7	0.008

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - D

Total # of Tests: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.05	1	0.05	0.05	2	0.5
CC27572		3.31	23.60	233	0.30	11.10	62	1.3
CC27573		3.47	12.95	246	0.38	11.45	54	0.9
CC27574		3.19	9.89	221	0.29	15.10	63	0.7
CC27575		3.76	7.01	134	0.25	12.30	144	4.4
CC27576		1.55	2.56	145	0.15	10.30	96	2.2
CC27577		1.01	2.33	184	0.09	10.40	223	0.9
CC27578		0.28	3.38	116	0.10	22.90	311	2.2
CC27579		0.21	2.35	68	0.09	20.50	296	2.2
CC27580		0.26	2.52	79	0.06	15.65	150	1.8
CC27581		0.95	6.98	359	0.18	25.90	781	2.2
CC27582		3.25	7.16	1250	0.56	20.90	892	0.7
CC27583		0.46	3.94	163	0.10	19.80	165	2.0
CC27584		0.88	6.15	474	0.16	22.00	396	1.8
CC27585		2.08	8.20	349	0.33	34.10	416	2.0
CC27586		0.22	3.18	69	0.10	16.80	113	1.3
CC27587		0.20	2.93	67	0.10	15.35	132	0.8
CC27588		0.20	2.33	68	0.09	17.60	157	1.0
CC27589		0.18	2.37	57	0.08	20.10	156	1.6
CC27590		0.21	1.85	52	0.07	23.30	190	1.0
CC27591		0.18	1.47	65	0.09	20.60	199	2.3
CC27592		0.14	1.45	69	0.06	9.44	165	0.9
CC27593		1.25	14.35	482	0.27	35.10	397	4.4
CC27594		2.71	14.60	817	0.49	35.40	1100	3.1
CC27595		0.89	19.70	406	0.36	35.10	674	3.1
CC27596		1.24	13.95	481	0.34	35.50	739	3.7
CC27597		0.79	4.64	261	0.18	24.80	898	1.7
CC27598		1.91	8.72	1050	0.33	30.70	1110	1.0
CC27599		1.74	9.45	867	0.28	28.40	2980	1.2
CC27600		4.11	14.75	1230	0.37	28.80	477	0.9
CC27601		1.58	9.84	884	0.31	22.60	488	<0.5
CC27602		1.72	6.22	1175	0.28	22.60	572	<0.5
CC27603		3.81	8.66	1640	0.34	34.60	3930	1.3
CC27604		3.33	9.11	1320	0.35	23.00	992	0.6
CC27605		1.99	2.41	1335	0.40	5.53	480	<0.5
CC27606		0.69	3.87	829	0.24	7.34	247	<0.5
CC27607		0.98	2.71	454	0.20	5.33	166	<0.5
CC27608		2.04	2.08	1135	0.32	8.42	468	<0.5
CC27609		4.23	5.34	826	0.33	21.80	805	0.7
CC27610		2.88	5.11	503	0.24	19.30	960	0.6
CC27611		4.72	6.84	750	0.25	20.90	872	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

CO: STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - A

Total # of Tests: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm	ME-MS41 Cs ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC27612		0.14	1.26	1.07	21.7	<0.2	<10	960	0.47	0.20	0.13	5.85	26.10	3.8	38	1.25
CC27613		0.14	0.65	1.13	18.1	<0.2	<10	1290	0.57	0.22	0.16	2.29	21.90	4.2	23	1.14
CC27614		0.16	1.70	0.94	15.1	<0.2	10	2580	0.55	0.50	0.15	1.45	10.95	0.9	24	2.58
CC27617		0.12	0.08	0.20	6.0	<0.2	<10	800	0.22	0.07	0.01	0.18	5.59	0.4	5	0.41
CC27618		0.14	0.67	0.12	11.2	<0.2	<10	960	0.19	0.11	0.01	0.15	2.64	0.2	2	0.51
CC20221		0.10	11.00	0.98	122.0	<0.2	10	1280	0.75	0.32	0.04	2.79	13.75	2.2	93	2.44
CC20222		0.20	7.16	1.32	79.9	<0.2	10	>10000	0.70	0.26	2.32	34.30	16.90	7.9	114	1.91
CC20223		0.08	2.98	1.12	51.5	<0.2	10	5100	0.95	0.22	0.16	16.30	17.80	2.8	99	1.63
CC20224		0.20	3.21	0.93	59.3	<0.2	<10	3550	0.87	0.22	0.06	17.55	15.05	1.9	94	1.47
CC20225		0.16	5.83	0.92	69.6	<0.2	<10	3200	0.79	0.22	0.07	16.95	14.70	1.9	101	1.40
CC20226		0.32	6.33	1.09	54.1	<0.2	10	3420	1.02	0.24	0.12	11.60	16.80	1.7	120	1.54
CC39801		0.16	0.29	1.13	29.4	<0.2	<10	440	0.35	0.19	0.04	0.85	21.30	6.0	25	1.06
CC39802		0.10	1.25	0.95	40.0	<0.2	<10	890	0.40	0.22	0.15	1.67	16.20	5.7	33	1.03
CC39803		0.10	0.60	1.38	46.9	<0.2	10	730	0.50	0.27	0.04	2.11	13.70	4.3	44	2.42
CC39804		0.12	0.66	0.77	32.3	<0.2	<10	800	0.39	0.15	0.04	1.97	17.35	5.2	31	0.90
CC39805		0.08	0.85	0.75	31.3	<0.2	10	690	0.42	0.16	0.06	2.33	20.90	2.9	32	1.74
CC39806		0.10	3.83	1.31	50.3	<0.2	10	1470	0.77	0.21	0.48	36.90	16.95	5.6	82	2.69
CC39807		0.10	0.50	1.80	41.2	<0.2	10	740	0.68	0.21	0.07	5.98	23.40	7.7	61	1.93
CC39808		0.26	1.75	0.60	46.5	<0.2	10	5630	0.37	0.04	6.97	13.25	9.01	4.3	42	0.54
CC39809		0.18	3.25	1.42	72.6	<0.2	10	1780	0.93	0.21	0.12	14.15	18.10	7.9	67	2.15
CC39810		0.08	3.92	0.71	35.5	<0.2	10	2220	0.85	0.16	1.22	20.30	17.85	5.0	68	1.19
CC39811		0.12	8.13	1.02	82.2	<0.2	10	4830	1.16	0.26	1.06	24.70	24.90	9.7	117	1.65
CC39812		0.14	9.35	0.95	76.1	<0.2	<10	3340	0.94	0.25	5.47	41.40	17.90	9.5	115	1.49
CC39813		0.14	3.51	0.90	87.5	<0.2	<10	1220	0.57	0.36	0.11	5.54	21.20	4.2	91	1.70
CC39814		0.20	0.28	1.58	5.9	<0.2	<10	1460	0.85	0.16	0.79	0.79	39.70	6.6	28	0.90
CC39815		0.18	0.39	1.73	7.2	<0.2	10	1610	1.00	0.15	1.13	1.27	43.00	9.8	30	0.96
CC39816		0.22	0.34	1.63	7.2	<0.2	10	1420	0.85	0.15	1.18	1.26	40.90	8.3	29	0.77
CC39817		0.22	0.37	1.49	7.0	<0.2	10	1370	0.91	0.15	1.76	2.15	38.30	8.3	26	0.75
CC39818		0.18	0.43	1.48	9.6	<0.2	10	1200	0.90	0.12	2.15	2.02	38.00	7.8	24	0.78
CC39819		0.20	0.38	1.62	7.1	<0.2	10	1410	0.99	0.14	2.31	1.55	40.30	8.0	28	0.93
CC39820		0.14	0.42	1.65	9.2	<0.2	10	1240	1.00	0.14	1.68	1.34	40.40	8.7	29	0.84
CC39821		0.26	0.43	1.54	8.2	<0.2	10	1300	0.98	0.14	1.61	1.61	41.60	8.3	29	0.91
CC39822		0.16	0.46	1.48	9.4	<0.2	10	1440	0.90	0.14	2.85	2.44	41.00	8.8	31	0.78
CC39823		0.16	0.48	1.33	9.7	<0.2	10	1870	0.92	0.16	1.58	2.45	40.90	6.9	32	0.80
CC39824		0.18	0.64	1.00	22.9	<0.2	10	2750	1.05	0.13	0.43	4.77	38.50	5.4	40	0.88
CC39825		0.14	0.56	1.20	24.3	<0.2	10	4630	1.07	0.15	0.56	3.52	39.10	6.4	39	0.85
CC39826		0.12	0.52	1.15	25.1	<0.2	10	4310	1.03	0.14	0.54	1.46	38.90	6.4	36	0.82
CC39827		0.14	0.50	1.33	3.2	<0.2	10	1450	0.77	0.14	1.86	1.30	39.30	7.4	25	0.90
CC39828		0.18	0.44	1.64	7.7	<0.2	10	1630	0.88	0.16	1.75	1.74	41.20	9.9	29	0.97
CC39829		0.18	0.29	1.45	5.7	<0.2	<10	1420	0.79	0.19	0.71	0.44	48.90	8.5	24	0.69

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - B

Total # s: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu ppm 0.2	Fe % 0.01	Ga ppm 0.05	Ge ppm 0.05	Hf ppm 0.02	Hg ppm 0.01	In ppm 0.005	K % 0.01	La ppm 0.2	Li ppm 0.1	Mg % 0.01	Mn ppm 5	Mo ppm 0.05	Na % 0.01	Nb ppm 0.05
CC27612		52.4	1.57	4.38	0.05	0.02	0.23	0.031	0.08	16.6	8.2	0.19	70	42.00	<0.01	0.38
CC27613		27.0	1.40	3.90	0.05	0.03	0.16	0.032	0.09	12.2	7.3	0.13	66	29.00	<0.01	0.27
CC27614		58.3	0.48	4.27	0.11	0.04	1.42	0.041	0.10	5.7	2.8	0.06	10	23.80	<0.01	0.31
CC27617		16.7	0.38	0.75	<0.05	0.03	0.02	0.011	0.04	2.3	0.6	0.01	9	14.15	<0.01	0.10
CC27618		25.3	1.07	0.38	<0.05	0.14	0.19	<0.005	0.10	1.2	0.2	0.01	<5	14.50	<0.01	<0.05
CC20221		94.0	2.53	8.10	0.13	0.02	0.86	0.046	0.14	9.2	7.1	0.09	22	77.60	<0.01	0.99
CC20222		211.0	2.23	5.11	0.16	0.08	0.60	0.038	0.15	11.2	6.6	0.69	191	54.00	<0.01	1.11
CC20223		111.5	1.97	5.33	0.08	0.04	0.27	0.033	0.08	11.6	6.7	0.08	31	34.10	<0.01	1.03
CC20224		139.5	1.95	4.56	0.09	0.03	0.35	0.038	0.05	10.1	2.8	0.04	11	22.50	<0.01	0.85
CC20225		135.5	2.14	4.60	0.12	0.03	0.49	0.039	0.05	9.4	2.9	0.05	11	31.80	<0.01	0.84
CC20226		170.5	2.31	5.52	0.14	0.04	0.60	0.046	0.09	11.7	6.1	0.09	18	47.40	<0.01	1.54
CC39801		39.1	2.42	4.62	0.06	0.02	0.03	0.028	0.09	11.9	8.4	0.15	167	41.10	<0.01	0.53
CC39802		61.3	2.45	3.79	0.09	0.05	0.26	0.047	0.18	9.4	8.8	0.19	83	85.00	<0.01	0.49
CC39803		44.7	2.31	7.20	0.08	0.03	0.14	0.036	0.16	8.3	5.7	0.12	47	75.80	<0.01	0.53
CC39804		42.5	1.81	3.59	0.07	0.02	0.10	0.027	0.10	11.0	5.3	0.13	84	49.80	<0.01	0.43
CC39805		41.9	1.28	3.26	0.06	0.03	0.29	0.026	0.10	13.4	4.7	0.11	40	39.40	<0.01	0.35
CC39806		118.0	1.85	5.79	0.10	0.05	0.70	0.042	0.17	10.6	9.4	0.24	128	53.40	0.01	0.47
CC39807		72.6	2.72	6.47	0.07	0.03	0.16	0.037	0.16	12.6	17.7	0.33	240	30.00	0.01	0.70
CC39808		294.0	0.64	3.02	0.06	0.07	0.20	0.017	0.08	6.1	2.1	0.59	257	38.20	<0.01	0.46
CC39809		131.0	2.10	5.92	0.13	0.04	0.35	0.033	0.13	11.0	7.5	0.13	369	78.60	<0.01	0.33
CC39810		110.0	1.16	3.41	0.10	0.08	0.63	0.027	0.10	10.3	6.0	0.16	108	19.45	<0.01	0.35
CC39811		162.0	2.29	5.01	0.17	0.11	1.01	0.033	0.16	15.8	7.7	0.14	103	42.20	<0.01	0.51
CC39812		191.0	2.03	3.84	0.20	0.07	1.45	0.029	0.15	12.9	4.7	2.88	441	35.80	0.01	0.33
CC39813		92.2	2.27	5.33	0.13	0.03	0.38	0.031	0.16	12.2	5.5	0.11	74	51.50	<0.01	0.51
CC39814		30.5	1.44	4.99	0.05	0.12	0.07	0.033	0.09	21.7	15.8	0.41	92	0.73	<0.01	0.52
CC39815		45.4	2.31	5.49	0.07	0.15	0.10	0.035	0.11	24.6	19.6	0.56	366	2.28	0.01	0.52
CC39816		38.0	2.13	5.12	0.07	0.14	0.07	0.034	0.12	23.0	18.4	0.54	148	2.56	0.01	0.51
CC39817		44.7	1.80	4.67	0.06	0.13	0.09	0.031	0.11	21.7	17.7	0.62	181	1.36	<0.01	0.50
CC39818		42.0	1.95	4.82	0.07	0.12	0.11	0.029	0.09	22.8	18.4	0.71	238	2.27	0.01	0.44
CC39819		40.1	1.84	5.18	0.06	0.14	0.09	0.033	0.13	23.0	20.2	0.77	160	1.50	0.01	0.49
CC39820		45.1	2.11	5.27	0.06	0.16	0.10	0.032	0.13	22.5	21.0	0.79	205	2.92	0.01	0.49
CC39821		43.1	1.91	5.01	0.07	0.16	0.08	0.031	0.14	22.9	20.0	0.79	123	1.82	0.01	0.52
CC39822		49.6	1.86	5.00	0.07	0.18	0.10	0.033	0.14	23.1	19.6	0.88	161	3.25	0.01	0.51
CC39823		52.6	1.54	4.68	0.06	0.19	0.11	0.032	0.14	23.3	16.8	0.61	80	3.01	<0.01	0.61
CC39824		83.3	1.58	4.28	0.06	0.12	0.24	0.029	0.10	23.9	12.6	0.27	93	14.20	<0.01	0.76
CC39825		78.1	1.71	4.93	0.07	0.08	0.24	0.034	0.11	24.0	14.4	0.32	137	23.50	<0.01	0.82
CC39826		71.9	1.91	4.66	0.06	0.10	0.15	0.030	0.11	23.8	14.6	0.33	145	21.30	<0.01	0.83
CC39827		45.8	1.52	4.14	0.06	0.14	0.09	0.033	0.14	21.9	17.1	0.74	106	1.01	<0.01	0.44
CC39828		48.8	2.27	5.19	0.06	0.12	0.08	0.035	0.17	22.5	19.4	0.77	157	3.23	<0.01	0.36
CC39829		34.7	2.14	4.57	0.06	0.12	0.08	0.035	0.12	26.1	15.3	0.40	206	0.72	<0.01	0.39

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

LIMITED

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - C

Total # P : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2	0.005
CC27612		58.2	760	12.0	12.1	0.004	0.02	8.83	2.8	4.6	0.6	31.9	<0.01	0.09	1.5	0.010
CC27613		46.0	400	14.1	14.0	0.013	0.03	4.66	3.4	5.2	0.8	33.3	<0.01	0.18	2.3	<0.005
CC27614		49.2	440	37.3	21.2	0.043	0.12	9.88	2.5	16.4	2.0	50.6	0.01	0.23	0.7	0.006
CC27617		5.4	70	5.7	3.7	0.009	0.06	3.22	1.3	2.5	0.3	18.1	<0.01	0.07	1.1	<0.005
CC27618		3.9	90	8.9	6.4	0.017	0.25	6.74	0.8	2.5	<0.2	19.9	<0.01	0.13	1.1	<0.005
CC20221		88.7	750	28.3	18.9	0.008	0.19	39.60	2.9	19.5	1.2	55.3	<0.01	0.30	0.6	0.043
CC20222		306.0	1990	21.1	15.9	0.014	0.04	33.50	5.6	23.9	0.8	664.0	0.01	0.26	1.5	0.049
CC20223		97.3	1210	18.2	14.6	0.005	0.09	18.70	4.3	9.7	0.9	92.5	<0.01	0.19	1.1	0.035
CC20224		70.3	1220	17.9	11.7	0.005	0.09	14.75	1.6	11.5	0.8	29.1	0.01	0.19	<0.2	0.028
CC20225		73.9	1370	16.7	11.2	0.010	0.12	24.30	1.4	16.9	0.8	29.5	0.01	0.20	<0.2	0.026
CC20226		64.2	1370	20.5	16.6	0.015	0.09	25.30	3.8	23.3	0.9	51.3	<0.01	0.20	0.4	0.060
CC39801		70.5	320	11.8	11.6	0.002	0.11	9.02	2.7	5.2	0.7	19.9	<0.01	0.09	2.2	0.016
CC39802		132.5	650	16.7	11.1	0.007	0.29	17.45	5.0	12.2	0.7	107.5	<0.01	0.15	3.0	0.015
CC39803		113.0	700	21.2	16.9	0.003	0.18	16.30	3.9	10.7	1.1	51.1	<0.01	0.18	1.6	0.008
CC39804		95.6	460	11.6	10.6	0.003	0.12	12.85	1.8	6.2	0.6	33.4	<0.01	0.12	0.4	0.015
CC39805		81.4	420	12.7	12.4	0.006	0.09	12.90	2.8	4.5	0.6	31.8	0.01	0.12	1.2	0.012
CC39806		249.0	950	14.5	21.3	0.009	0.13	27.10	4.4	10.1	0.8	89.0	0.01	0.20	0.6	0.013
CC39807		101.0	550	13.8	22.0	0.002	0.07	13.80	4.7	5.7	0.7	20.5	<0.01	0.10	1.8	0.018
CC39808		146.0	1130	5.3	7.8	0.001	0.12	44.40	1.9	7.1	0.3	752.0	0.01	0.06	0.4	0.021
CC39809		157.5	1180	18.3	21.4	0.007	0.19	36.00	2.0	20.6	0.7	50.2	<0.01	0.17	0.2	0.019
CC39810		143.0	1750	10.3	13.5	0.017	0.15	14.50	4.1	14.4	0.7	214.0	0.02	0.12	1.1	0.013
CC39811		314.0	2860	17.5	17.4	0.022	0.11	38.50	8.2	18.9	0.9	307.0	0.01	0.18	2.6	0.028
CC39812		307.0	3140	19.0	13.2	0.010	0.19	37.00	7.4	21.0	0.9	876.0	<0.01	0.18	2.2	0.018
CC39813		101.0	1020	29.1	20.0	0.005	0.32	27.10	2.2	19.3	0.8	84.7	<0.01	0.31	0.3	0.027
CC39814		29.5	600	12.6	15.6	0.001	0.07	1.13	5.5	1.4	0.6	45.5	<0.01	0.04	5.3	0.008
CC39815		46.8	1030	11.6	17.3	0.001	0.07	1.49	6.0	1.8	0.6	60.9	0.01	0.05	4.8	0.009
CC39816		43.6	1080	11.5	14.9	<0.001	0.06	1.25	5.7	1.5	0.5	59.5	<0.01	0.05	5.0	0.010
CC39817		46.3	1100	11.2	13.8	<0.001	0.07	1.37	5.3	1.6	0.5	81.1	<0.01	0.03	4.1	0.009
CC39818		45.7	1310	10.8	11.3	<0.001	0.09	1.53	4.6	2.1	0.5	97.2	0.01	0.03	2.1	0.009
CC39819		51.7	1280	11.0	16.6	<0.001	0.06	1.37	5.8	1.6	0.5	96.5	<0.01	0.03	4.8	0.009
CC39820		49.7	1260	11.5	15.1	<0.001	0.07	1.63	5.5	1.6	0.5	69.7	<0.01	0.02	3.7	0.011
CC39821		50.1	1260	11.3	16.2	<0.001	0.05	1.75	5.6	1.5	0.6	70.7	<0.01	0.02	5.1	0.011
CC39822		66.2	1210	11.5	15.5	0.001	0.04	2.44	5.9	1.9	0.6	110.5	0.01	0.05	5.6	0.011
CC39823		68.2	790	12.8	16.0	0.002	0.06	3.09	6.1	2.2	0.6	76.3	<0.01	0.05	6.3	0.012
CC39824		95.0	450	11.3	15.1	0.001	0.05	6.26	5.1	2.3	0.7	47.1	<0.01	0.07	4.5	0.015
CC39825		97.2	630	11.4	15.2	0.001	0.05	4.73	5.5	1.9	0.7	64.8	<0.01	0.06	4.0	0.013
CC39826		76.2	620	12.1	15.5	0.001	0.05	3.67	5.3	2.3	0.6	63.5	<0.01	0.09	4.3	0.016
CC39827		40.9	910	9.0	15.0	<0.001	0.06	0.96	5.7	1.3	0.5	83.8	<0.01	0.03	4.9	0.011
CC39828		50.7	870	10.2	17.8	<0.001	0.04	1.39	6.4	1.1	0.6	84.1	<0.01	0.03	5.4	0.011
CC39829		38.1	930	13.3	16.4	0.001	0.06	0.78	5.5	1.5	0.5	45.9	<0.01	0.04	5.7	0.006

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - D

Total # P s: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.05	1	0.05	0.05	2	0.5
CC27612		2.88	3.32	498	0.19	12.15	385	<0.5
CC27613		2.17	2.87	233	0.16	11.65	204	0.6
CC27614		7.61	20.80	224	0.34	12.10	49	1.6
CC27617		1.16	4.65	50	0.19	4.23	14	1.7
CC27618		1.44	3.79	32	0.14	12.25	10	5.5
CC20221		4.07	5.94	1640	0.62	10.95	500	<0.5
CC20222		3.26	12.70	1445	0.45	56.40	2320	1.3
CC20223		2.22	9.58	1155	0.37	28.20	444	0.6
CC20224		1.77	10.80	1010	0.29	22.70	242	<0.5
CC20225		2.06	10.45	1005	0.32	29.90	336	<0.5
CC20226		3.15	12.45	1685	0.39	29.10	382	0.6
CC39801		1.79	2.42	298	0.21	6.29	145	0.5
CC39802		3.92	8.38	376	0.38	11.65	302	2.7
CC39803		5.36	3.56	689	0.43	8.22	306	1.1
CC39804		2.02	3.18	446	0.29	9.06	333	<0.5
CC39805		3.77	4.50	449	0.32	10.60	242	0.5
CC39806		6.41	5.49	1190	0.42	22.40	2590	0.7
CC39807		2.71	3.77	790	0.25	11.90	1110	0.5
CC39808		1.19	1.75	859	0.17	14.40	1840	1.6
CC39809		4.34	16.15	1760	0.35	23.30	907	0.6
CC39810		1.40	13.45	643	0.28	27.70	1170	1.7
CC39811		1.93	25.90	1045	0.38	40.00	2810	2.5
CC39812		1.99	8.45	822	0.35	34.30	3230	1.7
CC39813		3.09	11.15	1055	0.37	15.05	521	<0.5
CC39814		0.20	1.20	85	0.09	16.30	120	3.3
CC39815		0.20	1.07	93	0.12	20.90	156	3.7
CC39816		0.18	1.11	89	0.11	18.25	182	3.7
CC39817		0.19	1.24	84	0.16	18.70	196	3.6
CC39818		0.17	1.48	93	0.12	19.95	189	2.4
CC39819		0.22	1.16	105	0.10	19.50	236	4.0
CC39820		0.18	0.98	110	0.10	19.80	172	3.4
CC39821		0.20	1.17	125	0.09	19.25	200	4.4
CC39822		0.30	1.57	149	0.13	21.40	262	5.8
CC39823		0.41	1.96	233	0.14	22.30	237	6.6
CC39824		1.29	4.94	641	0.22	29.10	407	4.5
CC39825		1.07	4.49	510	0.23	29.10	355	2.8
CC39826		0.73	5.19	495	0.25	30.10	299	3.1
CC39827		0.25	0.87	70	0.07	18.20	135	4.0
CC39828		0.36	0.84	92	0.09	19.40	168	2.8
CC39829		0.14	1.48	49	0.08	19.35	97	2.7

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - A

Total # P : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39830		0.18	0.21	1.47	7.5	<0.2	<10	1390	0.76	0.19	0.47	0.21	48.00	6.7	25	0.74
CC39831		0.16	0.50	1.27	16.9	<0.2	10	4040	1.09	0.18	0.63	1.68	42.60	7.5	34	1.06
CC39832		0.16	0.47	1.19	15.9	<0.2	10	7600	0.78	0.16	0.58	2.09	39.60	9.2	29	0.75
CC39833		0.18	0.47	1.48	7.1	<0.2	10	2450	0.95	0.20	0.88	0.61	47.30	8.9	26	0.75
CC39834		0.12	0.28	1.47	7.4	<0.2	<10	1700	0.90	0.19	0.70	0.35	46.90	8.9	25	0.68
CC39835		0.16	0.36	1.52	9.1	<0.2	<10	2930	0.85	0.19	0.66	0.92	41.70	9.8	25	0.73
CC39836		0.10	1.35	1.59	51.8	<0.2	<10	1270	0.69	0.22	0.06	7.98	24.50	6.0	51	1.66
CC39837		0.16	1.47	2.31	62.7	<0.2	<10	3410	1.09	0.24	0.31	57.90	28.70	9.1	56	1.54
CC39838		0.22	3.39	1.36	29.0	<0.2	10	3710	0.95	0.19	0.42	86.80	23.60	4.3	84	2.07
CC39839		0.14	2.67	0.89	26.2	<0.2	10	4540	1.04	0.19	0.56	76.90	27.80	7.4	71	1.19
CC39840		0.16	2.10	0.74	28.5	<0.2	10	4420	1.09	0.15	0.75	71.00	28.50	4.0	73	1.33
CC39841		0.20	2.03	0.67	47.1	<0.2	<10	4040	0.89	0.20	1.01	32.40	26.60	4.4	46	1.15
CC39842		0.14	0.98	0.67	48.4	<0.2	<10	6110	0.78	0.16	1.31	16.50	24.70	4.6	36	0.81
CC39843		0.20	0.64	0.91	37.7	<0.2	<10	8140	0.80	0.18	0.81	10.35	32.30	7.4	29	0.87
CC39845		0.10	2.00	0.49	30.6	<0.2	10	2040	0.56	0.14	0.61	21.60	10.45	2.9	37	1.21
CC39846		0.14	1.52	1.17	46.4	<0.2	<10	630	0.56	0.21	0.04	3.28	18.05	2.8	57	1.74
CC39847		0.14	0.39	0.86	39.4	<0.2	<10	1700	0.42	0.24	0.16	5.07	15.00	4.8	42	1.56
CC39848		0.08	0.55	0.56	31.4	<0.2	<10	610	0.38	0.21	0.05	2.23	18.25	2.7	34	1.97
CC39849		0.14	2.62	1.86	103.0	<0.2	<10	1220	0.96	0.20	0.09	19.80	13.85	14.0	79	3.02
CC39850		0.10	3.92	0.77	35.9	<0.2	<10	920	0.46	0.15	0.14	8.46	11.65	2.8	47	2.69
CC39851		0.16	3.33	1.99	24.5	<0.2	10	3040	1.24	0.35	0.44	19.25	29.80	9.1	89	2.76
CC39852		0.26	0.25	1.45	10.9	<0.2	<10	960	0.56	0.22	0.31	1.02	37.00	9.8	25	0.75
CC39853		0.26	0.26	1.41	10.8	<0.2	<10	1070	0.50	0.23	0.33	1.22	33.80	9.0	25	0.68
CC39854		0.06	0.24	1.30	8.7	<0.2	<10	1010	0.32	0.21	0.25	0.84	25.60	2.9	22	0.73
CC39855		0.22	0.30	1.47	10.4	<0.2	<10	1150	0.59	0.23	0.33	1.55	35.60	8.8	25	0.83
CC39856		0.22	0.26	1.38	8.0	<0.2	<10	990	0.45	0.22	0.19	1.44	31.50	4.6	23	0.80
CC39857		0.26	0.29	1.36	9.5	<0.2	<10	1040	0.52	0.25	0.28	1.61	32.50	6.2	23	0.81
CC39858		0.26	0.27	1.27	11.5	<0.2	<10	980	0.48	0.22	0.20	1.13	30.50	5.1	21	0.74
CC39877		0.24	0.27	1.32	15.2	<0.2	<10	970	0.56	0.22	0.11	0.64	29.00	3.6	27	1.01
CC39878		0.12	0.23	1.02	5.6	<0.2	<10	590	0.34	0.17	0.10	0.43	23.20	1.9	22	0.90
CC39879		0.16	0.25	1.34	14.3	<0.2	<10	1090	0.53	0.20	0.34	0.69	28.30	6.3	28	0.92
CC39880		0.14	0.26	1.37	15.3	<0.2	<10	1320	0.62	0.21	0.39	0.94	29.40	7.7	30	0.86
CC39882		0.22	0.26	1.35	14.8	<0.2	10	1200	0.67	0.21	1.22	0.90	30.40	10.4	28	0.97
CC39883		0.18	0.22	1.36	11.9	<0.2	10	810	0.59	0.20	1.14	0.70	29.20	9.7	26	1.00
CC39884		0.12	0.30	1.37	12.1	<0.2	10	1530	0.63	0.21	0.56	0.64	27.00	8.5	30	0.99
CC39885		0.30	0.22	1.53	14.6	<0.2	<10	1840	0.76	0.22	0.24	0.31	35.90	7.9	33	1.02
CC39886		0.18	0.27	1.37	13.1	<0.2	<10	1750	0.62	0.22	0.24	0.57	29.50	9.0	30	0.99
CC39887		0.32	0.35	1.35	11.1	<0.2	<10	1960	0.66	0.21	0.23	0.79	30.50	11.2	32	1.11
CC39888		0.30	0.48	1.41	11.3	<0.2	<10	2000	0.74	0.22	0.45	1.69	29.00	8.7	34	1.20
CC39889		0.12	0.32	1.35	6.6	<0.2	<10	920	0.65	0.23	0.24	0.73	34.00	6.1	26	0.91

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - B

Total # r: : 6 (A - D)

Finalized Date: 5-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39830		27.6	2.12	4.66	0.06	0.09	0.08	0.034	0.12	25.2	15.8	0.40	183	1.05	<0.01	0.34
CC39831		57.0	2.25	4.97	0.08	0.07	0.20	0.035	0.15	24.5	15.3	0.29	183	23.20	<0.01	0.27
CC39832		46.3	2.04	4.62	0.07	0.10	0.17	0.028	0.15	22.9	10.3	0.19	240	32.30	<0.01	0.33
CC39833		42.0	2.26	4.58	0.07	0.16	0.10	0.039	0.16	30.5	15.7	0.45	260	7.57	<0.01	0.30
CC39834		31.4	2.41	4.66	0.07	0.11	0.08	0.033	0.12	25.4	15.7	0.40	201	2.86	<0.01	0.36
CC39835		35.8	2.42	4.71	0.07	0.11	0.09	0.034	0.10	23.0	15.5	0.37	325	4.01	<0.01	0.41
CC39836		114.5	2.30	6.81	0.07	0.04	0.14	0.032	0.08	13.6	8.4	0.13	187	38.20	<0.01	0.58
CC39837		208.0	3.08	7.39	0.09	0.08	0.12	0.043	0.12	15.4	12.8	0.25	463	40.50	<0.01	0.75
CC39838		160.5	1.15	4.93	0.09	0.07	1.31	0.032	0.13	14.7	10.5	0.21	138	21.50	<0.01	0.78
CC39839		141.5	1.50	4.14	0.13	0.16	0.63	0.033	0.12	16.6	9.1	0.16	119	17.50	<0.01	0.61
CC39840		150.0	1.12	3.66	0.11	0.11	0.61	0.034	0.11	17.5	6.4	0.11	92	30.00	<0.01	0.42
CC39841		111.5	1.51	3.19	0.13	0.11	0.57	0.032	0.10	20.3	5.2	0.13	62	81.20	<0.01	0.78
CC39842		106.0	1.24	3.18	0.10	0.10	0.33	0.029	0.09	18.7	5.2	0.14	136	63.40	<0.01	1.09
CC39843		61.8	1.84	3.68	0.10	0.16	0.26	0.033	0.14	21.9	5.1	0.10	97	64.10	<0.01	0.27
CC39845		50.9	0.95	2.81	0.09	0.06	0.24	0.016	0.09	7.2	2.5	0.10	149	40.40	<0.01	0.47
CC39846		89.4	1.90	4.72	0.09	0.03	0.18	0.029	0.09	12.4	3.7	0.08	59	55.60	0.01	0.44
CC39847		34.1	1.89	5.84	0.08	0.02	0.11	0.031	0.09	9.7	6.0	0.09	175	60.20	<0.01	0.60
CC39848		41.1	1.35	5.01	0.07	<0.02	0.10	0.020	0.06	12.3	1.4	0.03	30	43.50	<0.01	0.43
CC39849		214.0	2.03	5.67	0.12	0.04	0.39	0.042	0.10	10.3	6.1	0.09	314	93.40	<0.01	0.44
CC39850		70.3	1.33	3.84	0.09	0.02	0.34	0.025	0.09	7.8	2.3	0.06	42	43.70	<0.01	0.34
CC39851		138.0	1.71	7.86	0.10	0.09	1.10	0.063	0.18	18.2	18.0	0.35	196	25.00	<0.01	0.78
CC39852		29.2	3.11	4.82	0.08	0.07	0.08	0.034	0.09	22.3	17.2	0.40	264	2.69	0.01	0.53
CC39853		25.3	2.99	4.57	0.07	0.07	0.05	0.034	0.09	19.7	13.4	0.38	201	2.97	0.01	0.51
CC39854		17.1	1.30	4.93	0.06	0.03	0.07	0.026	0.07	14.7	11.5	0.29	48	3.67	0.01	0.37
CC39855		28.8	2.68	4.98	0.08	0.04	0.05	0.033	0.09	21.2	14.0	0.36	210	5.74	0.01	0.48
CC39856		22.6	1.93	4.67	0.08	0.04	0.05	0.031	0.07	19.1	13.6	0.33	63	1.84	0.01	0.48
CC39857		24.8	2.40	4.56	0.07	0.04	0.06	0.033	0.07	20.0	12.9	0.32	84	4.60	0.01	0.47
CC39858		20.8	2.30	4.31	0.07	0.04	0.07	0.030	0.06	18.7	12.4	0.30	69	2.91	0.01	0.44
CC39877		30.7	1.79	4.50	0.07	0.04	0.09	0.037	0.08	16.3	13.7	0.27	54	1.28	0.01	0.53
CC39878		19.8	0.92	4.10	0.05	0.02	0.09	0.028	0.06	13.0	9.3	0.18	34	0.78	0.01	0.44
CC39879		29.0	2.16	4.55	0.07	0.08	0.07	0.035	0.09	16.9	16.0	0.39	153	3.35	0.01	0.55
CC39880		35.1	2.77	4.62	0.08	0.10	0.08	0.036	0.10	17.5	15.9	0.41	160	5.41	0.01	0.60
CC39882		34.3	2.85	4.31	0.08	0.11	0.05	0.034	0.10	17.7	16.6	0.73	289	4.67	0.01	0.63
CC39883		30.3	2.64	4.37	0.08	0.11	0.04	0.033	0.12	17.2	16.4	0.79	312	2.87	0.02	0.66
CC39884		27.6	2.49	4.57	0.07	0.06	0.08	0.037	0.11	16.0	14.2	0.35	442	4.98	0.01	0.48
CC39885		28.2	2.81	5.05	0.07	0.04	0.07	0.038	0.11	20.7	16.0	0.35	136	7.29	<0.01	0.50
CC39886		27.2	2.63	4.42	0.07	0.06	0.08	0.038	0.10	17.3	15.2	0.36	254	4.77	<0.01	0.47
CC39887		33.1	2.67	4.52	0.08	0.08	0.08	0.037	0.10	18.1	15.5	0.34	291	6.14	<0.01	0.45
CC39888		43.0	2.37	4.85	0.08	0.07	0.12	0.041	0.12	17.3	18.7	0.41	196	5.81	<0.01	0.52
CC39889		28.0	1.84	4.34	0.07	0.04	0.09	0.036	0.07	19.8	14.7	0.29	94	0.91	0.01	0.49

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - C

Total # P : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
CC39830		27.9	930	13.7	15.1	<0.001	0.03	0.85	5.1	1.0	0.5	38.5	<0.01	0.04	6.2
CC39831		83.8	1300	13.3	19.6	0.003	0.05	4.07	5.2	2.9	0.8	87.6	<0.01	0.06	4.3
CC39832		83.4	1020	12.1	16.3	0.005	0.05	3.92	5.6	3.0	0.6	72.5	<0.01	0.06	4.3
CC39833		61.5	1200	10.7	16.5	0.001	0.04	1.44	6.4	1.3	0.5	51.5	<0.01	0.04	5.4
CC39834		37.6	990	13.4	15.3	0.001	0.06	0.95	5.2	1.6	0.5	58.4	<0.01	0.04	5.2
CC39835		42.4	870	13.2	14.6	0.001	0.07	1.15	5.3	1.9	0.5	55.8	<0.01	0.03	4.6
CC39836		83.0	960	19.1	17.5	0.005	0.09	18.40	2.1	9.7	0.9	18.4	<0.01	0.11	0.4
CC39837		207.0	1190	18.6	18.7	0.003	0.13	18.00	4.8	9.7	0.9	64.4	0.01	0.12	1.6
CC39838		212.0	1040	11.4	20.1	0.011	0.11	16.20	5.6	8.7	0.8	106.0	0.01	0.11	1.1
CC39839		311.0	1250	13.5	13.1	0.016	0.11	21.20	6.6	12.0	0.8	141.5	0.01	0.11	4.1
CC39840		163.0	1640	8.9	12.3	0.009	0.09	15.20	5.4	7.6	0.8	195.5	0.01	0.11	2.8
CC39841		266.0	560	12.4	11.6	0.007	0.12	17.20	5.1	11.4	0.8	116.0	0.01	0.16	1.6
CC39842		204.0	600	11.3	10.5	0.007	0.11	11.45	3.4	8.6	0.8	182.0	0.01	0.12	1.0
CC39843		191.0	640	13.6	12.2	0.008	0.09	10.15	5.0	7.5	1.0	99.4	0.01	0.12	4.6
CC39845		137.5	700	10.1	13.6	0.019	0.13	15.70	2.4	7.7	0.5	118.0	0.01	0.14	0.6
CC39846		86.0	760	14.8	12.3	0.004	0.12	15.10	2.1	9.0	0.7	23.4	0.01	0.16	0.5
CC39847		115.0	510	14.9	13.0	0.002	0.07	12.80	2.2	8.1	0.8	31.0	<0.01	0.16	0.8
CC39848		67.1	520	12.9	10.3	0.003	0.05	12.60	1.2	6.0	0.9	11.1	<0.01	0.17	0.2
CC39849		321.0	1430	16.3	19.1	0.006	0.15	31.10	1.0	13.3	0.7	29.6	0.01	0.22	<0.2
CC39850		87.6	1370	11.5	14.4	0.003	0.11	14.30	0.6	8.1	0.6	36.4	0.01	0.16	<0.2
CC39851		176.0	1030	16.3	22.0	0.010	0.12	10.75	7.1	5.1	1.2	105.0	0.01	0.19	2.3
CC39852		31.3	720	13.2	13.4	0.003	0.07	1.21	4.5	1.7	0.5	33.6	<0.01	0.06	5.7
CC39853		31.3	780	13.8	13.8	0.003	0.08	1.19	4.1	2.0	0.5	38.2	<0.01	0.06	5.9
CC39854		20.4	730	12.4	12.4	0.005	0.09	0.91	2.3	2.2	0.5	39.5	<0.01	0.05	1.6
CC39855		36.0	770	12.5	14.1	0.003	0.04	1.12	4.4	2.5	0.6	40.4	<0.01	0.05	4.8
CC39856		24.4	580	13.0	12.4	0.005	0.07	1.10	3.7	2.7	0.5	28.0	<0.01	0.04	4.7
CC39857		28.2	650	13.2	13.6	0.004	0.02	1.17	4.0	2.7	0.5	35.1	<0.01	0.05	5.1
CC39858		23.4	690	13.2	11.7	0.005	0.05	1.12	3.4	2.3	0.5	27.0	<0.01	0.05	4.7
CC39877		22.1	410	13.9	15.0	0.002	0.01	2.35	4.4	2.4	0.6	21.6	<0.01	0.06	4.6
CC39878		13.4	310	11.0	11.8	0.001	0.04	1.21	3.1	1.5	0.5	17.2	<0.01	0.04	2.9
CC39879		31.0	520	12.7	12.3	0.002	0.07	1.94	4.8	1.3	0.6	39.9	<0.01	0.06	5.3
CC39880		39.8	710	12.4	12.1	0.002	0.04	1.93	5.5	1.4	0.6	43.9	<0.01	0.06	5.7
CC39882		42.5	740	12.2	12.8	0.002	0.04	1.63	5.4	1.5	0.6	72.2	<0.01	0.05	5.7
CC39883		37.8	740	11.0	13.1	0.001	0.03	1.13	5.1	1.1	0.5	50.0	<0.01	0.04	5.3
CC39884		37.3	850	11.3	15.2	0.003	0.04	1.36	4.9	1.6	0.6	57.8	<0.01	0.05	3.6
CC39885		32.8	690	13.2	15.3	0.002	0.01	1.61	5.2	1.7	0.7	35.9	0.01	0.06	5.3
CC39886		34.7	660	12.2	13.4	0.001	0.01	1.61	4.7	1.6	0.7	37.0	<0.01	0.06	5.1
CC39887		35.2	710	9.9	15.2	0.001	0.01	1.63	5.6	1.8	0.7	40.3	0.01	0.05	5.9
CC39888		66.4	750	11.5	15.8	0.003	0.02	1.98	6.4	1.5	0.7	66.2	<0.01	0.06	5.3
CC39889		24.1	720	13.6	13.8	0.002	0.03	0.97	4.3	1.8	0.5	30.4	<0.01	0.05	4.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - D

Total # Pages: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Tl	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39830		0.15	1.15	54	0.07	16.45	100	2.0
CC39831		0.51	5.36	346	0.16	22.80	280	1.6
CC39832		0.58	7.60	241	0.22	26.50	230	2.4
CC39833		0.26	2.01	74	0.09	25.90	135	3.4
CC39834		0.19	1.54	68	0.08	18.55	101	2.5
CC39835		0.20	2.13	85	0.09	18.50	127	2.4
CC39836		1.44	8.07	955	0.24	20.50	383	<0.5
CC39837		2.51	20.20	1095	0.28	26.60	670	1.5
CC39838		3.31	14.20	1220	0.28	41.40	1640	1.0
CC39839		1.41	15.60	851	0.32	38.40	2100	6.2
CC39840		1.76	12.40	729	0.29	40.90	1690	3.9
CC39841		3.17	14.35	764	0.60	44.70	1270	3.5
CC39842		1.99	13.80	727	0.48	40.00	1260	3.3
CC39843		1.41	14.40	488	0.36	34.20	660	6.4
CC39845		2.44	5.75	886	0.30	12.20	1100	1.4
CC39846		1.96	10.35	1090	0.37	13.00	354	0.6
CC39847		1.95	3.66	1000	0.37	7.79	815	0.5
CC39848		1.26	5.07	768	0.34	6.83	251	<0.5
CC39849		3.86	18.25	1580	0.64	37.50	1090	0.6
CC39850		3.26	9.15	824	0.34	18.00	379	<0.5
CC39851		4.92	18.60	1150	0.32	33.70	1660	2.4
CC39852		0.20	1.58	68	0.07	12.60	141	2.6
CC39853		0.19	3.28	65	0.09	10.75	127	2.5
CC39854		0.28	1.55	68	0.09	6.03	66	0.5
CC39855		0.22	2.32	61	0.09	12.45	136	0.9
CC39856		0.24	2.17	67	0.09	8.94	115	1.0
CC39857		0.23	2.67	68	0.10	10.35	124	1.1
CC39858		0.21	1.68	66	0.09	9.05	104	1.0
CC39877		0.52	2.33	129	0.11	10.15	99	1.2
CC39878		0.42	1.07	70	0.08	5.54	44	0.5
CC39879		0.32	1.49	98	0.12	11.55	115	2.6
CC39880		0.32	1.80	101	0.13	13.50	148	3.1
CC39882		0.26	1.40	80	0.15	14.50	146	3.7
CC39883		0.24	0.94	61	0.13	13.10	121	3.4
CC39884		0.30	1.85	92	0.16	14.10	134	1.4
CC39885		0.29	2.22	115	0.13	14.75	145	1.1
CC39886		0.28	1.49	94	0.12	12.85	154	1.6
CC39887		0.29	1.85	100	0.13	15.40	156	2.5
CC39888		0.43	1.77	130	0.13	17.05	230	2.4
CC39889		0.22	2.09	59	0.08	13.50	98	1.0

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - A

Total # Pages: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39890		0.14	0.27	1.29	11.9	<0.2	<10	1490	0.60	0.20	0.29	0.56	32.20	9.7	31	0.81
CC39891		0.16	0.34	1.35	12.2	<0.2	10	1790	0.68	0.21	0.41	1.17	31.10	8.8	30	0.95
CC39892		0.34	0.32	1.47	15.2	<0.2	10	1880	0.78	0.22	0.45	0.98	32.50	10.1	34	0.95
CC39893		0.12	0.35	1.33	10.6	<0.2	<10	960	0.48	0.25	0.25	0.86	29.10	8.7	26	1.00
CC39894		0.14	0.19	1.18	4.4	<0.2	<10	720	0.38	0.16	0.20	0.37	24.50	4.1	21	0.98
CC39895		0.22	0.29	1.42	11.5	<0.2	<10	860	0.64	0.23	0.38	0.66	33.40	9.1	25	0.80
CC39896		0.32	0.31	1.47	13.0	<0.2	<10	780	0.61	0.23	0.91	0.90	33.60	11.9	27	0.91
CC39897		0.20	0.24	1.43	12.7	<0.2	<10	550	0.55	0.22	0.27	0.36	31.50	7.2	26	0.82
CC39898		0.16	0.26	1.50	12.7	<0.2	<10	750	0.65	0.23	0.45	0.44	31.30	8.9	28	0.83
CC39899		0.26	0.19	1.44	11.4	<0.2	<10	550	0.55	0.21	0.23	0.33	28.70	7.2	24	0.81
CC39900		0.30	0.19	1.39	12.1	<0.2	<10	720	0.57	0.23	0.25	0.49	30.80	8.4	25	0.74
CC39901		0.14	0.99	0.67	37.2	<0.2	<10	1260	0.58	0.20	0.56	11.40	14.80	8.3	25	1.54
CC39902		0.16	1.41	0.67	34.3	<0.2	<10	1340	0.60	0.17	0.89	14.40	15.20	7.0	31	1.01
CC39903		0.10	1.69	0.96	47.8	<0.2	<10	1110	0.69	0.18	1.85	26.80	18.60	9.0	46	0.63
CC39904		0.10	6.40	1.09	67.6	<0.2	<10	1320	0.78	0.19	1.05	71.60	18.35	7.4	77	2.08
CC39905		0.14	6.61	1.01	64.9	<0.2	<10	2350	0.75	0.18	0.96	47.00	17.35	8.2	86	1.77
CC39906		0.08	4.73	0.81	18.1	<0.2	<10	2020	0.49	0.11	1.22	41.30	10.75	3.6	37	1.10
CC39907		0.10	1.20	0.46	15.5	<0.2	<10	1620	0.41	0.07	2.89	13.90	6.26	2.0	19	0.46
CC39908		0.06	0.43	0.75	4.2	<0.2	<10	1850	0.41	0.14	0.26	2.84	24.30	2.0	21	0.55
CC39909		0.20	0.37	1.11	8.0	<0.2	<10	2360	0.53	0.19	0.17	1.83	35.50	2.9	27	0.66
CC39910		0.06	0.41	0.80	2.9	<0.2	<10	1210	0.31	0.11	0.32	6.75	20.40	1.7	20	0.61
CC39911		0.12	0.28	0.42	2.6	<0.2	<10	850	0.19	0.08	0.41	10.85	10.55	0.7	13	0.52
CC39912		0.10	0.39	0.97	3.3	<0.2	<10	1120	0.52	0.19	0.49	13.10	26.20	2.2	20	0.66
CC39913		0.12	0.50	0.35	22.2	<0.2	<10	970	0.28	0.13	0.49	18.50	9.20	5.3	9	0.31
CC39915		0.06	0.39	0.33	2.3	<0.2	<10	1080	0.32	0.05	2.38	6.68	4.80	2.5	6	0.28
CC39916		0.06	0.46	0.35	2.4	<0.2	<10	1340	0.28	0.07	1.81	5.14	6.44	2.2	10	0.42
CC39917		0.08	0.41	0.58	17.5	<0.2	<10	1690	0.34	0.14	0.18	0.85	17.90	1.1	20	0.69
CC39918		0.10	0.45	0.63	23.9	<0.2	<10	2570	0.49	0.23	0.56	3.08	21.00	3.3	31	0.83
CC39919		0.10	0.80	0.64	10.5	<0.2	10	2220	0.65	0.11	3.49	13.60	20.30	7.0	20	0.77
CC39920		0.10	0.88	1.07	24.6	<0.2	<10	3340	0.67	0.21	1.19	9.72	30.90	8.9	35	0.80
CC39921		0.16	1.59	1.00	59.5	<0.2	10	7590	0.92	0.18	6.82	9.20	26.50	6.5	50	1.37
CC39922		0.08	0.31	0.89	8.7	<0.2	<10	1100	0.53	0.13	3.44	2.52	24.80	5.9	15	0.63
CC39923		0.10	0.59	1.09	11.3	<0.2	<10	1010	0.75	0.12	2.31	2.53	33.70	7.6	19	0.71
CC39924		0.16	0.36	1.05	11.4	<0.2	<10	1190	0.59	0.18	1.82	1.22	25.10	10.0	21	0.65
CC39925		0.20	0.52	1.34	17.8	<0.2	<10	1990	0.89	0.18	2.60	1.68	33.20	8.6	25	0.95
CC39926		0.12	0.14	1.69	13.9	<0.2	<10	860	0.61	0.21	1.29	0.70	25.60	10.1	24	0.96
CC39927		0.08	0.42	1.24	8.3	<0.2	<10	2530	0.80	0.20	0.35	0.61	31.90	8.3	32	0.94
CC39928		0.16	0.34	1.23	9.5	<0.2	<10	2820	0.60	0.16	0.34	0.58	25.60	4.3	33	0.57
CC39929		0.12	0.32	1.19	13.7	<0.2	<10	1370	0.59	0.20	0.26	0.68	29.50	5.1	23	0.64
CC39930		0.26	0.10	1.47	8.7	<0.2	<10	1580	0.67	0.21	0.18	0.20	39.00	8.9	23	0.68

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1010 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - B

Total # P : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01	ME-MS41 Nb ppm 0.05
CC39890		26.1	2.58	4.21	0.07	0.05	0.07	0.034	0.10	18.8	14.6	0.35	279	5.29	0.01	0.48
CC39891		37.0	2.61	4.40	0.08	0.08	0.07	0.039	0.12	18.2	15.6	0.39	219	4.29	<0.01	0.50
CC39892		36.0	3.00	4.75	0.08	0.08	0.07	0.042	0.12	19.1	15.6	0.38	217	6.06	0.01	0.50
CC39893		20.5	2.41	4.36	0.06	0.04	0.09	0.036	0.08	17.0	14.0	0.30	143	1.89	0.01	0.47
CC39894		14.8	1.18	4.30	0.05	0.02	0.06	0.023	0.06	14.0	11.4	0.22	74	0.59	0.01	0.42
CC39895		29.3	2.62	4.46	0.07	0.07	0.06	0.035	0.09	19.9	15.3	0.39	326	2.13	0.01	0.56
CC39896		38.9	2.89	4.60	0.09	0.12	0.04	0.034	0.11	19.4	16.8	0.69	444	2.04	0.02	0.73
CC39897		23.1	2.71	4.77	0.08	0.04	0.05	0.032	0.07	17.1	15.3	0.36	219	1.87	0.01	0.63
CC39898		31.7	2.65	4.91	0.08	0.08	0.05	0.032	0.09	18.9	16.8	0.43	212	2.06	0.01	0.68
CC39899		22.3	2.37	4.75	0.06	0.03	0.08	0.028	0.07	17.0	14.4	0.33	241	1.42	0.01	0.54
CC39900		22.1	2.55	4.69	0.08	0.05	0.05	0.030	0.07	18.3	14.5	0.35	184	1.58	0.01	0.59
CC39901		62.2	1.69	2.52	0.10	0.05	0.25	0.028	0.09	9.6	3.4	0.07	117	65.60	<0.01	0.23
CC39902		80.3	1.40	2.41	0.08	0.08	0.31	0.029	0.07	10.5	3.5	0.12	182	39.80	<0.01	0.25
CC39903		88.8	1.82	3.60	0.09	0.05	0.24	0.031	0.07	11.7	5.6	0.69	1050	26.50	0.01	0.25
CC39904		192.5	1.81	4.68	0.14	0.06	1.13	0.043	0.11	13.4	7.2	0.20	177	55.10	0.01	0.74
CC39905		141.5	1.81	4.33	0.13	0.05	0.93	0.027	0.09	11.9	7.1	0.19	192	51.60	<0.01	1.21
CC39906		115.0	0.88	2.83	0.11	0.04	0.68	0.019	0.05	6.6	3.9	0.12	77	13.05	0.01	0.46
CC39907		56.0	0.62	1.61	0.07	0.06	0.22	0.011	0.03	4.6	1.1	0.22	113	14.85	0.01	0.32
CC39908		33.1	0.79	2.90	0.05	0.02	0.11	0.019	0.07	14.2	6.3	0.15	33	1.97	0.01	0.34
CC39909		29.0	1.17	3.88	0.07	0.08	0.09	0.027	0.11	22.2	11.1	0.28	53	0.82	<0.01	0.61
CC39910		46.5	0.71	3.03	0.06	<0.02	0.14	0.021	0.06	11.4	6.6	0.19	33	5.95	0.01	0.32
CC39911		49.2	0.54	1.65	0.06	0.02	0.17	0.016	0.03	5.7	2.8	0.13	12	10.90	0.01	0.21
CC39912		60.2	0.71	3.36	0.08	0.03	0.12	0.033	0.05	15.8	9.7	0.33	36	7.49	0.01	0.38
CC39913		84.1	3.65	1.15	0.10	0.04	0.21	0.016	0.02	4.6	0.7	0.04	210	75.20	0.01	0.20
CC39915		39.9	0.77	0.74	0.05	0.07	0.16	0.008	0.02	2.9	0.7	0.04	232	4.06	0.02	0.14
CC39916		27.9	0.75	1.06	<0.05	0.07	0.12	0.013	0.04	3.6	1.9	0.06	502	5.41	0.02	0.12
CC39917		29.0	1.78	2.88	0.05	0.03	0.14	0.017	0.05	11.2	5.1	0.10	14	2.21	<0.01	0.68
CC39918		40.1	1.50	3.98	0.05	0.02	0.08	0.017	0.09	13.3	7.0	0.17	47	14.10	<0.01	0.80
CC39919		72.3	1.08	2.08	0.08	0.11	0.21	0.020	0.07	13.2	10.1	0.51	395	5.77	0.01	0.35
CC39920		58.7	2.12	3.84	0.09	0.08	0.20	0.029	0.11	19.5	12.5	0.35	274	20.30	<0.01	0.72
CC39921		102.5	1.93	3.78	0.11	0.15	0.45	0.022	0.18	18.0	10.9	1.79	154	81.00	<0.01	0.69
CC39922		25.7	1.56	3.12	0.06	0.06	0.09	0.022	0.07	13.6	11.2	0.65	248	4.09	0.01	0.30
CC39923		39.4	1.81	3.36	0.10	0.07	0.13	0.027	0.08	23.3	19.5	0.75	387	4.97	0.01	0.25
CC39924		32.8	2.21	3.44	0.07	0.06	0.09	0.025	0.07	15.7	11.3	0.37	548	6.85	0.01	0.39
CC39925		39.6	2.39	4.17	0.08	0.10	0.13	0.034	0.12	20.4	21.0	0.83	281	11.30	0.01	0.32
CC39926		19.1	2.92	4.86	0.06	0.07	0.06	0.036	0.09	13.8	21.3	0.56	250	4.32	0.01	0.68
CC39927		26.2	1.34	4.41	0.07	0.05	0.18	0.034	0.11	18.3	16.2	0.34	119	1.70	<0.01	0.22
CC39928		26.8	2.19	3.34	0.05	0.03	0.11	0.024	0.11	16.0	10.7	0.31	117	1.29	<0.01	0.25
CC39929		19.8	2.56	4.34	0.07	0.02	0.09	0.026	0.09	17.1	13.4	0.32	113	14.35	<0.01	0.32
CC39930		28.7	2.63	4.71	0.08	0.04	0.07	0.030	0.08	23.2	14.8	0.39	268	5.22	<0.01	0.34

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - C

Total # : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
CC39890		34.2	650	11.9	13.3	0.001	0.04	1.47	4.9	1.4	0.6	37.0	<0.01	0.05	4.8
CC39891		48.7	700	11.7	13.9	0.002	0.04	1.61	5.8	1.6	0.7	51.6	<0.01	0.05	5.5
CC39892		45.0	770	13.0	14.9	0.002	0.03	1.77	6.1	1.8	0.7	54.4	<0.01	0.06	5.9
CC39893		24.1	820	12.8	15.4	0.002	0.04	1.13	3.8	1.6	0.7	33.6	<0.01	0.05	3.8
CC39894		15.8	530	10.1	11.2	0.002	0.03	0.55	2.6	1.0	0.5	23.1	<0.01	0.04	2.1
CC39895		31.8	800	13.3	12.5	0.001	0.02	1.03	4.3	1.5	0.4	35.4	<0.01	0.05	5.0
CC39896		41.2	940	13.3	12.2	0.001	0.01	1.20	5.2	1.2	0.5	47.6	<0.01	0.06	5.4
CC39897		20.9	710	12.3	12.7	<0.001	<0.01	1.14	3.9	1.5	0.5	24.8	<0.01	0.05	4.4
CC39898		33.0	770	12.9	12.6	<0.001	<0.01	1.13	4.8	1.4	0.5	36.1	<0.01	0.04	5.3
CC39899		20.2	610	12.5	12.9	<0.001	<0.01	0.93	3.7	1.2	0.5	22.0	<0.01	0.04	4.0
CC39900		25.2	700	13.5	13.1	<0.001	<0.01	1.02	4.0	1.2	0.4	26.1	<0.01	0.04	5.2
CC39901		250.0	800	12.3	9.2	0.026	0.13	16.10	2.5	12.6	0.6	103.5	<0.01	0.14	0.7
CC39902		194.0	810	10.6	8.2	0.008	0.07	17.15	4.0	9.5	0.5	113.0	0.01	0.12	1.0
CC39903		118.0	1100	13.1	7.5	0.003	0.11	27.90	2.3	9.2	0.6	204.0	0.01	0.09	0.4
CC39904		371.0	1120	14.9	13.8	0.021	0.09	34.70	4.7	18.6	0.6	142.0	0.01	0.18	0.6
CC39905		238.0	1250	15.5	12.0	0.014	0.11	33.50	4.4	18.2	0.5	144.0	0.01	0.17	0.6
CC39906		154.0	1360	7.6	8.6	0.023	0.18	12.10	1.9	16.2	0.4	157.5	0.01	0.08	0.2
CC39907		69.9	1090	5.7	3.6	0.002	0.20	10.85	1.9	9.7	0.3	293.0	0.01	0.06	0.3
CC39908		21.9	790	8.5	7.6	0.009	0.08	2.72	2.7	2.7	0.4	38.3	<0.01	0.04	2.3
CC39909		25.9	630	11.5	11.8	0.004	<0.01	3.52	3.8	3.0	0.4	33.1	<0.01	0.05	5.8
CC39910		26.9	670	9.3	7.7	0.012	0.18	2.98	2.8	5.5	0.4	40.0	<0.01	0.04	1.8
CC39911		40.4	490	7.7	3.9	0.044	0.18	3.52	2.0	7.2	0.2	48.6	<0.01	0.04	1.2
CC39912		45.7	700	13.9	7.0	0.030	0.15	4.02	3.2	5.0	0.3	50.4	<0.01	0.04	2.5
CC39913		56.0	1050	4.8	2.4	0.138	0.24	8.04	1.7	13.1	0.2	60.9	0.01	0.07	0.8
CC39915		52.1	580	4.4	2.0	0.005	0.22	3.50	1.3	5.9	0.2	126.0	0.01	0.02	0.8
CC39916		39.8	790	5.4	4.1	0.008	0.14	2.00	1.5	3.6	0.3	96.7	<0.01	0.03	0.9
CC39917		16.1	610	9.2	8.7	0.002	0.07	2.48	2.0	2.5	0.4	20.1	<0.01	0.04	1.4
CC39918		34.1	470	11.9	13.4	0.005	0.04	3.29	1.8	2.4	0.7	41.5	<0.01	0.08	1.1
CC39919		142.0	940	8.4	9.4	0.003	0.12	3.77	3.1	3.9	0.3	174.0	0.01	0.04	1.3
CC39920		106.0	1210	12.2	12.0	0.010	0.07	7.07	3.8	6.2	0.5	116.5	<0.01	0.08	2.7
CC39921		269.0	1040	12.3	14.1	0.005	0.08	15.30	6.2	7.3	0.5	438.0	0.01	0.14	3.1
CC39922		31.7	890	10.5	8.9	0.001	0.06	1.69	2.2	1.8	0.3	110.0	<0.01	0.05	1.0
CC39923		48.9	860	10.7	10.2	<0.001	0.05	2.22	3.2	3.0	0.3	83.2	0.01	0.04	1.2
CC39924		34.8	790	11.0	9.8	<0.001	0.05	2.09	3.1	2.2	0.3	69.0	<0.01	0.05	1.8
CC39925		54.7	1020	17.3	13.0	<0.001	0.03	2.89	4.6	2.4	0.5	98.7	<0.01	0.06	2.6
CC39926		37.9	570	16.3	14.6	<0.001	0.01	1.32	3.3	1.2	0.5	50.0	<0.01	0.04	3.5
CC39927		21.5	700	12.1	15.7	0.003	0.04	1.74	4.1	2.4	0.8	60.4	<0.01	0.03	4.7
CC39928		19.6	1120	9.9	12.2	0.002	0.03	1.39	3.5	2.2	0.4	43.8	<0.01	0.05	4.0
CC39929		20.2	670	12.2	12.5	0.003	<0.01	2.07	2.9	2.6	0.5	34.2	<0.01	0.06	3.7
CC39930		25.8	470	12.3	12.8	0.001	<0.01	1.08	4.1	1.4	0.4	22.4	<0.01	0.05	5.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - D

Total # P : 6 (A - D)

Finalized Date: 5-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39890		0.23	2.19	95	0.13	13.45	154	1.3
CC39891		0.27	1.53	89	0.12	16.20	170	2.6
CC39892		0.28	2.64	108	0.11	17.10	187	2.6
CC39893		0.25	1.59	65	0.10	11.25	115	0.8
CC39894		0.23	0.85	46	0.09	6.15	54	0.5
CC39895		0.20	1.38	57	0.17	12.85	118	1.7
CC39896		0.19	0.75	56	0.12	14.60	129	3.5
CC39897		0.21	1.24	66	0.14	9.49	97	1.4
CC39898		0.20	1.17	60	0.12	12.60	118	2.5
CC39899		0.20	1.07	54	0.11	9.16	87	0.9
CC39900		0.17	1.06	56	0.12	10.65	102	1.6
CC39901		3.59	6.63	326	0.44	23.70	601	1.6
CC39902		2.97	6.10	349	0.33	23.70	812	2.7
CC39903		2.01	2.50	532	0.22	23.40	1400	1.7
CC39904		4.59	15.05	1030	0.44	32.00	6170	1.6
CC39905		3.27	11.00	1180	0.44	29.90	3440	1.5
CC39906		2.35	14.35	382	0.19	22.50	1880	1.2
CC39907		0.91	8.21	288	0.12	12.25	612	2.2
CC39908		0.28	1.98	128	0.08	10.35	146	<0.5
CC39909		0.31	2.37	188	0.12	12.60	245	2.8
CC39910		0.24	1.83	68	0.07	9.12	179	0.5
CC39911		0.16	1.65	39	0.06	7.26	346	1.0
CC39912		0.21	1.99	83	0.09	17.00	417	0.8
CC39913		0.12	3.34	156	0.12	10.90	421	1.5
CC39915		0.09	1.44	25	<0.05	5.31	301	2.7
CC39916		0.14	1.29	40	<0.05	5.67	253	2.3
CC39917		0.51	2.41	232	0.09	7.13	41	1.0
CC39918		0.61	2.45	385	0.19	8.80	151	<0.5
CC39919		1.32	4.16	181	0.09	23.20	391	4.1
CC39920		0.79	6.80	330	0.24	21.60	669	2.2
CC39921		2.28	17.00	783	0.45	38.90	802	7.1
CC39922		0.24	1.28	80	0.09	11.35	161	1.5
CC39923		0.29	1.60	86	0.08	24.80	181	1.7
CC39924		0.25	2.32	97	0.13	13.20	136	1.6
CC39925		0.32	1.74	133	0.13	22.10	197	2.6
CC39926		0.22	0.88	79	0.10	7.45	146	1.9
CC39927		0.27	2.02	61	0.07	11.65	101	1.3
CC39928		0.18	2.01	124	0.10	11.40	109	0.9
CC39929		0.21	2.12	151	0.21	7.30	121	0.7
CC39930		0.17	2.00	62	0.07	11.55	97	1.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

For STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 6 - A

Total # Pages: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1	ME-MS41 Cs ppm 0.05
CC39931		0.16	0.22	1.38	11.6	<0.2	<10	1430	0.63	0.22	0.23	0.50	39.00	7.0	24	0.71
CC39932		0.14	0.15	1.32	9.2	<0.2	<10	930	0.45	0.20	0.22	0.18	31.20	5.1	20	0.74
CC39933		0.14	0.24	1.37	10.6	<0.2	<10	1080	0.63	0.20	0.30	0.44	29.20	7.0	22	0.71
CC39934		0.10	0.24	1.40	11.5	<0.2	<10	1110	0.61	0.20	0.22	0.38	44.40	7.1	25	0.84
CC39935		0.18	0.30	1.58	12.0	<0.2	<10	1290	0.85	0.22	0.26	0.40	50.00	9.7	26	0.93
CC39936		0.12	0.27	1.44	12.7	<0.2	<10	1080	0.51	0.21	0.29	0.41	36.90	14.1	24	0.86
CC39937		0.08	4.22	0.76	30.3	<0.2	<10	1370	0.62	0.07	2.85	18.10	15.80	4.4	38	0.56
CC39938		0.28	8.84	1.04	84.9	<0.2	10	5270	1.22	0.21	1.01	69.40	24.00	14.2	122	1.67
CC39939		0.10	1.53	1.28	35.8	<0.2	<10	1950	0.63	0.21	0.29	6.40	21.80	6.8	57	1.27
CC39940		0.08	0.35	0.86	14.7	<0.2	<10	580	0.34	0.16	0.10	1.60	18.60	3.7	32	1.05
CC39941		0.14	0.57	1.29	15.6	<0.2	<10	1370	0.59	0.19	0.47	3.04	25.40	7.0	32	0.81
CC39942		0.24	1.62	1.40	49.9	<0.2	<10	2950	1.03	0.22	0.27	15.70	36.30	12.5	62	1.52
CC39943		0.20	5.17	1.48	126.0	<0.2	10	340	1.26	0.27	0.23	11.40	22.90	70.2	132	2.09
CC39944		0.20	0.66	1.28	14.4	<0.2	<10	2130	0.72	0.21	0.73	5.83	49.80	13.9	28	0.76
CC39945		0.10	0.30	1.41	7.1	<0.2	<10	1220	0.64	0.19	1.21	3.69	39.20	25.3	20	0.76
CC39946		0.12	0.39	1.38	23.8	<0.2	<10	5240	0.92	0.20	0.36	3.19	43.10	10.9	26	0.95
CC39947		0.10	0.21	1.37	9.5	<0.2	<10	840	0.53	0.20	0.40	0.31	38.00	12.8	23	0.72
CC39948		0.18	0.24	1.67	8.3	<0.2	<10	1000	0.79	0.21	0.42	0.44	49.60	10.5	26	0.76
CC39949		0.16	0.22	1.61	8.8	<0.2	<10	760	0.70	0.21	0.25	0.23	46.00	8.6	25	0.81
CC39950		0.16	0.24	1.57	8.5	<0.2	<10	850	0.82	0.21	0.33	0.23	45.00	8.8	25	0.78
CC39951		0.32	0.24	1.51	11.0	<0.2	<10	600	0.57	0.21	0.18	0.51	40.80	8.0	25	0.80
CC39952		0.14	0.24	1.52	11.9	<0.2	<10	750	0.69	0.21	0.15	0.34	40.50	5.1	25	0.82
CC39953		0.24	0.26	1.55	11.2	<0.2	<10	810	0.77	0.22	0.34	0.47	41.60	7.5	26	0.78
CC39954		0.22	0.26	1.49	9.9	<0.2	<10	810	0.53	0.20	0.26	0.75	33.60	4.2	24	0.77
CC39955		0.20	0.27	1.54	11.3	<0.2	<10	800	0.62	0.21	0.37	0.68	40.50	8.7	27	0.74
CC39956		0.24	0.20	1.49	6.1	<0.2	<10	620	0.46	0.19	0.22	0.36	35.10	3.7	25	0.78
CC39957		0.20	0.22	1.45	7.5	<0.2	<10	610	0.42	0.18	0.19	0.33	31.50	3.1	24	0.77
CC39958		0.24	0.26	1.45	8.1	<0.2	<10	1040	0.61	0.20	0.33	0.87	41.00	5.4	24	0.71
CC39959		0.26	0.25	1.43	9.4	<0.2	<10	800	0.56	0.19	0.33	0.48	36.30	6.3	24	0.78
CC39960		0.16	0.25	1.17	7.7	<0.2	<10	840	0.48	0.15	0.22	0.52	30.10	3.4	19	0.68
CC39961		0.24	0.19	1.34	10.3	<0.2	<10	680	0.48	0.19	0.30	0.29	34.90	5.9	23	0.64
CC39962		0.16	0.24	1.47	9.6	<0.2	<10	730	0.57	0.19	0.38	0.40	33.80	6.4	24	0.72
CC39972		0.10	0.24	1.30	6.9	<0.2	<10	970	0.50	0.18	0.20	0.67	35.40	4.4	23	0.67
CC39973		0.20	0.25	1.32	5.4	<0.2	<10	1140	0.40	0.18	0.21	1.12	37.40	3.6	23	0.64
CC39974		0.12	0.15	1.21	3.2	<0.2	<10	690	0.37	0.11	0.14	1.64	28.80	2.6	20	0.61
CC39975		0.28	0.24	1.39	8.0	<0.2	<10	960	0.43	0.18	0.15	1.02	34.60	3.5	22	0.65
CC39976		0.24	0.27	1.34	9.5	<0.2	<10	1380	0.48	0.18	0.24	2.43	38.10	5.0	23	0.70
CC39977		0.18	0.31	1.22	8.1	<0.2	<10	1380	0.39	0.19	0.25	2.08	32.00	4.2	21	0.70
CC39978		0.18	0.28	1.26	8.8	<0.2	<10	1400	0.45	0.17	0.20	1.39	34.80	4.1	22	0.66

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

310 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 6 - B

Total # F s: 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm 0.2	% 0.01	ppm 0.05	ppm 0.05	ppm 0.02	ppm 0.01	ppm 0.005	% 0.01	ppm 0.2	ppm 0.1	% 0.01	ppm 5	ppm 0.05	% 0.01	ppm 0.05
CC39931		29.6	2.75	4.41	0.07	0.05	0.08	0.031	0.09	23.6	15.5	0.42	142	2.86	<0.01	0.36
CC39932		14.8	2.27	4.36	0.06	0.02	0.06	0.026	0.08	19.3	14.6	0.37	62	1.31	<0.01	0.37
CC39933		26.7	2.67	4.51	0.07	0.03	0.07	0.030	0.07	17.7	14.0	0.35	139	3.45	<0.01	0.44
CC39934		23.1	2.11	4.58	<0.05	0.05	0.09	0.027	0.08	22.5	15.0	0.39	114	2.09	0.01	0.58
CC39935		32.7	3.02	4.79	0.05	0.06	0.07	0.033	0.09	25.7	15.7	0.44	185	3.05	<0.01	0.62
CC39936		19.1	2.55	4.81	0.05	0.03	0.07	0.026	0.08	18.6	13.6	0.38	482	4.28	0.01	0.53
CC39937		143.5	0.99	1.72	0.12	0.10	0.79	0.013	0.05	10.1	2.7	0.37	141	14.85	0.02	0.36
CC39938		243.0	2.19	4.94	0.17	0.10	0.98	0.034	0.16	16.3	7.4	0.23	258	64.70	<0.01	1.78
CC39939		55.8	2.08	5.30	0.06	0.02	0.19	0.022	0.10	12.3	10.2	0.28	171	22.70	<0.01	0.96
CC39940		14.6	1.36	4.52	<0.05	<0.02	0.06	0.011	0.07	10.3	6.0	0.16	109	9.53	0.01	0.48
CC39941		36.0	1.97	4.76	<0.05	0.02	0.10	0.023	0.08	13.4	10.4	0.25	136	9.32	<0.01	0.70
CC39942		135.0	2.75	5.27	0.08	0.05	0.17	0.043	0.12	20.8	11.8	0.28	213	65.20	<0.01	0.84
CC39943		190.0	3.86	8.78	0.20	0.12	0.42	0.075	0.21	13.3	10.4	0.22	1240	131.50	0.02	1.28
CC39944		47.9	3.04	3.82	0.09	0.08	0.14	0.034	0.12	25.1	13.4	0.45	628	11.70	<0.01	0.43
CC39945		25.3	2.46	3.92	0.05	0.08	0.10	0.029	0.08	17.9	12.5	0.44	3480	7.73	0.02	0.38
CC39946		48.9	2.50	4.40	0.06	0.06	0.10	0.031	0.13	23.6	11.7	0.35	301	40.00	<0.01	0.45
CC39947		19.8	2.60	4.26	0.05	0.06	0.06	0.028	0.09	19.2	13.1	0.44	499	3.12	0.01	0.52
CC39948		34.8	2.73	4.86	0.06	0.09	0.06	0.031	0.10	25.5	16.6	0.52	317	1.46	0.01	0.56
CC39949		22.8	2.71	4.69	0.06	0.05	0.05	0.030	0.10	23.1	16.0	0.49	256	1.64	0.01	0.49
CC39950		30.7	2.56	4.54	0.05	0.06	0.06	0.029	0.10	23.0	16.1	0.52	309	1.74	0.01	0.54
CC39951		25.9	2.34	4.56	0.05	0.05	0.06	0.029	0.07	20.2	14.1	0.36	132	1.12	0.01	0.72
CC39952		27.0	2.64	4.71	0.05	0.04	0.08	0.032	0.07	20.2	12.8	0.27	112	1.04	0.01	0.68
CC39953		33.0	2.47	4.59	0.05	0.04	0.08	0.034	0.07	21.0	12.8	0.33	196	1.27	0.01	0.67
CC39954		23.5	2.48	4.57	0.05	0.03	0.08	0.026	0.06	17.3	10.9	0.25	88	0.66	0.01	0.63
CC39955		30.2	2.63	4.62	0.05	0.07	0.10	0.030	0.08	20.4	14.2	0.38	188	1.14	0.01	0.80
CC39956		18.9	1.55	4.62	<0.05	0.04	0.07	0.025	0.07	18.2	13.0	0.31	59	0.29	0.01	0.66
CC39957		15.2	1.68	4.46	<0.05	0.03	0.07	0.024	0.06	16.2	12.0	0.28	52	0.27	0.01	0.62
CC39958		28.1	1.85	4.31	0.05	0.07	0.08	0.029	0.07	20.7	12.6	0.33	73	0.44	0.01	0.72
CC39959		22.7	2.34	4.35	<0.05	0.04	0.07	0.026	0.07	18.4	12.0	0.32	137	1.20	0.01	0.64
CC39960		17.3	2.14	3.63	<0.05	0.03	0.06	0.020	0.05	15.4	8.0	0.19	46	0.66	0.01	0.48
CC39961		19.3	2.42	4.02	0.05	0.04	0.05	0.025	0.06	17.5	11.4	0.32	108	1.40	0.01	0.61
CC39962		19.3	2.57	4.30	0.05	0.03	0.07	0.026	0.07	17.2	12.4	0.33	163	1.12	0.01	0.60
CC39972		25.8	2.14	4.03	0.05	0.03	0.09	0.025	0.06	18.3	10.4	0.28	71	5.57	0.01	0.51
CC39973		20.8	1.44	4.09	<0.05	0.04	0.07	0.025	0.07	19.5	11.5	0.30	52	2.55	0.01	0.49
CC39974		9.8	0.83	4.00	<0.05	<0.02	0.07	0.015	0.06	15.4	9.5	0.22	39	2.55	0.01	0.33
CC39975		15.5	2.05	4.29	<0.05	0.03	0.06	0.022	0.07	18.2	10.5	0.28	48	2.62	0.01	0.48
CC39976		26.6	2.22	4.13	0.06	0.04	0.09	0.028	0.07	19.7	10.4	0.30	65	3.53	0.01	0.56
CC39977		22.3	2.00	4.16	<0.05	0.03	0.10	0.021	0.06	16.6	9.0	0.24	56	3.67	0.01	0.52
CC39978		23.1	2.01	4.04	0.06	0.03	0.10	0.023	0.07	18.2	9.6	0.26	59	5.21	<0.01	0.50

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 6 - C

Total # P : 6 (A - D)

Finalized Date: 5-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2	ME-MS41 Ti % 0.005
CC39931		29.9	640	13.0	11.6	0.001	<0.01	1.39	4.1	1.5	0.4	27.9	<0.01	0.05	5.7	0.006
CC39932		18.0	470	12.2	12.4	<0.001	<0.01	0.75	2.9	0.8	0.4	20.3	<0.01	0.04	4.6	0.007
CC39933		25.7	670	12.9	11.4	0.001	0.01	1.07	3.6	1.4	0.4	26.3	<0.01	0.05	3.7	0.006
CC39934		25.6	580	13.0	13.4	0.002	0.02	0.95	4.3	1.4	0.5	24.5	<0.01	0.05	4.7	0.009
CC39935		31.2	710	12.6	15.2	<0.001	0.02	0.88	5.0	1.4	0.5	25.5	<0.01	0.05	5.2	0.012
CC39936		23.8	730	12.9	14.6	<0.001	0.04	0.80	3.6	1.2	0.5	25.5	<0.01	0.06	3.2	0.009
CC39937		94.5	1630	8.0	5.1	0.020	0.22	12.85	2.6	21.4	0.3	402.0	0.02	0.09	0.3	0.009
CC39938		378.0	1770	20.5	16.2	0.008	0.09	68.80	10.0	28.8	0.8	264.0	0.01	0.24	2.2	0.087
CC39939		54.9	820	14.1	15.1	0.003	0.10	9.11	2.3	6.9	0.8	45.3	<0.01	0.14	0.3	0.022
CC39940		18.2	700	8.7	13.1	<0.001	0.04	2.85	0.8	1.8	0.6	16.0	<0.01	0.07	<0.2	0.010
CC39941		35.9	520	12.4	12.4	<0.001	0.04	2.70	2.3	2.3	0.6	29.3	<0.01	0.07	0.6	0.012
CC39942		202.0	1040	14.0	15.3	0.006	0.08	13.15	5.6	6.3	0.8	82.5	0.01	0.17	2.1	0.026
CC39943		171.5	1760	25.9	18.4	0.021	0.41	36.50	9.8	37.2	1.0	105.5	0.01	0.42	3.9	0.057
CC39944		79.6	1060	12.4	12.6	0.008	0.10	2.74	5.0	6.7	0.5	86.7	<0.01	0.08	4.8	0.008
CC39945		36.5	1040	10.9	14.1	0.001	0.11	0.94	4.0	2.4	0.4	107.0	<0.01	0.05	2.2	0.006
CC39946		118.0	820	13.7	13.8	0.002	0.05	4.03	4.5	3.8	0.8	36.4	<0.01	0.09	3.7	0.012
CC39947		25.1	900	13.1	13.0	<0.001	0.05	0.70	3.9	1.2	0.4	25.4	<0.01	0.06	3.6	0.009
CC39948		34.9	700	12.9	14.5	<0.001	0.03	0.59	5.4	1.2	0.5	25.2	<0.01	0.05	5.5	0.009
CC39949		23.6	710	13.7	14.9	<0.001	0.03	0.56	4.3	1.1	0.5	19.0	<0.01	0.06	4.4	0.007
CC39950		27.9	880	13.0	13.7	<0.001	0.03	0.68	4.7	1.2	0.5	22.8	<0.01	0.05	4.5	0.009
CC39951		22.9	720	13.5	11.9	<0.001	0.02	0.75	4.7	1.3	0.5	20.5	<0.01	0.05	4.8	0.012
CC39952		22.2	690	14.2	13.3	<0.001	0.04	0.68	4.6	1.4	0.5	17.6	<0.01	0.06	3.6	0.009
CC39953		28.4	760	13.8	13.4	<0.001	0.03	0.75	5.0	1.6	0.5	34.6	<0.01	0.07	3.9	0.011
CC39954		22.0	590	13.0	12.9	<0.001	0.04	0.56	3.8	1.3	0.5	26.2	<0.01	0.04	2.8	0.008
CC39955		29.4	820	13.8	13.2	<0.001	0.03	0.73	5.1	1.5	0.5	35.0	<0.01	0.06	5.3	0.014
CC39956		16.0	480	12.5	12.2	<0.001	0.04	0.51	4.0	1.0	0.6	22.0	<0.01	0.04	4.4	0.010
CC39957		14.5	500	11.8	10.8	<0.001	0.04	0.51	3.7	1.0	0.5	19.6	<0.01	0.04	3.5	0.009
CC39958		25.5	780	13.5	11.6	<0.001	0.05	0.60	4.8	1.3	0.5	32.4	<0.01	0.04	4.9	0.012
CC39959		23.0	760	12.3	13.0	<0.001	0.03	0.66	4.5	1.2	0.5	32.3	<0.01	0.05	4.3	0.010
CC39960		16.2	830	9.8	9.7	<0.001	0.06	0.54	3.4	1.3	0.5	23.1	<0.01	0.04	2.2	0.007
CC39961		19.8	650	11.8	11.2	<0.001	0.02	0.62	4.0	1.0	0.4	26.8	<0.01	0.04	4.3	0.011
CC39962		21.4	730	11.8	13.1	<0.001	0.03	0.60	3.9	1.2	0.5	33.1	<0.01	0.05	3.7	0.009
CC39972		20.8	670	11.2	12.2	0.006	0.08	0.91	3.8	3.3	0.5	27.8	<0.01	0.05	3.0	0.007
CC39973		19.4	520	11.3	12.1	0.005	0.07	0.75	3.7	2.5	0.4	33.1	<0.01	0.03	4.0	0.007
CC39974		16.2	370	9.2	10.0	0.002	0.07	0.44	2.6	2.0	0.4	21.9	<0.01	0.03	2.7	0.005
CC39975		17.2	620	10.8	12.5	0.003	0.09	0.70	3.3	2.3	0.5	21.6	<0.01	0.04	3.4	0.006
CC39976		27.6	630	11.5	11.9	0.003	0.08	0.93	4.2	3.1	0.5	36.0	<0.01	0.05	4.5	0.008
CC39977		26.9	580	10.4	11.3	0.003	0.09	0.91	3.4	3.0	0.5	34.9	<0.01	0.05	2.9	0.007
CC39978		23.9	600	10.8	12.0	0.007	0.07	1.11	3.5	5.0	0.5	31.5	<0.01	0.05	3.6	0.006

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 6 - D

Total # P : 6 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077185

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Tl	U	V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.05	1	0.05	0.05	2	0.5
CC39931		0.20	1.98	80	0.07	12.15	146	1.5
CC39932		0.15	0.75	54	0.07	5.69	74	0.7
CC39933		0.17	1.39	65	0.09	10.30	97	0.8
CC39934		0.24	1.49	91	0.13	9.16	116	1.4
CC39935		0.22	1.39	62	0.11	13.25	123	1.4
CC39936		0.21	0.97	66	0.13	6.60	102	0.7
CC39937		0.81	19.30	285	0.19	50.50	343	3.0
CC39938		2.77	12.95	1845	0.47	50.20	4080	3.2
CC39939		1.56	4.55	842	0.26	12.15	443	0.5
CC39940		0.50	0.89	381	0.16	3.14	150	<0.5
CC39941		0.48	2.40	296	0.19	9.76	221	<0.5
CC39942		2.21	13.65	911	0.40	29.80	1570	1.0
CC39943		4.56	21.80	1790	0.67	34.50	1030	6.1
CC39944		0.52	5.40	156	0.12	17.75	622	2.3
CC39945		0.22	1.55	45	0.10	14.05	153	1.6
CC39946		0.99	6.47	248	0.29	22.40	386	1.6
CC39947		0.18	0.79	51	0.12	8.28	94	1.5
CC39948		0.18	1.11	49	0.09	13.60	105	2.3
CC39949		0.19	0.84	50	0.07	9.66	98	1.3
CC39950		0.19	1.07	53	0.09	12.80	108	1.5
CC39951		0.21	1.10	55	0.10	11.10	102	1.6
CC39952		0.22	1.26	58	0.09	12.60	71	0.9
CC39953		0.21	1.46	59	0.11	13.90	103	0.9
CC39954		0.22	1.05	54	0.11	8.81	62	0.7
CC39955		0.20	1.20	62	0.08	12.35	113	2.4
CC39956		0.21	0.91	53	0.07	7.11	78	1.3
CC39957		0.20	0.85	57	0.08	6.37	63	0.9
CC39958		0.20	1.16	52	0.08	12.60	90	1.9
CC39959		0.19	1.27	56	0.09	10.55	89	1.2
CC39960		0.17	1.08	42	0.11	9.44	52	0.6
CC39961		0.17	0.94	53	0.08	9.24	86	1.3
CC39962		0.18	0.99	56	0.14	8.67	87	1.0
CC39972		0.20	2.16	68	0.09	10.60	81	0.8
CC39973		0.21	1.53	63	0.07	8.20	94	1.0
CC39974		0.19	0.68	39	0.06	3.49	63	<0.5
CC39975		0.20	1.24	63	0.09	6.44	78	0.8
CC39976		0.22	2.17	76	0.08	10.45	103	1.3
CC39977		0.24	2.12	83	0.10	7.96	83	0.7
CC39978		0.27	2.63	96	0.09	8.77	91	0.8

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Finalized L

Page: 1

-AUG-2007

Account: MTT

CERTIFICATE VA07077184

Project: NiMo

P.O. No.:

This report is for 159 Soil samples submitted to our lab in Vancouver, BC, Canada on 17-JUL-2007.

The following have access to data associated with this certificate:

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS41	51 anal. aqua regia ICPMS

To: STRATEGIC METALS LTD.
ATTN: JOAN MARIACHER
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - A

Total # : 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt. kg	Ag ppm	Al %	As ppm	Au ppm	B ppm	Ba ppm	Be ppm	Bi ppm	Ca %	Cd ppm	Ce ppm	Co ppm	Cr ppm	Cs ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39987		0.28	0.54	1.22	15.4	<0.2	<10	2350	0.60	0.19	0.23	5.08	35.60	5.3	28	0.65
CC39988		0.20	0.58	1.33	10.4	<0.2	<10	1940	0.67	0.20	0.16	4.42	36.00	5.0	32	0.87
CC39989		0.26	0.94	1.38	17.9	<0.2	<10	2350	0.76	0.21	0.22	9.96	35.20	6.2	35	0.83
CC39990		0.26	0.77	1.25	8.5	<0.2	<10	1900	0.61	0.19	0.13	10.30	36.90	3.2	33	0.87
CC39991		0.32	4.27	2.06	16.1	<0.2	<10	3420	0.82	0.25	0.16	13.05	27.90	5.0	63	2.75
CC39992		0.16	2.17	2.00	29.8	<0.2	<10	1650	0.69	0.22	0.08	3.50	25.20	5.2	56	2.40
CC39993		0.24	0.86	0.95	13.2	<0.2	<10	1910	0.39	0.15	0.17	2.72	33.00	6.5	33	0.65
CC39994		0.10	3.49	0.87	63.8	<0.2	<10	780	0.40	0.26	0.04	1.45	18.15	2.4	44	1.73
CC39995		0.12	4.14	1.43	46.4	<0.2	<10	620	0.77	0.28	0.75	26.20	20.80	11.7	80	2.31
CC39996		0.20	1.39	0.97	17.2	<0.2	<10	4510	0.74	0.20	0.59	11.05	29.60	6.1	41	1.00
CC39997		0.16	1.05	1.01	15.7	<0.2	<10	3740	0.59	0.25	0.41	2.88	29.70	2.6	50	0.70
CC39998		0.14	2.73	1.22	30.8	<0.2	<10	3970	0.99	0.21	0.21	13.00	31.70	6.0	48	1.05
CC39999		0.16	0.27	1.18	14.1	<0.2	<10	1820	0.62	0.18	0.09	1.51	33.20	5.0	29	0.79
CC40000		0.28	0.40	1.09	13.8	<0.2	<10	2250	0.66	0.18	0.27	3.20	32.90	5.3	25	0.76
CC27716		0.10	0.26	0.59	18.3	<0.2	<10	590	0.21	0.17	0.13	1.20	12.35	1.7	13	1.45
CC27717		0.12	0.29	1.36	38.3	<0.2	<10	310	0.39	0.29	0.03	0.89	20.60	5.5	30	1.66
CC27718		0.10	0.27	0.67	14.6	<0.2	<10	300	0.23	0.17	0.04	0.84	23.20	2.7	21	1.32
CC27719		0.14	0.48	1.83	43.8	<0.2	<10	350	0.61	0.28	0.05	1.34	22.40	6.1	48	2.10
CC27720		0.10	1.45	1.40	48.0	<0.2	<10	300	0.35	0.29	0.08	1.58	20.60	5.8	47	1.91
CC27721		0.08	0.89	1.04	39.1	<0.2	<10	280	0.42	0.23	0.04	1.42	20.00	3.4	45	1.28
CC27722		0.10	2.45	1.90	47.8	<0.2	<10	520	0.68	0.23	0.16	7.76	25.20	12.8	57	1.67
CC27723		0.08	1.07	1.14	24.0	<0.2	<10	230	0.28	0.28	0.07	0.83	18.65	3.5	31	1.05
CC27724		0.08	1.45	0.33	5.6	<0.2	<10	330	0.21	0.06	0.12	1.97	5.45	0.8	19	0.49
CC27725		0.10	1.43	1.24	21.7	<0.2	<10	570	0.36	0.27	0.04	0.72	26.40	3.3	29	1.29
CC27726		0.10	1.27	1.24	38.0	<0.2	<10	640	0.49	0.26	0.06	1.15	19.30	4.5	42	1.59
CC27727		0.12	0.88	1.10	28.8	<0.2	<10	500	0.47	0.21	0.03	1.83	18.65	3.4	37	1.39
CC27728		0.14	0.70	0.59	27.5	<0.2	<10	760	0.53	0.12	0.09	2.85	11.85	1.9	36	1.20
CC27729		0.12	1.53	1.41	54.3	<0.2	10	450	0.52	0.25	0.03	1.50	19.60	4.0	50	1.88
CC27730		0.22	2.29	1.38	73.6	<0.2	10	2270	0.94	0.24	0.08	35.20	19.50	13.3	98	1.96
CC27731		0.12	6.09	1.06	73.2	<0.2	10	5340	1.16	0.28	0.23	44.60	21.90	13.8	106	1.90
CC27732		0.18	3.65	0.89	29.4	<0.2	10	6540	1.09	0.20	0.84	24.60	24.70	4.0	91	1.36
CC27733		0.18	5.47	1.06	58.6	<0.2	10	6560	1.15	0.23	0.93	23.90	26.90	7.9	134	1.42
CC27734		0.14	1.88	0.70	35.1	<0.2	10	4990	0.82	0.17	1.40	16.70	33.10	7.5	64	0.78
CC27735		0.14	1.91	0.80	43.2	<0.2	10	5800	1.01	0.19	1.08	17.45	35.40	7.6	73	0.88
CC27736		0.20	1.15	1.14	38.6	<0.2	20	>10000	1.33	0.19	1.01	10.90	38.40	8.9	54	1.42
CC27737		0.14	0.68	0.91	6.7	<0.2	10	2860	0.65	0.22	0.52	1.42	34.10	23.1	16	0.72
CC27738		0.06	1.03	0.75	5.6	<0.2	10	2600	0.49	0.18	0.68	1.67	23.50	19.6	12	0.58
CC27739		0.22	0.53	0.98	7.9	<0.2	<10	2800	0.46	0.22	0.20	0.41	27.30	4.8	15	0.52
CC27740		0.36	0.39	1.05	6.8	<0.2	<10	3520	0.46	0.22	0.19	0.36	34.20	4.3	16	0.55
CC27741		0.12	2.09	0.83	7.4	<0.2	<10	2840	1.04	0.23	1.13	1.56	37.20	14.2	32	0.90

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

210 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - B

Total # of Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm 0.2	% 0.01	ppm 0.05	ppm 0.05	ppm 0.02	ppm 0.01	ppm 0.005	% 0.01	ppm 0.2	ppm 0.1	% 0.01	ppm 5	ppm 0.05	% 0.01	ppm 0.05
CC39987		35.6	2.10	4.03	0.06	0.10	0.10	0.028	0.08	19.5	10.9	0.28	70	9.59	<0.01	0.56
CC39988		36.0	1.83	5.30	0.08	0.08	0.14	0.034	0.09	21.1	15.1	0.30	60	2.23	0.03	0.52
CC39989		51.0	2.25	5.25	0.10	0.09	0.22	0.034	0.11	20.8	14.5	0.30	76	5.93	0.04	0.60
CC39990		47.6	1.54	4.88	0.09	0.07	0.22	0.034	0.08	20.8	12.3	0.26	46	1.45	0.03	0.54
CC39991		140.0	1.68	6.98	0.09	0.06	1.55	0.050	0.13	15.9	16.1	0.30	66	6.80	0.05	0.63
CC39992		99.3	2.74	7.17	0.09	0.05	0.78	0.049	0.13	14.0	11.1	0.25	119	26.20	0.02	0.63
CC39993		47.6	1.84	4.03	0.08	0.03	0.13	0.029	0.09	18.7	9.0	0.23	158	13.85	0.03	0.56
CC39994		70.1	2.02	8.34	0.09	<0.02	0.27	0.035	0.10	10.9	3.8	0.08	40	49.90	0.01	0.83
CC39995		129.5	3.39	4.00	0.21	0.06	0.32	0.030	0.16	13.1	7.1	0.08	135	26.50	0.02	0.33
CC39996		77.2	1.95	4.23	0.10	0.06	0.27	0.033	0.11	17.1	7.0	0.18	78	14.50	0.07	0.46
CC39997		63.9	1.68	4.21	0.08	0.04	0.21	0.040	0.08	16.9	7.7	0.16	33	3.44	0.06	0.34
CC39998		159.0	1.80	5.89	0.09	0.04	0.73	0.056	0.09	18.8	10.4	0.18	132	22.30	0.06	0.59
CC39999		30.5	1.82	5.07	0.06	0.04	0.07	0.024	0.08	19.7	11.1	0.23	94	34.40	0.03	0.56
CC40000		32.9	2.05	4.55	0.07	0.03	0.09	0.026	0.08	19.1	9.0	0.22	94	26.60	0.03	0.42
CC27716		34.2	1.41	4.88	0.06	<0.02	0.06	0.020	0.06	6.7	1.2	0.04	34	68.60	0.01	0.49
CC27717		37.6	3.47	7.40	0.07	0.05	0.03	0.040	0.12	11.6	7.5	0.22	102	46.60	0.01	0.94
CC27718		18.9	1.19	6.73	0.05	0.02	0.03	0.016	0.05	13.8	2.0	0.05	30	23.70	0.01	0.51
CC27719		43.2	3.42	8.52	0.08	0.13	0.06	0.043	0.09	13.1	16.1	0.24	132	34.30	0.01	1.06
CC27720		33.8	3.00	9.24	0.07	0.02	0.11	0.032	0.09	10.5	12.0	0.25	158	31.90	0.01	1.12
CC27721		48.7	2.08	7.78	0.08	<0.02	0.13	0.028	0.07	12.0	4.6	0.10	66	26.20	0.01	0.75
CC27722		99.6	2.98	6.98	0.10	0.07	0.59	0.036	0.11	13.8	17.1	0.39	293	23.50	0.01	0.91
CC27723		23.9	2.64	9.08	0.05	<0.02	0.09	0.024	0.05	10.8	4.5	0.12	101	14.00	0.01	1.27
CC27724		17.5	0.41	1.59	<0.05	<0.02	0.16	0.010	0.05	3.5	0.5	0.03	45	8.05	0.01	0.15
CC27725		25.7	2.41	9.05	0.05	0.03	0.05	0.022	0.05	15.4	8.4	0.13	84	14.90	0.01	1.22
CC27726		38.6	2.71	7.73	0.08	0.02	0.12	0.028	0.09	11.8	9.0	0.15	148	31.60	0.02	0.96
CC27727		34.4	2.16	6.81	0.08	<0.02	0.12	0.026	0.08	11.5	4.6	0.09	61	28.10	0.01	0.78
CC27728		41.4	1.13	3.86	0.09	<0.02	0.20	0.020	0.07	8.6	1.7	0.04	26	32.50	0.01	0.23
CC27729		60.7	2.51	7.38	0.09	0.02	0.14	0.032	0.10	12.7	9.6	0.14	93	44.10	0.01	0.64
CC27730		131.5	2.17	6.12	0.15	0.05	0.21	0.040	0.14	13.7	10.6	0.19	250	51.50	0.03	0.27
CC27731		143.0	2.57	5.51	0.20	0.06	0.88	0.046	0.14	13.8	8.5	0.11	159	57.80	0.08	0.19
CC27732		137.5	1.24	4.78	0.12	0.07	0.68	0.035	0.12	15.5	8.5	0.15	53	25.00	0.10	0.22
CC27733		162.5	2.15	5.52	0.14	0.07	0.96	0.041	0.14	17.8	9.7	0.16	107	47.80	0.10	0.19
CC27734		101.5	1.43	3.82	0.12	0.08	0.57	0.030	0.09	21.9	6.9	0.12	131	56.90	0.08	0.20
CC27735		111.5	1.73	4.29	0.13	0.10	0.56	0.031	0.11	22.9	8.1	0.13	161	72.10	0.09	0.21
CC27736		103.0	2.27	5.69	0.12	0.26	0.48	0.046	0.25	24.1	10.4	0.16	91	83.70	0.17	0.28
CC27737		44.5	2.99	2.91	0.08	0.06	0.12	0.038	0.11	16.4	5.2	0.16	1485	6.53	0.05	0.21
CC27738		40.8	2.29	2.16	0.07	0.05	0.20	0.032	0.08	12.1	3.6	0.12	431	5.64	0.05	0.18
CC27739		30.9	3.20	3.00	0.06	0.04	0.15	0.030	0.08	14.7	4.9	0.10	148	5.24	0.04	0.23
CC27740		24.1	2.47	3.26	0.07	0.04	0.12	0.030	0.10	18.7	7.1	0.17	62	6.14	0.05	0.20
CC27741		77.9	8.12	1.47	0.14	0.12	0.36	0.043	0.09	19.8	2.8	0.33	1335	1.95	0.06	0.25

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

310 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - C

Total # of Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
		ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2	% 0.005
CC39987		52.4	720	11.5	12.1	0.005	0.04	2.30	4.9	4.5	0.5	45.5	<0.01	0.05	5.4	0.010
CC39988		44.3	510	13.1	13.5	0.005	0.02	3.70	4.2	5.0	0.7	36.1	<0.01	0.07	5.5	0.009
CC39989		65.0	670	13.5	14.6	0.009	0.04	4.72	4.8	7.7	0.7	50.1	<0.01	0.08	5.4	0.011
CC39990		38.3	490	11.6	14.2	0.009	0.03	4.40	4.6	7.1	0.7	41.2	<0.01	0.06	5.4	0.010
CC39991		81.8	1000	14.6	20.4	0.010	0.09	6.50	5.5	9.3	1.0	74.0	<0.01	0.08	2.0	0.008
CC39992		46.0	1430	14.2	20.6	0.009	0.10	7.52	4.0	7.9	1.0	42.3	<0.01	0.12	1.5	0.009
CC39993		43.7	810	8.5	8.8	0.002	0.10	5.05	2.9	4.9	0.5	58.4	<0.01	0.06	2.4	0.021
CC39994		28.6	540	16.2	19.8	0.006	0.12	17.05	2.1	9.4	1.1	50.0	<0.01	0.20	0.7	0.026
CC39995		244.0	4980	14.2	13.4	0.012	0.28	22.10	5.1	24.0	1.1	270.0	0.01	0.21	2.4	0.018
CC39996		114.0	1340	12.1	12.9	0.008	0.08	9.81	4.9	8.1	0.8	141.0	<0.01	0.10	3.9	0.012
CC39997		44.6	1630	11.3	10.9	0.009	0.06	7.74	4.1	5.3	0.8	147.5	<0.01	0.10	4.1	0.007
CC39998		117.5	780	13.7	15.1	0.006	0.06	12.00	3.3	5.2	0.9	55.0	0.01	0.13	0.8	0.011
CC39999		38.6	430	10.0	15.0	0.002	0.02	3.38	2.7	2.5	0.7	21.9	<0.01	0.07	2.9	0.010
CC40000		53.9	640	11.1	13.9	0.005	0.03	3.00	3.2	4.1	0.6	41.9	<0.01	0.08	2.9	0.007
CC27716		12.8	550	11.0	7.2	0.002	0.08	5.47	1.2	4.0	0.9	34.6	<0.01	0.15	0.2	0.013
CC27717		46.1	350	17.7	17.5	0.001	0.09	6.20	3.7	6.6	0.9	45.4	<0.01	0.13	3.4	0.015
CC27718		43.2	210	8.6	8.3	0.001	0.02	6.02	1.8	4.1	0.9	7.9	<0.01	0.09	2.0	0.014
CC27719		87.2	310	17.2	17.5	0.002	0.03	10.75	3.9	7.2	1.0	11.9	<0.01	0.11	4.0	0.016
CC27720		66.8	380	19.2	18.6	0.001	0.03	13.45	3.1	5.8	0.8	13.9	<0.01	0.12	1.6	0.023
CC27721		54.1	400	14.3	12.4	0.001	0.04	15.35	2.0	9.8	0.8	10.2	<0.01	0.13	0.7	0.016
CC27722		118.0	850	16.4	18.6	0.002	0.03	18.15	5.0	10.8	0.7	28.1	<0.01	0.13	3.7	0.024
CC27723		27.9	510	14.0	8.3	0.001	0.04	6.58	1.9	4.2	1.0	8.3	<0.01	0.09	0.6	0.029
CC27724		13.7	1020	4.8	3.3	0.002	0.11	3.95	1.3	3.1	0.4	7.8	<0.01	0.04	0.2	0.009
CC27725		28.2	270	15.4	12.0	0.001	0.03	5.40	2.2	3.5	1.0	16.9	<0.01	0.08	3.1	0.026
CC27726		60.0	650	15.1	20.7	0.001	0.05	11.80	2.5	9.2	0.9	13.8	<0.01	0.12	1.1	0.023
CC27727		52.3	700	12.1	18.2	0.002	0.06	12.20	1.8	8.9	0.8	8.2	<0.01	0.12	0.3	0.018
CC27728		62.0	840	9.4	13.6	0.007	0.09	17.90	0.6	18.3	0.5	12.7	<0.01	0.13	<0.2	0.006
CC27729		69.3	600	16.9	21.5	0.003	0.07	20.20	2.7	13.4	0.9	11.3	<0.01	0.18	1.1	0.017
CC27730		169.0	1170	19.0	21.4	0.004	0.13	31.10	2.2	25.6	0.8	37.4	0.01	0.26	0.3	0.010
CC27731		234.0	1290	19.8	15.9	0.005	0.09	36.70	4.4	33.2	1.1	72.0	0.01	0.25	1.2	0.009
CC27732		169.0	1490	11.8	15.2	0.007	0.09	14.30	5.1	11.1	0.9	172.0	0.01	0.17	2.0	0.008
CC27733		256.0	2470	12.1	15.9	0.004	0.07	27.60	6.0	16.1	0.9	233.0	0.01	0.21	2.2	0.008
CC27734		236.0	1080	11.6	9.8	0.004	0.11	17.95	2.9	11.5	0.7	183.5	0.01	0.14	0.8	0.005
CC27735		242.0	1300	12.3	12.5	0.003	0.11	19.15	3.9	11.3	0.9	174.0	0.01	0.16	1.3	0.006
CC27736		243.0	2210	11.5	19.0	0.003	0.06	13.90	6.5	5.6	1.2	178.5	0.01	0.15	6.3	0.011
CC27737		49.8	910	16.0	12.4	0.001	0.07	1.51	3.9	2.5	0.5	52.2	<0.01	0.06	2.1	<0.005
CC27738		37.1	940	13.3	10.2	0.002	0.09	1.69	3.5	2.8	0.5	70.7	<0.01	0.06	2.1	<0.005
CC27739		20.7	720	13.7	11.1	0.003	0.04	1.22	3.3	2.7	0.4	28.3	<0.01	0.07	3.4	<0.005
CC27740		16.4	740	14.1	13.0	0.002	0.03	1.20	3.3	2.1	0.3	27.8	<0.01	0.07	4.6	<0.005
CC27741		82.5	600	15.6	8.3	0.001	0.09	1.59	11.1	3.4	0.3	124.0	0.01	0.06	3.6	0.010

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 2 - D

Total # of tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39987		0.34	3.73	195	0.06	14.45	409	3.6
CC39988		0.44	3.26	259	0.12	12.45	438	2.7
CC39989		0.57	3.44	283	0.12	16.10	586	3.1
CC39990		0.51	4.27	260	0.13	15.90	364	2.4
CC39991		1.43	15.75	491	0.17	24.70	509	1.1
CC39992		1.48	7.29	509	0.25	16.10	266	0.9
CC39993		0.83	3.53	216	0.26	12.25	193	<0.5
CC39994		1.70	4.44	988	0.42	5.63	141	<0.5
CC39995		1.70	23.60	388	0.37	47.10	1095	0.9
CC39996		0.73	6.58	323	0.20	24.30	651	2.0
CC39997		0.62	3.40	133	0.12	17.85	157	1.1
CC39998		1.21	9.17	619	0.30	30.30	495	0.6
CC39999		0.72	2.97	312	0.23	12.10	161	0.8
CC40000		0.55	4.11	246	0.16	14.20	193	0.7
CC27716		0.94	2.49	189	0.27	3.60	45	<0.5
CC27717		2.27	1.49	268	0.19	4.51	191	2.2
CC27718		0.83	1.12	382	0.21	3.08	131	0.6
CC27719		2.96	1.51	721	0.21	6.13	598	5.2
CC27720		2.11	1.35	853	0.26	4.15	626	0.7
CC27721		1.50	2.09	820	0.27	5.69	308	<0.5
CC27722		2.38	3.76	771	0.23	16.45	1585	2.1
CC27723		0.61	1.12	567	0.28	3.08	146	<0.5
CC27724		0.21	1.47	197	0.07	2.80	62	0.5
CC27725		0.89	1.15	536	0.22	3.40	121	1.2
CC27726		2.29	2.39	754	0.28	5.93	287	<0.5
CC27727		1.51	2.66	701	0.27	6.82	244	<0.5
CC27728		1.60	4.81	867	0.23	9.82	306	<0.5
CC27729		4.74	7.29	1385	0.36	10.50	397	<0.5
CC27730		3.92	14.75	1730	0.37	29.80	1645	0.6
CC27731		3.62	10.45	1210	0.42	30.70	1575	1.2
CC27732		1.95	10.60	902	0.29	34.50	1070	1.9
CC27733		2.28	10.70	983	0.36	34.00	1835	1.7
CC27734		1.75	16.00	569	0.38	32.90	1280	1.8
CC27735		1.81	15.85	718	0.44	36.40	1280	2.7
CC27736		1.69	12.20	773	0.36	38.40	727	12.1
CC27737		0.19	1.83	63	0.07	18.00	155	0.9
CC27738		0.16	2.07	44	0.06	16.00	119	1.1
CC27739		0.13	2.36	60	0.08	13.35	64	0.7
CC27740		0.14	1.66	53	0.07	10.70	72	0.7
CC27741		0.31	1.04	44	0.09	34.30	157	3.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - A

Total # of sheets: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC27742		0.16	0.72	1.19	9.8	<0.2	<10	1050	0.51	0.28	0.04	0.39	27.30	14.0	27	0.83
CC27743		0.26	1.13	1.31	16.2	<0.2	<10	>10000	0.43	0.20	0.54	1.37	33.50	13.8	24	0.57
CC27744		0.12	0.64	0.63	34.8	<0.2	<10	>10000	0.61	0.16	1.08	11.70	39.40	5.8	33	0.52
CC27745		0.16	1.29	0.87	38.8	<0.2	10	6240	0.83	0.19	0.85	13.90	45.50	5.9	43	0.77
CC27746		0.26	1.33	0.78	34.7	<0.2	<10	5130	0.87	0.20	1.04	10.65	45.30	7.2	43	0.63
CC27747		0.14	3.15	0.76	34.9	<0.2	10	3930	0.86	0.18	1.88	8.34	23.00	5.8	176	0.55
CC27748		0.12	10.30	1.04	54.3	<0.2	<10	5010	0.94	0.28	0.80	22.70	21.10	8.7	110	1.20
CC27749		0.10	8.27	1.55	105.5	<0.2	<10	2250	1.23	0.29	0.77	60.70	23.60	15.8	108	1.70
CC27751		0.12	1.58	1.46	48.5	<0.2	<10	600	0.43	0.29	0.07	2.23	19.55	6.2	64	1.15
CC27752		0.12	0.69	1.20	30.6	<0.2	<10	370	0.41	0.27	0.05	1.55	22.60	4.5	43	1.30
CC27753		0.08	2.41	0.82	13.2	<0.2	<10	1010	0.29	0.16	0.07	6.45	13.50	1.3	33	0.80
CC27754		0.40	2.64	0.81	6.7	<0.2	<10	1270	0.63	0.18	0.23	9.44	21.00	1.5	33	1.15
CC27755		0.42	0.46	0.93	10.7	<0.2	<10	970	0.46	0.19	0.17	2.56	24.50	2.7	22	0.80
CC27756		0.14	1.32	0.61	12.1	<0.2	<10	1290	0.41	0.14	1.16	1.68	6.90	1.0	11	0.89
CC27757		0.24	0.24	0.43	36.0	<0.2	<10	360	0.24	0.13	0.02	0.31	5.92	1.0	16	0.74
CC27758		0.18	0.08	0.77	53.7	<0.2	<10	200	0.17	0.23	0.03	0.10	16.35	3.6	19	0.82
CC27759		0.14	0.09	1.08	21.3	<0.2	<10	140	0.19	0.35	0.04	0.23	19.55	5.3	22	1.05
CC20495		0.26	0.34	1.08	16.0	<0.2	<10	600	0.64	0.17	0.65	3.64	15.95	8.7	16	0.70
CC20496		0.18	0.33	0.92	12.9	<0.2	<10	890	0.54	0.14	0.78	3.50	17.20	6.8	15	0.57
CC20497		0.18	0.34	1.10	13.1	<0.2	<10	740	0.63	0.15	0.73	6.30	17.10	9.3	16	0.63
CC20463		0.12	1.19	1.16	26.5	<0.2	<10	2600	0.58	0.19	0.20	2.27	21.80	6.6	61	1.01
CC20464		0.08	3.82	0.96	51.1	<0.2	10	5760	0.95	0.28	0.79	21.10	19.80	13.3	123	1.38
CC27501		0.16	0.67	1.19	13.3	<0.2	<10	1930	0.59	0.18	1.06	9.85	30.80	11.8	25	0.68
CC27502		0.20	0.17	1.42	5.8	<0.2	<10	790	0.55	0.22	0.27	0.27	39.90	10.3	23	0.60
CC27503		0.06	0.28	1.28	6.5	<0.2	<10	980	0.64	0.21	0.43	0.20	31.30	15.2	20	0.60
CC27504		0.14	0.14	1.50	6.0	<0.2	<10	770	0.59	0.22	0.21	0.16	40.70	8.5	24	0.61
CC27505		0.14	0.19	1.52	7.2	<0.2	<10	970	0.66	0.23	0.38	0.44	40.90	10.8	24	0.59
CC27506		0.20	0.22	1.55	6.8	<0.2	<10	1030	0.69	0.26	0.36	0.36	42.10	10.7	25	0.65
CC27507		0.16	0.20	1.54	8.5	<0.2	<10	1010	0.70	0.24	0.23	0.37	43.90	11.3	24	0.63
CC29888		0.14	0.28	1.55	10.1	<0.2	<10	690	0.58	0.24	0.18	0.41	29.80	8.0	26	0.84
CC29889		0.20	0.27	1.43	9.0	<0.2	<10	400	0.39	0.21	0.13	0.30	23.60	7.0	24	0.73
CC29890		0.12	0.21	1.38	7.4	<0.2	<10	260	0.32	0.22	0.13	0.21	21.30	4.4	24	0.75
CC29891		0.14	0.44	1.07	39.2	<0.2	<10	530	0.69	0.22	0.15	2.54	20.90	9.5	27	0.60
CC29892		0.14	0.24	1.94	15.2	<0.2	<10	560	0.41	0.23	0.07	0.47	21.30	7.1	31	1.36
CC29893		0.10	0.56	1.56	21.9	<0.2	<10	870	0.81	0.28	0.24	1.00	27.40	6.1	30	1.18
CC29894		0.18	0.18	1.55	11.2	<0.2	<10	390	0.47	0.21	0.16	0.28	27.90	5.6	27	1.12
CC29895		0.12	0.28	1.48	11.1	<0.2	<10	490	0.53	0.23	0.19	0.47	28.90	7.3	26	1.00
CC29896		0.16	0.35	1.46	10.9	<0.2	<10	560	0.50	0.21	0.22	0.26	28.30	8.1	26	0.95
CC29897		0.10	0.28	1.41	10.9	<0.2	<10	420	0.35	0.21	0.22	0.24	21.30	6.2	24	0.86
CC29898		0.08	0.31	1.22	9.5	<0.2	<10	490	0.34	0.19	0.23	0.25	21.80	7.4	21	0.97

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

TO: STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - B

Total # : 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na
	Units LOR	ppm 0.2	% 0.01	ppm 0.05	ppm 0.05	ppm 0.02	ppm 0.01	ppm 0.005	% 0.01	ppm 0.2	ppm 0.1	% 0.01	ppm 5	ppm 0.05	% 0.01
CC27742		48.0	4.29	4.06	0.07	0.07	0.12	0.047	0.07	13.7	7.0	0.13	291	2.67	0.01
CC27743		71.7	3.15	3.53	0.11	0.12	0.37	0.056	0.31	18.0	2.5	0.08	131	6.06	0.24
CC27744		92.5	1.51	2.87	0.10	0.11	0.25	0.023	0.08	26.6	4.6	0.07	118	71.90	0.31
CC27745		103.5	1.75	3.98	0.12	0.12	0.63	0.031	0.10	29.7	7.6	0.10	90	92.60	0.10
CC27746		82.4	1.92	3.21	0.12	0.13	0.42	0.025	0.09	30.0	5.9	0.13	155	90.70	0.08
CC27747		135.0	1.66	3.70	0.11	0.09	0.49	0.041	0.10	16.3	4.9	0.17	153	11.15	0.07
CC27748		131.5	2.53	3.73	0.16	0.09	0.84	0.039	0.12	14.1	5.5	0.11	286	34.10	0.08
CC27749		173.0	2.46	6.25	0.18	0.13	1.29	0.046	0.13	16.1	8.2	0.30	924	95.50	0.04
CC27751		59.2	3.19	7.36	0.11	0.02	0.09	0.038	0.09	11.2	12.7	0.19	171	32.40	0.01
CC27752		38.7	2.72	8.02	0.08	<0.02	0.07	0.030	0.07	14.0	6.1	0.11	93	35.80	0.01
CC27753		53.4	0.84	4.53	0.05	0.02	0.50	0.022	0.05	8.5	2.2	0.05	18	11.45	0.02
CC27754		62.5	0.61	3.86	0.07	0.04	0.43	0.028	0.07	13.3	5.5	0.13	24	11.10	0.02
CC27755		45.8	1.27	3.33	0.08	0.08	0.14	0.032	0.07	13.9	7.4	0.22	49	16.95	0.01
CC27756		38.0	1.23	1.83	0.08	0.04	0.26	0.023	0.06	3.7	1.6	0.16	21	26.30	0.03
CC27757		52.4	1.12	3.42	0.06	0.02	0.06	0.047	0.06	3.2	0.7	0.02	19	30.10	0.01
CC27758		20.0	2.53	7.63	0.05	<0.02	0.03	0.025	0.04	8.8	4.0	0.11	96	57.40	<0.01
CC27759		16.1	3.63	10.70	0.06	0.02	0.03	0.027	0.05	10.4	4.6	0.12	205	29.40	<0.01
CC20495		36.2	2.53	3.27	0.08	0.11	0.14	0.027	0.10	8.0	7.2	0.25	141	26.30	0.01
CC20496		33.7	1.86	2.78	0.07	0.11	0.15	0.026	0.08	8.6	6.1	0.28	174	16.45	0.01
CC20497		39.7	2.73	2.99	0.10	0.15	0.14	0.026	0.09	8.6	7.1	0.28	134	21.00	0.01
CC20463		46.3	2.05	5.10	0.07	0.03	0.19	0.027	0.08	12.7	11.0	0.19	135	23.80	0.04
CC20464		137.5	2.58	5.02	0.13	0.07	0.72	0.041	0.14	12.2	9.3	0.15	152	44.30	0.09
CC27501		42.6	2.16	3.64	0.08	0.09	0.24	0.029	0.09	16.3	12.1	0.37	588	8.13	0.04
CC27502		23.6	2.60	4.80	0.07	0.06	0.05	0.030	0.08	21.2	16.1	0.48	264	1.13	0.01
CC27503		30.2	2.39	4.36	0.07	0.06	0.08	0.032	0.08	16.3	11.8	0.34	477	2.84	0.02
CC27504		24.6	2.32	4.98	0.07	0.05	0.06	0.032	0.08	21.4	15.7	0.47	162	0.87	0.01
CC27505		28.5	2.99	4.98	0.08	0.07	0.05	0.035	0.09	21.2	15.4	0.46	233	1.25	0.02
CC27506		32.6	2.92	5.02	0.09	0.08	0.05	0.039	0.09	22.2	15.8	0.48	287	1.32	0.02
CC27507		29.7	3.41	5.22	0.08	0.06	0.05	0.036	0.09	22.6	15.4	0.45	208	1.78	0.02
CC29888		25.2	2.42	5.00	0.07	0.06	0.13	0.036	0.07	15.4	13.7	0.34	159	7.72	0.01
CC29889		18.5	2.04	5.12	0.06	0.04	0.12	0.029	0.06	12.7	13.8	0.30	164	9.26	0.01
CC29890		16.5	1.78	5.09	0.05	0.04	0.09	0.024	0.06	11.5	13.0	0.29	91	8.82	0.01
CC29891		48.1	2.84	3.81	0.10	0.08	0.17	0.036	0.11	12.6	9.9	0.27	157	43.80	0.01
CC29892		23.0	3.18	6.27	0.05	0.07	0.01	0.038	0.06	11.9	21.4	0.33	198	7.71	<0.01
CC29893		45.2	2.39	5.66	0.07	0.04	0.27	0.043	0.10	14.9	11.7	0.29	123	19.60	<0.01
CC29894		17.4	1.99	5.14	0.05	0.04	0.15	0.033	0.07	14.7	15.1	0.35	87	10.05	<0.01
CC29895		20.0	2.13	5.07	0.05	0.04	0.08	0.030	0.07	15.4	13.8	0.32	170	8.58	<0.01
CC29896		20.0	2.15	4.99	0.06	0.04	0.07	0.031	0.07	15.2	13.6	0.33	217	11.75	<0.01
CC29897		17.3	2.03	5.02	0.05	0.03	0.07	0.027	0.05	11.6	11.3	0.28	167	10.40	<0.01
CC29898		16.0	1.91	4.35	0.05	0.02	0.09	0.023	0.06	11.5	10.3	0.25	230	10.75	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

3100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - C

Total # of Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
	Units LOR	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2	% 0.005
CC27742		47.5	360	14.6	12.9	0.001	0.02	1.27	5.3	1.7	0.9	13.0	<0.01	0.07	5.3	0.008
CC27743		98.1	1820	9.7	15.4	0.002	0.03	7.40	8.1	3.4	1.6	161.0	0.01	0.07	6.4	<0.005
CC27744		237.0	600	11.1	8.3	0.002	0.05	12.30	3.2	5.5	0.6	212.0	0.01	0.14	1.1	0.006
CC27745		255.0	650	14.7	12.3	0.002	0.07	17.10	3.9	8.4	0.8	108.5	0.01	0.15	1.6	0.008
CC27746		268.0	650	14.1	9.3	0.001	0.08	12.55	4.5	7.5	0.8	116.0	0.01	0.14	1.7	0.007
CC27747		215.0	5110	7.6	9.5	0.002	0.08	19.35	5.4	10.3	0.9	413.0	0.01	0.18	1.9	0.006
CC27748		259.0	2530	15.9	11.7	0.009	0.07	40.10	3.9	23.4	1.1	129.5	0.01	0.25	1.3	0.006
CC27749		351.0	870	30.3	19.9	0.011	0.06	57.50	5.8	28.4	0.9	90.5	0.01	0.30	1.6	0.006
CC27751		86.8	600	16.6	17.4	0.002	0.09	19.10	2.5	15.7	0.9	19.8	<0.01	0.21	1.2	0.014
CC27752		69.1	450	16.0	15.8	0.002	0.03	12.55	2.1	7.7	1.0	10.2	<0.01	0.16	1.3	0.018
CC27753		26.7	940	13.5	6.9	0.002	0.06	4.86	0.4	5.9	0.7	13.2	<0.01	0.06	<0.2	<0.005
CC27754		47.6	660	11.2	11.4	0.012	0.04	7.27	2.8	5.5	0.8	54.4	<0.01	0.12	1.2	0.007
CC27755		37.4	490	12.1	8.3	0.013	0.04	6.19	3.9	9.1	0.7	47.0	<0.01	0.12	4.2	0.013
CC27756		36.4	1290	9.9	7.3	0.053	0.23	4.80	1.2	9.3	0.6	168.0	<0.01	0.17	0.2	0.005
CC27757		18.8	570	8.7	6.4	0.017	0.14	3.66	1.1	5.9	0.6	63.6	<0.01	0.12	0.3	<0.005
CC27758		17.7	330	10.2	10.8	0.001	0.04	5.43	1.5	3.4	0.7	40.5	<0.01	0.16	1.8	0.018
CC27759		21.4	290	14.5	10.4	<0.001	0.02	3.49	2.0	2.4	1.1	10.9	<0.01	0.14	1.9	0.041
CC20495		100.5	580	11.7	11.1	0.017	0.11	3.20	3.9	9.0	0.4	63.1	<0.01	0.08	2.5	<0.005
CC20496		73.1	590	10.1	9.6	0.015	0.11	2.49	3.4	7.4	0.4	62.2	<0.01	0.06	2.1	0.005
CC20497		122.0	620	10.3	10.0	0.018	0.14	2.84	3.8	10.2	0.4	61.8	0.01	0.07	2.4	0.005
CC20463		81.0	1620	10.8	13.4	0.001	0.05	9.82	2.8	4.6	0.8	72.8	<0.01	0.12	1.9	0.016
CC20464		302.0	3110	14.1	16.3	0.004	0.08	31.60	3.1	15.8	0.9	227.0	0.01	0.27	0.7	0.011
CC27501		100.5	980	11.0	12.5	0.010	0.09	3.03	3.5	5.9	0.4	93.0	<0.01	0.06	3.0	0.008
CC27502		25.2	600	11.8	11.4	0.001	0.02	0.58	3.9	1.1	0.4	22.0	<0.01	0.05	5.6	0.008
CC27503		25.5	900	11.4	11.8	0.001	0.06	0.67	3.6	1.5	0.4	30.4	<0.01	0.05	2.6	0.005
CC27504		24.6	500	12.9	12.6	0.001	0.02	0.56	4.0	1.0	0.4	18.1	<0.01	0.04	5.6	0.007
CC27505		31.2	600	13.6	13.2	0.001	0.02	0.62	4.4	1.2	0.4	27.6	<0.01	0.05	5.8	0.007
CC27506		34.9	600	12.9	13.6	0.001	0.02	0.66	4.9	1.3	0.4	27.6	<0.01	0.05	5.7	0.008
CC27507		28.7	560	13.8	13.7	<0.001	0.02	0.70	4.6	1.3	0.4	21.3	<0.01	0.05	5.8	0.006
CC29888		22.7	480	14.1	12.0	0.002	0.02	1.60	4.2	3.2	0.5	20.5	<0.01	0.07	4.3	0.012
CC29889		17.7	420	12.3	12.2	0.001	0.02	1.55	3.0	2.9	0.6	17.8	<0.01	0.06	3.3	0.010
CC29890		14.7	360	12.0	11.8	0.002	0.02	2.42	2.8	2.8	0.6	18.6	<0.01	0.06	3.0	0.011
CC29891		144.0	660	13.8	8.9	0.003	0.15	10.35	4.2	11.5	0.6	44.6	<0.01	0.19	3.7	0.015
CC29892		25.4	290	12.5	12.5	<0.001	0.04	2.53	3.0	1.8	0.7	17.2	0.01	0.07	3.9	0.018
CC29893		46.0	650	13.9	12.8	0.006	0.07	7.32	4.6	4.0	0.7	33.0	0.01	0.12	1.5	0.012
CC29894		22.2	330	12.8	12.9	0.002	0.02	3.82	4.1	2.7	0.6	18.6	<0.01	0.07	4.2	0.015
CC29895		25.6	430	13.3	11.9	0.003	0.04	3.42	3.9	2.5	0.6	21.2	<0.01	0.07	3.7	0.014
CC29896		22.1	490	12.4	11.9	0.003	0.03	3.86	3.9	2.5	0.6	22.1	<0.01	0.07	3.5	0.014
CC29897		18.0	450	12.0	9.9	0.003	0.03	2.70	3.1	2.8	0.5	20.4	<0.01	0.07	2.7	0.010
CC29898		16.5	510	11.9	13.4	0.003	0.04	1.87	2.5	2.7	0.5	20.6	<0.01	0.07	1.8	0.011

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

310 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 3 - D

Total # of tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC27742		0.30	0.88	53	0.10	10.75	134	2.1
CC27743		0.56	2.89	49	0.12	25.60	358	3.9
CC27744		1.44	10.20	555	0.47	46.30	946	3.1
CC27745		2.00	21.80	720	0.51	43.10	951	3.6
CC27746		2.12	19.80	560	0.47	46.10	661	4.0
CC27747		0.61	5.43	246	0.19	28.30	1200	2.8
CC27748		1.44	7.03	601	0.30	35.90	1980	1.8
CC27749		3.33	13.45	2090	0.59	58.00	3350	2.7
CC27751		1.34	3.48	639	0.27	11.35	346	<0.5
CC27752		0.70	2.48	780	0.28	7.59	290	<0.5
CC27753		0.96	5.61	389	0.13	13.00	144	<0.5
CC27754		3.06	7.14	543	0.17	19.95	390	0.7
CC27755		1.69	7.04	172	0.23	13.25	156	3.0
CC27756		1.88	6.82	93	0.19	9.51	95	1.3
CC27757		2.22	8.55	143	0.21	6.55	84	<0.5
CC27758		1.63	1.73	240	0.34	3.44	100	<0.5
CC27759		0.66	0.73	239	0.27	2.48	82	0.6
CC20495		1.74	4.78	152	0.18	24.00	284	3.1
CC20496		1.25	4.79	128	0.12	23.20	219	2.7
CC20497		1.52	5.83	137	0.13	33.10	374	3.6
CC20463		1.20	4.06	476	0.28	12.85	539	0.5
CC20464		2.15	9.38	711	0.40	35.30	1520	1.1
CC27501		0.78	5.26	161	0.20	19.45	1020	2.0
CC27502		0.14	0.88	41	0.08	11.25	88	1.7
CC27503		0.14	1.18	40	0.11	13.15	65	1.2
CC27504		0.13	0.90	42	0.07	11.05	84	1.3
CC27505		0.13	1.00	44	0.08	13.05	92	1.8
CC27506		0.14	1.02	43	0.09	16.20	95	2.0
CC27507		0.14	1.09	44	0.08	14.30	90	1.6
CC29888		0.69	2.16	91	0.13	10.95	87	1.4
CC29889		0.79	1.37	94	0.10	5.91	74	0.9
CC29890		0.66	1.35	117	0.12	4.45	71	1.1
CC29891		2.40	4.60	308	0.19	17.65	299	2.5
CC29892		0.39	0.56	114	0.15	2.98	100	2.5
CC29893		1.06	4.32	246	0.26	15.40	127	0.5
CC29894		0.80	1.28	127	0.15	6.89	95	1.4
CC29895		0.60	1.59	121	0.22	8.71	83	1.0
CC29896		0.59	1.81	130	0.31	8.13	78	1.0
CC29897		0.53	1.40	124	0.16	5.15	64	0.9
CC29898		0.46	1.27	95	0.17	4.98	63	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - A

Total Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC29899		0.14	0.29	1.10	7.0	<0.2	<10	480	0.28	0.18	0.20	0.23	20.40	4.0	19	0.90
CC29900		0.14	0.27	1.18	9.2	<0.2	<10	440	0.39	0.18	0.14	0.21	25.20	5.0	21	0.76
CC39501		0.14	0.22	1.22	9.9	<0.2	<10	450	0.36	0.18	0.13	0.24	25.40	5.5	20	0.80
CC39502		0.12	0.25	1.32	8.6	<0.2	<10	670	0.53	0.20	0.21	0.39	27.90	5.8	23	0.82
CC39503		0.10	0.21	1.46	10.8	<0.2	<10	550	0.60	0.20	0.17	0.50	27.60	7.4	25	0.92
CC39504		0.12	0.21	1.29	7.5	<0.2	<10	650	0.47	0.18	0.19	0.72	29.30	8.3	22	0.77
CC39505		0.10	0.14	1.16	13.8	<0.2	<10	450	0.34	0.21	0.13	0.46	21.10	6.8	21	0.79
CC39506		0.12	0.57	1.07	25.7	<0.2	<10	660	0.44	0.20	0.08	1.26	16.20	4.8	21	0.84
CC39507		0.16	0.57	0.87	24.2	<0.2	<10	2100	0.64	0.19	0.25	2.52	16.50	14.2	20	0.90
CC39508		0.10	0.50	0.93	8.0	<0.2	<10	2060	0.29	0.18	0.13	0.87	17.20	3.3	18	0.76
CC39509		0.06	0.48	1.09	11.9	<0.2	<10	1940	0.56	0.17	0.41	1.49	18.85	8.3	19	0.88
CC39552		0.12	0.40	0.74	5.1	<0.2	<10	2870	0.41	0.15	0.76	0.94	20.90	6.1	13	0.55
CC39620		0.12	0.34	1.48	11.0	<0.2	<10	1390	0.75	0.16	0.96	1.91	36.70	10.5	25	0.67
CC39624		0.24	0.53	1.02	50.3	<0.2	<10	410	0.43	0.22	0.15	2.80	15.30	6.2	26	1.19
CC39625		0.14	0.45	0.98	69.9	<0.2	<10	350	0.30	0.22	0.13	2.73	12.20	3.5	23	1.18
CC39628		0.20	0.50	0.47	32.6	<0.2	10	1030	0.48	0.16	0.43	3.73	15.65	6.5	13	1.38
CC39629		0.12	0.48	0.57	35.7	<0.2	10	850	0.51	0.17	0.66	5.06	13.30	4.5	20	1.27
CC39630		0.20	0.44	0.73	19.0	<0.2	<10	830	0.40	0.15	0.22	2.31	16.70	2.6	18	1.11
CC39631		0.16	1.63	0.48	36.7	<0.2	<10	820	0.41	0.17	0.06	2.16	12.90	5.5	26	1.68
CC39664		0.14	0.08	1.68	10.4	<0.2	<10	1230	0.36	0.21	0.15	0.19	22.80	8.5	27	1.10
CC39665		0.10	0.13	1.75	8.7	<0.2	<10	4280	0.34	0.19	0.31	0.20	20.90	7.7	26	0.90
CC39666		0.10	0.41	1.14	9.1	<0.2	<10	4500	0.63	0.19	0.98	1.76	27.20	10.0	22	0.73
CC39740		0.12	3.76	1.36	106.5	<0.2	<10	180	0.89	0.32	0.18	35.50	16.00	6.1	111	3.14
CC39741		0.14	1.18	1.15	58.5	<0.2	<10	1010	0.65	0.22	0.04	10.25	18.25	3.3	72	2.28
CC39742		0.16	3.41	0.89	53.9	<0.2	<10	2270	0.80	0.20	0.32	36.30	17.05	8.9	60	1.95
CC39710		0.18	0.14	1.18	24.1	<0.2	<10	770	0.72	0.19	0.59	2.47	32.30	7.5	28	0.78
CC39711		0.10	0.15	1.05	16.6	<0.2	<10	800	0.83	0.16	0.32	1.81	34.00	7.4	28	0.56
CC39712		0.08	0.22	0.57	13.5	<0.2	<10	780	0.70	0.11	2.52	2.47	62.20	7.1	36	0.35
CC39713		0.10	1.15	1.19	8.1	<0.2	<10	5020	0.62	0.18	0.92	0.96	24.10	9.9	22	0.60
CC39714		0.08	0.70	1.28	6.2	<0.2	<10	3910	0.46	0.14	0.65	0.40	19.35	6.4	20	1.14
CC39715		0.08	0.69	1.33	7.1	<0.2	<10	5200	0.49	0.17	0.75	0.83	19.75	8.9	21	1.08
CC39716		0.04	0.71	0.80	3.2	<0.2	<10	4530	0.34	0.12	0.47	1.01	13.80	3.4	14	0.49
CC39717		0.12	0.73	1.49	11.0	<0.2	<10	830	0.31	0.20	0.05	0.37	19.25	7.4	22	1.02
CC39718		0.08	0.41	1.54	6.7	<0.2	<10	2480	0.51	0.18	0.12	0.52	27.30	7.5	24	0.88
CC39719		0.08	0.58	1.81	7.9	<0.2	<10	3180	0.44	0.20	0.20	0.60	22.90	8.4	29	1.15
CC39720		0.04	0.28	1.07	6.8	<0.2	<10	3340	0.48	0.16	0.62	0.49	19.25	7.2	19	0.59
CC39721		0.08	0.45	0.42	26.3	<0.2	<10	760	0.94	0.12	2.69	4.79	45.30	6.9	40	0.51
CC39722		0.06	0.35	0.60	27.5	<0.2	<10	730	0.92	0.15	2.01	5.09	54.40	8.7	33	0.50
CC39723		0.08	0.75	0.84	35.6	<0.2	<10	970	1.20	0.19	1.34	7.55	42.00	8.6	47	0.72
CC39799		0.08	0.40	0.65	27.1	<0.2	<10	350	0.17	0.16	0.09	0.63	19.10	2.2	15	0.94

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - B

Total # : 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Method Analyte Units LOR	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01	ME-MS41 Nb ppm 0.05
Sample Description															
CC29899	12.9	1.44	4.15	<0.05	0.02	0.15	0.020	0.06	11.0	8.7	0.21	104	6.00	<0.01	0.45
CC29900	15.2	1.73	4.12	0.05	0.03	0.08	0.025	0.05	13.5	10.8	0.25	116	8.51	<0.01	0.50
CC39501	15.3	1.83	4.10	<0.05	0.02	0.08	0.025	0.05	13.4	10.7	0.24	123	6.84	<0.01	0.48
CC39502	20.8	1.68	4.31	0.05	0.03	0.08	0.028	0.06	15.0	10.7	0.25	89	5.06	<0.01	0.52
CC39503	20.5	2.20	4.94	0.06	0.03	0.08	0.031	0.06	14.7	11.5	0.26	185	7.90	<0.01	0.56
CC39504	19.7	1.70	4.25	0.05	0.03	0.09	0.025	0.06	15.7	11.4	0.27	164	4.98	<0.01	0.50
CC39505	14.8	2.07	4.45	<0.05	0.02	0.05	0.021	0.06	11.3	9.1	0.22	271	12.50	<0.01	0.53
CC39506	31.0	2.00	3.33	0.05	0.04	0.21	0.029	0.05	9.2	5.6	0.11	61	19.90	<0.01	0.36
CC39507	44.6	2.50	2.69	0.07	0.04	0.20	0.033	0.08	9.8	4.0	0.09	183	26.80	<0.01	0.19
CC39508	24.7	1.13	2.83	<0.05	0.05	0.20	0.020	0.06	10.0	5.3	0.12	28	4.90	<0.01	0.32
CC39509	33.4	1.61	3.19	0.05	0.05	0.19	0.026	0.05	10.5	6.6	0.15	85	7.00	<0.01	0.34
CC39552	27.0	1.47	2.18	0.05	0.08	0.11	0.022	0.08	11.1	5.2	0.25	160	2.01	<0.01	0.27
CC39620	28.4	2.36	4.81	0.07	0.12	0.08	0.035	0.11	19.5	14.2	0.62	362	3.93	<0.01	0.36
CC39624	128.0	3.04	4.31	0.12	0.03	0.18	0.052	0.21	8.0	5.4	0.13	180	79.40	<0.01	0.37
CC39625	86.8	2.92	4.24	0.10	0.03	0.14	0.043	0.22	6.4	3.8	0.10	92	82.90	<0.01	0.36
CC39628	70.4	2.13	2.06	0.08	0.05	0.28	0.029	0.10	8.6	1.1	0.08	130	66.00	<0.01	0.09
CC39629	63.8	2.04	2.62	0.08	0.05	0.29	0.033	0.11	7.1	1.4	0.09	126	48.00	<0.01	0.12
CC39630	30.1	1.14	2.88	0.05	0.02	0.18	0.022	0.07	10.3	3.0	0.08	70	26.50	<0.01	0.20
CC39631	42.8	1.61	2.32	0.08	0.03	0.13	0.023	0.07	8.6	1.0	0.03	27	79.10	<0.01	0.13
CC39664	18.5	2.84	5.44	0.05	0.04	0.02	0.031	0.06	12.5	14.6	0.36	180	2.24	<0.01	0.68
CC39665	12.0	2.48	5.62	0.05	0.10	0.02	0.030	0.06	11.5	13.8	0.40	130	1.93	<0.01	0.62
CC39666	25.0	2.32	3.46	0.08	0.12	0.11	0.032	0.07	14.2	7.6	0.37	252	6.19	<0.01	0.46
CC39740	142.0	3.02	7.12	0.20	0.05	0.47	0.084	0.24	10.9	8.1	0.11	88	97.60	<0.01	0.41
CC39741	88.8	1.86	5.19	0.11	0.04	0.16	0.041	0.11	12.6	5.4	0.08	47	56.10	<0.01	0.19
CC39742	113.5	1.75	4.46	0.14	0.05	0.49	0.030	0.13	11.5	4.8	0.12	219	73.40	<0.01	0.38
CC39710	34.8	2.16	4.88	0.06	0.05	0.06	0.028	0.04	16.4	7.0	0.17	75	45.10	<0.01	0.43
CC39711	32.3	1.87	4.32	0.06	0.06	0.09	0.029	0.04	20.1	6.2	0.15	78	31.60	<0.01	0.35
CC39712	25.2	1.20	2.25	0.09	0.16	0.24	0.022	0.03	33.5	3.6	0.18	265	31.40	<0.01	0.21
CC39713	33.7	2.78	3.29	0.08	0.10	0.19	0.032	0.09	12.5	5.9	0.32	171	2.56	<0.01	0.35
CC39714	18.1	1.70	4.60	<0.05	0.05	0.09	0.026	0.06	10.4	7.7	0.28	106	2.71	<0.01	0.59
CC39715	25.8	1.86	4.34	0.05	0.07	0.13	0.031	0.07	10.7	8.0	0.30	135	3.36	<0.01	0.52
CC39716	24.6	1.12	3.05	<0.05	0.05	0.09	0.021	0.04	7.5	2.2	0.09	27	2.03	<0.01	0.42
CC39717	23.6	2.67	5.04	0.05	0.02	0.04	0.030	0.07	10.7	13.6	0.25	141	2.81	<0.01	0.73
CC39718	24.5	2.07	4.82	0.06	0.03	0.08	0.029	0.07	14.9	12.4	0.28	132	3.12	<0.01	0.62
CC39719	25.2	2.29	6.12	0.05	0.07	0.08	0.034	0.08	12.2	13.0	0.28	115	3.15	<0.01	0.68
CC39720	20.5	1.83	3.48	0.05	0.10	0.10	0.026	0.08	10.3	6.7	0.26	124	2.80	<0.01	0.49
CC39721	48.8	1.57	2.07	0.10	0.12	0.35	0.024	0.04	35.2	2.8	0.17	103	48.70	<0.01	0.18
CC39722	48.3	1.85	2.67	0.09	0.11	0.25	0.026	0.05	30.6	4.6	0.23	181	50.80	<0.01	0.30
CC39723	74.8	1.92	3.72	0.11	0.13	0.44	0.034	0.06	25.7	6.2	0.17	161	40.20	<0.01	0.40
CC39799	17.2	1.60	4.01	0.05	<0.02	0.08	0.020	0.12	10.7	2.1	0.07	81	30.90	<0.01	0.58

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

TO: STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - C

Total # : 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
CC29899		12.9	430	9.8	12.1	0.003	0.04	1.17	2.5	2.2	0.5	18.7	<0.01	0.05	2.1
CC29900		14.6	380	10.8	10.2	0.001	0.03	1.59	2.9	2.2	0.5	16.3	<0.01	0.06	3.2
CC39501		15.2	400	12.0	11.0	0.001	0.03	1.35	2.9	1.8	0.5	15.5	<0.01	0.06	2.8
CC39502		29.6	390	12.7	11.1	0.002	0.03	1.28	3.7	2.1	0.5	19.9	<0.01	0.06	3.3
CC39503		28.1	470	13.3	10.7	0.001	0.03	1.39	3.8	2.0	0.5	18.1	<0.01	0.06	3.3
CC39504		26.5	430	11.0	10.2	0.001	0.02	1.16	3.4	1.4	0.5	19.0	<0.01	0.04	3.2
CC39505		23.9	480	13.5	11.9	<0.001	0.03	1.80	2.2	1.4	0.5	15.5	<0.01	0.06	2.0
CC39506		45.3	670	12.5	9.0	0.001	0.08	3.80	2.4	4.3	0.5	23.5	<0.01	0.12	1.2
CC39507		90.1	890	15.3	11.2	0.004	0.12	5.41	3.1	5.0	0.4	54.9	<0.01	0.11	1.4
CC39508		44.8	490	12.4	10.1	0.004	0.09	1.57	2.4	2.8	0.4	34.9	<0.01	0.06	1.8
CC39509		69.5	540	12.0	10.9	0.006	0.08	1.90	3.0	3.2	0.4	46.2	0.01	0.07	1.7
CC39552		33.5	590	8.9	8.5	0.004	0.11	0.99	3.3	2.3	0.3	64.1	<0.01	0.04	2.8
CC39620		49.6	870	10.5	11.9	0.001	0.05	1.40	4.8	1.3	0.5	54.4	0.01	0.05	2.9
CC39624		71.8	700	13.9	15.0	0.006	0.57	10.10	3.4	14.0	0.7	77.2	<0.01	0.24	2.0
CC39625		64.2	700	14.2	16.4	0.007	0.56	10.15	2.6	15.9	0.8	96.9	<0.01	0.31	2.1
CC39628		47.8	390	10.9	11.4	0.032	0.13	11.25	3.0	12.9	0.6	73.2	<0.01	0.15	2.1
CC39629		95.5	410	11.1	11.9	0.024	0.15	11.00	3.4	9.8	0.6	98.5	<0.01	0.18	1.9
CC39630		42.3	400	9.8	9.9	0.013	0.10	4.46	2.2	6.0	0.6	58.6	<0.01	0.08	1.4
CC39631		267.0	580	10.8	9.0	0.009	0.09	16.10	2.2	10.2	0.6	16.7	<0.01	0.20	0.6
CC39664		25.1	210	12.0	13.4	<0.001	0.02	0.82	3.2	0.8	0.6	17.6	<0.01	0.05	3.6
CC39665		25.2	210	10.2	8.8	<0.001	0.03	0.68	3.6	0.7	0.6	28.5	<0.01	0.04	3.3
CC39666		45.3	420	12.4	8.2	0.001	0.10	1.59	5.8	2.0	0.4	80.0	0.01	0.06	3.4
CC39740		139.5	1700	29.6	23.0	0.008	0.59	28.60	1.5	39.4	1.3	170.5	0.01	0.45	0.2
CC39741		104.5	920	22.5	19.8	0.005	0.18	19.50	0.8	16.3	0.9	30.0	0.01	0.21	<0.2
CC39742		187.5	980	17.6	13.4	0.007	0.15	23.10	3.6	17.7	0.6	104.5	0.01	0.19	0.5
CC39710		132.0	230	12.8	7.4	0.001	0.04	2.96	3.4	3.2	0.7	37.7	<0.01	0.10	2.7
CC39711		105.0	290	10.8	5.6	0.001	0.04	1.80	3.8	2.5	0.7	23.7	<0.01	0.07	2.6
CC39712		112.0	370	9.7	3.7	0.003	0.12	1.58	5.4	4.2	0.4	133.5	0.01	0.06	2.5
CC39713		48.2	590	12.9	8.7	0.001	0.09	1.32	5.3	3.2	0.4	104.0	0.01	0.06	2.7
CC39714		24.7	510	8.8	11.0	0.001	0.05	0.79	3.6	1.3	0.5	70.3	<0.01	0.04	2.1
CC39715		36.1	690	9.2	9.0	0.001	0.07	1.19	4.3	2.3	0.5	86.1	<0.01	0.06	2.1
CC39716		22.9	420	7.8	4.7	<0.001	0.07	0.51	3.4	1.8	0.4	63.5	<0.01	0.04	2.7
CC39717		27.2	430	9.7	11.9	<0.001	0.03	1.14	2.8	1.4	0.5	10.1	<0.01	0.05	2.8
CC39718		27.3	490	9.4	12.3	<0.001	0.02	0.90	3.7	1.1	0.5	20.3	<0.01	0.03	3.1
CC39719		36.1	370	10.3	12.5	<0.001	0.04	1.11	4.2	1.3	0.7	26.4	<0.01	0.05	3.6
CC39720		23.2	460	10.6	10.7	<0.001	0.05	1.01	3.9	1.7	0.4	65.4	<0.01	0.05	3.3
CC39721		194.0	630	10.0	5.4	0.003	0.14	3.66	4.7	6.4	0.5	136.5	0.01	0.08	1.3
CC39722		196.5	380	12.0	6.1	0.001	0.08	3.91	5.4	5.3	0.6	91.6	0.01	0.10	2.5
CC39723		236.0	390	12.7	8.8	0.003	0.08	7.87	5.4	7.1	0.8	80.5	0.01	0.13	2.9
CC39799		26.0	630	7.4	16.5	0.001	0.11	5.50	1.6	3.7	0.6	27.3	<0.01	0.10	1.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 4 - D

Total # : 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC29899		0.48	1.16	69	0.11	4.41	51	<0.5
CC29900		0.48	1.24	85	0.14	5.60	60	0.8
CC39501		0.41	1.37	84	0.22	5.91	61	<0.5
CC39502		0.41	1.98	90	0.15	9.58	87	0.7
CC39503		0.39	2.27	111	0.16	9.31	96	0.8
CC39504		0.34	1.74	81	0.17	9.48	100	0.5
CC39505		0.42	0.95	131	0.24	4.88	99	<0.5
CC39506		1.40	3.85	172	0.14	13.40	120	0.8
CC39507		1.29	3.76	190	0.16	17.65	289	0.6
CC39508		0.98	2.98	75	0.10	9.14	80	1.2
CC39509		1.05	4.61	109	0.13	16.60	137	1.1
CC39552		0.14	2.18	49	0.08	13.10	113	2.1
CC39620		0.18	0.82	89	0.12	18.55	270	2.4
CC39624		5.91	8.28	319	0.38	11.00	144	0.9
CC39625		6.62	5.55	337	0.33	6.80	135	1.0
CC39628		2.16	7.93	189	0.23	10.65	161	1.6
CC39629		2.70	8.55	226	0.27	11.40	265	1.7
CC39630		1.86	3.30	235	0.20	8.51	104	0.6
CC39631		3.08	4.87	409	0.53	17.25	418	0.5
CC39664		0.16	0.59	68	0.14	4.16	86	1.4
CC39665		0.14	0.63	71	0.12	4.81	86	2.8
CC39666		0.19	3.03	83	0.41	19.65	127	2.8
CC39740		5.90	18.80	1850	0.65	31.30	1225	0.5
CC39741		2.50	11.35	1375	0.35	20.70	638	0.5
CC39742		3.80	13.20	1465	0.45	27.90	1650	0.7
CC39710		1.14	9.45	288	0.24	13.90	207	2.0
CC39711		0.93	6.78	248	0.23	18.80	159	1.7
CC39712		0.86	17.25	149	0.20	39.40	113	7.1
CC39713		0.12	3.10	68	0.12	22.60	128	1.9
CC39714		0.13	1.30	62	0.21	10.55	64	1.3
CC39715		0.15	1.69	67	0.10	12.60	99	1.7
CC39716		0.07	1.37	43	0.07	6.83	41	1.5
CC39717		0.14	0.85	62	0.12	3.58	112	0.5
CC39718		0.15	1.59	62	0.17	9.33	96	0.6
CC39719		0.19	1.36	86	0.10	7.12	125	2.2
CC39720		0.09	1.37	61	0.09	10.00	76	2.9
CC39721		1.45	10.60	247	0.25	39.50	229	5.6
CC39722		1.23	6.30	274	0.26	35.70	261	4.8
CC39723		1.39	10.20	462	0.28	40.20	546	6.3
CC39799		1.31	1.23	240	0.19	3.63	95	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

THE STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - A

Total # of Pages: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39800		0.08	2.27	0.85	18.7	<0.2	<10	700	0.30	0.15	0.09	1.18	12.45	2.5	19	1.56
CC27651		0.14	0.49	1.00	12.2	<0.2	<10	3320	0.70	0.24	0.23	0.36	41.70	7.4	22	0.82
CC27652		0.10	0.51	0.85	7.1	<0.2	<10	2990	0.49	0.21	0.28	0.39	30.20	3.9	20	0.77
CC27653		0.18	3.48	1.29	49.8	<0.2	<10	>10000	0.79	0.25	0.65	22.20	53.20	7.9	69	1.61
CC27654		0.18	0.98	0.94	43.4	<0.2	<10	3450	0.87	0.22	0.19	8.03	33.50	7.0	51	1.20
CC27655		0.30	1.35	0.90	40.0	<0.2	<10	4080	0.98	0.21	0.63	8.04	41.10	5.4	49	1.13
CC27656		0.18	1.14	0.78	35.0	<0.2	<10	2410	0.72	0.20	0.71	2.04	24.40	3.2	86	0.73
CC27657		0.24	2.02	1.00	41.6	<0.2	10	6340	0.83	0.20	0.35	9.76	25.50	5.1	58	1.57
CC27658		0.12	3.73	1.26	26.9	<0.2	<10	1200	0.43	0.20	0.07	1.41	19.75	4.0	45	1.16
CC27659		0.18	5.46	1.43	57.7	<0.2	10	>10000	0.63	0.24	0.43	14.30	25.90	8.6	75	1.55
CC27660		0.20	7.09	1.43	32.9	<0.2	<10	>10000	0.54	0.23	0.45	12.80	18.40	5.0	63	1.93
CC27661		0.16	1.70	1.16	8.8	<0.2	<10	5140	0.58	0.19	0.30	5.89	34.10	5.9	44	1.06
CC27662		0.24	0.72	1.35	6.6	<0.2	<10	2940	0.64	0.23	0.74	2.42	44.90	6.5	23	1.23
CC27663		0.08	0.60	1.30	7.0	<0.2	<10	2470	0.58	0.25	0.76	3.96	42.00	10.1	22	1.05
CC27664		0.30	0.55	0.80	31.6	<0.2	<10	1530	0.51	0.21	0.27	1.18	27.30	1.7	18	1.43
CC27665		0.32	0.49	0.41	30.2	<0.2	<10	1100	0.51	0.16	0.19	2.63	22.90	2.2	16	1.20
CC27666		0.20	0.35	0.24	29.6	<0.2	<10	590	0.19	0.13	0.09	1.60	14.00	0.8	14	1.40
CC27667		0.10	0.35	0.37	13.0	<0.2	<10	860	0.25	0.14	0.35	1.85	9.96	1.1	8	1.03
CC27668		0.16	0.18	0.38	16.1	<0.2	<10	320	0.27	0.14	0.01	0.18	6.38	0.4	6	1.05
CC27669		0.16	0.29	0.37	14.5	<0.2	<10	610	0.19	0.16	0.01	0.17	7.73	1.0	7	0.97
CC27670		0.16	0.24	0.47	21.2	<0.2	<10	510	0.21	0.17	0.01	0.18	7.23	0.6	9	1.26
CC27671		0.14	0.17	0.20	1.5	<0.2	<10	320	0.17	0.06	0.02	0.09	7.08	0.2	3	0.83
CC27672		0.20	0.58	1.41	45.7	<0.2	<10	660	0.39	0.23	0.03	1.47	15.50	6.5	29	1.52
CC27673		0.18	0.18	0.72	17.3	<0.2	<10	190	0.18	0.18	0.01	0.14	19.05	2.1	13	1.48
CC27674		0.18	0.20	0.81	22.0	<0.2	<10	200	0.14	0.30	0.02	0.08	19.15	2.9	15	1.99
CC27558		0.12	14.05	2.16	113.5	<0.2	10	1980	1.14	0.41	0.56	61.30	22.60	8.0	130	3.57
CC27559		0.16	2.22	1.19	53.8	<0.2	<10	1180	0.80	0.20	0.14	20.20	28.60	12.0	62	1.82
CC27560		0.08	1.18	0.68	19.0	<0.2	<10	670	0.35	0.18	0.03	5.87	20.10	1.7	32	1.16
CC27561		0.18	2.30	0.88	61.6	<0.2	<10	2820	1.04	0.19	0.11	17.30	25.90	4.8	53	1.85
CC27562		0.18	1.48	1.95	60.4	<0.2	<10	1970	0.77	0.29	0.12	19.10	26.40	18.9	55	2.04
CC27563		0.18	4.17	1.47	89.7	<0.2	<10	2410	0.77	0.25	0.06	25.00	19.30	10.8	99	2.27
CC27564		0.10	4.39	1.08	102.5	<0.2	<10	2580	0.93	0.28	0.04	8.16	21.90	3.8	104	2.14
CC27565		0.12	0.89	1.12	10.6	<0.2	<10	1900	0.64	0.22	1.28	1.49	34.30	21.4	19	0.86
CC27566		0.14	0.71	0.98	10.4	<0.2	<10	2860	0.54	0.22	0.31	0.87	35.40	13.8	20	0.79
CC27567		0.20	0.77	1.04	10.6	<0.2	<10	3210	0.60	0.24	0.29	0.98	36.90	8.7	23	0.92
CC27568		0.26	0.82	1.01	10.8	<0.2	<10	3400	0.66	0.24	0.34	1.20	36.90	12.2	22	0.90
CC27569		0.16	0.44	0.62	16.4	<0.2	<10	1020	0.50	0.18	0.11	0.65	25.10	2.0	13	1.11
CC27570		0.12	1.13	1.19	16.4	<0.2	<10	670	0.44	0.20	0.13	3.27	22.40	2.8	29	2.04
CC27571		0.14	0.11	0.60	5.1	<0.2	<10	360	0.20	0.22	0.10	0.50	18.50	1.5	12	0.79

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - B

Total # of Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39800		29.2	1.37	4.88	0.05	0.02	0.16	0.026	0.09	7.1	1.8	0.08	32	37.20	<0.01	0.45
CC27651		46.6	2.82	3.15	0.08	0.05	0.24	0.046	0.11	23.0	5.8	0.11	121	6.70	<0.01	0.21
CC27652		26.4	2.96	2.68	0.07	0.04	0.19	0.033	0.08	17.1	4.2	0.10	108	4.82	<0.01	0.22
CC27653		95.4	2.14	4.66	0.11	0.11	0.68	0.038	0.13	29.3	10.0	0.19	227	87.50	<0.01	0.42
CC27654		68.7	2.04	4.57	0.09	0.05	0.22	0.027	0.08	21.6	8.7	0.09	63	106.50	<0.01	0.25
CC27655		88.0	1.72	4.74	0.09	0.09	0.31	0.033	0.09	25.1	10.1	0.19	133	61.10	<0.01	0.31
CC27656		62.1	1.67	4.49	0.10	0.05	0.25	0.032	0.05	16.4	6.4	0.09	74	13.85	<0.01	0.21
CC27657		55.9	1.78	5.18	0.08	0.04	0.36	0.026	0.11	16.2	8.9	0.13	123	18.40	<0.01	0.29
CC27658		41.4	1.95	5.45	0.06	0.03	0.45	0.028	0.07	11.6	7.7	0.18	82	16.05	<0.01	0.61
CC27659		141.5	2.28	5.64	0.10	0.07	0.98	0.038	0.11	15.2	8.9	0.26	300	25.60	<0.01	0.78
CC27660		64.3	1.75	6.12	0.07	0.06	0.96	0.034	0.13	10.9	8.9	0.26	108	18.30	<0.01	0.55
CC27661		52.8	1.28	4.45	0.06	0.04	0.31	0.028	0.11	19.9	10.8	0.28	106	10.15	<0.01	0.39
CC27662		46.8	1.79	4.21	0.08	0.08	0.18	0.038	0.12	24.9	13.0	0.33	62	3.24	<0.01	0.34
CC27663		36.3	2.41	3.99	0.09	0.10	0.18	0.040	0.12	22.8	12.6	0.34	325	5.19	<0.01	0.31
CC27664		33.0	2.14	3.25	0.09	0.03	0.18	0.036	0.08	16.3	4.0	0.08	24	53.80	<0.01	0.25
CC27665		68.2	1.62	2.16	0.08	0.07	0.11	0.044	0.11	13.6	1.6	0.03	15	45.30	<0.01	0.11
CC27666		28.5	1.79	1.92	0.06	0.13	0.06	0.037	0.19	7.7	0.9	0.02	6	31.20	<0.01	0.06
CC27667		17.8	0.81	1.83	0.05	0.02	0.14	0.014	0.08	6.0	1.0	0.05	14	26.00	<0.01	0.14
CC27668		23.5	0.68	1.13	0.07	0.04	0.02	0.013	0.07	3.7	0.7	0.01	11	50.80	<0.01	0.11
CC27669		18.2	0.95	1.44	0.07	0.02	0.04	0.023	0.11	4.4	1.6	0.05	25	68.90	<0.01	0.15
CC27670		14.3	1.30	1.88	0.07	0.02	0.03	0.030	0.11	3.7	1.5	0.04	23	89.00	<0.01	0.19
CC27671		9.3	0.20	0.82	<0.05	<0.02	0.02	0.006	0.03	4.0	0.3	0.01	<5	10.90	<0.01	0.05
CC27672		58.3	3.23	5.33	0.10	0.05	0.06	0.071	0.18	7.9	10.5	0.20	139	98.80	<0.01	0.64
CC27673		13.8	1.44	4.57	0.05	<0.02	0.03	0.019	0.05	10.3	2.9	0.05	59	32.40	<0.01	0.53
CC27674		17.1	2.13	8.03	0.06	<0.02	0.03	0.021	0.06	10.3	1.9	0.06	119	70.30	<0.01	1.09
CC27558		189.0	3.01	10.55	0.15	0.10	1.90	0.063	0.22	14.7	10.0	0.29	233	82.40	<0.01	0.46
CC27559		101.5	1.92	5.29	0.10	0.04	0.33	0.029	0.10	17.2	8.7	0.19	366	52.10	<0.01	0.28
CC27560		45.1	1.13	5.22	0.06	<0.02	0.07	0.018	0.04	13.0	1.1	0.03	23	26.50	<0.01	0.28
CC27561		87.4	1.84	4.23	0.14	0.06	0.32	0.024	0.10	17.7	4.6	0.08	119	86.10	<0.01	0.20
CC27562		73.7	3.03	6.69	0.10	0.16	0.38	0.040	0.12	14.1	13.4	0.39	538	37.60	<0.01	0.45
CC27563		128.0	2.23	5.68	0.13	0.09	0.51	0.039	0.11	12.5	9.0	0.15	206	61.30	<0.01	0.23
CC27564		102.5	2.09	5.48	0.14	0.06	0.31	0.036	0.12	14.5	6.5	0.08	32	69.20	<0.01	0.20
CC27565		39.9	5.19	3.51	0.11	0.09	0.19	0.040	0.10	17.4	8.4	0.24	841	6.81	<0.01	0.20
CC27566		30.6	3.33	3.23	0.08	0.05	0.20	0.037	0.08	18.1	6.8	0.16	468	5.72	<0.01	0.20
CC27567		38.2	2.64	3.25	0.08	0.05	0.29	0.039	0.10	19.2	6.6	0.14	121	4.55	<0.01	0.22
CC27568		42.3	3.26	2.97	0.09	0.06	0.26	0.041	0.09	19.2	5.5	0.12	246	6.04	<0.01	0.19
CC27569		20.2	1.03	2.31	0.06	0.03	0.19	0.023	0.07	14.3	3.0	0.08	38	20.90	<0.01	0.15
CC27570		28.9	1.36	4.89	0.05	0.03	0.20	0.028	0.08	13.1	7.4	0.16	57	15.05	<0.01	0.30
CC27571		7.1	0.67	3.44	0.05	<0.02	0.03	0.013	0.07	10.9	3.1	0.09	52	20.20	<0.01	0.50

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

210 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - C

Total # of Tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2	0.005
CC39800		38.6	940	7.9	11.6	0.011	0.14	7.41	1.9	6.1	0.9	24.9	<0.01	0.12	0.7	0.009
CC27651		31.5	790	16.0	12.6	0.002	0.03	2.53	6.2	3.5	0.7	39.5	0.01	0.07	5.9	0.005
CC27652		19.3	880	12.5	11.1	0.002	0.05	1.54	4.0	2.4	0.6	34.0	<0.01	0.06	4.3	<0.005
CC27653		382.0	750	16.5	15.7	0.002	0.06	13.70	5.3	6.8	0.8	143.5	0.01	0.15	1.4	0.014
CC27654		257.0	570	12.7	13.2	<0.001	0.07	15.45	2.6	7.5	0.8	28.6	0.01	0.17	0.8	0.008
CC27655		173.0	490	13.3	12.9	0.002	0.07	16.95	4.9	4.9	0.8	81.2	0.01	0.15	2.7	0.010
CC27656		57.9	3040	8.4	10.1	0.003	0.06	8.65	3.1	4.2	0.8	202.0	<0.01	0.15	2.5	0.006
CC27657		84.7	830	13.0	18.0	0.004	0.09	9.75	3.8	5.6	0.8	59.2	0.01	0.15	1.9	0.009
CC27658		38.7	820	10.9	12.5	0.001	0.08	8.76	2.4	3.7	0.7	20.6	<0.01	0.08	1.3	0.012
CC27659		171.5	1560	15.4	13.7	0.002	0.04	19.85	4.5	8.8	0.7	170.5	0.01	0.17	1.3	0.027
CC27660		112.0	950	10.8	16.5	0.005	0.05	12.65	4.2	6.1	0.9	125.0	<0.01	0.11	1.3	0.013
CC27661		70.3	750	7.6	13.0	0.003	0.08	5.50	4.4	2.5	0.6	94.1	<0.01	0.06	3.6	0.014
CC27662		41.7	710	14.6	17.8	0.012	0.14	1.86	5.8	4.2	0.5	90.7	0.01	0.05	5.1	0.005
CC27663		63.7	750	14.8	15.4	0.009	0.11	1.49	5.6	3.7	0.6	74.3	0.01	0.06	4.5	0.006
CC27664		41.9	330	14.0	12.9	0.014	0.09	8.13	3.4	12.4	1.0	60.9	<0.01	0.13	3.7	<0.005
CC27665		65.8	250	11.3	10.6	0.010	0.20	7.94	5.0	7.9	0.8	66.1	0.01	0.12	4.3	<0.005
CC27666		30.1	230	8.5	11.7	0.025	0.50	5.51	3.7	7.3	0.6	75.5	<0.01	0.05	4.8	<0.005
CC27667		28.4	310	8.8	8.9	0.020	0.12	4.60	1.7	6.1	0.6	60.7	<0.01	0.11	1.2	<0.005
CC27668		11.2	140	8.5	5.6	0.011	0.15	4.16	1.5	6.5	0.6	13.0	<0.01	0.13	1.6	<0.005
CC27669		7.8	200	10.4	7.5	0.007	0.22	6.37	1.7	5.6	0.5	19.0	<0.01	0.13	1.5	0.006
CC27670		6.1	320	11.1	10.6	0.004	0.25	7.12	2.3	6.3	0.7	73.7	<0.01	0.18	1.6	0.005
CC27671		3.1	230	3.3	4.5	0.009	0.05	0.91	0.9	1.0	0.2	6.3	<0.01	0.03	0.5	<0.005
CC27672		36.2	610	13.0	17.4	0.002	0.45	15.30	5.0	14.0	1.0	88.5	<0.01	0.21	3.7	0.020
CC27673		8.4	180	7.9	9.5	0.001	0.03	6.06	1.6	2.2	0.8	10.9	<0.01	0.09	1.5	0.019
CC27674		9.0	230	12.1	12.5	<0.001	0.04	11.60	1.8	2.9	1.1	18.1	<0.01	0.15	1.9	0.033
CC27558		278.0	1590	26.4	29.3	0.011	0.14	57.90	6.4	16.7	1.2	98.1	0.01	0.31	0.8	0.011
CC27559		135.0	980	15.7	16.8	0.002	0.04	29.60	3.6	10.6	0.6	36.5	0.01	0.16	1.1	0.017
CC27560		47.9	460	12.5	5.4	0.002	0.04	12.40	1.7	6.3	0.8	7.4	<0.01	0.14	0.7	0.015
CC27561		167.0	760	16.5	14.7	0.012	0.12	36.90	4.6	17.5	0.6	85.2	0.01	0.23	1.5	0.013
CC27562		145.5	1060	22.5	18.9	0.003	0.07	22.00	5.3	8.8	0.7	25.1	0.01	0.14	1.9	0.020
CC27563		180.5	1010	23.4	18.1	0.004	0.11	40.40	3.3	18.5	0.7	19.9	0.01	0.24	0.7	0.011
CC27564		147.0	730	30.9	19.9	0.004	0.17	40.20	3.5	19.7	0.8	107.5	0.01	0.36	1.0	0.012
CC27565		41.1	940	14.0	14.3	0.003	0.11	1.96	5.2	3.6	0.5	71.3	0.01	0.09	2.8	<0.005
CC27566		30.2	990	13.8	12.4	0.003	0.05	2.05	4.8	3.4	0.8	48.1	<0.01	0.07	4.1	0.005
CC27567		32.2	1030	15.7	13.2	0.004	0.05	2.53	5.8	3.8	0.7	47.7	<0.01	0.08	4.8	0.006
CC27568		33.6	900	15.3	12.5	0.003	0.04	2.47	6.0	4.4	0.8	52.0	0.01	0.08	4.8	0.005
CC27569		25.3	220	11.8	8.4	0.011	0.03	6.21	3.1	5.3	0.6	42.1	<0.01	0.10	3.3	0.005
CC27570		31.5	530	13.3	14.6	0.008	0.04	5.07	2.9	3.4	0.8	34.5	<0.01	0.09	1.6	0.007
CC27571		8.7	210	5.8	9.9	0.005	0.03	1.45	1.8	1.1	0.6	19.3	<0.01	0.05	1.4	0.010

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NiMo

Page: 5 - D

Total # of tests: 5 (A - D)

Finalized Date: 3-AUG-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077184

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.05	1	0.05	0.05	2	0.5
CC39800		1.62	2.87	336	0.23	4.49	89	0.7
CC27651		0.17	2.73	81	0.08	20.30	132	1.2
CC27652		0.14	1.93	76	0.07	13.30	87	0.9
CC27653		5.18	21.10	717	0.41	52.20	1145	2.3
CC27654		2.77	9.97	786	0.47	28.20	701	0.9
CC27655		2.01	11.95	732	0.42	34.60	563	3.1
CC27656		0.63	5.32	231	0.17	20.30	246	1.0
CC27657		1.58	6.25	1005	0.25	20.70	429	0.8
CC27658		0.93	2.48	470	0.19	8.08	250	0.6
CC27659		1.73	9.29	831	0.27	32.80	1230	0.9
CC27660		3.12	4.44	742	0.20	18.45	1025	1.3
CC27661		1.06	4.66	404	0.13	20.30	503	1.0
CC27662		0.26	3.49	94	0.07	21.40	228	2.0
CC27663		0.22	2.72	63	0.08	20.60	275	2.2
CC27664		2.56	4.84	218	0.18	12.15	102	1.2
CC27665		3.31	6.49	151	0.21	23.50	129	3.1
CC27666		2.81	4.26	102	0.16	5.26	70	6.9
CC27667		1.74	2.12	101	0.17	5.21	54	0.9
CC27668		1.78	4.89	87	0.24	7.53	16	2.4
CC27669		3.71	4.53	99	0.33	5.11	19	1.3
CC27670		4.16	7.61	139	0.41	4.77	16	1.5
CC27671		0.68	2.83	35	0.09	2.94	7	<0.5
CC27672		6.39	6.41	263	0.36	8.19	77	2.3
CC27673		0.89	1.75	160	0.21	3.48	32	<0.5
CC27674		1.00	1.76	302	0.35	2.94	35	<0.5
CC27558		10.25	7.39	2260	0.55	50.70	3120	1.7
CC27559		3.51	7.14	1235	0.32	23.30	1125	0.5
CC27560		0.82	4.56	532	0.22	7.99	231	<0.5
CC27561		5.11	9.10	1380	0.42	29.90	791	1.1
CC27562		3.31	5.20	1025	0.28	21.30	2190	3.8
CC27563		4.28	8.84	1510	0.36	37.00	1605	1.7
CC27564		4.35	9.40	1885	0.46	29.80	814	1.2
CC27565		0.21	1.93	70	0.10	20.40	169	1.9
CC27566		0.19	1.97	65	0.12	16.10	127	1.0
CC27567		0.23	2.51	82	0.09	17.15	140	1.2
CC27568		0.22	2.65	78	0.09	20.40	140	1.1
CC27569		1.22	2.29	144	0.14	8.61	58	0.8
CC27570		2.61	2.25	316	0.15	8.38	217	0.8
CC27571		0.79	0.95	91	0.09	3.08	40	0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

C/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Page: 1

Finalized Date: JUL-2007

Account: MTT

CERTIFICATE VA07077183

Project: NIMO

P.O. No.:

This report is for 193 Soil samples submitted to our lab in Vancouver, BC, Canada on 17-JUL-2007.

The following have access to data associated with this certificate:

JOAN MARIACHER

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION
ME-MS41	51 anal. aqua regia ICPMS

To: STRATEGIC METALS LTD.
ATTN: JOAN MARIACHER
C/O ARCHER, CATHRO & ASSOCIATES (1981) LIMITED
1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 2 - A

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39510		0.08	1.11	1.06	14.8	<0.2	<10	3780	0.64	0.20	0.87	5.39	32.70	6.7	24	0.91
CC39511		0.06	2.23	0.94	10.9	<0.2	<10	1360	0.44	0.14	0.24	18.80	16.60	1.9	29	1.18
CC39512		0.04	1.50	0.57	6.3	<0.2	<10	50	0.14	0.08	0.06	1.23	6.21	1.3	17	0.97
CC39513		0.06	0.58	1.33	13.7	<0.2	<10	740	0.58	0.18	0.17	10.80	18.65	9.3	25	0.98
CC39514		0.14	0.35	1.28	20.5	<0.2	<10	870	0.62	0.25	0.17	3.38	20.30	13.4	26	0.88
CC39515		0.12	0.15	1.54	33.1	<0.2	<10	900	1.00	0.24	0.36	2.74	24.10	22.2	29	0.88
CC39516		0.18	0.15	1.81	14.1	<0.2	<10	250	0.73	0.22	0.11	0.35	12.05	11.1	32	1.52
CC39517		0.08	0.07	1.72	20.1	<0.2	<10	190	0.67	0.21	0.15	0.27	6.64	13.0	31	1.21
CC39518		0.20	0.21	1.25	15.9	<0.2	<10	1100	0.70	0.17	0.26	2.04	18.70	12.6	24	0.95
CC39519		0.16	0.30	1.51	17.7	<0.2	<10	1020	0.75	0.22	0.32	2.14	23.90	32.4	28	0.95
CC39520		0.12	0.30	1.52	14.4	<0.2	<10	1030	0.85	0.21	0.39	3.49	21.90	21.1	27	1.03
CC39521		0.14	0.27	1.39	13.7	<0.2	<10	1160	0.76	0.19	0.36	5.33	19.75	27.2	24	1.09
CC39522		0.10	0.32	1.51	17.2	<0.2	<10	1310	0.78	0.22	0.38	3.65	19.90	11.3	28	1.23
CC39523		0.18	0.30	1.60	17.7	<0.2	<10	1020	0.74	0.23	0.27	1.76	20.60	9.4	29	1.43
CC39524		0.16	0.35	1.54	17.5	<0.2	<10	1280	0.84	0.22	0.27	2.48	20.70	11.7	29	1.30
CC39525		0.04	0.41	1.48	24.0	<0.2	<10	1350	0.74	0.22	0.35	2.23	21.20	10.6	27	1.17
CC39526		0.10	0.42	1.75	9.4	<0.2	<10	1130	0.86	0.27	0.43	4.34	16.80	6.6	28	1.80
CC39527		0.08	0.48	1.36	20.2	<0.2	<10	1720	1.27	0.20	0.31	6.51	25.60	12.3	20	0.98
CC39528		0.14	0.61	1.30	16.0	<0.2	<10	1960	1.10	0.22	0.42	9.18	25.70	8.6	24	1.07
CC39529		0.02	0.78	1.13	14.4	<0.2	<10	2350	1.12	0.19	0.30	10.80	30.50	8.7	22	0.93
CC39530		0.08	0.68	1.15	9.0	<0.2	10	530	1.04	0.11	5.43	2.59	34.80	6.4	26	1.24
CC39531		0.14	0.63	1.06	8.0	<0.2	10	370	0.83	0.09	7.95	2.89	32.20	6.1	22	1.20
CC39532		0.10	0.77	1.10	9.5	<0.2	10	270	0.98	0.10	7.60	2.62	34.60	6.7	23	1.30
CC39533		0.08	0.73	0.95	8.5	<0.2	10	270	0.87	0.11	7.36	4.52	33.30	6.2	20	1.14
CC39534		0.10	0.36	1.09	6.5	<0.2	10	420	0.71	0.07	8.58	1.31	33.90	5.0	24	1.00
CC39535		0.08	0.80	1.05	8.1	<0.2	10	330	0.89	0.16	4.31	2.83	37.60	8.1	21	0.94
CC39536		0.10	0.87	1.18	8.7	<0.2	10	370	0.96	0.17	4.62	2.78	40.10	8.0	24	1.06
CC39537		0.14	0.51	1.11	6.8	<0.2	10	340	0.75	0.12	5.97	1.75	38.40	6.9	22	1.09
CC39538		0.02	0.61	1.11	6.7	<0.2	10	390	0.78	0.16	1.40	1.99	40.10	8.1	22	0.94
CC39539		0.20	0.52	1.10	11	<0.2	10	170	0.85	0.08	12.55	1.73	38.50	5.8	25	1.11
CC39540		0.08	0.80	1.12	7.0	<0.2	10	510	0.92	0.11	3.49	3.04	31.10	6.0	25	1.14
CC39541		0.02	0.55	1.14	13.2	<0.2	10	830	0.83	0.12	3.66	2.69	33.20	7.3	26	1.18
CC39542		0.12	0.46	1.13	15.5	<0.2	10	980	0.79	0.14	3.39	2.74	32.80	8.6	27	1.06
CC39543		0.04	0.53	1.12	8.1	<0.2	10	600	0.77	0.11	4.22	2.36	31.70	6.1	25	1.19
CC39544		0.14	0.49	1.21	11.6	<0.2	<10	620	0.80	0.15	3.59	2.46	31.30	8.9	24	1.12
CC39545		0.10	0.05	0.37	7.1	<0.2	<10	120	0.31	0.10	0.09	0.15	12.25	5.3	6	0.66
CC39546		0.02	0.08	0.57	7.7	<0.2	<10	170	0.49	0.12	0.13	0.20	15.10	10.3	8	0.85
CC39547		0.18	0.05	0.49	6.6	<0.2	<10	190	0.31	0.10	0.10	0.09	10.90	2.7	8	0.69
CC39548		0.18	0.09	0.87	8.4	<0.2	<10	280	0.47	0.14	0.17	0.25	13.75	9.8	14	1.07
CC39549		0.10	0.10	0.60	10.5	<0.2	<10	380	0.41	0.12	0.13	0.22	13.55	7.1	10	0.93

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 2 - B

Total # r s: 6 (A - D)

Finalized Date. 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39510		49.1	2.53	2.97	0.08	0.07	0.26	0.035	0.11	18.8	8.2	0.20	183	7.02	0.02	0.23
CC39511		69.9	0.84	3.34	0.07	0.02	0.51	0.023	0.07	9.3	4.6	0.13	48	18.25	0.01	0.34
CC39512		15.1	19.95	2.12	0.16	0.02	0.33	0.008	0.05	3.3	3.4	0.09	27	12.75	0.01	0.30
CC39513		58.8	1.34	3.46	0.06	0.03	0.13	0.035	0.07	9.4	12.3	0.19	54	18.35	0.01	0.35
CC39514		46.1	2.72	3.77	0.06	0.04	0.08	0.037	0.08	10.4	16.4	0.28	96	12.35	0.01	0.35
CC39515		38.9	5.19	4.48	0.07	0.07	0.04	0.043	0.10	12.1	22.0	0.44	825	11.30	0.02	0.32
CC39516		32.4	3.89	5.30	0.05	0.04	0.09	0.044	0.10	5.5	21.5	0.43	182	2.50	0.01	0.19
CC39517		26.0	5.29	5.08	0.05	0.04	0.07	0.045	0.09	2.8	21.9	0.45	234	2.76	0.01	0.12
CC39518		28.4	3.21	3.62	0.05	0.03	0.06	0.033	0.08	9.8	15.6	0.30	178	7.09	0.01	0.22
CC39519		36.0	4.21	4.43	0.08	0.05	0.07	0.038	0.09	12.2	17.1	0.36	317	8.97	0.01	0.42
CC39520		32.6	3.17	4.39	0.06	0.05	0.08	0.035	0.09	11.0	18.1	0.37	602	5.71	0.01	0.35
CC39521		28.3	3.40	3.95	0.06	0.04	0.09	0.032	0.09	10.3	17.3	0.33	1390	6.76	0.01	0.24
CC39522		34.8	3.23	4.32	0.06	0.04	0.11	0.040	0.10	10.3	19.6	0.34	284	7.12	0.01	0.26
CC39523		29.6	3.24	4.83	0.06	0.04	0.10	0.038	0.10	10.6	18.1	0.36	137	7.56	0.01	0.30
CC39524		36.4	3.42	4.49	0.06	0.05	0.11	0.043	0.10	10.4	18.6	0.32	174	5.93	0.01	0.27
CC39525		33.3	4.63	4.16	0.07	0.04	0.12	0.038	0.09	11.0	17.9	0.31	218	11.00	0.02	0.31
CC39526		47.6	2.99	4.79	0.06	0.04	0.20	0.045	0.11	8.4	23.8	0.33	161	5.69	0.02	0.24
CC39527		42.3	3.47	3.53	0.09	0.05	0.14	0.032	0.07	13.8	18.9	0.23	250	10.10	0.03	0.32
CC39528		58.3	1.67	3.74	0.08	0.05	0.16	0.037	0.08	13.9	18.0	0.25	62	7.29	0.03	0.33
CC39529		64.8	1.42	3.13	0.09	0.05	0.20	0.032	0.08	16.9	13.5	0.18	70	6.97	0.04	0.32
CC39530		61.3	1.32	4.45	0.12	0.11	0.11	0.026	0.15	20.3	24.1	1.48	185	3.61	0.01	0.28
CC39531		57.8	1.25	4.05	0.11	0.11	0.11	0.022	0.14	18.0	23.0	1.58	239	2.97	0.01	0.26
CC39532		68.4	1.34	4.25	0.13	0.12	0.13	0.024	0.13	19.2	25.1	1.65	184	4.37	0.01	0.29
CC39533		66.7	1.13	3.91	0.11	0.12	0.11	0.024	0.13	18.6	21.7	1.39	223	3.07	0.01	0.28
CC39534		38.5	1.19	3.65	0.11	0.08	0.06	0.019	0.16	18.6	18.9	1.62	170	2.50	0.01	0.22
CC39535		74.0	1.54	3.75	0.08	0.12	0.15	0.029	0.12	21.2	17.4	0.91	375	2.46	0.01	0.29
CC39536		82.2	1.62	4.14	0.08	0.11	0.17	0.032	0.13	23.1	19.0	0.96	350	2.51	0.01	0.34
CC39537		51.3	1.44	3.98	0.10	0.10	0.10	0.023	0.15	20.6	18.3	1.07	266	2.45	0.01	0.27
CC39538		61.6	1.64	3.82	0.08	0.10	0.13	0.026	0.14	22.5	15.4	0.59	374	1.88	0.01	0.27
CC39539		52.1	1.16	4.46	0.15	0.10	0.07	0.022	0.16	21.5	25.5	1.99	213	4.06	0.01	0.26
CC39540		67.3	1.23	4.11	0.10	0.13	0.13	0.024	0.12	18.2	21.0	1.22	161	1.90	0.01	0.32
CC39541		53.7	1.57	4.22	0.09	0.10	0.09	0.027	0.15	18.3	19.8	1.18	242	5.85	0.01	0.25
CC39542		53.6	1.88	3.99	0.09	0.10	0.09	0.031	0.15	18.5	18.0	1.03	316	6.96	0.01	0.20
CC39543		49.5	1.33	3.97	0.09	0.11	0.09	0.024	0.13	18.0	19.7	1.22	168	3.03	0.01	0.24
CC39544		50.1	1.80	4.14	0.10	0.11	0.09	0.030	0.12	17.8	20.4	1.12	218	4.09	0.01	0.20
CC39545		10.4	1.26	1.16	<0.05	0.02	0.03	0.019	0.05	5.3	5.6	0.07	134	0.62	<0.01	0.11
CC39546		14.4	1.55	1.59	0.05	0.03	0.04	0.023	0.07	6.2	9.1	0.12	204	0.72	<0.01	0.14
CC39547		9.3	1.46	1.20	<0.05	<0.02	0.03	0.018	0.06	4.7	4.9	0.09	74	0.55	<0.01	0.12
CC39548		17.0	1.83	2.64	<0.05	0.02	0.09	0.026	0.07	5.9	13.7	0.19	364	2.28	<0.01	0.17
CC39549		16.0	1.92	1.87	<0.05	0.02	0.16	0.022	0.07	5.9	9.4	0.13	212	3.90	<0.01	0.12

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

70 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 2 - C

Total # of Tests: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th	Ti
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2	0.005
CC39510		48.2	910	12.8	13.0	0.018	0.14	2.91	5.1	5.5	0.4	83.2	0.01	0.07	3.2	0.005
CC39511		39.8	720	9.5	10.0	0.061	0.17	6.50	2.9	12.3	0.4	43.3	<0.01	0.06	0.7	0.011
CC39512		28.1	610	3.2	7.4	0.027	2.05	5.92	2.1	7.9	0.3	16.4	<0.01	0.05	0.9	0.010
CC39513		116.5	570	11.2	10.4	0.018	0.34	3.55	4.0	6.3	0.4	29.6	<0.01	0.04	1.9	0.006
CC39514		82.9	630	13.3	10.0	0.011	0.16	2.70	4.8	4.1	0.4	40.3	<0.01	0.06	3.1	0.006
CC39515		67.0	850	21.5	10.4	0.004	0.07	2.54	5.5	2.7	0.5	56.1	<0.01	0.08	4.5	0.007
CC39516		39.9	460	15.2	13.7	0.001	0.03	0.77	6.1	1.4	0.6	15.8	<0.01	0.05	3.0	<0.005
CC39517		45.9	510	17.8	10.8	0.001	0.04	0.89	5.1	1.0	0.6	17.4	<0.01	0.05	2.3	<0.005
CC39518		45.8	600	13.0	10.2	0.004	0.06	1.82	4.6	2.4	0.4	39.5	<0.01	0.05	3.2	<0.005
CC39519		98.2	680	14.6	11.9	0.005	0.07	2.21	5.5	4.4	0.5	44.1	<0.01	0.06	4.0	0.007
CC39520		54.1	590	13.3	12.9	0.005	0.09	1.68	5.2	2.9	0.5	42.2	<0.01	0.06	3.5	0.006
CC39521		71.1	560	12.2	12.2	0.006	0.07	1.59	4.7	2.9	0.4	37.0	<0.01	0.04	3.2	0.005
CC39522		63.0	640	14.8	13.7	0.009	0.09	1.75	5.5	3.6	0.5	43.1	<0.01	0.06	3.4	<0.005
CC39523		37.3	570	14.7	14.6	0.005	0.06	1.76	5.0	2.9	0.5	31.4	<0.01	0.06	3.4	0.005
CC39524		48.0	670	15.0	13.7	0.007	0.11	1.87	5.9	3.8	0.5	37.3	<0.01	0.05	3.6	<0.005
CC39525		44.1	620	13.5	13.6	0.007	0.10	2.21	5.0	4.3	0.5	42.4	<0.01	0.07	3.4	<0.005
CC39526		40.5	560	18.0	16.6	0.010	0.16	1.38	6.2	3.8	0.6	43.0	0.01	0.05	3.0	<0.005
CC39527		57.7	580	12.4	13.4	0.013	0.14	2.93	4.8	6.3	0.4	47.8	<0.01	0.06	3.8	0.005
CC39528		66.5	640	13.4	14.3	0.017	0.21	2.99	5.7	7.1	0.4	55.7	<0.01	0.05	3.6	0.005
CC39529		74.0	710	12.0	12.7	0.025	0.18	3.25	5.0	8.5	0.4	52.1	<0.01	0.06	3.5	0.006
CC39530		36.7	2650	8.7	19.4	0.004	0.08	2.27	3.9	3.2	0.4	239.0	<0.01	0.05	2.6	0.008
CC39531		33.1	2590	8.1	18.7	0.002	0.07	2.02	3.6	2.9	0.4	359.0	<0.01	0.05	2.3	0.008
CC39532		68.4	2270	9.0	19.6	0.003	0.08	2.17	4.1	3.6	0.4	331.0	<0.01	0.05	2.2	0.009
CC39533		41.4	2150	8.8	17.2	0.002	0.07	2.26	3.8	3.2	0.4	348.0	<0.01	0.05	2.1	0.008
CC39534		21.4	3980	6.6	16.5	0.001	0.04	1.57	2.9	1.7	0.3	367.0	<0.01	0.04	3.0	0.008
CC39535		36.2	2180	11.4	16.0	0.005	0.08	1.83	4.0	3.3	0.4	189.5	<0.01	0.06	2.3	0.008
CC39536		38.7	2280	12.0	17.7	0.004	0.08	1.82	4.4	3.3	0.4	205.0	<0.01	0.07	2.3	0.009
CC39537		28.8	2920	8.8	17.5	0.002	0.05	1.47	3.7	2.3	0.4	246.0	<0.01	0.05	2.9	0.009
CC39538		35.5	2360	10.6	15.3	0.003	0.06	1.28	3.7	2.5	0.4	57.7	<0.01	0.06	2.9	0.008
CC39539		24.1	3990	7.8	18.5	0.002	0.04	2.40	3.4	2.5	0.4	562.0	<0.01	0.05	2.6	0.008
CC39540		37.0	2190	8.6	16.7	0.007	0.11	1.95	3.9	3.7	0.4	155.0	<0.01	0.05	2.6	0.010
CC39541		41.0	2340	9.6	18.2	0.004	0.07	2.75	3.8	2.8	0.4	174.5	<0.01	0.06	3.3	0.007
CC39542		45.2	2100	10.8	17.2	0.005	0.07	2.90	3.8	2.7	0.4	167.0	<0.01	0.07	3.6	0.005
CC39543		34.6	2790	8.3	17.6	0.004	0.07	1.78	3.5	2.5	0.4	188.0	<0.01	0.05	3.0	0.007
CC39544		42.2	2470	10.3	15.8	0.004	0.07	2.00	4.0	2.5	0.4	176.5	<0.01	0.05	3.4	0.005
CC39545		12.2	280	7.5	6.9	<0.001	0.03	0.21	1.7	0.7	0.2	14.9	<0.01	0.03	2.4	<0.005
CC39546		17.1	460	8.8	8.4	<0.001	0.04	0.24	2.4	3.6	0.2	19.2	<0.01	0.03	2.2	<0.005
CC39547		8.8	340	7.4	7.1	<0.001	0.03	0.16	1.6	0.6	0.2	14.0	<0.01	0.02	1.9	<0.005
CC39548		21.6	420	10.2	11.6	0.001	0.03	0.32	2.8	1.2	0.3	18.7	<0.01	0.03	2.4	<0.005
CC39549		18.2	460	8.1	9.3	0.003	0.04	0.40	2.3	2.1	0.3	18.5	<0.01	0.03	2.3	<0.005

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

Project: NIMO

Page: 2 - D

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.02	0.05	1	0.05	0.05	2	0.5
CC39510		0.46	4.00	174	0.10	19.35	355	1.7
CC39511		1.92	4.80	299	0.12	10.80	312	0.5
CC39512		1.22	1.20	299	0.08	7.61	113	<0.5
CC39513		0.67	2.77	180	0.11	13.25	263	0.8
CC39514		0.45	2.56	128	0.10	13.65	224	1.1
CC39515		0.30	1.75	121	0.12	11.75	275	2.4
CC39516		0.24	0.68	52	<0.05	7.46	124	1.0
CC39517		0.18	0.39	48	<0.05	5.53	131	1.0
CC39518		0.32	2.02	103	0.10	9.68	226	1.2
CC39519		0.41	4.71	92	0.10	12.55	399	1.4
CC39520		0.40	2.03	93	0.12	11.35	271	1.5
CC39521		0.38	1.95	94	0.09	9.61	277	0.9
CC39522		0.42	2.26	108	0.10	10.25	288	1.1
CC39523		0.42	1.75	100	0.08	8.66	210	1.0
CC39524		0.46	2.42	107	0.09	11.25	266	1.2
CC39525		0.47	2.61	123	0.09	10.55	278	1.1
CC39526		0.59	1.80	85	0.06	10.25	237	1.0
CC39527		0.49	3.86	123	0.13	16.50	297	1.2
CC39528		0.50	4.52	135	0.08	15.25	310	1.1
CC39529		0.59	5.88	166	0.09	18.90	339	1.2
CC39530		0.29	2.46	135	0.06	19.85	235	3.4
CC39531		0.25	2.05	111	0.06	18.35	246	3.0
CC39532		0.50	4.07	107	0.07	20.00	275	3.3
CC39533		0.22	2.23	100	0.06	19.50	300	3.2
CC39534		0.12	2.14	118	0.07	17.75	177	2.7
CC39535		0.16	2.15	82	0.07	20.60	194	2.9
CC39536		0.18	2.33	89	0.08	21.80	198	2.7
CC39537		0.15	2.10	93	0.06	18.95	182	2.4
CC39538		0.16	2.10	79	0.07	18.60	185	2.4
CC39539		0.13	2.68	131	0.05	21.10	200	3.1
CC39540		0.32	2.27	129	0.05	17.50	265	3.7
CC39541		0.38	2.84	170	0.07	17.25	286	3.3
CC39542		0.39	2.85	174	0.07	16.70	299	3.3
CC39543		0.33	2.40	134	0.06	17.15	245	3.1
CC39544		0.32	2.30	122	0.05	16.60	270	3.3
CC39545		0.05	0.39	13	<0.05	4.71	40	<0.5
CC39546		0.07	0.51	17	0.05	7.94	63	<0.5
CC39547		0.05	0.39	17	<0.05	4.23	34	<0.5
CC39548		0.22	0.53	27	<0.05	6.25	63	<0.5
CC39549		0.44	0.63	22	0.05	5.93	57	0.5

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 3 - A

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39550		0.12	0.16	0.83	16.8	<0.2	<10	570	0.71	0.17	0.30	0.85	17.35	23.2	14	1.11
CC39553		0.12	1.51	1.43	51.8	<0.2	<10	530	0.40	0.36	0.04	0.75	18.30	2.0	34	1.47
CC39554		0.14	0.19	1.03	42.2	<0.2	10	340	0.48	0.24	0.11	2.23	11.65	5.7	21	0.87
CC39555		0.12	1.45	0.36	40.8	<0.2	10	700	0.73	0.16	3.15	17.00	19.40	7.4	42	0.69
CC39556		0.04	1.57	0.27	29.1	<0.2	10	860	0.66	0.12	4.30	12.60	19.25	4.1	37	0.62
CC39557		0.08	1.13	0.28	30.5	<0.2	10	790	0.78	0.12	4.00	9.78	22.80	4.1	34	0.60
CC39558		0.06	0.21	0.29	18.2	<0.2	10	1530	0.53	0.09	3.18	17.75	12.35	5.6	11	0.45
CC39559		0.06	0.36	0.44	31.8	<0.2	10	1550	0.65	0.13	1.89	5.21	13.70	5.4	19	0.59
CC39560		0.12	0.59	0.69	18.6	<0.2	10	4950	0.71	0.19	0.77	2.69	12.55	9.1	22	0.59
CC39561		0.32	0.44	0.53	12.0	<0.2	<10	1310	0.56	0.15	8.26	1.24	23.10	6.0	16	0.95
CC39562		0.06	1.38	0.92	4.7	<0.2	10	5030	0.43	0.12	2.06	1.23	14.20	5.1	17	0.64
CC39563		0.12	2.12	1.19	5.3	<0.2	<10	7750	0.50	0.12	1.26	1.75	19.25	4.3	19	0.81
CC39564		0.10	0.92	1.09	6.1	<0.2	<10	3920	0.38	0.17	0.27	0.86	20.40	4.7	19	0.64
CC39565		0.12	1.27	1.21	6.4	<0.2	<10	5270	0.44	0.17	0.21	0.88	21.70	8.1	22	0.85
CC39566		0.10	0.49	1.20	7.4	<0.2	<10	3960	0.33	0.18	0.18	0.50	19.45	6.9	21	0.71
CC39567		0.10	0.70	1.28	7.6	<0.2	10	9660	0.85	0.17	0.65	0.71	23.80	9.3	22	0.63
CC39568		0.12	0.89	1.15	5.1	<0.2	<10	5230	0.38	0.15	0.46	1.01	12.05	4.5	22	0.78
CC39569		0.04	1.22	0.75	3.4	<0.2	10	6330	0.48	0.09	1.48	1.43	17.75	5.3	13	0.62
CC39570		0.12	2.37	1.50	5.2	<0.2	10	6210	0.71	0.18	0.90	2.51	21.40	9.3	27	1.12
CC39571		0.18	0.61	1.08	8.9	<0.2	<10	3030	0.30	0.20	0.32	0.77	15.45	7.2	22	0.50
CC39572		0.08	1.80	1.18	6.2	<0.2	<10	3840	0.54	0.15	1.57	1.02	15.60	7.2	23	0.73
CC39573		0.14	0.63	0.45	7.8	<0.2	<10	3720	0.24	0.14	0.22	0.47	7.17	4.1	16	0.64
CC39574		0.20	1.24	0.72	12.3	<0.2	<10	4270	0.45	0.20	0.26	1.04	11.80	11.4	35	0.67
CC39575		0.06	1.05	0.44	15.9	<0.2	10	600	0.58	0.09	3.11	8.04	15.85	4.3	27	0.49
CC39576		0.06	0.91	0.34	15.4	<0.2	10	520	0.60	0.09	3.97	6.29	18.80	4.0	26	0.45
CC39577		0.16	0.53	0.78	14	<0.2	10	640	0.56	0.12	11.40	2.04	24.10	7.8	15	1.76
CC39578		0.24	0.70	0.73	27.7	<0.2	10	4930	0.83	0.14	4.74	5.99	26.80	10.0	32	2.85
CC39579		0.16	0.72	0.75	29.9	<0.2	10	4770	0.85	0.15	4.20	9.90	27.90	10.9	34	3.13
CC39580		0.24	0.44	0.70	11	<0.2	10	780	0.49	0.11	11.85	1.27	23.70	7.9	15	1.37
CC39581		0.14	0.42	0.67	11	<0.2	10	650	0.53	0.10	12.35	1.21	23.10	7.4	14	1.29
CC39582		0.16	0.47	0.72	13	<0.2	<10	640	0.54	0.11	12.25	1.28	24.00	8.1	14	1.40
CC39583		0.20	0.35	0.69	11	<0.2	<10	380	0.52	0.09	13.35	1.11	24.10	6.7	13	1.25
CC39584		0.22	0.40	0.79	11	<0.2	<10	230	0.58	0.10	13.00	1.14	24.30	7.0	14	1.47
CC39585		0.14	0.31	0.74	10	<0.2	<10	210	0.54	0.08	14.00	1.11	24.40	6.2	13	1.19
CC39586		0.14	0.49	0.74	9	<0.2	<10	330	0.57	0.10	12.55	1.31	25.20	6.9	17	1.34
CC39587		0.14	0.25	0.75	12	<0.2	<10	180	0.47	0.07	15.75	0.92	22.40	6.0	13	1.15
CC39588		0.08	1.14	1.16	7.3	<0.2	10	230	0.85	0.08	3.64	4.83	32.90	6.2	31	1.67
CC39591		0.24	0.44	0.56	11.6	<0.2	10	1400	0.50	0.12	8.43	1.67	23.00	6.5	17	0.98
CC39592		0.30	0.40	0.52	10.3	<0.2	<10	1410	0.51	0.19	8.80	1.14	23.40	6.1	16	0.91
CC39593		0.22	0.50	0.58	11.1	<0.2	<10	1500	0.57	0.12	8.37	1.35	22.60	6.7	17	1.05

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 3 - B

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39550		26.2	2.96	2.78	0.07	0.03	0.24	0.031	0.08	7.0	12.3	0.20	1125	7.60	0.01	0.15
CC39553		52.2	3.76	5.70	0.20	0.05	0.08	0.066	0.13	10.1	7.1	0.11	54	162.00	0.01	0.59
CC39554		30.9	3.00	3.56	0.07	0.02	0.05	0.036	0.12	7.4	4.3	0.06	46	47.60	<0.01	0.27
CC39555		81.7	1.23	1.81	0.12	0.15	0.50	0.023	0.06	12.0	1.7	0.15	130	45.40	0.02	0.18
CC39556		80.1	0.87	1.43	0.11	0.14	0.61	0.019	0.04	14.8	1.5	0.27	66	30.00	0.02	0.16
CC39557		73.8	1.03	1.60	0.13	0.14	0.55	0.020	0.04	20.1	1.7	0.21	84	39.60	0.02	0.19
CC39558		40.5	0.94	1.28	0.07	0.11	0.25	0.014	0.04	8.3	1.1	0.12	146	34.60	0.03	0.16
CC39559		42.6	1.60	2.02	0.06	0.10	0.28	0.022	0.05	7.7	2.4	0.20	175	32.30	0.02	0.19
CC39560		66.0	3.41	2.16	0.07	0.08	0.25	0.037	0.07	6.7	2.5	0.12	222	29.00	0.08	0.15
CC39561		66.8	1.33	2.01	0.07	0.09	0.17	0.026	0.12	14.3	10.0	2.39	222	4.45	0.02	0.09
CC39562		31.7	1.45	2.39	0.05	0.10	0.18	0.021	0.05	8.2	5.2	0.44	183	2.43	0.10	0.35
CC39563		33.2	1.58	3.44	0.06	0.08	0.18	0.026	0.05	10.7	5.3	0.33	81	2.62	0.13	0.44
CC39564		32.3	1.63	4.11	0.05	0.04	0.09	0.024	0.10	11.2	6.3	0.18	61	2.84	0.06	0.50
CC39565		30.9	2.28	3.82	0.06	0.06	0.12	0.028	0.08	10.6	7.6	0.21	112	3.17	0.08	0.52
CC39566		21.4	2.15	4.38	0.05	0.03	0.07	0.024	0.07	8.8	9.7	0.22	123	2.91	0.05	0.52
CC39567		36.5	2.72	3.68	0.07	0.09	0.10	0.031	0.07	11.5	5.6	0.24	192	8.65	0.14	0.41
CC39568		36.0	1.80	4.73	<0.05	0.06	0.06	0.022	0.06	6.1	2.9	0.21	46	6.72	0.08	0.44
CC39569		23.5	1.38	2.01	0.05	0.07	0.13	0.017	0.04	8.6	2.5	0.30	79	3.51	0.11	0.23
CC39570		46.6	2.45	4.60	0.07	0.07	0.11	0.031	0.07	10.3	5.9	0.31	229	4.10	0.09	0.52
CC39571		25.5	2.69	3.74	0.05	0.06	0.05	0.027	0.09	7.4	6.7	0.24	144	5.71	0.04	0.54
CC39572		34.2	2.01	3.30	0.06	0.10	0.19	0.026	0.06	7.7	6.7	0.39	223	3.58	0.07	0.40
CC39573		30.7	1.64	1.78	<0.05	0.03	0.17	0.019	0.05	3.6	1.2	0.06	36	7.81	0.05	0.12
CC39574		50.5	4.23	2.53	0.07	0.05	0.28	0.033	0.05	5.3	2.7	0.11	148	7.31	0.06	0.25
CC39575		51.1	0.80	1.66	0.09	0.11	0.39	0.017	0.03	9.6	1.7	0.20	107	11.70	0.01	0.20
CC39576		44.6	0.69	1.34	0.09	0.11	0.42	0.015	0.03	11.6	1.7	0.14	108	12.15	0.01	0.16
CC39577		48.0	1.68	2.61	0.10	0.09	0.08	0.020	0.12	12.0	17.7	1.65	208	6.72	0.01	0.17
CC39578		66.6	1.87	3.12	0.10	0.33	0.25	0.032	0.19	13.6	6.3	1.59	168	51.10	0.08	0.12
CC39579		70.5	2.01	2.99	0.11	0.34	0.26	0.034	0.19	14.1	5.0	1.70	184	55.60	0.08	0.09
CC39580		40.4	1.63	2.45	0.09	0.11	0.06	0.020	0.12	12.0	16.1	1.61	192	4.86	0.01	0.13
CC39581		39.0	1.59	2.32	0.09	0.16	0.06	0.019	0.13	11.7	15.1	1.51	190	4.34	0.01	0.11
CC39582		43.6	1.66	2.51	0.09	0.09	0.07	0.021	0.12	12.1	17.7	1.65	195	4.42	0.01	0.15
CC39583		36.0	1.42	2.37	0.09	0.10	0.05	0.017	0.11	12.0	17.4	1.60	182	3.85	0.01	0.13
CC39584		36.1	1.47	2.73	0.10	0.08	0.06	0.018	0.11	12.0	19.8	1.69	194	3.57	0.01	0.19
CC39585		32.7	1.26	2.58	0.09	0.12	0.05	0.016	0.10	11.9	19.0	1.63	177	3.61	0.01	0.14
CC39586		55.2	1.55	2.74	0.09	0.09	0.08	0.021	0.13	12.6	18.9	1.60	190	5.79	0.01	0.16
CC39587		22.7	1.24	2.55	0.09	0.09	0.04	0.015	0.10	11.0	19.3	1.74	193	2.54	0.01	0.17
CC39588		80.9	1.05	4.60	0.12	0.13	0.23	0.017	0.20	17.0	28.6	1.54	185	2.52	0.02	0.42
CC39591		62.4	1.42	2.18	0.07	0.08	0.15	0.022	0.12	12.2	11.0	2.38	227	5.24	0.02	0.10
CC39592		52.8	1.33	2.10	0.07	0.11	0.14	0.022	0.13	12.6	10.7	2.58	231	4.64	0.02	0.08
CC39593		62.9	1.48	2.29	0.07	0.07	0.19	0.024	0.13	12.1	11.8	2.45	226	5.79	0.02	0.10

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

210 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 3 - C

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
	Units LOR	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
CC39550		51.3	640	11.1	11.3	0.005	0.08	0.64	3.5	3.8	0.4	33.2	<0.01	0.06	2.7
CC39553		9.4	860	18.9	19.9	0.001	0.24	28.10	2.9	43.7	0.9	159.0	<0.01	0.34	3.0
CC39554		126.5	380	16.1	14.4	0.002	0.15	6.81	2.7	8.9	0.7	27.7	<0.01	0.12	2.3
CC39555		235.0	570	11.7	6.8	0.014	0.13	10.40	3.3	16.2	0.5	109.5	0.01	0.14	1.3
CC39556		268.0	810	7.9	6.6	0.011	0.19	8.47	2.6	15.4	0.4	157.0	0.01	0.11	0.6
CC39557		270.0	820	8.1	6.8	0.024	0.22	8.29	2.4	17.0	0.5	175.0	0.01	0.09	0.6
CC39558		141.0	490	6.4	5.3	0.009	0.18	9.14	2.1	7.2	0.3	167.5	0.01	0.07	0.6
CC39559		86.8	570	8.7	8.1	0.005	0.12	6.88	3.2	4.2	0.5	109.5	<0.01	0.09	1.4
CC39560		48.9	540	10.0	9.4	0.004	0.11	3.01	5.0	3.3	0.4	78.8	<0.01	0.07	2.3
CC39561		26.9	1540	19.1	8.9	0.009	0.17	2.42	4.1	2.0	0.2	197.0	<0.01	0.05	3.4
CC39562		42.4	900	6.9	5.5	0.004	0.15	1.26	4.7	3.1	0.3	176.5	<0.01	0.03	1.6
CC39563		36.5	1040	6.5	5.2	0.001	0.13	1.12	5.2	3.0	0.4	128.5	<0.01	0.04	1.7
CC39564		26.7	490	9.0	13.7	<0.001	0.04	0.75	3.7	1.7	0.5	38.3	<0.01	0.05	2.5
CC39565		34.9	400	8.4	9.7	0.001	0.05	1.13	4.3	2.2	0.5	32.6	<0.01	0.05	3.5
CC39566		25.4	420	9.3	10.0	0.001	0.05	0.97	3.2	1.4	0.5	32.8	<0.01	0.04	2.5
CC39567		36.9	500	12.1	7.0	0.001	0.04	1.21	5.4	2.9	0.5	73.0	<0.01	0.05	2.4
CC39568		36.1	220	8.8	7.0	0.001	0.04	1.18	3.2	1.5	0.7	52.6	<0.01	0.05	2.1
CC39569		34.3	840	6.3	5.3	0.001	0.13	1.16	3.3	2.5	0.3	149.5	0.01	0.03	1.3
CC39570		60.9	560	12.8	10.5	0.002	0.05	1.21	6.6	2.5	0.6	87.4	<0.01	0.05	2.4
CC39571		32.2	330	11.0	9.0	0.001	0.03	1.28	3.3	1.7	0.4	37.8	<0.01	0.04	2.9
CC39572		48.7	840	9.1	7.7	0.003	0.09	1.33	4.9	4.2	0.4	137.0	<0.01	0.05	1.5
CC39573		28.6	470	7.5	7.7	0.004	0.10	2.13	2.1	2.9	0.3	54.6	<0.01	0.05	1.0
CC39574		70.8	440	14.9	5.9	0.002	0.07	5.13	4.7	5.3	0.5	60.3	<0.01	0.06	2.7
CC39575		146.0	710	5.9	4.1	0.010	0.18	6.58	2.6	11.7	0.3	132.0	0.01	0.08	0.7
CC39576		160.0	700	6.0	4.8	0.011	0.18	5.78	2.4	13.4	0.3	170.0	0.01	0.08	0.5
CC39577		31.3	1370	12.8	11.2	0.006	0.13	2.57	3.6	2.8	0.3	538.0	<0.01	0.05	3.3
CC39578		132.5	1620	10.5	13.4	0.045	0.13	8.86	6.4	7.9	0.8	370.0	0.01	0.09	5.5
CC39579		171.0	2050	10.5	12.8	0.046	0.13	9.85	6.6	10.1	0.9	395.0	0.01	0.10	6.0
CC39580		28.2	1430	11.3	10.3	0.006	0.16	1.90	3.9	2.5	0.2	567.0	<0.01	0.04	3.5
CC39581		26.1	1450	10.8	9.6	0.006	0.17	1.72	3.8	2.5	0.2	575.0	<0.01	0.04	3.6
CC39582		27.6	1380	11.7	10.5	0.005	0.17	1.85	3.9	2.6	0.2	572.0	<0.01	0.05	3.3
CC39583		21.1	1450	10.3	9.5	0.004	0.15	1.56	3.3	2.0	0.2	633.0	<0.01	0.04	3.3
CC39584		22.3	1320	11.2	11.0	0.003	0.10	1.53	3.3	2.2	0.2	607.0	<0.01	0.04	2.7
CC39585		17.2	1420	10.0	9.6	0.003	0.09	1.44	3.1	1.7	0.2	725.0	<0.01	0.04	3.3
CC39586		25.9	1480	10.9	10.6	0.005	0.10	2.05	3.5	2.6	0.3	570.0	<0.01	0.05	3.1
CC39587		13.8	1330	9.1	9.8	0.002	0.08	1.13	3.0	1.4	0.2	775.0	<0.01	0.03	2.8
CC39588		42.2	4800	9.5	19.5	0.007	0.10	3.19	3.1	4.9	0.4	99.6	<0.01	0.06	2.1
CC39591		30.4	1550	17.9	8.4	0.008	0.17	2.63	4.1	2.3	0.3	217.0	<0.01	0.05	3.1
CC39592		26.4	1680	16.7	8.0	0.009	0.19	2.56	4.2	2.1	0.3	227.0	<0.01	0.05	3.1
CC39593		30.3	1440	18.5	8.8	0.010	0.21	2.80	4.2	2.4	0.3	222.0	<0.01	0.05	3.0

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 3 - D

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39550		0.92	1.09	31	0.07	11.35	132	0.6
CC39553		7.84	13.30	499	0.41	12.60	32	2.1
CC39554		2.62	1.86	390	0.15	9.22	374	0.8
CC39555		1.59	11.25	440	0.23	32.20	823	6.4
CC39556		2.05	16.05	350	0.18	36.10	594	7.0
CC39557		2.13	34.00	343	0.21	34.80	522	7.7
CC39558		0.52	21.70	224	0.14	29.30	872	4.0
CC39559		0.60	13.20	275	0.15	19.75	325	3.3
CC39560		0.21	5.60	109	0.08	21.00	167	1.9
CC39561		0.26	1.57	46	0.08	14.35	168	4.2
CC39562		0.11	2.84	52	0.07	14.40	77	2.6
CC39563		0.14	3.28	54	0.10	16.95	79	1.7
CC39564		0.13	1.56	56	0.10	7.80	88	0.9
CC39565		0.13	1.91	67	0.11	8.92	150	1.8
CC39566		0.12	1.17	70	0.10	5.23	112	0.9
CC39567		0.12	3.49	72	0.10	18.50	104	2.0
CC39568		0.18	1.34	88	0.10	4.84	86	1.7
CC39569		0.09	3.25	40	0.06	15.30	57	1.8
CC39570		0.15	3.48	83	0.13	14.80	95	1.6
CC39571		0.13	1.13	85	0.11	4.59	134	2.0
CC39572		0.12	3.61	61	0.08	12.95	101	2.5
CC39573		0.13	1.53	55	0.08	5.71	124	0.7
CC39574		0.20	2.40	143	0.10	10.10	358	1.6
CC39575		1.00	10.30	211	0.12	20.80	406	5.2
CC39576		1.02	41.90	209	0.11	25.20	298	5.5
CC39577		0.21	2.16	71	0.05	13.05	211	4.6
CC39578		0.46	12.25	315	0.21	24.90	502	15.8
CC39579		0.43	14.65	337	0.23	28.90	687	16.2
CC39580		0.12	1.77	50	<0.05	13.25	153	5.6
CC39581		0.09	1.63	50	<0.05	12.60	151	7.6
CC39582		0.11	1.67	49	<0.05	13.00	154	4.7
CC39583		0.10	1.52	45	<0.05	11.55	135	5.7
CC39584		0.12	1.47	46	<0.05	11.95	137	3.6
CC39585		0.09	1.41	45	<0.05	10.95	121	6.2
CC39586		0.13	1.53	56	0.06	12.45	181	5.0
CC39587		0.09	1.22	40	<0.05	10.45	99	4.6
CC39588		0.33	5.05	210	0.07	18.20	433	4.4
CC39591		0.26	1.55	56	0.08	13.05	205	4.0
CC39592		0.20	1.49	52	0.07	13.35	171	5.1
CC39593		0.26	1.62	57	0.09	12.85	203	3.7

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

70 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 4 - A

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39594		0.28	0.43	0.49	10.7	<0.2	<10	1410	0.54	0.12	8.03	1.36	23.50	6.3	15	0.90
CC39595		0.28	0.41	0.52	10.4	<0.2	<10	1640	0.52	0.11	7.75	1.21	22.90	6.3	17	0.93
CC39596		0.36	0.41	0.53	10.6	<0.2	<10	1510	0.52	0.13	8.01	1.23	23.40	6.4	17	0.99
CC39597		0.28	0.44	0.58	11.2	<0.2	<10	1980	0.57	0.12	7.90	1.46	23.50	6.9	19	1.00
CC39598		0.34	0.46	0.57	10.9	<0.2	<10	1220	0.58	0.12	8.18	1.20	24.20	6.9	16	1.06
CC39599		0.40	0.56	0.59	11.8	<0.2	<10	1240	0.61	0.13	8.40	1.28	23.30	7.1	16	1.10
CC39600		0.24	0.51	0.59	10.9	<0.2	<10	1300	0.59	0.12	8.86	1.33	23.60	6.7	17	1.06
CC39724		0.12	0.88	0.74	15.3	<0.2	10	2360	0.50	0.20	0.92	4.33	26.20	7.0	17	0.94
CC39726		0.16	0.56	0.72	10.5	<0.2	10	2520	0.44	0.14	0.83	2.32	28.00	4.6	19	0.86
CC39727		0.18	0.19	1.77	14.4	<0.2	<10	330	0.54	0.27	0.14	0.48	10.60	17.3	31	1.24
CC39728		0.24	0.16	1.97	26.7	<0.2	<10	720	1.62	0.30	0.31	4.85	9.49	200.0	34	2.25
CC39729		0.22	0.30	1.89	21.3	<0.2	<10	1100	1.50	0.31	0.54	6.23	12.80	108.5	31	1.91
CC39730		0.18	0.30	1.91	19.0	<0.2	<10	1190	1.44	0.27	0.49	5.21	15.15	102.0	30	2.11
CC39731		0.20	0.17	1.83	19.9	<0.2	<10	900	1.31	0.26	0.24	3.55	16.15	161.5	30	1.64
CC39732		0.24	0.43	0.88	12.0	<0.2	<10	920	0.55	0.15	9.60	2.22	24.80	9.2	18	1.76
CC39733		0.24	0.42	0.87	14	<0.2	<10	860	0.59	0.14	10.35	2.23	24.00	9.0	18	1.71
CC39734		0.18	0.45	0.87	11.7	<0.2	<10	910	0.65	0.14	9.82	2.45	24.70	9.1	18	1.74
CC39735		0.14	0.40	0.80	11.7	<0.2	<10	580	0.62	0.15	9.03	2.02	27.10	8.8	15	1.64
CC39736		0.30	0.43	0.82	18	<0.2	10	970	0.62	0.13	11.10	2.42	25.60	8.5	18	1.65
CC39737		0.20	0.42	0.75	10	<0.2	<10	840	0.56	0.12	11.20	2.47	23.80	7.9	16	1.49
CC39738		0.24	0.43	0.80	16	<0.2	<10	780	0.58	0.12	11.25	2.30	24.60	7.8	16	1.60
CC39743		0.20	0.29	0.84	12.3	<0.2	<10	300	0.58	0.16	5.26	2.09	22.80	9.2	15	1.11
CC39744		0.22	0.36	0.96	12.9	<0.2	<10	290	0.64	0.17	6.40	2.41	24.50	9.8	17	1.25
CC39745		0.20	0.27	0.85	10.7	<0.2	<10	260	0.54	0.15	5.57	1.90	25.20	8.9	15	1.09
CC39746		0.14	0.40	0.97	10.1	<0.2	<10	290	0.66	0.15	7.49	2.03	25.90	8.4	16	1.30
CC39747		0.20	0.37	0.89	12.3	<0.2	<10	260	0.60	0.17	6.03	2.48	25.10	9.3	17	1.13
CC39748		0.22	0.36	0.87	10.4	<0.2	<10	270	0.64	0.15	6.29	2.25	25.00	8.5	15	1.14
CC39749		0.18	0.30	0.81	11.2	<0.2	<10	270	0.56	0.16	6.00	2.21	25.30	8.5	15	1.01
CC39750		0.14	0.34	0.89	11.5	<0.2	<10	250	0.62	0.17	4.89	2.18	26.20	9.2	16	1.15
CC39751		0.12	0.34	0.95	14.6	<0.2	<10	400	0.64	0.18	5.80	2.83	26.40	9.7	23	1.19
CC39752		0.18	0.32	0.98	11.3	<0.2	<10	240	0.64	0.19	3.68	1.79	33.80	9.1	17	1.19
CC39753		0.12	0.37	0.88	11.0	<0.2	<10	280	0.65	0.15	8.27	2.63	26.90	8.5	15	1.10
CC39754		0.16	0.40	0.89	13.4	<0.2	<10	280	0.60	0.15	7.91	2.91	27.30	8.2	16	1.19
CC39755		0.20	0.40	0.87	12.3	<0.2	<10	300	0.67	0.16	7.46	3.08	29.00	8.5	16	1.08
CC39756		0.24	0.42	0.85	12.1	<0.2	<10	290	0.61	0.15	7.86	3.31	27.10	8.5	16	1.14
CC39757		0.28	0.43	0.86	13.3	<0.2	<10	270	0.60	0.15	7.57	3.58	26.40	8.8	19	1.11
CC39758		0.24	0.24	0.81	8.7	<0.2	<10	190	0.56	0.14	8.52	1.15	28.50	8.1	14	1.05
CC39759		0.16	0.25	0.83	8.2	<0.2	<10	180	0.53	0.13	8.69	1.11	24.30	7.9	14	1.00
CC39760		0.16	0.27	0.87	9.4	<0.2	<10	210	0.58	0.15	9.19	1.29	26.50	8.9	14	1.11
CC39761		0.14	0.30	0.93	9.0	<0.2	<10	210	0.63	0.16	8.49	1.25	25.70	8.7	15	1.24

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 4 - B

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39594		54.3	1.33	1.99	0.08	0.08	0.15	0.023	0.11	12.4	10.2	2.42	219	5.52	0.02	0.10
CC39595		55.0	1.32	2.09	0.07	0.11	0.17	0.022	0.13	12.2	10.1	2.26	220	5.67	0.02	0.08
CC39596		57.2	1.39	2.14	0.07	0.10	0.16	0.023	0.13	12.4	10.8	2.45	224	5.40	0.02	0.08
CC39597		56.2	1.44	2.29	0.08	0.09	0.16	0.023	0.14	12.4	10.9	2.37	224	7.73	0.03	0.09
CC39598		57.4	1.37	2.35	0.08	0.08	0.19	0.022	0.13	13.0	12.8	2.28	226	4.75	0.02	0.09
CC39599		67.0	1.53	2.38	0.08	0.07	0.21	0.025	0.12	12.5	13.3	2.34	225	5.07	0.02	0.11
CC39600		63.4	1.46	2.30	0.07	0.08	0.22	0.024	0.13	12.7	12.7	2.45	238	4.92	0.02	0.10
CC39724		45.2	1.75	2.65	0.07	0.06	0.25	0.028	0.09	12.8	7.5	0.20	204	10.75	0.04	0.21
CC39726		37.6	1.29	2.95	0.06	0.05	0.19	0.022	0.11	14.2	7.1	0.19	116	6.34	0.04	0.17
CC39727		27.8	3.54	5.61	0.05	0.04	0.07	0.040	0.10	5.4	21.5	0.39	379	3.92	0.01	0.24
CC39728		59.9	7.00	5.71	0.09	0.09	0.06	0.061	0.10	4.1	25.1	0.58	4680	8.96	0.02	0.10
CC39729		58.9	5.69	5.49	0.08	0.06	0.11	0.054	0.11	6.0	23.4	0.44	2880	7.22	0.02	0.15
CC39730		58.2	5.59	5.10	0.09	0.09	0.11	0.048	0.10	6.1	22.7	0.45	2820	7.52	0.02	0.15
CC39731		51.0	4.21	5.18	0.08	0.11	0.08	0.051	0.10	6.9	23.8	0.47	4350	7.23	0.02	0.11
CC39732		43.3	1.97	2.87	0.07	0.15	0.06	0.026	0.14	13.8	15.3	1.51	241	8.59	0.02	0.12
CC39733		43.8	1.92	2.79	0.07	0.13	0.07	0.025	0.13	13.3	17.2	1.61	230	8.05	0.02	0.12
CC39734		41.5	1.91	2.78	0.07	0.12	0.07	0.025	0.13	13.8	18.0	1.53	229	8.77	0.02	0.14
CC39735		38.5	1.90	2.57	0.07	0.11	0.06	0.022	0.12	14.7	19.4	1.37	235	6.46	0.02	0.12
CC39736		40.9	1.80	2.68	0.06	0.17	0.08	0.022	0.15	14.3	16.5	1.67	222	8.74	0.02	0.11
CC39737		40.2	1.71	2.44	0.07	0.15	0.08	0.022	0.13	13.4	16.7	1.62	206	8.18	0.02	0.12
CC39738		37.7	1.71	2.59	0.06	0.12	0.07	0.022	0.14	13.8	18.4	1.67	211	7.30	0.02	0.12
CC39743		28.1	2.10	2.50	0.06	0.09	0.05	0.023	0.07	12.2	23.1	0.83	208	5.77	0.01	0.09
CC39744		32.9	2.23	2.86	0.06	0.09	0.07	0.025	0.08	13.0	25.6	1.03	216	6.11	0.01	0.11
CC39745		25.7	2.06	2.44	0.06	0.10	0.05	0.022	0.07	13.6	24.6	0.92	178	4.93	0.01	0.09
CC39746		32.2	1.94	2.95	0.07	0.10	0.06	0.023	0.09	14.3	26.8	1.29	242	4.35	0.01	0.15
CC39747		30.4	2.17	2.58	0.07	0.09	0.06	0.024	0.07	13.5	24.8	0.99	209	6.32	0.01	0.10
CC39748		30.8	1.95	2.60	0.07	0.10	0.06	0.022	0.08	13.7	26.3	1.09	200	4.89	0.01	0.12
CC39749		27.1	2.00	2.42	0.07	0.09	0.05	0.023	0.07	13.4	24.2	0.94	191	5.40	0.01	0.09
CC39750		31.7	2.17	2.65	0.06	0.09	0.05	0.024	0.07	14.1	27.4	0.95	175	5.49	0.01	0.10
CC39751		31.8	2.34	2.78	0.06	0.11	0.06	0.027	0.08	14.2	25.9	0.94	209	8.31	0.01	0.09
CC39752		28.2	2.28	2.89	0.06	0.10	0.05	0.023	0.08	18.1	29.6	0.96	151	4.84	0.01	0.10
CC39753		29.3	1.93	2.64	0.06	0.10	0.06	0.021	0.08	14.5	25.7	1.31	213	5.37	0.01	0.13
CC39754		28.7	1.94	2.69	0.09	0.09	0.08	0.024	0.09	14.2	23.2	1.26	203	6.53	0.01	0.12
CC39755		29.0	2.02	2.55	0.06	0.09	0.07	0.021	0.08	15.8	24.3	1.16	205	6.44	0.01	0.11
CC39756		29.2	1.92	2.57	0.06	0.09	0.08	0.023	0.08	14.7	24.6	1.21	202	6.38	0.01	0.12
CC39757		30.3	1.97	2.56	0.06	0.09	0.08	0.022	0.08	14.5	23.9	1.20	213	7.63	0.01	0.12
CC39758		23.8	1.85	2.45	0.08	0.09	0.03	0.020	0.07	15.2	24.8	1.20	205	3.39	0.01	0.11
CC39759		24.4	1.78	2.44	0.06	0.09	0.04	0.020	0.08	13.1	24.2	1.26	204	3.32	0.01	0.12
CC39760		27.1	2.00	2.53	0.07	0.11	0.04	0.022	0.08	14.4	25.8	1.29	229	3.76	0.01	0.13
CC39761		27.8	1.97	2.76	0.06	0.09	0.05	0.022	0.09	13.9	27.2	1.32	215	3.48	0.01	0.13

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 4 - C

Total # of Tests: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
CC39594		29.6	1620	18.7	7.6	0.009	0.18	2.62	4.2	2.4	0.3	227.0	<0.01	0.05	3.0
CC39595		29.7	1640	16.6	8.0	0.010	0.16	2.63	4.2	2.1	0.3	211.0	<0.01	0.05	3.2
CC39596		29.9	1610	16.7	8.3	0.009	0.19	2.72	4.3	2.4	0.3	225.0	<0.01	0.05	3.1
CC39597		36.4	1570	16.7	9.0	0.010	0.18	2.90	4.4	2.6	0.3	235.0	<0.01	0.05	3.3
CC39598		28.4	1500	18.8	8.8	0.009	0.16	2.58	4.3	2.0	0.3	201.0	<0.01	0.05	3.1
CC39599		31.6	1350	20.8	8.8	0.010	0.20	2.75	4.4	2.5	0.3	208.0	<0.01	0.05	3.0
CC39600		28.7	1490	20.0	8.6	0.009	0.21	2.67	4.4	2.2	0.3	220.0	<0.01	0.06	3.0
CC39724		43.2	620	12.5	10.1	0.020	0.19	3.44	4.2	8.4	0.4	99.2	<0.01	0.09	2.4
CC39726		33.0	750	9.5	10.4	0.021	0.16	2.26	4.0	5.1	0.4	83.4	<0.01	0.08	2.7
CC39727		41.8	540	15.9	13.7	0.001	0.05	0.85	4.7	2.2	0.6	19.0	<0.01	0.05	2.4
CC39728		168.5	570	19.9	12.9	0.008	0.19	1.37	7.1	3.8	0.6	46.9	0.01	0.09	3.5
CC39729		143.0	580	17.8	14.2	0.006	0.14	1.32	7.1	4.3	0.6	53.0	0.01	0.08	3.0
CC39730		155.0	550	16.0	14.4	0.006	0.17	1.29	6.9	4.7	0.5	56.3	0.01	0.07	3.1
CC39731		208.0	540	17.2	12.6	0.007	0.17	1.32	5.9	3.7	0.6	44.7	0.01	0.08	3.2
CC39732		40.8	1460	13.2	11.5	0.009	0.13	2.37	4.0	2.7	0.3	469.0	0.01	0.05	4.6
CC39733		40.1	1430	12.8	11.4	0.007	0.14	2.34	4.0	2.5	0.3	508.0	<0.01	0.05	4.2
CC39734		41.9	1410	12.8	11.6	0.007	0.14	2.55	3.8	2.7	0.3	478.0	<0.01	0.05	4.1
CC39735		34.1	1320	14.1	10.0	0.003	0.09	2.23	3.5	2.2	0.2	417.0	<0.01	0.04	4.3
CC39736		40.6	1530	12.0	11.5	0.009	0.16	2.52	3.8	2.7	0.3	540.0	<0.01	0.05	4.4
CC39737		36.8	1470	11.7	10.3	0.008	0.16	2.71	3.6	2.5	0.3	552.0	<0.01	0.04	4.1
CC39738		33.9	1410	12.3	11.0	0.006	0.13	2.34	3.5	2.3	0.3	544.0	<0.01	0.04	4.0
CC39743		33.9	830	14.6	6.9	0.005	0.07	2.14	3.0	2.0	0.2	302.0	<0.01	0.04	3.9
CC39744		35.7	940	15.5	8.4	0.005	0.08	2.22	3.4	2.4	0.2	355.0	<0.01	0.04	4.0
CC39745		30.2	830	14.0	6.8	0.003	0.06	1.83	2.8	1.7	0.2	308.0	<0.01	0.03	4.1
CC39746		29.4	1090	13.7	9.7	0.003	0.08	1.76	3.4	2.1	0.2	398.0	<0.01	0.04	3.2
CC39747		35.2	900	15.9	7.5	0.005	0.07	2.40	3.1	2.3	0.2	338.0	<0.01	0.04	4.0
CC39748		30.1	950	14.4	7.7	0.003	0.07	1.96	3.0	2.2	0.2	352.0	<0.01	0.03	3.4
CC39749		31.0	900	14.5	6.7	0.004	0.07	2.07	2.8	2.1	0.2	337.0	<0.01	0.03	3.9
CC39750		32.1	880	16.0	7.3	0.003	0.06	2.04	3.1	2.1	0.2	271.0	<0.01	0.03	4.1
CC39751		43.0	880	16.5	7.7	0.007	0.08	2.86	3.3	2.5	0.3	337.0	<0.01	0.04	4.6
CC39752		29.9	870	17.5	7.7	0.002	0.05	1.78	3.1	1.8	0.2	206.0	<0.01	0.03	4.8
CC39753		30.0	1040	14.3	8.4	0.003	0.07	2.15	3.0	2.2	0.2	458.0	<0.01	0.03	3.7
CC39754		33.5	1020	15.7	8.3	0.005	0.06	2.54	2.9	2.4	0.2	459.0	<0.01	0.05	4.1
CC39755		33.0	990	14.6	7.6	0.005	0.07	2.66	2.9	2.5	0.2	415.0	<0.01	0.04	4.0
CC39756		32.8	1000	14.0	8.1	0.005	0.07	2.67	3.0	2.6	0.2	435.0	<0.01	0.04	3.9
CC39757		37.2	950	14.6	7.9	0.006	0.07	3.03	3.0	2.8	0.2	432.0	<0.01	0.04	3.8
CC39758		22.5	1010	13.6	7.4	0.001	0.05	1.28	2.7	1.3	0.2	478.0	<0.01	0.03	3.8
CC39759		22.3	970	13.1	7.7	0.001	0.05	1.21	2.7	1.3	0.2	495.0	<0.01	0.02	3.5
CC39760		25.1	1020	15.2	8.0	0.001	0.06	1.44	2.9	1.5	0.2	507.0	<0.01	0.03	4.0
CC39761		24.6	1010	15.4	8.8	0.001	0.07	1.33	3.0	1.6	0.2	474.0	<0.01	0.03	3.8

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

300 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 4 - D

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39594		0.23	1.66	53	0.08	13.55	193	4.3
CC39595		0.23	1.73	60	0.08	13.05	192	5.4
CC39596		0.22	1.69	57	0.08	13.35	186	4.9
CC39597		0.27	2.19	77	0.09	14.10	212	4.7
CC39598		0.24	1.48	51	0.08	13.15	180	4.4
CC39599		0.26	1.40	48	0.08	13.05	196	3.6
CC39600		0.27	1.41	49	0.10	13.00	199	3.9
CC39724		1.04	4.12	93	0.12	13.45	278	1.8
CC39726		0.84	2.72	128	0.09	12.30	295	1.7
CC39727		0.31	0.67	65	0.08	5.30	131	0.7
CC39728		0.61	1.62	62	<0.05	12.55	662	2.5
CC39729		0.64	1.99	70	0.06	16.25	590	1.2
CC39730		0.65	2.00	67	0.06	27.20	628	1.4
CC39731		0.53	1.42	67	0.06	30.70	518	2.0
CC39732		0.21	2.63	88	0.05	15.15	233	6.7
CC39733		0.21	2.47	85	0.05	14.60	231	6.0
CC39734		0.23	2.48	87	0.05	14.50	263	5.3
CC39735		0.20	1.84	66	0.07	13.45	208	5.3
CC39736		0.19	2.65	96	0.06	15.20	243	7.6
CC39737		0.17	2.42	79	0.05	14.65	240	6.8
CC39738		0.19	2.19	79	0.05	13.95	225	6.3
CC39743		0.18	1.44	58	<0.05	10.55	212	3.7
CC39744		0.20	1.57	62	<0.05	12.15	232	3.5
CC39745		0.15	1.24	46	<0.05	10.50	194	3.7
CC39746		0.18	1.38	53	0.05	12.75	193	3.2
CC39747		0.19	1.54	60	<0.05	11.85	235	3.4
CC39748		0.18	1.37	48	<0.05	11.90	203	3.2
CC39749		0.16	1.37	51	<0.05	10.95	214	3.4
CC39750		0.17	1.28	49	<0.05	11.75	212	3.4
CC39751		0.22	1.72	77	0.05	11.90	270	4.5
CC39752		0.15	1.16	46	<0.05	12.20	187	3.3
CC39753		0.18	1.43	55	0.05	12.55	241	3.4
CC39754		0.20	1.45	65	0.06	11.65	260	3.6
CC39755		0.20	1.55	66	<0.05	12.35	272	3.5
CC39756		0.20	1.52	66	0.05	12.30	283	3.5
CC39757		0.21	1.63	73	0.05	12.55	307	3.6
CC39758		0.10	1.12	30	<0.05	11.15	121	3.8
CC39759		0.10	1.13	32	<0.05	11.00	119	3.4
CC39760		0.10	1.24	34	<0.05	12.00	133	4.1
CC39761		0.11	1.22	33	<0.05	12.40	131	3.4

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST
VANCOUVER BC V6B 1L8

Project: NIMO

Page: 5 - A

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr	Cs
		kg	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39762		0.22	0.29	0.88	9.0	<0.2	<10	210	0.58	0.15	8.90	1.27	25.50	8.5	14	1.18
CC39763		0.10	0.28	0.92	8.7	<0.2	<10	210	0.63	0.14	9.91	1.16	26.40	8.4	14	1.22
CC39764		0.22	0.19	0.78	8.7	<0.2	<10	190	0.50	0.14	8.44	1.17	33.30	8.4	13	0.96
CC39765		0.26	0.26	0.91	8.7	<0.2	<10	200	0.63	0.14	9.87	1.09	25.50	8.1	14	1.16
CC39766		0.16	0.23	0.85	9.0	<0.2	<10	200	0.55	0.15	9.57	1.11	25.10	8.7	15	1.13
CC39784		0.24	0.43	1.21	9.8	<0.2	10	720	0.85	0.16	3.39	1.65	38.80	8.6	25	0.92
CC39785		0.10	0.66	1.08	8.2	<0.2	10	1070	0.83	0.14	3.50	2.29	35.30	7.8	23	1.15
CC39786		0.14	0.56	1.08	9.3	<0.2	10	1070	0.89	0.15	3.69	2.07	37.20	7.7	24	1.09
CC39787		0.22	0.53	1.06	8.8	<0.2	10	1870	0.80	0.14	3.83	1.72	36.70	7.3	23	1.01
CC39788		0.24	0.68	1.01	11.9	<0.2	10	2400	0.77	0.15	3.63	3.06	35.90	7.8	24	1.08
CC39789		0.36	0.63	0.78	16.8	<0.2	10	3050	0.66	0.17	3.32	5.02	34.00	9.1	22	1.06
CC39790		0.14	0.52	0.72	18.6	<0.2	10	2340	0.74	0.15	2.81	6.27	30.90	7.5	21	0.94
CC39791		0.14	0.59	0.74	20.8	<0.2	10	2770	0.62	0.17	2.86	5.29	31.10	8.7	25	0.95
CC39792		0.16	0.63	0.71	19.9	<0.2	<10	2440	0.63	0.16	2.91	5.99	28.90	8.2	22	0.92
CC39793		0.24	0.61	0.71	19.2	<0.2	10	2020	0.67	0.15	2.76	4.80	26.90	6.6	21	0.94
CC39794		0.36	0.62	0.66	25.7	<0.2	10	2290	0.71	0.19	2.31	4.98	26.60	8.2	24	0.98
CC39795		0.34	0.61	0.63	28.5	<0.2	10	1850	0.67	0.18	2.04	5.11	23.60	7.7	21	0.96
CC39796		0.26	0.58	0.74	22.3	<0.2	10	1560	0.65	0.16	2.23	5.53	23.50	8.9	21	1.08
CC39797		0.28	0.51	0.79	22.4	<0.2	<10	1750	0.66	0.18	1.96	6.80	23.90	18.9	21	1.15
CC39798		0.26	0.55	0.87	29.3	<0.2	10	1670	0.76	0.21	1.57	7.52	21.40	18.1	23	1.23
CC39601		0.16	0.56	0.11	14.4	<0.2	10	440	0.13	0.14	0.05	0.17	3.39	1.1	5	0.83
CC39602		0.28	0.43	0.16	25.4	<0.2	<10	360	0.23	0.19	0.06	0.27	4.87	3.1	8	0.86
CC39603		0.22	0.29	0.21	16.7	<0.2	<10	610	0.16	0.13	0.03	0.20	4.61	1.6	10	0.61
CC39604		0.16	0.48	0.18	31.0	<0.2	<10	450	0.27	0.15	0.06	1.17	4.38	3.1	11	0.79
CC39606		0.24	0.50	0.31	49.0	<0.2	<10	260	0.33	0.15	0.01	0.83	4.78	0.9	38	1.10
CC39607		0.08	0.58	0.42	63.2	<0.2	<10	150	0.21	0.14	0.02	0.57	4.21	1.1	62	1.04
CC39608		0.12	0.58	0.29	48.2	<0.2	<10	310	0.20	0.15	0.02	0.55	4.41	1.2	36	1.12
CC39609		0.12	0.58	0.28	41.5	<0.2	<10	300	0.22	0.15	0.01	0.75	5.19	1.2	31	1.24
CC39610		0.14	0.64	0.39	38.5	<0.2	<10	480	0.26	0.18	0.02	0.70	7.45	2.7	24	1.47
CC39611		0.20	0.62	0.52	60.6	<0.2	<10	400	0.23	0.16	0.02	0.62	5.68	1.5	35	1.27
CC39612		0.16	0.56	0.30	40.1	<0.2	<10	380	0.21	0.16	0.02	0.55	5.78	1.5	27	1.30
CC39613		0.18	0.64	0.43	52.2	<0.2	<10	310	0.34	0.17	0.02	1.63	6.11	2.1	26	1.17
CC39614		0.12	0.65	0.39	50.4	<0.2	<10	320	0.26	0.15	0.02	0.85	5.37	2.1	40	1.25
CC39615		0.28	0.60	0.45	45.7	<0.2	<10	400	0.39	0.17	0.02	1.38	6.07	1.9	26	1.16
CC39616		0.20	0.71	0.79	70.7	<0.2	<10	140	0.59	0.22	0.04	2.47	6.74	3.8	28	1.21
CC39617		0.22	0.70	0.78	55.6	<0.2	<10	280	0.58	0.18	0.05	2.91	6.54	3.0	26	1.15
CC39618		0.18	0.55	0.51	38.1	<0.2	<10	380	0.33	0.15	0.02	1.25	5.97	2.0	23	1.18
CC39619		0.20	0.77	0.94	42.7	<0.2	<10	480	0.58	0.16	0.12	5.18	6.65	3.4	30	1.24
CC39632		0.18	0.68	0.98	20.7	<0.2	10	4940	0.87	0.14	6.34	9.95	26.80	8.6	34	1.43
CC39633		0.20	0.83	0.83	25.6	<0.2	10	5850	0.72	0.18	3.82	20.40	27.10	10.9	33	1.23

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

100 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 5 - B

Total # of Tests: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.05	0.1	0.01	5	0.05	0.01	0.05
CC39762		26.0	1.92	2.59	0.06	0.09	0.04	0.022	0.08	13.9	25.8	1.31	215	3.45	0.01	0.13
CC39763		25.5	1.88	2.71	0.06	0.09	0.04	0.021	0.09	14.4	26.6	1.46	226	3.31	0.01	0.14
CC39764		21.1	1.92	2.27	0.06	0.11	0.02	0.020	0.07	17.8	23.7	1.04	196	3.28	0.01	0.09
CC39765		25.7	1.79	2.66	0.06	0.09	0.04	0.021	0.10	14.0	26.0	1.45	213	3.24	0.01	0.14
CC39766		24.0	1.93	2.47	0.06	0.10	0.05	0.022	0.08	13.5	25.3	1.26	226	3.54	0.01	0.11
CC39784		38.3	2.05	4.04	0.08	0.12	0.08	0.029	0.19	21.5	19.6	2.10	220	4.64	0.02	0.22
CC39785		52.7	1.65	3.71	0.08	0.11	0.13	0.027	0.20	20.4	20.0	2.04	234	3.33	0.02	0.25
CC39786		45.7	1.79	3.61	0.08	0.12	0.11	0.030	0.20	21.4	19.4	2.15	238	4.29	0.02	0.22
CC39787		42.3	1.81	3.62	0.08	0.11	0.10	0.027	0.20	21.2	17.8	2.24	220	4.26	0.03	0.19
CC39788		46.8	2.10	3.37	0.09	0.11	0.12	0.031	0.19	20.8	16.0	2.14	182	6.91	0.04	0.18
CC39789		53.9	2.21	2.58	0.08	0.11	0.13	0.033	0.16	19.9	9.7	1.76	247	19.15	0.06	0.12
CC39790		53.3	1.98	2.63	0.09	0.10	0.10	0.030	0.15	18.1	9.2	1.42	222	20.60	0.04	0.13
CC39791		63.0	2.20	2.60	0.10	0.12	0.11	0.035	0.16	18.0	8.3	1.47	257	23.60	0.05	0.12
CC39792		66.2	2.11	2.45	0.09	0.10	0.12	0.032	0.14	17.0	9.0	1.49	238	21.70	0.05	0.13
CC39793		61.3	1.84	2.59	0.08	0.08	0.12	0.030	0.15	15.8	8.8	1.42	183	17.90	0.04	0.12
CC39794		70.8	2.05	2.71	0.09	0.10	0.12	0.035	0.15	15.6	6.9	1.10	215	22.60	0.04	0.11
CC39795		72.1	2.07	2.57	0.09	0.11	0.11	0.038	0.15	13.7	6.2	0.96	196	22.60	0.03	0.10
CC39796		62.7	2.20	2.57	0.08	0.08	0.11	0.034	0.14	13.7	8.5	1.17	206	16.85	0.03	0.12
CC39797		64.7	2.42	2.65	0.07	0.08	0.10	0.034	0.14	13.9	8.9	0.98	412	16.75	0.03	0.10
CC39798		66.6	2.71	2.69	0.08	0.11	0.09	0.041	0.12	12.2	9.1	0.82	384	19.80	0.03	0.09
CC39601		25.7	1.40	0.93	0.05	0.10	0.32	0.024	0.20	1.7	0.5	0.02	89	40.70	0.01	<0.05
CC39602		36.8	1.87	1.80	0.06	0.09	0.46	0.029	0.24	2.3	1.1	0.02	244	40.90	0.01	0.05
CC39603		39.4	1.59	1.35	<0.05	0.02	0.42	0.018	0.14	2.2	1.2	0.03	41	21.40	0.01	<0.05
CC39604		51.5	1.72	1.59	0.06	0.11	0.26	0.027	0.20	2.1	1.2	0.03	187	41.60	0.01	0.05
CC39606		74.0	4.84	4.08	0.10	0.05	0.35	0.067	0.16	2.2	1.5	0.02	35	57.60	<0.01	0.08
CC39607		73.2	9.88	5.32	0.17	0.05	0.31	0.101	0.15	1.8	1.1	0.02	49	77.60	<0.01	0.10
CC39608		68.3	6.12	3.58	0.12	0.06	0.35	0.060	0.17	2.0	1.2	0.02	57	67.60	0.01	0.08
CC39609		72.6	5.52	3.37	0.11	0.05	0.36	0.064	0.16	2.4	1.4	0.02	53	64.60	0.01	0.08
CC39610		73.5	3.77	3.16	0.09	0.03	0.46	0.051	0.17	3.5	3.0	0.05	121	62.30	0.01	0.10
CC39611		73.6	4.63	3.38	0.13	0.07	0.39	0.066	0.17	2.8	1.7	0.03	60	79.10	0.01	0.09
CC39612		66.7	4.28	3.32	0.10	0.04	0.39	0.051	0.16	2.8	1.8	0.03	62	57.50	0.01	0.09
CC39613		99.9	3.72	3.06	0.11	0.09	0.39	0.053	0.20	2.9	1.6	0.02	72	73.20	0.01	0.11
CC39614		80.6	5.92	3.91	0.13	0.05	0.41	0.071	0.15	2.4	1.9	0.03	88	74.10	0.01	0.11
CC39615		108.0	3.41	2.85	0.11	0.09	0.41	0.054	0.17	2.9	1.4	0.02	69	67.00	0.01	0.10
CC39616		141.0	4.27	3.56	0.15	0.15	0.37	0.069	0.32	3.0	2.9	0.04	114	95.20	0.01	0.14
CC39617		145.5	3.40	3.14	0.12	0.11	0.38	0.058	0.22	3.1	1.9	0.03	89	76.90	0.01	0.14
CC39618		97.8	3.19	2.73	0.10	0.05	0.36	0.046	0.16	2.8	2.0	0.03	74	57.70	0.01	0.10
CC39619		146.5	3.16	2.93	0.10	0.07	0.41	0.046	0.16	3.3	2.6	0.05	98	62.10	0.01	0.24
CC39632		60.1	1.94	3.48	0.09	0.11	0.18	0.028	0.20	15.4	10.6	1.97	242	32.20	0.09	0.28
CC39633		69.4	2.22	2.99	0.09	0.11	0.24	0.032	0.18	15.3	6.3	1.68	244	42.30	0.10	0.23

Comments: Interference: Ca>10% on ICP-MS As, ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

10 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 5 - C

Total # r : 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
CC39762		23.6	990	14.3	8.3	0.001	0.06	1.30	2.9	1.6	0.2	500.0	<0.01	0.03	3.7
CC39763		23.3	1070	13.9	9.3	<0.001	0.07	1.22	3.0	1.4	0.2	568.0	<0.01	0.03	3.6
CC39764		22.1	990	13.9	6.0	<0.001	0.05	1.13	2.5	1.1	0.2	482.0	<0.01	0.03	4.5
CC39765		21.8	1130	13.6	8.9	<0.001	0.07	1.20	3.0	1.4	0.2	600.0	<0.01	0.03	3.5
CC39766		23.3	1060	14.5	8.0	<0.001	0.06	1.20	2.7	1.3	0.2	546.0	<0.01	0.03	4.0
CC39784		39.4	2860	43.0	14.9	0.003	0.06	2.33	3.2	2.2	0.4	54.2	<0.01	0.07	3.8
CC39785		39.3	3330	34.5	15.2	0.004	0.09	2.04	3.5	2.7	0.4	60.8	<0.01	0.06	2.9
CC39786		39.5	3060	40.0	14.9	0.005	0.11	2.53	3.5	2.6	0.4	67.2	<0.01	0.07	3.3
CC39787		37.3	2990	30.7	14.5	0.007	0.12	2.26	3.6	2.5	0.3	76.8	<0.01	0.07	3.7
CC39788		53.0	2440	30.1	13.7	0.013	0.14	2.95	4.0	3.2	0.3	102.5	<0.01	0.07	3.7
CC39789		82.6	1500	21.6	11.0	0.027	0.14	3.66	4.5	4.0	0.4	146.0	<0.01	0.09	4.1
CC39790		80.2	1860	22.2	11.6	0.021	0.11	4.82	3.7	4.7	0.4	122.5	<0.01	0.09	3.5
CC39791		79.8	1670	20.6	10.9	0.028	0.14	5.37	4.2	5.1	0.4	149.0	<0.01	0.11	4.0
CC39792		80.0	1660	21.5	10.4	0.025	0.14	5.09	4.1	5.2	0.4	141.5	<0.01	0.10	3.5
CC39793		64.1	1690	20.3	11.0	0.025	0.15	4.24	3.9	5.4	0.4	124.5	<0.01	0.10	3.0
CC39794		72.0	1360	20.1	10.8	0.034	0.18	5.16	4.6	6.9	0.5	137.5	<0.01	0.13	3.5
CC39795		67.4	1270	19.6	10.5	0.035	0.22	4.86	4.6	7.1	0.5	123.5	<0.01	0.12	3.3
CC39796		64.3	1410	19.6	10.7	0.023	0.22	4.18	4.2	6.3	0.4	100.5	<0.01	0.11	3.0
CC39797		69.0	1500	19.6	10.8	0.024	0.21	3.97	4.3	5.5	0.4	102.0	<0.01	0.11	3.4
CC39798		79.5	1080	20.5	10.2	0.030	0.22	4.66	5.3	6.3	0.5	107.0	<0.01	0.12	3.7
CC39601		4.5	110	9.5	10.4	0.028	0.56	3.25	0.9	6.7	0.4	24.6	<0.01	0.08	1.6
CC39602		7.9	190	10.6	12.3	0.029	0.68	2.84	1.5	8.0	0.5	35.4	<0.01	0.13	2.1
CC39603		5.2	230	7.5	6.4	0.013	0.37	1.83	1.2	5.4	0.3	23.6	<0.01	0.10	1.2
CC39604		11.8	290	10.0	11.4	0.029	0.60	2.99	1.7	8.0	0.5	31.8	<0.01	0.13	2.0
CC39606		6.8	880	9.4	9.4	0.028	0.75	8.10	3.6	11.1	0.5	28.4	<0.01	0.16	2.1
CC39607		6.8	2680	9.3	9.3	0.024	1.16	12.25	6.2	15.2	0.5	34.4	<0.01	0.19	2.5
CC39608		7.9	1280	10.0	10.1	0.032	0.84	10.10	4.0	14.3	0.5	32.9	<0.01	0.18	2.4
CC39609		6.8	1110	9.5	10.2	0.031	0.77	9.25	3.7	13.6	0.5	31.7	<0.01	0.19	2.3
CC39610		9.1	860	11.5	11.5	0.028	0.58	6.93	3.4	12.5	0.5	32.9	<0.01	0.16	1.9
CC39611		12.7	1450	10.8	10.6	0.030	0.74	11.05	5.0	16.1	0.6	54.4	<0.01	0.19	2.7
CC39612		8.8	1020	10.3	10.0	0.029	0.64	7.91	3.7	12.5	0.5	32.9	<0.01	0.16	2.2
CC39613		22.5	900	12.3	11.9	0.035	0.72	10.40	3.5	17.0	0.6	48.0	<0.01	0.21	2.6
CC39614		15.6	1550	10.0	9.4	0.027	0.74	10.70	4.7	14.6	0.5	32.9	<0.01	0.19	2.2
CC39615		17.5	810	11.6	10.4	0.034	0.62	9.25	3.8	15.1	0.6	39.1	<0.01	0.19	2.5
CC39616		29.4	1030	15.1	16.2	0.032	1.08	11.40	4.7	21.6	0.8	71.2	<0.01	0.24	3.1
CC39617		32.8	860	12.4	12.3	0.034	0.75	10.40	4.4	17.2	0.6	54.3	<0.01	0.22	2.7
CC39618		16.0	710	10.3	9.5	0.029	0.56	7.82	3.2	12.8	0.5	35.6	<0.01	0.15	2.1
CC39619		49.6	760	11.2	9.9	0.030	0.60	11.00	4.1	13.8	0.5	49.3	<0.01	0.17	2.3
CC39632		116.0	1670	10.3	15.5	0.025	0.12	6.13	5.2	6.2	0.6	382.0	<0.01	0.08	3.9
CC39633		190.0	1270	10.9	13.0	0.033	0.12	7.71	6.2	8.0	0.7	349.0	0.01	0.09	4.5

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 5 - D

Total # 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Tl	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39762		0.11	1.18	33	<0.05	11.85	130	3.6
CC39763		0.11	1.20	34	<0.05	12.05	120	3.5
CC39764		0.08	1.14	30	<0.05	10.35	120	5.2
CC39765		0.11	1.26	35	<0.05	12.10	114	3.7
CC39766		0.10	1.18	30	<0.05	11.65	115	4.1
CC39784		0.15	1.90	108	0.09	15.95	285	2.7
CC39785		0.19	1.98	108	0.08	17.70	274	2.5
CC39786		0.17	2.04	112	0.09	17.35	287	2.7
CC39787		0.16	1.96	98	0.06	16.90	261	2.6
CC39788		0.25	2.17	108	0.08	17.80	337	2.7
CC39789		0.46	3.00	111	0.12	18.10	434	3.5
CC39790		0.76	3.40	179	0.14	18.45	431	3.4
CC39791		0.75	3.58	162	0.14	18.15	422	4.3
CC39792		0.88	3.32	151	0.14	17.80	437	3.2
CC39793		0.92	3.20	149	0.13	16.10	358	2.7
CC39794		1.02	3.71	159	0.16	15.55	366	3.7
CC39795		1.07	3.68	155	0.15	14.60	342	4.0
CC39796		0.89	3.26	138	0.13	14.20	336	2.6
CC39797		0.87	3.41	139	0.12	14.80	348	2.9
CC39798		0.78	3.69	132	0.13	13.65	372	4.0
CC39601		1.86	2.64	116	0.19	1.52	13	4.4
CC39602		2.58	3.37	99	0.22	2.67	16	4.6
CC39603		1.73	2.45	68	0.12	2.12	17	1.0
CC39604		2.23	4.25	99	0.22	3.51	22	4.8
CC39606		2.79	13.25	931	0.21	7.56	19	2.4
CC39607		2.68	10.30	1190	0.22	8.44	23	2.1
CC39608		2.47	9.73	521	0.25	6.60	20	3.1
CC39609		2.71	9.93	476	0.23	6.91	21	2.1
CC39610		3.10	9.24	284	0.23	8.95	27	0.7
CC39611		3.02	12.20	389	0.26	7.50	23	3.2
CC39612		2.77	8.91	350	0.22	6.69	23	1.5
CC39613		3.09	10.60	278	0.29	9.19	70	4.3
CC39614		2.85	10.35	503	0.24	8.99	46	1.5
CC39615		2.85	14.80	249	0.28	9.09	63	4.1
CC39616		4.62	19.10	266	0.35	12.20	130	6.9
CC39617		3.27	19.70	267	0.31	11.85	163	5.5
CC39618		2.76	14.40	241	0.22	8.22	70	2.0
CC39619		2.71	18.40	356	0.25	13.40	418	2.8
CC39632		0.65	6.95	312	0.18	24.60	705	3.8
CC39633		0.78	8.99	303	0.23	28.20	1230	4.3

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 6 - A

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	WEI-21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt. kg	Ag ppm	Al %	As ppm	Au ppm	B ppm	Ba ppm	Be ppm	Bi ppm	Ca %	Cd ppm	Ce ppm	Co ppm	Cr ppm	Cs ppm
		0.02	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1	0.05
CC39634		0.16	0.66	0.85	29.4	<0.2	10	7630	0.84	0.16	5.10	7.90	24.20	10.3	30	1.20
CC39635		0.18	1.14	0.78	28.7	<0.2	<10	4170	0.66	0.27	1.68	17.65	35.40	8.3	32	1.05
CC39636		0.22	0.72	0.64	15.9	<0.2	<10	3940	0.51	0.22	1.28	2.75	28.30	10.6	22	1.24
CC39637		0.18	0.45	0.51	10.4	<0.2	<10	1380	0.46	0.12	8.40	1.23	21.70	5.8	15	0.82
CC39638		0.22	0.48	0.53	10.8	<0.2	<10	1230	0.46	0.14	8.59	1.29	21.10	5.9	14	0.88
CC39639		0.10	0.35	0.81	10	<0.2	<10	270	0.51	0.09	10.85	1.30	25.20	5.0	14	1.03
CC39640		0.14	0.48	0.90	9	<0.2	10	260	0.65	0.10	11.30	1.71	26.40	6.4	15	1.18
CC39641		0.18	0.26	0.72	8	<0.2	<10	210	0.50	0.11	11.65	1.31	28.40	6.0	13	0.89
CC39642		0.16	0.28	0.80	9	<0.2	<10	210	0.41	0.07	11.85	1.00	22.00	4.6	14	0.71
CC39643		0.20	0.29	0.73	8	<0.2	<10	210	0.50	0.09	12.40	1.28	28.60	6.3	13	0.86
CC39644		0.24	0.29	0.77	10	<0.2	<10	300	0.51	0.08	14.15	1.38	27.90	6.3	15	0.80
CC39645		0.14	0.40	0.91	10	<0.2	<10	220	0.59	0.09	11.30	1.37	29.00	6.4	15	0.99
CC39646		0.14	0.42	0.86	14	<0.2	<10	210	0.58	0.09	12.75	1.41	29.30	6.5	15	1.08
CC39647		0.32	0.41	0.90	12	<0.2	<10	490	0.55	0.09	15.10	1.73	26.60	6.6	18	0.83
CC39648		0.18	0.31	0.79	9	<0.2	<10	200	0.51	0.08	13.95	1.33	29.50	6.0	14	0.93
CC39649		0.08	0.32	0.83	8	<0.2	<10	180	0.50	0.08	14.05	1.34	28.60	6.0	15	0.93
CC39650		0.08	0.38	0.84	11	<0.2	<10	190	0.53	0.10	10.50	1.38	26.40	6.1	15	1.12
CC39651		0.22	0.24	0.85	7.5	<0.2	<10	170	0.54	0.10	8.76	0.95	31.20	6.5	14	0.99
CC39652		0.16	0.38	0.88	10.1	<0.2	<10	410	0.59	0.11	8.07	1.38	27.90	6.6	16	0.98
CC39653		0.14	0.31	0.87	12.4	<0.2	<10	500	0.52	0.13	8.57	1.44	26.50	6.6	16	1.01
CC39654		0.08	0.36	0.90	9.9	<0.2	<10	410	0.58	0.11	8.73	1.55	26.90	6.9	16	1.12
CC39655		0.16	0.33	0.86	10.5	<0.2	<10	450	0.54	0.12	8.25	1.46	26.90	7.1	16	1.07
CC39621		0.22	0.47	0.59	12.5	<0.2	<10	1640	0.52	0.20	8.51	1.84	21.40	6.4	18	0.96
CC39622		0.22	0.51	0.56	12.2	<0.2	<10	1490	0.52	0.14	8.08	1.67	21.60	6.7	16	0.94
CC39623		0.22	0.50	0.55	11.6	<0.2	<10	1250	0.48	0.14	8.74	1.28	20.90	6.2	15	0.88
CC39624		Not Recvd														
CC39625		Not Recvd														
CC39626		0.26	0.56	0.82	15.7	<0.2	10	2660	0.65	0.13	9.45	5.11	24.60	7.1	25	1.21
CC39627		0.22	0.71	0.87	17.0	<0.2	10	2480	0.68	0.14	7.84	5.68	25.10	7.3	26	1.39
CC39663		0.30	0.48	0.52	10.9	<0.2	<10	1220	0.46	0.14	8.56	1.27	20.80	6.1	14	0.87
CC27806		0.04	0.99	0.58	14.6	<0.2	<10	2360	0.43	0.21	0.70	5.19	17.95	4.5	14	0.81
CC29665		0.08	0.61	0.77	24.9	<0.2	<10	500	0.56	0.15	1.12	4.88	12.45	5.5	20	0.72
CC20213		0.20	0.20	1.21	21.5	<0.2	<10	560	0.69	0.24	5.40	1.63	21.70	12.1	24	1.32

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: STRATEGIC METALS LTD.

310 ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 6 - B

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na	Nb
		ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%	ppm
		0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01	0.05
CC39634		60.4	2.01	3.10	0.09	0.28	0.23	0.029	0.20	14.1	5.9	2.24	220	61.30	0.13	0.18
CC39635		81.6	2.55	3.06	0.13	0.08	0.25	0.033	0.12	20.4	7.9	0.59	187	46.20	<0.01	0.34
CC39636		60.5	2.72	2.47	0.11	0.09	0.24	0.046	0.15	14.5	6.6	0.51	222	9.21	<0.01	0.12
CC39637		57.6	1.42	1.89	0.07	0.09	0.18	0.024	0.13	11.9	10.1	2.51	230	4.73	0.01	0.07
CC39638		57.1	1.46	1.97	0.07	0.07	0.19	0.025	0.12	11.7	11.0	2.42	228	4.68	0.01	0.08
CC39639		27.0	1.46	2.72	0.09	0.08	0.06	0.017	0.10	13.2	20.8	1.48	108	2.91	0.01	0.14
CC39640		36.3	1.47	3.10	0.10	0.09	0.08	0.020	0.11	13.8	23.9	1.69	222	3.70	0.02	0.17
CC39641		25.4	1.36	2.48	0.09	0.08	0.04	0.021	0.09	14.6	19.3	1.25	222	3.59	0.01	0.12
CC39642		23.7	1.46	2.01	0.08	0.06	0.04	0.014	0.10	10.9	15.7	1.39	244	2.65	0.02	0.10
CC39643		27.9	1.40	2.49	0.10	0.09	0.05	0.019	0.09	14.6	20.0	1.30	229	3.86	0.01	0.13
CC39644		30.5	1.45	2.54	0.10	0.10	0.04	0.018	0.11	14.4	18.6	1.34	277	4.84	0.02	0.12
CC39645		31.1	1.50	2.97	0.09	0.09	0.05	0.020	0.11	14.6	22.3	1.57	241	3.57	0.02	0.16
CC39646		34.3	1.51	2.91	0.10	0.09	0.06	0.020	0.11	14.9	21.8	1.58	252	3.90	0.02	0.15
CC39647		39.6	1.49	3.07	0.10	0.16	0.05	0.020	0.15	13.8	20.8	1.57	292	7.01	0.02	0.12
CC39648		28.5	1.38	2.67	0.10	0.09	0.04	0.018	0.11	14.7	19.6	1.44	234	4.07	0.02	0.13
CC39649		28.5	1.41	2.74	0.09	0.09	0.04	0.018	0.11	14.3	20.0	1.47	231	3.94	0.02	0.13
CC39650		33.6	1.50	2.85	0.10	0.09	0.06	0.020	0.11	13.6	21.5	1.52	207	3.25	0.02	0.14
CC39651		27.0	1.52	2.76	0.10	0.09	0.05	0.019	0.10	15.3	22.2	1.44	108	2.85	0.01	0.14
CC39652		31.8	1.54	2.88	0.09	0.09	0.06	0.022	0.10	14.0	21.3	1.34	170	4.69	0.01	0.14
CC39653		29.3	1.72	2.84	0.09	0.08	0.05	0.023	0.11	14.2	18.9	1.20	201	6.84	0.01	0.13
CC39654		29.8	1.59	3.01	0.09	0.08	0.06	0.022	0.11	14.2	21.4	1.40	215	4.85	0.01	0.15
CC39655		29.3	1.65	2.90	0.09	0.09	0.05	0.022	0.10	14.1	20.1	1.23	197	5.57	0.01	0.14
CC39621		53.1	1.56	2.21	0.08	0.07	0.17	0.025	0.14	11.9	10.8	2.49	232	6.55	0.01	0.11
CC39622		60.6	1.50	2.13	0.08	0.08	0.17	0.027	0.13	12.3	10.9	2.29	222	6.27	0.01	0.11
CC39623		60.8	1.55	1.98	0.07	0.08	0.18	0.024	0.12	11.9	10.9	2.41	229	4.97	0.01	0.10
CC39624																
CC39625																
CC39626		48.4	1.71	2.97	0.11	0.08	0.12	0.025	0.16	14.1	12.4	1.93	198	18.50	0.01	0.21
CC39627		54.1	1.91	3.30	0.12	0.09	0.16	0.029	0.19	14.2	14.8	1.86	181	20.30	0.01	0.23
CC39663		58.8	1.45	1.98	0.07	0.08	0.17	0.025	0.12	11.8	10.8	2.49	225	4.76	0.01	0.10
CC27806		40.5	1.43	2.15	0.08	0.05	0.25	0.026	0.08	9.6	4.8	0.14	148	12.30	<0.01	0.15
CC29665		51.3	3.11	2.37	0.13	0.07	0.23	0.023	0.06	6.2	5.0	0.11	77	21.60	0.01	0.29
CC20213		40.8	2.80	3.86	0.10	0.11	0.06	0.036	0.11	10.7	19.0	0.86	265	7.84	0.01	0.09

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue
North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

1016-510 W HASTINGS ST

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 6 - C

Total # of Pages: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
															0.005
CC39634		183.0	920	10.3	12.7	0.036	0.12	9.02	6.1	6.4	0.7	407.0	0.01	0.10	5.0
CC39635		180.5	1140	14.8	10.6	0.017	0.10	12.95	5.1	10.4	0.6	197.5	0.01	0.13	3.7
CC39636		87.3	1150	11.9	10.9	0.028	0.08	5.26	5.9	5.4	0.9	176.0	<0.01	0.07	5.8
CC39637		27.4	1400	19.5	7.0	0.010	0.22	2.58	3.6	1.9	0.3	205.0	<0.01	0.06	2.9
CC39638		29.0	1340	19.4	7.4	0.009	0.22	2.48	3.5	2.1	0.2	216.0	<0.01	0.06	2.7
CC39639		19.2	1630	10.1	10.8	0.001	0.07	1.50	2.7	1.6	0.2	610.0	<0.01	0.05	2.5
CC39640		26.3	1440	11.6	12.6	0.001	0.07	1.70	3.3	1.9	0.3	630.0	<0.01	0.05	2.2
CC39641		19.4	1980	10.6	9.3	0.001	0.04	1.81	2.4	1.3	0.2	679.0	<0.01	0.05	3.0
CC39642		15.4	1900	8.6	7.6	0.001	0.05	1.42	2.0	1.1	0.2	676.0	<0.01	0.04	2.1
CC39643		19.7	1960	11.4	9.3	0.001	0.04	2.11	2.5	1.5	0.2	730.0	<0.01	0.05	2.9
CC39644		21.5	2010	11.2	9.5	0.001	0.04	2.24	2.5	1.5	0.2	845.0	<0.01	0.06	3.1
CC39645		21.2	1810	11.6	11.0	0.001	0.05	1.77	2.8	1.4	0.3	639.0	<0.01	0.05	2.7
CC39646		21.0	1890	11.7	11.2	0.001	0.05	1.98	2.9	1.7	0.2	718.0	<0.01	0.05	2.7
CC39647		24.5	1740	11.7	11.3	0.003	0.05	3.56	2.8	1.8	0.2	875.0	<0.01	0.07	3.4
CC39648		18.9	2050	10.6	9.9	0.001	0.06	2.08	2.6	1.5	0.2	810.0	<0.01	0.05	2.9
CC39649		19.0	2040	10.9	10.2	0.001	0.06	2.10	2.5	1.5	0.2	824.0	<0.01	0.06	2.9
CC39650		20.4	1650	11.7	11.5	0.001	0.07	1.70	2.9	2.1	0.2	580.0	<0.01	0.05	2.3
CC39651		20.2	1810	11.9	10.6	0.001	0.05	1.32	2.7	1.5	0.2	503.0	<0.01	0.04	3.0
CC39652		26.1	1580	11.8	10.8	0.002	0.06	3.55	2.9	2.0	0.3	451.0	<0.01	0.05	2.5
CC39653		28.0	1860	11.9	9.9	0.004	0.06	2.02	2.7	1.9	0.3	503.0	<0.01	0.05	3.0
CC39654		27.6	1800	11.5	11.4	0.002	0.06	1.74	2.9	1.8	0.3	491.0	<0.01	0.05	2.8
CC39655		27.9	1900	11.2	10.0	0.003	0.05	1.82	2.8	1.8	0.3	473.0	<0.01	0.05	3.0
CC39621		36.1	1550	18.2	8.5	0.010	0.21	2.79	3.6	2.2	0.3	257.0	<0.01	0.05	3.2
CC39622		36.1	1410	18.5	7.8	0.010	0.20	2.84	3.6	2.2	0.3	227.0	<0.01	0.06	3.1
CC39623		30.5	1390	20.5	6.9	0.010	0.21	2.60	3.5	1.9	0.3	222.0	<0.01	0.06	2.9
CC39624															<0.005
CC39625															
CC39626		70.1	1980	9.5	11.5	0.019	0.13	4.54	3.6	3.8	0.4	409.0	<0.01	0.07	3.4
CC39627		81.9	1720	10.8	14.2	0.019	0.22	5.15	4.0	4.6	0.5	343.0	<0.01	0.08	3.1
CC39663		29.1	1460	20.2	6.9	0.010	0.20	2.57	3.4	2.0	0.2	214.0	<0.01	0.06	2.9
CC27806		35.9	510	11.7	7.8	0.020	0.15	3.71	2.9	8.3	0.5	96.5	<0.01	0.11	2.0
CC29665		110.5	560	9.0	7.6	0.047	0.22	6.98	3.1	15.1	0.4	53.5	<0.01	0.10	1.6
CC20213		52.9	1270	16.3	10.6	0.008	0.12	2.27	4.4	1.8	0.4	306.0	<0.01	0.07	4.0

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

STRATEGIC METALS LTD.

/O ARCHER, CATHRO & ASSOCIATES (1981)

LIMITED

1016-510 W HASTINGS ST

VANCOUVER BC V6B 1L8

Project: NIMO

Page: 6 - D

Total # r s: 6 (A - D)

Finalized Date: 27-JUL-2007

Account: MTT

CERTIFICATE OF ANALYSIS VA07077183

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	U	V	W	Y	Zn	Zr
		ppm 0.02	ppm 0.05	ppm 1	ppm 0.05	ppm 0.05	ppm 2	ppm 0.5
CC39634		0.42	12.95	359	0.26	29.90	797	12.1
CC39635		1.17	6.37	323	0.25	26.60	698	2.6
CC39636		0.44	3.08	90	0.10	18.05	406	3.2
CC39637		0.28	1.26	43	0.09	11.65	175	3.9
CC39638		0.29	1.34	45	0.09	11.65	184	3.0
CC39639		0.19	1.30	58	<0.05	11.75	144	2.8
CC39640		0.24	1.37	63	0.05	13.80	167	3.1
CC39641		0.12	1.38	53	<0.05	12.40	128	3.4
CC39642		0.09	1.08	57	<0.05	9.56	136	2.3
CC39643		0.10	1.44	53	<0.05	12.90	132	3.7
CC39644		0.11	1.56	68	0.05	12.60	149	4.8
CC39645		0.12	1.33	65	<0.05	13.05	145	3.1
CC39646		0.13	1.44	64	<0.05	13.55	145	3.4
CC39647		0.13	1.84	101	0.05	12.60	205	7.7
CC39648		0.11	1.52	64	<0.05	12.95	138	4.1
CC39649		0.11	1.51	66	<0.05	12.75	141	4.0
CC39650		0.11	1.31	57	<0.05	13.20	142	3.0
CC39651		0.10	1.22	48	<0.05	12.40	121	3.2
CC39652		0.27	1.43	74	0.05	13.05	174	2.8
CC39653		0.37	1.89	81	0.08	12.90	183	2.9
CC39654		0.31	1.61	77	0.06	13.30	199	2.8
CC39655		0.30	1.79	82	0.06	13.00	190	2.9
CC39621		0.33	2.03	72	0.09	13.40	225	3.3
CC39622		0.33	1.79	58	0.09	13.20	205	3.5
CC39623		0.30	1.48	47	0.09	12.15	187	3.3
CC39624								
CC39625								
CC39626		0.63	4.47	208	0.12	18.05	514	3.4
CC39627		0.85	4.49	202	0.13	18.50	531	2.9
CC39663		0.29	1.43	45	0.09	12.35	184	3.4
CC27806		1.41	5.24	94	0.14	10.45	235	1.2
CC29665		1.19	8.13	318	0.15	15.85	298	2.2
CC20213		0.37	2.16	104	0.08	11.85	228	4.2

Comments: Interference: Ca>10% on ICP-MS As,ICP-AES results shown. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).

APPENDIX III

GEOLOGICAL AND GEOTECHNICAL LOGS

NiMo PROJECT

PROPERTY: Sun

HOLE: SN07-01

<u>Easting</u>	<u>Northing</u>	<u>Elev.</u>	<u>Depth (m)</u>
441659	7415018	643	121.92

Contractor: North Star
Drill: MD-002

SURVEY							
Depth (m)	Azimuth	Dip	Method	Depth (m)	Azimuth	Dip	Method
collar	100°	-83°	compass				

Core size:	BTW	
Casing depth:	13.72 (m)	out

Drilling dates: August 23 to 25, 2007

Logged by: J. Lane

Target: _____

[illegible]

SAMPLES
Numbers: G087001 - G087012
Total: 12
Date sent: September 5, 2007

COMMENTS	
Hole collared too far forward. original hole at 90' (-70°), rods stuck.	Lost

HOLE: SN07-01

2 of 4

PROPERTY: SUN

HOLE: SN07-01

Struct.	LITHOLOGY							Notes:	ALT.			MINERALS			SAMPLES							Blocks			GEOTECHNICAL						JOINTS						
	Type	Altitude	From (m)	To (m)	Interval (m)	Type	Unit		Texture	Modifier				car	py	Do	From (m)	To (m)	Interval (m)	Sample				From (m)	To (m)	Intvl. (m)	REC		RQD		Weathering	Hardness	Frequency	Attitude	Shape	Roughness	Infilling
																											(m)	Percent	(m)	Percent							
			42.67	46.55	3.88	SHL	OSR	FG	BK	The amount of carbonate in the core has decreased and it appears that the core is now only slightly dolomitic with very thin <1mm carbonate stringers running parallel to bedding. Also the core has become slightly softer now- just being scratched with a nail.				w																							
										From 45.95-46.16 there is a section of very broken up and crumbly rock- possible fault gouge.																											
			46.55	58.09	11.54	SHL	OSR	FG	BK	The core is now becoming more dolomitic and even more gradually carbonate rich. By 48.77 the core again fizzes intensely with acid and has become quite hard again.			w	m	m																						
			58.09	63.40	5.31	SHL	OSR	FG	BK	From 58.09-58.29 the core has quite a brecciated appearance caused by the thick carbonate vein occurring in the core. Around 60m, the core begins to be flooded with thin 1mm-5mm thick stringer veins in quite high density (50%) in a 10-15 deg orientation to ca. The core at 60.96m contains white carbonate flooding the core with a few angular 1-3 cm fragments of calcareous shale as fragments within. This flooding of the core slowly decreases in concentration at 63.40m NOTE: at 58.65 the first appearance of sulfides - 3mmx4mm lens of pyrite				m																							
			63.40	71.98	8.58	SHL	OSR	FG	BK	From this point on the core contains very few carbonate stingers. The concentration of sulfides in the core is increasing slightly with thin lenses of pyrite occurring .																											
										From 64.45-64.47 there is a 2cm thick sulfide horizon somewhat layered looking in appearance and also somewhat granular in the upper 1cm, also note that the core seems slightly heavier than expected. Also note that beyond this point the core softens																											

PROPERTY: SUN

HOLE: SN07-01

Struct.		LITHOLOGY							Notes:	ALT.			MINERALS			SAMPLES							Blocks			GEOTECHNICAL						JOINTS							
		From (m)	To (m)	Interval (m)	Type	Unit	Texture	Modifier					car	py	Do		From (m)	To (m)	Interval (m)	Sample					From (m)	To (m)	Intvl. (m)	REC		RQD		Weathering	Hardness	Frequency	Attitude	Shape	Roughness	Infilling	
Type	Attitude																						(m)	Percent	(m)	Percent													
									The core gradually becomes medium grey in colour, extremely reactive to acid and having a few carbonate vain running 5-15 deg to ca.																														
			77.99	79.40	1.41	SHL	OSR	FG	BK																														
			79.40	121.92	42.52	SHL	OSR	FG	BK	The core gradually returns to a black coloured shale very carbonate rich but with very few stringer veins running throughout it. Also the core is very competent with few natural breaks, also it is very hard.				t-w											79.25	82.30	3.05	3.04	100	2.36	77	FR	MS	2	15	1	2	Cb	
																										82.30	85.34	3.04	3.08	101	3.08	101	FR	MS	0				
																										85.34	88.39	3.05	3.03	99	2.42	79	FR	MS	1	15	1	2	Cb
																										88.39	91.44	3.05	3.00	98	3.00	98	FR	MS	0				
																										91.44	94.49	3.05	3.04	100	2.68	88	FR	MS	1	5	1	2	Cb
																										94.49	97.54	3.05	3.10	102	2.29	75	FR	MS	2	10	1	2	Cb

NiMo PROJECT

PROPERTY: Sun

HOLE: SN07-02

<u>Easting</u>	<u>Northing</u>	<u>Elev.</u>	<u>Depth (m)</u>
441675	7415462	650	48.77

Contractor: North Star
Drill: MD-002

[illegible]

Core size:	BTW	
Casing depth:	4.57 (m)	out

Drilling dates: August 25 to 26, 2007

Logged by: J. Lane

Target: _____

[illegible]

SAMPLES
Numbers: G087013 - G087020
Total: 8
Date sent: September 5, 2007

COMMENTS	
No visible NiMo	

HOLE: SN07-02

2 of 2

NiMo PROJECT

PROPERTY: Sun

HOLE: SN07-03

<u>Easting</u>	<u>Northing</u>	<u>Elev.</u>	<u>Depth (m)</u>
441410	7415060	645	124.97

Contractor: North Star
Drill: MD-002

Core size:	BTW	
Casing depth:	12.19 (m)	out

Drilling dates: August 26 to 28, 2007

Logged by: J. Lane

Target: _____

[illegible][illegible]

SAMPLES
Numbers: G087021 - G087035
Total: 15
Date sent: September 5, 2007

COMMENTS	

PROPERTY: SUN

HOLE: SN07-03

Struct.			LITHOLOGY							Notes:	ALT.			MINERALS			SAMPLES							Blocks			GEOTECHNICAL						JOINTS				
			From (m)	To (m)	Interval (m)	Type	Unit	Texture	Modifier		lim	als	py	qz	car	From (m)	To (m)	Interval (m)	Sample	Ni (ppm)	Zn (ppm)	Mo (ppm)	From (m)	To (m)	Intvl. (m)	REC	Percent	RQD	Percent	Weathering	Hardness	Frequency	Attitude	Shape	Roughness	Infilling	
BD		80	0.00	49.05	49.05	SHL	DME	FG	BK	Very soft- crumbles when scratched with a nail non calcareous black shale with intense limonite alteration occurring from 0-14.0m. In general the rock is very uniform.													0.00	9.14	9.14	0.41	4	0.00	0	HW	VW	40	85	1	2	Li	
																																			</		

HOLE: SN07-03

3 of 4

HOLE: SN07-03

4 of 4