

GEOCHEMICAL

REPORT

HORN 1 - 16 CLAIMS

YC29189 - YC29204

NTS # 105 H / 15

LAT: 61° 59 N

LONG: 128° 50 W

WATSON LAKE MINING DISTRICT

AUTHOR OF REPORT SHAWN RYAN

WORK PERFORMED AUGUST 26 to AUGUST 30, 2006

DATE OF REPORT JANUARY 22, 2008

TABLE OF CONTENT

1.0	Summary		p.3
2.0	INTRODUCTION	p.3	
3.0	PROJECT LOCATION	p.3	
4.0	ACCESS		p.3
5.0	GEOLOGY		p.4
5.1	REGIONAL GEOLOGY		p.4
6.0	WORK PERFORMED / METHODS		p.4
6.1	Soil Survey		p.4
7.0	INTERPRETATION		p.4
7.1	Soil Survey		p.4
8.0	RECOMMENDATION		p.4
9.0	REFERENCES CITED	p.5	
10.0	Cost		p.5
11.0	Qualification		p.6
	Claim Map		p.7
	Soil Location Map		Figure 1
	Gold Soil geochemistry map	Figure 2	
	Arsenic Soil geochemistry map	Figure 3	
	Gold Color Grid Map	Figure 4	
	Assay Data / GPS Soil Location Data		Appendix

1.0 SUMMARY

The Horn 2006 exploration program was conducted by Issac Fage, Adam Fage , Tyson Foxcroft and Jeremy Duplisea all employees of Ryanwood Exploration Inc. of Dawson City. The crew collected 354 soils on a grid pattern across most of the property. The work was successful in outlining a nice gold anomaly.

2.0 INTRODUCTION

The Horn Target Program was undertaken to evaluate an old Hudson Bay property. A crew of 4 mobilized to the Cantung road on August 26 and conducted a work program of grid work and soil sampling. The crew demobilized from the area on August 30.

A total of 354 soils where collected on the claim block.

3.0 LOCATION

The Horn Claims are located just west of the Cantung Mine. The project area is located 200 kilometers north east of the community of Watson Lake. The Horn claims are located on NTS 105 H / 15.

4.0 ACCESS

The main assess point to the Horn Claims is located 157 kilometers up the Cantung Road. A helicopter was used to move crew from a small gravel pit located off the road to and from the claim block daily.

5.0 REGIONAL GEOLOGY

Regional and Preliminary Property Geology (excerpt from Hudson Bay Report)

Regionally the Horn property is underlain by Lower Cambrian aged limestone, shale, quartzite, quartz grits, and pebble chert conglomerates of the Hyland Group. The sediment package generally strikes west to northwest with dips between 50 - 70 degrees to the north/northeast. No detailed geological or structural work has been completed on the Horn claims.

6.0 WORK PERFORMED / METHODS

6.1 Soil Survey

The Horn Project had 12 man days of soil work collecting 354 soils.

All soil sample where taken with one meter soil probes and sometime with a prospector pick. We carried both on rocky talus slope. Soil sample location where marked on the ground with orange flagging and recorded in Garmin GPS. About 400-500 grams of soil was collected and place in well mark kraft soil bags. All samples where brought out to Dawson and air dried repacked in rice bags and sent to Acme Labs in Vancouver. Sample where process with Aqua Regia ICP-MS for 36 elements.

The GPS where downloaded every night and store in a personal computer.

7.0 INTERPRETATION

7.1 Soil Survey

The 2006 soil survey outlined numerous soil anomalies. I color grid-ded the gold map and sun shade from the north east and we see two general trends. The largest gold trend is located on the western part of the property and is trending in northwest direction. The second major gold anomaly is located on the eastern side of the grid; this anomaly is a broad somewhat round and is located on the side hill. Part of this anomaly size may be due to downhill dispersion.

8.0 RECOMMENDATION

I would now recommend having the property geologically map and soil anomalies follow up. I would also expand the soil grid along the western and southern part of the grid.

9.0 REFERENCES CITED

Hudson Bay Exploration, Assessment report # 094116, by M. Buchanan, 2000

10.0 COST

Wage Soil sampling 12 man days @ \$250.00 per day	\$3,000.00
Travel 8 man days @ \$200.00	\$1,600.00
Food Allowance 20 man days @ \$35.00	\$700.00
Transportation Truck Cost plus gas \$200.00 per day for 5days	\$1,000.00
Assay cost includes soil bags, packing drying in Dawson Plus shipping cost from Dawson City 354 samples @ \$18.00 per samples	\$6,372.00
Report writing	\$500.00
Total	\$13,172.00

11.0 QUALIFICATION

I Shawn Ryan located in Dawson City, Yukon work as a professional prospector. I run a small exploration company located in Dawson City.

I have worked in the exploration business for the last 25 years. I worked the first 12 years as a contractor working on numerous projects in the NWT, Ontario, Quebec and the Yukon. I have worked the last 8 years as a local prospector for myself.


I have overseen the entire Horn Project and was party chief in charge.

I own 100% of the Horn claims.


Dated this 22 of January 2008 in Dawson City, Yukon.


Respectfully submitted


Shawn Ryan

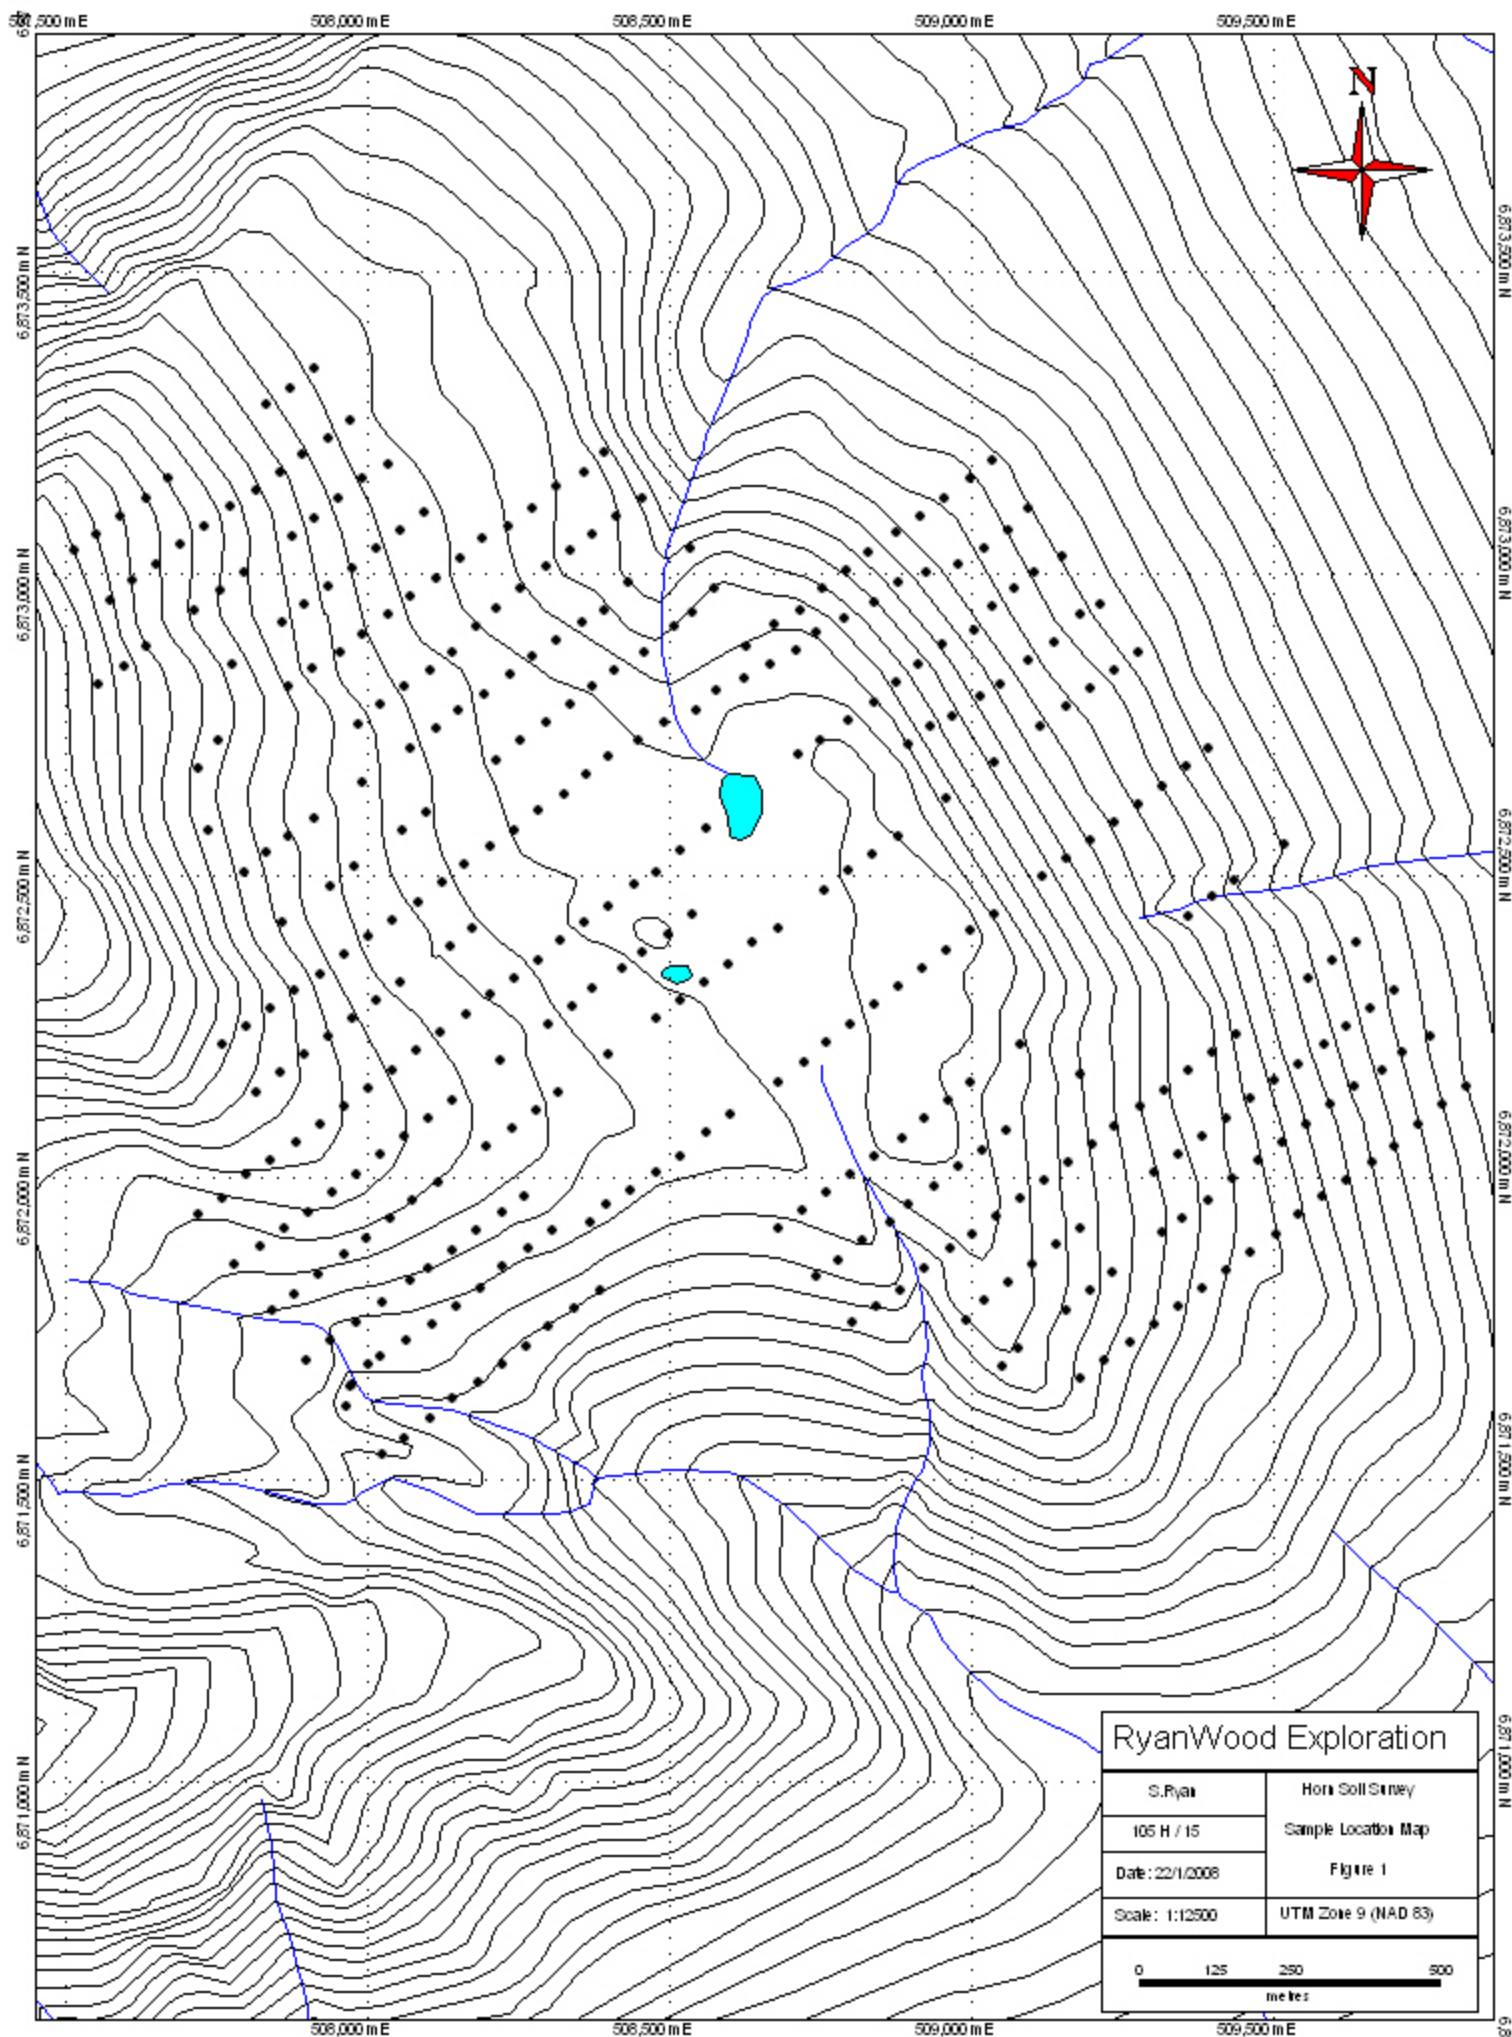

RyanWood Exploration	
S. Ryan	Horz Soil Survey
105 H / 15	Sample Location Map
Date: 22/1/2008	Figure 1
Scale: 1:12500	UTM Zone 9 (NAD 83)
0 125 250 500 metres	

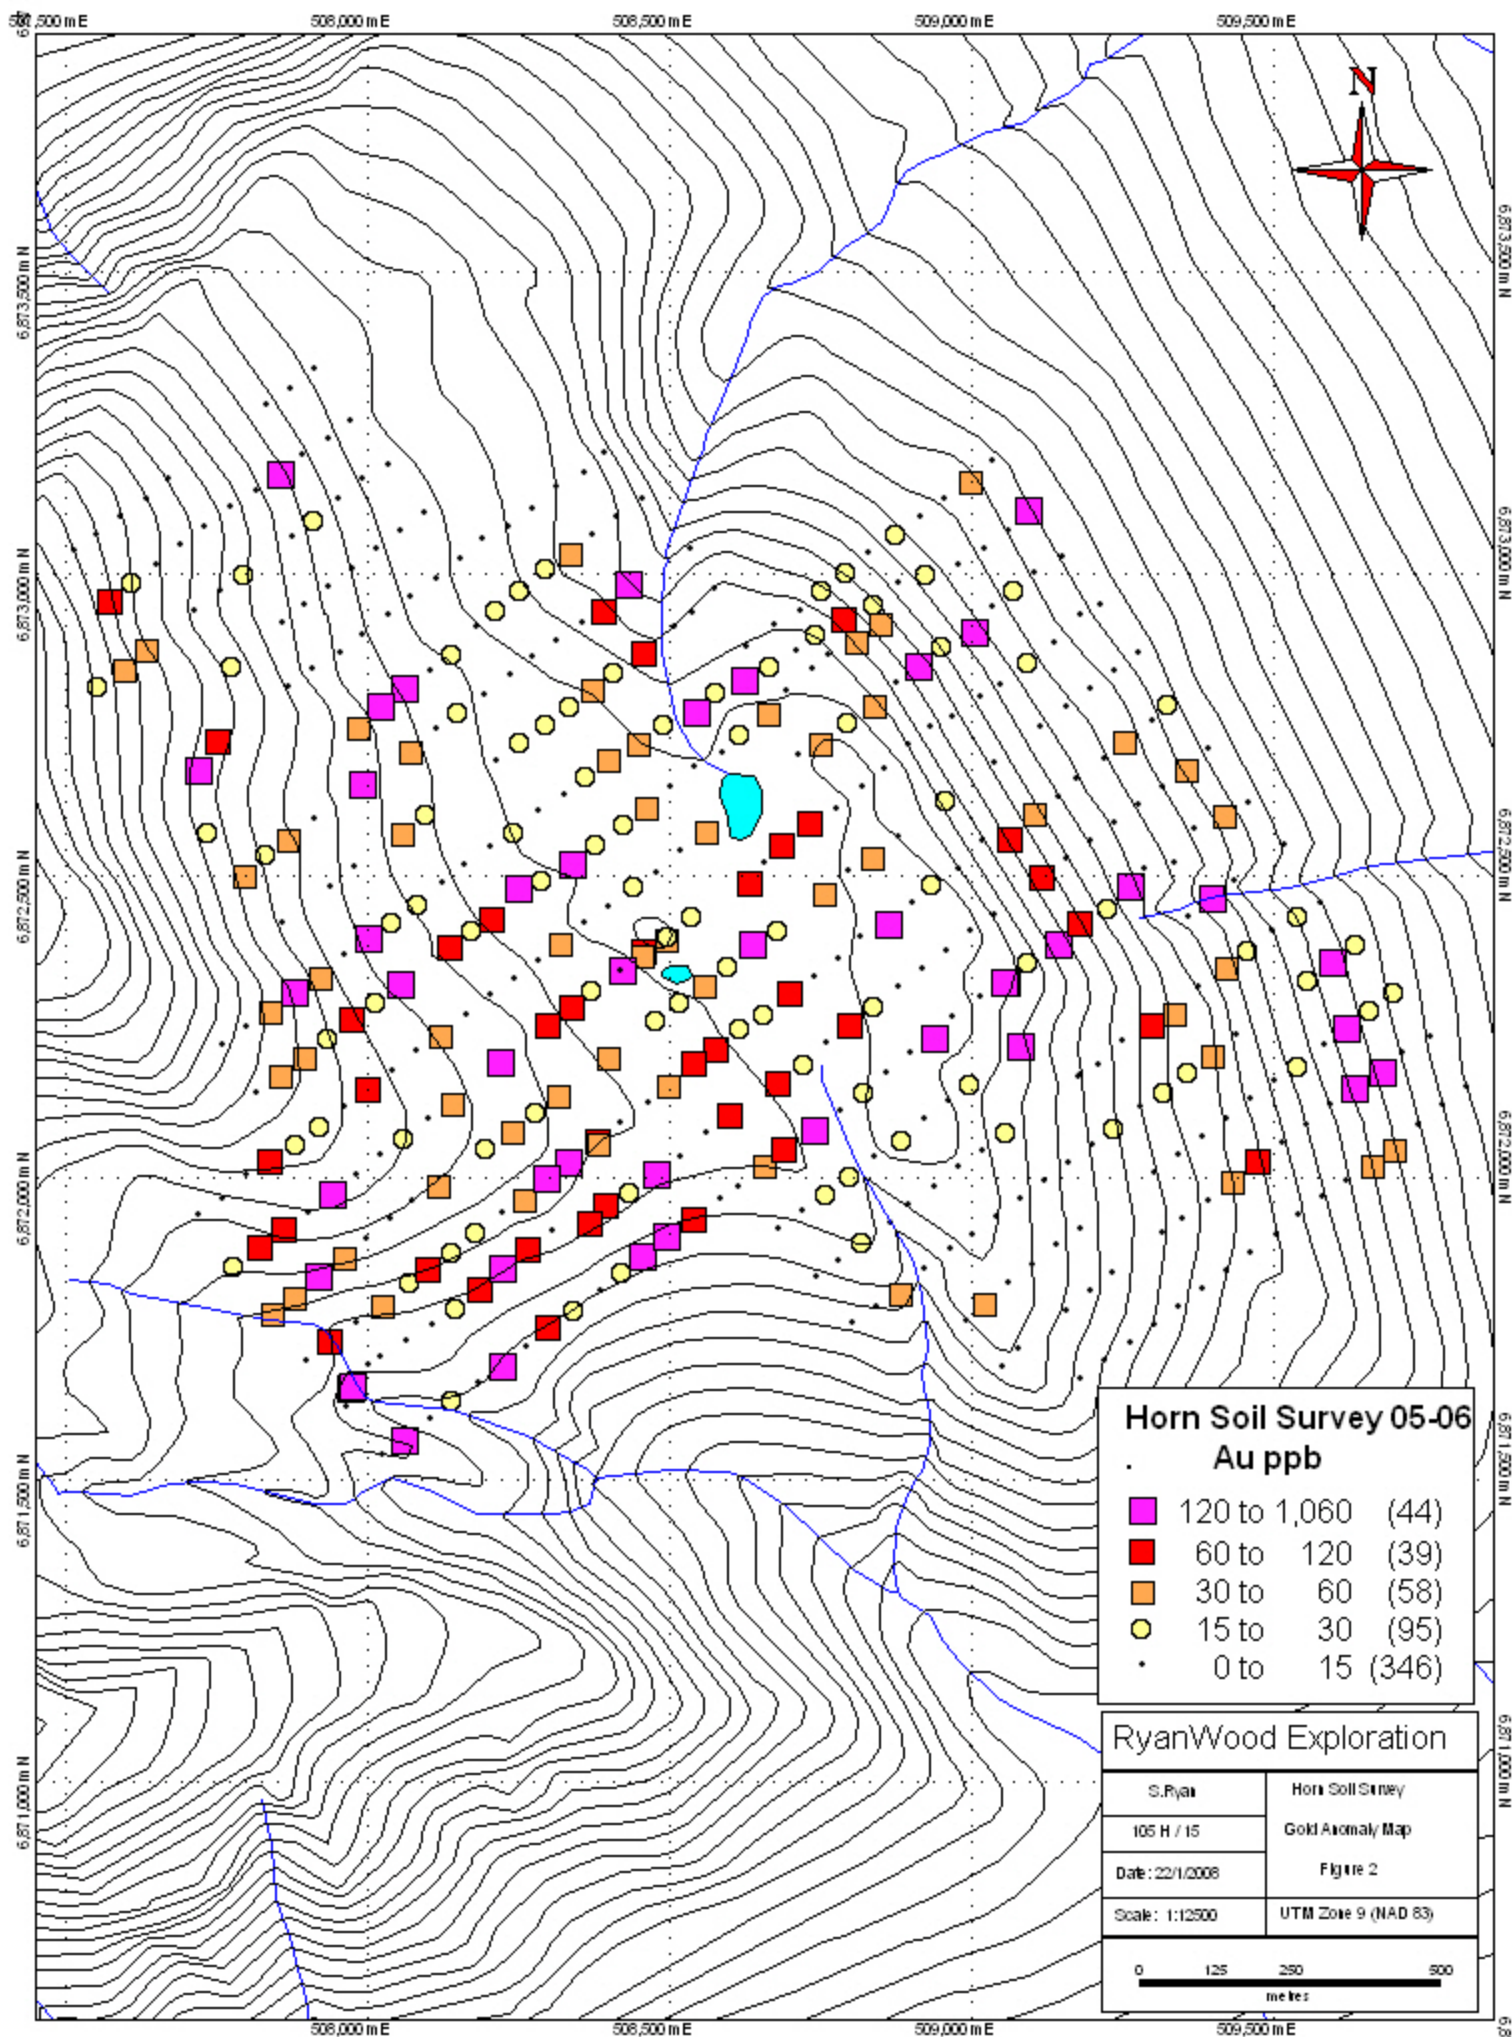

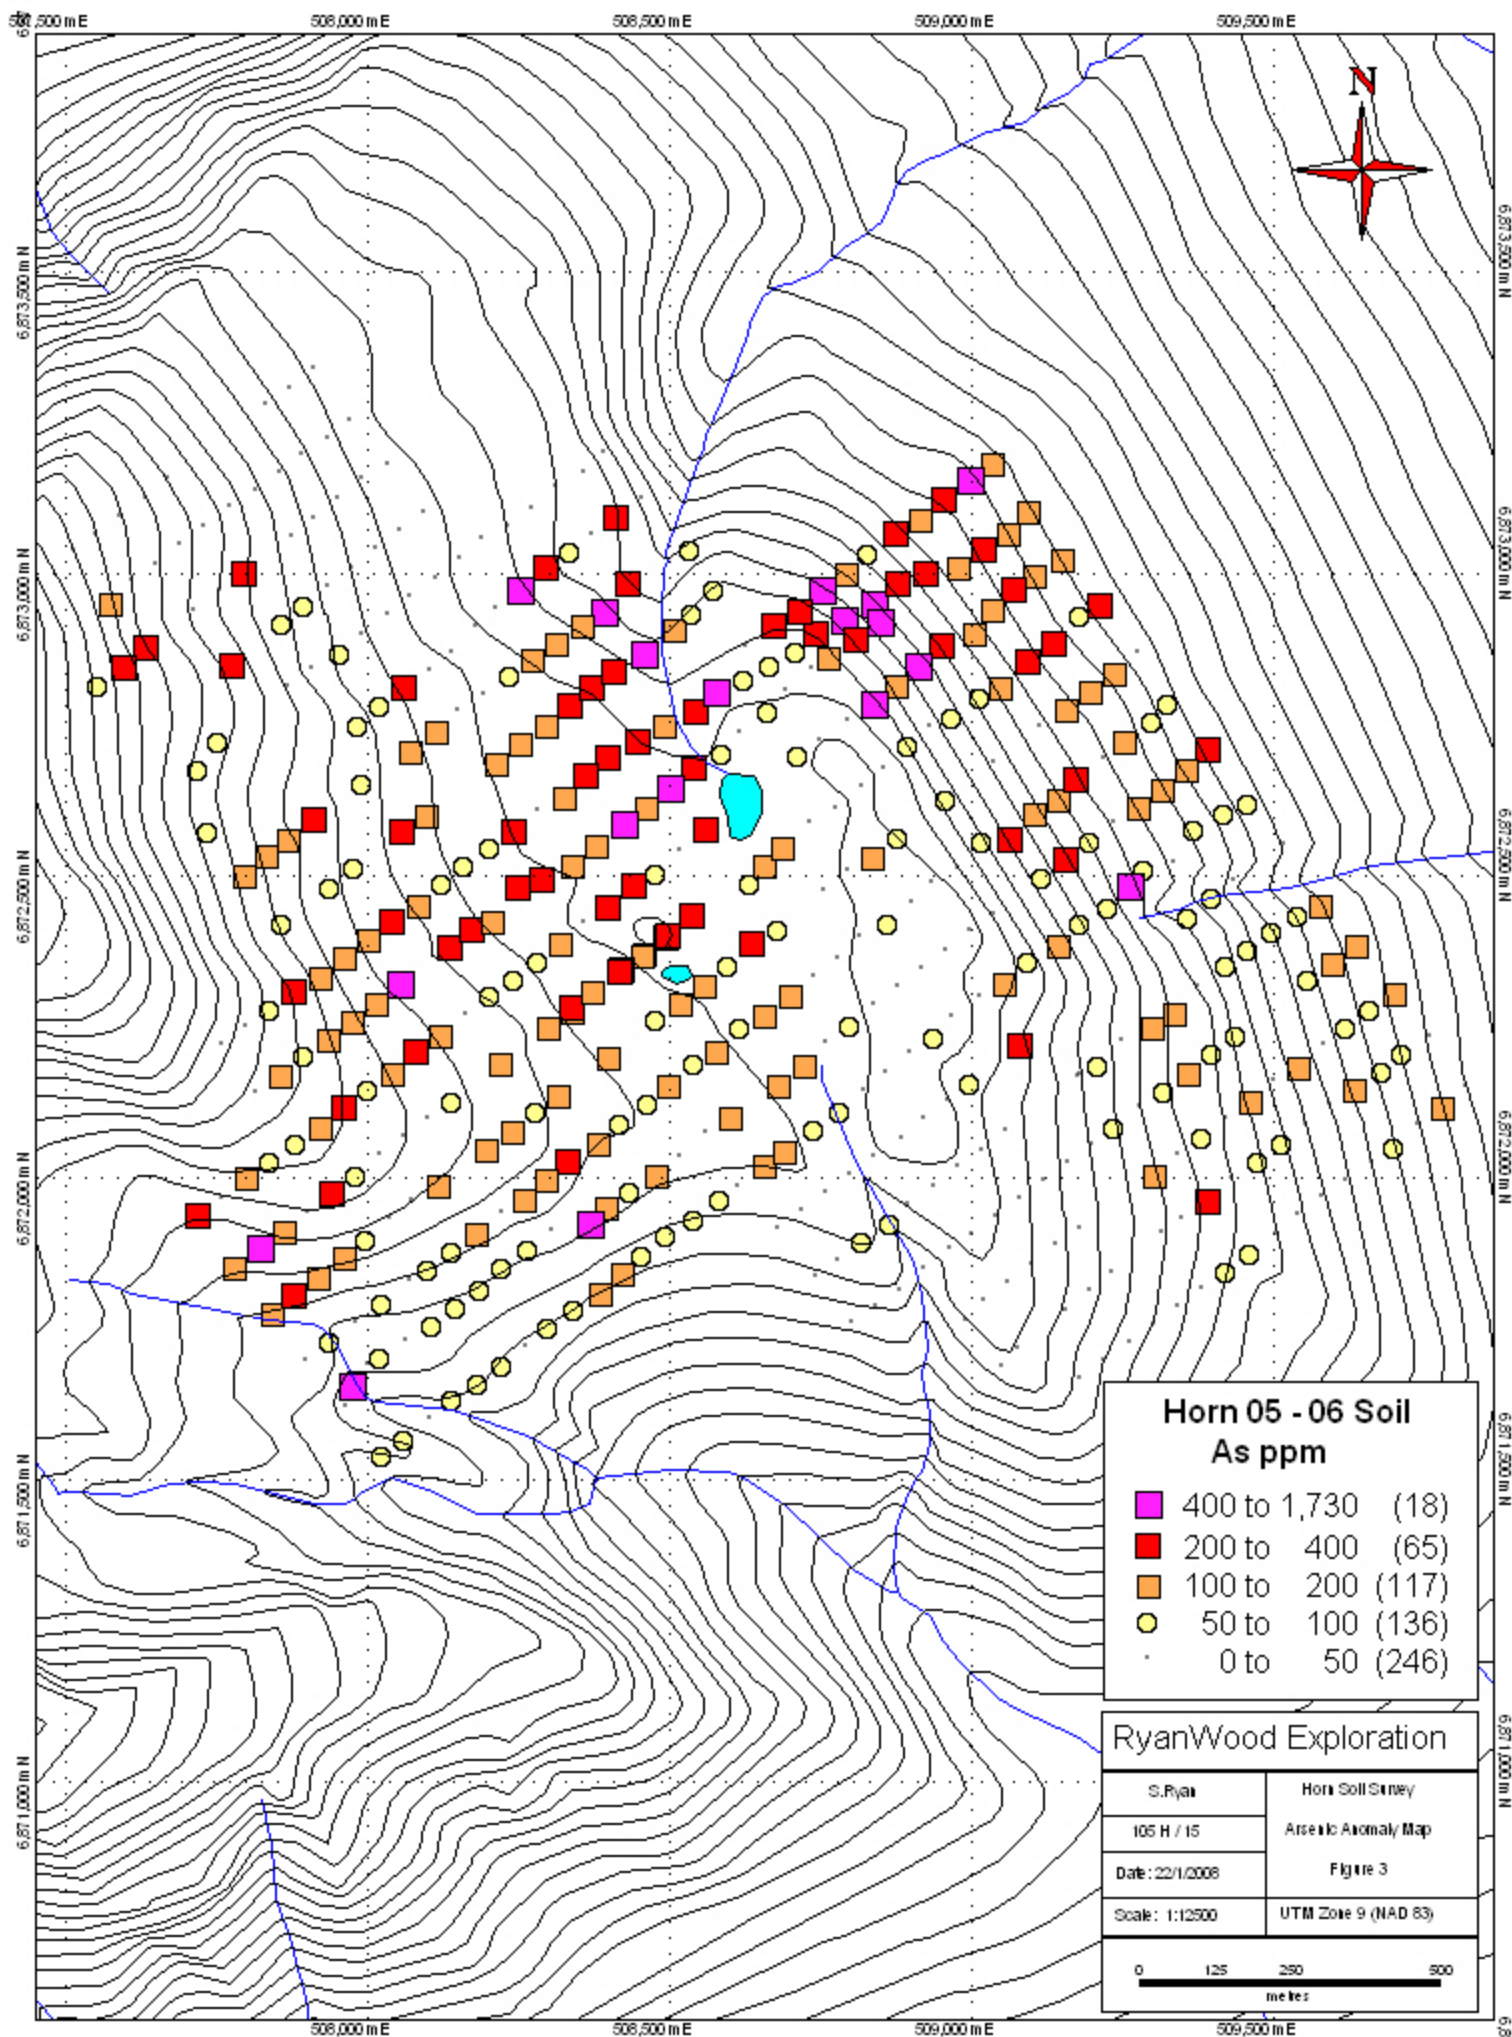

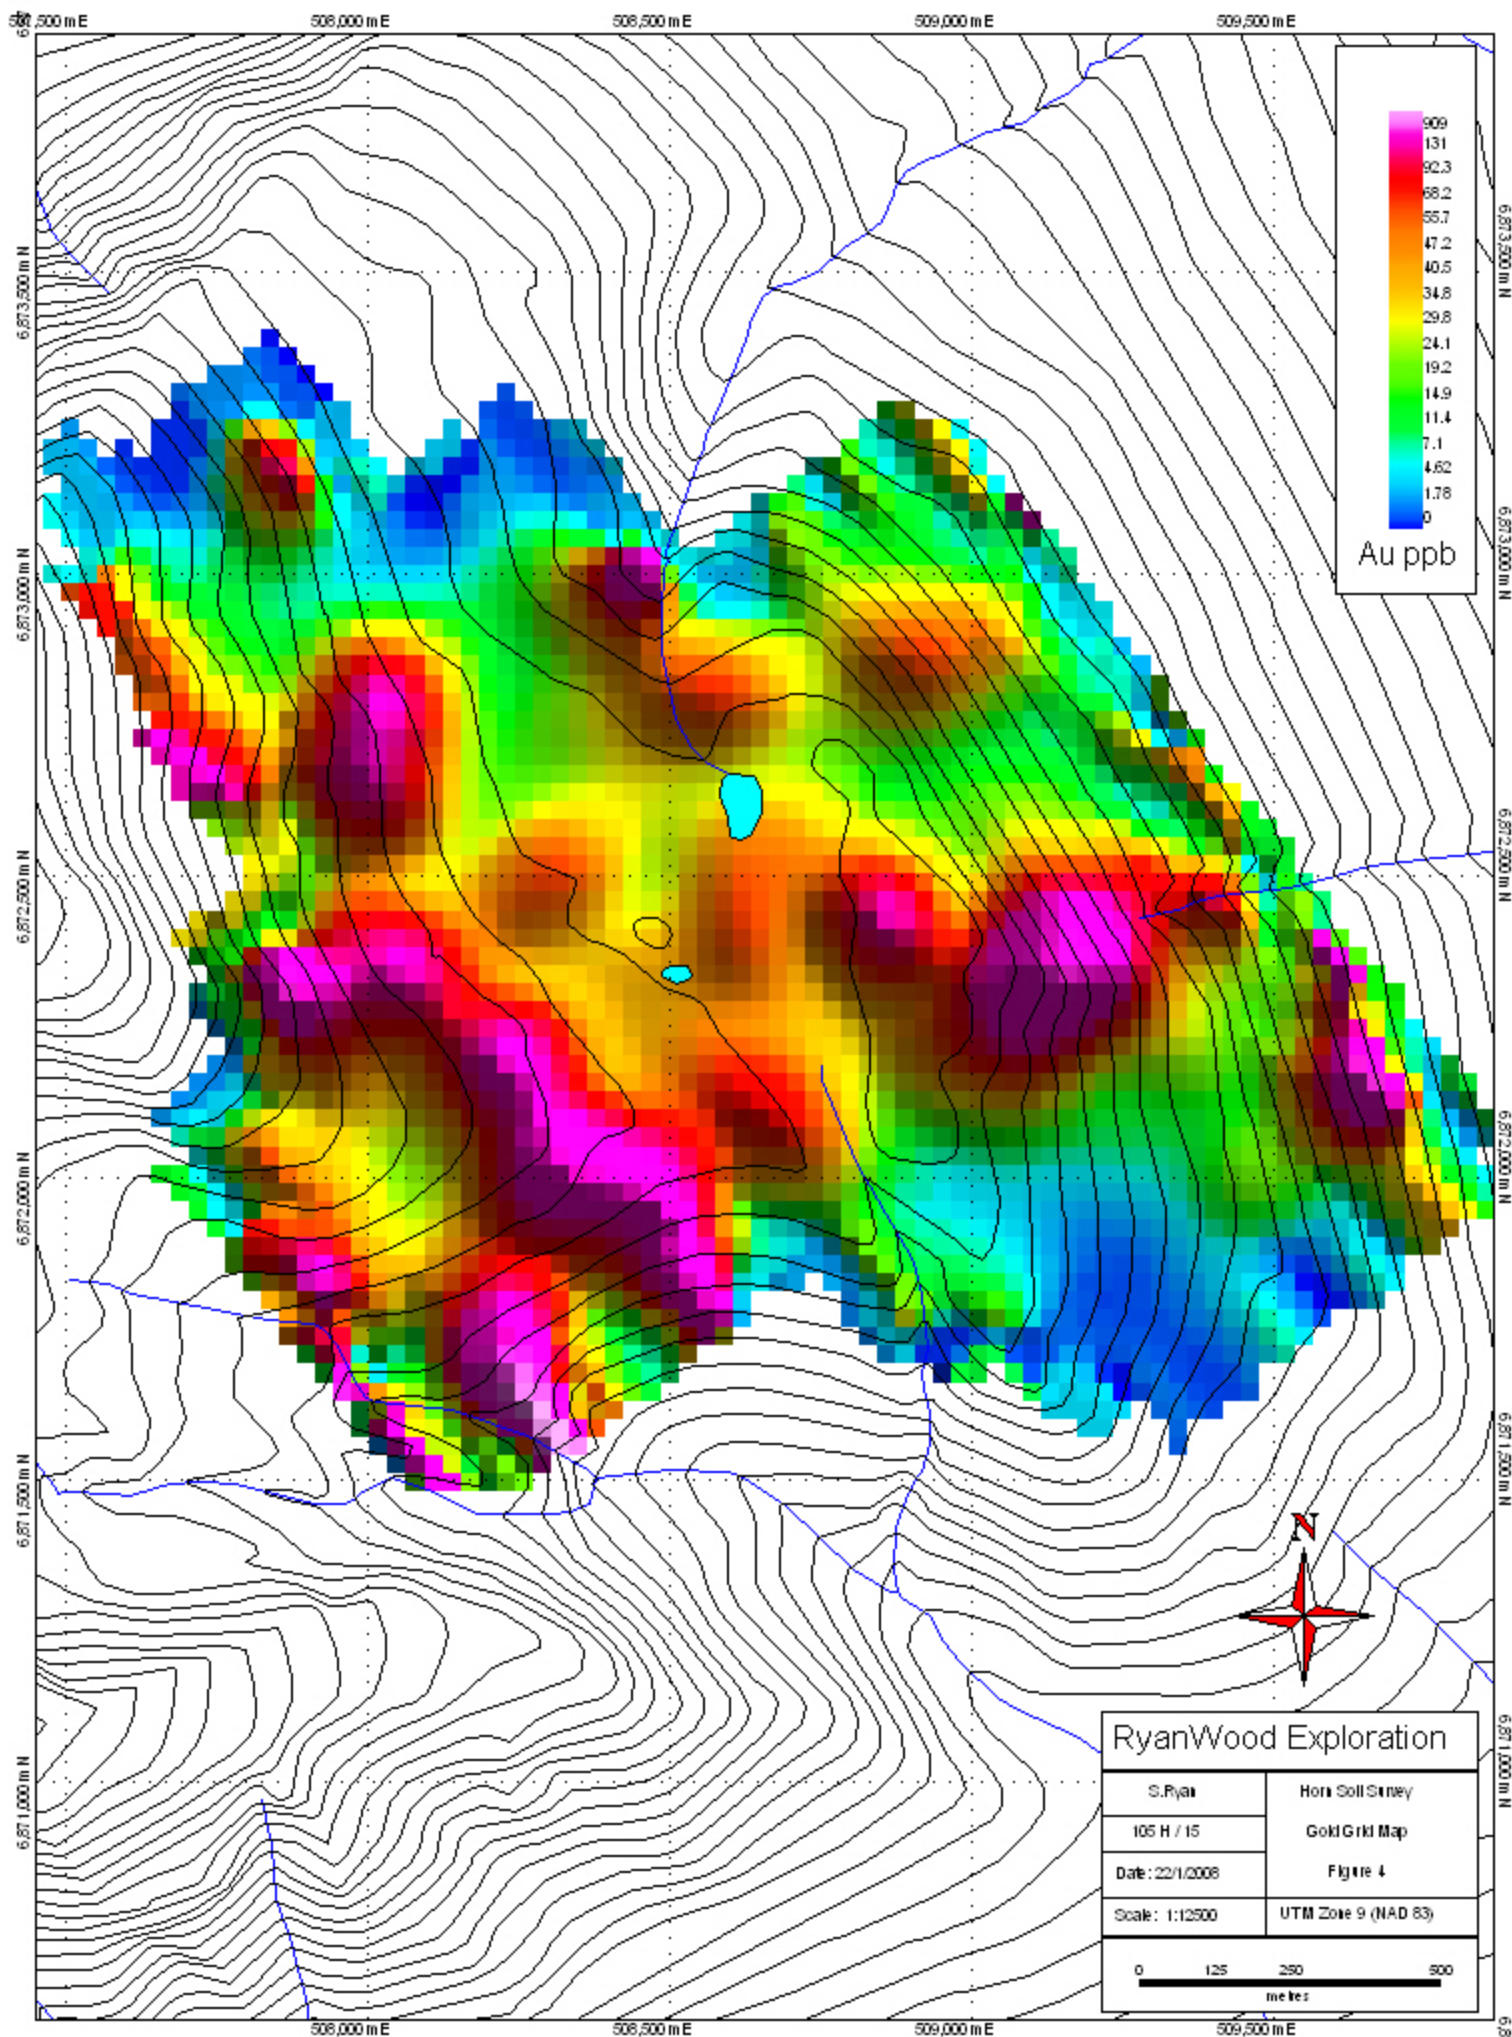

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-00894	HN00894	NAD83-9V	508364	6872666	2.5	50.3	86.1	59	0	10.1	7.1	362	5.53	229.4
HN-00895	HN00895	NAD83-9V	508326	6872635	0.9	41.6	32.9	74	0	20.9	8.8	391	4.82	124.3
HN-00896	HN00896	NAD83-9V	508285	6872606	0.9	19	19.3	55	0	9.9	4.1	311	3.74	48.3
HN-00897	HN00897	NAD83-9V	508244	6872575	0.8	35.2	21.3	80	0	27.6	13.2	317	3.29	236.2
HN-00898	HN00898	NAD83-9V	508205	6872546	0.8	28.9	19.7	61	0	18.3	8.2	269	2.71	79.1
HN-00899	HN00899	NAD83-9V	508163	6872517	0.8	30.5	23.2	68	0	19.2	10.3	374	3.21	92
HN-02001	HN02001	NAD83-9V	508035	6872931	1.1	51.7	29.9	89	0	29.5	10.6	347	4.37	18.6
HN-02252	HN02252	NAD83-9V	507993	6872899	0.8	31.7	23.5	65	0	14.7	7.5	322	3.36	48
HN-02253	HN02253	NAD83-9V	508072	6872962	1.2	28.1	22.4	61	0	14.3	7.3	371	3.88	14.6
HN-02254	HN02254	NAD83-9V	508114	6872992	1	29.5	22.3	74	0	17.6	10.2	447	3.64	6.5
HN-02259	HN02259	NAD83-9V	507778	6872848	1.3	44.1	42.7	91	0	30.2	15.5	351	3.47	210.9
HN-02371	HN02371	NAD83-9V	508215	6872691	0.5	50.2	34.1	108	0	42.1	23.8	573	4.29	152.7
HN-02372	HN02372	NAD83-9V	508254	6872724	0.6	56.8	35	106	0	42.6	29.1	717	4.37	156.1
HN-02373	HN02373	NAD83-9V	508098	6872602	0.9	63.8	31.5	100	0	53.7	31.9	468	4.13	193.4
HN-02374	HN02374	NAD83-9V	508058	6872573	1	34.8	26.7	70	0	24.5	18.9	444	3.01	223.1
HN-02375	HN02375	NAD83-9V	507981	6872514	0.8	18.9	16.7	42	0	10.3	7.5	314	2.03	62
HN-02376	HN02376	NAD83-9V	507940	6872482	0.7	24.9	16.5	43	0	12	5.3	259	2.5	73
HN-02377	HN02377	NAD83-9V	507860	6872421	0.6	28.4	17.9	46	0	12.8	4.7	244	2.46	50.6
HN-02378	HN02378	NAD83-9V	507799	6872503	0.7	30.9	23.7	60	0	22.5	9.9	272	2.3	121.9
HN-02379	HN02379	NAD83-9V	507834	6872537	0.8	31.6	24.1	62	0	21.7	10.7	293	2.33	127.8
HN-02380	HN02380	NAD83-9V	507872	6872565	0.8	68.3	38.1	142	0	68.4	43	586	3.62	176.3
HN-02381	HN02381	NAD83-9V	507912	6872594	0.7	59.1	31.8	89	0	34.4	22.8	495	2.94	223.8
HN-02382	HN02382	NAD83-9V	507994	6872652	0.5	62.3	34.7	106	0	39.5	25.1	628	3.98	94.7
HN-02383	HN02383	NAD83-9V	508072	6872710	0.8	35.7	31.8	78	0	24.9	9.9	305	3.57	158.9
HN-02384	HN02384	NAD83-9V	508114	6872741	1.4	63.5	42.4	122	0	51.2	22.7	477	5.29	104.6
HN-02385	HN02385	NAD83-9V	508153	6872772	0.6	23	17	35	0	7.4	3.8	252	2.32	38.9
HN-02386	HN02386	NAD83-9V	508194	6872800	1	37	26.8	72	0	12.9	5.6	313	4.46	30.1
HN-02387	HN02387	NAD83-9V	508237	6872832	0.7	40.6	24	76	0	24.3	9	243	3.64	90.8
HN-02388	HN02388	NAD83-9V	507575	6872956	1	83.1	47.8	132	0	64.2	29.9	507	4.56	173.1
HN-02389	HN02389	NAD83-9V	507613	6872986	1	58.2	27.1	80	0	19	9	278	4.1	29.3
HN-02390	HN02390	NAD83-9V	507653	6873015	1.1	47.5	30.7	86	0	20.1	9	408	4.33	16.3
HN-02391	HN02391	NAD83-9V	507693	6873046	1.3	73.6	31.8	82	0	22.6	10.9	343	4.23	12.6
HN-02392	HN02392	NAD83-9V	507733	6873076	1.1	54.2	24.9	89	0	30.1	14.2	343	3.99	14.3
HN-02401	HN02401	NAD83-9V	507936	6872977	1.1	49.1	25.1	50	0.1	15.8	6.3	221	2.8	19.9
HN-02402	HN02402	NAD83-9V	507898	6872947	1.3	83.5	41.2	87	0.1	33.2	10.9	271	4.18	57.4
HN-02403	HN02403	NAD83-9V	507859	6872917	1.5	85.7	39.3	101	0	41.1	30	514	4.62	72.7
HN-04501	HN04501	NAD83-9V	508413	6873094	1.6	39.7	31.7	61	0	15.5	7.9	343	4.89	348
HN-04502	HN04502	NAD83-9V	508374	6873065	1.1	32.5	23.1	58	0	11	4.9	292	5.3	25.3
HN-04503	HN04503	NAD83-9V	508338	6873037	1.1	60.4	31.2	73	0	17.9	8.6	355	5.41	69.2
HN-04504	HN04504	NAD83-9V	508297	6873010	1.2	64.2	42.7	77	0	18.3	8.4	369	5.97	372.1
HN-04505	HN04505	NAD83-9V	508256	6872975	1.2	58.9	38.1	109	0.2	40.2	33.3	539	5.09	520.1
HN-04506	HN04506	NAD83-9V	507973	6873252	1.2	36.1	28.2	78	0	15.6	7.7	373	4.92	5.8
HN-04507	HN04507	NAD83-9V	507937	6873223	1.2	63.3	31.5	88	0	29.2	16.5	413	4.14	12.5
HN-04508	HN04508	NAD83-9V	507895	6873196	0.8	36.2	22.3	78	0	19.3	10.8	361	3.95	8.8
HN-04509	HN04509	NAD83-9V	507856	6873168	0.9	48.7	25.3	78	0	26	15.4	344	4.02	20.9
HN-04510	HN04510	NAD83-9V	507817	6873138	0.8	46.1	25.7	72	0	25.3	19	375	3.25	25.4
HN-04511	HN04511	NAD83-9V	507776	6873109	0.9	43.4	29.7	87	0	28.9	13.3	400	4.41	35.5
HN-05501	HN05501	NAD83-9V	508897	6872717	1.5	45.1	36.7	81	0	18	7.8	413	4.69	78.6
HN-05502	HN05502	NAD83-9V	508932	6872745	0.8	40.5	55.7	77	0	12.5	10.5	346	5	17.2
HN-05503	HN05503	NAD83-9V	508970	6872762	0.9	58.2	30.1	93	0	35.1	21.8	361	4.36	66.1
HN-05504	HN05504	NAD83-9V	509015	6872796	0.7	47.3	22.8	76	0	26.3	12.3	259	3.26	70.2
HN-05505	HN05505	NAD83-9V	509050	6872817	0.8	46.1	28.6	79	0	21.8	11.5	348	4.23	171.8
HN-05506	HN05506	NAD83-9V	509096	6872855	0.8	44.4	27.3	84	0	22.5	11.8	341	4.1	208.1
HN-05507	HN05507	NAD83-9V	509138	6872886	0.9	39.9	30.3	68	0	18.3	7.1	258	3.96	220.8
HN-05508	HN05508	NAD83-9V	509180	6872930	0.6	18.6	16.3	41	0	10.6	3.5	170	2.62	59.8
HN-05509	HN05509	NAD83-9V	509215	6872947	1.3	33.8	26.4	56	0	11.2	4.9	236	5	260.1
HN-05510	HN05510	NAD83-9V	509153	6873029	0.7	15.2	16.1	36	0	7	2.9	165	3.35	148.1
HN-05511	HN05511	NAD83-9V	509107	6873001	0.5	19	15.3	36	0	8.6	2.9	149	2.29	129.3
HN-05512	HN05512	NAD83-9V	509073	6872975	1	56	32.9	74	0	19.2	7.6	318	4.42	354.7
HN-05513	HN05513	NAD83-9V	509035	6872943	1.2	49.6	27.8	67	0	15.6	6.3	275	3.66	138.1
HN-05514	HN05514	NAD83-9V	509007	6872905	0.7	39	21.3	66	0	16.9	9.1	286	3.48	160.2

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-00894	2.9	15.4	19.6	6	0.1	2	0.9	12	0.01	0.06	19	22	0.68	29	0.005	0	1.5	0.005	0.05	0.6
HN-00895	1.7	10.5	16.3	6	0	0.6	0.4	16	0.02	0.045	28	26	0.78	19	0.012	0	1.73	0.003	0.02	0.5
HN-00896	1.2	7.4	3.3	5	0	0.4	0.4	21	0.02	0.052	21	23	0.52	31	0.014	0	1.39	0.004	0.03	0.4
HN-00897	2.3	21.8	8.3	7	0.1	0.5	0.3	18	0.07	0.049	21	21	0.59	26	0.014	0	1.57	0.009	0.03	1.7
HN-00898	1.4	12.7	5.1	6	0	0.4	0.3	16	0.05	0.066	19	18	0.48	23	0.022	1	1.41	0.016	0.04	1.1
HN-00899	1.7	7.7	4.9	5	0.1	0.5	0.4	14	0.04	0.061	17	20	0.56	25	0.011	0	1.6	0.012	0.03	0.8
HN-02001	2.5	6.9	16.4	5	0	0.6	0.5	16	0.02	0.045	19	25	0.78	26	0.033	0	1.82	0.006	0.03	0.2
HN-02252	1.8	2.6	6.3	6	0.1	0.4	0.4	20	0.04	0.073	16	20	0.52	23	0.019	0	1.36	0.009	0.03	0.2
HN-02253	1.3	1.9	2.2	7	0.1	0.5	0.4	23	0.03	0.066	21	22	0.51	36	0.013	1	1.58	0.007	0.04	0.2
HN-02254	1.7	1.2	10.7	8	0.1	0.3	0.4	18	0.04	0.062	23	24	0.72	35	0.022	1	1.77	0.008	0.04	0.2
HN-02259	3.4	16.3	3.4	9	0.1	0.6	0.5	27	0.06	0.09	21	23	0.49	38	0.017	1	1.56	0.009	0.06	0.5
HN-02371	2.7	14.9	11.1	6	0.1	0.3	0.5	15	0.06	0.051	29	28	0.79	27	0.005	1	2.06	0.005	0.03	1
HN-02372	3.1	19.7	12.6	5	0.1	0.3	0.5	15	0.04	0.052	30	28	0.76	30	0.006	0	2.04	0.004	0.03	0.8
HN-02373	2.9	28.2	15.1	6	0.1	0.6	0.4	18	0.04	0.043	29	27	0.76	40	0.017	1	1.89	0.008	0.07	1.2
HN-02374	2.4	58.6	2.9	7	0.1	0.4	0.4	21	0.05	0.067	16	18	0.42	41	0.014	1	1.52	0.012	0.05	0.7
HN-02375	1.3	2.2	1.1	6	0.1	0.3	0.3	15	0.04	0.07	13	13	0.28	21	0.014	1	1.12	0.016	0.04	0.2
HN-02376	1.6	8.7	2.3	6	0	0.3	0.3	16	0.04	0.065	15	15	0.33	22	0.012	0	1.25	0.016	0.04	0.3
HN-02377	1.8	14.3	5.2	6	0	0.3	0.3	14	0.04	0.057	16	14	0.42	27	0.017	0	1.21	0.017	0.03	0.2
HN-02378	1.9	31.6	2.7	7	0	0.4	0.4	16	0.05	0.083	16	15	0.35	27	0.016	1	1.27	0.016	0.05	0.4
HN-02379	2	29	2.8	7	0.1	0.3	0.4	17	0.06	0.089	16	15	0.4	27	0.016	1	1.26	0.018	0.05	0.5
HN-02380	4	32.7	9.2	8	0.1	0.4	0.5	18	0.05	0.075	31	23	0.66	33	0.014	1	1.85	0.01	0.05	0.3
HN-02381	2.6	10	5	7	0	0.4	0.4	17	0.05	0.073	21	19	0.48	31	0.014	1	1.57	0.013	0.06	0.4
HN-02382	3	290.2	10.5	6	0.1	0.3	0.4	13	0.05	0.058	28	24	0.72	31	0.005	0	2.05	0.007	0.05	0.5
HN-02383	2.5	32	3.6	8	0.1	0.4	0.4	19	0.05	0.097	27	25	0.61	37	0.009	0	1.69	0.007	0.05	0.8
HN-02384	4.3	9.8	14.5	9	0.1	0.9	0.6	20	0.04	0.078	36	28	0.77	37	0.023	1	2.24	0.006	0.06	0.5
HN-02385	1.3	15.6	2.1	6	0.1	0.3	0.3	15	0.04	0.082	13	14	0.28	20	0.012	0	1.22	0.013	0.03	0.9
HN-02386	1.9	4.6	12.3	6	0	0.6	0.4	17	0.01	0.049	21	28	0.71	29	0.01	0	2.01	0.004	0.03	0.3
HN-02387	1.8	2.3	10.6	8	0	0.4	0.3	25	0.07	0.074	24	19	0.53	18	0.026	0	1.51	0.011	0.04	0.3
HN-02388	6.6	72.2	16.2	10	0.1	0.6	0.4	19	0.08	0.093	41	24	0.67	28	0.016	0	1.99	0.005	0.05	1.6
HN-02389	2.8	24.8	12.6	10	0.1	1.1	0.7	17	0.02	0.06	30	26	0.58	22	0.012	1	1.66	0.008	0.04	0.1
HN-02390	2.7	6.9	11.9	10	0.1	0.6	0.5	20	0.02	0.094	29	28	0.65	23	0.011	0	1.94	0.006	0.04	0.1
HN-02391	3.2	3.5	12.3	12	0.1	0.8	0.5	20	0.02	0.077	33	25	0.6	33	0.017	1	1.87	0.01	0.06	0.1
HN-02392	2.7	2.2	9.9	10	0.1	0.7	0.4	24	0.03	0.052	35	26	0.55	31	0.023	0	1.64	0.005	0.04	0.1
HN-02401	2.1	1.8	3.8	7	0	0.5	0.4	15	0.04	0.078	21	16	0.4	27	0.011	1	1.44	0.012	0.04	0.3
HN-02402	3.8	5.6	13.3	10	0.1	0.9	0.6	18	0.03	0.072	30	24	0.57	33	0.016	0	1.8	0.008	0.04	0.2
HN-02403	3.4	9.6	17.7	11	0.1	1.1	0.6	24	0.03	0.07	22	25	0.58	35	0.042	1	1.68	0.008	0.05	0.2
HN-04501	2	3	14.7	5	0	0.5	0.4	15	0.02	0.049	29	24	0.62	20	0.017	0	1.55	0.003	0.02	0.7
HN-04502	1.1	1.6	13.7	4	0	0.3	0.5	17	0.01	0.044	18	25	0.58	16	0.025	1	1.71	0.002	0.02	0.6
HN-04503	2.2	34.7	14.3	9	0	0.5	0.4	17	0.01	0.053	22	25	0.66	30	0.018	1	1.77	0.003	0.03	0.4
HN-04504	2	22.1	19.8	6	0.1	0.7	0.4	16	0.01	0.042	28	27	0.73	20	0.013	0	1.68	0.003	0.03	0.5
HN-04505	3.7	16	17	7	0.1	0.4	0.5	17	0.02	0.075	39	27	0.69	25	0.011	1	2.6	0.004	0.03	0.3
HN-04506	1.4	3.3	18.4	6	0	0.5	0.5	20	0.01	0.053	22	29	0.75	27	0.017	0	1.92	0.003	0.03	0.2
HN-04507	2.5	3.4	13.4	10	0.1	0.5	0.5	23	0.04	0.079	25	26	0.69	34	0.022	1	1.91	0.006	0.05	0.3
HN-04508	1.7	2.4	14.3	7	0.1	0.4	0.4	15	0.03	0.045	23	26	0.73	23	0.016	0	1.8	0.003	0.02	0.2
HN-04509	2.7	222.4	15.7	9	0.1	0.5	0.4	17	0.02	0.058	25	22	0.58	26	0.032	1	1.49	0.005	0.02	1.2
HN-04510	2.2	4	10.9	9	0.1	0.5	0.3	16	0.05	0.072	23	18	0.48	23	0.02	1	1.3	0.01	0.03	0.4
HN-04511	2.4	6	13.6	9	0.1	0.6	0.4	18	0.04	0.069	30	27	0.6	20	0.014	0	1.74	0.004	0.02	0.2
HN-05501	2	8.7	13.8	6	0.1	1	0.6	17	0.02	0.059	18	25	0.69	23	0.014	0	1.67	0.005	0.03	0.9
HN-05502	1.9	2.1	29.1	3	0	0.6	0.6	11	0.01	0.049	15	27	0.72	11	0.002	0	1.65	0.003	0.02	0.1
HN-05503	3.1	7.2	18.3	5	0	0.4	0.4	15	0.03	0.045	27	25	0.69	21	0.007	0	1.69	0.004	0.02	0.6
HN-05504	2.2	5.3	10.8	5	0.1	0.4	0.3	13	0.03	0.049	19	20	0.53	23	0.009	0	1.52	0.006	0.03	0.5
HN-05505	2.5	13.3	18	8	0	0.4	0.4	14	0.02	0.044	25	25	0.73	24	0.007	0	1.73	0.003	0.03	1.1
HN-05506	2.1	29.6	15.3	6	0.1	0.5	0.4	15	0.02	0.045	21	25	0.69	28	0.007	1	1.73	0.004	0.03	2
HN-05507	2.1	8.8	10.8	6	0.1	0.4	0.4	17	0.02	0.052	24	24	0.63	34	0.009	0	1.79	0.004	0.03	1.2
HN-05508	1	5.1	3	5	0	0.2	0.3	14	0.02	0.036	16	17	0.37	35	0.01	0	1.23	0.005	0.02	1
HN-05509	1.6	5.7	12	4	0	0.5	0.5	26	0.01	0.049	31	23	0.42	22	0.009	0	1.32	0.003	0.03	1.1
HN-05510	0.8	8.2	3.6	3	0	0.3	0.3	16	0.01	0.032	14	16	0.34	18	0.009	0	1.1	0.004	0.02	1.1
HN-05511	1	4.3	3.1	4	0	0.2	0.2	11	0.02	0.033	12	14	0.36	16	0.008	5	1.03	0.011	0.02	0.7
HN-05512	2.5	23	13.5	8	0	0.6	0.5	20	0.03	0.057	29	28	0.73	35	0.011	1	1.93	0.005	0.05	1.5
HN-05513	2	10.3	10.8	6	0	0.4	0.4	16	0.03	0.071	21	21	0.56	24	0.015	0	1.56	0.007	0.03	1.2
HN-05514	1.9	138.8	13.6	6	0	0.4	0.3	16	0.04	0.059	20	21	0.57	23	0.015	0	1.42	0.006	0.03	1.8

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-00894	0.01	1.4	0.1	0	4	0.9	15	GROUP 1DX - 15.0 GM	A607417
HN-00895	0.01	1.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-00896	0.01	0.8	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-00897	0.02	1.2	0.1	0	4	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-00898	0.01	1.1	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-00899	0.02	0.9	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-02001	0.01	1.4	0	0	5	0.9	15	GROUP 1DX - 15.0 GM	A607417
HN-02252	0.02	1.1	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-02253	0.02	0.7	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-02254	0.01	1.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-02259	0.03	1.2	0.1	0	6	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-02371	0.01	1.4	0	0	6	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-02372	0.01	1.4	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02373	0.01	1.9	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02374	0.01	0.9	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02375	0.03	0.6	0	0	4	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-02376	0.01	0.7	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02377	0.01	1	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02378	0.01	0.9	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02379	0.02	1	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02380	0.02	1.7	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02381	0.01	1.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-02382	0.01	1.4	0	0	6	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-02383	0.01	1	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02384	0.01	2.1	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-02385	0.02	0.5	0.1	0	4	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-02386	0.02	1.3	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02387	0.01	1.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02388	0.02	1.7	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-02389	0.01	1.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02390	0.06	1.4	0.1	0	6	0.9	15	GROUP 1DX - 15.0 GM	A607417
HN-02391	0.03	1.6	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-02392	0.02	1.4	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-02401	0.02	0.8	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-02402	0.02	1.7	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-02403	0.01	2.2	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-04501	0.03	1.1	0	0	5	1.1	15	GROUP 1DX - 15.0 GM	A607417
HN-04502	0.03	1	0.1	0	7	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-04503	0.02	1.2	0.1	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-04504	0.01	1.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04505	0.03	1.8	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04506	0.02	1.4	0.1	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-04507	0.01	1.8	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04508	0.01	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04509	0.01	1.5	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04510	0.01	1.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-04511	0.03	1.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05501	0.01	1.3	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05502	0.01	1.3	0	0	5	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-05503	0.02	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05504	0.02	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05505	0.01	1.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05506	0.01	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05507	0.01	1.1	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05508	0.01	0.6	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05509	0.01	1	0	0	8	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05510	0.01	0.6	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05511	<.01	0.6	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05512	0.01	1.4	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05513	0.01	1.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05514	0.01	1.2	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-05515	HN05515	NAD83-9V	508952	6872881	1	49.8	33.7	73	0.1	12.8	6.6	276	4.23	385.7
HN-05516	HN05516	NAD83-9V	508914	6872849	1	44.7	36.1	78	0.2	11.9	5.4	347	5.31	984.8
HN-05517	HN05517	NAD83-9V	508877	6872819	0.9	37.4	27.2	71	0.1	8.9	5.4	295	4.54	152
HN-05518	HN05518	NAD83-9V	508839	6872786	1.6	83	55.8	92	0.2	23	20	464	5.37	607.3
HN-05519	HN05519	NAD83-9V	508797	6872757	2.9	97.9	100.1	73	0.2	13.4	9	277	5.47	7.4
HN-05520	HN05520	NAD83-9V	508752	6872724	1	17.6	14.9	42	0	11.4	4.1	187	2.96	49.5
HN-05521	HN05521	NAD83-9V	508714	6872700	0.5	25.8	15.3	77	0	22.7	11	327	3.38	53.9
HN-05522	HN05522	NAD83-9V	508562	6872578	1	21.2	31.2	51	0	14.2	7	283	4.56	259.1
HN-05523	HN05523	NAD83-9V	508519	6872542	0.8	79.5	29.1	91	0	51	38.8	678	4.02	46.8
HN-05535	HN05535	NAD83-9V	509002	6871906	0.7	21.2	10.5	37	0	13	5.9	462	2.2	6.5
HN-05536	HN05536	NAD83-9V	509041	6871935	0.3	52.7	16.3	103	0	48.1	22.6	1153	4	24.7
HN-05537	HN05537	NAD83-9V	509081	6871964	0.7	29.8	20.6	82	0	29	13.4	779	4.2	22.6
HN-05538	HN05538	NAD83-9V	509121	6871994	0.5	18.3	12.8	51	0	17.4	10.2	560	2.25	12.4
HN-05539	HN05539	NAD83-9V	509160	6872025	0.4	21.9	12.5	31	0	11	4.1	204	1.3	8
HN-05540	HN05540	NAD83-9V	509200	6872054	1.3	36.5	35.7	49	0	13.9	6.2	336	2.99	29.7
HN-05541	HN05541	NAD83-9V	509239	6872083	0.5	52.4	26.2	102	0	37.9	20.4	648	4.42	50.5
HN-05542	HN05542	NAD83-9V	509281	6872116	0.4	10.5	4.9	15	0	3.6	1.8	100	0.85	12.1
HN-05543	HN05543	NAD83-9V	509320	6872145	1.1	54.7	29.7	121	0	50.7	26.1	455	4.14	77.5
HN-05544	HN05544	NAD83-9V	509360	6872177	1.7	61.7	29.1	71	0	16.1	10.8	524	6.28	191
HN-05545	HN05545	NAD83-9V	509399	6872207	0.8	20.5	16.1	54	0.1	15.8	7.5	378	2.8	54.4
HN-05546	HN05546	NAD83-9V	509440	6872237	0.9	33.4	33.4	51	0.1	16.7	5.8	180	3.44	69
HN-05549	HN05549	NAD83-9V	509559	6872328	0.5	53.9	18.1	80	0	29.3	9.5	362	3.46	74.4
HN-05550	HN05550	NAD83-9V	509600	6872358	0.6	25.4	15.9	65	0	19.8	6.7	305	3.28	107
HN-05551	HN05551	NAD83-9V	509638	6872387	0.5	21.3	13.6	57	0.1	14.5	4.7	206	3.42	127.7
HN-05552	HN05552	NAD83-9V	509700	6872310	0.6	32.7	16.4	71	0	21	9	359	3.49	164.8
HN-05553	HN05553	NAD83-9V	509663	6872278	0.5	19.8	14.3	69	0	21.1	6	336	3.65	82.8
HN-05554	HN05554	NAD83-9V	509623	6872249	0.8	24.1	19.9	69	0.1	25.3	13.3	397	3.96	92.4
HN-05555	HN05555	NAD83-9V	509584	6872218	0.3	11.4	7.1	12	0.3	3.4	1.2	45	0.76	36
HN-05556	HN05556	NAD83-9V	508940	6871986	0.5	28.1	24.1	101	0	38.1	18.8	977	4.06	19.9
HN-05557	HN05557	NAD83-9V	508979	6872016	0.9	30.3	24.8	93	0	34.4	16.5	763	3.91	24.3
HN-05558	HN05558	NAD83-9V	509018	6872045	0.7	28.1	22	85	0	28.6	11.6	632	3.94	20.9
HN-05559	HN05559	NAD83-9V	509059	6872076	0.9	36.3	26.5	88	0	34.2	19.7	824	3.66	24.2
HN-05560	HN05560	NAD83-9V	509180	6872170	1	74.7	27.4	103	0	41.6	27.4	586	3.57	32
HN-05561	HN05561	NAD83-9V	509520	6872549	0.6	16.8	11.8	39	0	11.9	4.8	196	2.12	31.8
HN-05562	HN05562	NAD83-9V	509438	6872491	0.6	16.2	13.6	24	0.1	5.5	2	87	2.32	38.9
HN-05563	HN05563	NAD83-9V	509399	6872463	0.7	31	27.5	79	0	28.8	18.7	478	4.3	94
HN-05564	HN05564	NAD83-9V	509360	6872431	0.9	49.6	33.6	66	0	22	8.9	393	3.49	94.7
HN-05565	HN05565	NAD83-9V	509081	6872219	0.9	76.4	42.3	127	0	54.3	39.4	621	4.32	260
HN-05566	HN05566	NAD83-9V	509001	6872156	0.6	29.8	35.5	75	0	21.8	9	462	4.41	67.3
HN-05567	HN05567	NAD83-9V	508964	6872126	1	78.6	29.3	74	0	29.8	11.3	313	3.28	34.1
HN-05568	HN05568	NAD83-9V	508922	6872097	0.6	30.8	19.4	95	0	34.4	15.4	689	3.71	21.7
HN-05569	HN05569	NAD83-9V	508888	6872065	0.5	31	21.8	92	0	33.9	17.1	675	4.02	43.3
HN-05570	HN05570	NAD83-9V	507843	6871779	0.4	35.5	27	92	0	34.6	16.7	564	3.97	154.4
HN-05571	HN05571	NAD83-9V	507880	6871807	1.1	48.5	36.5	119	0.2	43.3	55.5	798	4.19	229
HN-05572	HN05572	NAD83-9V	507920	6871839	1.1	38.6	35.9	90	0.1	27.7	18	673	5.65	127.5
HN-05573	HN05573	NAD83-9V	507964	6871872	0.9	39.3	30.5	88	0	34.7	17.6	592	4.67	142.3
HN-05574	HN05574	NAD83-9V	507998	6871899	0.9	27.1	24.8	74	0	20.8	9.9	634	4.17	68.1
HN-05575	HN05575	NAD83-9V	508038	6871930	0.4	15.6	10.7	33	0	9.2	3.9	242	1.58	22.3
HN-05576	HN05576	NAD83-9V	508076	6871960	0.6	25.3	24.2	75	0	21.5	8.2	522	3.71	41
HN-05577	HN05577	NAD83-9V	508120	6871990	0.6	83.6	40.2	125	0	58	31.2	903	4.83	166
HN-05578	HN05578	NAD83-9V	508199	6872052	1.1	18	19.1	41	0	10.3	6.8	424	3.12	160.1
HN-05579	HN05579	NAD83-9V	508240	6872080	1	32.1	27.8	74	0	23.8	11.2	498	4.59	124.4
HN-05580	HN05580	NAD83-9V	508280	6872111	0.9	24.6	22.3	61	0	17.8	7.9	357	3.54	84.8
HN-05581	HN05581	NAD83-9V	508318	6872141	0.8	54.2	35.4	118	0	55.2	27.6	648	4.29	195.7
HN-05582	HN05582	NAD83-9V	508399	6872202	0.8	25.6	22.4	83	0	26.3	12.2	498	4	190.6
HN-05583	HN05583	NAD83-9V	508478	6872263	0.6	39.1	22.9	95	0	34	17.2	566	4.31	78.2
HN-05584	HN05584	NAD83-9V	508519	6872292	1.1	43.5	40.8	94	0	35.1	28.1	657	5.17	165.8
HN-05585	HN05585	NAD83-9V	508559	6872323	1.1	27.4	30.5	58	0	13.2	5.3	260	4.03	196.1
HN-05586	HN05586	NAD83-9V	508599	6872351	0.9	38.4	26.8	84	0	24.3	12.3	400	4.01	82.7
HN-05587	HN05587	NAD83-9V	508540	6872434	1.4	30.6	31.6	51	0	12.3	8	403	3.73	248.1
HN-05588	HN05588	NAD83-9V	508499	6872402	1.1	51.5	35.7	81	0	18.6	8.5	337	5.05	314.8

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-05515	2.4	26.7	19	8	0.1	0.6	0.4	13	0.02	0.051	23	24	0.64	24	0.005	0	1.65	0.007	0.03	2
HN-05516	3.2	200.4	27.5	12	0	1.1	0.5	14	0.01	0.052	32	28	0.78	28	0.005	0	1.73	0.008	0.03	6.6
HN-05517	1.7	13.4	15.9	4	0	0.7	0.5	14	0.01	0.057	17	25	0.64	15	0.006	0	1.58	0.008	0.02	0.4
HN-05518	3.5	54.2	21.1	11	0.1	1.3	0.7	16	0.03	0.081	33	25	0.6	27	0.014	0	1.64	0.008	0.04	4.8
HN-05519	3.4	19.8	32.7	19	0	2.6	1.9	9	0.03	0.083	82	24	0.49	21	0.003	0	1.17	0.008	0.06	0.1
HN-05520	1	37.3	1.4	4	0.1	0.6	0.4	30	0.02	0.052	15	16	0.31	19	0.014	1	1.06	0.005	0.02	0.7
HN-05521	2	4.3	13.2	6	0.1	0.3	0.2	16	0.08	0.053	29	22	0.7	32	0.011	1	1.63	0.003	0.03	0.4
HN-05522	1.1	44.1	10.2	3	0.1	0.9	0.4	21	0.01	0.042	24	19	0.42	18	0.012	1	1.17	0.002	0.02	0.7
HN-05523	3	9.2	12.6	11	0.2	0.6	0.4	18	0.02	0.047	27	24	0.79	58	0.011	4	2.05	0.006	0.04	0.6
HN-05535	0.5	2.7	0.3	6	0.1	0.4	0.3	25	0.04	0.069	11	14	0.37	29	0.008	1	1.19	0.01	0.03	0.1
HN-05536	0.8	3.8	11.8	7	0.1	0.5	0.3	20	0.12	0.073	26	27	1.29	16	0.009	0	2.34	0.002	0.02	0.1
HN-05537	1.5	8.4	6.4	5	0.1	0.6	0.4	23	0.06	0.094	18	28	0.9	23	0.01	1	2.15	0.004	0.03	0.2
HN-05538	0.8	0.6	4.3	5	0.1	0.3	0.3	15	0.06	0.068	7	14	0.49	20	0.012	1	1.39	0.016	0.03	0.1
HN-05539	0.9	1.6	0.9	5	0.1	0.2	0.2	11	0.05	0.055	7	9	0.27	20	0.013	1	1.22	0.018	0.03	0.1
HN-05540	1.9	5	1.2	6	0.1	0.5	0.4	22	0.04	0.216	18	18	0.32	32	0.005	0	1.37	0.009	0.04	0.3
HN-05541	2.5	19.7	13.2	6	0.1	0.5	0.4	19	0.09	0.064	24	29	0.99	29	0.008	0	2.26	0.004	0.03	0.3
HN-05542	0.5	13.5	0.2	9	0.1	0.2	0.1	12	0.11	0.052	7	4	0.05	31	0.008	1	0.68	0.017	0.02	0.4
HN-05543	1.8	16	5	11	0.1	0.8	0.6	20	0.06	0.059	19	25	0.7	39	0.009	0	1.89	0.005	0.04	0.7
HN-05544	1.3	15.4	9.1	3	0.1	4	0.7	17	0.02	0.08	33	22	0.31	17	0.004	0	1.11	0.003	0.03	0.4
HN-05545	1	55.7	0.6	7	0.1	0.5	0.4	23	0.03	0.069	17	16	0.29	40	0.007	1	1.05	0.009	0.03	0.3
HN-05546	1.5	5.8	1.2	4	0	0.4	0.4	20	0.03	0.096	25	16	0.27	13	0.005	0	0.92	0.006	0.03	0.4
HN-05549	1.6	19.1	7.3	4	0.1	0.4	0.3	16	0.03	0.043	30	22	0.66	25	0.006	1	1.64	0.004	0.03	0.4
HN-05550	1.2	146.9	7	3	0.1	0.3	0.3	16	0.02	0.036	27	21	0.58	22	0.006	0	1.5	0.003	0.03	0.6
HN-05551	0.8	16.8	3.8	3	0.1	0.3	0.3	15	0.01	0.046	22	18	0.42	26	0.005	0	1.27	0.004	0.04	0.8
HN-05552	1.2	15.6	6.1	4	0.1	0.3	0.3	16	0.02	0.042	26	22	0.61	29	0.005	0	1.6	0.005	0.04	0.7
HN-05553	1	24.6	9.4	3	0	0.3	0.3	16	0.01	0.034	27	24	0.66	25	0.004	0	1.63	0.003	0.03	0.6
HN-05554	1.2	172.3	4.1	4	0.1	0.4	0.4	20	0.04	0.076	26	23	0.59	17	0.008	0	1.55	0.004	0.02	0.5
HN-05555	0.7	4.8	0.2	5	0	0.1	0.1	8	0.03	0.059	15	5	0.09	26	0.004	0	0.85	0.013	0.02	0.2
HN-05556	0.8	1.4	7.6	5	0.1	0.4	0.4	21	0.08	0.088	14	27	1.08	31	0.009	0	2.48	0.005	0.03	0.2
HN-05557	1.2	2.4	4.5	7	0.2	0.6	0.5	27	0.07	0.085	20	29	0.84	39	0.014	1	2.48	0.005	0.03	0.2
HN-05558	1.5	3.1	5	5	0.2	0.5	0.4	24	0.05	0.087	14	27	0.73	29	0.011	0	2.34	0.005	0.03	0.2
HN-05559	1.3	15.6	4.3	7	0.1	0.5	0.6	27	0.06	0.07	17	25	0.79	30	0.018	0	2.04	0.004	0.03	0.2
HN-05560	2.6	5	10.1	7	0.1	0.8	0.6	19	0.06	0.079	16	22	0.65	30	0.014	0	1.71	0.008	0.03	0.2
HN-05561	0.9	12.4	0.8	4	0	0.2	0.2	15	0.03	0.049	14	12	0.26	27	0.007	0	1.02	0.009	0.02	0.3
HN-05562	1	4.3	0.7	3	0	0.3	0.3	19	0.01	0.061	15	10	0.14	13	0.006	0	0.75	0.007	0.02	0.6
HN-05563	1.7	175	7.5	5	0.1	0.4	0.4	18	0.04	0.06	27	26	0.67	17	0.01	0	1.72	0.002	0.02	0.5
HN-05564	2.6	10	3	8	0	0.6	0.5	20	0.04	0.079	20	21	0.48	36	0.008	0	1.67	0.009	0.03	0.4
HN-05565	4.1	125.4	18.1	8	0.1	1	0.5	11	0.04	0.056	29	21	0.73	15	0.005	0	1.57	0.004	0.02	0.7
HN-05566	1.8	22.9	16.9	4	0.1	0.6	0.4	14	0.05	0.059	22	29	0.68	16	0.01	1	2.2	0.004	0.02	0.9
HN-05567	3	12	8.1	11	0	1.2	0.8	19	0.05	0.08	14	20	0.51	27	0.017	2	1.53	0.012	0.04	0.2
HN-05568	1.2	6.7	11.7	5	0.1	0.5	0.4	20	0.08	0.071	14	29	0.84	33	0.014	1	2.32	0.005	0.03	0.2
HN-05569	1.3	16.8	10.9	5	0.1	0.6	0.5	18	0.06	0.057	17	28	0.88	29	0.011	1	2.2	0.006	0.02	0.5
HN-05570	1.4	49.2	9.5	5	0.1	0.6	0.5	18	0.04	0.053	27	26	0.72	29	0.008	0	2.05	0.003	0.03	0.4
HN-05571	5.8	40	7.4	11	0.2	0.6	0.6	16	0.12	0.072	46	27	0.66	38	0.007	1	2.26	0.005	0.03	1.8
HN-05572	2.1	272.6	8.2	4	0.2	0.7	0.6	22	0.02	0.064	20	32	0.67	27	0.008	0	2.18	0.003	0.02	0.4
HN-05573	1.8	44.1	5.9	6	0.1	0.7	0.5	17	0.06	0.109	20	28	0.76	19	0.009	0	2.12	0.005	0.02	0.7
HN-05574	1.8	10.3	4.2	5	0.2	0.5	0.5	19	0.02	0.089	15	25	0.59	29	0.008	0	1.99	0.005	0.03	0.4
HN-05575	1	8.9	2.2	7	0	0.2	0.2	10	0.07	0.064	7	10	0.3	23	0.013	0	0.99	0.02	0.03	0.1
HN-05576	1.7	10	7.6	4	0.1	0.5	0.4	15	0.02	0.091	11	24	0.76	20	0.006	1	1.81	0.005	0.03	0.3
HN-05577	3.2	39.5	17.5	5	0.1	0.8	0.7	16	0.08	0.077	21	30	0.98	30	0.007	1	2.34	0.005	0.04	0.8
HN-05578	1.6	22.7	1.1	7	0.2	0.5	0.4	20	0.07	0.094	11	17	0.23	27	0.011	0	1.32	0.011	0.04	1
HN-05579	1.8	38.9	5.7	6	0.1	0.7	0.5	19	0.02	0.068	22	26	0.61	25	0.012	1	1.77	0.006	0.03	0.8
HN-05580	1.5	29.9	2.7	6	0.1	0.6	0.4	28	0.03	0.068	17	23	0.43	30	0.019	0	1.51	0.008	0.03	0.7
HN-05581	2.5	55.1	12.8	7	0.1	0.7	0.5	18	0.07	0.081	25	28	0.75	28	0.014	1	2.01	0.006	0.04	1.5
HN-05582	1.5	39	4.9	5	0.1	0.5	0.4	21	0.04	0.056	20	26	0.68	35	0.011	0	1.94	0.004	0.03	1.3
HN-05583	1.9	25.1	10.3	5	0.1	0.5	0.5	19	0.06	0.048	20	30	0.94	36	0.009	0	2.25	0.003	0.03	1
HN-05584	2.2	19.9	15.4	6	0.1	0.9	0.6	20	0.04	0.075	25	30	0.84	31	0.013	1	2.09	0.003	0.03	1.5
HN-05585	1.3	59.1	6.3	5	0	0.9	0.5	19	0.02	0.053	20	23	0.56	28	0.012	0	1.52	0.004	0.02	0.9
HN-05586	2.3	25	10.7	6	0.1	0.6	0.4	21	0.02	0.043	26	26	0.75	36	0.015	1	1.87	0.003	0.04	0.6
HN-05587	1.5	27.4	1.6	6	0.1	0.8	0.5	23	0.03	0.11	16	19	0.32	38	0.01	1	1.35	0.009	0.03	2.1
HN-05588	2.1	25	15.2	5	0.1	1.1	0.5	19	0.02	0.059	25	27	0.73	32	0.012	0	1.86	0.003	0.04	1.2

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-05515	0.03	1.2	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05516	0.01	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05517	0.02	1.1	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05518	0.02	1.6	0	0	5	0.9	15	GROUP 1DX - 15.0 GM	A607417
HN-05519	0.01	1.1	0.1	0.17	5	1.3	7.5	GROUP 1DX - 15.0 GM	A607417
HN-05520	0.04	0.6	0.1	0.06	7	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05521	<.01	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05522	0.02	0.9	0.1	0	6	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05523	0.01	1.7	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05535	0.01	0.3	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05536	<.01	1.6	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05537	0.02	1.1	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05538	0.01	0.9	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05539	0.01	0.6	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05540	0.03	0.3	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05541	0.01	1.8	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05542	0.01	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05543	0.02	1	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05544	0.02	0.9	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05545	0.01	0.3	0.1	0.06	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05546	0.05	0.3	0.1	0.06	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05549	0.01	1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05550	0.01	0.9	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05551	0.01	0.7	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05552	0.01	1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05553	0.01	1.1	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05554	0.02	0.8	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05555	0.03	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05556	0.01	1.3	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05557	0.02	1.3	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05558	0.04	1.1	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05559	0.02	1.2	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05560	0.01	1.4	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05561	0.02	0.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05562	0.02	0.3	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05563	0.02	1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05564	0.02	0.8	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05565	<.01	1.2	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05566	0.03	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05567	0.01	1.3	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05568	0.02	1.6	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05569	0.01	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05570	0.02	1.3	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05571	0.03	1.2	0	0	6	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05572	0.04	1.1	0	0	8	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05573	0.03	1	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05574	0.03	0.8	0.1	0.06	7	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05575	0.01	0.7	0	0	3	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05576	0.04	1	0	0.07	6	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-05577	0.02	1.9	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05578	0.03	0.5	0.1	0.08	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05579	0.02	1	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05580	0.01	0.9	0.1	0	6	0.9	15	GROUP 1DX - 15.0 GM	A607417
HN-05581	0.02	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05582	0.02	1	0.1	0.06	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05583	0.01	1.6	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05584	0.01	1.4	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05585	0.02	0.9	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05586	0.01	1.6	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05587	0.02	0.6	0.1	0.08	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05588	0.02	1.3	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-05589	HN05589	NAD83-9V	508457	6872372	1.1	48.3	32.4	81	0	20.2	10.5	361	4.59	183.6
HN-05590	HN05590	NAD83-9V	508423	6872344	1.2	35.3	32.2	70	0	14.2	7.8	393	4.77	318.6
HN-05591	HN05591	NAD83-9V	508373	6872313	1	24.6	24.6	69	0	21.5	8.8	366	3.98	123.3
HN-05592	HN05592	NAD83-9V	508339	6872282	0.7	40.5	29.3	85	0	26.5	16.4	507	4.05	211.7
HN-05593	HN05593	NAD83-9V	508301	6872253	0.5	30.1	22.2	86	0	28.9	12.5	417	4.18	123.1
HN-05594	HN05594	NAD83-9V	508223	6872194	0.8	30.3	27	91	0	29.2	15.3	533	4.26	129.9
HN-05595	HN05595	NAD83-9V	508743	6871834	0.7	73.2	36.5	109	0	60.2	62.6	1349	4.98	45.2
HN-05596	HN05596	NAD83-9V	508780	6871863	0.5	28.4	23.9	72	0	27.7	13.5	1021	3.76	21.1
HN-05597	HN05597	NAD83-9V	508822	6871894	0.5	64.3	32.9	99	0	45.3	33.1	826	4.13	51.7
HN-05598	HN05598	NAD83-9V	508866	6871925	1	72.5	45.5	110	0	45.3	31.2	884	4.72	73.6
HN-05599	HN05599	NAD83-9V	508897	6871954	0.7	68	47.4	88	0	50.5	45.2	1513	3.9	31.3
HN-05600	HN05600	NAD83-9V	508338	6872783	0.8	38.7	33.7	80	0	23.1	11.6	383	4.62	327.1
HN-05601	HN05601	NAD83-9V	509544	6872188	0.5	17.6	10.6	66	0	21.8	7.3	451	4.22	161.4
HN-05602	HN05602	NAD83-9V	509504	6872159	0.3	12.6	7	28	0	8.6	3.2	128	1.59	13.3
HN-05603	HN05603	NAD83-9V	509464	6872129	0.7	37.5	24.8	92	0	41.4	16	454	4.39	104.1
HN-05604	HN05604	NAD83-9V	509423	6872098	0.6	24.3	16	49	0	13.2	7.7	227	3.99	43.2
HN-05605	HN05605	NAD83-9V	509382	6872067	0.7	80.5	38.2	108	0	27	9.2	620	6.29	76.1
HN-05606	HN05606	NAD83-9V	509344	6872036	0.2	2.3	2.8	7	0	1.4	0.9	23	0.31	2.1
HN-05607	HN05607	NAD83-9V	509303	6872008	1	70.8	33.9	99	0	34.7	38.5	645	3.34	115.8
HN-05610	HN05610	NAD83-9V	509183	6871916	0.6	23.8	11.6	60	0	23.5	9.2	591	2.9	15.4
HN-05611	HN05611	NAD83-9V	509143	6871887	0.7	40.1	21.7	85	0	37.3	14.3	839	4.32	17.1
HN-05612	HN05612	NAD83-9V	509103	6871857	0.4	22.4	6.9	16	0	5.5	2.5	155	1	5
HN-05613	HN05613	NAD83-9V	509062	6871827	0.9	39.8	26.1	47	0	16.5	10.8	1143	3.12	11.4
HN-05619	HN05619	NAD83-9V	508400	6872697	0.9	43.9	31.1	86	0	24.9	10.9	358	4.49	282.3
HN-05620	HN05620	NAD83-9V	508449	6872723	1.3	68.5	54.7	150	0	108.5	80.6	719	4.34	217.1
HN-05621	HN05621	NAD83-9V	508494	6872751	0.6	55.2	28.2	112	0	77.7	41.5	620	4.12	128.1
HN-05622	HN05622	NAD83-9V	508546	6872774	1	81.8	24.6	133	0	77.8	75.7	939	4.63	281.6
HN-05623	HN05623	NAD83-9V	508579	6872806	1.7	75.3	42.2	181	0.1	96.3	90.6	1104	4.65	547.5
HN-05624	HN05624	NAD83-9V	508624	6872825	1.4	51.4	28.5	101	0	48.1	33.8	550	4.64	63
HN-05625	HN05625	NAD83-9V	508667	6872848	1	29.3	25.4	77	0	23.4	12.6	444	4.36	76.6
HN-05626	HN05626	NAD83-9V	508710	6872871	0.9	34.4	23.3	68	0	22.2	9.2	397	3.44	94.6
HN-05627	HN05627	NAD83-9V	508745	6872901	0.9	16.6	18.6	41	0	14.9	8.1	733	2.27	340.6
HN-05628	HN05628	NAD83-9V	508792	6872926	0.7	64.5	36.1	76	0.1	26	16.5	323	4.02	556.1
HN-05629	HN05629	NAD83-9V	508839	6872952	0.7	53.9	33	81	0	26.6	15.9	371	4.43	453.5
HN-05630	HN05630	NAD83-9V	508880	6872983	0.9	44.6	29.8	81	0	21.4	11.8	369	4.7	255.5
HN-05631	HN05631	NAD83-9V	508925	6873002	0.8	48.2	34.7	77	0	14.4	6.7	362	4.9	372.3
HN-05632	HN05632	NAD83-9V	508979	6873013	0.5	25.4	17.6	70	0	16.5	7.9	331	3.41	150.3
HN-05633	HN05633	NAD83-9V	509022	6873041	0.9	25.1	21.6	64	0	10.6	6.5	345	4.35	338.8
HN-05634	HN05634	NAD83-9V	509062	6873072	0.7	35.1	23.7	67	0	15	5.7	298	3.97	173.1
HN-05635	HN05635	NAD83-9V	509097	6873107	0.6	23.4	18.8	70	0	20.9	11.3	394	4.09	148.2
HN-05636	HN05636	NAD83-9V	509035	6873186	0.8	19.2	23.4	62	0	5.9	3.8	534	4.55	101.6
HN-05637	HN05637	NAD83-9V	508998	6873156	1	37.5	51.9	59	0	12.1	5.4	290	4.82	1254.6
HN-05638	HN05638	NAD83-9V	508958	6873124	0.7	30.7	25.1	66	0	18.4	9	318	3.85	233.6
HN-05639	HN05639	NAD83-9V	508918	6873094	0.9	29.8	21.2	66	0	10.6	4.5	265	4.34	138.5
HN-05640	HN05640	NAD83-9V	508878	6873066	0.8	22.6	23.1	57	0	12.3	6	279	3.57	282.3
HN-05641	HN05641	NAD83-9V	508830	6873033	0.9	30.6	29.2	70	0	9.3	6.2	347	4.54	75.6
HN-05642	HN05642	NAD83-9V	508795	6873003	1	39.9	23.5	63	0.1	14.1	6.9	257	3.61	138.3
HN-05643	HN05643	NAD83-9V	508756	6872973	1.5	56	37.4	76	0	27.6	12.7	376	5.13	1228.4
HN-05644	HN05644	NAD83-9V	508718	6872939	0.8	26.8	25.8	58	0	12.9	6.2	361	4.26	306.2
HN-05645	HN05645	NAD83-9V	508676	6872914	0.9	31.3	22.1	72	0	20.4	8.8	442	4.49	339
HN-05646	HN05646	NAD83-9V	508630	6872878	1	17.2	15.8	36	0.1	8.6	3	156	4.19	20.2
HN-05647	HN05647	NAD83-9V	507901	6871696	0.6	27.6	18.3	40	0	12.5	6.3	296	2.44	20.2
HN-05648	HN05648	NAD83-9V	507940	6871728	0.5	79.4	37	115	0	47.8	25.9	504	4.18	67.2
HN-05649	HN05649	NAD83-9V	507983	6871760	0.7	20.4	14.3	53	0	17.3	6.6	241	2.34	31.1
HN-05650	HN05650	NAD83-9V	508025	6871791	0.8	34.8	22.9	99	0	36.5	17.9	664	4.76	63.3
HN-05651	HN05651	NAD83-9V	508074	6871828	0.5	33.2	16.4	50	0	19.2	9.8	422	2.68	31.9
HN-05652	HN05652	NAD83-9V	508102	6871850	0.6	38.7	24.1	88	0	32.2	14.6	485	3.86	82.4
HN-05653	HN05653	NAD83-9V	508142	6871880	0.6	38.3	28.8	96	0	35.6	21.9	561	4.4	96.2
HN-05654	HN05654	NAD83-9V	508183	6871911	1.1	29.1	24.3	88	0	27.6	14.7	559	4.18	147.5
HN-05655	HN05655	NAD83-9V	509220	6871698	0.5	15	17.9	16	0	4.9	6.8	499	0.87	6.3
HN-05656	HN05656	NAD83-9V	509263	6871725	1.5	16.3	14.1	38	0	13.3	5.7	339	2.65	20.3

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-05589	2.7	43.6	11.4	6	0	0.9	0.4	20	0.01	0.053	23	28	0.72	42	0.011	0	1.95	0.003	0.03	1.3
HN-05590	1.8	134.3	6	8	0.1	0.8	0.4	22	0.01	0.067	20	26	0.59	36	0.01	0	1.72	0.004	0.03	1.7
HN-05591	1.5	20.5	5.1	5	0	0.6	0.5	22	0.04	0.049	18	25	0.61	31	0.011	1	1.69	0.004	0.03	1
HN-05592	2.2	67.4	13.3	5	0.1	0.7	0.4	17	0.04	0.057	22	25	0.76	33	0.016	0	1.8	0.005	0.05	1.2
HN-05593	1.9	65	9.6	5	0.1	0.4	0.4	16	0.05	0.058	24	27	0.76	20	0.024	1	1.96	0.002	0.02	0.8
HN-05594	1.8	378.1	9.4	6	0.1	0.6	0.4	21	0.06	0.058	23	27	0.79	28	0.018	0	1.98	0.004	0.03	1.1
HN-05595	2.6	2.9	18.4	4	0.1	0.6	0.8	16	0.05	0.106	15	30	0.9	20	0.006	0	2.87	0.004	0.02	0.3
HN-05596	1.1	2.4	7.4	3	0.1	0.6	0.6	17	0.03	0.089	11	23	0.68	28	0.009	0	2.3	0.006	0.02	0.2
HN-05597	1.6	22.8	10.9	5	0	0.9	0.6	19	0.07	0.06	18	26	0.86	27	0.01	0	2.17	0.006	0.02	0.5
HN-05598	2.7	14.1	13.1	6	0.1	1.2	0.6	26	0.06	0.095	25	35	0.95	23	0.012	0	2.41	0.005	0.05	0.3
HN-05599	1.3	1.7	11.1	5	0.1	0.7	0.5	19	0.08	0.082	32	26	1.11	21	0.009	0	2.26	0.005	0.02	0.2
HN-05600	1.8	29.2	15.1	7	0	0.6	0.4	18	0.02	0.045	26	24	0.67	32	0.009	0	1.89	0.004	0.04	1.8
HN-05601	0.9	23.4	6.9	4	0.1	0.4	0.3	15	0.03	0.039	20	24	0.74	21	0.006	0	1.81	0.002	0.03	0.5
HN-05602	0.7	2.4	0.3	5	0	0.2	0.2	12	0.02	0.05	9	10	0.24	14	0.006	0	0.84	0.01	0.02	0.2
HN-05603	1.4	10.7	12.7	4	0.1	0.5	0.4	16	0.04	0.046	23	25	0.77	23	0.008	0	1.96	0.003	0.03	0.8
HN-05604	1.5	5.1	1.1	6	0.1	0.6	0.4	16	0.04	0.071	13	20	0.35	21	0.01	0	1.24	0.009	0.02	0.4
HN-05605	2.1	2.8	23.3	2	0	0.8	0.5	17	0.01	0.075	55	36	1.02	11	0.002	0	2.41	0.004	0.04	0.2
HN-05606	0.2	0.8	0.2	5	0	0.1	0	8	0.02	0.035	2	2	0.02	10	0.006	1	0.15	0.021	0.02	0.1
HN-05607	2.9	6.1	2.6	10	0.1	0.5	0.5	23	0.04	0.072	18	22	0.56	88	0.009	0	1.83	0.009	0.04	0.7
HN-05610	0.9	1.4	2.4	5	0.1	0.3	0.3	14	0.06	0.081	12	18	0.68	23	0.012	1	1.62	0.012	0.03	0.1
HN-05611	1.3	2.1	8.4	6	0	0.4	0.4	20	0.08	0.078	21	28	1.12	24	0.01	0	2.37	0.003	0.03	0.2
HN-05612	0.7	0	0.5	5	0	0.1	0.1	10	0.04	0.075	24	6	0.17	15	0.008	0	1	0.016	0.02	0.1
HN-05613	1.2	8.1	1.3	5	0.1	0.5	0.5	23	0.03	0.107	36	22	0.44	28	0.008	1	1.52	0.008	0.02	0.1
HN-05619	2.1	31.5	15.1	6	0.1	0.5	0.4	16	0.01	0.042	24	26	0.74	34	0.007	0	1.98	0.003	0.03	0.5
HN-05620	6.5	50.1	15.9	8	0.1	0.6	0.4	18	0.05	0.054	37	24	0.67	40	0.01	1	2.31	0.005	0.05	1.2
HN-05621	2.3	15.6	11.8	6	0.1	0.6	0.5	18	0.05	0.056	18	26	0.83	42	0.009	0	2.18	0.006	0.04	1
HN-05622	4.9	170.8	12	5	0.1	0.7	0.4	17	0.03	0.048	32	26	0.84	28	0.011	1	2.1	0.004	0.03	1.2
HN-05623	5.4	26.8	13.9	8	0.2	1.2	0.6	17	0.05	0.077	27	24	0.65	44	0.012	0	1.98	0.007	0.05	2
HN-05624	2	208.4	15.7	7	0.1	1.1	0.5	21	0.05	0.06	23	26	0.73	38	0.015	0	1.88	0.004	0.05	0.6
HN-05625	1.5	15.4	9	6	0.1	0.6	0.4	19	0.03	0.057	20	25	0.68	26	0.015	0	1.79	0.004	0.03	0.6
HN-05626	1.8	8.2	5.4	5	0.1	0.5	0.4	20	0.04	0.066	20	21	0.57	25	0.013	0	1.8	0.007	0.03	0.5
HN-05627	0.8	21.8	4.9	3	0.1	0.3	0.2	10	0.03	0.046	9	10	0.23	10	0.007	0	0.73	0.002	0.01	0.6
HN-05628	3	87.6	17.6	7	0	0.8	0.4	12	0.03	0.054	20	18	0.52	19	0.011	0	1.36	0.005	0.02	12.7
HN-05629	2.7	20.5	19.3	7	0	0.6	0.5	12	0.02	0.045	22	24	0.71	22	0.011	0	1.69	0.005	0.04	9.1
HN-05630	2.2	10.8	19.3	6	0	0.6	0.4	15	0.01	0.047	25	26	0.78	23	0.011	0	1.82	0.005	0.03	1.3
HN-05631	2.5	21.4	17.7	7	0	0.7	0.5	14	0.01	0.047	23	27	0.81	22	0.011	1	1.87	0.004	0.02	1.9
HN-05632	1.2	5.2	12.8	4	0.1	0.3	0.3	14	0.02	0.035	15	23	0.68	26	0.007	0	1.78	0.002	0.03	4.1
HN-05633	1.3	8.5	11.1	4	0	0.4	0.4	17	0.01	0.036	16	25	0.72	23	0.008	0	1.72	0.003	0.04	3
HN-05634	1.8	10	14.4	6	0	0.5	0.4	17	0.02	0.032	36	24	0.71	27	0.009	0	1.79	0.004	0.04	1.3
HN-05635	1.1	224.4	11.9	3	0.1	0.3	0.4	15	0.02	0.036	19	25	0.71	28	0.006	0	1.97	0.003	0.03	1.1
HN-05636	0.8	4.9	11.7	3	0	0.4	0.7	18	0.01	0.037	15	29	0.84	13	0.006	0	1.71	0.003	0.02	0.4
HN-05637	2.7	35.5	15.9	9	0.1	0.8	0.5	16	0.02	0.072	29	20	0.46	53	0.013	0	1.44	0.006	0.04	4
HN-05638	1.2	6.5	14.8	4	0.1	0.4	0.3	16	0.02	0.035	18	26	0.66	26	0.009	0	2.1	0.003	0.04	2
HN-05639	1.8	6.2	15.3	6	0	0.5	0.4	20	0.02	0.045	27	25	0.67	21	0.014	1	1.64	0.002	0.03	0.6
HN-05640	1.4	22.4	8	6	0	0.4	0.4	20	0.02	0.049	22	22	0.57	32	0.012	0	1.71	0.004	0.04	1.3
HN-05641	2.1	4.2	22	9	0	0.5	0.5	15	0.01	0.052	28	26	0.77	24	0.03	1	1.9	0.005	0.03	0.5
HN-05642	2	20.4	14.4	10	0	0.5	0.4	16	0.03	0.066	25	21	0.57	23	0.016	1	1.66	0.014	0.04	0.8
HN-05643	4.1	25.6	29	20	0.1	1.2	0.5	22	0.03	0.061	36	27	0.7	96	0.034	1	2.06	0.007	0.06	0.8
HN-05644	1.4	12.5	11.4	5	0.1	0.5	0.4	18	0.02	0.062	20	22	0.51	20	0.01	1	1.59	0.004	0.03	1.9
HN-05645	1.3	4.8	5.4	6	0.1	0.5	0.5	23	0.03	0.057	18	25	0.65	33	0.015	1	1.94	0.009	0.04	0.7
HN-05646	1.1	2.8	7.2	6	0	0.7	0.4	28	0.01	0.069	18	17	0.29	19	0.006	1	1.22	0.004	0.03	0.2
HN-05647	1	13.2	1.4	5	0	0.5	0.4	21	0.02	0.051	16	13	0.36	26	0.013	2	1.42	0.015	0.04	0.1
HN-05648	1.4	94.3	13	7	0.1	0.6	0.4	20	0.06	0.046	39	26	0.88	24	0.009	0	2.17	0.003	0.03	0.3
HN-05649	1.4	6.2	3.1	6	0.1	0.3	0.3	17	0.04	0.044	18	17	0.48	25	0.007	0	1.52	0.009	0.02	0.3
HN-05650	1.7	58.5	9.6	8	0.1	0.6	0.5	18	0.08	0.051	25	29	0.87	25	0.011	0	2.37	0.004	0.03	0.4
HN-05651	1.5	15.8	2.2	6	0.1	0.4	0.3	17	0.05	0.067	16	17	0.46	20	0.008	0	1.63	0.015	0.03	0.2
HN-05652	1.6	60.5	8.2	6	0.1	0.5	0.4	16	0.04	0.059	19	25	0.7	25	0.008	1	2.05	0.007	0.03	0.4
HN-05653	2	25.4	14.4	6	0.1	0.5	0.5	15	0.04	0.061	24	27	0.81	20	0.008	0	2.23	0.003	0.02	1.1
HN-05654	2.4	28	4.8	7	0.1	0.7	0.6	21	0.04	0.083	24	25	0.62	30	0.012	1	2.25	0.003	0.04	0.8
HN-05655	0.6	0	0.3	6	0.1	0.1	0.1	11	0.04	0.061	11	5	0.1	23	0.006	0	0.61	0.021	0.02	0.1
HN-05656	1.1	1.6	3	10	0.1	0.3	0.3	20	0.08	0.116	18	14	0.35	36	0.007	0	1.39	0.01	0.03	0.1

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-05589	0.01	1.3	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05590	0.03	0.9	0.1	0.07	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05591	0.01	1.1	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05592	0.02	1.7	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05593	0.02	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05594	0.01	1.4	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05595	0.03	1.6	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05596	0.03	1	0	0	7	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05597	0.01	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05598	<.01	1.9	0.1	0	8	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05599	0.01	1.5	0	0	7	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05600	0.02	1.2	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05601	0.02	1.1	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05602	0.02	0.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05603	0.01	1.3	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05604	0.02	0.4	0	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05605	0.01	2	0.1	0	7	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05606	0.01	0.2	0	0	1	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05607	0.01	1.1	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05610	0.02	0.8	0	0	5	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-05611	0.01	1.4	0	0	7	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05612	0.02	0.3	0	0	3	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05613	0.02	0.5	0	0.07	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05619	0.02	1.3	0	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05620	0.03	1.9	0.3	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05621	0.02	1.7	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05622	0.01	1.9	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05623	0.02	1.9	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05624	0.01	1.7	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05625	0.02	1.2	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05626	0.02	1.1	0.1	0	5	1	15	GROUP 1DX - 15.0 GM	A607417
HN-05627	0.02	0.8	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05628	0.01	1.2	0	0	4	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05629	<.01	1.7	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05630	0.01	1.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05631	0.01	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05632	0.01	1.2	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05633	0.01	1.1	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05634	0.01	1.3	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05635	0.01	1.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05636	0.01	1.1	0	0	7	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05637	0.01	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05638	0.03	1.4	0	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05639	0.01	1.1	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05640	0.02	1	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05641	<.01	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05642	0.02	1.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05643	0.01	2.6	0	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607417
HN-05644	0.03	1	0	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05645	0.03	1.1	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05646	0.06	0.8	0.1	0.06	9	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05647	0.02	0.7	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05648	0.01	1.3	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05649	0.01	0.8	0	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05650	0.01	1.2	0	0	7	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05651	0.02	0.6	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05652	0.02	1.1	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05653	0.02	1.3	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05654	0.02	0.9	0	0	7	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05655	0.03	0.1	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05656	0.03	0.4	0	0.08	5	0	15	GROUP 1DX - 15.0 GM	A607417

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-05657	HN05657	NAD83-9V	509303	6871755	0.4	5.3	3.8	10	0	2	1.3	72	0.54	7.3
HN-05658	HN05658	NAD83-9V	509344	6871785	0.5	16.2	9.4	39	0	12.8	7.9	262	1.72	19.8
HN-05659	HN05659	NAD83-9V	509384	6871815	1	5	4	12	0	2.6	2.3	136	0.65	11.6
HN-05660	HN05660	NAD83-9V	509424	6871844	0.6	24.5	18.7	62	0	23.8	11.1	400	3.8	67.8
HN-05661	HN05661	NAD83-9V	509463	6871876	0.9	42.3	28.2	44	0.2	25.1	31.1	360	1.74	90.7
HN-05662	HN05662	NAD83-9V	509505	6871906	0.6	36.8	26.8	18	0.2	8.9	44.1	540	0.52	47.4
HN-05663	HN05663	NAD83-9V	509541	6871938	0.7	15	11.5	27	0	6.6	3.4	194	2.36	27.7
HN-05664	HN05664	NAD83-9V	509583	6871967	0.4	4.3	4.9	11	0	2.6	1.4	50	0.91	11.4
HN-05665	HN05665	NAD83-9V	509622	6871993	0.8	28.8	13.7	24	0	5.2	2.4	235	2.59	24
HN-05666	HN05666	NAD83-9V	509665	6872024	0.4	11.2	8.1	41	0	13.8	4.2	240	2.46	21.9
HN-05667	HN05667	NAD83-9V	509702	6872052	0.5	22.8	17.2	69	0	26.2	8.4	378	4.01	74.1
HN-05668	HN05668	NAD83-9V	509740	6872086	0.2	10.1	6.4	24	0	7.4	2.3	123	1.33	30.3
HN-05669	HN05669	NAD83-9V	509780	6872119	0.6	38.7	17.1	53	0.1	24.3	14.5	406	1.9	106.2
HN-05670	HN05670	NAD83-9V	509819	6872151	0.3	14.9	13.4	33	0.1	11.9	3.5	166	1.67	47.7
HN-05671	HN05671	NAD83-9V	509760	6872232	0.3	18.6	9.6	34	0	11.8	3.3	177	1.85	27.2
HN-05672	HN05672	NAD83-9V	509714	6872207	0.4	30.4	14.4	82	0	29.6	12.4	534	3.83	58.5
HN-05673	HN05673	NAD83-9V	509680	6872176	0.4	19.9	13.4	54	0.2	18	6	306	2.88	51.2
HN-05674	HN05674	NAD83-9V	509635	6872150	0.4	14.2	11.2	61	0	17	5.2	321	3.55	147
HN-05675	HN05675	NAD83-9V	509594	6872120	0.4	9.9	5.6	22	0.1	5.8	2.5	92	1.25	16.4
HN-05676	HN05676	NAD83-9V	509554	6872088	0.5	22.4	7.7	23	0	8.8	2.5	74	0.92	4.3
HN-05677	HN05677	NAD83-9V	509183	6871667	0.8	24.1	17.9	61	0	21.8	10.2	743	3.22	21.9
HN-05678	HN05678	NAD83-9V	509516	6872056	1.2	40.1	20.3	41	0.1	10.6	4.6	173	3.75	97.8
HN-05679	HN05679	NAD83-9V	509477	6872026	1.2	15.6	23.3	34	0	21	14.1	913	2.15	76.5
HN-05680	HN05680	NAD83-9V	509434	6871997	0.4	15.3	10.9	39	0.1	15.7	8.4	278	1.9	25
HN-05681	HN05681	NAD83-9V	509394	6871962	1	72	36.5	114	0.2	43.1	19.9	334	3.08	218.4
HN-05682	HN05682	NAD83-9V	509352	6871931	0.9	15	13	32	0	9.2	4.2	137	2.59	41.8
HN-05683	HN05683	NAD83-9V	509316	6871908	0.1	2.1	2.7	4	0	1.2	0.7	36	0.32	0.6
HN-05684	HN05684	NAD83-9V	509233	6871842	0.2	3.7	1.5	9	0	1.9	0.8	31	0.23	0.7
HN-05685	HN05685	NAD83-9V	509198	6871813	0.7	15.7	11.4	33	0	13.3	6.2	482	2.24	8.5
HN-05686	HN05686	NAD83-9V	509157	6871778	1	36.9	23.2	59	0	23.1	9.8	773	3.66	34.3
HN-05687	HN05687	NAD83-9V	508386	6871812	0.6	18.5	14.9	57	0	17.3	13.2	490	2.64	132.1
HN-05688	HN05688	NAD83-9V	508344	6871781	0.7	21.9	15.3	71	0	21.5	8.4	483	4.19	66.7
HN-05689	HN05689	NAD83-9V	508302	6871752	0.9	32.1	26	82	0	28.2	12.4	730	4.8	87.7
HN-05690	HN05690	NAD83-9V	508264	6871720	0.7	19.8	11.1	37	0	11.1	8	374	2.23	31.7
HN-05691	HN05691	NAD83-9V	508225	6871691	0.5	39.5	25	58	0.1	22.8	18.8	1150	3.06	59.6
HN-05692	HN05692	NAD83-9V	508184	6871660	0.7	21.4	18.5	61	0	18.7	9.4	404	2.74	52.5
HN-05693	HN05693	NAD83-9V	508143	6871632	1.2	57.2	30.6	109	0	43.4	37.7	809	4.53	85.1
HN-05694	HN05694	NAD83-9V	508104	6871600	1	62.1	32.4	90	0	35.6	21.2	786	3.99	48.3
HN-05695	HN05695	NAD83-9V	508064	6871568	0.7	54.9	28.8	90	0	43	20.5	705	4.49	62.1
HN-05696	HN05696	NAD83-9V	508026	6871540	1.9	16.2	8.3	57	0	11.3	5.4	352	2.83	57.3
HN-05697	HN05697	NAD83-9V	507967	6871620	1	64.1	29.5	68	0	26	10.5	359	3.45	35.4
HN-05698	HN05698	NAD83-9V	507973	6871655	0.9	34.4	21.4	79	0	27.6	17	796	4.42	62.4
HN-05699	HN05699	NAD83-9V	507978	6871658	0.7	116.4	64.4	103	0.1	65.7	54.9	1661	4.92	881.7
HN-05700	HN05700	NAD83-9V	508004	6871689	0.6	34.7	21.2	86	0	40	15.9	752	4.57	10
HN-05701	HN05701	NAD83-9V	509277	6872867	1	11.5	6.3	22	0	5.8	2.2	66	1.64	37
HN-05702	HN05702	NAD83-9V	509237	6872838	0.8	25.3	20.4	55	0	12.5	5	272	3.81	109.6
HN-05703	HN05703	NAD83-9V	509197	6872808	0.8	32.2	20.5	70	0	18.4	8.7	378	4.05	133.1
HN-05704	HN05704	NAD83-9V	509157	6872778	1.1	62.4	35.2	87	0	38.3	16.3	346	4.19	123.8
HN-05705	HN05705	NAD83-9V	509116	6872747	0.8	48	27.2	83	0	24.6	15.3	412	4.51	49.4
HN-05706	HN05706	NAD83-9V	509038	6872687	0.9	48.5	29.3	82	0	24.4	14	349	4.35	25.2
HN-05707	HN05707	NAD83-9V	508959	6872627	0.8	44.8	32	59	0	20.2	8.7	237	3.26	71.9
HN-05708	HN05708	NAD83-9V	508881	6872563	0.8	30.9	26.6	75	0	22	8.9	535	5.19	59.5
HN-05710	HN05710	NAD83-9V	508838	6872535	0.8	18.6	18.7	62	0	17.9	6.7	352	4.78	122.8
HN-05711	HN05711	NAD83-9V	508797	6872506	0.8	28.5	17.7	81	0	29.3	9.4	444	4.28	34.3
HN-05712	HN05712	NAD83-9V	508758	6872474	0.6	21	16.2	74	0	24.2	7.1	467	4.09	25.2
HN-05713	HN05713	NAD83-9V	508680	6872412	0.8	35.9	17.6	84	0	26.5	15.4	374	3.22	61.7
HN-05714	HN05714	NAD83-9V	508637	6872387	0.8	35.5	22.5	76	0	23.7	10.1	386	3.71	204.5
HN-05773	HN05773	NAD83-9V	508035	6873181	0.8	41.3	19.8	60	0	18.7	8.1	259	3.14	9.6
HN-05774	HN05774	NAD83-9V	507994	6873156	0.9	39.5	34	83	0	31.9	13.5	364	4.11	15.5
HN-05775	HN05775	NAD83-9V	507954	6873122	0.8	36.9	27.5	59	0.1	20.3	7.1	234	2.99	14.2
HN-05776	HN05776	NAD83-9V	507915	6873089	0.8	61.6	27.2	92	0	35.1	19.6	422	4.82	39.1

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-05657	0.3	0.7	0.3	5	0	0.1	0.1	9	0.03	0.048	5	3	0.05	14	0.003	1	0.28	0.023	0.03	0.1
HN-05658	0.8	0.7	1.1	8	0.1	0.1	0.2	17	0.07	0.056	15	11	0.29	24	0.009	0	1.23	0.015	0.02	0.1
HN-05659	0.3	2.6	0.1	5	0.1	0.1	0.1	10	0.02	0.032	6	3	0.04	19	0.002	1	0.26	0.017	0.02	0.1
HN-05660	1	7.9	10.2	5	0	0.4	0.3	18	0.04	0.043	26	23	0.66	30	0.006	0	2.11	0.007	0.04	0.4
HN-05661	6.1	2.6	0.8	21	0.1	0.2	0.3	17	0.22	0.081	57	12	0.25	49	0.009	0	1.37	0.02	0.04	0.2
HN-05662	3.2	0	0.3	20	0.1	0.1	0.1	7	0.28	0.07	50	3	0.07	22	0.008	0	0.54	0.029	0.02	0.1
HN-05663	0.9	1.4	1.6	4	0.1	0.2	0.3	20	0.02	0.076	16	10	0.15	16	0.005	1	0.73	0.009	0.03	0.1
HN-05664	0.4	8	0.2	5	0	0.1	0.1	15	0.03	0.028	10	5	0.08	13	0.008	0	0.42	0.017	0.02	0.1
HN-05665	1.5	2.5	1.1	7	0.1	0.7	0.6	23	0.02	0.148	12	14	0.08	23	0.007	1	0.81	0.016	0.03	0.1
HN-05666	0.7	31.5	2.7	7	0	0.2	0.2	14	0.02	0.043	24	17	0.43	27	0.006	0	1.53	0.009	0.03	0.2
HN-05667	1.2	40.6	10.5	4	0	0.4	0.3	16	0.03	0.046	27	26	0.71	20	0.007	1	2.08	0.003	0.03	0.4
HN-05668	0.6	10.9	1.3	4	0	0.1	0.1	9	0.02	0.028	15	9	0.24	15	0.006	0	0.9	0.018	0.03	0.2
HN-05669	3.3	2.4	4.9	28	0.2	0.3	0.2	11	0.67	0.077	60	13	0.35	39	0.006	1	1.18	0.011	0.03	0.2
HN-05670	1.2	11	1.4	8	0.1	0.1	0.2	9	0.07	0.049	15	13	0.33	25	0.004	0	1.19	0.017	0.03	0.2
HN-05671	0.6	4.4	1.6	4	0	0.2	0.1	12	0.01	0.029	13	13	0.34	23	0.004	0	1.08	0.021	0.04	0.2
HN-05672	1.2	8.3	11.1	5	0.1	0.4	0.3	15	0.07	0.05	24	26	0.86	23	0.006	0	1.89	0.004	0.03	0.3
HN-05673	1	224.3	5.3	3	0.1	0.3	0.2	12	0.02	0.056	18	19	0.57	23	0.006	0	1.49	0.005	0.02	0.4
HN-05674	1	603.6	6.9	4	0.1	0.3	0.3	14	0.04	0.029	23	21	0.62	20	0.005	1	1.45	0.002	0.02	0.6
HN-05675	0.7	4.5	0.5	6	0.1	0.2	0.2	14	0.07	0.061	14	7	0.11	26	0.007	0	0.64	0.012	0.01	0.1
HN-05676	0.9	2.6	0.3	7	0.3	0.2	0.2	11	0.08	0.055	7	7	0.05	27	0.004	0	0.51	0.009	0.02	0.1
HN-05677	0.9	4.7	2.2	5	0.1	0.3	0.4	20	0.04	0.06	19	21	0.65	28	0.008	1	1.72	0.005	0.02	0.2
HN-05678	1.9	11.1	1	6	0.2	0.6	0.5	21	0.03	0.088	26	16	0.24	28	0.007	1	1.07	0.006	0.02	1.1
HN-05679	1.1	65.1	1.4	5	0.1	0.4	0.3	16	0.02	0.075	14	11	0.18	29	0.01	0	0.94	0.009	0.02	0.9
HN-05680	0.8	34.3	0.7	4	0.1	0.3	0.2	13	0.03	0.056	17	13	0.35	17	0.006	0	0.97	0.009	0.02	0.4
HN-05681	10.4	5.6	3.2	16	0.1	0.4	0.5	17	0.16	0.08	38	24	0.6	62	0.01	0	1.81	0.008	0.04	0.5
HN-05682	0.8	4.8	0.4	4	0.1	0.5	0.4	24	0.01	0.047	11	13	0.21	22	0.008	0	0.96	0.007	0.03	0.4
HN-05683	0.2	0	0	6	0.1	0	0	8	0.04	0.024	1	1	0.03	15	0.013	0	0.33	0.02	0.02	0.1
HN-05684	0.2	0	0	7	0.1	0	0	5	0.06	0.029	2	1	0.03	17	0.006	0	0.16	0.019	0.02	0
HN-05685	0.6	1	0.8	5	0	0.2	0.3	19	0.04	0.076	15	15	0.4	27	0.007	0	1.24	0.008	0.02	0.1
HN-05686	1.3	0.9	3	10	0.1	0.5	0.5	20	0.13	0.168	38	24	0.65	34	0.007	0	1.77	0.005	0.02	0.1
HN-05687	1.6	7.3	2.3	9	0.1	0.4	0.4	15	0.15	0.06	12	17	0.48	34	0.012	0	1.63	0.012	0.02	1.2
HN-05688	1.2	15.5	2.2	4	0.1	0.6	0.5	20	0.02	0.056	15	27	0.65	33	0.011	0	1.92	0.003	0.02	1.1
HN-05689	1.4	66.9	5.2	4	0.1	0.6	0.6	16	0.03	0.087	13	26	0.76	30	0.009	0	2.12	0.005	0.02	0.8
HN-05690	1.1	10.2	1	4	0.2	0.4	0.3	15	0.02	0.071	8	13	0.29	24	0.009	0	1.38	0.011	0.02	0.5
HN-05691	1.9	1055.6	4.1	4	0	0.6	0.7	15	0.03	0.083	13	16	0.53	22	0.011	0	1.68	0.01	0.02	0.5
HN-05692	3.3	4.1	1.6	13	0.2	0.4	0.4	15	0.28	0.083	19	18	0.47	42	0.013	1	1.55	0.01	0.03	0.5
HN-05693	3.3	26.2	11	5	0.2	0.7	0.6	19	0.05	0.06	27	30	0.85	38	0.012	1	2.59	0.004	0.02	0.8
HN-05694	1.6	9.4	11.1	5	0	0.8	0.6	18	0.06	0.098	19	25	0.83	15	0.011	0	1.91	0.006	0.03	0.2
HN-05695	1.5	145.1	9.9	5	0.1	0.8	0.5	18	0.05	0.055	24	28	0.91	25	0.01	0	2.09	0.003	0.02	0.4
HN-05696	3.7	1.7	1.9	7	0.1	0.8	0.5	16	0.07	0.055	25	17	0.6	30	0.01	0	1.4	0.004	0.02	0.1
HN-05697	2.2	10.1	7.2	5	0.1	1.4	0.6	16	0.04	0.072	22	19	0.59	22	0.01	0	1.73	0.012	0.03	0.2
HN-05698	1.5	310.7	5.2	5	0.2	0.6	0.5	19	0.04	0.067	19	26	0.69	23	0.011	0	1.91	0.004	0.02	0.6
HN-05699	2.9	138.7	10.3	5	0.2	1.5	1.3	15	0.07	0.081	26	21	0.72	22	0.009	1	1.83	0.005	0.02	0.4
HN-05700	1.1	0	7.1	3	0.1	0.4	0.4	20	0.02	0.058	32	27	0.98	18	0.011	0	2.27	0.003	0.02	0.1
HN-05701	0.7	2.2	1.9	3	0	0.4	0.2	29	0.01	0.034	28	5	0.02	10	0.009	1	0.23	0.003	0.02	0.9
HN-05702	1.3	7.3	9.5	6	0	0.4	0.3	17	0.02	0.039	23	22	0.57	37	0.01	0	1.62	0.004	0.03	1.3
HN-05703	1.6	8	11.5	5	0.1	0.4	0.4	18	0.02	0.039	23	25	0.66	32	0.011	0	1.84	0.004	0.04	1.6
HN-05704	3.1	14.6	10.4	9	0.1	0.6	0.5	19	0.04	0.056	30	25	0.67	49	0.012	1	1.98	0.008	0.04	0.9
HN-05705	2.1	4.4	18	8	0.1	0.5	0.4	16	0.02	0.05	27	23	0.64	19	0.009	1	1.55	0.003	0.02	0.5
HN-05706	2.4	3.8	18.7	5	0.1	0.4	0.4	14	0.02	0.045	30	24	0.71	20	0.005	1	1.77	0.002	0.03	0.2
HN-05707	2.4	28.2	3.5	5	0.1	0.6	0.5	20	0.04	0.081	16	19	0.4	23	0.014	1	1.3	0.006	0.03	0.8
HN-05708	1.6	10	6.6	4	0.1	0.7	0.6	18	0.02	0.079	17	27	0.7	19	0.01	1	1.82	0.004	0.02	0.4
HN-05710	1	49.2	3.3	5	0.1	0.5	0.4	27	0.03	0.059	16	24	0.6	18	0.015	1	1.65	0.002	0.02	0.7
HN-05711	1.4	2.8	8.3	6	0.1	0.4	0.4	20	0.07	0.068	18	26	0.77	29	0.014	1	1.99	0.003	0.02	0.3
HN-05712	1.5	31.7	6.1	4	0	0.3	0.4	20	0.03	0.064	18	25	0.72	23	0.009	1	1.91	0.004	0.03	0.2
HN-05713	2	21.5	9.5	14	0.1	0.4	0.3	25	0.13	0.042	27	26	0.64	66	0.028	1	1.52	0.004	0.03	0.6
HN-05714	3.2	134.8	10.1	10	0	0.4	0.3	20	0.09	0.042	29	25	0.69	42	0.012	1	1.62	0.003	0.03	0.9
HN-05773	1.5	3.8	6.9	6	0.1	0.3	0.3	16	0.02	0.041	24	19	0.52	21	0.018	1	1.54	0.009	0.03	0.3
HN-05774	2.9	7.5	17.1	9	0.1	0.5	0.4	21	0.03	0.05	35	25	0.72	30	0.03	1	1.75	0.004	0.04	0.3
HN-05775	1.7	2.5	6.3	6	0.1	0.3	0.4	13	0.02	0.07	22	18	0.49	30	0.019	1	1.59	0.008	0.03	0.3
HN-05776	2.6	16.4	18.6	8	0.1	0.4	0.4	17	0.02	0.062	27	25	0.63	19	0.016	0	1.5	0.002	0.02	1.7

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-05657	0.01	0.1	0	0	2	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05658	0.02	0.5	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05659	0.01	0.1	0	0	2	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05660	0.03	1.2	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05661	0.02	0.5	0.1	0.07	4	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05662	0.03	0.2	0	0	2	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05663	0.01	0.3	0	0	6	0	7.5	GROUP 1DX - 15.0 GM	A607417
HN-05664	0.01	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05665	0.03	0.3	0.1	0.06	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05666	0.02	0.7	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05667	0.01	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05668	0.01	0.4	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05669	0.02	0.7	0	0.08	4	0	0.5	GROUP 1DX - 15.0 GM	A607417
HN-05670	0.02	0.5	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05671	0.01	0.6	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05672	0.01	1.4	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05673	0.01	0.8	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05674	0.01	1	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05675	0.01	0.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05676	0.01	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05677	0.01	0.7	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05678	0.02	0.3	0	0	7	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05679	0.03	0.4	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05680	0.01	0.3	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05681	0.02	1.2	0.1	0.06	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05682	0.02	0.3	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05683	0.01	0.2	0	0	2	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05684	0.01	0.1	0	0	1	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05685	0.02	0.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05686	0.03	0.6	0	0.09	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05687	0.01	0.9	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05688	0.03	0.8	0	0	7	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05689	0.03	1	0	0	7	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05690	0.02	0.4	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05691	0.02	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05692	0.02	0.7	0	0.09	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05693	0.02	1.6	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05694	0.02	1.3	0	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05695	0.01	1.5	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05696	0.01	0.8	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05697	0.02	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607417
HN-05698	0.02	1.1	0	0	7	0.6	15	GROUP 1DX - 15.0 GM	A607417
HN-05699	0.02	1.7	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607417
HN-05700	0.01	1.2	0	0	7	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05701	0.01	0.3	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05702	0.01	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05703	0.01	1.3	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05704	0.01	1.4	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607417
HN-05705	0.02	1.1	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05706	0.01	1.4	0	0	5	0.5	7.5	GROUP 1DX - 15.0 GM	A607418
HN-05707	0.05	0.9	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05708	0.02	1	0	0.06	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05710	0.04	1	0.1	0.07	7	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05711	0.01	1.5	0.1	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05712	0.02	1.2	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05713	0.01	2.1	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05714	0.01	1.7	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05773	0.01	1.1	0	0.06	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05774	<.01	1.8	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05775	0.04	1	0	0.1	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05776	0.01	1.6	0	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607418

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-05777	HN05777	NAD83-9V	507878	6873060	1	46	32.8	87	0	33.2	15.4	446	4.28	23
HN-05779	HN05779	NAD83-9V	507798	6873000	1	55.6	31.9	81	0	28.7	15.9	366	3.08	268.5
HN-05780	HN05780	NAD83-9V	507758	6872970	0.6	28.5	18.6	43	0	10.3	4.3	201	2.55	11.6
HN-05781	HN05781	NAD83-9V	507716	6872938	1.5	59.6	49.2	73	0	22.3	11	478	4.98	35.4
HN-05783	HN05783	NAD83-9V	507637	6872877	1.5	88.9	50.1	138	0.2	69.3	26.4	369	4.2	389.7
HN-05784	HN05784	NAD83-9V	507600	6872845	1.1	54.2	37.8	101	0	49.1	17.3	370	3.34	234
HN-05785	HN05785	NAD83-9V	507556	6872817	0.9	33.4	31.5	79	0	25.1	9.6	478	4.25	88
HN-05786	HN05786	NAD83-9V	507515	6873038	2.1	117.2	56.4	99	0.1	19.4	14.4	313	7.67	32.4
HN-05787	HN05787	NAD83-9V	507553	6873065	2.9	74	64.5	83	0	20.6	14.4	396	5.31	30.8
HN-05788	HN05788	NAD83-9V	507594	6873095	2.9	64.1	60.3	80	0	10.3	5.4	370	5.61	25.6
HN-05789	HN05789	NAD83-9V	507635	6873125	0.9	32.7	21.8	52	0	12.5	5.7	223	2.79	10
HN-05790	HN05790	NAD83-9V	507671	6873156	0.8	33.6	19.4	48	0	14.1	5.5	184	2.21	9.5
HN-05794	HN05794	NAD83-9V	507833	6873279	1.1	62	33.2	77	0.1	28.4	10.1	257	3.44	9.7
HN-05795	HN05795	NAD83-9V	507873	6873304	0.6	23.2	14.9	30	0	7.1	3.2	139	1.93	5.6
HN-05796	HN05796	NAD83-9V	507913	6873339	0.5	20	12.1	22	0	6.6	2.4	81	1.27	3.3
HN-05797	HN05797	NAD83-9V	508095	6873100	1.2	34.6	24	73	0	19.8	9.6	354	4.43	6.9
HN-05798	HN05798	NAD83-9V	508056	6873070	0.9	38.8	16.8	43	0.2	13.2	5.8	174	2.07	7.4
HN-05799	HN05799	NAD83-9V	508016	6873039	1.1	30.4	24.2	70	0	15.1	6.9	334	3.94	10.2
HN-05800	HN05800	NAD83-9V	507977	6873009	1.1	37.4	25.2	59	0	17.8	8.5	301	3.06	22.2
HN-05806	HN05806	NAD83-9V	508478	6872504	0.4	9.6	12.4	17	0	9.4	8.7	156	0.87	79.4
HN-05807	HN05807	NAD83-9V	508443	6872483	0.9	47.1	26.3	75	0	21.2	14.1	373	3.86	222.3
HN-05808	HN05808	NAD83-9V	508401	6872448	0.6	21.6	19.5	30	0	12.5	9	145	1.39	247.4
HN-05809	HN05809	NAD83-9V	508361	6872420	0.2	2.9	1.4	4	0	0.6	0.6	13	0.26	3.8
HN-05810	HN05810	NAD83-9V	508322	6872391	0.7	21.1	18.8	66	0	18.4	7.8	288	3.05	197.5
HN-05811	HN05811	NAD83-9V	508283	6872359	0.7	15.3	12.4	29	0	8.3	4.4	151	1.57	58
HN-05812	HN05812	NAD83-9V	508245	6872330	0.8	20.9	21.3	47	0	12.4	5	350	2.64	76
HN-05813	HN05813	NAD83-9V	508204	6872301	1	29.2	22.8	72	0	19.1	10.4	402	3.54	87.4
HN-05814	HN05814	NAD83-9V	508166	6872270	1.5	16.5	17.7	50	0	12.5	5.4	181	2.58	27.5
HN-05815	HN05815	NAD83-9V	508122	6872239	0.5	39.7	19	76	0	26.3	14.2	410	3.15	106
HN-05816	HN05816	NAD83-9V	508083	6872209	0.4	29.4	17.6	44	0	17.7	17	303	1.3	225.4
HN-05817	HN05817	NAD83-9V	508042	6872178	0.5	28.5	14.9	45	0	18.1	12.4	228	1.31	155.5
HN-05818	HN05818	NAD83-9V	508003	6872148	0.5	32.3	21.1	84	0	33	16.7	555	3.71	84
HN-05819	HN05819	NAD83-9V	507963	6872118	0.7	22.8	21.2	45	0	13.6	11.6	547	1.99	287.8
HN-05820	HN05820	NAD83-9V	507922	6872088	0.6	32.8	20	64	0	26.7	15.6	269	1.9	135.8
HN-05821	HN05821	NAD83-9V	507883	6872058	0.7	35.5	22.1	96	0	35.5	13.2	544	4.6	79.4
HN-05822	HN05822	NAD83-9V	507841	6872029	0.9	31.6	25.9	81	0	23.2	10	453	3.91	63.9
HN-05823	HN05823	NAD83-9V	507800	6872003	0.7	64.3	51.8	104	0	41.9	24.9	652	4.29	106.2
HN-05824	HN05824	NAD83-9V	507762	6871966	0.8	48.1	24.3	83	0	25.4	12.4	591	3.97	42.3
HN-05825	HN05825	NAD83-9V	507721	6871937	0.8	43	38.7	96	0	53.2	21.5	403	3.42	364.6
HN-05826	HN05826	NAD83-9V	507780	6871856	0.4	46.5	14.4	97	0	56.2	15.1	303	2.55	150
HN-05827	HN05827	NAD83-9V	507824	6871884	0.5	27.1	22.7	87	0	31.2	16.1	482	3.58	531.4
HN-05828	HN05828	NAD83-9V	507863	6871914	0.6	33.7	24.9	86	0	31.3	14	446	3.75	131.9
HN-05829	HN05829	NAD83-9V	507904	6871943	0.6	11.1	8.1	29	0	7.1	2.8	170	1.48	18.1
HN-05830	HN05830	NAD83-9V	507942	6871975	0.5	34.9	24.9	85	0	28.3	11.4	467	4.16	219.2
HN-05831	HN05831	NAD83-9V	507983	6872006	0.9	34.2	32.7	73	0	26.2	12.3	477	3.33	52.8
HN-05832	HN05832	NAD83-9V	508024	6872037	0.5	23	12.9	46	0	13	5.8	300	2.09	30.5
HN-05833	HN05833	NAD83-9V	508062	6872066	0.3	9.6	7.2	21	0	6.1	2.4	106	1.02	42.5
HN-05834	HN05834	NAD83-9V	508103	6872096	0.6	8.9	7.7	22	0	6.3	2.7	144	1.06	10.7
HN-05835	HN05835	NAD83-9V	508143	6872128	0.8	21.8	15.8	40	0	11.8	5	247	2.57	52
HN-05836	HN05836	NAD83-9V	508682	6871914	0.6	23	11.9	49	0	16.5	5.5	329	2.8	29.1
HN-05837	HN05837	NAD83-9V	508722	6871945	1.1	20.3	21.1	60	0	17.6	7.8	496	2.97	32.6
HN-05838	HN05838	NAD83-9V	508762	6871976	0.7	30.4	22.3	69	0	25.2	9.7	389	3.21	40.1
HN-05839	HN05839	NAD83-9V	508801	6872005	0.8	19.7	15.9	55	0	17.7	6.4	344	2.61	33.5
HN-05840	HN05840	NAD83-9V	508842	6872034	0.8	20.7	19.5	60	0	16.5	6.4	523	3.3	23.7
HN-05842	HN05842	NAD83-9V	507737	6872575	0.4	68.2	32.9	116	0	53.8	34.9	701	4.37	63.2
HN-05844	HN05844	NAD83-9V	507723	6872677	0.5	69.1	40.2	112	0	45.7	28.7	672	4.41	68.5
HN-05845	HN05845	NAD83-9V	507753	6872722	0.4	47.8	30.2	96	0	35.8	21.2	576	3.96	83.2
HN-05848	HN05848	NAD83-9V	507871	6872812	0.7	29.6	19	51	0	12.7	7	285	2.63	25.1
HN-05849	HN05849	NAD83-9V	507910	6872843	0.6	19	14.8	27	0	6.2	2.1	93	1.28	9.7
HN-05850	HN05850	NAD83-9V	507957	6872868	1.1	54.7	35.3	82	0	18.9	8.7	348	4.7	53.6
HN-05851	HN05851	NAD83-9V	508024	6871702	0.7	27.6	33.7	84	0	26.4	20	1177	4.68	52.8

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-05777	2.1	5.4	10.3	7	0.1	0.6	0.5	19	0.04	0.071	27	25	0.62	21	0.013	1	1.75	0.003	0.02	0.5
HN-05779	2.3	17	8.3	9	0.1	0.7	0.4	19	0.05	0.08	19	18	0.47	30	0.02	1	1.29	0.006	0.04	0.2
HN-05780	1.6	4.4	3	7	0	0.4	0.3	14	0.04	0.076	16	14	0.37	23	0.009	1	1.23	0.009	0.02	0.1
HN-05781	2.9	12.5	17.7	12	0.1	1.9	0.8	15	0.02	0.081	19	24	0.6	40	0.031	0	1.66	0.006	0.03	0.1
HN-05783	6	58.1	15.4	12	0.1	0.9	0.6	23	0.08	0.103	42	24	0.66	41	0.02	1	1.81	0.005	0.05	1.3
HN-05784	4.3	53.3	11.6	9	0.1	0.6	0.4	18	0.08	0.1	29	18	0.59	33	0.016	1	1.65	0.007	0.04	1.2
HN-05785	2.2	28.8	5.4	6	0.1	0.6	0.5	23	0.02	0.108	28	25	0.57	27	0.008	1	1.63	0.003	0.03	0.3
HN-05786	4.5	6.4	29	14	0	2	0.8	18	0.01	0.109	30	28	0.45	21	0.019	0	1.28	0.005	0.02	0
HN-05787	3.2	3.5	22.2	8	0	2.4	1	12	0.01	0.07	31	26	0.63	21	0.013	0	1.48	0.005	0.02	0.1
HN-05788	3.2	3.4	21.7	14	0	2.4	1	14	0.01	0.073	23	27	0.64	24	0.009	1	1.53	0.006	0.02	0.1
HN-05789	1.7	0.7	4.4	8	0	0.6	0.4	16	0.03	0.066	18	16	0.36	20	0.013	1	1.2	0.01	0.03	0.1
HN-05790	1.7	0.5	4.8	8	0	0.4	0.3	14	0.05	0.068	17	14	0.32	22	0.018	0	1.05	0.015	0.04	0.1
HN-05794	2.6	2	3.8	8	0.1	0.4	0.4	17	0.03	0.082	34	21	0.51	33	0.014	1	1.75	0.011	0.05	0.4
HN-05795	0.9	0.9	0.8	5	0.1	0.2	0.2	14	0.02	0.06	11	9	0.19	17	0.014	1	0.85	0.015	0.02	0.1
HN-05796	1	0	0.8	5	0	0.2	0.2	9	0.03	0.056	17	8	0.18	17	0.013	0	1.05	0.016	0.03	0.1
HN-05797	1.4	0	8.7	5	0.1	0.4	0.4	19	0.01	0.047	22	25	0.71	32	0.016	0	1.73	0.002	0.02	0.1
HN-05798	1.8	1	1.6	6	0.1	0.3	0.3	18	0.05	0.082	38	13	0.29	17	0.016	0	1.44	0.011	0.03	0.1
HN-05799	1.7	5.1	4.6	6	0.1	0.4	0.4	20	0.02	0.079	21	24	0.61	22	0.011	0	1.69	0.004	0.03	0.2
HN-05800	1.7	2	5.3	6	0	0.4	0.4	17	0.03	0.081	22	18	0.46	22	0.015	0	1.43	0.009	0.03	0.2
HN-05806	0.7	0.7	0.1	6	0	0.1	0.1	7	0.08	0.056	9	4	0.09	17	0.007	1	0.54	0.012	0.02	0.4
HN-05807	2.6	18.5	15.7	6	0.1	0.8	0.4	15	0.02	0.048	21	23	0.72	28	0.012	0	1.68	0.003	0.03	1.6
HN-05808	0.9	3.9	1.2	6	0	0.3	0.3	12	0.05	0.06	10	9	0.17	18	0.013	0	0.85	0.014	0.03	1.3
HN-05809	0.2	0	0	5	0	0	0	6	0.05	0.035	2	0	0.02	10	0.013	0	0.44	0.02	0.02	0.1
HN-05810	1.1	58.9	2.7	5	0.1	0.4	0.3	14	0.02	0.067	16	18	0.49	28	0.008	0	1.52	0.005	0.02	2.3
HN-05811	0.8	3.4	0.6	6	0.1	0.3	0.2	14	0.06	0.07	10	9	0.17	22	0.012	0	0.91	0.014	0.02	0.5
HN-05812	1.4	10.7	2.2	4	0.1	0.4	0.4	15	0.02	0.085	10	16	0.39	21	0.01	0	1.37	0.007	0.03	0.6
HN-05813	1.7	10	3.1	6	0.1	0.6	0.4	23	0.03	0.076	19	24	0.57	23	0.021	0	1.56	0.005	0.03	0.7
HN-05814	0.8	8.5	0.5	7	0.1	0.8	0.6	52	0.04	0.06	21	14	0.12	33	0.02	0	0.67	0.003	0.03	0.2
HN-05815	2.1	37.9	10.1	6	0.1	0.4	0.3	15	0.06	0.054	19	21	0.64	25	0.019	0	1.6	0.005	0.02	0.7
HN-05816	1.8	3.7	0.8	6	0	0.2	0.2	8	0.06	0.065	12	10	0.23	27	0.011	0	1.12	0.015	0.03	0.9
HN-05817	2	3.1	0.6	8	0	0.3	0.3	13	0.11	0.081	11	10	0.2	29	0.012	1	0.92	0.012	0.03	1.2
HN-05818	1.9	111.7	9.1	6	0.1	0.5	0.4	16	0.09	0.06	18	27	0.78	25	0.012	0	1.74	0.002	0.02	1.1
HN-05819	2.1	7.9	0.7	8	0.1	0.4	0.4	17	0.1	0.099	18	12	0.28	34	0.009	0	1.17	0.01	0.03	3
HN-05820	1.7	17.3	1.5	8	0.1	0.4	0.4	13	0.08	0.099	12	14	0.3	27	0.01	0	1.22	0.014	0.03	0.4
HN-05821	1.9	20.6	7.6	5	0.1	0.5	0.4	21	0.06	0.088	15	30	0.85	20	0.012	0	2.06	0.004	0.02	1.2
HN-05822	1.9	113.5	6	6	0.2	0.6	0.5	20	0.04	0.074	16	27	0.63	27	0.01	0	1.8	0.004	0.03	0.9
HN-05823	3.9	11.1	11.6	5	0.1	1	0.9	17	0.07	0.1	18	29	0.89	21	0.011	0	2.27	0.005	0.03	0.6
HN-05824	2.7	5.2	9	6	0.1	0.6	0.5	17	0.06	0.087	16	27	0.8	19	0.012	0	2.03	0.007	0.03	0.8
HN-05825	7.1	13.9	8.4	6	0.1	0.6	0.8	14	0.06	0.074	19	22	0.63	25	0.007	0	1.94	0.006	0.02	0.3
HN-05826	5.3	20.4	6.2	12	0.1	0.4	0.4	11	0.23	0.053	23	19	0.61	21	0.011	0	1.65	0.009	0.02	0.2
HN-05827	1.8	79.7	7.3	5	0.1	0.6	0.5	15	0.03	0.05	18	23	0.66	23	0.008	0	1.84	0.003	0.02	1
HN-05828	1.9	89.4	8.4	5	0.1	0.5	0.5	14	0.04	0.059	19	25	0.75	19	0.009	0	1.96	0.004	0.02	1
HN-05829	1.1	2.4	0.4	4	0	0.2	0.2	11	0.03	0.063	5	9	0.21	18	0.01	0	0.9	0.01	0.02	0.2
HN-05830	2.3	172.3	13.4	5	0.1	0.5	0.4	12	0.03	0.055	21	24	0.78	13	0.007	0	1.64	0.002	0.01	0.8
HN-05831	2.9	6.3	3	6	0.1	0.4	0.4	19	0.05	0.081	14	25	0.6	27	0.009	0	1.81	0.005	0.02	0.3
HN-05832	1.1	4.7	2.2	4	0.1	0.4	0.3	13	0.03	0.072	7	14	0.4	27	0.01	0	1.32	0.008	0.02	0.4
HN-05833	0.7	16.8	0.5	4	0	0.1	0.1	9	0.04	0.051	6	7	0.18	16	0.01	0	0.84	0.012	0.02	0.9
HN-05834	0.6	1.1	0.1	4	0	0.2	0.2	13	0.03	0.05	4	7	0.14	17	0.008	0	0.59	0.012	0.02	0.2
HN-05835	1.3	37.3	1.7	5	0.1	0.5	0.3	18	0.02	0.068	13	16	0.33	20	0.013	0	1.14	0.006	0.02	0.7
HN-05836	1.1	6.4	1.1	4	0.1	0.4	0.4	16	0.02	0.071	9	18	0.37	26	0.008	0	1.3	0.005	0.02	0.4
HN-05837	0.9	5.5	1.4	4	0.1	0.5	0.4	19	0.02	0.049	10	20	0.52	27	0.009	0	1.51	0.005	0.02	0.5
HN-05838	1.2	24.1	3.8	5	0.1	0.5	0.4	19	0.04	0.058	16	23	0.63	27	0.011	0	1.8	0.004	0.02	0.6
HN-05839	1	18	2.4	5	0.1	0.4	0.3	19	0.04	0.061	13	18	0.49	24	0.012	0	1.39	0.006	0.02	0.5
HN-05840	1.3	5.1	1.8	5	0.1	0.7	0.5	23	0.04	0.087	13	21	0.55	23	0.009	1	1.72	0.006	0.02	0.2
HN-05842	3.6	22.9	13.9	6	0.1	0.4	0.4	13	0.08	0.063	35	25	0.8	22	0.004	0	1.99	0.005	0.02	0.3
HN-05844	3.8	125.5	16.6	7	0.1	0.4	0.5	14	0.07	0.069	39	26	0.82	20	0.004	0	1.89	0.004	0.02	0.4
HN-05845	3	65.1	13.3	6	0.1	0.3	0.4	11	0.05	0.061	23	21	0.76	14	0.003	0	1.71	0.002	0.01	0.4
HN-05848	1.9	8.5	7.7	8	0.1	0.5	0.3	11	0.04	0.065	15	16	0.45	19	0.014	1	1.22	0.012	0.02	0.2
HN-05849	1.3	2.8	0.8	7	0.1	0.3	0.3	7	0.03	0.048	12	7	0.19	21	0.013	0	0.95	0.021	0.03	0.1
HN-05850	2.4	8.6	14.7	8	0	0.7	0.5	21	0.03	0.086	19	24	0.62	25	0.019	1	1.63	0.007	0.04	0.2
HN-05851	1.2	14.3	5.2	4	0.1	0.8	0.7	20	0.02	0.065	13	23	0.68	26	0.009	0	1.66	0.005	0.03	0.3

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-05777	0.04	1.3	0.1	0.06	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05779	0.02	1.2	0.1	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05780	0.03	0.6	0	0.06	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05781	0.02	1.5	0.1	0	5	1.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05783	0.01	2.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05784	0.02	1.5	0.1	0.08	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05785	0.03	0.9	0.1	0.07	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05786	0.01	1.5	0	0.1	5	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05787	0.01	1.5	0	0.06	5	1.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05788	0.01	1.5	0	0.11	5	1.1	7.5	GROUP 1DX - 15.0 GM	A607418
HN-05789	0.02	0.9	0.1	0.07	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05790	0.01	0.9	0	0	4	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05794	0.03	1.1	0.1	0.07	4	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05795	0.03	0.5	0	0.08	3	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05796	0.02	0.4	0.1	0.08	3	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05797	0.01	1.1	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05798	0.02	0.8	0	0.08	4	1	15	GROUP 1DX - 15.0 GM	A607418
HN-05799	0.03	0.8	0	0.1	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05800	0.02	1	0.1	0.07	4	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05806	0.01	0.2	0	0	2	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05807	0.01	1.4	0	0	4	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05808	0.01	0.4	0	0.07	3	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05809	0.01	0.2	0	0	1	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05810	0.03	0.5	0	0.07	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05811	0.01	0.4	0	0	3	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05812	0.02	0.5	0	0.07	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05813	0.01	0.9	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05814	0.02	0.4	0.1	0.07	7	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05815	0.01	1.4	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05816	0.02	0.5	0	0	3	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05817	0.01	0.5	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05818	0.01	1.5	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05819	0.02	0.5	0	0.08	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05820	0.01	0.6	0	0	3	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05821	0.01	1.4	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05822	0.04	1	0.1	0.06	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05823	0.01	1.7	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05824	0.02	1.5	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05825	0.02	1.1	0	0.06	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05826	0.01	1.1	0	0.06	4	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05827	0.02	1.1	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05828	0.02	1.1	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05829	0.04	0.3	0	0.06	4	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05830	0.01	1.1	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05831	0.02	0.7	0	0.06	6	1	15	GROUP 1DX - 15.0 GM	A607418
HN-05832	0.03	0.5	0	0.06	4	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05833	0.01	0.3	0	0	3	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05834	0.02	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05835	0.02	0.5	0.1	0.07	4	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05836	0.02	0.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05837	0.02	0.6	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05838	0.02	0.8	0	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05839	<.01	0.7	0	0	4	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05840	0.02	0.6	0.1	0.09	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05842	0.01	1.4	0	0.07	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05844	0.01	1.4	0	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05845	0.01	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05848	0.01	0.9	0	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05849	0.03	0.4	0	0.07	3	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05850	0.02	1.4	0.1	0	6	1.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05851	0.02	0.9	0	0	7	0.5	15	GROUP 1DX - 15.0 GM	A607418

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-05852	HN05852	NAD83-9V	508065	6871728	0.6	78.5	65	72	0	26.2	28.9	2748	2.96	46.6
HN-05853	HN05853	NAD83-9V	508109	6871757	0.9	34.1	17.8	55	0	19.9	10.3	379	3.21	63
HN-05854	HN05854	NAD83-9V	508150	6871786	1.2	32.6	32.3	65	0	18.7	9.1	487	4.29	65.8
HN-05855	HN05855	NAD83-9V	508188	6871817	0.6	56.2	44.6	87	0.2	34.7	19.3	786	4.1	79.4
HN-05856	HN05856	NAD83-9V	508226	6871851	0.7	22	18.1	58	0	19	7.8	380	3.81	87.6
HN-05857	HN05857	NAD83-9V	508267	6871881	0.7	23.5	21.1	65	0	15.6	8.1	578	3.8	74.4
HN-05858	HN05858	NAD83-9V	508307	6871912	0.2	1.8	2.2	6	0	0.9	1.4	45	0.34	1.3
HN-05859	HN05859	NAD83-9V	508803	6871760	0.5	10.2	12.2	48	0	13.1	6.2	453	2.96	18.8
HN-05860	HN05860	NAD83-9V	508843	6871786	0.7	25.4	16.7	64	0	22.3	8.1	529	3.59	30.8
HN-05861	HN05861	NAD83-9V	508882	6871813	0.6	58.3	24.6	128	0	104.7	43.5	625	3.73	47.6
HN-05862	HN05862	NAD83-9V	508923	6871850	0.3	14.5	13.5	66	0	31.5	13.5	676	3.44	6
HN-05863	HN05863	NAD83-9V	508966	6871883	0.8	18.5	24.8	67	0	32.2	14.1	1145	4.11	12.3
HN-05865	HN05865	NAD83-9V	508216	6872942	1.1	57.5	29.8	80	0	13.5	6.7	328	5.29	32.1
HN-05866	HN05866	NAD83-9V	508181	6872913	1.4	71.9	80.2	90	0	21.7	8.3	343	6.05	41.7
HN-05867	HN05867	NAD83-9V	508143	6872869	0.8	22.5	15.7	48	0	8	3.2	200	3.57	38
HN-05868	HN05868	NAD83-9V	508106	6872839	0.5	19.1	10	20	0	6.6	3.5	89	1.11	23
HN-05869	HN05869	NAD83-9V	508064	6872813	0.7	34.8	26.6	66	0	18.9	7.9	362	4.07	221
HN-05870	HN05870	NAD83-9V	508022	6872784	0.9	53.8	35.9	82	0.1	27.4	10.2	330	3.71	94.4
HN-05871	HN05871	NAD83-9V	507986	6872749	0.8	25.5	27.7	62	0	16.2	5.6	279	3.88	63.8
HN-05877	HN05877	NAD83-9V	508296	6872754	0.7	47	39	95	0	33.3	17.2	541	4.17	140.7
HN-05901	HN05901	NAD83-9V	508224	6871943	0.5	28.9	23.3	56	0	19.6	10.7	423	2.81	46.8
HN-05902	HN05902	NAD83-9V	508261	6871967	0.6	33.1	28.4	91	0	32.5	17.5	617	4.22	120.6
HN-05903	HN05903	NAD83-9V	508725	6872190	1.2	43.3	26	96	0	36.3	23.4	488	3.36	109.2
HN-05904	HN05904	NAD83-9V	508680	6872158	0.9	23.5	27.5	71	0	21.9	12.7	453	3.67	133.4
HN-05905	HN05905	NAD83-9V	508602	6872105	0.6	44.9	30.4	91	0	37.3	18.8	554	3.93	139.7
HN-05906	HN05906	NAD83-9V	508563	6872075	1.4	37.1	31	81	0	22.6	9.8	781	4.03	42.5
HN-05907	HN05907	NAD83-9V	508521	6872035	0.7	58	21.7	97	0	36.3	18.2	497	3.95	45.3
HN-05908	HN05908	NAD83-9V	508481	6872009	0.4	59.4	27.3	99	0	51.3	24.4	768	4.38	140.8
HN-05909	HN05909	NAD83-9V	508438	6871978	0.8	28.1	27.2	79	0	21.9	9.7	543	3.75	92.2
HN-05910	HN05910	NAD83-9V	508398	6871955	0.6	23.6	18.4	68	0	23.3	8.9	403	3.63	122.5
HN-05911	HN05911	NAD83-9V	508369	6871925	0.7	42.1	35.7	101	0	43.6	24.6	756	4.76	429.3
HN-05912	HN05912	NAD83-9V	509078	6871716	0.6	33.6	24.3	67	0	29.3	13.5	714	3.63	24.1
HN-05913	HN05913	NAD83-9V	509053	6871686	0.4	51.6	35.9	84	0	39.4	23.3	1032	3.14	25
HN-05914	HN05914	NAD83-9V	508992	6871762	0.6	42.3	37.3	76	0	35.3	19.5	1181	4.35	13.8
HN-05915	HN05915	NAD83-9V	509023	6871796	0.6	30.9	29.4	63	0	27.7	12.8	1239	3.74	18.4
HN-05916	HN05916	NAD83-9V	508373	6872813	0.9	35.2	34.4	54	0	11.3	5	255	4.19	331.2
HN-05917	HN05917	NAD83-9V	508411	6872840	1	56.2	47.4	74	0	22.5	11.8	340	4.45	272.9
HN-05918	HN05918	NAD83-9V	508460	6872869	1.5	130.8	53.3	70	0	9.5	4.4	258	7.31	1729.8
HN-05919	HN05919	NAD83-9V	508510	6872911	1.2	69.1	34.3	120	0	50.3	20.6	405	4.89	147.7
HN-05920	HN05920	NAD83-9V	508538	6872934	1.1	31.2	28.9	73	0	20.8	8.1	365	5.19	76.7
HN-05921	HN05921	NAD83-9V	508577	6872974	0.9	68.3	29.8	79	0	14.6	7	307	5.46	76.9
HN-05922	HN05922	NAD83-9V	508536	6873042	1.1	82	32	63	0.1	18.2	8.3	339	4.5	86.4
HN-05923	HN05923	NAD83-9V	508434	6872985	0.9	53.3	27.8	48	0.1	15.5	5.6	219	2.87	256
HN-05924	HN05924	NAD83-9V	508395	6872939	0.7	80.4	53.2	195	0.1	158.4	102.9	1264	4.21	742.7
HN-05925	HN05925	NAD83-9V	508357	6872917	1.2	39.4	29.4	55	0	10.5	5	263	4.11	109.6
HN-05926	HN05926	NAD83-9V	508314	6872888	1.2	53.8	36.3	65	0	19.7	8.8	296	4.8	107
HN-05927	HN05927	NAD83-9V	508276	6872861	1.1	80.2	30.6	68	0	13.9	7	351	5.73	100.2
HN-05928	HN05928	NAD83-9V	508155	6873024	1.2	59.6	32	68	0	25	12.3	350	4.26	8.3
HN-05929	HN05929	NAD83-9V	508190	6873057	0.8	26.7	23.2	56	0	8.9	4.3	269	3.84	11.6
HN-05930	HN05930	NAD83-9V	508233	6873077	1	32.4	28.8	59	0	12	6.3	306	3.87	8.1
HN-05931	HN05931	NAD83-9V	508274	6873107	1.3	66.9	30.5	67	0	8.1	4.8	302	6.54	23.7
HN-05932	HN05932	NAD83-9V	508314	6873142	0.9	169.4	43.2	76	0.2	50.8	137.6	1699	2.34	45.2
HN-05933	HN05933	NAD83-9V	508361	6873168	1.2	49.5	25.7	53	0.2	9.6	7.6	294	3.95	13
HN-05934	HN05934	NAD83-9V	508393	6873201	1.3	67.9	41.5	50	0.1	8.5	4.1	251	5.46	24.6
HN-05935	HN05935	NAD83-9V	508457	6873123	0.9	46.2	32.7	52	0	8.4	4	254	4.62	29.5
HN-06001	HN06001	NAD83-9V	509394	6872709	1.2	25.8	27	58	0.1	18.3	7.1	337	3.99	268.4
HN-06002	HN06002	NAD83-9V	509357	6872680	0.5	35.3	16.4	77	0	22	11.4	210	3.32	108.2
HN-06003	HN06003	NAD83-9V	509316	6872648	1	20.6	21.8	35	0	9.8	3.7	135	2.63	102.4
HN-06037	HN06037	NAD83-9V	509278	6872618	0.6	25.1	26.9	64	0	16.3	6.3	341	3.82	191
HN-06038	HN06038	NAD83-9V	509237	6872588	0.8	46.2	46	78	0	11.3	12.6	541	4.78	30.9
HN-06039	HN06039	NAD83-9V	509198	6872558	1	43.3	38.2	88	0	16.7	9.2	456	4.81	69.5

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-05852	1.9	3.8	2.3	7	0.3	0.8	1.5	19	0.09	0.12	12	12	0.51	31	0.012	0	1.39	0.012	0.02	0.2
HN-05853	1.4	2.5	1.2	10	0.1	0.4	0.4	19	0.05	0.062	12	18	0.4	40	0.008	0	1.41	0.008	0.03	0.4
HN-05854	2.2	15.8	3.6	4	0.1	0.5	0.5	17	0.03	0.316	14	24	0.54	20	0.009	0	1.74	0.005	0.03	0.5
HN-05855	2.5	71.6	6.7	4	0.1	0.7	0.8	16	0.05	0.091	17	24	0.77	15	0.008	0	1.85	0.006	0.02	0.4
HN-05856	1.1	173	1.3	4	0.1	0.6	0.4	24	0.02	0.058	14	21	0.48	25	0.013	0	1.51	0.006	0.02	1.1
HN-05857	1.5	86.7	1.3	5	0.1	0.6	0.4	24	0.02	0.074	14	21	0.4	36	0.008	0	1.7	0.005	0.03	1.4
HN-05858	0.3	0	0	9	0.1	0.1	0	9	0.09	0.03	1	1	0.02	13	0.018	0	0.2	0.025	0.02	0.1
HN-05859	0.8	1.9	1.3	4	0.1	0.3	0.3	16	0.01	0.06	10	18	0.42	25	0.005	0	1.32	0.007	0.02	0.2
HN-05860	1.2	4.7	2.6	5	0.1	0.5	0.4	19	0.02	0.071	14	24	0.59	28	0.008	0	1.78	0.005	0.02	0.3
HN-05861	1.9	31.4	8.4	10	0.1	0.6	0.4	15	0.06	0.071	26	25	0.77	27	0.01	0	1.95	0.006	0.02	0.4
HN-05862	0.9	0	6.8	4	0	0.3	0.4	15	0.04	0.062	15	22	0.82	14	0.008	0	1.75	0.01	0.03	0
HN-05863	0.6	11.1	3.3	3	0.1	0.3	0.4	21	0.03	0.094	18	27	0.93	21	0.009	0	2.03	0.003	0.02	0.1
HN-05865	1.7	23.4	17.8	8	0.1	0.5	0.6	16	0.01	0.077	17	27	0.76	23	0.011	0	1.94	0.002	0.03	0.2
HN-05866	2.9	3.4	24	5	0	0.4	0.6	16	0.01	0.081	20	29	0.81	18	0.008	0	1.92	0.003	0.03	0.1
HN-05867	1.3	20.2	4.8	5	0	0.4	0.3	15	0.01	0.065	32	19	0.4	18	0.009	0	1.22	0.006	0.03	0.6
HN-05868	1	4.1	0.8	6	0	0.2	0.1	9	0.06	0.058	21	6	0.14	18	0.017	0	1.01	0.023	0.03	0.2
HN-05869	1.7	173.2	10.6	5	0	0.5	0.4	14	0.01	0.051	26	23	0.64	21	0.011	0	1.53	0.003	0.02	1.2
HN-05870	3.1	427.2	11.5	7	0	0.5	0.5	11	0.03	0.061	20	20	0.66	33	0.005	0	1.73	0.006	0.03	0.4
HN-05871	1.8	47.2	7.4	6	0.1	0.7	0.4	13	0.02	0.055	15	19	0.54	23	0.011	0	1.35	0.004	0.02	0.6
HN-05877	2.7	24.7	8.2	6	0.1	0.3	0.5	16	0.03	0.059	27	26	0.7	35	0.004	0	1.99	0.004	0.04	1.3
HN-05901	1.5	11.8	2.1	5	0.1	0.3	0.4	13	0.03	0.071	10	17	0.5	28	0.008	0	1.56	0.011	0.03	0.4
HN-05902	1.8	33.7	10.3	5	0.1	0.5	0.4	15	0.04	0.066	18	25	0.75	22	0.008	0	1.88	0.003	0.02	1
HN-05903	2.1	27.3	12	10	0.2	0.6	0.4	26	0.09	0.071	26	25	0.71	49	0.028	0	1.85	0.005	0.05	0.6
HN-05904	1.2	115.2	4	7	0.1	0.5	0.4	25	0.05	0.068	20	21	0.53	35	0.013	0	1.56	0.005	0.03	0.4
HN-05905	1.9	119.1	12.2	5	0.1	0.6	0.5	18	0.05	0.048	19	25	0.78	28	0.01	0	1.89	0.003	0.03	0.8
HN-05906	2.2	4.3	1.6	10	0.2	0.9	0.6	38	0.15	0.142	15	28	0.58	37	0.02	1	1.92	0.006	0.04	0.4
HN-05907	2.8	13.1	7.8	8	0.2	0.7	0.4	24	0.07	0.055	21	30	0.83	50	0.02	0	2.02	0.004	0.03	0.4
HN-05908	2	477.9	14.7	5	0.1	0.7	0.6	15	0.1	0.071	15	28	0.96	22	0.008	0	2.06	0.003	0.02	1.8
HN-05909	1.5	21.1	2.9	6	0	0.7	0.6	22	0.03	0.095	14	23	0.7	22	0.009	0	1.68	0.003	0.02	1.5
HN-05910	1.2	67.4	5.2	5	0	0.4	0.4	17	0.02	0.05	13	23	0.69	34	0.009	0	1.77	0.004	0.02	1.1
HN-05911	2.4	63.2	12.7	8	0.1	0.8	0.8	22	0.1	0.048	19	32	0.97	43	0.007	0	2.19	0.004	0.03	1.5
HN-05912	0.8	0.7	7.1	4	0.1	0.3	0.4	15	0.04	0.088	24	25	0.89	19	0.009	0	2.08	0.004	0.02	0.1
HN-05913	1.3	10.9	14.1	6	0.1	0.4	0.3	15	0.08	0.067	22	23	0.87	23	0.008	0	1.84	0.003	0.02	0.1
HN-05914	0.9	0.5	6.9	4	0.1	0.4	0.7	20	0.03	0.091	30	28	0.99	16	0.009	0	2.24	0.002	0.02	0.1
HN-05915	1	39.1	2.3	4	0.1	0.4	0.4	20	0.04	0.079	17	24	0.78	27	0.011	1	1.89	0.004	0.02	0.2
HN-05916	1.4	30.1	6.5	8	0	0.6	0.4	14	0.01	0.062	18	19	0.56	26	0.011	0	1.42	0.003	0.03	0.8
HN-05917	2.4	24.8	17.6	7	0	0.7	0.6	13	0.01	0.052	17	24	0.68	22	0.005	0	1.61	0.003	0.03	0.4
HN-05918	2.8	75.1	31.3	6	0.1	2	0.6	13	0.01	0.092	38	24	0.58	24	0.004	0	1.44	0.003	0.04	0.4
HN-05919	3.3	8.9	15.7	6	0.1	0.9	0.4	19	0.03	0.073	22	25	0.64	29	0.013	0	1.89	0.003	0.03	0.8
HN-05920	1.3	6.9	17.9	6	0.1	0.8	0.5	15	0.02	0.053	15	29	0.74	18	0.005	0	1.84	0.003	0.02	1.6
HN-05921	2.2	3.2	17.6	4	0.1	0.6	0.5	17	0.02	0.065	18	27	0.74	15	0.008	0	1.85	0.003	0.02	0.3
HN-05922	3.4	6	12.8	11	0	0.7	0.5	13	0.02	0.073	26	21	0.57	16	0.015	0	1.94	0.004	0.02	0.9
HN-05923	2.5	215.6	5.5	15	0.1	0.4	0.3	16	0.04	0.081	20	15	0.37	22	0.017	0	1.28	0.008	0.03	0.5
HN-05924	6.9	75.9	17.3	12	0.2	0.6	0.4	12	0.02	0.057	73	20	0.62	36	0.013	0	1.85	0.003	0.03	0.6
HN-05925	1.2	8	9	12	0	0.5	0.5	16	0.02	0.08	13	19	0.5	25	0.02	0	1.27	0.005	0.03	0.3
HN-05926	1.8	6.5	12.3	6	0.1	0.6	0.5	17	0.02	0.056	19	23	0.59	21	0.015	0	1.64	0.003	0.02	0.2
HN-05927	2.6	10.1	14	6	0	0.6	0.5	16	0.01	0.07	15	24	0.61	15	0.028	0	1.54	0.002	0.02	0.3
HN-05928	1.9	2	15.2	6	0	0.4	0.5	14	0.02	0.054	22	23	0.69	23	0.018	0	1.8	0.003	0.03	0.3
HN-05929	1.2	5	14.1	5	0	0.3	0.4	15	0.01	0.045	16	21	0.59	19	0.016	0	1.47	0.002	0.02	0.3
HN-05930	1.6	3.9	12.9	7	0	0.3	0.4	15	0.01	0.041	20	23	0.64	29	0.016	0	1.54	0.003	0.02	0.7
HN-05931	1.6	2.4	17.7	5	0	0.6	0.6	17	0.01	0.089	13	28	0.64	17	0.02	0	1.76	0.003	0.02	0.3
HN-05932	9.8	0.7	13.7	7	0.1	0.2	0.2	6	0.06	0.097	108	11	0.18	12	0.01	1	6.41	0.006	0.02	0.2
HN-05933	2.7	1.5	15.2	5	0	0.3	0.4	11	0.02	0.105	31	23	0.41	16	0.017	0	1.77	0.007	0.03	0.5
HN-05934	2	4.4	22.1	6	0	0.6	0.6	15	0.01	0.073	23	25	0.51	14	0.024	0	1.32	0.002	0.02	0.7
HN-05935	1.7	3.3	13.2	5	0	0.4	0.4	15	0.01	0.051	22	20	0.57	11	0.015	0	1.36	0.003	0.02	0.5
HN-06001	1.7	14.8	5.7	4	0	0.8	0.5	15	0.01	0.054	21	19	0.49	19	0.009	0	1.28	0.002	0.02	0.7
HN-06002	1.7	47.6	14.8	5	0.1	1.3	0.3	9	0.02	0.034	40	12	0.27	8	0.001	0	0.71	0.002	0.02	0.2
HN-06003	1.1	5.4	0.9	6	0	0.5	0.4	23	0.03	0.051	14	13	0.19	32	0.013	0	0.97	0.006	0.02	0.9
HN-06037	1.4	5.1	12.3	5	0.1	0.4	0.3	14	0.02	0.029	25	22	0.74	34	0.007	1	1.74	0.003	0.04	1.2
HN-06038	1.3	4.7	10.1	4	0	0.9	0.6	10	0.01	0.044	19	19	0.9	12	0.011	0	1.77	0.004	0.03	0.2
HN-06039	2.1	9.8	14.7	8	0.1	1	0.6	15	0.02	0.059	30	23	0.7	27	0.008	0	1.68	0.004	0.03	0.7

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-05852	0.02	1.5	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05853	0.02	0.5	0.1	0.07	6	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05854	0.03	0.7	0.1	0.08	6	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05855	0.02	1.2	0	0	6	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05856	0.02	0.7	0.1	0	7	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05857	0.04	0.6	0.1	0.07	7	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05858	0.02	0.1	0	0	2	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05859	0.02	0.4	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05860	0.02	0.7	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05861	0.02	1.2	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05862	0.01	1.2	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05863	0.02	0.8	0	0	7	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05865	0.02	1.3	0	0	6	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05866	0.01	1.8	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05867	0.01	0.7	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05868	0.02	0.5	0	0	2	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-05869	0.01	1.1	0	0	5	1.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05870	0.02	1.2	0	0	5	0.6	7.5	GROUP 1DX - 15.0 GM	A607418
HN-05871	0.02	0.8	0	0	4	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05877	0.01	1.2	0.1	0	6	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05901	0.03	0.6	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05902	0.02	1.2	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05903	0.01	2.2	0.1	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05904	0.01	1.1	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05905	0.01	1.6	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05906	0.03	1.1	0.1	0.07	7	1.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05907	0.01	2.2	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05908	0.01	1.8	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05909	0.02	0.9	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05910	0.02	1.1	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05911	0.01	1.7	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05912	0.03	1	0	0	6	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05913	0.02	1.4	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05914	0.02	1	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05915	0.02	0.9	0.1	0	6	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05916	0.02	0.8	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05917	0.01	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-05918	0.01	1.5	0	0	5	1.3	15	GROUP 1DX - 15.0 GM	A607418
HN-05919	0.02	1.5	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05920	0.02	1.3	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05921	0.01	1.5	0	0	5	1.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05922	0.03	1.5	0	0.06	4	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05923	0.03	0.9	0.1	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05924	0.02	2	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-05925	0.01	1	0	0	4	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05926	0.02	1.2	0.1	0	4	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-05927	0.01	1.1	0	0	5	1.3	15	GROUP 1DX - 15.0 GM	A607418
HN-05928	0.02	1.2	0.1	0	4	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-05929	0.02	1	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05930	0.01	1.2	0	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-05931	0.02	1.1	0.1	0	5	1.4	15	GROUP 1DX - 15.0 GM	A607418
HN-05932	0.06	2.3	0	0.07	2	2.1	15	GROUP 1DX - 15.0 GM	A607418
HN-05933	0.06	1.2	0	0	4	1.9	7.5	GROUP 1DX - 15.0 GM	A607418
HN-05934	0.04	1.1	0	0	4	1.3	15	GROUP 1DX - 15.0 GM	A607418
HN-05935	0.02	0.9	0	0	4	1	15	GROUP 1DX - 15.0 GM	A607418
HN-06001	0.02	0.8	0	0	4	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-06002	0.01	1.5	0	0	2	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06003	0.02	0.5	0.1	0	5	0.7	15	GROUP 1DX - 15.0 GM	A607418
HN-06037	<.01	1.1	0	0.06	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06038	0.01	1	0	0.08	4	0.9	15	GROUP 1DX - 15.0 GM	A607418
HN-06039	0.01	1.2	0.1	0	5	0.8	15	GROUP 1DX - 15.0 GM	A607418

ELEMENT	GPS ID	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
HN-06040	HN06040	NAD83-9V	509157	6872529	1.2	57.5	48.4	116	0	52.4	25.5	499	5.09	235.4
HN-06041	HN06041	NAD83-9V	509119	6872497	0.9	67.7	32.9	77	0.1	24.9	18.6	405	2.71	90.2
HN-06042	HN06042	NAD83-9V	509040	6872436	0.6	35.4	22.2	79	0	21.2	10.4	392	3.66	24.4
HN-06043	HN06043	NAD83-9V	508998	6872407	0.5	46.8	21.3	103	0	25.4	7.6	508	5.28	25
HN-06044	HN06044	NAD83-9V	508959	6872376	0.8	21.8	22.2	84	0	19	7.7	410	3.56	32
HN-06045	HN06045	NAD83-9V	508921	6872345	1.2	68.1	26.4	74	0	19.2	7.5	435	4.4	24.5
HN-06046	HN06046	NAD83-9V	508880	6872314	0.7	18.8	13.5	53	0	13.4	5.2	316	2.8	17
HN-06047	HN06047	NAD83-9V	508840	6872285	0.8	31.5	21.4	83	0	22.8	12	503	3.5	33.2
HN-06048	HN06048	NAD83-9V	508800	6872254	0.7	30.9	21.4	80	0	27.1	16.3	578	3.17	88.8
HN-06049	HN06049	NAD83-9V	508762	6872222	0.5	12.5	6.5	21	0	4.8	3.3	101	0.91	14.1
HN-06298	HN06298	NAD83-9V	508124	6872487	0.8	16.7	11.1	22	0	5.6	3	85	1.22	99.5
HN-06299	HN06299	NAD83-9V	508086	6872456	1	50.3	29.7	84	0	30.5	17.5	382	3.04	127.8
HN-06300	HN06300	NAD83-9V	508043	6872426	1.2	115.1	48.5	142	0.1	65.5	37.9	553	3.93	394.5
HN-06301	HN06301	NAD83-9V	508002	6872398	0.7	28	23.4	84	0	21.8	9.1	345	4.51	175.8
HN-06302	HN06302	NAD83-9V	507962	6872369	0.7	48.8	29.2	92	0	28	16.2	425	3.27	117.2
HN-06303	HN06303	NAD83-9V	507922	6872337	0.7	65.9	30.7	106	0	36.8	20.6	449	3.95	135.1
HN-06304	HN06304	NAD83-9V	507881	6872308	0.6	55.7	29.9	116	0	39.1	24.2	637	4.22	248.5
HN-06305	HN06305	NAD83-9V	507840	6872278	0.5	39.5	21	99	0	39.3	24.2	591	3.46	65.4
HN-06306	HN06306	NAD83-9V	507800	6872250	0.8	31.6	24	82	0	23.7	10.5	474	4.18	35.8
HN-06307	HN06307	NAD83-9V	507761	6872219	0.4	33.6	16.6	79	0	23.1	11	543	3.52	21.4
HN-06308	HN06308	NAD83-9V	507819	6872140	0.5	29.2	16.1	71	0	21.2	10.6	427	3	26
HN-06309	HN06309	NAD83-9V	507857	6872173	0.5	33.6	25.2	74	0	24.2	21.2	672	2.9	159
HN-06310	HN06310	NAD83-9V	507896	6872203	0.4	38.7	19.1	115	0	37.1	15.4	509	4.46	51.1
HN-06311	HN06311	NAD83-9V	507936	6872233	0.8	71.5	27.2	125	0	35.5	17.9	482	4.28	167.9
HN-06312	HN06312	NAD83-9V	507976	6872262	0.9	24.6	22	48	0	12.2	5.3	213	2.58	171.7
HN-06313	HN06313	NAD83-9V	508016	6872294	0.8	46.2	29	96	0	25.4	14.1	459	3.99	155.7
HN-06314	HN06314	NAD83-9V	508055	6872322	0.9	42.9	35.4	96	0	26.7	13.5	425	3.93	444.5
HN-06315	HN06315	NAD83-9V	508138	6872382	0.8	32.4	30.8	89	0	26.3	10.8	278	3.31	229.8
HN-06316	HN06316	NAD83-9V	508176	6872413	0.8	50.7	29.1	111	0	45.4	25.6	474	4.05	281.8

ELEMENT	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti	B	Al	Na	K	W
HN-06040	5.2	3.5	8.8	6	0.2	0.5	0.3	15	0.04	0.075	40	20	0.53	25	0.007	0	1.47	0.003	0.03	0.5
HN-06041	2.7	66.9	10.1	8	0.1	1.1	0.5	13	0.05	0.059	22	16	0.47	30	0.013	0	1.29	0.013	0.04	1
HN-06042	2.1	6.5	12.5	5	0	0.4	0.3	17	0.07	0.077	20	22	0.71	13	0.01	0	1.71	0.007	0.03	0.2
HN-06043	2.1	2	15.1	4	0.1	0.4	0.4	18	0.08	0.071	24	31	0.94	14	0.008	0	2.25	0.002	0.02	0.1
HN-06044	1.3	2.4	3.9	7	0.1	0.5	0.4	25	0.05	0.061	19	24	0.6	36	0.014	0	1.78	0.003	0.03	0.5
HN-06045	3	2.2	3.1	9	0.1	0.9	0.7	27	0.05	0.111	19	27	0.68	40	0.012	0	1.96	0.006	0.04	0.1
HN-06046	0.9	0.6	1.1	7	0.1	0.4	0.3	27	0.04	0.065	13	19	0.45	31	0.019	0	1.45	0.009	0.04	0.1
HN-06047	1.3	15.2	5	7	0.1	0.6	0.4	22	0.06	0.061	16	23	0.61	33	0.017	0	1.82	0.006	0.03	0.3
HN-06048	1.8	72.7	9.7	8	0.2	0.5	0.3	23	0.09	0.064	29	22	0.65	41	0.026	0	1.53	0.005	0.04	0.7
HN-06049	0.7	0	0.1	7	0	0.2	0.1	11	0.04	0.048	6	6	0.12	23	0.006	0	0.66	0.019	0.03	0.1
HN-06298	1.6	2.1	0.8	7	0	0.3	0.2	10	0.07	0.063	11	7	0.12	19	0.01	0	1.01	0.018	0.03	0.3
HN-06299	2.2	24.1	5.1	9	0	0.6	0.5	21	0.05	0.076	21	18	0.49	35	0.022	1	1.45	0.011	0.05	0.5
HN-06300	4.6	27	8.4	8	0.1	0.7	0.7	19	0.04	0.077	28	22	0.63	39	0.013	0	1.82	0.01	0.06	1.9
HN-06301	1.6	277.9	3.9	5	0.1	0.5	0.4	18	0.03	0.068	20	26	0.69	20	0.011	0	1.69	0.003	0.03	0.8
HN-06302	2.6	11.5	7.9	9	0.1	0.6	0.4	19	0.05	0.068	21	21	0.62	40	0.016	0	1.55	0.01	0.05	0.5
HN-06303	3.1	36.3	11.5	8	0.1	0.5	0.4	17	0.07	0.074	24	23	0.74	25	0.013	1	1.73	0.006	0.03	0.5
HN-06304	3.2	744.6	11	7	0.1	0.5	0.4	18	0.07	0.069	27	26	0.81	35	0.009	0	1.92	0.004	0.03	2.1
HN-06305	2.8	43.9	11.7	8	0.1	0.5	0.3	18	0.11	0.065	28	23	0.7	30	0.014	0	1.57	0.004	0.03	0.2
HN-06306	1.8	11.7	4.7	5	0.1	0.5	0.4	21	0.03	0.094	20	28	0.71	22	0.008	1	1.88	0.003	0.03	0.2
HN-06307	1.9	2	7.9	6	0.1	0.4	0.3	21	0.07	0.067	15	26	0.77	18	0.013	0	1.63	0.008	0.03	0.1
HN-06308	1.7	4.6	8.5	6	0	0.5	0.3	17	0.07	0.068	19	20	0.63	19	0.015	0	1.4	0.012	0.03	0.1
HN-06309	2.2	50	2.6	6	0.2	0.6	0.4	14	0.05	0.078	14	19	0.54	32	0.007	0	1.39	0.01	0.03	4.2
HN-06310	1.8	50.5	10.3	6	0	0.7	0.3	17	0.07	0.054	22	28	1	21	0.011	1	1.96	0.003	0.02	0.2
HN-06311	3	27	12	10	0.1	0.6	0.4	22	0.09	0.08	26	27	0.87	29	0.021	0	1.9	0.004	0.04	0.7
HN-06312	1.5	63.2	1	8	0.1	0.5	0.4	20	0.04	0.088	13	14	0.31	33	0.011	1	1.15	0.012	0.04	0.9
HN-06313	2.4	18.7	12.7	6	0.1	0.6	0.5	14	0.04	0.069	23	24	0.72	22	0.012	0	1.71	0.005	0.03	0.6
HN-06314	2.7	317.8	9.1	8	0.1	0.7	0.4	20	0.06	0.082	24	22	0.63	32	0.019	0	1.54	0.006	0.04	2
HN-06315	2.7	65.8	4.9	7	0	0.5	0.4	20	0.05	0.07	32	21	0.58	32	0.014	1	1.55	0.004	0.04	1.8
HN-06316	2.8	25	10.3	7	0	0.5	0.4	17	0.05	0.06	25	25	0.78	29	0.009	1	1.87	0.003	0.04	1.2

ELEMENT	Hg	Sc	Tl	S	Ga	Se	Sample	Analysis:	Acme file #
HN-06040	0.02	0.9	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06041	0.02	1.1	0	0	3	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06042	0.01	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06043	0.02	1.5	0	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06044	0.02	1	0.1	0	6	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06045	0.02	1.2	0.1	0.06	7	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-06046	0.02	0.8	0.1	0.06	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06047	0.02	1.2	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06048	0.01	1.8	0.1	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06049	0.01	0.2	0	0	3	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06298	0.02	0.4	0	0	2	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06299	0.01	1.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06300	0.01	1.6	0.1	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06301	0.02	0.9	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06302	0.01	1.3	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06303	0.01	1.4	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06304	0.01	1.5	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06305	0.01	1.5	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06306	0.04	1	0	0.07	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06307	0.01	1.3	0	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06308	0.01	1	0	0	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06309	0.02	0.8	0.1	0	4	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06310	<.01	1.4	0	0	6	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06311	0.01	1.6	0	0	6	0.8	15	GROUP 1DX - 15.0 GM	A607418
HN-06312	0.02	0.6	0.1	0.07	4	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06313	0.01	1.2	0	0	5	0	15	GROUP 1DX - 15.0 GM	A607418
HN-06314	0.01	1.5	0.1	0	4	0.6	15	GROUP 1DX - 15.0 GM	A607418
HN-06315	0.01	1.2	0.1	0	5	0.5	15	GROUP 1DX - 15.0 GM	A607418
HN-06316	0.01	1.3	0	0	5	0.6	15	GROUP 1DX - 15.0 GM	A607418