

Rimfire Minerals Corporation

**2007 GEOLOGICAL AND GEOCHEMICAL REPORT ON THE
BLVD PROPERTY**

Volume 1 – Text

Located in the North Dawson Range
Whitehorse Mining District
Rimfire Minerals Corporation (registered owner)
BLVD1-96 (YC64776-YC64869)
AVE1-4(YC65316-YC635318)
115J/13
6,967,500 mN and 574,500 mE; UTM NAD 83 Zone 7
Work Conducted June 23 to July 10, 2007

-prepared by-
Michael D. Roberts, Ph.D.
Rimfire Minerals Corporation
Suite 700, 700 West Pender Street
Vancouver, British Columbia, Canada
V6C 1G8

February, 2008

SUMMARY

Mapping, prospecting and a 4.0 by 2.4 km soil grid survey (100m lines, 50m sample spacing) was completed in June-July of 2007 on the Boulevard property in the North Dawson Range, Yukon. This program outlined **a 1.2 km long by 450 m wide Au-As soil anomaly that is open to the SE.** This anomaly has associated clusters of elevated Sb, Te and Bi soil geochemistry and is coincident with a break in the regional airborne magnetics interpreted to be the contact between micaceous schists and mafic schists. Folded and sheared quartz veins near the contact indicate that this area is a zone of high strain, and may have been the focus for an “orogenic”-style system. No rocks samples were collected to explain the soil anomaly.

The Au-As soil anomaly appears to be geochemically distinct from a nearby Mo-W-Cu skarn occurrence (Toni Tiger), which is characterized by chip samples to contain low concentrations of Mo-W-Cu mineralization and an absence of Au-As. Trenching the Au-As anomaly is recommended for the 2008 program.

TABLE OF CONTENTS

SUMMARY	1
TABLE OF CONTENTS	2
LIST OF APPENDICES.....	2
LIST OF TABLES.....	2
LIST OF FIGURES	2
1. INTRODUCTION	4
2. PROPERTY TITLE	5
3. LOCATION, ACCESS AND GEOGRAPHY	9
4. PROPERTY EXPLORATION HISTORY	9
4.1. Previous Work	9
5. REGIONAL GEOLOGY.....	10
6. PROPERTY GEOLOGY.....	13
6.1. Lithology and Structure	13
6.2. Alteration and Mineralization.....	16
7.0 GEOCHEMISTRY.....	18
7.1 Soil Geochemistry	18
7.2 Rock Geochemistry	25
9.0 DISCUSSION AND RECCOMMENDATIONS	26

LIST OF APPENDICES

Appendix A: Bibliography
Appendix B: Statement of Expenditures
Appendix C: Certificates of Analysis
Appendix D: Compact Disk
Appendix E: Geologist's Certificate

LIST OF TABLES

Table 2.0.1 Claim data.....	5
Table 7.1.1 Summary statistics for the 2007 soil grid.....	18
Table 7.1.2 Correlation matrix for soil samples from the 2007 grid.....	18
Table 7.2.1 Summary results of chip sampling in the area of Mo-W skarn.....	24

LIST OF FIGURES


Figure 1: BLVD Location Map (1:80,000).....	4
Figure 2: BLVD Claim Map (1:20,000).....	8
Figure 3: BLVD Regional Geology.....	11
Figure 4: BLVD Property Geology (1:20,000).....	13
Figure 5: Muscovite-biotite-quartz schists with isoclinally folded and sheared quartz veins.....	14
Figure 6: Pyritic mafic schist with folded and sheared quartz veins.....	14

Figure 7: Stockwork quartz-molybdenite veining hosted by muscovite quartz schist.....	16
Figure 8: Southwest-dipping quartz veins cutting biotite schist with near vertical foliation.....	16
Figure 9: Sample location map.....	in pocket
Figure 10: Geochemical results of rocks and soils: Au.....	20
Figure 11: Geochemical results of rocks and soils: As.....	21
Figure 12: Geochemical results of rocks and soils: Cu.....	22
Figure 13: Geochemical results of rocks and soils: Mo.....	23

1. INTRODUCTION

The Boulevard property, located in west-central Yukon, was staked by Rimfire Minerals Corporation on the basis of reconnaissance silt and soil sampling programs conducted in 2006. This program was initiated to explore for Au mineralization in the Yukon-Tanana Terrane, in particular the potential for vein-hosted mineralization spatially associated with mid-Cretaceous plutons.

This report summarizes the 2007 follow-up work on the Boulevard claims which consisted of grid soil sampling, prospecting, chip sampling the Toni-Tiger minifile occurrence and reconnaissance geological mapping.

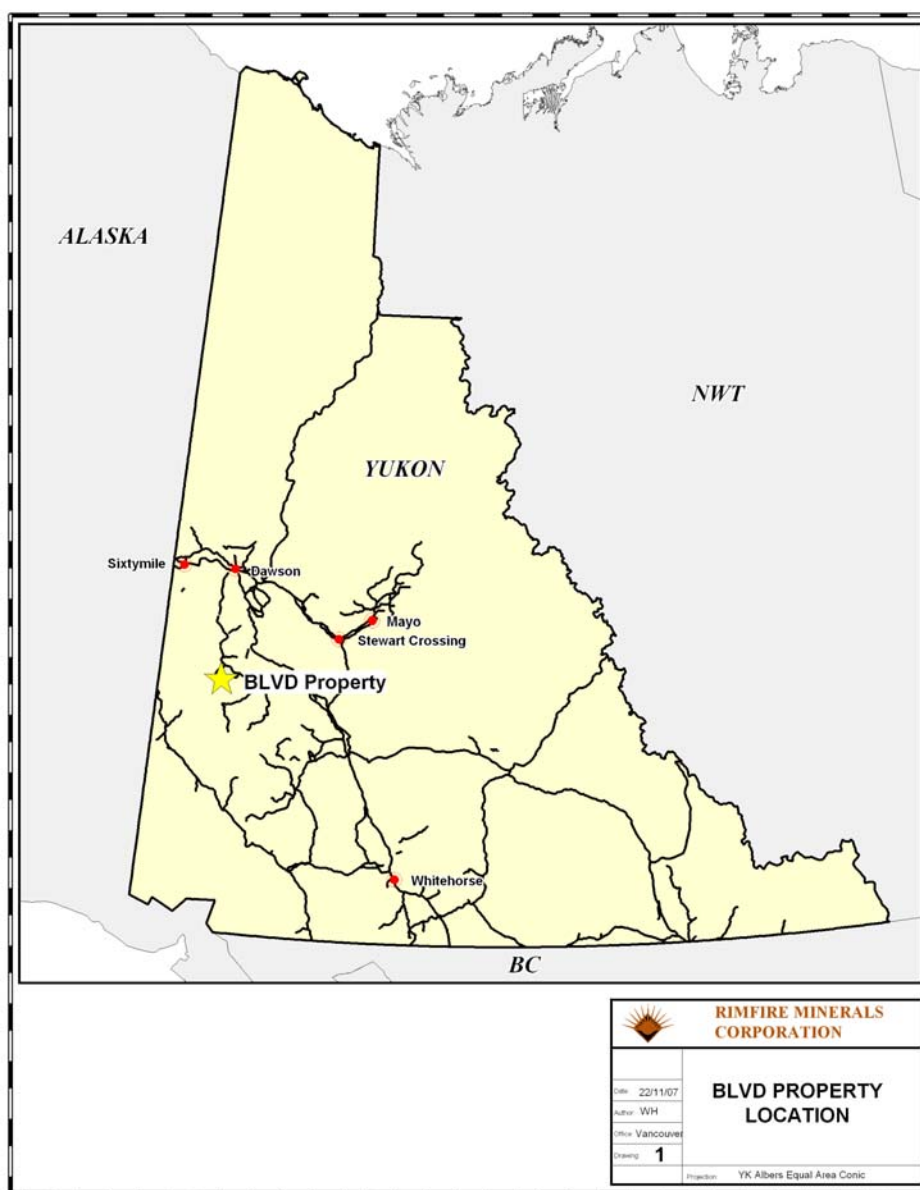

2. PROPERTY TITLE

The Boulevard property consists of 100 contiguous mineral claims (including the 4 contiguous AVE claims) covering 20.7 km² of the Whitehorse Mining District of the Yukon, as summarized in Table 2.0.1 and (Figure 2).

Table 2.0.1 Claim data


Claim	Grant	ADL#	NTS	Expiry	Owner	Controller	Jurisdiction	District	JV
BLVD 1	YC	64776	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 2	YC	64777	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 3	YC	64778	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 4	YC	64779	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 5	YC	64780	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 6	YC	64781	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 7	YC	64782	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 8	YC	64783	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 9	YC	64784	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 10	YC	64785	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 11	YC	64786	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 12	YC	64787	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 13	YC	64788	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 14	YC	64789	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 15	YC	64790	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 16	YC	64791	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 17	YC	64792	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 18	YC	64793	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 19	YC	64794	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 20	YC	64795	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 21	YC	64796	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 22	YC	64797	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 23	YC	64798	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 24	YC	64799	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 25	YC	64800	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 26	YC	64801	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 27	YC	64802	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 28	YC	64803	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 29	YC	64804	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 30	YC	64805	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 31	YC	64806	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 32	YC	64807	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 33	YC	64808	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 34	YC	64809	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 35	YC	64810	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 36	YC	64811	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 37	YC	64812	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 38	YC	64813	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX

Table 2.0.1 Cont.

Claim	Grant	ADL#	NTS	Expiry	Owner	Controller	Jurisdiction	District	JV
BLVD 39	YC	64814	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 40	YC	64815	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 41	YC	64816	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 42	YC	64817	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 43	YC	64818	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 44	YC	64819	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 45	YC	64820	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 46	YC	64821	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 47	YC	64822	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 48	YC	64823	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 49	YC	64824	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 50	YC	64825	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 51	YC	64826	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 52	YC	64827	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 53	YC	64828	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 54	YC	64829	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 55	YC	64830	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 56	YC	64831	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 57	YC	64832	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 58	YC	64833	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 59	YC	64834	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 60	YC	64835	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 61	YC	64836	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 62	YC	64837	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 63	YC	64838	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 64	YC	64839	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 65	YC	64840	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 66	YC	64841	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 67	YC	64842	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 68	YC	64843	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 69	YC	64844	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 70	YC	64845	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 71	YC	64846	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 72	YC	64847	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 73	YC	64848	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 74	YC	64849	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 75	YC	64850	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 76	YC	64851	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 77	YC	64852	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 78	YC	64853	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 79	YC	64854	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 80	YC	64855	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 81	YC	64856	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 82	YC	64857	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 83	YC	64858	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX

Table 2.0.1 Cont.

Claim	Grant	ADL#	NTS	Expiry	Owner	Controller	Jurisdiction	District	JV
BLVD 84	YC	64859	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 85	YC	64860	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 86	YC	64861	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 87	YC	64862	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 88	YC	64863	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 89	YC	64864	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 90	YC	64865	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 91	YC	64866	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 92	YC	64867	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 93	YC	64868	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 94	YC	64869	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 95	YC	64870	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
BLVD 96	YC	64871	115J/13	18-May-08	RMC	RMC	Yukon	Whitehorse	NGX
AVE 1	YC	65316	115J/13	10-July-08	RMC	RMC	Yukon	Whitehorse	NGX
AVE 2	YC	65317	115J/13	10-July-08	RMC	RMC	Yukon	Whitehorse	NGX
AVE 3	YC	65318	115J/13	10-July-08	RMC	RMC	Yukon	Whitehorse	NGX
AVE 4	YC	65319	115J/13	10-July-08	RMC	RMC	Yukon	Whitehorse	NGX

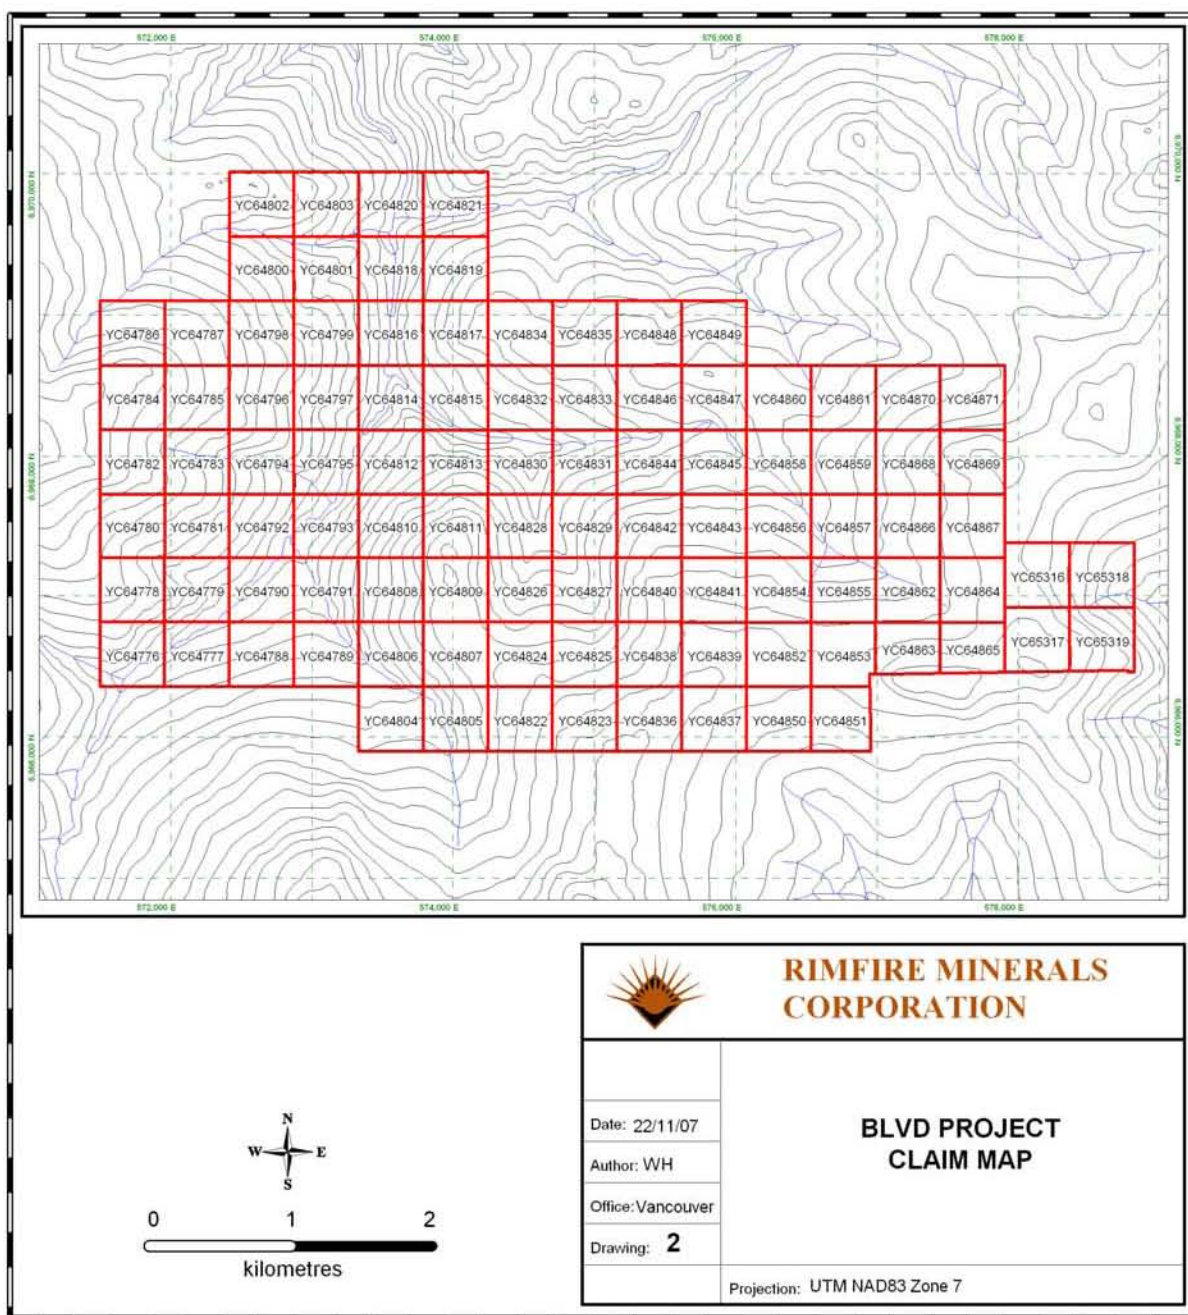

3. LOCATION, ACCESS AND GEOGRAPHY

The Boulevard Property is located in west-central Yukon approximately 135 km south of Dawson City and centred on 6,967,500 mN and 574,500 mE (UTM NAD 83, Zone 7). The property can be accessed by helicopter from Dawson City, and staging areas for supplies can be flown to the Thistle Creek airstrip or a placer mining operation at Henderson Creek. Alternatively, several boat operators in Dawson City are available for hire to transport supplies to the mouth of Independence Creek, where they can be subsequently mobilized by helicopter to the property.

The geography of the area is characterized by rolling hills typical of the Dawson Ranges where elevations range between 600 and 1250 m. Here, vegetation is sparse with lower elevations containing hemlock and arctic willow, whereas higher elevations comprise thick sphagnum moss and grasses. Further south, hills are generally more subdued and more thickly vegetated with hemlock on slopes and thick arctic willow in creek valleys. North-facing slopes locally exhibit permafrost complicating soil sampling. South-facing slopes more typically are vegetated by conifers such as aspen and locally birch. Drainage systems vary from well-channelized, discrete streams to swamps in broader, flat-bottomed valleys.

4. PROPERTY EXPLORATION HISTORY

4.1. Previous Work

The only previous work recorded on the property was carried out between 1969 and 1970 by Archer, Cathro and Associates Limited for the Dawson Range Joint Venture. This work included soil sampling, mapping and trenching that followed-up results from a regional reconnaissance silt sampling program that was focused on the potential of the area for Casino-like porphyry deposits. Soil sampling showed a 10 acre area of Mo anomalies (>50 ppm), with a partially coincident area of Cu anomalies (200-650 ppm) and no Au or Ag anomalies. Based on these results, seven trenches for a total of 2355 ft of trenching were excavated. From trenching and mapping, this work describes two mineralized units:

- 1) Skarn, green siliceous rock with molybdenite, chalcopyrite and scheelite in quartz veins and as disseminations in the wallrock.
- 2) Southern Sulphide Zone, float including (disseminated?) arsenopyrite, pyrite, chalcopyrite and minor molybdenite and scheelite.

Rock assays were not completed at the time the Assessment Report was filed, however based on the soil samples and visual sulphide abundances, no further work was recommended.

Rimfire Minerals Corporation identified the Boulevard for potential gold mineralization (prior to staking) from a regional silt sampling reconnaissance program undertaken in June of 2006 that returned elevated gold values from sediment samples collected in streams draining the Boulevard area. Subsequently, Rimfire carried out a 5-day fly camp in August of 2006 to investigate these anomalous silt samples. This work consisted of reconnaissance soil lines (approximately 400 samples at 100 metre sample spacing), prospecting and geological mapping. On the basis of these results, the Boulevard property was staked in March of 2007.

4.2. 2007 Exploration program

Over the course of sixteen days from June 23 to July 10 soil sampling, mapping, prospecting was conducted on the Boulevard property.


Soil sampling was executed on northeast directed lines with 100 m line-spacing and 50 m sample spacing to cover the areas of interest described above and all anomalous points in between. A total of 43 crew days were required to collect 1664 soil samples from the 4.0 by 2.4 km soil grid (see Figure 9). Additionally, two crew days were spent collecting 43 soil samples directly over the 115J-052 (Toni Tiger) minfile occurrence. These samples were collected over the known mineralization for comparison to results from soils collected elsewhere in the area.

In addition to the soil sampling program 18 man days were spent mapping and prospecting in the area. A total of 38 rock samples were collected from the North Dawson target area.

5. REGIONAL GEOLOGY

The Boulevard claims are located within the Yukon-Tanana terrane in west-central Yukon (Colpron et al., 2006). Regional-scale geological compilation maps (Gordey and Makepeace, 1999) show that the Boulevard claims are underlain by undivided metamorphic rocks of the Nasina sub-terrane that include pre- to late-Devonian rocks of the continental margin (Snowcap Assemblage: quartzite, psammite, pelite, marble, amphibolite) superposed by Late Devonian to Early Mississippian rocks derived from a continental arc system (Finlayson Assemblage: mafic to felsic volcanic rocks, coeval plutonic rocks, carbonaceous pelite, chert, quartzite, volcaniclastic rocks, marble). This sub-terrane is part of the pericratonic Yukon-Tanana terrane of continental affinity that occupies a position between the ancestral continental margin of North America and outboard accreted terranes. The pericratonic terranes were accreted in the Early Jurassic, while subsequent outboard exotic terranes began accreting in the Early to mid-Cretaceous. At this time, the pericratonic package was intruded by a voluminous, northwest-to southeast-trending plutonic suite, referred to as the Dawson Range plutonic belt by Hart et al. (2004) (Klotassin batholith of Tempelmen-Kluit and Wanless, 1975), which lies immediately the south of the Boulevard property. This

plutonic belt is characterized by coarse-grained, hornblende-biotite granodiorite, with local phases of mafic diorite, gabbro, quartz monzonite and biotite granite (Hart et al., 2004). This plutonic belt is dated at 106-99 Ma (Hart et al., 2004 and references therein) and therefore belongs to the metallogenically important mid-Cretaceous suite of plutonic rocks in the northern Cordillera associated with intrusion-related base and precious metal deposits.

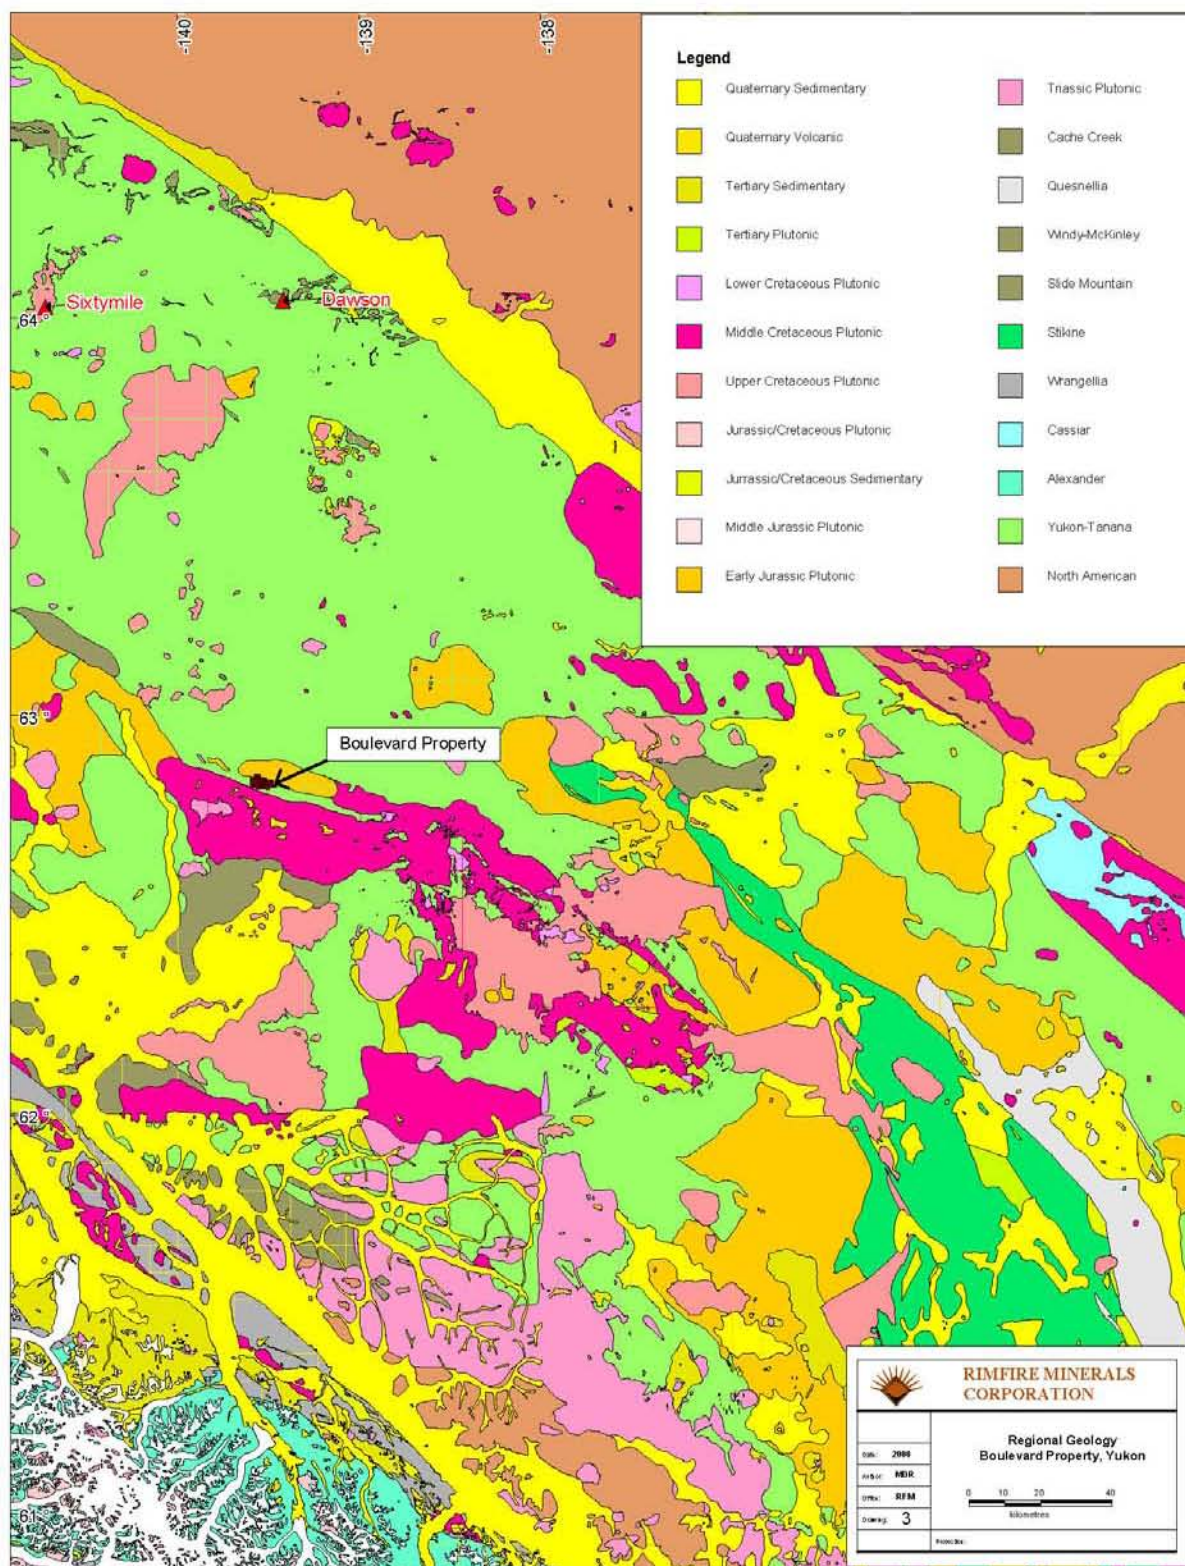

6. PROPERTY GEOLOGY

6.1. Lithology and Structure

The geology of the Boulevard claims (Figure 4) is dominated by a basement of Devonian-Mississippian schists (**DMps**) intruded by a NW-trending elongate Cretaceous (?) granite batholith in the north-eastern sector of the property (**Kg** on Figure 4; identified as **EJp**, Early Jurassic pluton by Gordey and Makepeace, 1999 and **mKg**, Middle Cretaceous by Colpron, 2006). The basement schists include a variety of quartz-mica schists (ranging from quartz-rich to biotite-rich to muscovite rich), chlorite-sericite schists (mafic schists), calcareous schists or marbles and quartzites. Higher metamorphic grade augen gneisses (**DMog**) have been noted in places, yet their geological relationship to the more volumetrically abundant schists is unknown. The dominant schistosity is NW-trending and steeply SW-dipping. Schists commonly host isoclinally folded and sheared quartz veins (Figure 5 and 6), which are likely associated with progressive regional deformation. We have interpreted a contact between micaceous schists and mafic schists based on the regional airborne magnetic data and sparse outcrops, yet the contact itself has never been mapped in the field. This contact may be of significance since a Au-As soil anomaly (see below) is coincident with this magnetic break in the SE corner of the property. The Cretaceous intrusive rocks are undeformed and comprise medium to coarse-grained (3-8 mm) equigranular quartz-plagioclase-alkali feldspar with about 10% biotite. At the contact, subcropping boulders display intrusive relations, whereby the younger plutonic rocks cut sharply across the wallrock fabric. Minor pegmatite (with muscovite and garnet) and aplite occur locally within 100 meters of the pluton margin and within 500 meters of the Toni Tiger Mo-W-Cu skarn occurrence. These pegmatites contain trace molybdenite, and hence link the emplacement of the Cretaceous granite to the skarn occurrence. The basement schists form a ~3 km wide NW-trending belt of rocks between the Cretaceous granite to the NE and a strongly foliated mid-Cretaceous granodiorite to the SW. The geology of the schist-granodiorite contact and the granodiorite itself has not been examined in detail.

INSERT LOCAL GEOLOGY FOLD-OUT MAP: Figure 4

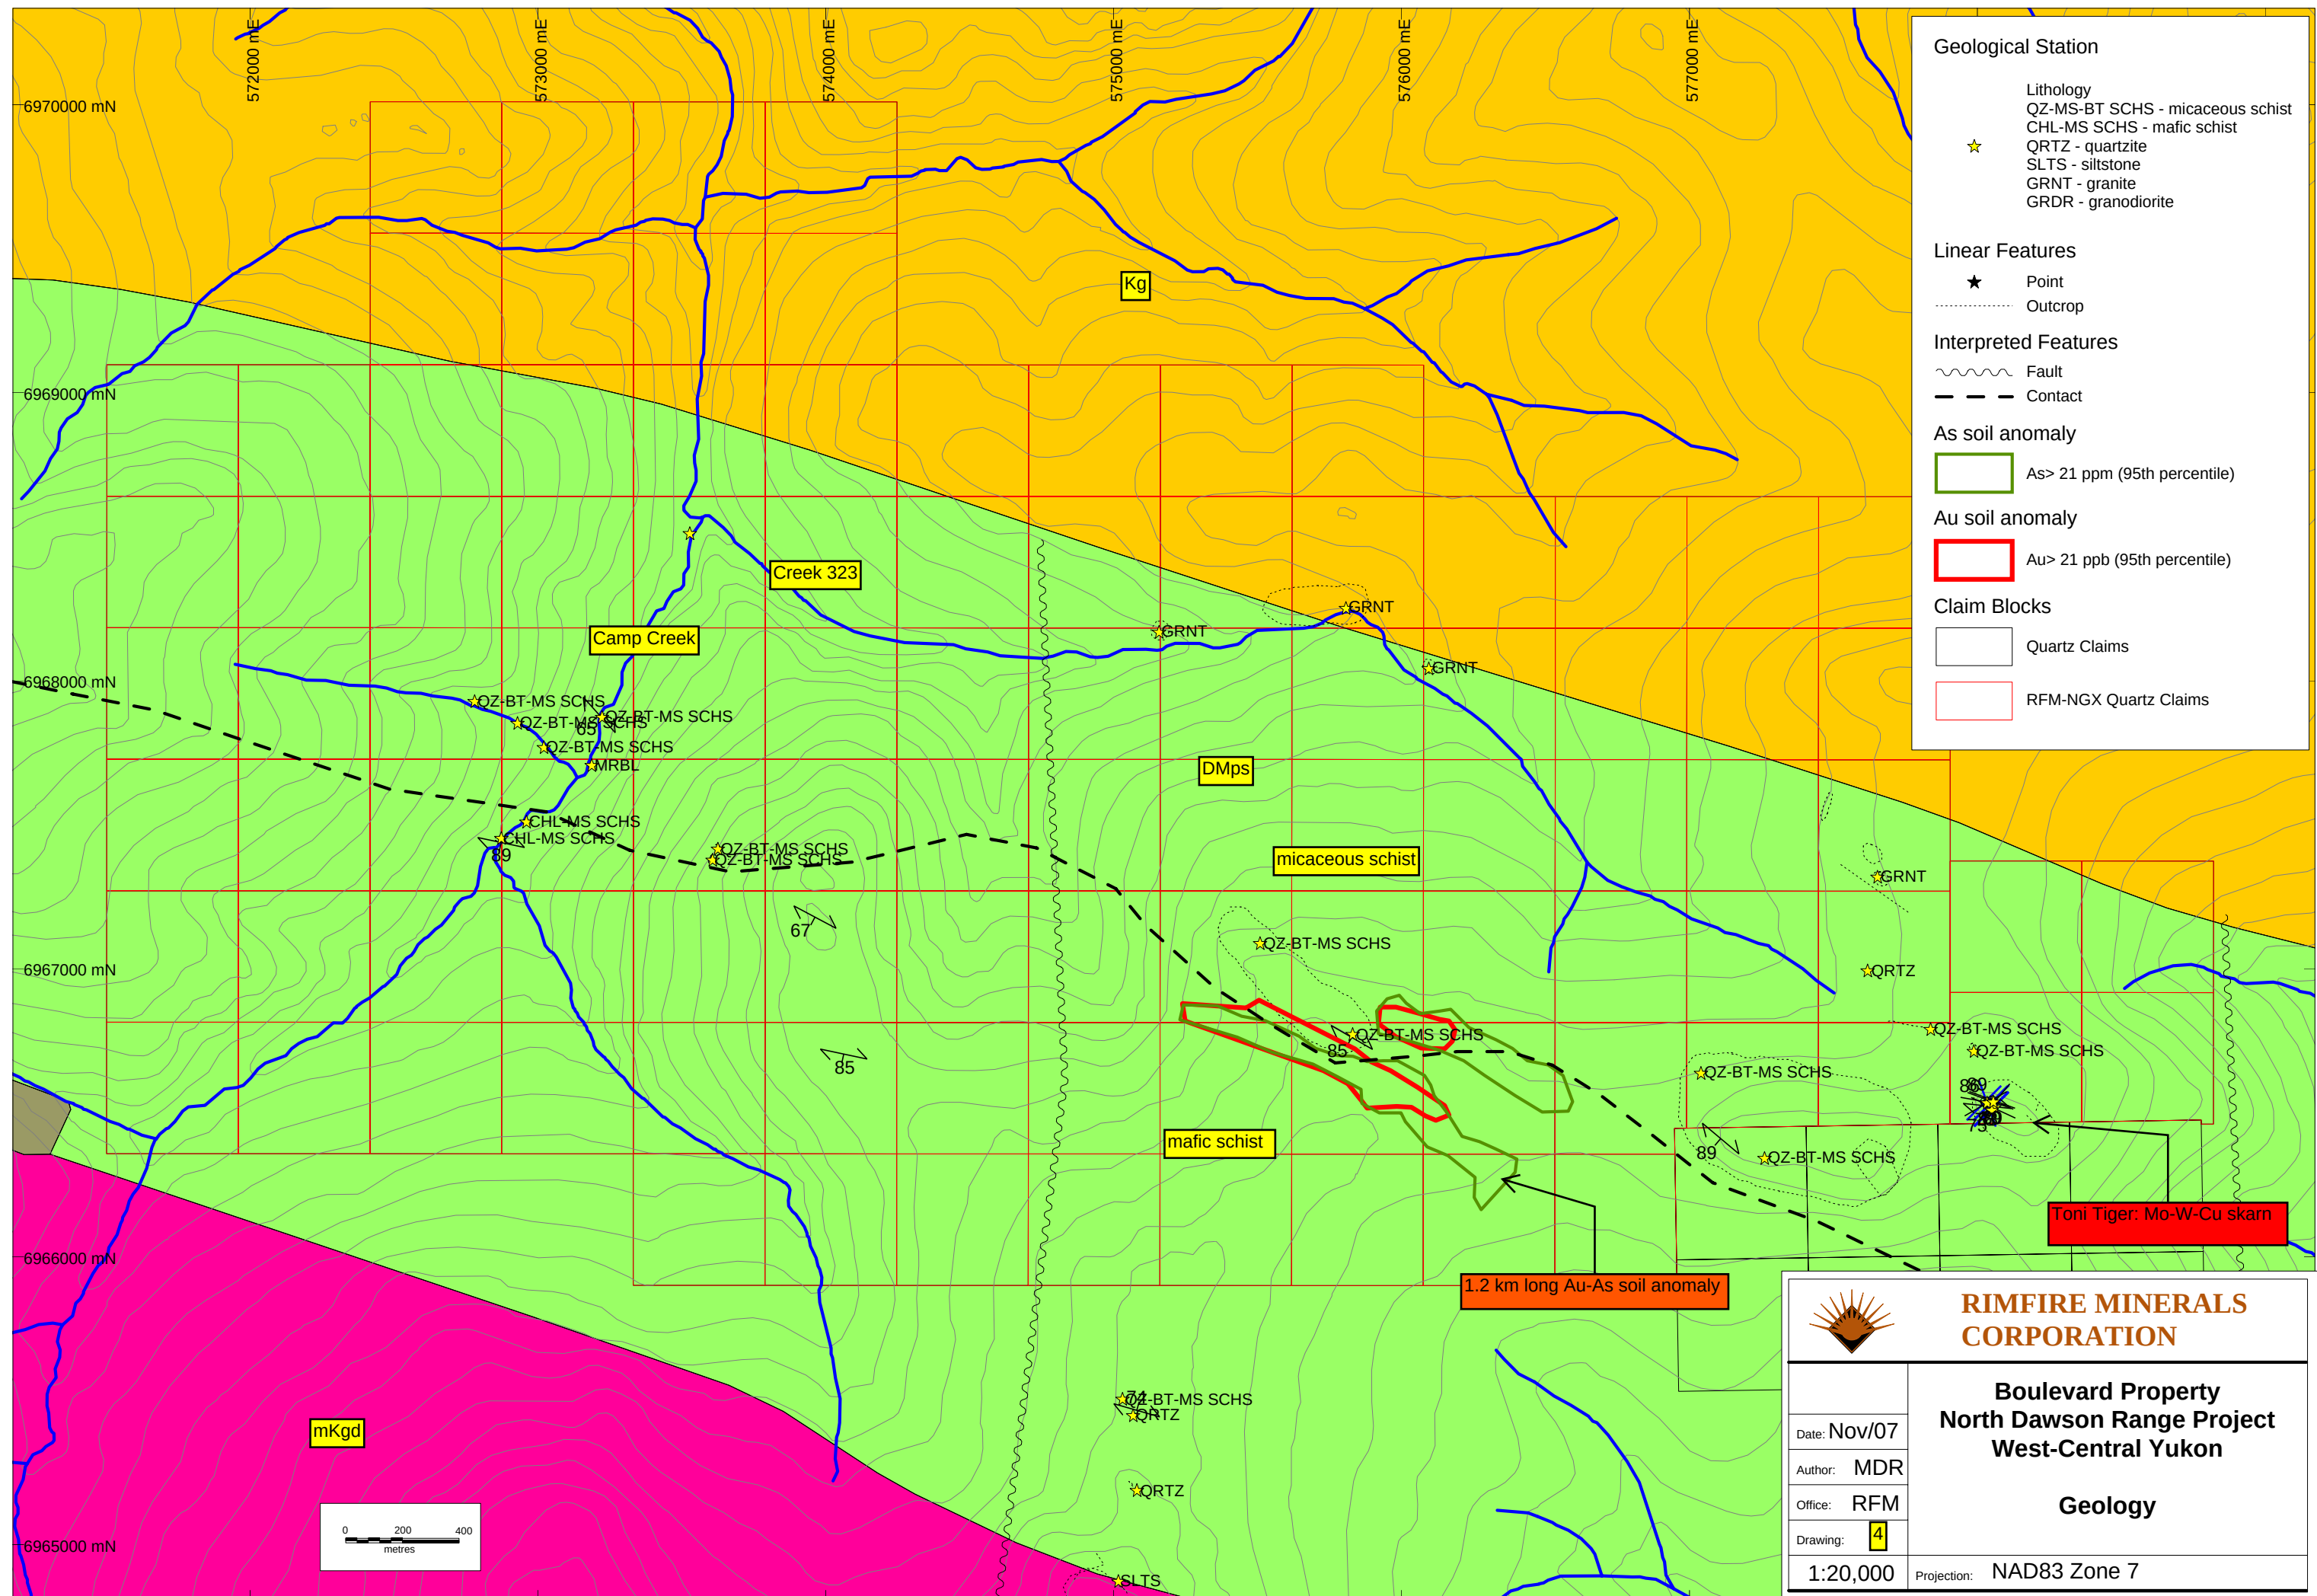




Figure 5. Muscovite-biotite-quartz schists with isoclinally folded and sheared quartz veins.



Figure 6. Pyritic mafic schist with folded and sheared quartz veins.

Significant Minfile Occurrences

Toni Tiger (115J 052):

“A strong molybdenum soil anomaly, with values from 20 to over 100 ppm, covers an area of over 160 ha. It is associated with a northeast-trending zone of aplite dykes, skarn and quartz stockworks. The anomaly occurs in quartzose schist and gneiss of the Yukon Crystalline Terrane near the south contact of a stock of mid-Cretaceous Coffee Creek quartz monzonite. Trenching exposed two areas of weak mineralization, comprised of small blebs and stringers and disseminations of molybdenite, chalcopyrite, scheelite, pyrite and arsenopyrite with quartz veinlets. A selected specimen assayed 0.08% Cu, 0.196% Mo, 0.1% WO₃ and 2.7 g/t Ag.”

6.2. Alteration and Mineralization

The only significant alteration and mineralization currently recognized on the property consists of a 350 m by 200 m knob of outcrop 750 metres to the south of the Cretaceous granite contact that consists of sheeted to stockwork quartz veining and associated garnet-diopside-actinolite skarn hosted by a package of schistose metasediments (Figures 7 and 8). Milky to glassy quartz ± calcite veins, generally 2 to 5 cm wide, but also up to 1 metre wide, have a strong preferred NW-trending and steeply-dipping (75-90 degrees to the SW) orientation, roughly sub-parallel to the local schistosity, with a second set striking to the NE and cross-cutting the fabric. Veins contain trace to minor molybdenite ± chalcopyrite ± pyrite ± pyrrhotite ± scheelite. Where these veins cross-cut micaceous schists (varying from biotite to muscovite to quartz rich), they are associated with bleaching (silicification ± albitization?) and/or chloritic selvages. Where these veins cross-cut calcareous sediments, garnet-diopside-actinolite skarn is developed within and adjacent to the veins. Chip sampling across these veins returned 24 to 234 ppm Mo, and 14 to 108 ppm Cu with low Au and As values (Table 7.2.1).



Figure 7. Stockwork quartz-molybdenite veining hosted by muscovite quartz schist.



Figure 8. Southwest-dipping quartz veins cutting biotite schist with near vertical foliation.

7.0 GEOCHEMISTRY

7.1 Soil Geochemistry

Soil samples were collected using a mattock shovel or soil auger and average samples of 1.0 kg were placed in Kraft sample bags. All samples were packed in rice sacks and shipped to ALS Chemex in North Vancouver. Samples were dry screened to 80 mesh (180 micron) and analyzed for Au (5-10,000 ppb) by fire assay (30g nominal weight) with aqua regia digest followed by Atomic Absorption Spectroscopy (Au-AA23). Fifty pathfinder elements were analyzed for by the ALS Chemex Ultra Trace Level Method (ME-MS41) which consists of aqua regia digestion and a combination of ICP-AES and ICP-MS analysis. Soil sample locations are indicated in Figure 9, and select results (Au, As, Cu, Mo) are shown in Figures 10, 11, 12 and 13.

Results

The soil grid shows an elongate, NW-trending 1.2 km long by 450 m wide Au-As anomaly (JS anomaly) that is open to the SE (defined by >95th percentile Au, 21ppb Au, and >95th percentile As, 21 ppm As, including one sample with 1070 ppb Au). The trend of this anomaly is parallel to the strike of the local schistosity measured in nearby muscovite-biotite-quartz schists and occurs at a similarly-oriented transition from a regional magnetic high to the SW and low to the NE, interpreted to mark the structural or stratigraphic boundary between chlorite-sericite schists (mafic schists) and muscovite-biotite-quartz schists (micaceous schists). Although mafic schists are not mapped in the vicinity of the anomaly due to lack of outcrop, they are mapped along strike 2.5 km to the NW.

While As shows a fairly tight cluster of anomalies in JS anomaly area, Au anomalies are spotty throughout the grid, yet may show a weak association with the transition from metasedimentary schists to mafic schists further along strike to the NW. In the western portion of the grid near the main N-S trending creek, a 309 ppb Au value in soil from the 2006 program was not reproduced, however, a broad area to the south returned a cluster of >90th percentile values and one high value of 110 ppb Au at the interpreted contact between mafic and metasedimentary schists.

The Au-As anomaly is also coincident with tight linear clusters of Sb, Te, Bi anomalies. The elements Ag, Cu, Pb, Zn, Ni, Cr, V and Mo are broadly elevated to anomalous on the southern half of the grid, reinforcing the interpretation that this area is underlain by mafic schists.

Table 7.1.1. Summary statistics for the 2007 Boulevard soil grid.

Stat	Au	Ag	As	Bi	Cu	Hg	Mo	Ni	Pb	S	Sb	Sn	Te	W	Zn
	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	pct	ppm	ppm	ppm	ppm	ppm
30%	-5	0.10	4.2	0.12	17.4	0.04	0.75	17.4	6.8	0.03	0.24	0.40	0.03	0.13	53
60%	6	0.17	6.2	0.17	27.9	0.05	1.10	27.9	9.1	0.05	0.34	0.60	0.05	0.18	71
80%	10	0.24	9.1	0.22	38.6	0.07	1.47	35.5	11.5	0.07	0.55	0.70	0.07	0.26	82
90%	14	0.33	12.8	0.27	48.9	0.10	1.91	42.5	14.3	0.10	0.87	0.90	0.09	0.45	92
95%	21	0.42	21.0	0.37	62.7	0.13	2.53	48.2	17.7	0.14	1.25	1.00	0.11	0.99	100
98%	33	0.56	48.9	0.51	101.8	0.20	43.15	56.4	22.9	0.16	2.57	1.20	0.16	2.90	111
max	1070	2.17	1775.0	4.33	272.0	0.63	303.00	117.0	460.0	0.31	116.00	2.40	0.79	26.80	415
n =	1748														

The highest Au value in soil from the Au-As anomaly (1070 ppb Au) also has anomalous Ag (2.17 ppm Ag), As (1775 ppm As), Sb (79.1 ppm Sb) and Te (0.60 ppm Te). For data from the entire grid, Au is strongly correlated with As-Sb and moderately correlated with Ag-Te (Table 7.1.2).

Soil lines over the skarn occurrence (n = 40) are characterized by consistently high Mo (50-300 ppm Mo), Cu (>100 ppm Cu), and W (3-8 ppm W) values. This is represented in the correlation matrix where Mo correlates with Cu and W. In contrast to the Au-As anomaly, the skarn shows only two samples with Au-As over the 95th percentile and has low Ag-Sb-Te values. One sample has the highest Bi value of program (4.33 ppm Bi).

Table 7.1.2. Correlation matrix for select elements from the 2007 Boulevard soil grid.


	Au	Ag	As	Bi	Cu	Fe	Hg	Mo	Ni	Pb	S	Sb	Sn	Te	W	Zn
Au	1.00															
Ag	0.33	1.00														
As	0.88	0.34	1.00													
Bi	0.03	0.12	0.06	1.00												
Cu	0.06	0.25	0.05	0.19	1.00											
Fe	0.06	0.04	0.13	0.30	0.36	1.00										
Hg	0.02	0.35	0.05	0.08	0.18	-0.11	1.00									
Mo	0.01	-0.03	0.01	0.09	0.66	0.07	0.22	1.00								
Ni	0.06	0.17	0.09	0.14	0.44	0.62	-0.16	0.10	1.00							
Pb	0.02	0.19	0.04	0.11	-0.01	0.13	0.20	-0.03	0.01	1.00						
S	0.09	0.35	0.03	-0.10	0.12	-0.26	0.35	-0.04	0.00	-0.07	1.00					
Sb	0.54	0.21	0.56	0.05	0.04	0.10	0.02	-0.01	0.09	0.04	0.01	1.00				
Sn	-0.02	-0.13	0.06	0.40	0.14	0.53	0.06	0.18	0.22	0.17	-0.40	0.09	1.00			
Te	0.32	0.47	0.34	0.38	0.38	0.38	-0.02	0.06	0.37	0.07	0.06	0.22	0.11	1.00		
W	0.05	-0.05	0.00	0.17	0.55	0.08	0.15	0.65	0.07	-0.02	-0.07	-0.01	0.20	0.04	1.00	
Zn	0.04	0.16	0.06	0.26	0.42	0.75	-0.06	0.05	0.63	0.15	-0.07	0.07	0.32	0.37	0.04	1.00

Summary


- Work in 2007 defined a 1.2 km long by 450 m wide Au-As +/- Sb-Te-Bi anomaly open to the SE. The anomaly is located at a magnetic break interpreted to be stratigraphic/structural contact between mafic and metasedimentary schists.

- The Au-As anomaly is distinct from a 250 m by 250 Mo-W-Cu anomaly associated with the Toni Tiger minifile occurrence. that is proximal and likely related to the Cretaceous intrusion..


INSERT FIGURE 10: Au

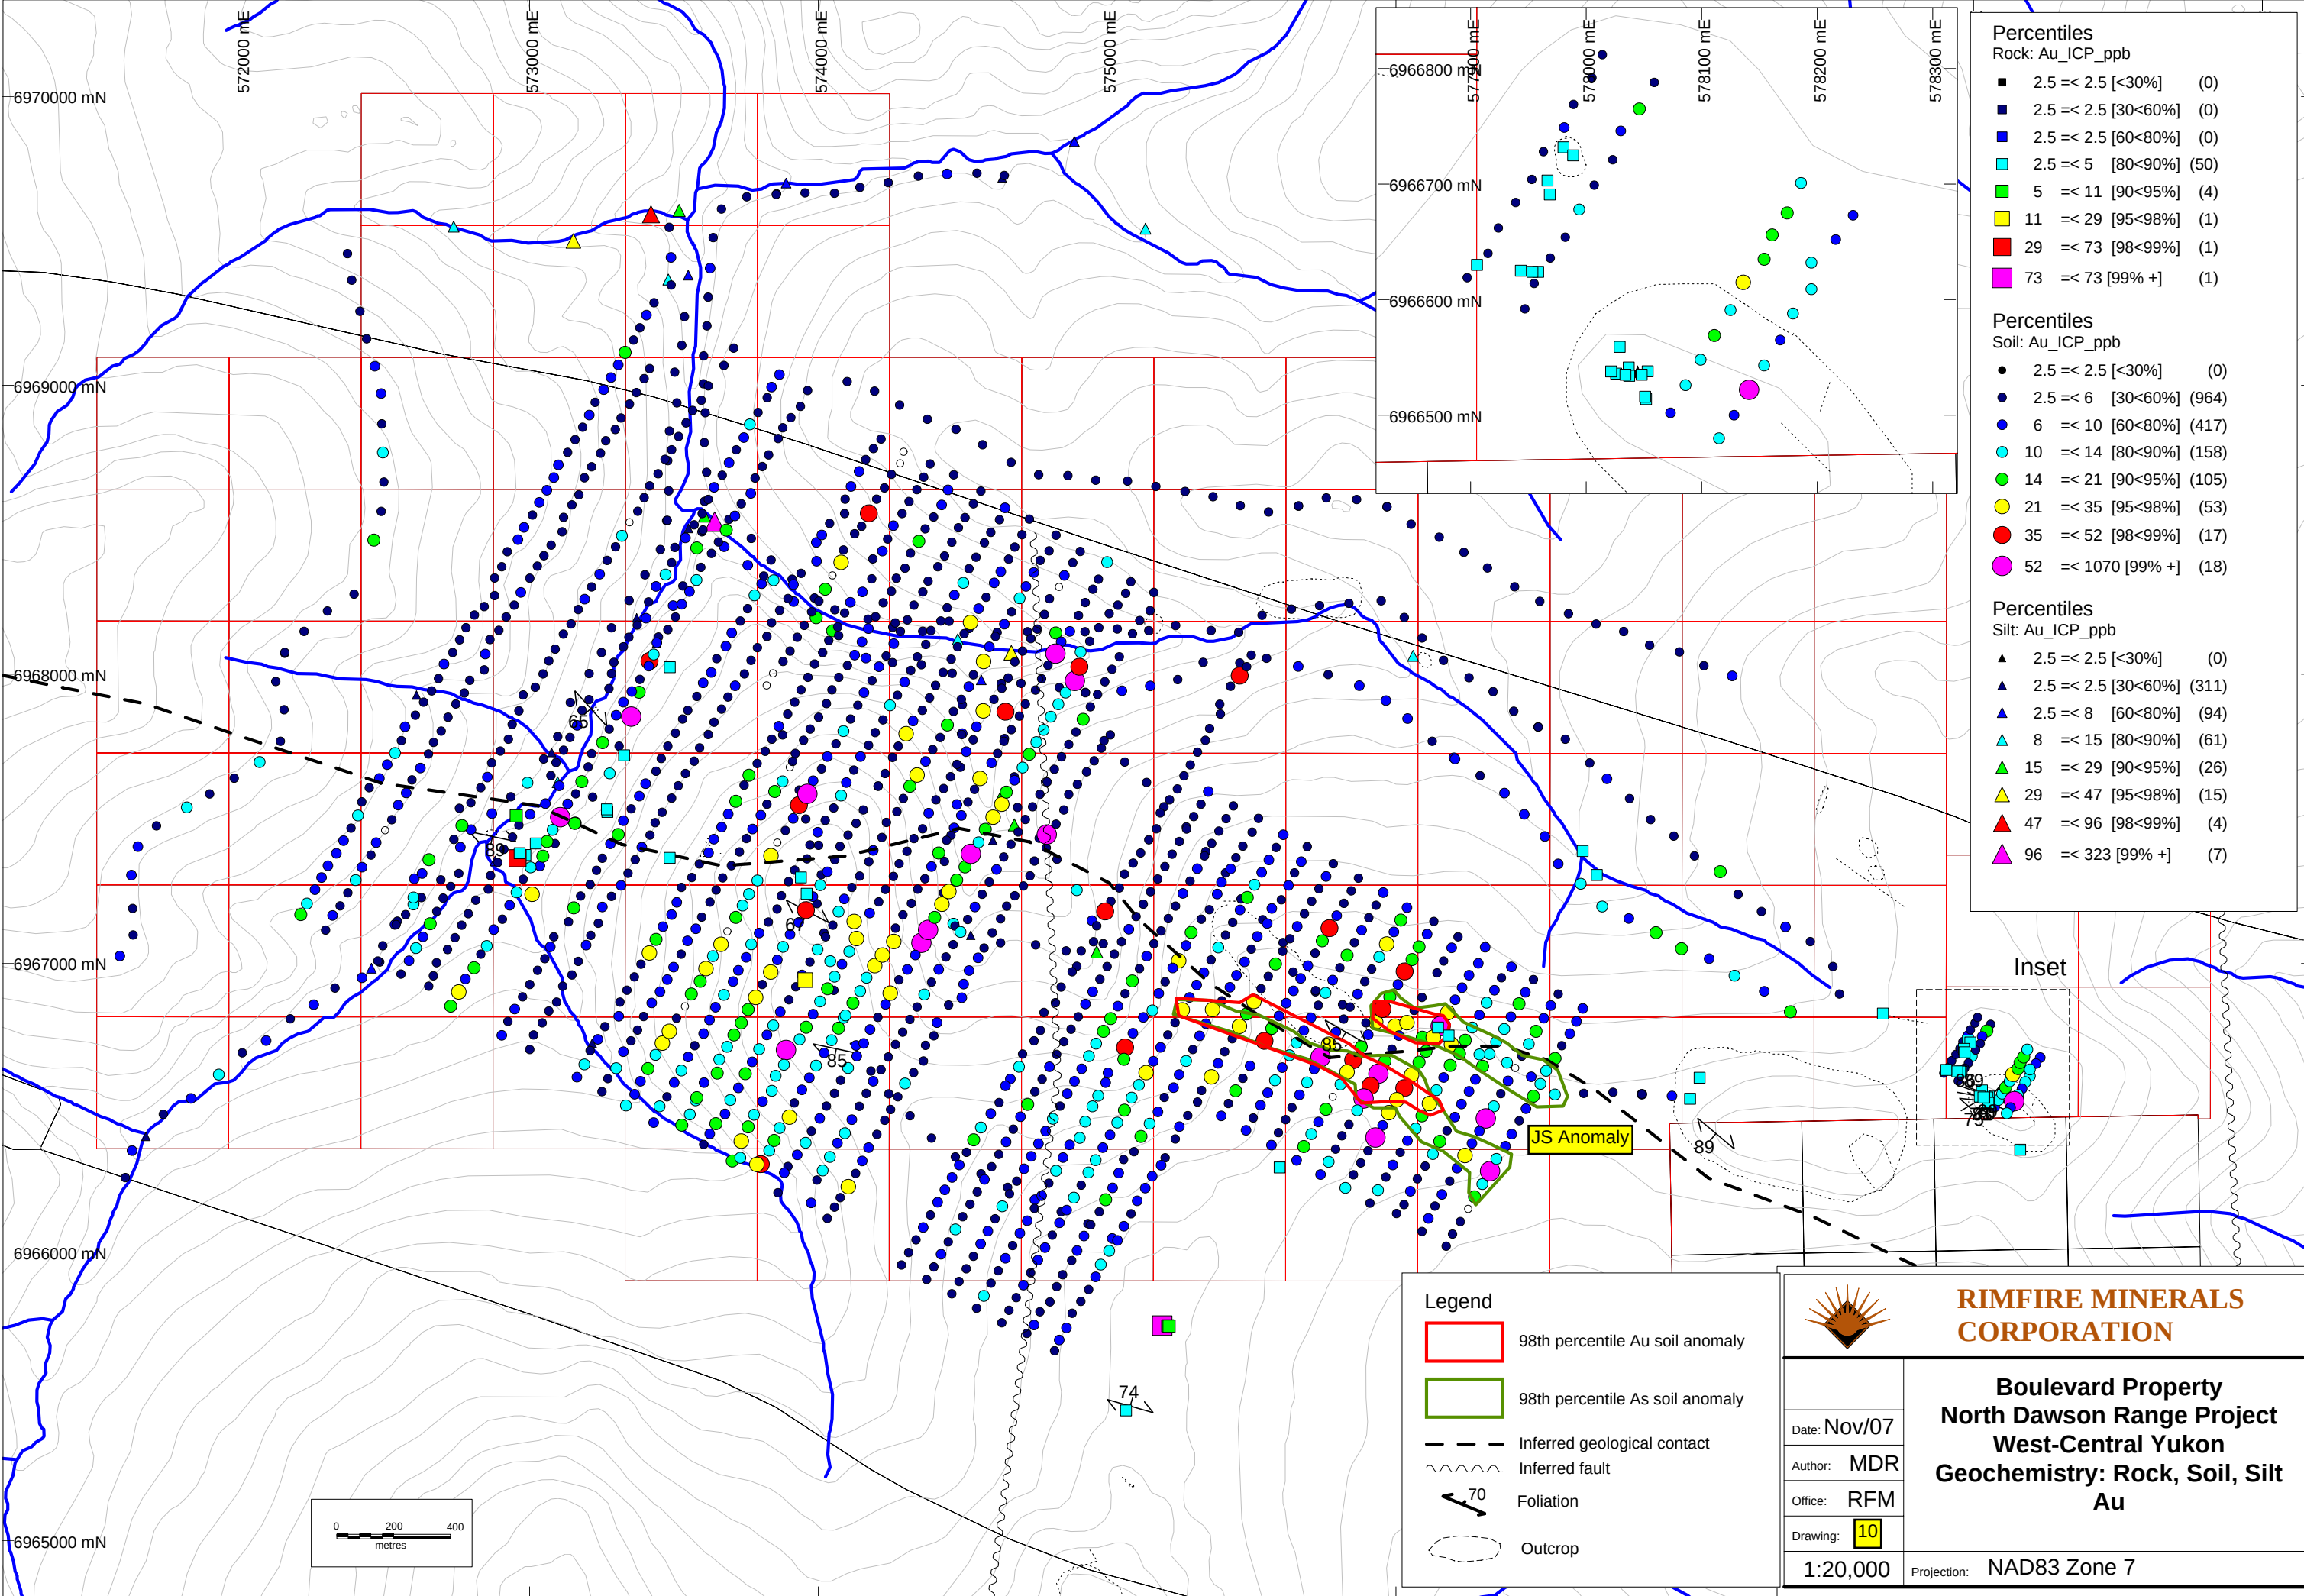


INSERT FIGURE 11: As

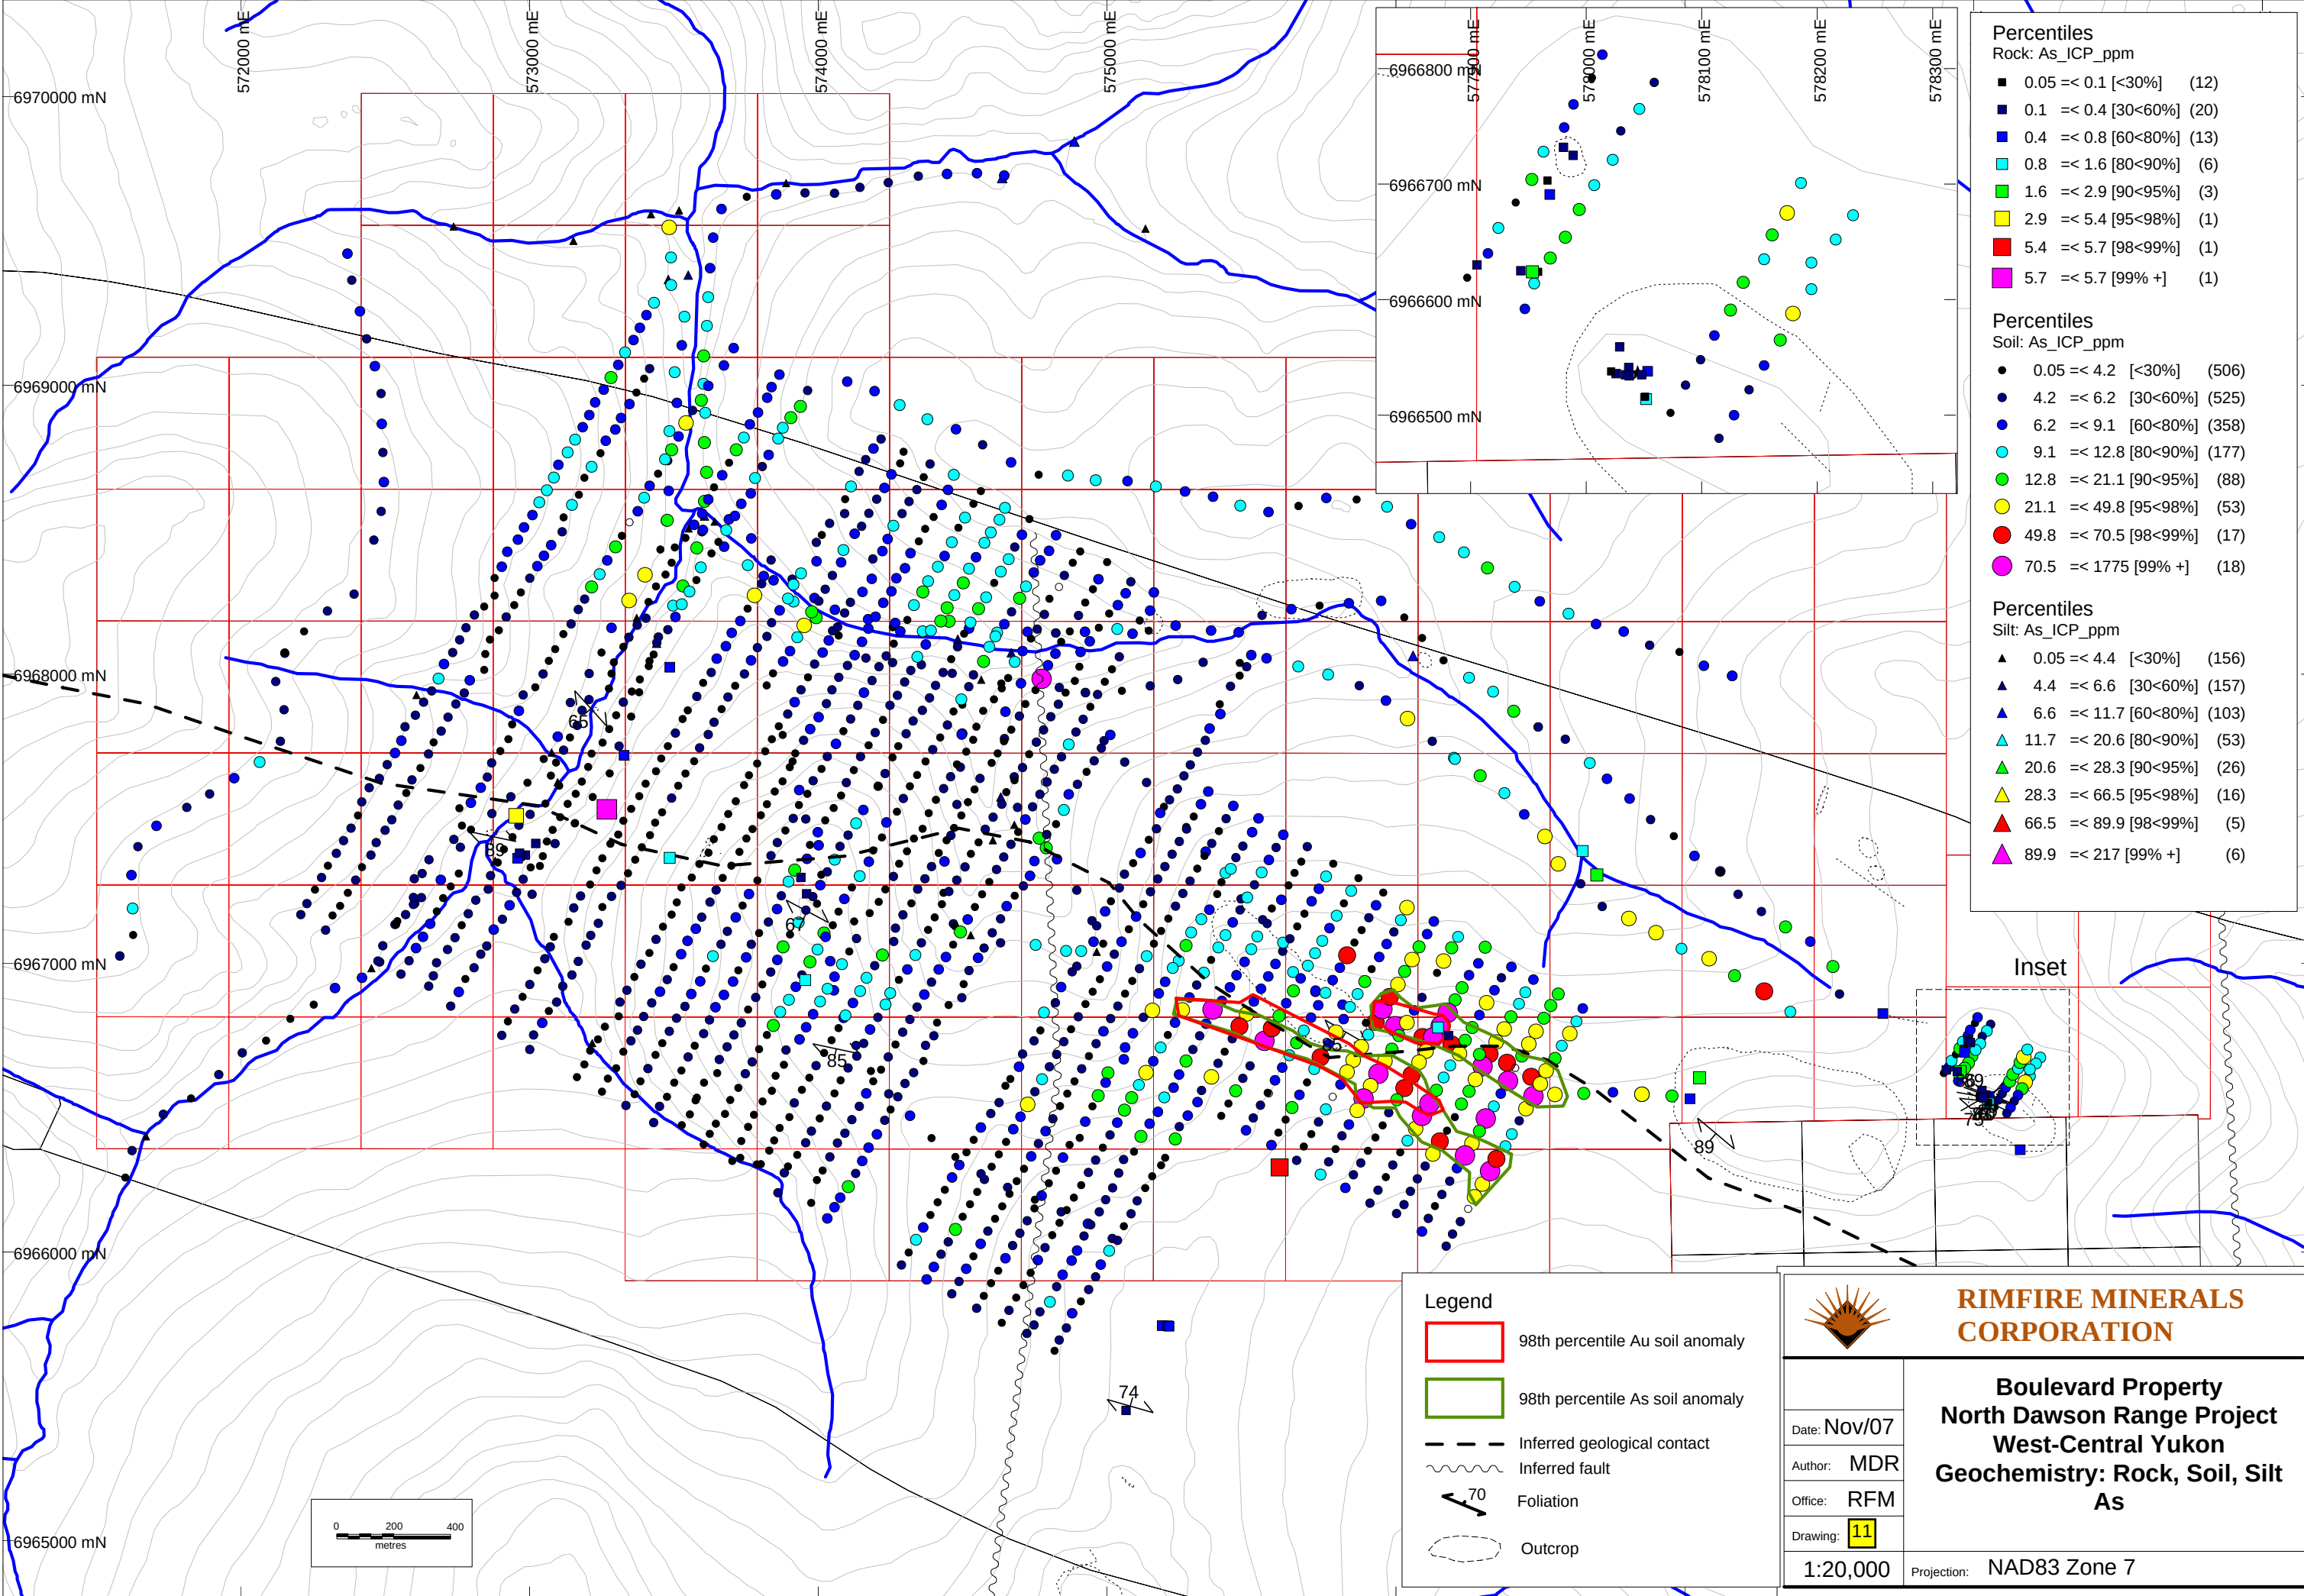

INSERT FIGURE 12: Cu

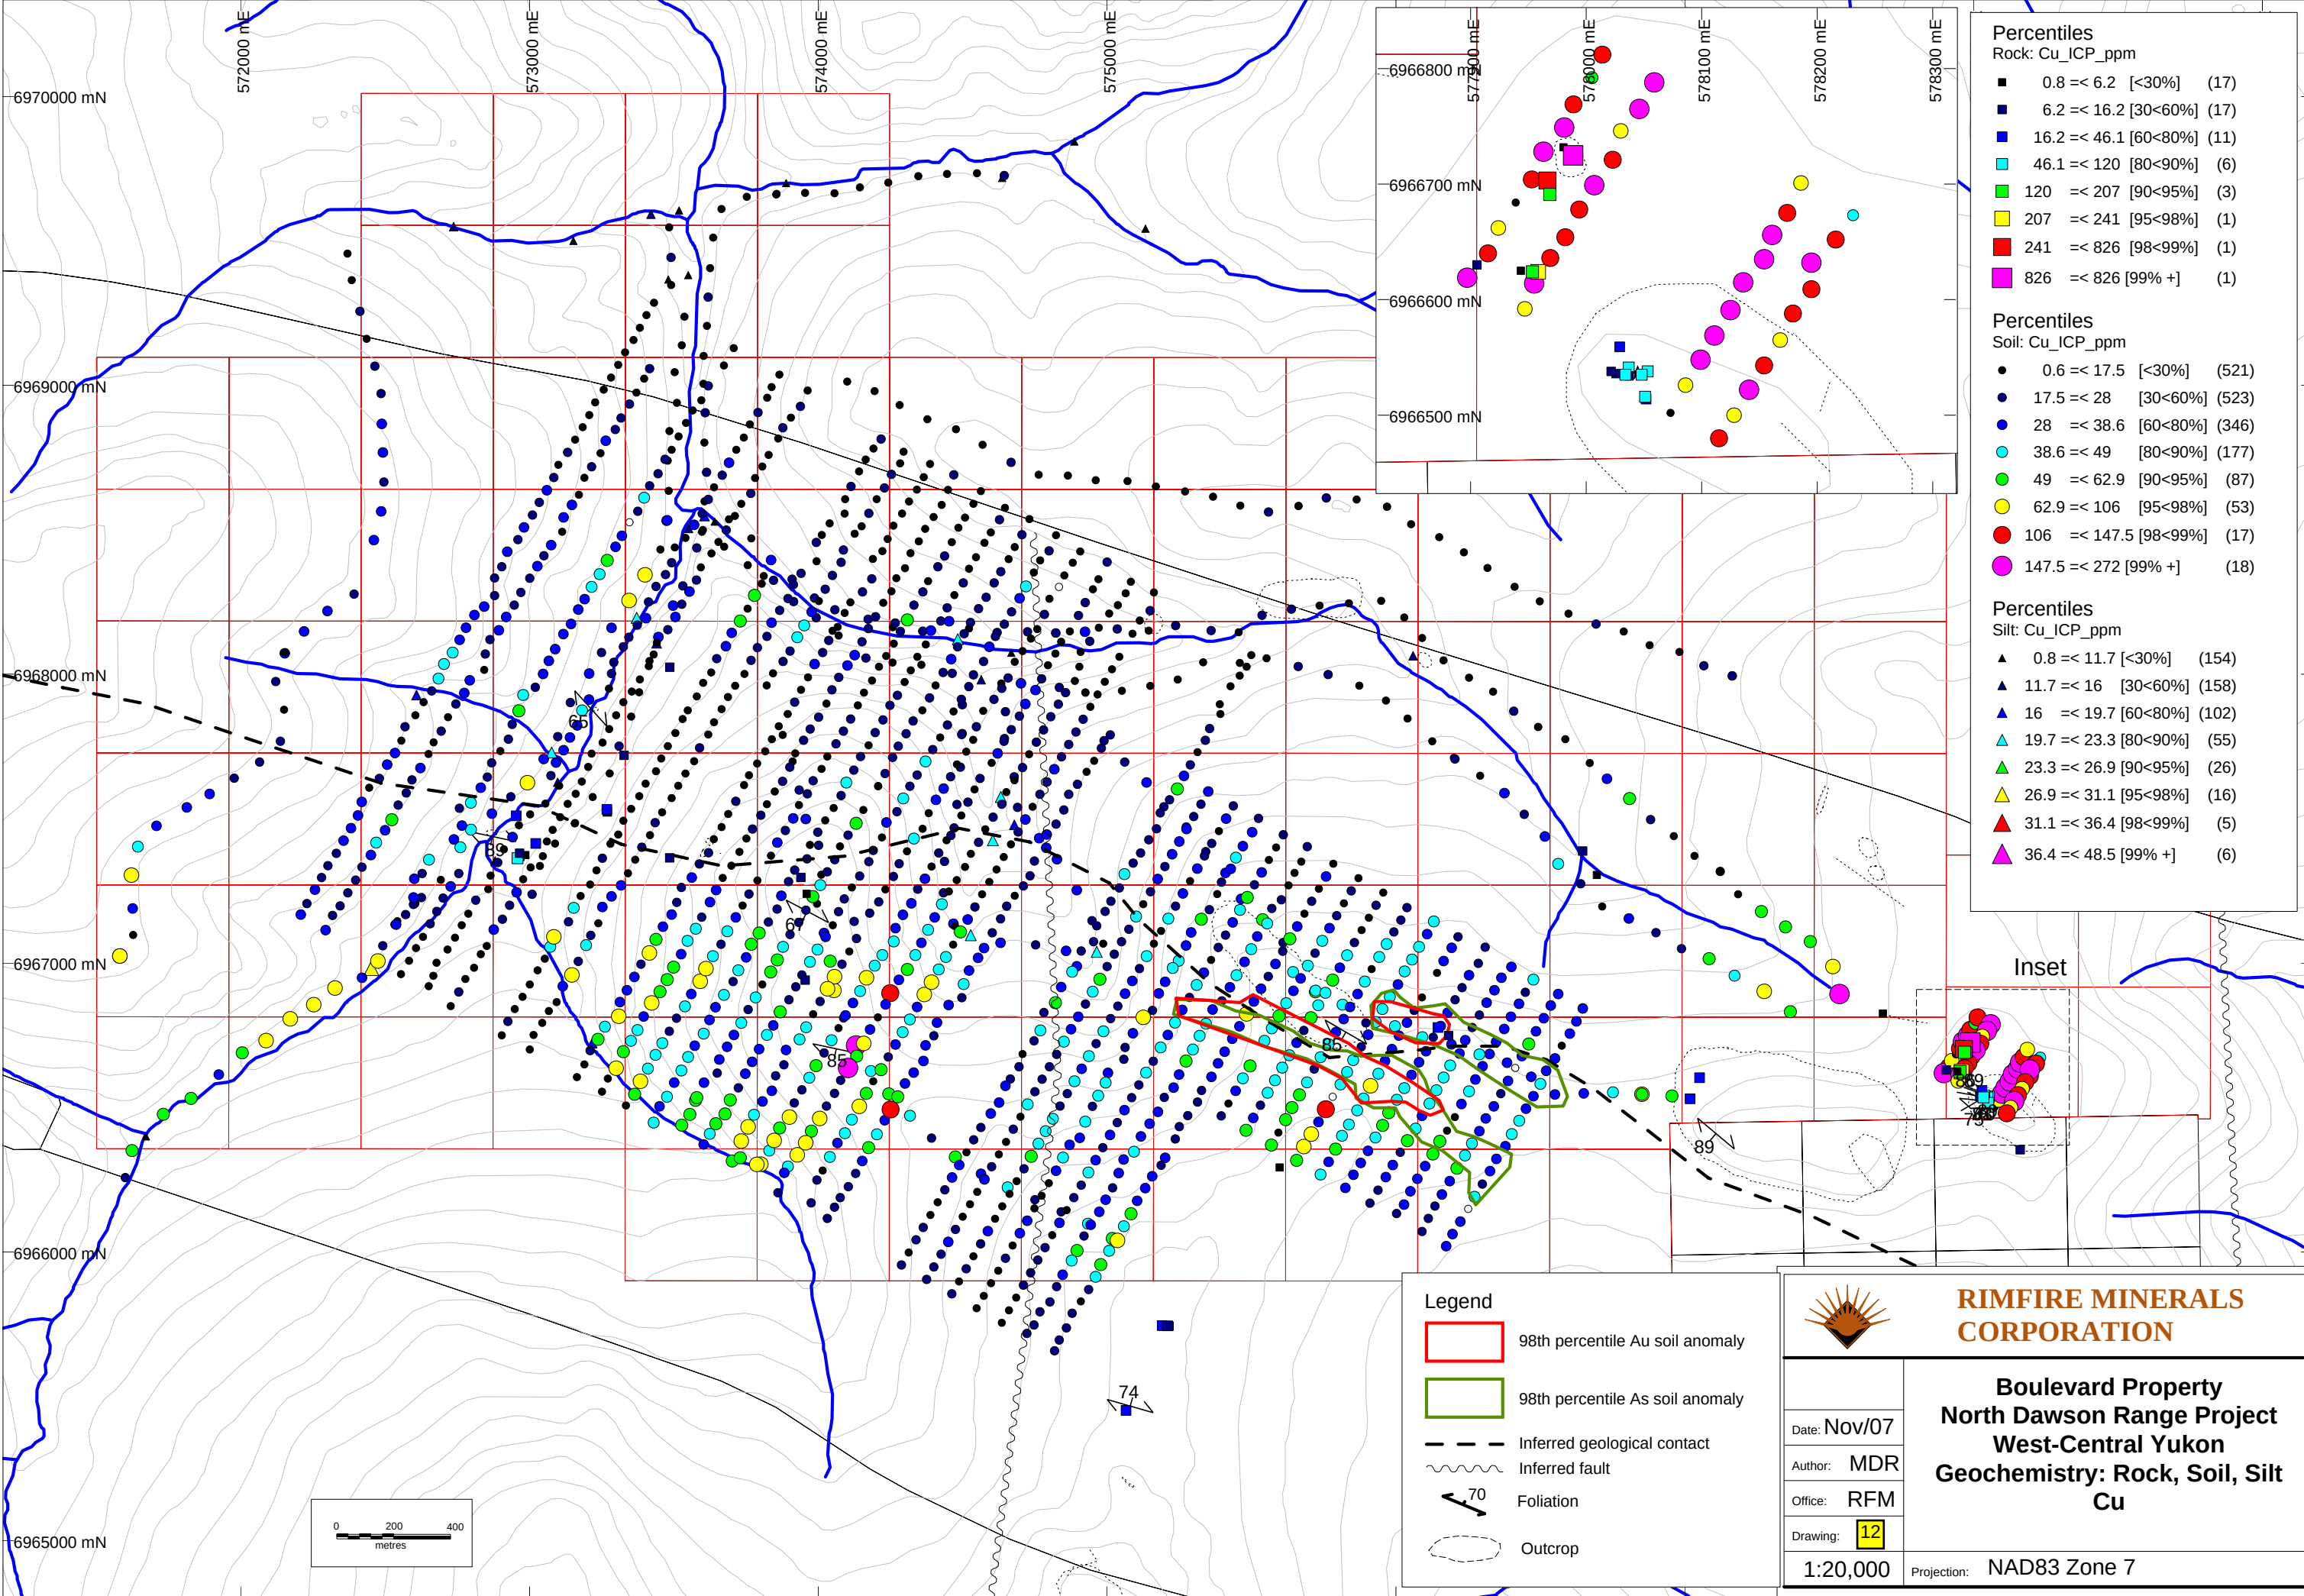

INSERT FIGURE 13: Mo

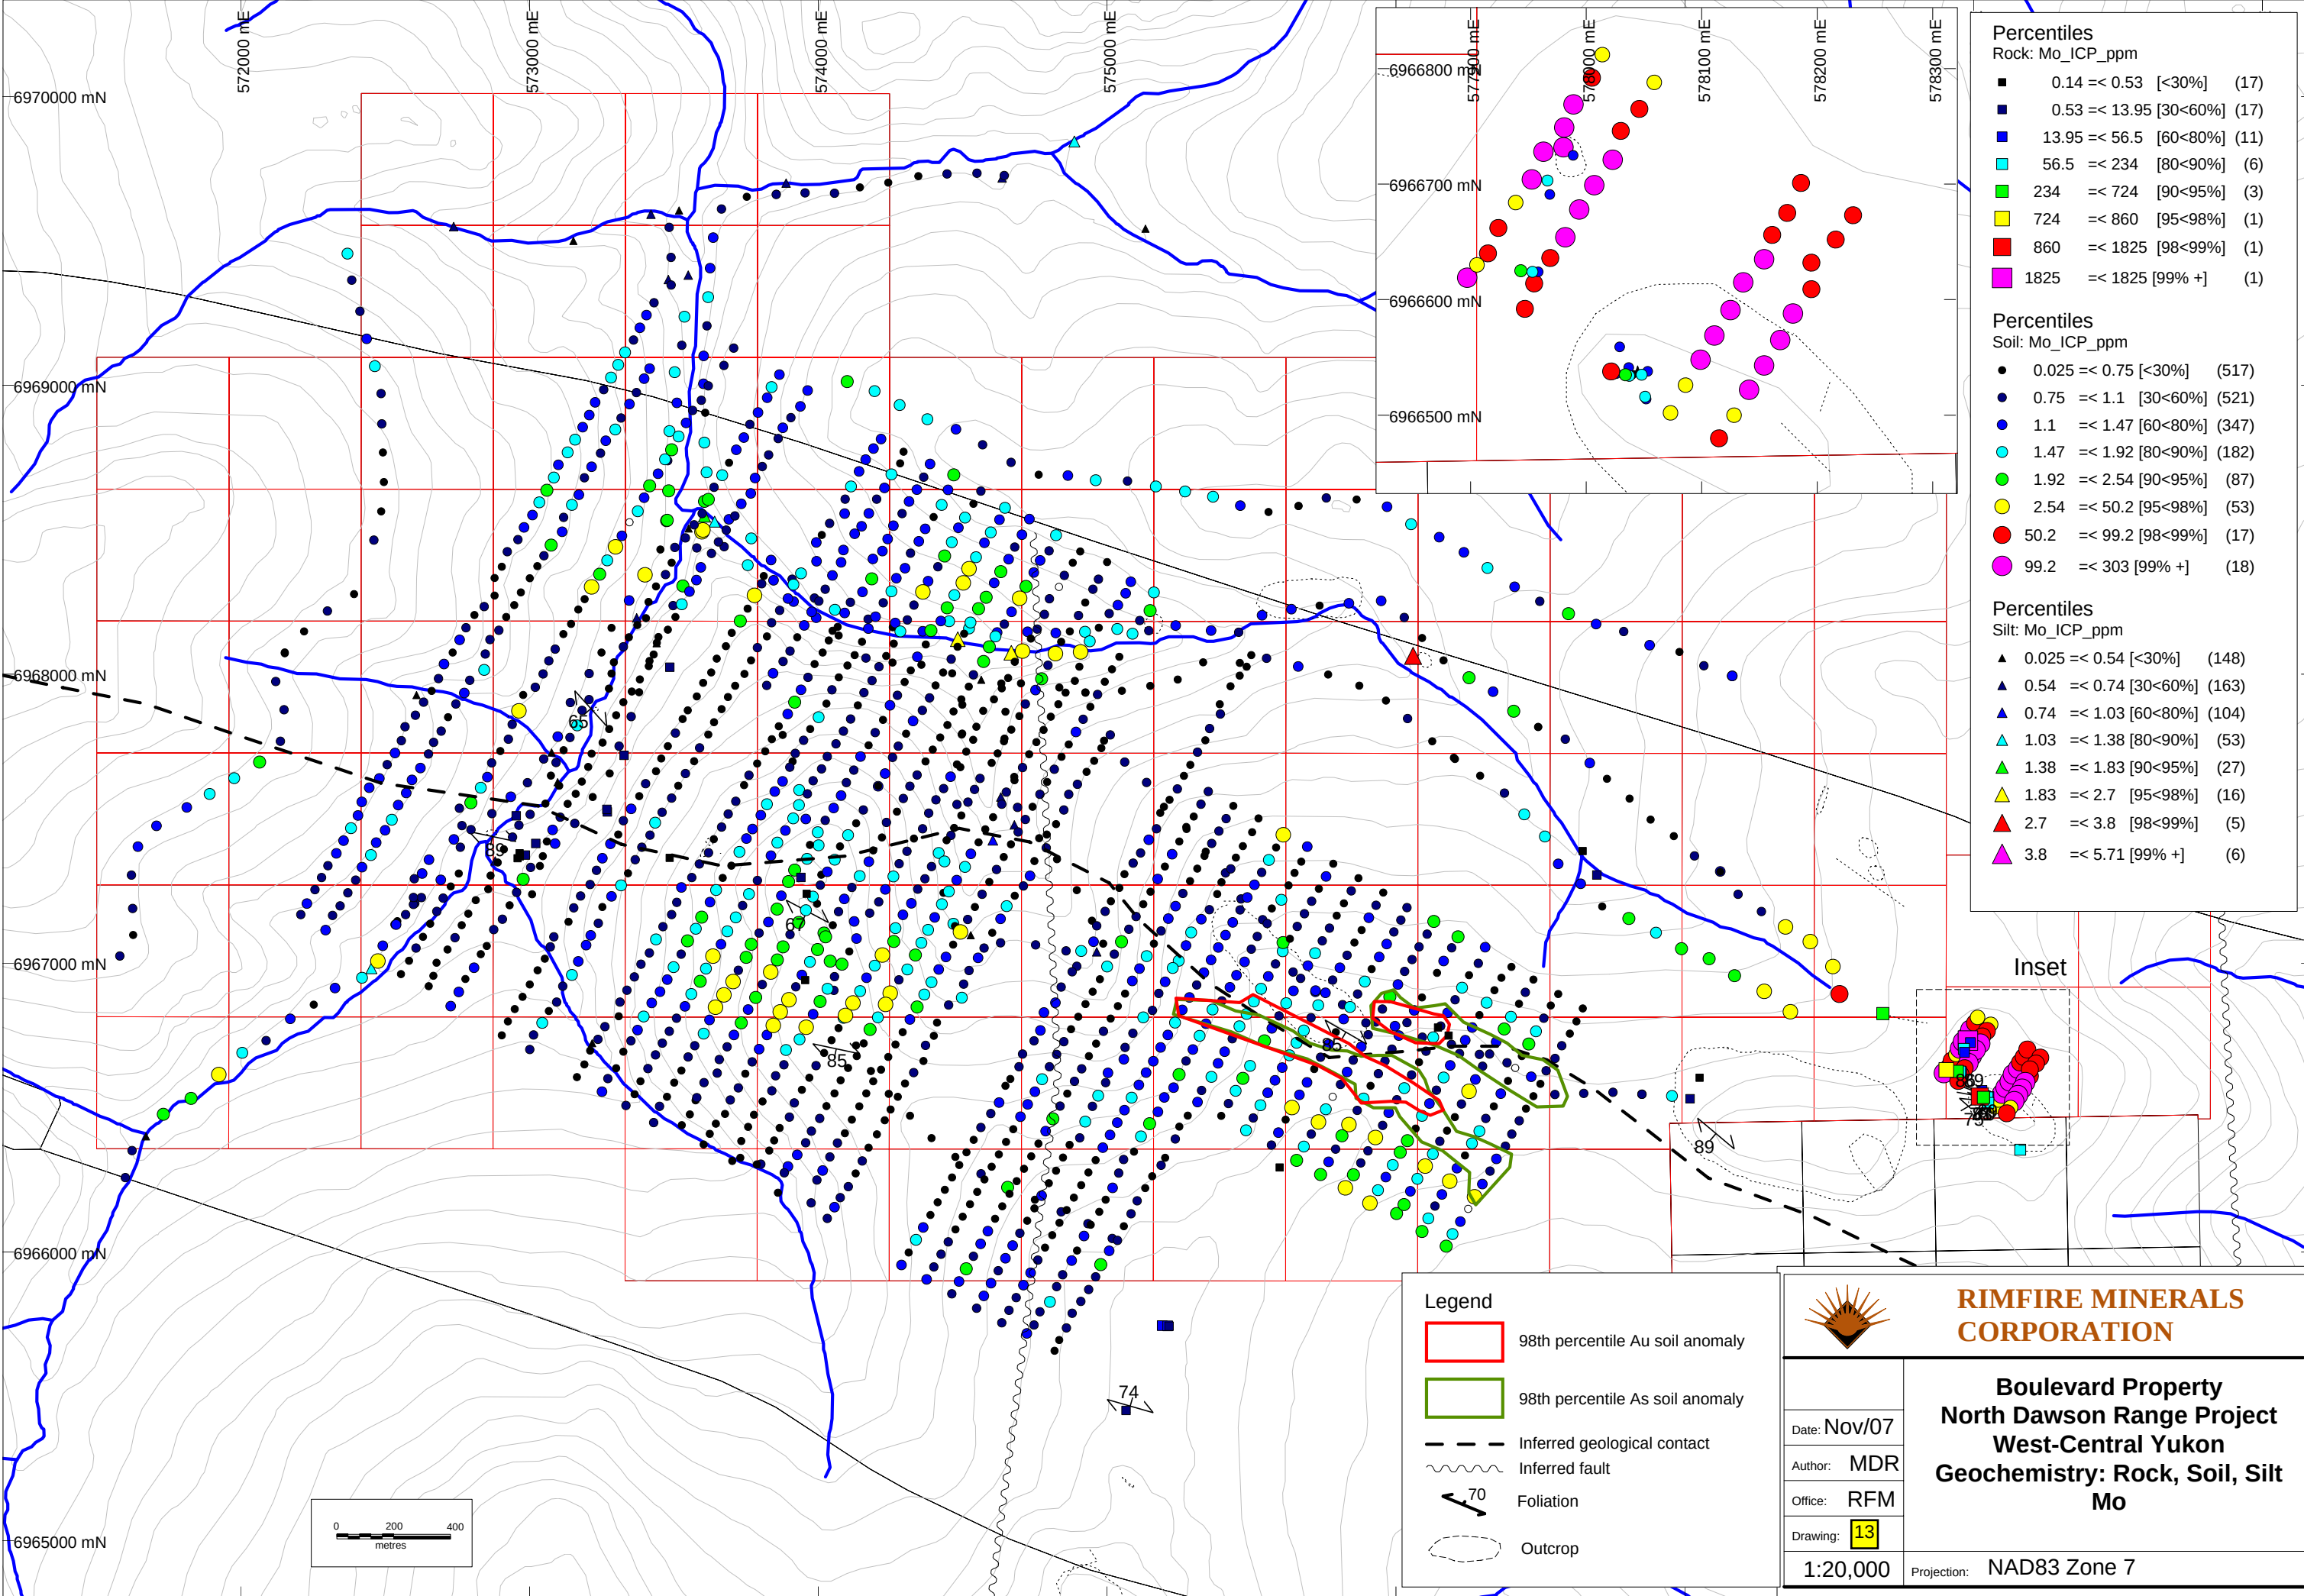

7.2 Rock Geochemistry

Rock samples were shipped to ALS Chemex for analysis. Au values were determined by fire-assay followed by AA finish (Au-AA23) and trace elements were determined by aqua regia followed by ICPMS (ME-MS41)

Results

Two samples of quartz float with trace pyrite that returned anomalous Bi (12 and 23 ppm Bi) also returned trace Au (8-29 ppb), anomalous Ag (2-5 ppm Ag), elevated Sb (130-300 ppb), and elevated Te (200-380 ppb). These samples were collected 200 m south of the interpreted ~E-W contact between micaceous schists and mafic schists, and may identify the proximity to a vein system.

Grab and chip samples from the Toni Tiger skarn occurrence (interbedded package of schists and calcareous metasediments with trace to 15% quartz veining) at the top of Creek 323 (Toni Tiger Minfile) returned elevated Cu (to 826 ppm), Mo (to 1825 ppm), W (to 340 ppm) and Sn (to 60 ppm). These rocks did not return significant Au-As-Te-Sb and Bi is less than 1 ppm. These rocks also contain anomalously high rare earth elements, including high La (to 44 ppm), high Li (to 20 ppm), high Nb (to 4.83 ppm), Rb (to 97.5 ppm), Th (to 17 ppm), Y (to 12.5 ppm) and Zr (to 9.4 ppm). The soil samples in the vicinity of the Toni Tiger skarn occurrence appear to be representative of these geochemical trends and absolute values, and therefore there is nothing to indicate that higher grades of mineralization occur in areas tested by the soil lines. In addition, the Cu-Mo-W contents are similar to that reported from a select specimen from the Toni Tiger Minfile report.

Table 7.2.1. Summary results of chip sampling in the area of Mo-W skarn.

ID	Width	Host	Sulphides	Au ppb	Ag ppm	As ppm	Bi ppm	Cu ppm	Mo ppm	Pb ppm	Sb ppm	Sn ppm	Te ppm	W ppm	Zn ppm
C2749 24	1 m	Skarn w/ 5% vn	trace cpy-mo-po-py	bd	0.03	1.0	0.08	39.1	49.6	0.9	0.09	11.1	0.03	340	54
C2749 26	1 m	Bt Schist w/ 2% vn	trace cpy-mo-po-py	bd	0.05	bd	0.06	50.5	56.5	1.7	bd	1.8	0.03	2.56	48
C2749 27	1.5 m	Skarn w/ 3% vn	trace cpy-mo-po-py	bd	0.03	0.4	0.33	14.6	60.1	0.9	0.05	60.8	0.01	177	42
C2749 28	1 m	Skarn w/ 10% vn	trace cpy-mo-po-py	-5	0.02	0.3	0.19	15.1	27.7	0.6	bd	12.5	0.02	270	49
C2749 29	1.5 m	Skarn? w/ 15% vn	trace to 2% cpy-mo-po-py	bd	0.07	0.3	0.12	108.5	234	1.9	bd	3.3	0.03	4.81	59
C2749 30	1.5 m	Skarn w/ 15% vn	trace cpy-mo-po-py	bd	0.07	0.2	0.25	86.0	91.3	0.6	bd	25.3	0.05	270	40
C2749 31	1.5 m	Skarn w/ 15% vn	trace cpy-mo-po-py	bd	0.08	0.5	0.16	91.2	24.0	0.9	bd	2.9	0.02	73.5	29

9.0 DISCUSSION AND RECOMMENDATIONS

The Au-As soil anomaly defined at the Boulevard is coincident with the interpreted contact between micaceous schists and mafic schists. This contact may represent a structural high strain zone, as evidenced by the abundance of tightly folded and sheared quartz veins from both rock types near the interpreted contact. In addition, the Au-As soil geochemical anomaly is distinct from the Mo-W-Cu skarn mineralization at the Toni Tiger occurrence and is perhaps indicative of an “orogenic” style vein system.

The Au-As soil anomaly represents a compelling exploration target that could be tested by mechanical trenching. Further exploration should extend the soil grid to the SE. The Au-As soil anomaly dissipates towards the NW, however, this area is dominated by north-facing slopes with permafrost hindering sampling.

Appendix A: Bibliography

BIBLIOGRAPHY

Colpron, M., 2006: Tectonic assembly map of the Yukon – Tanana and related terranes in Yukon and British Columbia (1: 1,000,000), Yukon Geological Survey, Open File 2006-1.

Gordey, S.P. and Makepeace, A.J. (comps.), 1999. Yukon Digital Geology. Geological Survey of Canada Open File D3826, and Exploration and Geological Services Division, Yukon Region, Indian and Northern Affairs, Canada, Open File 1999-1 (D), 2 CD-ROMs.

Hart, J.R., Goldfarb, R.J., Lewis, L.L., Mair, J.L., 2004. The northern Cordilleran mid-Cretaceous plutonic province: Ilmenite/magnetite-sericite granitoids and intrusion-related mineralization: Resource Geology, vol. 54, no. 3, 253-280.

Ogilvy, A.C., 1970. Dawson Range Joint Venture, Coffee Creek Area, Yukon: Assessment Report #060249.

Appendix B: Statement of Expenditures

**STATEMENT OF EXPENDITURES
JAKE PROPERTY
FEBRUARY 24 - OCTOBER 13, 2006**

PROFESSIONAL FEES AND WAGES:

Henry Awmack, P.Eng.			
3.50 days @	\$575/day	\$	2,012.50
Mark Baknes, P. Geo			
7.88 days @	\$575/day		4,528.13
David Caulfield, P. Geo			
4.00 days @	\$575/day		2,300.00
Robert Duncan, Geologist			
14.63 days @	\$475/day		6,946.88
Mike Roberts, Geologist			
40.38 days @	\$475/day		19,178.13
Adam Simmons, Geologist			
11.10 days @	\$475/day		5,272.50
Rory Kutluoglu, Geologist			
23.30 days @	\$475/day		11,067.50
Kevin Grant, Sampler			
11.00 days @	\$250/day		2,750.00
Elizabeth Sullivan, Sampler			
15.00 days @	\$250/day		3,750.00
Kyle Todoruk, Sampler			
10.00 days @	\$250/day		2,500.00
Elmer DeBock, Prospector			
35.75 days @	\$400/day		14,300.00
Wes Hodson, Drafting/Data Compilation			
74.00 hours @	\$60/hour		4,440.00
Scott Parker, Drafting/Logistics			
12.50 hours @	\$60/hour		750.00
Clerical			
24.25 hours @	\$25/hour		606.25
		\$	80,401.88

EQUIPMENT RENTALS

Truck Rental Insurance			
43 days @	\$10/day	\$	430.00
Field Computers			
14 days @	\$40/day		560.00
			990.00

EXPENSES:

Chemical Analyses	\$	20,581.69
Materials and Supplies		2,968.18
Printing and Reproductions		3,682.93
Accommodation		9,049.63
Truck Rental		2,730.52
Automotive Fuel		3,821.03

**STATEMENT OF EXPENDITURES
JAKE PROPERTY
FEBRUARY 24 - OCTOBER 13, 2006**

Radio Rental and Long Distance	703.24	
Freight	276.33	
Geophysical Consulting	8,925.00	
Equipment Rental	2,211.50	
Report Printing (estimated)	1,000.00	<u>55,950.05</u>
SUB-TOTAL:		\$ 137,341.93
PROJECT SUPERVISION CHARGES:		
12% on portion <\$100,000: (\$100,000.00)	8,317.43	
10% on portion <\$500,000: (\$400,000.00)	-	
-8% on balance: (\$362,658.08)	<u>-</u>	<u>8,317.43</u>
SUB-TOTAL:		\$ 145,659.36
GST: 6% on sub-total		<u>8,739.56</u>
TOTAL:		<u>\$ 154,398.92</u>

Appendix C: Certificates of Analysis

**ALS Chemex**

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

Page: 1
Finalized Date: 8-AUG-2007
Account: EIANGX

CERTIFICATE VA07074506

Project: North Dawson

P.O. No.: NGX07-02

This report is for 213 Soil samples submitted to our lab in Vancouver, BC, Canada on
18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003801		0.38	<0.005	0.10	1.94	4.8	<0.2	<10	160	0.19	0.17	0.50	0.26	12.85	14.8	35
G003802		0.42	0.014	0.36	1.51	22.2	<0.2	<10	180	0.40	0.21	0.89	0.71	27.40	12.0	32
G003803		0.36	0.006	0.10	1.10	8.9	<0.2	<10	60	0.16	0.20	0.24	0.22	11.05	6.1	31
G003804		0.40	<0.005	0.14	2.34	6.4	<0.2	<10	130	0.40	0.14	0.33	0.34	16.25	15.6	38
G003805		0.46	0.007	0.07	2.49	1.0	<0.2	<10	120	0.18	0.09	0.38	0.12	8.76	12.1	46
G003806		0.38	<0.005	0.16	0.28	1.3	<0.2	<10	70	0.11	0.05	0.22	0.08	3.75	11.8	6
G003807		0.40	<0.005	0.06	0.22	0.6	<0.2	10	40	0.08	0.09	0.18	0.19	3.98	3.9	5
G003808		0.44	0.009	0.08	2.67	5.3	<0.2	<10	130	0.29	0.11	0.33	0.15	13.10	17.0	51
G003809		0.40	0.005	0.09	0.53	0.6	<0.2	<10	80	0.15	0.06	0.29	0.05	4.97	2.0	12
G003810		0.42	<0.005	0.03	0.20	0.2	<0.2	<10	20	0.07	0.04	0.16	0.04	3.70	1.2	4
G003810D		0.32	<0.005	0.05	0.25	0.3	<0.2	<10	30	0.07	0.05	0.24	0.09	3.79	1.2	5
G003811		0.38	<0.005	0.03	0.19	<0.1	<0.2	<10	20	0.05	0.03	0.24	0.07	5.68	0.8	4
G003812		0.40	0.012	0.14	2.40	19.4	<0.2	<10	330	0.45	0.24	0.57	0.21	24.20	12.7	51
G003813		0.64	0.005	0.09	2.67	5.7	<0.2	<10	240	0.66	0.70	0.40	0.27	52.20	14.6	116
G003814		0.52	0.006	0.07	2.76	5.2	<0.2	<10	260	0.50	0.30	0.49	0.13	26.60	23.7	127
G003815		0.46	<0.005	0.08	2.85	7.7	<0.2	<10	210	1.10	0.32	0.35	0.12	38.30	14.5	110
G003816		0.42	0.005	0.09	2.60	8.8	<0.2	<10	200	0.64	0.25	0.47	0.17	34.20	14.8	98
G003817		0.42	<0.005	0.12	2.53	4.9	<0.2	<10	240	0.54	0.24	0.51	0.18	34.90	19.5	100
G003818		0.40	0.005	0.04	2.37	3.4	<0.2	<10	170	0.36	0.24	0.49	0.11	22.60	11.7	93
G003819		0.42	<0.005	0.12	2.54	9.7	<0.2	<10	180	0.62	0.38	0.43	0.20	40.50	20.3	85
G003820		Not Recvd														
G003821		0.38	0.006	0.11	2.19	8.6	<0.2	<10	210	0.34	0.33	0.66	0.15	24.70	13.0	71
G003822		0.38	<0.005	0.08	0.30	0.2	<0.2	<10	30	0.10	0.03	0.26	0.04	6.52	1.2	5
G003823		0.44	0.007	0.06	1.87	2.3	<0.2	<10	170	0.21	0.11	0.51	0.16	12.75	9.9	38
G003824		0.52	0.009	0.07	1.99	2.3	<0.2	<10	150	0.26	0.11	0.43	0.17	15.65	10.9	32
G003825		0.44	0.007	0.11	2.40	7.8	<0.2	<10	160	0.28	0.11	0.43	0.18	10.65	12.0	60
G003826		0.46	0.008	0.10	2.81	7.3	<0.2	<10	180	0.27	0.11	0.48	0.19	10.50	16.1	97
G003827		0.34	0.005	0.08	0.44	1.3	<0.2	<10	80	0.10	0.06	0.25	0.07	3.58	4.3	12
G003828		0.34	0.020	0.19	2.25	2.1	<0.2	<10	150	0.16	0.08	0.54	0.13	6.85	14.2	38
G003829		0.44	0.010	0.15	2.54	7.8	<0.2	<10	220	0.31	0.10	0.48	0.22	12.30	62.6	45
G003851		0.42	0.006	0.12	1.96	4.5	<0.2	<10	230	0.23	0.10	0.57	0.23	11.50	14.2	48
G003852		0.42	0.020	0.12	1.78	5.5	<0.2	<10	120	0.22	0.09	0.48	0.31	15.75	13.2	37
G003853		0.48	0.014	0.46	1.99	6.8	<0.2	<10	220	0.30	0.16	0.97	0.59	24.90	15.8	44
G003854		0.50	0.012	0.20	1.88	5.0	<0.2	<10	130	0.26	0.13	0.49	0.40	19.00	13.0	44
G003855		0.44	0.012	0.38	2.00	4.0	<0.2	<10	250	0.34	0.15	0.67	0.47	26.60	9.3	44
G003856		0.42	0.007	0.26	1.80	4.6	<0.2	<10	260	0.27	0.13	0.46	0.49	17.55	15.6	40
G003857		0.46	0.006	0.61	1.69	4.0	<0.2	<10	290	0.33	0.13	0.58	0.96	22.30	17.5	37
G003858		0.50	0.009	0.11	1.95	3.7	<0.2	<10	170	0.20	0.10	0.42	0.37	15.40	14.9	40
G003859		0.56	<0.005	0.23	1.79	4.1	<0.2	<10	210	0.14	0.13	0.45	0.22	11.20	13.0	37
G003860		Not Recvd														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003801		0.57	18.2	2.89	5.28	0.06	0.05	0.02	0.018	0.04	5.8	10.8	1.25	1135	1.22
G003802		0.85	40.1	2.81	5.77	0.10	0.05	0.06	0.031	0.04	19.0	9.3	0.62	851	1.41
G003803		0.47	16.4	2.87	11.35	0.06	0.04	0.07	0.022	0.05	6.1	4.9	0.47	218	1.44
G003804		0.92	27.1	3.32	8.10	0.09	0.05	0.05	0.024	0.09	8.6	13.4	1.23	488	0.68
G003805		0.73	16.5	2.69	8.87	0.08	0.05	0.04	0.017	0.07	4.7	13.9	1.68	317	0.26
G003806		0.15	8.3	0.97	1.83	<0.05	<0.02	0.03	0.006	0.01	1.8	0.8	0.09	1285	0.69
G003807		0.07	19.7	0.19	1.26	<0.05	0.02	0.06	<0.005	0.01	1.4	0.4	0.04	25	0.56
G003808		0.84	32.9	3.38	8.80	0.09	0.06	0.03	0.025	0.08	6.4	15.1	1.85	392	0.45
G003809		0.25	15.7	0.58	2.42	<0.05	0.02	0.05	0.007	0.01	3.0	2.1	0.19	62	0.23
G003810		0.15	3.5	0.33	1.74	<0.05	<0.02	0.02	<0.005	0.01	2.0	0.8	0.10	34	0.13
G003810D		0.15	7.1	0.37	1.68	<0.05	0.02	0.03	<0.005	0.01	2.3	0.8	0.09	51	0.18
G003811		0.11	5.0	0.22	1.46	<0.05	<0.02	0.03	<0.005	0.01	2.9	0.6	0.08	24	0.12
G003812		1.66	27.3	3.06	8.54	0.11	0.08	0.04	0.032	0.14	14.5	16.0	0.83	402	0.66
G003813		1.33	33.3	3.15	9.30	0.15	0.15	0.03	0.031	0.49	28.5	14.3	1.62	396	1.04
G003814		1.85	18.3	3.28	10.05	0.12	0.07	0.04	0.022	0.47	15.1	14.9	1.80	859	0.99
G003815		1.77	26.7	3.53	10.30	0.11	0.11	0.07	0.024	0.30	20.3	31.4	1.54	293	0.99
G003816		1.98	26.7	3.50	9.40	0.14	0.10	0.05	0.022	0.52	21.8	14.2	1.57	380	1.19
G003817		1.93	19.5	3.42	9.84	0.13	0.06	0.03	0.017	0.73	20.7	11.0	1.71	879	1.36
G003818		1.93	12.4	2.55	9.26	0.12	0.06	0.04	0.020	0.37	13.5	13.0	1.47	377	0.67
G003819		1.97	23.3	3.83	8.70	0.15	0.10	0.04	0.025	0.42	24.4	15.0	1.44	640	1.63
G003820		1.38	21.2	2.94	7.81	0.11	0.07	0.03	0.024	0.11	16.8	10.9	1.30	451	1.20
G003821		0.16	7.0	0.31	1.78	<0.05	<0.02	0.03	<0.005	0.01	3.3	1.4	0.11	45	0.12
G003822		0.75	15.5	2.29	6.38	0.06	0.06	0.04	0.023	0.04	6.9	11.6	0.75	243	0.39
G003823		0.79	22.8	2.27	6.70	0.07	0.05	0.03	0.024	0.05	7.9	13.5	0.93	475	0.30
G003824		0.87	28.0	2.96	8.50	0.07	0.04	0.04	0.027	0.04	5.7	13.0	1.48	282	0.53
G003825		0.90	33.7	3.68	9.99	0.09	0.05	0.04	0.028	0.07	5.4	15.5	1.96	380	0.61
G003826		0.18	11.4	0.84	2.09	<0.05	<0.02	0.04	0.007	0.01	1.9	1.9	0.18	388	0.55
G003827		0.50	19.3	2.96	8.60	0.07	0.03	0.03	0.014	0.04	3.7	10.0	1.66	381	0.60
G003828		0.86	24.7	4.52	9.66	0.12	0.04	0.03	0.019	0.18	5.1	12.7	1.71	2590	1.04
G003829		0.84	26.1	2.58	5.90	0.10	0.04	0.02	0.013	0.25	6.7	8.7	1.37	380	0.33
G003851		0.62	23.6	2.76	5.73	0.10	0.05	0.02	0.019	0.08	9.1	10.0	1.23	381	0.63
G003852		0.84	43.5	3.04	6.50	0.13	0.07	0.05	0.025	0.06	19.5	11.9	1.19	807	1.05
G003853		0.72	27.4	2.75	6.14	0.10	0.05	0.09	0.023	0.07	14.8	11.1	1.23	376	0.63
G003854		0.77	40.4	2.42	6.54	0.10	0.06	0.04	0.022	0.05	20.5	11.0	1.05	293	0.65
G003855		0.63	30.5	2.67	5.87	0.08	0.04	0.05	0.020	0.04	10.3	9.3	0.97	1195	0.98
G003856		0.65	42.3	2.55	5.76	0.09	0.04	0.05	0.018	0.04	13.2	8.1	0.93	1715	1.06
G003857		0.67	20.9	3.33	6.42	0.09	0.05	0.11	0.018	0.05	8.2	10.6	1.15	807	0.69
G003858		0.58	27.0	2.71	5.91	0.05	0.03	0.03	0.019	0.03	5.7	9.3	1.08	557	1.02
G003859															
G003860															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003801		0.70	21.0	730	9.9	5.3	0.001	0.03	0.37	4.2	0.4	0.3	21.0	<0.01	0.03
G003802		0.68	28.3	940	11.5	9.3	0.001	0.08	0.61	4.4	1.6	0.4	35.8	0.02	0.09
G003803		1.70	13.8	410	9.4	4.5	<0.001	0.04	0.44	3.0	0.6	0.7	17.8	<0.01	0.06
G003804		1.07	22.6	710	7.9	12.2	<0.001	0.04	0.23	5.5	0.7	0.5	21.1	<0.01	0.04
G003805		0.97	22.7	500	7.5	8.2	<0.001	0.02	0.20	6.4	0.4	0.4	17.6	<0.01	0.01
G003806		0.37	3.0	460	2.1	0.9	<0.001	0.04	0.10	1.0	0.5	0.2	13.5	<0.01	0.03
G003807		0.35	4.8	380	4.9	0.4	<0.001	0.04	0.16	1.0	0.4	<0.2	11.4	<0.01	0.06
G003808		0.85	27.9	470	7.8	9.0	0.001	0.01	0.27	8.6	0.5	0.4	17.9	<0.01	0.04
G003809		0.37	5.5	680	3.4	1.3	<0.001	0.05	0.12	1.1	0.7	0.2	15.5	<0.01	0.02
G003810		0.54	1.9	320	2.5	0.7	<0.001	0.01	0.06	0.6	0.2	0.2	11.6	<0.01	0.01
G003810D		0.49	2.3	370	2.5	0.9	<0.001	0.03	0.08	0.7	0.4	0.2	14.6	<0.01	0.02
G003811		0.46	1.7	510	2.4	0.5	<0.001	0.02	0.07	0.7	0.3	0.2	13.8	<0.01	0.01
G003812		1.91	33.3	720	15.1	24.4	<0.001	0.04	0.32	7.9	1.1	0.7	35.0	0.01	0.06
G003813		1.79	48.7	680	21.4	50.2	<0.001	0.01	0.22	7.4	1.0	0.9	26.4	<0.01	0.10
G003814		2.43	52.1	810	13.6	52.3	<0.001	0.04	0.26	5.7	0.7	0.8	32.8	<0.01	0.05
G003815		2.50	41.4	790	14.3	36.7	0.012	0.05	0.28	6.6	1.0	0.8	28.2	0.02	0.05
G003816		2.68	43.3	960	13.7	59.8	<0.001	0.06	0.25	5.8	1.0	0.8	33.3	0.01	0.06
G003817		3.17	44.5	940	9.7	62.5	<0.001	0.05	0.19	5.3	0.8	0.9	39.7	<0.01	0.05
G003818		2.21	36.8	690	13.5	41.5	<0.001	0.04	0.19	5.5	0.6	0.8	33.5	<0.01	0.03
G003819		2.44	41.2	790	16.0	49.2	<0.001	0.03	0.28	5.9	1.0	0.8	29.6	<0.01	0.09
G003820		2.01	33.6	570	19.3	24.5	<0.001	0.04	0.23	5.9	0.8	0.8	35.4	<0.01	0.06
G003821		0.37	2.6	620	1.9	0.9	<0.001	0.03	0.08	0.8	0.4	0.2	14.3	<0.01	0.01
G003822		1.13	23.1	620	7.8	5.5	<0.001	0.03	0.23	5.4	0.5	0.5	25.1	<0.01	0.02
G003823		1.13	18.5	520	7.7	7.8	<0.001	0.03	0.33	6.0	0.6	0.4	23.3	<0.01	0.02
G003824		0.82	25.6	740	7.8	5.6	<0.001	0.04	0.25	7.3	0.7	0.4	23.6	<0.01	0.03
G003825		0.89	34.4	680	9.2	8.5	<0.001	0.05	0.25	11.1	0.7	0.4	23.9	<0.01	0.03
G003826		0.41	5.4	470	6.3	1.1	<0.001	0.04	0.11	1.4	0.4	0.2	13.3	<0.01	0.02
G003827		0.62	19.0	840	6.4	3.9	<0.001	0.05	0.20	5.6	0.6	0.3	19.8	<0.01	0.02
G003828		0.96	25.0	630	6.3	16.3	<0.001	0.02	0.22	7.0	0.6	0.4	21.8	<0.01	0.04
G003829		0.68	25.5	530	4.2	20.5	0.001	0.04	0.13	5.5	0.8	0.3	21.7	<0.01	0.04
G003851		0.67	23.4	690	6.0	10.9	<0.001	0.03	0.24	6.3	0.8	0.3	19.2	<0.01	0.03
G003852		0.77	33.2	800	9.8	11.4	0.001	0.09	0.36	6.7	1.8	0.4	40.5	0.01	0.07
G003853		0.76	26.5	710	8.1	9.7	<0.001	0.03	0.25	7.0	0.9	0.3	22.0	<0.01	0.04
G003854		0.88	26.3	790	7.8	7.5	<0.001	0.07	0.28	6.1	1.6	0.4	32.9	0.01	0.04
G003855		0.72	21.9	820	6.5	5.7	<0.001	0.06	0.25	4.9	1.4	0.3	28.7	<0.01	0.03
G003856		0.60	22.7	1000	6.7	7.3	0.001	0.09	0.28	4.7	1.8	0.4	34.1	0.01	0.05
G003857		0.92	21.5	720	6.9	7.8	<0.001	0.04	0.25	5.6	1.0	0.4	22.2	<0.01	0.03
G003858		0.73	20.5	610	8.3	6.1	<0.001	0.05	0.36	4.0	0.6	0.4	27.0	<0.01	0.05
G003859															
G003860															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003801		0.094	0.10	0.46	69	0.13	3.89	84
G003802		0.035	0.08	1.23	46	0.16	19.75	96
G003803		0.135	0.06	0.44	107	0.27	2.53	47
G003804		0.104	0.09	0.51	77	0.14	5.03	76
G003805		0.137	0.11	0.24	67	0.14	3.40	77
G003806		0.026	0.03	0.21	15	0.07	1.64	14
G003807		0.022	0.14	0.23	5	0.11	1.47	9
G003808		0.109	0.09	0.39	100	0.13	5.35	66
G003809		0.030	0.04	0.29	14	0.09	3.23	16
G003810		0.037	0.02	0.12	7	<0.05	1.53	9
G003810D		0.030	0.03	0.21	8	0.05	2.29	9
G003811		0.044	0.02	0.16	5	<0.05	2.06	7
G003812		0.112	0.19	2.05	76	0.19	12.30	93
G003813		0.158	0.31	2.60	69	0.21	12.30	100
G003814		0.178	0.36	1.80	77	0.23	5.83	78
G003815		0.168	0.36	4.65	82	0.24	9.72	68
G003816		0.161	0.36	3.92	80	0.20	8.10	73
G003817		0.184	0.38	2.54	80	0.28	7.05	77
G003818		0.169	0.31	1.38	63	0.16	4.97	68
G003819		0.152	0.34	2.96	75	0.18	8.73	80
G003820		0.121	0.23	1.60	66	0.17	8.99	88
G003821		0.032	0.03	0.36	6	<0.05	2.56	9
G003822		0.088	0.08	0.44	56	0.15	5.13	68
G003823		0.097	0.09	0.53	54	0.17	6.10	58
G003824		0.074	0.09	0.47	95	0.12	5.87	63
G003825		0.114	0.09	0.36	135	0.09	4.47	76
G003826		0.030	0.04	0.22	19	0.09	1.74	21
G003827		0.076	0.08	0.29	66	0.20	3.37	75
G003828		0.130	0.15	0.30	104	0.15	4.40	74
G003829		0.075	0.12	0.48	62	0.10	6.77	66
G003851		0.073	0.08	0.90	63	0.08	9.22	77
G003852		0.072	0.11	1.42	67	0.10	25.70	98
G003853		0.079	0.08	0.78	65	0.14	14.75	88
G003854		0.073	0.10	1.32	59	0.12	22.10	80
G003855		0.070	0.08	1.38	60	0.11	12.65	85
G003856		0.060	0.08	1.38	60	0.10	19.10	92
G003857		0.094	0.11	0.81	62	0.10	7.54	77
G003858		0.079	0.08	0.51	71	0.09	5.41	80
G003859								
G003860								

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003861		0.48	0.013	0.40	1.85	5.5	<0.2	<10	210	0.24	0.17	0.63	1.06	18.95	15.6	42
G003862		0.42	0.006	0.38	1.98	7.5	<0.2	<10	170	0.28	0.16	0.34	0.45	29.80	14.4	40
G003863		0.38	0.008	0.14	2.64	5.2	<0.2	<10	180	0.28	0.14	0.36	0.25	18.90	14.6	43
G003864		0.50	0.009	0.14	2.62	7.9	<0.2	<10	190	0.35	0.14	0.35	0.21	34.50	19.6	49
G003865		0.52	0.008	0.08	2.30	2.7	<0.2	<10	160	0.16	0.10	0.45	0.17	12.55	14.0	52
G003866		0.44	<0.005	0.06	0.25	0.3	<0.2	<10	30	0.06	0.04	0.15	0.07	5.00	1.3	5
G003867		0.40	<0.005	0.03	0.15	<0.1	<0.2	<10	20	<0.05	0.02	0.12	0.03	2.97	0.8	4
G003868		0.42	0.010	0.12	0.37	0.4	<0.2	<10	70	0.09	0.04	0.30	0.20	9.62	3.5	8
G003869		0.36	<0.005	0.04	0.21	0.4	<0.2	<10	30	<0.05	0.03	0.20	0.04	3.69	1.6	4
G003870		0.48	0.009	0.16	1.98	5.2	<0.2	<10	280	0.36	0.16	0.66	0.29	27.60	14.3	37
G003870D		0.44	0.006	0.15	2.21	5.8	<0.2	<10	270	0.36	0.17	0.54	0.21	25.80	14.8	41
G003871		0.46	0.006	0.09	2.29	6.2	<0.2	<10	170	0.45	0.78	0.41	0.19	35.30	11.7	85
G003872		0.44	<0.005	0.18	0.62	1.8	<0.2	<10	90	0.12	0.14	0.24	0.08	10.05	3.6	36
G003873		0.44	0.005	0.14	2.43	8.3	<0.2	<10	200	0.39	0.30	0.48	0.14	37.20	12.8	105
G003874		0.42	<0.005	0.08	2.48	4.7	<0.2	<10	240	0.34	0.21	0.54	0.15	36.40	13.7	103
G003875		0.36	<0.005	0.04	2.36	4.6	<0.2	<10	210	0.35	0.15	0.51	0.18	32.20	13.0	116
G003876		0.36	0.008	0.06	2.49	7.7	<0.2	<10	160	0.43	0.18	0.35	0.17	29.00	27.5	53
G003877		0.42	<0.005	0.07	2.26	6.8	<0.2	<10	170	0.41	0.18	0.39	0.11	24.10	13.6	50
G003878		0.52	<0.005	0.10	2.33	4.1	<0.2	<10	180	0.30	0.14	0.38	0.09	17.85	10.3	55
G003879		0.40	0.005	0.10	2.55	5.0	<0.2	<10	220	0.40	0.13	0.35	0.11	33.00	11.7	59
G003880		0.54	<0.005	0.08	2.20	4.6	<0.2	<10	170	0.26	0.10	0.46	0.11	21.90	13.1	60
G003881		0.36	<0.005	0.16	2.30	5.7	<0.2	<10	270	0.32	0.11	0.85	0.26	30.90	17.6	62
G003882		0.34	<0.005	0.21	1.91	4.9	<0.2	<10	160	0.31	0.14	0.73	0.22	26.00	13.4	40
G003883		0.40	<0.005	0.11	1.88	5.9	<0.2	<10	260	0.23	0.10	0.89	0.37	31.40	18.4	53
G003884		0.40	<0.005	0.14	1.44	4.2	<0.2	<10	150	0.23	0.15	0.77	0.20	29.20	9.8	39
G003885		0.38	<0.005	0.12	0.19	0.4	<0.2	<10	20	<0.05	0.04	0.06	0.21	2.75	1.5	4
G003886		0.42	<0.005	0.24	2.01	6.6	<0.2	<10	140	0.39	0.15	0.54	0.14	72.70	16.8	43
G003887		0.40	0.006	0.42	1.18	3.1	<0.2	<10	130	0.27	0.14	0.57	0.11	43.30	5.6	30
G003888		0.32	<0.005	0.59	1.87	7.7	<0.2	<10	110	0.34	0.22	0.12	0.13	42.40	10.0	38
G003889		0.40	<0.005	0.32	1.69	5.4	<0.2	<10	210	0.30	0.19	0.35	0.19	35.30	9.9	41
G003890		0.28	<0.005	0.22	2.37	8.0	<0.2	<10	90	0.30	0.29	0.16	0.34	22.90	8.0	42
G003890D		0.36	<0.005	0.28	2.52	9.8	<0.2	<10	80	0.35	0.25	0.14	0.37	24.30	8.5	42
G003891		0.36	<0.005	0.19	2.24	2.8	<0.2	<10	210	0.25	0.19	0.70	1.01	23.80	13.7	48
G003892		0.46	0.007	0.26	2.36	2.0	<0.2	<10	160	0.19	0.20	0.76	0.27	17.45	13.3	52
G003893		0.50	0.006	0.11	1.84	0.6	<0.2	<10	120	0.09	0.16	0.50	0.16	12.25	7.9	40
G003894		0.48	<0.005	0.17	2.34	4.2	<0.2	<10	130	0.15	0.19	0.49	0.26	14.15	15.5	47
G003895		0.46	<0.005	0.15	2.30	3.1	<0.2	<10	170	0.23	0.12	0.56	0.30	21.10	11.6	44
G003896		0.40	<0.005	0.55	1.88	4.5	<0.2	<10	230	0.25	0.12	0.72	0.49	31.50	14.6	35
G003897		0.52	<0.005	0.22	2.27	4.8	<0.2	<10	150	0.19	0.12	0.50	0.22	18.25	10.7	44
G003898		0.44	0.006	0.07	2.15	5.3	<0.2	<10	140	0.18	0.10	0.51	0.24	14.45	13.9	50

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003861		0.96	38.7	2.85	5.85	0.08	0.06	0.05	0.024	0.05	10.8	11.3	1.12	1090	2.09
G003862		1.15	40.3	3.12	6.31	0.07	0.05	0.04	0.024	0.05	11.7	11.3	1.10	466	1.39
G003863		1.01	39.6	3.74	6.79	0.09	0.08	0.03	0.023	0.21	7.9	12.2	1.67	381	0.58
G003864		0.99	58.0	4.17	7.28	0.10	0.15	0.03	0.033	0.13	13.9	12.3	1.48	518	0.54
G003865		0.67	22.0	2.66	7.48	0.05	0.05	0.04	0.025	0.04	5.4	13.1	1.46	392	0.42
G003866		0.20	5.2	0.32	1.84	<0.05	<0.02	0.02	<0.005	0.01	1.6	1.2	0.11	45	0.16
G003867		0.12	4.2	0.20	0.98	<0.05	<0.02	0.01	<0.005	0.01	1.2	0.6	0.08	19	0.11
G003868		0.25	14.0	0.47	1.44	<0.05	0.02	0.03	0.005	0.02	3.4	1.4	0.12	765	0.33
G003869		0.22	6.1	0.48	1.58	<0.05	0.02	0.01	<0.005	0.01	1.7	0.8	0.09	109	0.23
G003870		1.37	35.1	2.95	6.16	0.07	0.05	0.05	0.032	0.08	12.3	11.7	0.66	1240	1.26
G003870D		1.56	33.1	3.30	6.86	0.07	0.06	0.04	0.032	0.10	11.5	13.8	0.76	895	1.06
G003871		1.42	20.7	3.14	7.22	0.12	0.17	0.03	0.033	0.29	20.2	13.7	1.32	317	1.14
G003872		0.62	8.3	0.94	2.71	<0.05	<0.02	0.04	0.007	0.08	4.8	2.4	0.41	125	1.06
G003873		2.05	26.0	3.57	8.46	0.10	0.07	0.04	0.023	0.45	17.8	11.1	1.64	319	2.21
G003874		2.34	16.3	3.27	8.48	0.11	0.05	0.02	0.017	0.61	17.8	10.8	1.75	508	1.15
G003875		2.48	17.7	2.93	7.98	0.10	0.07	0.03	0.017	0.51	15.9	13.1	1.56	319	0.88
G003876		2.13	29.0	3.70	7.86	0.09	0.08	0.04	0.033	0.19	12.0	23.6	0.83	652	1.01
G003877		2.22	23.0	3.36	7.02	0.09	0.04	0.03	0.030	0.25	10.6	20.5	0.84	340	0.80
G003878		2.17	18.9	2.86	7.64	0.08	0.05	0.02	0.025	0.29	8.0	20.6	0.98	257	0.63
G003879		1.93	36.3	3.01	7.80	0.10	0.08	0.04	0.036	0.23	15.5	19.1	0.97	231	0.36
G003880		1.41	31.3	3.03	6.97	0.09	0.07	0.03	0.025	0.23	9.1	16.6	1.01	238	0.55
G003881		1.77	37.5	3.26	7.01	0.09	0.05	0.04	0.029	0.21	13.1	16.6	0.97	933	1.14
G003882		1.65	27.2	2.70	5.92	0.07	0.05	0.04	0.026	0.17	11.4	16.3	0.77	404	0.74
G003883		2.20	30.0	3.51	5.78	0.10	0.05	0.03	0.025	0.19	11.1	15.1	0.88	1540	1.25
G003884		1.38	24.1	2.16	5.73	0.06	0.05	0.05	0.025	0.09	13.3	12.7	0.60	348	0.66
G003885		0.21	5.6	0.64	1.30	<0.05	<0.02	0.04	<0.005	0.02	1.2	0.4	0.03	32	0.34
G003886		2.04	41.0	2.93	6.31	0.13	0.06	0.04	0.030	0.12	49.0	19.6	0.72	272	1.00
G003887		1.43	23.3	1.68	5.08	0.08	0.04	0.06	0.018	0.08	30.2	6.8	0.39	120	0.81
G003888		1.73	26.4	3.05	6.99	0.08	0.04	0.10	0.036	0.08	26.0	9.9	0.42	286	1.93
G003889		1.71	25.9	2.26	6.42	0.06	0.03	0.09	0.027	0.11	17.4	9.0	0.60	267	1.00
G003890		1.39	23.8	3.39	7.97	0.05	0.05	0.08	0.035	0.06	9.5	13.4	0.50	308	1.47
G003890D		1.59	24.4	3.79	10.00	0.06	0.08	0.07	0.038	0.06	10.1	15.0	0.54	310	1.75
G003891		0.81	51.7	2.65	5.77	0.08	0.07	0.06	0.026	0.05	12.0	12.8	1.34	1020	0.50
G003892		0.88	44.4	2.78	5.59	0.07	0.05	0.05	0.024	0.05	7.8	10.9	1.58	475	0.52
G003893		0.55	19.8	2.05	4.76	0.05	0.04	0.03	0.019	0.04	5.5	9.1	1.28	264	0.26
G003894		0.65	28.2	3.21	6.11	0.10	0.05	0.03	0.019	0.09	7.3	9.2	1.71	516	0.74
G003895		0.79	30.6	2.65	6.56	0.08	0.06	0.04	0.024	0.05	12.1	11.1	1.36	356	0.55
G003896		0.81	42.3	2.81	5.94	0.12	0.07	0.06	0.023	0.05	24.5	9.3	1.05	593	1.05
G003897		0.73	19.8	3.11	6.42	0.09	0.05	0.03	0.024	0.05	10.0	10.7	1.40	358	0.79
G003898		0.66	18.8	3.26	6.21	0.10	0.06	0.03	0.022	0.06	7.2	9.7	1.48	497	1.02

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003861		0.76	33.7	880	13.5	10.6	0.001	0.07	0.50	4.8	1.0	0.4	34.1	<0.01	0.05
G003862		0.86	26.8	650	14.6	10.4	<0.001	0.05	0.45	5.0	0.9	0.5	24.7	<0.01	0.06
G003863		0.93	23.7	680	10.7	22.4	<0.001	0.02	0.34	6.0	0.4	0.4	19.3	<0.01	0.04
G003864		1.19	25.4	560	9.6	19.2	0.001	0.02	0.44	9.1	0.5	0.5	21.0	<0.01	0.05
G003865		0.87	25.8	610	10.3	5.1	<0.001	0.04	0.30	6.7	0.3	0.4	22.9	<0.01	0.01
G003866		0.42	2.4	220	3.2	1.0	<0.001	0.01	0.11	0.9	0.2	0.2	11.3	<0.01	<0.01
G003867		0.38	1.6	230	1.7	0.6	<0.001	0.01	0.10	0.5	<0.2	0.2	10.5	<0.01	<0.01
G003868		0.31	4.6	600	3.3	1.8	<0.001	0.05	0.11	1.2	0.5	0.2	17.1	<0.01	<0.01
G003869		0.45	2.1	270	1.9	0.9	0.001	0.02	0.09	0.6	0.2	0.2	13.3	<0.01	<0.01
G003870		1.12	25.4	860	10.1	17.6	<0.001	0.07	0.32	5.6	0.7	0.5	40.6	<0.01	0.06
G003870D		1.38	27.1	650	10.8	18.7	<0.001	0.05	0.31	6.6	0.7	0.7	35.9	<0.01	0.05
G003871		2.20	36.7	630	24.3	45.8	<0.001	0.02	0.36	5.7	0.8	1.0	29.1	<0.01	0.13
G003872		0.50	12.9	570	8.8	10.4	<0.001	0.04	0.15	1.1	0.4	0.3	19.3	<0.01	0.02
G003873		2.47	45.4	920	17.8	53.8	<0.001	0.06	0.28	4.3	0.8	0.7	34.5	<0.01	0.05
G003874		2.32	45.7	820	12.2	63.6	<0.001	0.03	0.24	4.7	0.4	0.8	40.8	<0.01	0.04
G003875		2.26	47.2	850	10.7	61.1	<0.001	0.03	0.25	4.3	0.4	0.7	40.8	<0.01	0.02
G003876		2.14	35.9	580	11.0	31.6	<0.001	0.02	0.42	6.0	0.6	0.7	27.8	<0.01	0.05
G003877		1.99	31.7	650	11.1	38.2	<0.001	0.02	0.27	5.4	0.5	0.6	29.9	<0.01	0.03
G003878		1.83	30.1	690	9.3	40.3	<0.001	0.02	0.22	5.4	0.4	0.7	26.3	<0.01	0.02
G003879		1.98	34.3	600	9.3	39.6	<0.001	0.03	0.36	7.3	0.7	0.7	25.6	<0.01	0.04
G003880		1.56	36.1	800	6.7	31.0	<0.001	0.02	0.43	5.8	0.5	0.5	27.1	<0.01	0.03
G003881		1.76	38.2	1010	8.5	35.5	<0.001	0.07	0.32	6.0	0.9	0.6	44.1	<0.01	0.04
G003882		1.79	32.7	760	8.4	28.6	<0.001	0.05	0.45	4.7	0.7	0.5	41.7	<0.01	0.05
G003883		1.95	40.4	650	7.0	38.7	<0.001	0.07	0.35	5.0	0.9	0.4	34.3	<0.01	0.05
G003884		1.61	27.9	540	8.2	23.3	<0.001	0.05	0.31	4.5	0.8	0.5	39.1	<0.01	0.02
G003885		0.22	2.6	300	1.5	1.5	<0.001	0.03	0.06	0.5	0.3	0.2	8.7	<0.01	<0.01
G003886		1.89	50.0	680	9.9	25.6	0.001	0.05	0.35	4.9	1.6	0.6	34.5	0.01	0.04
G003887		1.41	22.7	670	7.3	15.5	0.001	0.07	0.19	2.8	1.0	0.6	40.6	<0.01	0.03
G003888		1.88	23.7	360	13.0	16.5	<0.001	0.03	0.36	5.5	0.9	0.7	17.3	<0.01	0.05
G003889		1.29	23.1	710	11.3	18.8	<0.001	0.07	0.26	4.3	1.0	0.7	27.6	<0.01	0.04
G003890		2.09	19.1	510	20.0	9.3	<0.001	0.03	0.41	4.1	0.6	0.7	14.6	<0.01	0.06
G003890D		2.69	20.9	480	25.3	10.2	<0.001	0.04	0.45	4.8	0.7	0.7	15.6	<0.01	0.08
G003891		0.75	29.3	670	11.1	9.8	0.001	0.10	0.27	6.4	1.1	0.4	32.5	<0.01	0.03
G003892		0.66	27.3	680	8.2	10.0	0.001	0.08	0.18	6.0	0.8	0.3	32.9	<0.01	0.05
G003893		0.63	20.1	710	6.7	6.3	<0.001	0.03	0.09	4.7	0.4	0.3	23.1	<0.01	0.03
G003894		0.67	26.0	860	5.8	10.2	0.001	0.03	0.22	6.1	0.6	0.4	20.0	<0.01	0.09
G003895		1.00	25.3	710	7.5	9.4	0.001	0.05	0.27	6.6	0.9	0.4	27.8	<0.01	0.03
G003896		0.90	27.6	730	6.8	9.5	0.001	0.06	0.31	6.3	1.5	0.4	38.8	0.01	0.05
G003897		0.99	24.9	670	7.6	8.8	<0.001	0.03	0.22	5.8	0.6	0.4	24.8	<0.01	0.03
G003898		0.89	28.4	770	6.2	9.3	<0.001	0.02	0.25	6.0	0.5	0.4	23.3	<0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003861		0.078	0.14	0.77	66	0.13	10.30	105
G003862		0.091	0.14	0.79	78	0.15	7.56	80
G003863		0.142	0.18	0.50	99	0.21	5.20	91
G003864		0.131	0.16	0.76	106	0.18	8.09	75
G003865		0.099	0.08	0.30	76	0.09	4.12	86
G003866		0.037	0.03	0.19	8	0.13	1.30	11
G003867		0.029	0.02	0.09	5	0.21	1.04	7
G003868		0.025	0.04	0.41	9	<0.05	3.99	13
G003869		0.032	0.02	0.17	11	<0.05	1.55	10
G003870		0.074	0.16	2.09	71	0.16	11.80	80
G003870D		0.093	0.17	1.74	80	2.41	10.15	81
G003871		0.145	0.30	1.48	67	2.07	7.69	83
G003872		0.050	0.08	1.11	30	0.11	2.35	20
G003873		0.155	0.37	3.43	93	0.46	6.63	66
G003874		0.183	0.38	1.44	81	0.17	5.63	77
G003875		0.165	0.35	1.37	73	0.17	5.33	70
G003876		0.140	0.20	1.00	84	0.21	6.84	84
G003877		0.129	0.25	1.17	72	0.15	6.66	73
G003878		0.137	0.27	0.86	69	0.47	5.82	72
G003879		0.141	0.25	1.57	88	0.22	10.85	68
G003880		0.129	0.19	0.75	80	0.12	6.78	61
G003881		0.108	0.20	1.15	78	0.13	10.25	92
G003882		0.098	0.17	1.04	56	0.10	7.88	78
G003883		0.108	0.28	1.08	71	0.37	7.51	93
G003884		0.080	0.13	1.16	53	0.19	8.87	61
G003885		0.027	0.03	0.26	17	<0.05	0.64	10
G003886		0.098	0.18	1.82	61	0.13	23.40	76
G003887		0.055	0.12	1.26	35	0.11	18.95	42
G003888		0.090	0.19	1.57	69	0.13	12.00	50
G003889		0.075	0.16	1.69	58	0.15	9.83	65
G003890		0.113	0.15	0.89	87	0.20	4.29	53
G003890D		0.131	0.16	0.82	101	0.20	4.47	53
G003891		0.076	0.16	1.47	63	0.08	13.95	94
G003892		0.082	0.12	0.95	69	0.08	9.64	79
G003893		0.072	0.08	0.72	48	0.07	5.19	65
G003894		0.083	0.08	0.51	73	0.12	7.09	79
G003895		0.104	0.10	1.17	69	0.30	9.38	83
G003896		0.077	0.09	1.25	64	0.18	23.50	86
G003897		0.112	0.08	0.57	81	0.13	6.27	88
G003898		0.106	0.08	0.41	76	0.15	5.16	84

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-AA23 Au ppm 0.005	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
G003899		0.36	<0.005	0.13	2.23	10.8	<0.2	<10	130	0.26	0.12	0.51	0.34	21.80	15.3	39
G003900		Not Recvd														
G003901		0.50	<0.005	0.07	2.00	5.3	<0.2	<10	150	0.32	0.18	0.44	0.12	22.40	18.1	42
G003902		0.38	<0.005	0.10	1.88	5.6	<0.2	<10	180	0.32	0.16	0.99	0.23	27.90	17.6	36
G003903		0.34	<0.005	0.11	1.81	8.4	<0.2	<10	190	0.28	0.15	0.67	0.24	21.40	17.3	40
G003904		0.20	<0.005	0.13	1.66	7.2	<0.2	<10	200	0.19	0.14	0.57	0.19	20.40	12.6	35
G003905		0.22	<0.005	0.10	1.06	3.3	<0.2	<10	120	0.14	0.11	0.33	0.25	11.85	5.4	24
G003906		0.28	<0.005	0.17	1.87	4.9	<0.2	<10	190	0.19	0.16	0.42	0.20	22.00	6.8	40
G003907		0.42	0.037	0.06	1.49	3.7	<0.2	<10	130	0.17	0.13	0.30	0.12	16.80	7.0	31
G003908		0.40	<0.005	0.11	1.74	4.3	<0.2	<10	170	0.21	0.13	0.38	0.15	20.80	6.4	37
G003909		0.28	<0.005	0.11	1.66	6.3	<0.2	<10	180	0.22	0.13	0.50	0.16	23.20	9.1	35
G003910		0.26	<0.005	0.11	1.53	5.7	<0.2	<10	170	0.21	0.13	0.47	0.17	22.80	8.7	32
G003911		0.38	<0.005	0.10	1.90	4.3	<0.2	<10	160	0.31	0.14	0.69	0.14	25.10	14.3	37
G003912		0.32	<0.005	0.10	2.22	5.0	<0.2	<10	150	0.40	0.27	0.47	0.14	45.50	16.3	43
G003913		0.26	<0.005	0.18	2.04	4.3	<0.2	<10	220	0.38	0.17	0.67	0.29	27.20	8.5	45
G003914		0.38	<0.005	0.06	2.29	5.5	<0.2	<10	200	0.37	0.11	0.53	0.11	21.60	12.5	49
G003915		0.32	<0.005	0.11	2.51	7.4	<0.2	<10	190	0.41	0.12	0.45	0.10	21.10	12.4	54
G003916		0.46	<0.005	0.08	2.63	6.0	<0.2	<10	210	0.39	0.11	0.52	0.09	19.55	15.2	60
G003917		0.18	<0.005	0.11	1.62	3.5	<0.2	<10	190	0.24	0.08	0.49	0.13	18.55	18.2	43
G003918		0.52	<0.005	0.06	2.17	6.3	<0.2	<10	230	0.28	0.09	0.68	0.16	24.70	21.0	56
G003919		0.26	<0.005	0.09	2.16	3.4	<0.2	<10	190	0.20	0.07	0.82	0.34	17.05	16.7	63
G003920		0.34	<0.005	0.13	2.02	5.2	<0.2	<10	230	0.33	0.11	1.21	0.33	36.80	13.6	49
G003921		0.50	<0.005	0.15	2.06	5.1	<0.2	<10	170	0.32	0.12	0.69	0.16	46.90	14.0	51
G003922		0.38	<0.005	0.18	1.74	3.8	<0.2	<10	130	0.31	0.12	0.53	0.11	59.00	13.7	42
G003923		0.40	0.038	0.16	2.20	6.2	<0.2	<10	140	0.35	0.14	0.37	0.08	43.00	11.9	44
G003924		0.68	<0.005	0.18	1.88	5.1	<0.2	<10	130	0.22	0.15	0.43	0.12	26.60	12.3	42
G003925		0.40	<0.005	0.31	1.96	7.7	<0.2	<10	200	0.34	0.21	0.32	0.15	49.90	17.3	38
G003926		0.34	<0.005	0.13	2.29	10.8	<0.2	<10	130	0.26	0.16	0.48	0.19	19.90	13.0	44
G003927		0.32	<0.005	0.20	1.97	4.6	<0.2	<10	170	0.26	0.17	0.59	0.51	28.10	17.4	38
G003928		0.24	<0.005	0.31	2.24	6.0	<0.2	<10	170	0.25	0.19	0.64	0.32	34.90	13.4	44
G003929		0.36	<0.005	0.23	1.83	8.0	<0.2	<10	130	0.21	0.18	0.50	0.22	23.10	10.7	35
G003930		0.40	<0.005	0.21	1.85	4.4	<0.2	<10	120	0.17	0.15	0.50	0.17	20.60	9.8	35
G003931		0.42	<0.005	0.44	1.89	5.6	<0.2	<10	210	0.27	0.22	0.83	0.28	26.80	18.3	37
G003932		0.34	<0.005	0.11	2.03	9.7	<0.2	<10	140	0.20	0.16	0.44	0.14	15.55	9.8	38
G003933		0.22	<0.005	0.30	1.18	3.5	<0.2	<10	220	0.26	0.11	1.09	0.46	20.10	10.4	27
G003934		0.34	<0.005	0.25	1.72	5.7	<0.2	<10	160	0.21	0.15	0.68	0.28	18.00	13.0	37
G003935		0.46	<0.005	0.12	2.00	5.4	<0.2	<10	110	0.16	0.14	0.51	0.17	14.90	10.0	36
G003936		0.38	0.013	0.11	1.99	8.5	<0.2	<10	90	0.23	0.14	0.46	0.30	17.65	10.7	45
G003937		0.38	0.006	0.10	2.28	3.1	<0.2	<10	140	0.24	0.13	0.45	0.25	15.90	16.6	46
G003938		0.48	0.006	0.24	2.50	2.2	<0.2	<10	100	0.26	0.11	0.64	0.14	14.10	14.5	87

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003899		0.68	20.7	3.81	6.34	0.09	0.06	0.04	0.024	0.05	8.8	10.8	1.27	409	1.72
G003900															
G003901		1.68	15.5	3.15	6.81	0.10	0.03	0.02	0.024	0.14	12.0	13.6	0.79	903	0.75
G003902		1.49	24.1	2.92	5.61	0.09	0.04	0.04	0.020	0.12	13.1	13.0	0.67	1090	0.63
G003903		1.37	18.1	3.14	5.91	0.09	0.04	0.04	0.022	0.09	10.4	12.5	0.65	1125	1.01
G003904		1.15	16.4	2.35	5.92	0.07	0.03	0.07	0.020	0.06	10.7	10.1	0.63	537	0.78
G003905		0.81	11.9	1.30	4.14	<0.05	<0.02	0.06	0.012	0.04	6.2	5.2	0.36	209	0.58
G003906		1.35	14.2	2.30	6.34	0.07	0.03	0.05	0.021	0.07	11.6	9.4	0.66	208	0.45
G003907		1.06	9.7	1.93	5.49	0.06	<0.02	0.03	0.014	0.08	9.2	7.4	0.58	271	0.51
G003908		1.35	12.5	2.00	5.87	0.07	0.02	0.04	0.017	0.08	11.2	7.7	0.58	312	0.59
G003909		1.40	15.7	2.24	5.80	0.07	0.03	0.04	0.019	0.09	12.0	7.8	0.55	416	0.65
G003910		1.32	15.0	2.07	5.45	0.07	0.02	0.04	0.019	0.08	11.9	7.4	0.52	396	0.63
G003911		1.53	21.5	2.72	6.22	0.09	0.04	0.04	0.022	0.11	13.7	13.2	0.68	489	0.68
G003912		2.26	32.9	3.35	6.53	0.13	0.06	0.02	0.024	0.22	23.2	17.3	0.94	265	0.50
G003913		1.46	52.6	2.90	7.56	0.08	0.03	0.04	0.024	0.12	15.2	11.0	0.70	227	0.78
G003914		1.60	20.4	3.21	7.39	0.10	0.05	0.03	0.022	0.26	11.7	15.9	0.93	419	0.72
G003915		1.78	22.7	3.47	7.56	0.10	0.06	0.04	0.026	0.36	11.3	16.3	1.02	312	0.57
G003916		2.01	21.9	3.65	8.38	0.11	0.04	0.02	0.026	0.29	9.9	17.9	1.17	396	0.83
G003917		1.13	27.2	2.71	6.02	0.08	0.02	0.04	0.019	0.16	9.0	7.6	0.75	872	1.16
G003918		1.48	20.1	3.40	6.73	0.11	0.04	0.02	0.026	0.25	10.4	12.7	1.00	1325	0.90
G003919		1.09	20.8	3.28	6.86	0.11	0.03	0.02	0.019	0.15	8.6	11.3	1.21	824	0.78
G003920		1.29	39.1	2.70	5.90	0.11	0.07	0.05	0.026	0.14	17.5	13.0	0.88	973	0.66
G003921		1.45	25.7	3.15	6.07	0.13	0.05	0.02	0.025	0.17	22.0	13.4	0.87	452	0.72
G003922		1.48	25.2	2.64	5.71	0.16	0.05	0.04	0.022	0.13	51.3	11.7	0.71	231	0.68
G003923		1.55	27.9	3.08	6.96	0.11	0.04	0.04	0.026	0.09	24.5	15.0	0.74	274	1.03
G003924		1.67	19.3	2.69	6.94	0.09	0.03	0.05	0.021	0.15	14.7	10.9	0.70	304	0.95
G003925		1.50	26.2	3.04	7.01	0.10	0.03	0.05	0.029	0.08	30.8	9.8	0.60	722	1.38
G003926		0.96	24.7	4.41	6.51	0.11	0.06	0.06	0.025	0.07	10.5	10.2	1.42	343	1.55
G003927		0.90	36.9	2.71	6.54	0.10	0.06	0.08	0.025	0.05	14.3	10.7	1.17	1385	0.92
G003928		0.89	39.7	3.14	6.63	0.11	0.06	0.09	0.026	0.05	19.9	10.7	1.30	526	0.80
G003929		0.76	33.8	2.47	5.94	0.08	0.05	0.04	0.022	0.04	12.7	9.8	1.06	291	0.99
G003930		0.70	27.0	2.36	5.57	0.08	0.05	0.04	0.019	0.04	11.3	9.4	1.10	280	0.67
G003931		0.75	56.8	3.07	5.46	0.11	0.07	0.05	0.023	0.05	16.3	8.9	1.05	706	1.39
G003932		0.63	19.0	3.76	5.90	0.08	0.07	0.03	0.024	0.04	7.9	9.6	1.04	236	1.37
G003933		0.42	40.4	1.72	3.66	0.07	0.07	0.06	0.017	0.03	11.3	4.4	0.49	1190	1.19
G003934		0.64	25.1	2.32	5.26	0.08	0.07	0.04	0.021	0.04	10.2	9.2	0.83	675	0.99
G003935		0.66	15.6	2.69	5.90	0.08	0.07	0.03	0.021	0.05	7.9	10.7	1.18	294	0.90
G003936		0.64	22.8	2.82	5.63	0.10	0.12	0.02	0.023	0.05	9.2	10.9	1.16	251	0.99
G003937		0.63	26.8	2.66	6.25	0.08	0.10	0.02	0.022	0.04	8.1	11.4	1.24	778	0.71
G003938		0.76	30.1	3.05	6.62	0.08	0.03	0.03	0.020	0.10	8.6	12.1	1.79	437	0.67

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G003899		0.93	22.1	810	7.1	7.5	0.001	0.04	0.33	5.4	0.9	0.4	22.9	<0.01	0.04	2.0
G003900																
G003901		1.76	23.1	740	7.4	21.6	<0.001	0.04	0.34	4.7	0.5	0.6	27.4	<0.01	0.04	2.4
G003902		1.55	25.2	760	6.0	21.3	<0.001	0.07	0.30	3.9	0.7	0.5	48.8	<0.01	0.03	1.6
G003903		1.45	21.2	720	6.3	17.4	<0.001	0.07	0.25	3.9	0.7	0.5	36.6	<0.01	0.04	1.4
G003904		1.37	20.6	590	7.5	12.6	0.001	0.06	0.28	3.9	0.7	0.5	34.0	<0.01	0.02	1.1
G003905		0.82	11.8	580	5.5	5.6	<0.001	0.06	0.20	2.0	0.5	0.4	21.5	<0.01	0.02	0.2
G003906		1.42	19.8	630	6.9	12.4	<0.001	0.06	0.39	3.9	0.5	0.5	26.8	<0.01	0.03	1.0
G003907		1.12	15.7	540	5.0	12.6	<0.001	0.03	0.19	3.0	0.3	0.5	19.0	<0.01	0.02	1.0
G003908		1.19	17.3	630	5.2	15.2	<0.001	0.05	0.23	3.5	0.4	0.5	26.5	<0.01	0.02	1.0
G003909		1.29	17.5	720	6.4	17.6	<0.001	0.06	0.31	3.6	0.6	0.5	31.3	<0.01	0.04	1.2
G003910		1.23	16.9	650	5.7	17.4	<0.001	0.06	0.28	3.5	0.6	0.4	30.8	<0.01	0.03	1.0
G003911		1.56	24.9	670	6.5	18.4	<0.001	0.06	0.25	4.3	0.7	0.5	41.4	<0.01	0.03	1.3
G003912		2.04	34.0	640	6.9	32.6	<0.001	0.02	0.29	5.3	0.7	0.6	30.1	<0.01	0.04	4.5
G003913		1.61	35.1	620	9.2	20.6	0.001	0.07	0.27	3.3	0.8	0.6	36.9	<0.01	0.05	0.5
G003914		1.75	28.9	590	6.9	30.4	<0.001	0.03	0.63	5.1	0.5	0.6	31.0	<0.01	0.03	2.2
G003915		1.85	29.6	690	7.5	40.1	<0.001	0.03	0.28	5.8	0.7	0.6	25.3	<0.01	0.03	2.9
G003916		1.77	32.3	760	6.9	35.1	<0.001	0.03	0.24	6.4	0.6	0.7	27.3	<0.01	0.04	2.3
G003917		1.02	22.6	660	5.2	18.3	<0.001	0.05	0.23	4.1	0.6	0.4	26.7	<0.01	0.04	0.7
G003918		1.49	30.6	950	5.2	31.8	<0.001	0.03	0.25	5.8	0.5	0.5	29.9	<0.01	0.04	2.6
G003919		1.22	32.6	800	4.2	19.5	0.001	0.05	0.24	6.1	0.6	0.4	33.0	<0.01	0.05	1.4
G003920		1.71	40.7	900	6.4	24.9	<0.001	0.09	0.58	5.4	1.1	0.5	36.4	<0.01	0.04	2.6
G003921		1.49	36.6	680	6.3	22.4	<0.001	0.06	0.33	5.4	0.9	0.5	33.6	<0.01	0.04	2.9
G003922		1.47	41.1	680	6.3	17.4	0.001	0.05	0.25	4.7	1.2	0.6	29.5	<0.01	0.03	3.3
G003923		1.77	35.2	690	7.5	18.4	<0.001	0.05	0.38	4.2	0.9	0.5	25.1	<0.01	0.05	2.7
G003924		1.75	29.8	590	7.5	21.6	<0.001	0.05	0.29	4.2	0.7	0.6	25.9	<0.01	0.04	1.9
G003925		1.38	25.2	610	12.3	13.7	<0.001	0.04	0.40	4.3	0.9	0.6	26.2	<0.01	0.05	1.8
G003926		1.11	26.5	740	8.1	12.5	0.001	0.03	0.31	5.9	0.7	0.4	26.3	<0.01	0.08	3.1
G003927		0.95	29.1	650	9.2	11.3	0.001	0.06	0.28	6.3	1.0	0.4	30.7	<0.01	0.06	2.1
G003928		1.02	27.8	690	8.2	8.9	0.002	0.07	0.28	6.6	1.3	0.4	31.7	<0.01	0.07	1.8
G003929		0.95	24.0	590	7.9	6.9	0.001	0.05	0.26	5.6	1.0	0.3	28.3	<0.01	0.05	1.4
G003930		0.94	22.5	570	6.8	6.5	0.001	0.04	0.23	5.3	0.8	0.3	26.4	<0.01	0.04	1.5
G003931		0.77	28.6	810	7.4	10.2	0.001	0.08	0.31	6.3	1.5	0.3	39.4	<0.01	0.12	0.9
G003932		1.03	23.3	690	8.0	6.5	0.001	0.04	0.33	5.0	0.9	0.4	23.6	<0.01	0.05	2.0
G003933		0.56	26.6	1310	5.4	3.9	0.001	0.14	0.29	3.0	1.8	0.2	46.2	<0.01	0.05	0.4
G003934		0.87	26.7	820	7.0	6.6	0.001	0.07	0.31	4.5	1.0	0.3	31.4	<0.01	0.04	1.2
G003935		0.99	23.0	720	9.6	7.6	<0.001	0.03	0.32	4.7	0.6	0.4	24.0	<0.01	0.03	2.3
G003936		0.99	26.7	770	8.9	6.9	0.001	0.02	0.41	5.1	0.6	0.4	22.8	<0.01	0.04	2.9
G003937		0.93	29.0	570	9.2	6.5	<0.001	0.03	0.36	5.3	0.4	0.4	18.6	<0.01	0.03	3.1
G003938		0.62	40.7	680	13.2	10.6	0.001	0.05	0.20	5.1	0.6	0.3	19.5	<0.01	0.05	1.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003899		0.097	0.10	0.80	85	0.13	5.59	81
G003900								2.1
G003901		0.122	0.15	0.87	70	0.68	5.79	71
G003902		0.094	0.15	1.03	57	0.12	7.52	70
G003903		0.101	0.13	0.78	69	0.13	5.83	77
G003904								1.2
G003904		0.102	0.11	0.99	60	0.13	5.62	76
G003905		0.064	0.09	0.75	32	0.10	3.22	39
G003906		0.107	0.11	0.81	50	0.14	5.47	72
G003907		0.088	0.09	0.53	43	0.16	4.10	56
G003908		0.094	0.10	0.84	41	0.15	5.21	63
G003909								0.8
G003910		0.091	0.13	1.11	46	0.22	5.60	64
G003911		0.085	0.13	1.06	42	0.19	5.35	61
G003912		0.102	0.13	1.32	58	0.12	7.94	75
G003913		0.136	0.20	1.24	62	0.26	10.05	69
G003914		0.108	0.12	1.50	65	0.20	8.22	59
G003915								0.9
G003914		0.132	0.18	0.84	73	0.33	6.83	72
G003915		0.148	0.23	1.48	80	0.16	6.10	70
G003916		0.149	0.21	0.72	95	0.18	6.29	74
G003917		0.102	0.11	0.70	71	0.14	5.74	50
G003918		0.119	0.19	0.68	84	0.15	7.56	76
G003919								1.2
G003919		0.112	0.10	0.55	92	0.16	6.64	81
G003920		0.100	0.16	1.52	63	0.11	11.90	72
G003921		0.109	0.13	1.21	69	0.36	12.05	79
G003922		0.095	0.11	1.38	55	0.16	21.20	61
G003923		0.109	0.14	1.27	63	0.17	9.82	70
G003924								1.1
G003924		0.108	0.14	0.84	63	0.20	6.02	69
G003925		0.095	0.22	1.68	69	0.16	14.10	63
G003926		0.091	0.12	0.88	82	0.10	6.97	86
G003927		0.076	0.13	1.19	60	0.11	11.95	77
G003928		0.087	0.13	1.40	74	0.10	14.25	80
G003929								1.8
G003929		0.080	0.10	1.05	67	0.12	11.40	66
G003930		0.088	0.09	0.82	59	0.12	9.52	66
G003931		0.069	0.09	1.30	62	0.16	19.95	86
G003932		0.089	0.07	0.78	81	0.12	5.65	75
G003933		0.040	0.10	1.47	30	0.08	11.40	48
G003934								1.9
G003934		0.078	0.09	0.91	54	0.16	8.91	66
G003935		0.103	0.08	0.50	67	0.13	5.04	82
G003936		0.111	0.08	0.49	78	0.17	5.72	68
G003937		0.103	0.09	0.52	64	0.19	5.06	59
G003938		0.083	0.08	0.42	61	0.17	6.41	78

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003939		0.32	<0.005	0.30	1.57	5.1	<0.2	<10	100	0.28	0.18	0.35	0.18	20.70	7.8	29
G003940		0.04	<0.005	0.01	<0.01	0.3	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.16	0.1	<1
G003941		0.14	0.006	0.14	2.71	5.4	<0.2	<10	190	0.22	0.14	0.52	0.24	19.50	16.4	44
G003942		0.30	<0.005	0.16	2.29	6.4	<0.2	<10	210	0.33	0.38	1.02	0.34	37.50	16.3	88
G003943		0.42	<0.005	0.16	2.53	7.1	<0.2	<10	190	0.45	0.38	0.56	0.33	57.20	20.4	101
G003944		0.34	<0.005	0.18	2.00	8.4	<0.2	<10	230	0.40	0.18	0.58	0.36	43.30	12.8	36
G003945		0.24	0.026	0.07	2.56	13.8	<0.2	<10	140	0.41	0.17	0.27	0.29	30.50	15.3	42
G003946		0.42	<0.005	0.07	2.23	4.7	<0.2	<10	160	0.20	0.08	0.41	0.16	11.35	15.0	42
G003947		0.38	0.006	0.14	2.64	7.7	<0.2	<10	160	0.20	0.10	0.44	0.27	12.95	14.7	69
G003948		0.32	0.007	0.27	2.81	6.7	<0.2	<10	190	0.26	0.11	0.40	0.37	19.45	17.5	67
G003949		0.20	<0.005	0.25	3.35	6.3	<0.2	<10	210	0.26	0.11	0.39	0.24	23.10	20.8	43
G003950		0.22	<0.005	0.31	3.39	6.1	<0.2	<10	210	0.28	0.12	0.39	0.28	24.80	21.8	43
G003951		0.52	<0.005	0.11	3.89	5.0	<0.2	<10	290	0.28	0.10	0.40	0.22	16.95	21.2	52
G003952		0.50	<0.005	0.15	2.99	4.1	<0.2	<10	210	0.28	0.13	0.38	0.11	17.10	21.3	41
G003953		0.42	<0.005	0.18	2.56	5.7	<0.2	<10	220	0.33	0.12	0.53	0.35	23.30	21.6	45
G003954		0.40	0.010	0.07	2.54	5.1	<0.2	<10	120	0.26	0.11	0.33	0.19	14.65	17.6	49
G003955		0.40	<0.005	0.13	2.64	4.6	<0.2	<10	180	0.19	0.09	0.36	0.18	14.70	15.5	43
G003956		0.34	<0.005	0.07	2.63	2.9	<0.2	<10	180	0.21	0.06	0.42	0.19	9.61	17.8	58
G003957		0.34	<0.005	0.36	2.91	5.9	<0.2	<10	170	0.36	0.21	0.35	0.46	22.20	17.1	47
G003958		0.40	<0.005	0.23	2.25	4.2	<0.2	<10	140	0.22	0.17	0.29	0.28	15.40	11.8	37
G003959		0.40	0.008	0.12	2.64	3.8	<0.2	<10	150	0.18	0.17	0.39	0.32	11.80	18.0	52
G003960		0.34	0.005	0.21	2.63	4.0	<0.2	<10	240	0.28	0.23	0.51	0.53	23.70	19.7	48
G003961		0.34	0.008	0.23	2.05	5.5	<0.2	<10	160	0.24	0.20	0.36	0.22	21.00	17.2	42
G003962		0.34	0.007	0.21	2.79	3.9	<0.2	<10	160	0.26	0.24	0.58	0.33	22.40	21.8	59
G003963		0.38	0.008	0.26	2.11	5.3	<0.2	<10	130	0.25	0.19	0.96	0.28	30.60	17.2	41
G003964		0.32	0.008	0.19	2.04	6.3	<0.2	<10	140	0.29	0.18	0.61	0.29	30.90	15.1	43
G003965		0.38	<0.005	0.22	1.89	5.6	<0.2	<10	150	0.29	0.19	0.53	0.23	43.50	14.4	37
G003966		0.26	<0.005	0.20	1.69	4.9	<0.2	<10	160	0.30	0.17	0.70	0.29	39.70	16.8	32
G003967		0.38	<0.005	0.17	1.69	5.6	<0.2	<10	140	0.25	0.32	0.55	0.17	26.20	14.2	33
G003968		0.26	<0.005	0.09	1.20	6.7	<0.2	<10	50	0.12	0.18	0.10	0.10	12.65	6.9	29
G003969		0.18	<0.005	0.16	0.41	1.8	<0.2	<10	20	0.05	0.08	0.05	0.08	3.93	1.6	7
G003970		0.26	<0.005	0.14	0.34	1.5	<0.2	<10	20	0.05	0.07	0.05	0.04	3.28	1.5	6
G003971		0.34	<0.005	0.21	1.89	4.6	<0.2	<10	120	0.24	0.15	0.47	0.21	21.10	14.4	39
G003972		0.42	<0.005	0.11	2.15	6.7	<0.2	<10	150	0.39	0.16	0.36	0.16	29.50	12.4	37
G003973		0.36	<0.005	0.11	1.92	7.6	<0.2	<10	120	0.31	0.12	0.35	0.16	28.60	10.8	33
G003974		0.30	<0.005	0.17	2.44	17.4	<0.2	<10	250	0.31	0.13	0.90	0.22	30.00	17.4	60
G003975		0.30	0.094	0.07	2.47	4.2	<0.2	<10	220	0.29	0.06	0.87	0.16	29.10	18.0	84
G003976		0.24	<0.005	0.11	1.25	3.3	<0.2	<10	60	0.18	0.10	0.11	0.13	10.15	6.4	28
G003977		0.28	<0.005	0.16	2.01	12.0	<0.2	<10	160	0.28	0.14	0.43	0.16	23.90	12.7	43
G003978		0.38	<0.005	0.19	1.86	6.4	<0.2	<10	170	0.26	0.10	0.46	0.10	26.00	17.5	43

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003939		0.85	28.9	2.41	5.42	0.07	0.02	0.04	0.024	0.04	11.5	6.7	0.59	308	1.30
G003940		<0.05	0.6	0.02	<0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05
G003941		0.90	28.5	3.91	8.05	0.11	0.05	0.02	0.024	0.14	8.8	11.3	1.73	678	0.77
G003942		1.11	22.3	3.04	6.82	0.12	0.09	0.03	0.024	0.21	21.7	10.1	1.58	902	0.98
G003943		1.22	26.5	3.22	7.48	0.13	0.09	0.03	0.026	0.23	28.6	12.6	1.55	672	1.14
G003944		1.17	22.1	2.96	6.61	0.09	0.06	0.03	0.029	0.12	24.2	12.2	0.80	697	0.86
G003945		1.13	22.8	3.70	7.22	0.09	0.06	0.03	0.035	0.10	13.6	16.8	1.03	738	0.92
G003946		0.68	25.8	3.20	6.66	0.09	0.04	0.02	0.018	0.07	5.4	11.4	1.52	1015	0.64
G003947		0.79	34.8	4.28	7.61	0.11	0.06	0.04	0.025	0.09	6.5	13.6	1.72	434	0.81
G003948		0.89	56.2	3.74	8.17	0.11	0.07	0.07	0.029	0.16	9.1	14.2	1.73	405	0.56
G003949		1.14	38.8	4.92	8.69	0.15	0.08	0.03	0.023	0.30	10.8	14.8	2.06	470	0.67
G003950		1.18	39.6	5.04	8.94	0.14	0.08	0.03	0.024	0.31	11.4	14.9	2.09	543	0.92
G003951		0.94	36.1	5.09	9.77	0.15	0.09	0.03	0.027	0.51	8.2	13.4	2.56	653	0.53
G003952		0.79	106.0	4.23	7.26	0.12	0.09	0.02	0.018	0.35	8.7	12.0	1.88	639	0.50
G003953		1.08	60.9	3.78	7.78	0.14	0.20	0.04	0.026	0.30	11.4	14.3	1.61	684	0.48
G003954		0.78	33.2	3.74	7.56	0.10	0.03	0.02	0.025	0.10	7.0	14.2	1.49	736	0.70
G003955		0.82	29.9	4.01	6.38	0.07	0.02	0.02	0.018	0.20	7.1	9.7	1.64	815	0.76
G003956		0.84	28.4	3.66	7.44	0.10	0.02	0.02	0.014	0.30	4.8	11.2	2.08	699	0.53
G003957		0.93	38.3	3.82	7.89	0.09	0.05	0.08	0.029	0.10	10.7	15.0	1.43	951	0.76
G003958		0.70	27.5	3.00	6.51	0.08	0.03	0.04	0.018	0.09	8.1	11.5	1.27	444	0.55
G003959		0.76	31.1	3.79	7.48	0.11	0.03	0.02	0.018	0.15	6.0	12.3	1.98	765	0.51
G003960		0.76	31.9	3.56	7.25	0.09	0.03	0.05	0.024	0.06	10.7	12.1	1.58	2070	0.80
G003961		1.05	24.2	3.17	6.51	0.07	0.03	0.04	0.025	0.05	10.4	11.1	1.06	1100	1.57
G003962		1.32	45.7	3.66	6.94	0.11	0.05	0.03	0.019	0.28	11.1	11.5	2.08	608	0.76
G003963		1.00	35.1	3.35	5.96	0.12	0.06	0.03	0.023	0.11	18.5	10.2	1.36	503	0.86
G003964		0.90	31.9	3.69	5.56	0.10	0.07	0.03	0.023	0.07	15.0	10.3	1.16	709	1.25
G003965		0.90	28.4	3.00	6.06	0.09	0.05	0.06	0.026	0.05	21.2	10.3	0.76	651	1.02
G003966		0.88	23.6	2.52	5.52	0.08	0.06	0.04	0.025	0.04	18.9	9.4	0.63	795	0.70
G003967		0.81	18.3	2.86	5.53	0.06	0.03	0.08	0.023	0.05	12.1	8.3	0.70	871	1.21
G003968		1.20	21.7	3.41	8.20	0.07	0.03	0.03	0.020	0.05	5.5	4.9	0.49	253	1.51
G003969		0.33	6.2	0.86	3.00	<0.05	<0.02	0.03	0.005	0.02	1.9	1.1	0.05	40	0.65
G003970		0.28	5.0	0.75	2.59	<0.05	<0.02	0.03	<0.005	0.01	1.6	0.9	0.05	37	0.50
G003971		0.90	23.4	3.19	5.96	0.08	0.04	0.02	0.027	0.06	10.4	9.5	0.81	586	1.01
G003972		1.05	24.9	3.56	6.08	0.08	0.03	0.03	0.028	0.04	14.8	10.1	0.66	285	1.20
G003973		1.00	20.9	3.10	5.64	0.08	0.04	0.02	0.026	0.05	13.6	10.3	0.61	291	0.73
G003974		1.44	32.8	3.42	7.61	0.11	0.04	0.05	0.028	0.20	14.4	13.8	1.04	664	1.06
G003975		1.53	30.4	3.52	7.29	0.13	0.04	0.01	0.022	0.30	13.6	16.2	1.33	554	0.53
G003976		0.77	21.2	2.07	5.34	<0.05	<0.02	0.03	0.015	0.06	5.0	5.8	0.41	149	0.62
G003977		1.44	18.6	2.99	6.59	0.10	0.03	0.03	0.023	0.19	11.7	13.5	0.82	453	0.85
G003978		1.63	22.9	3.07	5.74	0.09	0.02	0.03	0.018	0.19	12.5	13.8	0.76	556	0.91

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01
G003939		0.58	18.9	780	6.9	7.6	<0.001	0.08	0.31	2.2	0.7	0.3	23.4	<0.01	0.05
G003940		<0.05	0.3	10	0.5	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01
G003941		0.86	24.7	680	7.5	14.7	<0.001	0.05	0.23	6.0	0.5	0.4	23.5	<0.01	0.05
G003942		1.74	39.4	740	19.0	27.9	<0.001	0.06	0.23	4.4	0.9	0.6	39.1	<0.01	0.10
G003943		1.69	43.6	770	16.2	35.4	<0.001	0.05	0.29	5.9	0.8	0.7	26.5	<0.01	0.07
G003944		1.45	22.1	580	24.3	18.2	<0.001	0.04	0.26	5.2	0.7	0.6	30.0	<0.01	0.06
G003945		1.27	25.2	470	15.9	16.5	<0.001	0.03	0.32	5.8	0.5	0.5	19.0	<0.01	0.04
G003946		0.75	21.7	570	5.2	8.8	<0.001	0.03	0.20	4.7	0.3	0.3	19.7	<0.01	0.03
G003947		0.99	29.7	550	9.3	10.3	<0.001	0.03	0.25	7.2	0.4	0.4	20.3	<0.01	0.04
G003948		1.08	31.6	470	11.6	18.9	<0.001	0.03	0.30	9.2	0.7	0.4	21.5	<0.01	0.05
G003949		1.23	25.3	580	11.5	26.2	<0.001	0.03	0.29	8.3	0.5	0.4	18.0	<0.01	0.07
G003950		1.25	25.8	610	11.6	27.3	<0.001	0.03	0.29	8.5	0.5	0.4	18.5	<0.01	0.08
G003951		0.95	26.1	510	10.3	36.4	<0.001	0.02	0.25	11.3	0.4	0.5	17.8	<0.01	0.03
G003952		0.81	23.7	470	5.0	27.0	<0.001	0.01	0.24	5.2	0.4	0.4	17.8	<0.01	0.05
G003953		0.98	28.9	530	6.7	24.8	<0.001	0.01	0.42	8.3	0.6	0.4	23.5	<0.01	0.05
G003954		0.99	27.8	530	7.0	12.5	<0.001	0.02	0.26	5.7	0.4	0.4	17.9	<0.01	0.03
G003955		0.62	18.1	700	5.3	16.0	<0.001	0.04	0.22	4.8	0.4	0.3	16.6	<0.01	0.03
G003956		0.68	27.7	650	3.6	20.1	<0.001	0.03	0.19	4.5	0.2	0.3	17.5	<0.01	0.03
G003957		1.05	26.4	650	28.1	15.0	<0.001	0.04	0.30	5.6	0.6	0.5	21.3	<0.01	0.04
G003958		0.79	19.6	610	18.2	11.1	<0.001	0.04	0.23	4.4	0.5	0.3	17.3	<0.01	0.03
G003959		0.69	24.9	610	17.3	14.2	<0.001	0.02	0.23	4.7	0.3	0.3	18.3	<0.01	0.05
G003960		0.67	26.3	750	15.3	10.5	<0.001	0.06	0.25	5.8	0.7	0.4	26.2	<0.01	0.05
G003961		0.82	27.3	670	10.9	8.5	<0.001	0.04	0.26	4.3	0.6	0.4	22.7	<0.01	0.06
G003962		1.05	37.1	680	7.2	23.1	0.001	0.03	0.24	5.7	0.9	0.4	22.4	<0.01	0.16
G003963		1.14	30.5	620	9.9	17.1	0.001	0.05	0.23	5.2	1.1	0.4	31.4	<0.01	0.11
G003964		1.02	27.9	710	8.7	10.7	0.001	0.04	0.28	5.2	1.1	0.4	24.0	<0.01	0.09
G003965		1.07	24.8	650	10.4	9.0	0.001	0.05	0.27	4.7	1.0	0.4	27.5	<0.01	0.05
G003966		1.13	22.6	660	9.8	7.1	<0.001	0.06	0.26	4.2	1.0	0.4	31.8	<0.01	0.05
G003967		1.04	21.1	670	8.7	8.3	<0.001	0.05	0.23	4.1	0.8	0.4	30.2	<0.01	0.06
G003968		1.84	19.9	350	7.7	6.9	<0.001	0.03	0.36	2.9	0.5	0.6	9.0	<0.01	0.06
G003969		0.45	3.0	200	2.9	1.6	<0.001	0.02	0.16	0.8	0.3	0.3	7.5	<0.01	0.02
G003970		0.40	2.4	170	2.3	1.3	<0.001	0.02	0.12	0.7	0.3	0.2	6.9	<0.01	0.02
G003971		1.20	26.8	720	9.0	8.3	<0.001	0.03	0.31	4.7	0.7	0.5	25.3	<0.01	0.04
G003972		1.43	23.3	640	8.7	8.9	<0.001	0.04	0.37	4.7	0.9	0.5	24.8	<0.01	0.03
G003973		1.49	22.4	690	7.4	9.4	<0.001	0.03	0.32	4.0	0.6	0.5	22.5	<0.01	0.03
G003974		1.84	37.1	700	7.8	30.0	<0.001	0.07	0.28	5.5	0.9	0.5	40.6	<0.01	0.05
G003975		2.20	47.9	1170	6.3	34.2	<0.001	0.03	0.27	5.2	0.6	0.5	36.8	<0.01	0.03
G003976		1.20	14.5	290	6.2	9.7	<0.001	0.03	0.17	2.6	0.4	0.5	10.5	<0.01	0.03
G003977		1.39	25.0	610	10.2	25.9	<0.001	0.04	0.22	4.2	0.5	0.7	25.4	<0.01	0.03
G003978		1.21	24.2	670	5.8	28.6	<0.001	0.06	0.17	3.6	0.7	0.4	26.3	<0.01	0.04

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003939		0.056	0.08	0.63	50	0.13	7.12	46
G003940		<0.005	<0.02	0.09	<1	<0.05	0.61	3
G003941		0.115	0.10	0.41	91	0.11	5.90	100
G003942		0.123	0.21	2.75	64	0.15	10.75	93
G003943		0.136	0.27	2.60	74	0.20	12.60	79
G003944		0.104	0.16	1.20	66	0.16	10.75	81
G003945		0.110	0.10	0.68	81	0.16	6.20	93
G003946		0.101	0.07	0.41	87	0.10	4.33	76
G003947		0.123	0.08	0.39	116	0.14	5.09	93
G003948		0.139	0.13	0.59	115	0.11	7.42	105
G003949		0.213	0.20	0.52	136	0.15	8.50	74
G003950		0.210	0.21	0.56	136	0.16	8.97	74
G003951		0.237	0.24	0.33	141	0.11	6.08	109
G003952		0.182	0.15	0.30	78	0.11	6.09	86
G003953		0.167	0.16	0.46	98	0.14	11.60	90
G003954		0.119	0.08	0.31	81	0.14	4.45	82
G003955		0.111	0.10	0.31	93	0.13	4.74	76
G003956		0.121	0.11	0.19	85	0.13	3.95	70
G003957		0.118	0.11	0.61	81	0.17	6.74	146
G003958		0.093	0.09	0.48	67	0.12	5.81	106
G003959		0.116	0.09	0.26	88	0.12	4.59	130
G003960		0.088	0.12	0.52	80	0.16	11.55	123
G003961		0.083	0.11	0.62	68	0.14	6.01	88
G003962		0.114	0.18	0.74	72	0.20	9.61	69
G003963		0.097	0.14	1.11	65	0.12	12.00	73
G003964		0.089	0.12	1.09	66	0.13	10.45	77
G003965		0.077	0.12	1.34	61	0.13	11.85	75
G003966		0.074	0.11	1.30	55	0.12	10.65	53
G003967		0.075	0.11	0.86	59	0.13	6.85	72
G003968		0.119	0.09	0.49	88	0.29	3.88	45
G003969		0.045	0.04	0.22	26	0.07	0.84	12
G003970		0.041	0.03	0.17	22	0.06	0.74	10
G003971		0.117	0.09	0.80	74	0.17	6.38	67
G003972		0.102	0.11	1.18	70	0.14	8.04	60
G003973		0.110	0.10	0.74	75	0.18	6.28	59
G003974		0.122	0.17	0.99	83	0.14	9.28	91
G003975		0.152	0.17	0.80	73	0.77	8.52	61
G003976		0.087	0.08	0.50	51	0.12	2.49	32
G003977		0.125	0.17	0.94	71	0.15	5.72	67
G003978		0.113	0.17	1.19	70	0.15	5.32	55

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003979		0.40	<0.005	0.14	2.04	4.4	<0.2	<10	190	0.27	0.12	0.43	0.13	18.85	12.7	52
G003980		0.06	<0.005	0.01	<0.01	0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.10	0.1	<1
G003981		0.40	<0.005	0.05	1.33	3.9	<0.2	<10	90	0.17	0.20	0.25	0.08	12.50	7.5	36
G003982		0.28	<0.005	0.07	1.77	4.7	<0.2	<10	120	0.28	0.11	0.39	0.13	19.90	12.6	38
G003983		0.46	<0.005	0.11	2.20	5.6	<0.2	<10	160	0.42	0.14	0.46	0.09	23.80	11.3	44
G003984		0.28	<0.005	0.12	1.72	8.1	<0.2	<10	140	0.29	0.14	0.51	0.14	20.80	8.0	35
C271151		0.44	<0.005	0.11	3.69	2.7	<0.2	<10	350	0.42	0.08	0.61	0.17	9.68	23.7	84
C271152		0.48	<0.005	0.11	2.80	6.1	<0.2	<10	120	0.38	0.11	0.44	0.11	15.15	18.0	50
C271153		0.34	<0.005	0.10	3.31	2.8	<0.2	<10	220	0.27	0.07	0.61	0.22	11.95	21.8	30
C271154		0.48	<0.005	0.20	2.87	5.0	<0.2	<10	160	0.33	0.11	0.56	0.40	20.60	20.0	41
C271155		0.52	0.005	0.29	2.69	5.5	<0.2	<10	160	0.39	0.16	0.48	0.37	36.40	21.2	140
C271156		0.42	0.005	0.53	1.96	5.8	<0.2	<10	180	0.28	0.20	0.71	0.78	34.90	16.8	41
C271157		0.36	0.010	0.75	2.52	8.0	<0.2	<10	180	0.37	0.59	0.88	0.47	51.70	22.7	42
C271158		0.46	0.005	0.41	2.62	5.3	<0.2	<10	150	0.35	0.32	1.05	0.50	29.20	22.7	44
C271159		0.40	0.008	0.25	2.31	8.8	<0.2	<10	150	0.33	0.18	1.12	0.36	32.20	17.2	47
C271160		0.04	0.006	0.01	<0.01	0.2	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.18	0.1	<1
C271161		0.36	<0.005	0.24	1.73	8.3	<0.2	<10	160	0.28	0.19	1.44	0.55	37.60	15.3	34
C271162		0.30	<0.005	0.08	0.16	0.7	<0.2	<10	10	<0.05	0.03	0.06	0.05	3.36	0.7	6
C271163		0.36	0.011	0.56	1.76	16.9	<0.2	<10	220	0.39	0.21	1.89	1.00	119.50	17.2	38
C271164		0.32	0.005	0.22	2.26	6.7	<0.2	<10	180	0.24	0.16	0.89	0.62	29.70	18.3	43
C271165		0.40	0.006	0.17	2.31	2.1	<0.2	<10	140	0.17	0.14	0.66	0.31	20.00	10.2	45
C271166		0.36	0.005	0.16	0.85	3.6	<0.2	<10	30	0.13	0.11	0.07	0.05	8.50	3.7	14
C271167		0.36	<0.005	0.09	0.19	1.1	<0.2	<10	20	<0.05	0.05	0.05	0.04	2.58	1.6	4
C271168		0.36	0.008	0.08	1.73	4.8	<0.2	<10	100	0.19	0.15	0.45	0.13	16.20	8.4	32
C271169		0.44	0.005	0.14	1.74	6.0	<0.2	<10	100	0.25	0.13	0.33	0.11	16.35	7.3	31
C271170		0.40	0.005	0.05	1.33	4.3	<0.2	<10	70	0.16	0.12	0.23	0.11	11.15	6.3	27
C271171		0.42	<0.005	0.04	1.32	5.3	<0.2	<10	80	0.14	0.13	0.25	0.12	11.40	8.2	28
C271172		0.36	<0.005	0.10	1.61	3.9	<0.2	<10	170	0.22	0.10	0.77	0.24	22.90	13.3	35
C271173		0.44	<0.005	0.14	2.38	7.0	<0.2	<10	230	0.37	0.10	0.66	0.24	31.00	22.1	69
C271174		0.34	<0.005	0.10	1.55	4.4	<0.2	<10	150	0.26	0.09	0.47	0.15	24.90	11.3	37
C271175		0.38	<0.005	0.12	1.83	5.9	<0.2	<10	190	0.24	0.12	0.49	0.08	18.45	15.1	47
C271176		0.32	<0.005	0.14	1.96	4.3	<0.2	<10	160	0.27	0.13	0.32	0.11	16.35	12.1	51
C271177		0.38	<0.005	0.18	2.03	4.6	<0.2	<10	180	0.30	0.16	0.43	0.21	17.85	13.8	50
C271178		0.38	<0.005	0.07	2.39	4.4	<0.2	<10	180	0.45	0.14	0.35	0.10	18.70	15.7	53
C271179		0.46	<0.005	0.10	2.62	9.5	<0.2	<10	190	0.53	0.12	0.50	0.10	26.90	14.7	49
C271180		0.42	<0.005	0.14	1.50	5.1	<0.2	<10	130	0.31	0.13	0.42	0.09	14.65	9.6	36
C271181		0.48	0.016	0.11	1.93	4.5	<0.2	<10	190	0.42	0.11	1.09	0.15	23.50	12.0	36
C271182		0.40	<0.005	0.08	1.73	3.9	<0.2	<10	150	0.32	0.12	0.36	0.08	14.95	9.3	35
C271183		0.28	<0.005	0.09	1.55	4.6	<0.2	<10	160	0.23	0.12	0.49	0.14	15.25	11.2	33
C271184		0.38	<0.005	0.07	1.35	3.6	<0.2	<10	120	0.19	0.08	0.37	0.12	15.85	6.8	27

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003979		1.79	19.9	3.01	7.27	0.10	0.03	0.04	0.018	0.23	9.2	13.8	0.91	369	0.84
G003980		<0.05	0.6	0.02	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05
G003981		1.40	14.0	2.26	6.57	0.08	<0.02	0.02	0.014	0.13	6.2	8.5	0.56	248	0.66
G003982		1.49	16.3	2.68	6.24	0.10	0.04	0.03	0.021	0.20	9.7	14.9	0.71	391	0.65
G003983		1.56	22.5	3.09	6.51	0.11	0.05	0.03	0.023	0.19	11.7	15.5	0.81	290	0.53
G003984		1.24	21.9	3.10	5.81	0.09	0.03	0.04	0.020	0.09	10.7	10.7	0.58	276	0.93
C271151		1.30	51.0	4.90	9.43	0.14	0.10	0.01	0.011	0.69	4.8	13.0	3.21	664	0.44
C271152		0.98	24.9	3.89	7.60	0.11	0.04	0.03	0.020	0.13	7.1	14.0	1.68	439	0.62
C271153		1.29	35.8	4.58	8.78	0.13	0.04	0.02	0.017	0.57	5.3	13.6	2.34	781	0.43
C271154		0.88	45.2	3.98	7.62	0.11	0.06	0.04	0.023	0.16	9.3	12.9	1.77	604	0.53
C271155		0.80	45.9	4.24	6.72	0.13	0.06	0.05	0.030	0.07	16.0	11.3	1.85	1065	1.10
C271156		0.91	38.3	3.34	5.72	0.08	0.06	0.06	0.027	0.05	16.7	10.5	0.93	873	2.16
C271157		2.26	78.0	3.68	6.65	0.12	0.09	0.08	0.033	0.05	27.6	12.1	1.33	954	1.77
C271158		1.20	85.2	3.85	6.10	0.10	0.06	0.06	0.024	0.13	13.7	10.9	1.64	927	1.47
C271159		1.44	46.4	3.43	6.18	0.10	0.06	0.04	0.025	0.06	15.3	10.4	1.51	852	1.12
C271160		<0.05	0.6	0.02	<0.05	<0.05	<0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	0.08
C271161		0.83	40.4	2.80	4.84	0.09	0.06	0.05	0.021	0.05	17.0	8.4	0.90	1005	1.34
C271162		0.28	4.5	0.35	1.15	<0.05	<0.02	0.03	<0.005	0.02	1.7	0.4	0.03	23	0.33
C271163		0.95	60.9	3.68	5.19	0.17	0.07	0.09	0.026	0.05	63.4	7.9	0.67	1305	2.90
C271164		0.85	30.0	4.26	5.69	0.11	0.04	0.05	0.020	0.08	14.2	9.6	1.44	1750	1.02
C271165		0.85	27.3	2.72	5.55	0.07	0.04	0.06	0.016	0.05	10.4	9.3	1.49	310	0.62
C271166		0.55	12.0	1.72	4.62	<0.05	<0.02	0.05	0.012	0.02	3.7	4.3	0.18	105	0.85
C271167		0.17	5.9	0.75	1.86	<0.05	<0.02	0.03	<0.005	0.01	1.3	0.5	0.03	39	0.49
C271168		0.87	11.9	2.89	5.97	0.07	0.04	0.03	0.026	0.05	7.8	9.6	0.60	277	0.87
C271169		0.81	14.7	2.13	6.12	0.08	0.05	0.03	0.023	0.04	8.3	12.1	0.55	152	0.46
C271170		0.53	10.5	1.79	6.47	0.07	0.03	0.03	0.019	0.04	6.0	8.7	0.43	218	0.68
C271171		0.50	10.1	1.95	6.22	0.07	0.04	0.03	0.018	0.04	6.0	8.7	0.46	331	0.83
C271172		0.66	21.3	2.03	5.07	0.10	0.03	0.03	0.018	0.04	12.0	9.0	0.88	690	1.07
C271173		1.59	29.5	3.11	7.82	0.12	0.04	0.05	0.025	0.15	15.3	17.0	1.07	793	0.83
C271174		1.38	17.0	2.13	5.75	0.11	0.03	0.06	0.018	0.18	12.8	11.6	0.62	316	0.74
C271175		1.63	21.3	2.75	6.69	0.11	0.03	0.04	0.018	0.16	10.1	15.8	0.82	413	0.80
C271176		1.60	19.7	2.75	7.42	0.12	0.04	0.04	0.020	0.23	8.8	14.4	0.80	302	0.74
C271177		1.44	28.2	2.97	7.61	0.11	0.04	0.04	0.022	0.19	9.8	15.4	0.83	371	0.87
C271178		1.60	20.6	3.22	7.95	0.13	0.04	0.02	0.026	0.28	9.3	21.2	0.88	553	0.70
C271179		1.67	24.4	3.20	7.72	0.13	0.05	0.04	0.026	0.18	13.9	20.8	0.84	272	0.55
C271180		0.98	19.8	2.40	5.95	0.09	0.03	0.05	0.018	0.07	8.0	9.8	0.52	338	1.19
C271181		1.44	25.4	2.47	6.29	0.11	0.05	0.04	0.022	0.11	12.6	14.8	0.69	505	0.81
C271182		1.17	15.1	2.32	6.32	0.09	0.03	0.02	0.020	0.07	7.8	12.9	0.61	258	0.70
C271183		1.13	12.4	2.26	5.91	0.08	0.03	0.03	0.019	0.06	8.2	11.0	0.59	390	1.07
C271184		0.88	10.4	1.79	4.96	0.08	0.03	0.04	0.017	0.05	8.2	9.6	0.52	164	0.40

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003979		1.49	26.2	570	5.5	31.8	<0.001	0.05	0.18	4.3	0.5	0.6	26.7	<0.01	0.03
G003980		<0.05	0.3	10	0.4	0.2	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01
G003981		1.37	17.9	330	5.1	20.8	<0.001	0.03	0.17	3.1	0.4	0.6	18.5	<0.01	0.04
G003982		1.83	24.1	550	8.0	26.7	<0.001	0.02	0.24	4.4	0.5	0.5	26.0	<0.01	0.03
G003983		1.95	25.4	600	6.6	27.2	<0.001	0.04	0.28	5.0	0.8	0.6	29.0	<0.01	0.04
G003984		1.54	20.5	770	7.0	14.0	<0.001	0.08	0.30	3.3	0.8	0.5	31.4	<0.01	0.05
C271151		0.58	35.1	750	2.9	40.2	<0.001	0.02	0.28	6.5	0.5	0.4	19.8	<0.01	0.06
C271152		1.25	27.1	620	5.8	16.0	<0.001	0.02	0.27	4.4	0.5	0.5	20.0	<0.01	0.04
C271153		0.82	19.4	730	8.7	35.3	<0.001	0.02	0.21	6.8	0.3	0.4	21.8	<0.01	0.03
C271154		0.91	22.8	650	10.3	17.8	<0.001	0.04	0.28	6.8	0.6	0.4	22.3	<0.01	0.03
C271155		0.69	85.4	610	12.2	9.3	<0.001	0.04	0.26	8.6	0.8	0.4	20.2	<0.01	0.19
C271156		0.83	35.6	800	23.8	8.6	<0.001	0.06	0.34	4.7	1.2	0.4	37.8	<0.01	0.16
C271157		0.90	31.1	850	14.0	9.4	<0.001	0.08	0.43	6.8	2.1	0.5	47.6	0.01	0.35
C271158		0.98	29.2	660	9.9	16.0	<0.001	0.07	0.28	6.7	1.3	0.4	29.5	<0.01	0.21
C271159		0.88	34.8	670	7.6	11.5	<0.001	0.08	0.26	5.5	1.2	0.4	40.2	<0.01	0.08
C271160		<0.05	0.3	10	0.5	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01
C271161		0.92	30.2	730	9.7	10.6	<0.001	0.09	0.28	4.2	1.3	0.4	48.5	<0.01	0.07
C271162		0.10	2.4	290	1.8	1.3	<0.001	0.03	0.06	0.3	0.2	0.2	7.3	<0.01	0.02
C271163		0.98	37.8	1110	13.3	11.9	0.001	0.20	0.44	3.7	3.1	0.5	80.1	0.01	0.10
C271164		0.75	30.1	820	8.1	11.8	<0.001	0.08	0.23	5.1	1.1	0.4	33.9	<0.01	0.08
C271165		0.81	25.7	740	7.6	8.2	<0.001	0.10	0.18	4.5	0.8	0.4	26.7	<0.01	0.03
C271166		0.89	7.8	260	5.4	3.8	<0.001	0.03	0.23	1.5	0.5	0.4	7.8	<0.01	0.03
C271167		0.28	2.3	190	1.7	1.4	<0.001	0.02	0.13	0.6	0.2	0.2	6.5	<0.01	0.02
C271168		1.48	18.5	510	8.1	8.4	<0.001	0.03	0.35	3.8	0.5	0.6	26.2	<0.01	0.03
C271169		1.69	21.0	600	7.9	7.4	<0.001	0.03	0.34	4.1	0.7	0.4	24.1	<0.01	0.03
C271170		1.35	14.7	370	7.1	4.0	<0.001	0.03	0.26	2.8	0.5	0.5	18.1	<0.01	0.03
C271171		1.37	15.2	410	6.8	4.3	<0.001	0.03	0.25	2.9	0.6	0.5	20.0	<0.01	0.03
C271172		0.93	31.7	520	5.2	8.6	0.001	0.08	0.31	3.7	0.9	0.3	38.6	<0.01	0.04
C271173		2.18	48.2	750	7.1	26.7	<0.001	0.06	0.25	5.6	1.0	0.6	37.3	<0.01	0.04
C271174		1.50	23.6	580	5.7	24.8	<0.001	0.05	0.23	3.4	0.8	0.5	32.0	<0.01	0.03
C271175		1.65	29.2	420	7.0	29.1	<0.001	0.04	0.22	3.9	0.7	0.5	29.3	<0.01	0.04
C271176		1.78	28.0	570	6.1	30.9	<0.001	0.05	0.19	4.5	0.8	0.6	24.4	<0.01	0.04
C271177		1.75	30.2	580	21.6	28.9	<0.001	0.05	0.21	4.7	0.8	0.6	30.9	<0.01	0.04
C271178		2.32	30.3	580	6.5	33.4	<0.001	0.03	0.21	5.4	0.8	0.7	25.7	<0.01	0.04
C271179		2.68	36.1	840	8.0	27.0	0.001	0.04	0.27	5.8	1.0	0.6	42.5	<0.01	0.04
C271180		1.61	22.7	650	5.8	14.0	<0.001	0.07	0.29	3.0	0.8	0.5	32.8	<0.01	0.05
C271181		1.84	26.1	860	5.9	24.4	<0.001	0.08	0.30	3.7	1.2	0.5	53.9	<0.01	0.04
C271182		1.86	21.0	540	5.6	11.4	<0.001	0.05	0.24	3.7	0.6	0.5	28.0	<0.01	0.03
C271183		1.69	20.5	610	6.1	10.1	<0.001	0.06	0.28	3.4	0.7	0.5	35.8	<0.01	0.03
C271184		1.44	17.1	490	5.0	7.6	<0.001	0.04	0.21	3.3	0.6	0.4	27.2	<0.01	0.02

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
G003979		0.139	0.18	0.82	77	0.17	4.64	66	0.9
G003980		<0.005	<0.02	0.09	<1	<0.05	0.67	2	0.5
G003981		0.117	0.12	0.47	61	0.22	2.85	48	0.6
G003982		0.123	0.17	0.71	62	0.16	5.51	62	1.7
G003983		0.131	0.17	1.25	70	0.30	6.62	63	1.8
G003984		0.092	0.12	1.21	82	0.17	5.83	49	1.1
C271151		0.232	0.23	0.22	125	0.20	6.27	88	3.4
C271152		0.153	0.11	0.39	86	0.15	4.59	62	1.7
C271153		0.206	0.19	0.27	124	0.10	4.93	95	1.5
C271154		0.133	0.12	0.47	98	0.14	9.27	108	1.8
C271155		0.098	0.10	0.66	88	0.23	14.75	121	1.7
C271156		0.068	0.10	1.10	60	0.20	10.70	110	1.9
C271157		0.061	0.15	1.65	63	0.15	22.80	93	2.3
C271158		0.094	0.15	0.65	66	0.13	19.95	86	1.6
C271159		0.087	0.11	1.19	65	0.09	13.35	84	1.9
C271160		<0.005	<0.02	0.08	<1	<0.05	0.69	2	0.5
C271161		0.069	0.10	1.36	54	0.12	11.95	78	1.8
C271162		0.017	0.03	0.22	9	<0.05	0.63	8	<0.5
C271163		0.056	0.13	2.93	67	0.13	30.70	84	1.6
C271164		0.075	0.11	1.07	67	0.13	12.25	107	1.3
C271165		0.082	0.08	0.77	56	0.11	7.62	87	1.2
C271166		0.062	0.06	0.34	40	0.12	2.07	23	0.5
C271167		0.037	0.02	0.18	22	0.05	0.51	11	<0.5
C271168		0.113	0.08	0.47	70	0.23	4.06	58	1.4
C271169		0.103	0.10	0.51	59	0.21	4.76	53	1.5
C271170		0.098	0.08	0.32	61	0.11	2.59	43	1.0
C271171		0.100	0.08	0.32	68	0.15	2.79	45	1.1
C271172		0.061	0.09	0.62	48	0.08	9.25	58	0.8
C271173		0.127	0.17	0.89	80	0.14	9.10	72	1.3
C271174		0.097	0.15	0.84	51	0.13	5.67	52	1.0
C271175		0.132	0.15	0.65	76	0.17	4.87	62	1.1
C271176		0.135	0.17	0.78	74	0.15	4.07	62	1.3
C271177		0.132	0.15	1.04	80	0.15	4.70	74	1.3
C271178		0.138	0.19	0.67	80	0.16	5.85	70	1.4
C271179		0.129	0.18	1.21	71	0.20	8.17	74	1.9
C271180		0.084	0.10	1.11	58	0.15	4.61	43	1.2
C271181		0.086	0.16	1.45	61	0.12	9.36	75	1.8
C271182		0.103	0.10	0.66	57	0.10	4.41	54	1.1
C271183		0.093	0.10	0.63	58	0.16	4.61	58	1.2
C271184		0.090	0.10	0.55	41	0.35	4.60	53	1.2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - A

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-AA23 Au ppm 0.005	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
C271185		0.32	0.005	0.07	1.12	3.2	<0.2	<10	80	0.13	0.10	0.23	0.10	12.35	4.4	24
C271186		0.38	<0.005	0.06	1.33	4.5	<0.2	<10	90	0.19	0.10	0.30	0.11	15.30	6.1	27
E796550	Not Recvd															
E796551		0.50	0.014	0.23	2.80	22.6	<0.2	<10	290	0.59	0.24	0.35	0.20	37.50	11.6	47
E796552		0.22	0.007	0.15	1.82	4.3	<0.2	<10	140	0.24	0.24	0.46	0.25	19.60	11.5	37
E796553		0.28	0.007	0.34	2.55	8.0	<0.2	<10	330	0.48	0.17	0.40	0.09	23.80	8.5	43
E796554		0.42	0.013	0.27	2.91	12.0	<0.2	<10	270	0.55	0.22	0.37	0.17	33.80	14.4	56
E796555		0.38	0.121	0.25	2.84	382.0	<0.2	<10	260	0.64	0.23	0.36	0.19	27.40	14.0	46
E796556		0.34	<0.005	0.15	2.43	8.1	<0.2	<10	530	0.55	0.21	0.36	0.23	28.30	11.8	45
E796557		0.46	0.044	0.34	3.33	45.3	<0.2	<10	370	0.78	0.23	0.42	0.23	45.60	13.6	63
E796558		0.32	<0.005	0.32	3.05	4.4	<0.2	<10	380	0.55	0.19	0.53	0.26	19.75	16.9	58
E796559		0.30	<0.005	0.06	2.05	6.9	<0.2	<10	140	0.27	0.15	0.23	0.11	25.10	10.7	39
E796560		0.52	0.007	0.14	2.89	18.7	<0.2	<10	380	0.69	0.20	0.43	0.16	41.20	15.3	57

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - B

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
C271185		0.87	9.2	1.52	5.35	0.08	0.02	0.03	0.014	0.04	6.5	6.3	0.38	113	0.50	0.02
C271186		0.77	9.1	1.73	5.38	0.09	0.03	0.03	0.021	0.04	7.9	8.9	0.49	154	0.50	0.03
E796550																
E796551		1.58	32.4	3.44	9.56	0.13	0.02	0.05	0.031	0.12	17.7	13.8	1.02	426	1.23	0.03
E796552		0.74	23.4	2.44	6.14	0.09	0.04	0.04	0.023	0.07	10.2	8.7	0.81	417	0.94	0.03
E796553		1.15	24.5	2.20	8.21	0.09	0.03	0.05	0.027	0.08	13.7	12.2	0.67	258	0.72	0.03
E796554		1.44	31.8	3.61	8.98	0.12	0.04	0.04	0.032	0.21	17.4	13.8	0.95	307	1.17	0.02
E796555		1.19	40.0	3.63	7.99	0.11	0.06	0.04	0.030	0.13	13.8	13.6	0.89	424	1.06	0.02
E796556		1.25	38.2	2.72	7.22	0.11	0.03	0.03	0.024	0.17	14.6	9.9	0.76	337	1.15	0.03
E796557		2.17	52.3	3.78	9.43	0.16	0.05	0.05	0.037	0.29	29.7	15.4	1.10	308	1.04	0.03
E796558		1.33	28.8	3.16	9.35	0.11	0.03	0.04	0.031	0.15	10.3	12.8	1.20	823	2.89	0.06
E796559		2.50	11.0	3.10	8.06	0.09	0.11	0.03	0.027	0.09	14.6	14.4	0.59	448	1.08	0.02
E796560		1.67	39.1	3.46	8.31	0.14	0.08	0.02	0.032	0.23	19.6	12.8	1.00	412	1.11	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - C

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
C271185		1.28	12.7	330	5.2	8.3	<0.001	0.04	0.21	2.5	0.5	0.5	20.9	<0.01	0.02	0.4
C271186		1.50	16.0	410	5.5	10.0	<0.001	0.03	0.27	3.3	0.6	0.5	24.8	<0.01	0.02	0.9
E796550																
E796551		1.94	30.1	680	9.4	18.4	<0.001	0.03	0.64	5.7	1.1	0.7	22.6	<0.01	0.12	1.9
E796552		1.37	20.8	470	9.2	11.4	<0.001	0.04	0.26	5.0	0.7	0.5	30.3	<0.01	0.07	1.2
E796553		1.68	29.9	900	8.5	12.9	<0.001	0.08	0.73	4.2	0.9	0.6	30.8	<0.01	0.04	0.6
E796554		2.56	36.1	1020	12.5	26.9	<0.001	0.04	1.14	7.1	1.3	0.7	22.6	<0.01	0.11	3.1
E796555		2.40	41.0	820	9.9	18.4	<0.001	0.03	5.27	6.5	1.1	0.6	22.0	<0.01	0.08	2.8
E796556		1.55	33.2	800	7.0	18.9	<0.001	0.04	0.56	4.4	1.2	0.5	28.3	<0.01	0.05	0.6
E796557		2.13	53.0	910	15.3	38.2	<0.001	0.02	14.80	8.5	1.5	0.8	23.3	<0.01	0.11	5.6
E796558		1.14	32.4	930	9.9	27.8	0.001	0.09	0.40	5.3	1.8	0.5	37.5	<0.01	0.05	0.4
E796559		3.51	17.6	360	10.2	23.3	<0.001	0.02	0.36	4.6	0.7	0.7	19.0	<0.01	0.03	5.7
E796560		1.89	37.4	780	11.5	31.5	<0.001	0.02	2.24	8.8	1.4	0.7	29.1	<0.01	0.08	3.8

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - D

Total # Pages: 7 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074506

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
C271185		0.079	0.11	0.46	32	0.37	2.92	40	0.7
C271186		0.094	0.12	0.52	43	0.21	4.02	50	1.0
E796550									
E796551		0.112	0.17	0.97	83	0.18	10.30	70	0.7
E796552		0.083	0.09	0.80	62	0.12	6.21	56	1.4
E796553		0.090	0.14	1.10	59	0.13	7.75	63	1.3
E796554		0.123	0.17	1.11	87	0.15	9.70	82	1.5
E796555		0.109	0.14	0.79	77	0.20	8.12	67	2.2
E796556		0.103	0.12	1.41	72	0.26	9.10	63	0.9
E796557		0.129	0.23	1.63	93	0.19	20.40	101	1.5
E796558		0.090	0.19	0.92	99	0.13	7.63	100	1.3
E796559		0.151	0.25	0.76	74	0.14	5.50	62	3.6
E796560		0.143	0.20	1.69	96	0.16	13.80	88	3.2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 9-AUG-2007

Account: EIANGX

CERTIFICATE VA07074507

Project: North Dawson

P.O. No.: NGX07-02

This report is for 124 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002374		0.40	0.011	0.16	1.47	3.9	<0.2	<10	130	0.20	0.14	1.36	0.30	12.65	12.3	30
G002375		0.38	0.009	0.13	2.09	4.6	<0.2	<10	160	0.28	0.10	1.36	0.31	20.70	19.6	42
G002376		0.42	0.014	0.15	2.09	4.3	<0.2	<10	150	0.31	0.10	1.40	0.54	16.45	18.5	38
G002377		0.42	0.007	0.08	1.93	3.2	<0.2	<10	140	0.19	0.11	1.17	0.45	9.33	17.4	34
G002378		0.44	0.013	0.19	2.06	3.7	<0.2	<10	250	0.22	0.10	1.91	0.56	14.90	15.7	43
G002379		0.38	0.007	0.21	2.16	3.6	<0.2	<10	270	0.22	0.09	1.70	0.69	12.45	16.2	51
G002380		0.34	0.014	0.18	2.45	3.8	<0.2	<10	290	0.19	0.09	1.84	0.78	13.50	19.7	64
G002381		0.42	0.008	0.14	2.33	3.6	<0.2	<10	150	0.19	0.10	1.17	0.79	13.95	19.2	67
G002382		0.32	0.005	0.11	2.31	4.1	<0.2	<10	210	0.30	0.16	1.04	0.33	26.50	16.9	76
G002383		0.32	0.015	0.18	1.69	3.2	<0.2	<10	220	0.17	0.06	2.35	0.61	12.10	13.2	43
G002384		0.40	0.012	0.17	2.46	3.7	<0.2	<10	230	0.23	0.08	1.46	0.49	12.75	19.0	64
G002385		0.24	0.011	0.20	2.27	3.5	<0.2	<10	230	0.20	0.07	1.70	0.50	12.10	17.9	52
G002386		0.30	0.014	0.29	2.09	3.6	<0.2	<10	180	0.23	0.11	1.55	0.98	17.05	19.9	39
G002387		0.30	0.006	0.14	1.95	3.7	<0.2	<10	140	0.19	0.10	1.73	0.37	10.75	16.0	36
G002388		0.36	0.017	0.10	1.78	4.1	<0.2	<10	100	0.18	0.09	1.33	0.24	11.15	15.7	33
G002389		0.32	0.010	0.09	1.95	4.2	<0.2	<10	120	0.18	0.14	1.53	0.39	12.30	18.3	35
G002390		0.30	0.005	0.09	1.97	4.3	<0.2	<10	120	0.17	0.15	1.39	0.37	12.85	17.4	35
G002391		0.38	0.012	0.15	2.71	4.3	<0.2	<10	190	0.24	0.10	0.75	0.31	18.60	22.7	50
G002392		0.38	0.014	0.24	2.23	5.4	<0.2	<10	270	0.25	0.16	0.99	0.35	16.85	15.7	67
G002393		0.34	0.019	0.75	1.20	5.2	<0.2	<10	240	0.36	0.14	1.89	0.84	36.00	10.1	18
G002394		0.30	0.018	0.72	0.69	2.6	0.2	<10	100	0.17	0.09	1.14	0.54	16.60	3.3	16
G002395		0.28	0.025	0.72	1.19	4.2	<0.2	<10	140	0.28	0.14	1.48	1.01	33.50	9.6	19
G002396		0.28	<0.005	0.44	0.53	3.1	<0.2	<10	20	0.06	0.09	0.09	0.24	5.46	3.9	13
G002397		0.34	0.033	0.47	1.49	5.6	<0.2	<10	120	0.29	0.39	1.10	0.14	19.45	10.4	24
G002398		0.42	0.009	0.33	2.20	7.4	<0.2	<10	190	0.33	0.23	0.41	0.32	30.10	22.6	44
G002399		0.34	0.011	0.43	2.23	15.1	<0.2	<10	220	0.34	0.29	0.77	0.28	32.50	17.9	56
G002400		0.06	<0.005	0.01	0.02	0.1	<0.2	<10	10	<0.05	<0.01	<0.01	<0.01	1.15	0.1	<1
G002401		0.30	0.007	0.32	0.81	3.9	<0.2	<10	60	0.18	0.11	0.13	0.20	8.64	4.4	15
G002402		0.40	0.006	0.08	1.59	9.7	<0.2	<10	50	0.23	0.23	0.08	0.15	16.80	6.1	26
G002403		0.36	0.045	0.20	0.93	4.2	<0.2	<10	60	0.16	0.18	0.07	0.12	10.80	3.5	18
G002404		0.52	0.008	0.05	2.10	6.0	<0.2	<10	100	0.35	0.19	0.16	0.24	76.90	20.1	32
G002405		0.32	0.013	0.08	2.70	8.1	<0.2	<10	150	0.49	0.14	0.27	0.20	37.40	20.2	44
G002406		0.34	0.008	0.16	1.07	4.3	<0.2	<10	90	0.26	0.16	0.12	0.47	13.95	5.0	18
G002407		0.42	0.005	0.10	1.53	12.7	<0.2	<10	90	0.22	0.19	0.18	0.44	19.00	7.9	30
G002408		0.26	0.022	0.35	0.81	2.7	<0.2	<10	120	0.22	0.11	0.52	0.20	36.30	12.5	15
G002409		0.28	0.021	0.26	0.88	4.5	<0.2	<10	80	0.16	0.18	0.16	0.19	12.60	4.5	16
G002410		0.42	0.010	0.06	0.18	0.5	<0.2	<10	20	<0.05	0.05	0.04	0.06	2.63	1.5	4
G002411		0.34	0.009	0.11	2.11	11.6	<0.2	<10	110	0.32	0.23	0.18	0.21	20.80	9.0	36
G002412		0.52	0.011	0.22	3.26	8.0	<0.2	<10	80	0.41	0.23	0.22	0.12	73.50	34.0	67
G002413		0.44	0.020	0.24	2.25	10.5	<0.2	<10	140	0.45	0.79	0.28	0.22	32.50	15.2	35

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002374		0.55	29.9	2.32	4.34	0.08	0.06	0.05	0.022	0.05	6.2	8.0	0.77	644	1.10
G002375		0.65	30.8	2.99	5.74	0.10	0.06	0.03	0.021	0.11	9.2	10.6	1.40	876	0.92
G002376		0.63	35.4	2.81	5.56	0.10	0.05	0.04	0.018	0.09	7.6	10.7	1.28	913	0.68
G002377		0.64	26.7	2.79	5.95	0.09	0.03	0.03	0.019	0.13	3.8	8.5	1.28	786	0.77
G002378		0.68	50.3	2.68	5.41	0.10	0.04	0.07	0.019	0.17	7.5	8.4	1.21	795	0.81
G002379		0.68	61.1	2.80	5.92	0.11	0.04	0.05	0.019	0.20	6.8	9.1	1.34	767	0.64
G002380		0.75	58.3	3.17	6.71	0.11	0.05	0.06	0.021	0.22	5.8	10.4	1.59	1000	0.72
G002381		0.72	40.6	3.23	6.84	0.12	0.04	0.03	0.021	0.20	5.4	10.5	1.59	788	0.61
G002382		1.13	28.1	2.99	7.09	0.14	0.05	0.03	0.023	0.30	12.6	13.3	1.46	926	0.65
G002383		0.58	62.3	2.22	4.52	0.10	0.04	0.07	0.015	0.14	7.6	7.7	1.11	678	0.67
G002384		0.72	58.7	3.26	6.72	0.12	0.05	0.05	0.022	0.24	6.1	11.0	1.71	822	0.62
G002385		0.71	55.6	3.09	5.97	0.11	0.04	0.04	0.017	0.23	6.1	9.8	1.53	860	0.52
G002386		0.65	53.1	3.03	5.80	0.11	0.05	0.05	0.024	0.15	7.9	10.4	1.37	1750	0.86
G002387		0.66	34.7	2.75	5.40	0.10	0.05	0.04	0.018	0.13	4.8	9.9	1.33	773	0.78
G002388		0.54	24.0	2.55	5.00	0.09	0.04	0.05	0.017	0.08	5.0	8.7	1.24	676	0.77
G002389		0.41	29.3	2.97	5.61	0.09	0.05	0.05	0.021	0.06	5.1	10.0	1.20	673	0.90
G002390		0.43	29.4	3.01	5.72	0.09	0.05	0.04	0.020	0.06	5.5	10.3	1.20	597	0.91
G002391		1.31	35.9	4.07	7.67	0.14	0.05	0.03	0.027	0.30	9.2	12.8	1.78	793	1.08
G002392		0.65	30.6	3.08	6.57	0.10	0.06	0.05	0.031	0.08	8.4	12.4	1.42	498	1.34
G002393		0.42	45.5	2.15	3.05	0.12	0.06	0.11	0.022	0.03	32.6	5.2	0.47	591	1.92
G002394		0.52	26.5	1.21	2.74	0.06	0.02	0.09	0.013	0.04	12.7	2.8	0.28	116	1.38
G002395		0.60	43.7	1.81	3.66	0.10	0.04	0.10	0.020	0.03	24.0	4.1	0.35	853	2.25
G002396		0.35	9.4	1.08	2.93	0.05	<0.02	0.06	0.008	0.03	2.8	1.4	0.13	83	1.04
G002397		0.64	60.8	2.06	4.66	0.08	0.04	0.09	0.024	0.03	10.6	7.1	0.46	422	3.47
G002398		1.01	50.3	3.87	6.81	0.11	0.02	0.06	0.030	0.05	16.0	11.7	1.12	978	2.24
G002399		2.50	48.5	3.72	7.27	0.13	0.04	0.05	0.026	0.14	21.7	11.0	1.30	603	2.24
G002400		<0.05	0.7	0.02	0.06	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	0.05
G002401		0.58	19.1	1.69	3.96	0.06	<0.02	0.04	0.013	0.03	4.1	3.5	0.18	104	1.00
G002402		1.22	18.2	3.56	9.58	0.10	0.02	0.04	0.028	0.04	7.9	10.3	0.28	202	2.18
G002403		0.67	20.8	1.73	6.58	0.07	<0.02	0.04	0.017	0.02	5.4	2.2	0.08	73	1.91
G002404		0.93	49.4	4.24	6.60	0.15	0.03	0.03	0.028	0.05	27.7	11.1	0.69	564	1.75
G002405		1.06	40.6	3.81	7.77	0.14	0.04	0.04	0.034	0.07	17.9	17.6	0.84	568	1.03
G002406		0.64	25.5	1.76	5.35	0.07	<0.02	0.06	0.017	0.05	7.0	4.1	0.15	468	1.41
G002407		1.01	21.6	3.88	9.98	0.11	0.03	0.03	0.025	0.05	7.3	8.4	0.38	298	1.84
G002408		0.82	22.9	1.44	3.44	0.13	0.02	0.06	0.016	0.04	55.8	2.9	0.16	808	1.10
G002409		0.67	20.1	1.60	4.68	0.06	<0.02	0.05	0.015	0.05	6.4	4.0	0.20	248	1.26
G002410		0.26	4.7	0.68	1.70	0.05	<0.02	0.02	<0.005	0.02	1.4	0.5	0.03	37	0.48
G002411		0.99	21.6	4.38	10.20	0.12	0.05	0.04	0.040	0.04	9.9	15.3	0.43	287	2.35
G002412		1.27	69.6	5.28	9.66	0.19	0.05	0.04	0.042	0.09	31.7	14.4	1.97	1060	0.88
G002413		0.71	91.9	3.19	6.16	0.14	0.06	0.04	0.039	0.04	16.0	13.2	0.80	553	1.64

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G002374		0.72	23.5	690	7.9	7.5	<0.001	0.09	0.28	4.2	1.0	0.2	41.9	<0.01	0.07	0.7
G002375		0.71	27.4	680	5.9	16.5	<0.001	0.09	0.26	5.1	1.2	0.3	34.4	<0.01	0.07	1.0
G002376		0.78	26.0	620	7.3	14.3	<0.001	0.09	0.29	4.4	1.1	0.3	31.1	<0.01	0.06	0.7
G002377		0.76	19.9	600	7.1	21.3	<0.001	0.08	0.20	4.6	0.9	0.3	25.8	<0.01	0.05	0.4
G002378		0.72	23.0	800	6.7	22.0	0.001	0.12	0.32	4.0	1.1	0.2	36.3	<0.01	0.05	0.3
G002379		0.73	26.2	670	7.4	23.1	<0.001	0.09	0.27	4.6	1.1	0.2	32.3	<0.01	0.06	0.4
G002380		0.78	31.0	670	8.3	25.0	<0.001	0.11	0.26	6.0	1.1	0.3	34.0	<0.01	0.07	0.5
G002381		0.82	29.5	490	9.9	24.4	<0.001	0.07	0.21	6.6	1.0	0.3	23.4	<0.01	0.06	0.6
G002382		1.66	34.8	730	10.7	33.0	<0.001	0.06	0.20	5.8	1.0	0.5	29.7	<0.01	0.06	3.1
G002383		0.58	23.0	780	4.8	16.0	<0.001	0.16	0.28	4.1	1.1	0.2	40.4	<0.01	0.05	0.4
G002384		0.70	31.2	590	5.8	22.7	<0.001	0.09	0.23	7.0	1.1	0.2	27.7	<0.01	0.06	0.6
G002385		0.66	26.9	570	5.7	23.1	<0.001	0.09	0.24	5.3	1.1	0.2	29.9	<0.01	0.06	0.6
G002386		0.63	26.9	610	11.7	20.5	<0.001	0.11	0.26	6.4	1.2	0.3	29.6	<0.01	0.10	0.8
G002387		0.69	24.2	600	6.2	19.0	<0.001	0.11	0.25	4.5	1.1	0.3	33.8	<0.01	0.06	0.7
G002388		0.63	22.9	590	7.6	12.4	<0.001	0.08	0.25	4.0	0.9	0.2	29.0	<0.01	0.05	0.7
G002389		0.71	22.9	720	10.9	8.1	<0.001	0.10	0.24	4.9	1.1	0.3	36.9	<0.01	0.07	0.6
G002390		0.73	23.1	700	11.1	7.8	<0.001	0.09	0.23	5.1	1.1	0.3	35.1	<0.01	0.07	0.7
G002391		0.76	33.8	430	8.3	30.7	<0.001	0.05	0.19	8.8	1.3	0.3	25.8	<0.01	0.08	1.7
G002392		0.73	47.5	570	11.3	10.1	<0.001	0.08	0.30	7.7	1.2	0.3	37.9	<0.01	0.08	1.5
G002393		0.48	23.1	1250	7.9	4.0	<0.001	0.18	0.39	2.8	2.2	0.2	66.1	0.01	0.10	0.6
G002394		0.47	12.0	980	4.9	5.1	<0.001	0.14	0.23	1.5	0.9	0.2	65.7	<0.01	0.04	<0.2
G002395		0.55	19.6	1170	10.5	5.4	<0.001	0.14	0.34	2.1	2.0	0.2	78.4	<0.01	0.07	0.3
G002396		0.36	7.2	570	3.3	2.3	<0.001	0.05	0.23	0.8	0.4	0.2	9.2	<0.01	0.04	<0.2
G002397		0.81	16.1	1080	5.6	5.3	<0.001	0.13	0.30	3.2	1.3	0.3	38.5	<0.01	0.17	0.4
G002398		0.69	40.1	670	10.1	11.3	<0.001	0.04	0.28	5.1	1.5	0.4	27.2	<0.01	0.10	1.8
G002399		0.95	49.3	600	11.5	20.8	<0.001	0.06	0.25	5.5	1.6	0.4	38.2	<0.01	0.09	2.2
G002400		<0.05	0.5	10	0.5	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01	0.2
G002401		0.67	13.5	330	5.2	6.3	<0.001	0.04	0.26	1.3	0.5	0.3	16.0	<0.01	0.04	0.3
G002402		1.36	15.1	360	14.1	9.3	<0.001	0.02	0.41	2.7	0.9	0.7	11.9	<0.01	0.09	1.7
G002403		0.80	10.5	380	8.4	3.7	<0.001	0.03	0.45	1.5	0.5	0.6	12.1	<0.01	0.04	0.2
G002404		0.90	53.5	550	14.2	9.6	<0.001	0.03	0.33	4.0	1.6	0.4	18.0	<0.01	0.10	7.1
G002405		1.44	39.0	600	15.0	12.2	<0.001	0.01	0.33	6.3	1.3	0.5	21.5	<0.01	0.08	3.1
G002406		0.42	14.7	490	6.9	4.8	<0.001	0.03	0.35	0.7	0.6	0.5	16.7	<0.01	0.04	<0.2
G002407		1.73	20.1	350	9.7	7.7	<0.001	0.02	0.53	3.0	0.9	0.6	17.5	<0.01	0.09	1.5
G002408		0.50	11.6	690	7.4	9.3	<0.001	0.07	0.23	1.1	0.9	0.3	30.9	<0.01	0.04	0.2
G002409		0.57	12.8	520	7.9	8.1	<0.001	0.05	0.34	1.2	0.6	0.4	17.3	<0.01	0.05	<0.2
G002410		0.16	2.5	120	1.4	1.6	<0.001	0.01	0.11	0.5	0.2	0.2	6.9	<0.01	0.02	<0.2
G002411		1.91	21.4	390	15.3	6.8	<0.001	0.03	0.48	4.0	1.4	0.6	21.4	0.01	0.10	2.3
G002412		1.03	55.1	880	18.8	14.1	<0.001	0.02	0.22	9.2	1.7	0.4	11.4	0.01	0.10	6.2
G002413		1.16	26.6	470	9.3	6.4	<0.001	0.01	0.35	8.5	1.2	0.5	21.9	<0.01	0.49	2.6

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002374		0.058	0.08	0.58	49	0.07	6.47	60
G002375		0.086	0.14	0.49	68	0.08	11.05	62
G002376		0.083	0.11	0.41	61	0.12	9.10	70
G002377		0.090	0.11	0.33	68	0.07	3.99	72
G002378		0.083	0.13	0.41	68	0.07	11.20	65
G002379		0.094	0.13	0.37	74	0.08	10.30	64
G002380		0.103	0.14	0.35	84	0.16	9.10	95
G002381		0.108	0.12	0.36	87	0.08	7.40	82
G002382		0.139	0.20	1.41	76	0.15	8.04	78
G002383		0.066	0.11	0.33	61	0.06	11.95	58
G002384		0.104	0.13	0.35	92	0.07	9.39	87
G002385		0.108	0.14	0.34	81	0.07	8.73	83
G002386		0.084	0.12	0.53	70	0.09	10.95	80
G002387		0.079	0.11	0.43	63	0.08	5.59	76
G002388		0.069	0.08	0.40	55	<0.05	5.05	69
G002389		0.071	0.07	0.47	65	<0.05	4.87	75
G002390		0.075	0.08	0.50	66	<0.05	5.20	75
G002391		0.149	0.21	0.47	107	<0.05	9.09	95
G002392		0.074	0.08	0.73	76	<0.05	7.65	99
G002393		0.026	0.06	1.61	29	<0.05	28.20	50
G002394		0.030	0.06	0.88	22	<0.05	5.29	33
G002395		0.034	0.08	1.26	30	<0.05	15.05	50
G002396		0.036	0.04	0.28	28	<0.05	1.28	17
G002397		0.048	0.07	1.23	43	<0.05	13.00	40
G002398		0.064	0.09	0.98	68	<0.05	9.47	92
G002399		0.101	0.16	1.40	72	<0.05	10.80	103
G002400		<0.005	<0.02	0.11	<1	<0.05	0.71	3
G002401		0.059	0.06	0.37	40	<0.05	1.89	28
G002402		0.088	0.12	0.53	85	<0.05	3.47	42
G002403		0.070	0.08	0.46	62	<0.05	1.97	25
G002404		0.070	0.09	1.44	53	<0.05	13.65	75
G002405		0.124	0.11	0.80	77	<0.05	11.70	74
G002406		0.040	0.06	0.42	49	<0.05	3.07	43
G002407		0.136	0.10	0.49	103	<0.05	3.28	50
G002408		0.039	0.09	0.94	28	<0.05	18.85	26
G002409		0.051	0.07	0.41	44	<0.05	2.32	32
G002410		0.034	0.03	0.11	21	<0.05	0.41	14
G002411		0.105	0.10	0.73	86	<0.05	3.80	48
G002412		0.089	0.15	0.60	80	<0.05	22.00	85
G002413		0.109	0.06	0.53	68	<0.05	18.65	57

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002414		0.38	0.012	0.23	1.76	10.2	<0.2	<10	80	0.31	0.19	0.11	0.28	18.65	7.5	28
G002415		0.38	0.008	0.15	1.08	6.3	<0.2	<10	50	0.14	0.13	0.09	0.12	9.89	4.2	19
G002416		0.48	0.014	0.26	2.09	8.2	<0.2	<10	170	0.44	0.20	0.30	0.20	40.30	13.2	40
G002417		0.44	0.011	0.34	2.07	7.0	<0.2	<10	170	0.29	0.15	0.80	0.42	33.20	21.2	35
G002418		0.46	0.060	0.12	2.46	4.6	<0.2	<10	100	0.24	0.16	0.51	0.17	15.50	20.5	43
G002419		0.28	0.010	0.11	1.44	2.8	<0.2	<10	150	0.16	0.09	0.71	0.42	7.53	16.3	28
G002420		0.46	0.010	0.14	2.46	3.7	<0.2	<10	220	0.30	0.11	0.96	0.68	11.35	21.3	52
G002421		0.36	0.011	0.16	2.40	3.8	<0.2	<10	220	0.26	0.11	0.97	0.62	11.30	21.3	50
G002422		0.46	0.012	0.13	1.94	3.5	<0.2	<10	200	0.26	0.11	1.10	0.67	14.50	15.8	36
G002423		0.40	0.007	0.12	2.15	4.1	<0.2	<10	210	0.25	0.10	1.56	0.68	14.60	16.3	37
G002424		0.44	0.013	0.26	2.75	3.4	<0.2	<10	230	0.26	0.09	1.16	0.57	10.55	21.4	57
G002425		0.38	0.018	0.20	2.42	3.4	<0.2	<10	270	0.18	0.08	1.81	0.82	9.95	17.8	58
G002426		0.36	0.027	0.19	2.36	3.6	<0.2	<10	260	0.24	0.09	1.89	1.78	12.55	17.2	54
G002427		0.40	0.010	0.16	1.39	2.4	<0.2	<10	250	0.16	0.06	1.65	0.57	8.74	10.4	38
G002428		0.34	0.014	0.19	2.46	3.0	<0.2	<10	230	0.22	0.09	1.07	0.32	11.90	18.6	69
G002429		0.24	0.035	0.17	1.13	2.2	<0.2	<10	270	0.17	0.05	3.04	0.58	10.45	9.1	27
G002430		0.36	0.026	0.17	1.23	2.7	<0.2	<10	290	0.21	0.06	2.77	0.58	10.50	10.1	30
G002431		0.42	0.010	0.14	2.15	3.1	<0.2	<10	220	0.18	0.06	0.68	0.40	9.75	17.4	54
G002432		0.30	0.019	0.25	2.63	3.8	<0.2	<10	310	0.28	0.09	1.70	0.61	13.55	18.6	67
G002433		0.34	0.012	0.22	2.37	3.5	<0.2	<10	240	0.25	0.09	0.99	0.55	14.35	17.7	46
G002434		0.42	0.021	0.28	1.90	4.0	<0.2	<10	220	0.28	0.12	0.81	0.85	16.60	16.9	35
G002435		0.26	0.005	0.18	2.25	4.7	<0.2	<10	140	0.19	0.14	0.37	0.23	9.36	27.4	42
G002436		0.44	0.007	0.10	2.94	3.6	<0.2	<10	160	0.32	0.10	0.33	0.19	9.05	21.1	58
G002437		0.52	0.009	0.12	3.11	3.8	<0.2	<10	230	0.40	0.09	0.44	0.13	17.35	23.4	64
G002438		0.46	0.010	0.10	2.34	4.2	<0.2	<10	170	0.34	0.10	0.43	0.10	21.30	23.8	44
G002439		0.48	0.008	0.09	2.68	4.0	<0.2	<10	140	0.25	0.13	0.57	0.25	10.75	21.1	53
G002440		0.04	0.007	0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.10	0.1	<1
G002441		0.56	0.010	0.16	3.15	2.7	<0.2	<10	120	0.28	0.10	0.27	0.12	17.45	24.5	54
G002442		0.94	0.019	0.09	1.46	3.0	<0.2	<10	130	0.39	0.14	0.98	0.13	30.90	20.0	52
G002443		0.50	0.013	0.11	1.39	11.1	<0.2	<10	70	0.23	0.23	0.14	0.36	20.50	11.5	31
G002444		0.46	0.014	0.27	1.18	8.1	<0.2	<10	60	0.15	0.29	0.21	0.47	16.20	8.7	39
G002445		0.56	0.013	0.13	2.17	9.7	<0.2	<10	100	0.20	0.55	0.37	0.19	13.40	13.2	36
G002446		0.56	0.010	0.22	2.48	9.8	<0.2	<10	90	0.33	0.26	0.39	0.22	51.50	36.0	39
G002447		0.28	0.026	0.56	1.21	4.5	<0.2	<10	280	0.30	0.17	1.42	0.40	30.00	12.0	21
G002448		0.38	0.027	0.24	2.02	14.6	<0.2	<10	220	0.30	0.24	0.85	0.40	37.70	21.7	57
G002449		0.28	0.028	0.31	1.44	6.1	<0.2	<10	200	0.21	0.18	1.94	0.51	29.30	16.1	48
G002450		0.26	0.021	0.34	1.69	6.6	<0.2	<10	180	0.22	0.20	1.38	0.41	26.80	19.3	58
G002451		0.40	0.067	0.43	1.48	6.0	<0.2	<10	190	0.25	0.16	1.46	1.49	45.70	13.4	34
G002452		0.44	0.063	0.56	1.49	4.1	<0.2	<10	160	0.36	0.15	1.20	0.91	108.00	11.6	27
G002453		0.38	0.019	0.35	1.40	3.9	<0.2	<10	140	0.30	0.14	1.10	0.51	71.90	12.1	25

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002414		0.83	25.6	3.06	7.91	0.10	0.02	0.06	0.025	0.03	7.8	10.7	0.34	201	2.28
G002415		0.76	12.4	2.06	5.93	0.08	0.02	0.04	0.015	0.03	4.8	6.9	0.24	140	1.34
G002416		0.91	42.1	3.46	5.90	0.14	0.07	0.05	0.033	0.05	23.2	13.6	0.81	360	3.18
G002417		0.80	39.3	3.47	5.80	0.13	0.03	0.07	0.029	0.09	14.8	11.9	0.89	1430	1.84
G002418		0.93	33.3	4.47	7.20	0.13	0.05	0.02	0.035	0.18	6.5	12.9	1.53	629	1.59
G002419		0.61	18.6	2.15	4.68	0.08	0.02	0.04	0.013	0.10	3.5	6.4	0.94	878	0.87
G002420		0.92	27.0	3.17	6.58	0.10	0.04	0.05	0.015	0.20	5.5	10.6	1.76	737	0.80
G002421		0.88	28.0	3.11	6.39	0.11	0.03	0.05	0.014	0.18	5.6	9.8	1.71	728	0.78
G002422		0.76	35.1	2.64	5.71	0.10	0.04	0.06	0.017	0.15	7.3	8.6	1.22	682	0.75
G002423		0.69	38.0	2.84	5.91	0.10	0.04	0.05	0.020	0.15	6.4	9.3	1.27	815	0.71
G002424		0.89	43.1	3.74	7.77	0.09	0.04	0.06	0.021	0.35	5.0	9.5	1.93	766	0.69
G002425		0.72	68.0	3.17	6.51	0.08	0.05	0.06	0.020	0.25	5.4	8.1	1.76	765	0.66
G002426		0.75	67.6	3.01	6.34	0.09	0.06	0.19	0.019	0.25	7.5	8.3	1.65	707	0.73
G002427		0.47	49.4	1.94	3.56	0.06	0.04	0.13	0.014	0.14	5.0	4.5	0.94	662	0.72
G002428		0.77	53.5	3.41	6.76	0.09	0.04	0.04	0.020	0.26	6.8	9.4	1.89	655	0.52
G002429		0.40	63.3	1.48	2.88	0.06	0.05	0.10	0.012	0.11	6.2	3.7	0.76	704	0.75
G002430		0.41	72.5	1.65	3.10	0.05	0.05	0.11	0.013	0.11	6.9	3.8	0.78	632	0.66
G002431		0.63	42.8	2.98	6.11	0.09	0.03	0.03	0.017	0.24	4.8	7.8	1.61	624	0.53
G002432		0.82	78.4	3.35	6.82	0.09	0.06	0.07	0.021	0.27	7.7	9.2	1.81	681	0.65
G002433		0.78	56.2	3.27	6.89	0.08	0.04	0.05	0.020	0.24	7.6	8.1	1.55	625	0.73
G002434		0.74	74.2	2.75	5.88	0.07	0.03	0.05	0.020	0.18	8.3	7.4	1.12	660	0.79
G002435		0.76	27.5	3.44	7.09	0.07	0.04	0.03	0.018	0.15	4.4	8.5	1.48	706	0.94
G002436		0.84	23.4	3.77	8.08	0.10	0.05	0.04	0.016	0.28	4.7	11.0	2.13	431	0.49
G002437		0.92	46.4	4.00	8.37	0.11	0.05	0.03	0.019	0.32	8.5	12.2	2.21	519	0.51
G002438		0.61	49.5	3.33	6.39	0.09	0.04	0.04	0.017	0.13	9.5	7.9	1.47	1005	0.80
G002439		0.78	27.0	3.94	8.05	0.08	0.03	0.02	0.022	0.19	4.9	11.7	1.78	813	0.67
G002440		<0.05	0.7	0.03	0.06	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	0.01	<5	0.05
G002441		0.68	48.1	4.60	8.59	0.09	0.03	0.02	0.033	0.10	9.0	12.9	2.26	588	0.37
G002442		1.11	10.6	3.86	4.65	0.08	0.06	0.04	0.049	0.14	15.4	5.2	0.82	681	0.68
G002443		0.78	31.8	3.70	6.81	0.06	0.04	0.03	0.025	0.04	8.9	7.0	0.43	292	6.11
G002444		0.73	30.3	3.12	7.89	0.06	0.03	0.03	0.022	0.06	8.5	4.6	0.42	279	5.07
G002445		0.65	39.7	3.62	8.13	0.06	0.03	0.02	0.027	0.06	6.6	11.1	1.22	406	1.78
G002446		0.57	63.9	4.96	7.25	0.09	0.03	0.03	0.030	0.05	13.9	10.8	1.48	1075	1.11
G002447		0.71	43.3	1.92	3.93	0.08	0.02	0.07	0.021	0.04	35.4	4.2	0.41	976	1.77
G002448		1.26	47.0	4.04	6.21	0.08	0.03	0.03	0.028	0.08	15.9	8.5	1.31	816	3.30
G002449		0.86	40.3	2.41	4.50	0.07	0.05	0.05	0.020	0.06	16.2	5.1	0.69	885	2.32
G002450		0.96	39.1	2.92	5.41	0.08	0.05	0.05	0.022	0.06	15.0	6.1	0.85	905	2.49
G002451		0.75	37.8	2.25	4.44	0.08	0.05	0.07	0.020	0.06	27.0	6.7	0.62	749	1.58
G002452		0.78	39.5	2.06	4.58	0.13	0.05	0.07	0.022	0.06	67.0	6.7	0.48	743	1.68
G002453		0.73	31.2	2.07	4.28	0.09	0.04	0.08	0.022	0.05	42.7	6.4	0.43	595	1.27

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G002414		1.08	20.2	460	12.5	4.7	<0.001	0.04	0.47	2.4	1.1	0.5	14.5	0.01	0.09	0.6
G002415		0.89	10.5	270	7.2	4.9	<0.001	0.02	0.30	1.9	0.6	0.4	10.8	<0.01	0.05	0.5
G002416		0.91	40.7	480	14.9	7.6	<0.001	0.02	0.35	7.3	1.4	0.4	24.6	<0.01	0.13	3.6
G002417		0.74	28.9	700	10.1	11.6	<0.001	0.07	0.32	6.0	1.5	0.3	32.3	<0.01	0.07	1.1
G002418		0.74	27.5	330	10.0	22.2	<0.001	0.03	0.25	9.8	1.1	0.4	21.0	<0.01	0.08	2.9
G002419		0.61	16.1	690	5.8	13.0	<0.001	0.09	0.21	2.6	0.7	0.2	26.4	<0.01	0.04	0.3
G002420		0.83	28.5	590	8.0	25.1	<0.001	0.08	0.25	4.0	1.0	0.3	31.4	<0.01	0.07	0.6
G002421		0.79	27.6	610	8.0	23.6	<0.001	0.08	0.25	3.8	1.0	0.3	30.4	<0.01	0.07	0.5
G002422		0.78	21.9	790	5.4	21.8	<0.001	0.09	0.23	3.6	0.9	0.3	32.8	<0.01	0.05	0.4
G002423		0.80	22.3	710	5.9	20.5	<0.001	0.09	0.26	4.3	1.0	0.3	32.6	<0.01	0.05	0.4
G002424		0.88	27.6	600	7.3	35.8	<0.001	0.09	0.25	7.5	0.9	0.3	28.2	<0.01	0.05	0.6
G002425		0.74	26.4	690	7.4	25.3	<0.001	0.12	0.25	6.6	1.0	0.2	32.4	<0.01	0.04	0.4
G002426		0.78	26.3	790	7.9	27.8	0.001	0.13	0.27	6.2	1.1	0.2	36.5	<0.01	0.05	0.4
G002427		0.53	18.7	650	3.4	11.2	<0.001	0.12	0.27	4.0	0.8	0.2	32.8	<0.01	0.04	0.3
G002428		0.74	29.1	490	6.3	23.2	<0.001	0.06	0.20	8.3	0.9	0.3	24.8	<0.01	0.06	0.7
G002429		0.36	16.6	1040	2.7	9.6	0.001	0.20	0.26	3.0	0.8	<0.2	50.3	<0.01	0.03	0.2
G002430		0.44	18.6	1200	3.1	11.6	0.001	0.20	0.25	2.4	0.9	<0.2	53.0	<0.01	0.04	0.2
G002431		0.68	25.1	470	4.6	22.0	<0.001	0.05	0.18	6.1	0.8	0.2	21.8	<0.01	0.04	0.6
G002432		0.84	30.3	710	6.2	26.7	0.001	0.10	0.28	7.7	1.1	0.3	32.3	<0.01	0.05	0.5
G002433		0.86	23.4	750	6.6	26.5	<0.001	0.08	0.21	5.9	1.0	0.3	29.5	<0.01	0.05	0.4
G002434		0.81	24.5	800	5.9	23.8	<0.001	0.08	0.24	3.8	0.9	0.3	32.0	<0.01	0.04	0.2
G002435		1.15	22.3	340	6.4	21.4	<0.001	0.03	0.22	4.5	0.7	0.4	20.1	<0.01	0.04	1.1
G002436		1.02	31.0	280	4.6	30.1	<0.001	0.02	0.22	5.4	0.7	0.4	16.1	<0.01	0.04	1.2
G002437		0.98	36.3	560	4.9	35.7	<0.001	0.03	0.27	7.0	1.0	0.4	18.9	<0.01	0.05	1.6
G002438		0.72	23.1	750	8.0	12.4	<0.001	0.07	0.29	5.1	1.0	0.3	21.5	<0.01	0.07	0.6
G002439		0.91	26.1	470	30.6	16.6	<0.001	0.04	0.24	5.8	0.8	0.3	22.1	<0.01	0.04	0.9
G002440		<0.05	0.4	20	0.6	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01	0.3
G002441		0.45	28.9	560	10.5	14.2	<0.001	0.01	0.22	14.3	1.1	0.3	13.6	<0.01	0.09	1.4
G002442		0.06	38.1	530	4.2	13.6	<0.001	0.02	0.23	14.5	1.0	0.5	20.3	<0.01	0.03	3.8
G002443		1.05	39.6	460	23.4	6.8	<0.001	0.02	0.42	3.1	1.7	0.5	14.7	<0.01	0.12	1.6
G002444		1.13	32.3	370	20.7	10.9	<0.001	0.03	0.43	3.3	0.8	0.7	20.5	<0.01	0.31	1.0
G002445		1.36	22.1	420	7.5	9.8	<0.001	0.03	0.33	5.3	0.7	0.6	21.9	<0.01	0.32	1.3
G002446		0.84	33.7	620	16.5	7.7	<0.001	0.04	0.26	6.1	1.3	0.3	20.6	<0.01	0.12	4.0
G002447		0.62	17.2	900	6.8	7.0	0.001	0.12	0.37	2.6	1.2	0.3	62.1	<0.01	0.05	0.3
G002448		0.62	56.3	910	8.9	11.6	0.001	0.09	0.29	5.8	1.8	0.4	54.7	<0.01	0.09	1.9
G002449		0.70	35.8	1160	14.0	8.7	0.002	0.18	0.35	2.7	2.4	0.3	87.9	<0.01	0.09	0.6
G002450		0.76	40.5	1030	17.7	9.3	0.001	0.12	0.27	3.5	2.2	0.3	65.5	<0.01	0.10	0.9
G002451		0.87	31.9	960	9.4	10.7	0.001	0.14	0.30	3.1	1.6	0.3	70.7	<0.01	0.05	1.1
G002452		0.93	27.5	1010	10.4	10.1	0.001	0.14	0.40	3.3	1.8	0.3	66.4	0.01	0.06	1.1
G002453		0.95	23.5	980	9.7	9.8	<0.001	0.11	0.30	3.2	1.4	0.3	53.8	<0.01	0.05	1.2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002414		0.068	0.09	0.61	68	<0.05	3.57	42
G002415		0.074	0.07	0.35	51	<0.05	1.72	26
G002416		0.076	0.09	1.31	66	<0.05	17.50	75
G002417		0.083	0.12	1.57	66	<0.05	15.50	81
G002418		0.116	0.15	0.57	95	<0.05	5.35	104
G002419		0.073	0.09	0.33	50	<0.05	2.81	65
G002420		0.117	0.15	0.34	76	<0.05	6.00	94
G002421		0.111	0.15	0.34	75	<0.05	6.25	92
G002422		0.087	0.12	0.41	63	<0.05	8.53	79
G002423		0.095	0.12	0.37	70	<0.05	7.82	72
G002424		0.145	0.17	0.30	103	0.12	6.38	87
G002425		0.103	0.14	0.32	90	0.10	10.60	97
G002426		0.097	0.15	0.36	85	0.10	13.30	93
G002427		0.062	0.07	0.24	51	0.12	8.13	51
G002428		0.114	0.12	0.36	95	0.14	11.70	79
G002429		0.039	0.08	0.29	41	0.07	11.55	38
G002430		0.043	0.07	0.29	42	0.09	11.85	42
G002431		0.112	0.12	0.26	83	0.08	6.42	72
G002432		0.111	0.15	0.40	95	0.09	14.90	85
G002433		0.112	0.12	0.41	89	0.09	10.15	74
G002434		0.087	0.09	0.51	69	0.20	8.84	66
G002435		0.149	0.13	0.30	87	0.14	2.90	79
G002436		0.185	0.17	0.27	97	0.14	3.02	133
G002437		0.175	0.19	0.43	96	0.16	8.86	83
G002438		0.101	0.11	0.40	73	0.18	11.70	64
G002439		0.140	0.11	0.30	102	0.14	3.70	109
G002440		<0.005	<0.02	0.08	1	<0.05	0.59	4
G002441		0.105	0.11	0.29	107	0.09	13.05	97
G002442		0.028	0.14	0.57	65	0.08	27.60	50
G002443		0.089	0.13	0.70	69	0.17	4.30	87
G002444		0.102	0.11	0.45	83	0.16	3.13	80
G002445		0.121	0.08	0.36	84	0.20	4.45	63
G002446		0.074	0.07	0.44	67	0.12	13.90	74
G002447		0.038	0.10	1.11	35	0.11	25.00	36
G002448		0.070	0.13	1.24	71	0.09	8.48	109
G002449		0.055	0.12	1.45	52	0.10	9.55	72
G002450		0.068	0.11	1.55	63	0.24	8.84	85
G002451		0.057	0.10	1.70	47	0.11	14.10	100
G002452		0.055	0.10	3.14	40	0.11	30.90	70
G002453		0.050	0.09	2.74	37	0.10	18.70	59

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002454		0.34	0.021	0.25	1.49	3.8	<0.2	<10	170	0.36	0.14	1.16	0.41	78.50	11.5	24
G002455		0.40	0.021	0.19	1.40	4.8	<0.2	<10	120	0.17	0.18	0.49	0.18	20.10	11.7	29
G002456		0.54	0.015	0.21	1.62	4.9	<0.2	<10	150	0.20	0.18	0.57	0.12	23.10	11.3	29
G002457		0.42	0.017	0.14	1.16	4.6	<0.2	<10	80	0.14	0.14	0.31	0.13	15.55	7.8	24
G002458		0.34	0.070	0.31	0.73	2.2	<0.2	<10	80	0.14	0.07	0.46	0.20	20.20	7.4	16
G002459		0.54	0.013	0.24	1.25	3.5	<0.2	<10	90	0.19	0.13	0.31	0.15	19.75	5.1	24
G002460		0.42	0.017	0.16	1.32	4.5	<0.2	<10	80	0.16	0.13	0.27	0.14	21.60	7.3	25
G002461		0.42	0.024	0.17	1.46	5.2	<0.2	<10	90	0.24	0.14	0.25	0.12	29.50	9.0	28
G002462		0.50	0.021	0.18	1.80	5.7	<0.2	<10	200	0.27	0.12	1.02	0.39	27.20	15.7	38
G002463		0.50	0.015	0.11	1.62	4.0	<0.2	<10	160	0.16	0.09	0.43	0.11	14.90	15.4	43
G002464		0.42	0.008	0.06	1.43	3.4	<0.2	<10	120	0.16	0.12	0.27	0.07	11.60	10.1	38
G002465		0.52	0.010	0.15	2.04	4.2	<0.2	<10	160	0.30	0.13	0.36	0.13	17.15	14.6	50
G002466		0.30	0.017	0.15	1.44	3.4	<0.2	<10	120	0.23	0.13	0.30	0.14	19.25	9.3	34
G002467		0.52	0.012	0.13	2.58	6.1	<0.2	<10	210	0.64	0.13	1.12	0.26	44.30	18.1	46
G002468		0.54	0.012	0.07	2.04	5.6	<0.2	<10	130	0.42	0.11	0.28	0.07	22.50	12.2	39
G002469		0.34	0.012	0.09	1.65	4.5	<0.2	<10	170	0.35	0.09	1.24	0.19	17.70	10.6	31
G002470		0.36	0.015	0.08	1.72	4.3	<0.2	<10	150	0.30	0.10	1.00	0.14	15.25	11.1	34
G002471		0.38	0.013	0.11	1.86	4.3	<0.2	<10	180	0.33	0.11	0.91	0.14	20.20	12.2	35
G002472		0.44	0.011	0.11	2.00	3.8	<0.2	<10	210	0.43	0.10	1.05	0.14	27.70	12.6	38
G002473		0.50	0.063	0.11	1.37	3.6	<0.2	<10	130	0.17	0.11	0.38	0.13	11.80	7.4	31
G002474		0.56	0.045	0.09	1.29	3.3	<0.2	<10	100	0.17	0.10	0.28	0.10	12.15	5.6	27
G002475		0.40	0.011	0.09	1.60	8.9	<0.2	<10	150	0.33	0.17	0.40	0.19	26.10	11.5	37
G002476		0.42	0.009	0.08	0.54	2.4	<0.2	<10	50	0.23	0.11	0.18	0.15	6.27	3.3	11
G002477		0.44	0.010	0.11	1.13	4.5	<0.2	<10	70	0.95	0.29	0.27	0.07	15.95	6.8	29
G002478		0.38	0.011	0.25	2.24	4.9	<0.2	<10	110	2.09	0.33	0.81	<0.01	27.80	9.2	42
G002479		0.50	0.014	0.20	2.60	8.4	<0.2	<10	160	2.61	0.36	0.55	<0.01	43.50	16.0	53
G002480		0.04	0.007	<0.01	0.01	0.2	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	0.94	0.1	<1
G002481		0.54	0.013	0.15	2.28	15.0	<0.2	<10	170	1.57	0.28	0.43	<0.01	35.70	12.7	52
G002482		1.08	0.021	0.11	2.06	12.8	<0.2	<10	190	1.45	0.22	0.49	0.02	35.10	18.3	54
G002483		0.90	0.015	0.08	2.27	10.0	<0.2	<10	210	1.28	0.21	0.45	<0.01	43.50	19.5	59
G002484		0.60	0.019	0.12	2.36	14.8	<0.2	<10	220	1.30	0.21	0.44	0.16	37.90	12.7	48
G002485		0.76	0.017	0.09	2.48	21.4	<0.2	<10	220	1.34	0.22	0.46	0.10	36.20	13.6	55
G002486		0.54	0.011	0.04	2.39	12.2	<0.2	<10	240	1.20	0.28	0.40	0.05	40.40	14.9	57
G002487		0.44	0.009	0.04	1.67	10.6	<0.2	<10	110	0.49	0.19	0.19	<0.01	17.75	8.3	37
G002488		0.50	0.009	0.11	2.39	10.7	<0.2	<10	200	1.00	0.25	0.42	0.05	31.60	11.9	50
G002489		0.68	0.012	0.09	2.25	10.5	<0.2	<10	190	1.17	0.27	0.44	0.03	36.60	13.4	53
G002490		0.58	0.010	0.10	2.28	10.6	<0.2	<10	180	1.14	0.27	0.43	<0.01	38.00	12.7	52
G002491		0.52	0.013	0.10	2.16	10.4	<0.2	<10	170	0.90	0.23	0.45	0.01	31.50	10.9	49
G002492		0.46	0.010	0.10	1.95	22.9	<0.2	<10	150	1.03	0.25	0.47	<0.01	33.90	14.7	49
G002493		0.52	0.007	0.08	2.35	17.0	<0.2	<10	180	0.97	0.26	0.44	<0.01	33.80	14.3	50

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002454		0.74	40.8	2.16	4.18	0.10	0.05	0.08	0.020	0.05	44.9	6.3	0.45	683	1.51
G002455		0.85	15.4	2.30	5.25	0.05	0.02	0.06	0.020	0.06	10.5	7.1	0.50	571	1.50
G002456		0.73	15.5	2.45	5.21	0.06	0.03	0.06	0.019	0.05	12.3	8.1	0.58	428	1.27
G002457		0.70	13.9	2.08	4.76	0.05	<0.02	0.04	0.015	0.05	8.1	5.5	0.46	278	1.79
G002458		0.43	16.2	1.46	2.44	0.05	<0.02	0.08	0.012	0.03	10.6	2.6	0.24	229	1.29
G002459		0.69	22.9	1.88	4.85	0.05	<0.02	0.06	0.017	0.04	10.4	5.5	0.41	126	0.67
G002460		0.79	12.5	1.85	5.07	0.07	0.02	0.06	0.017	0.05	11.6	8.7	0.48	151	0.53
G002461		0.78	18.1	2.29	5.08	0.08	0.02	0.06	0.019	0.05	15.6	10.0	0.50	158	0.67
G002462		0.68	24.6	2.55	5.33	0.08	0.03	0.07	0.021	0.06	14.4	9.9	0.97	705	0.89
G002463		1.43	17.3	2.48	6.04	0.08	0.02	0.04	0.014	0.16	8.0	13.1	0.74	427	0.78
G002464		1.42	11.8	2.29	5.75	0.10	0.02	0.02	0.013	0.23	6.1	10.9	0.67	233	0.55
G002465		1.69	17.5	2.86	7.79	0.09	0.03	0.04	0.020	0.20	9.0	16.2	0.82	386	0.83
G002466		1.05	15.5	2.13	5.73	0.08	0.02	0.06	0.017	0.10	9.9	9.9	0.52	197	0.74
G002467		2.37	26.3	3.20	6.95	0.12	0.04	0.05	0.025	0.28	22.7	20.9	0.86	802	0.60
G002468		1.24	17.5	2.77	6.71	0.09	0.04	0.03	0.021	0.15	11.3	16.3	0.68	296	0.65
G002469		1.16	19.3	2.24	5.13	0.08	0.03	0.05	0.018	0.11	9.2	12.5	0.57	518	0.67
G002470		1.30	16.9	2.34	5.66	0.08	0.03	0.04	0.019	0.12	8.2	13.6	0.62	424	0.63
G002471		1.26	19.0	2.38	5.98	0.08	0.04	0.05	0.024	0.09	10.6	14.3	0.65	396	0.74
G002472		1.36	20.9	2.39	6.31	0.08	0.05	0.03	0.022	0.10	13.6	14.9	0.76	345	0.62
G002473		1.26	10.6	1.82	5.78	0.07	0.02	0.05	0.015	0.06	6.2	8.3	0.54	169	0.73
G002474		1.02	10.3	1.80	5.18	0.06	0.02	0.06	0.016	0.05	6.3	7.3	0.46	127	0.65
G002475		1.35	13.1	2.31	5.34	0.08	0.02	0.06	0.021	0.07	14.0	9.5	0.54	527	3.40
G002476		0.88	13.0	1.28	3.49	<0.05	<0.02	0.04	0.014	0.03	3.2	1.9	0.10	127	13.45
G002477		2.24	71.9	2.30	6.71	0.08	0.02	0.07	0.034	0.10	7.4	7.2	0.35	251	33.70
G002478		3.67	181.5	2.78	7.84	0.12	0.04	0.27	0.047	0.11	15.4	12.6	0.69	370	176.00
G002479		4.08	243.0	3.96	9.46	0.16	0.07	0.29	0.088	0.12	23.4	17.2	0.78	476	195.50
G002480		<0.05	0.8	0.02	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	0.43
G002481		3.68	185.0	3.48	7.89	0.18	0.22	0.31	0.053	0.26	17.7	14.5	0.78	270	133.00
G002482		3.86	168.0	2.73	7.42	0.17	0.22	0.14	0.046	0.23	17.0	14.3	0.79	243	125.50
G002483		5.73	149.0	4.21	8.41	0.19	0.13	0.14	0.044	0.33	22.0	15.0	0.89	619	150.00
G002484		3.03	149.0	3.17	8.07	0.13	0.07	0.11	0.043	0.19	20.3	16.5	0.77	273	90.10
G002485		3.88	130.0	3.54	8.74	0.15	0.10	0.09	0.046	0.25	18.0	15.9	0.83	342	92.10
G002486		5.11	86.1	3.05	9.03	0.14	0.08	0.04	0.044	0.34	18.9	15.2	0.89	349	59.80
G002487		2.66	47.7	2.60	7.82	0.10	0.04	0.04	0.025	0.12	8.8	9.8	0.56	239	65.10
G002488		3.36	118.0	3.05	8.16	0.13	0.06	0.09	0.041	0.20	16.3	15.4	0.82	322	79.20
G002489		3.49	152.0	3.01	7.81	0.15	0.20	0.10	0.043	0.21	18.0	15.1	0.83	240	97.10
G002490		3.69	144.5	3.18	7.83	0.15	0.19	0.09	0.048	0.21	18.5	15.1	0.83	247	103.50
G002491		2.66	114.5	2.97	7.35	0.14	0.08	0.10	0.039	0.18	16.1	14.4	0.75	245	66.30
G002492		3.12	127.0	3.51	7.04	0.15	0.09	0.31	0.039	0.22	17.0	13.2	0.74	470	134.00
G002493		2.74	85.7	3.39	8.41	0.12	0.08	0.05	0.040	0.15	16.6	15.6	0.84	263	99.20

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002454		0.92	30.3	980	8.6	9.4	0.001	0.13	0.42	3.0	1.5	0.3	53.1	0.01	0.05
G002455		0.97	19.5	690	8.9	10.2	<0.001	0.06	0.23	3.1	0.7	0.4	29.1	<0.01	0.04
G002456		1.15	21.9	600	8.9	7.3	<0.001	0.05	0.25	3.6	0.8	0.4	32.8	<0.01	0.04
G002457		0.80	17.2	560	6.6	8.6	<0.001	0.06	0.21	2.2	0.6	0.4	20.1	<0.01	0.05
G002458		0.51	11.2	1090	3.8	3.6	<0.001	0.12	0.20	1.0	0.7	0.2	24.2	<0.01	0.03
G002459		0.73	17.4	560	7.3	5.5	<0.001	0.06	0.17	2.0	0.7	0.4	21.4	<0.01	0.04
G002460		0.92	20.9	510	7.7	9.7	<0.001	0.04	0.21	2.5	0.7	0.4	19.8	<0.01	0.03
G002461		1.12	24.0	560	7.3	8.7	0.001	0.05	0.25	3.0	0.9	0.4	19.3	<0.01	0.05
G002462		0.97	27.9	620	6.1	13.7	0.001	0.10	0.36	4.2	1.1	0.3	43.2	<0.01	0.06
G002463		1.26	26.0	500	4.4	24.7	<0.001	0.05	0.16	3.6	0.7	0.4	25.3	<0.01	0.04
G002464		1.35	20.7	270	4.1	26.8	<0.001	0.03	0.13	3.5	0.5	0.5	18.0	<0.01	0.03
G002465		1.55	28.2	560	7.8	29.7	<0.001	0.05	0.20	4.4	0.7	0.6	26.5	<0.01	0.04
G002466		1.32	20.0	580	5.7	17.0	<0.001	0.06	0.20	3.2	0.7	0.5	24.3	<0.01	0.04
G002467		1.96	37.8	750	7.0	38.8	0.001	0.06	0.30	5.5	1.0	0.5	77.5	<0.01	0.04
G002468		1.98	24.8	490	5.9	20.7	<0.001	0.04	0.23	4.5	0.8	0.5	21.8	<0.01	0.03
G002469		1.52	22.9	690	4.7	22.6	<0.001	0.09	0.26	3.2	0.7	0.4	67.2	<0.01	0.04
G002470		1.63	23.3	600	5.3	24.5	<0.001	0.07	0.23	3.6	0.7	0.5	58.0	<0.01	0.03
G002471		1.79	24.9	740	5.6	16.5	<0.001	0.08	0.28	3.8	0.8	0.5	50.0	<0.01	0.03
G002472		1.82	25.1	650	5.2	19.1	<0.001	0.08	0.20	4.2	0.9	0.5	41.3	<0.01	0.04
G002473		1.29	17.4	610	5.0	13.5	<0.001	0.06	0.19	2.7	0.6	0.4	26.2	<0.01	0.03
G002474		1.26	15.5	530	5.2	10.2	<0.001	0.06	0.19	2.6	0.6	0.4	21.0	<0.01	0.02
G002475		1.63	19.2	620	5.9	10.4	<0.001	0.04	0.37	3.8	0.7	0.5	25.4	<0.01	0.04
G002476		0.42	7.3	370	3.1	7.6	<0.001	0.04	0.30	0.8	0.3	0.4	16.7	<0.01	0.03
G002477		1.64	17.5	430	3.5	15.9	0.001	0.04	0.28	3.2	0.5	0.9	20.8	<0.01	0.05
G002478		2.42	22.1	1020	3.6	13.3	0.003	0.11	0.23	5.7	1.6	0.7	39.9	<0.01	0.05
G002479		2.49	33.6	680	4.9	27.7	0.002	0.03	0.29	9.1	1.5	1.8	33.6	<0.01	0.07
G002480		<0.05	0.3	10	0.4	0.1	<0.001	0.01	<0.05	<0.1	<0.2	<0.2	0.6	<0.01	<0.01
G002481		1.53	34.1	670	6.7	45.2	0.001	0.02	0.30	9.0	1.3	0.9	29.4	<0.01	0.07
G002482		1.43	43.6	800	5.1	41.5	0.001	0.03	0.28	8.7	1.3	0.9	35.5	<0.01	0.07
G002483		1.62	43.2	840	4.8	50.2	0.001	0.02	0.27	9.2	1.3	0.9	32.6	<0.01	0.07
G002484		2.04	34.6	710	5.8	31.3	0.001	0.02	0.30	8.5	1.2	0.9	29.6	<0.01	0.06
G002485		2.00	36.6	690	5.3	40.4	0.001	0.02	0.26	9.1	1.2	0.9	30.9	<0.01	0.06
G002486		1.97	34.8	830	4.9	54.7	<0.001	0.01	0.20	8.8	0.9	1.4	25.9	<0.01	0.06
G002487		2.16	21.7	500	4.6	17.2	<0.001	0.02	0.22	4.5	0.6	0.7	12.7	<0.01	0.06
G002488		2.06	34.6	740	5.3	32.0	0.001	0.02	0.27	7.6	1.0	0.7	25.1	<0.01	0.06
G002489		1.69	39.2	690	5.4	35.7	0.001	0.02	0.30	8.3	1.3	0.8	28.2	<0.01	0.06
G002490		1.71	38.0	710	5.3	37.8	0.001	0.02	0.30	8.3	1.4	0.8	28.5	<0.01	0.06
G002491		1.59	29.6	770	4.7	27.1	0.001	0.02	0.27	7.3	1.2	0.7	29.0	<0.01	0.06
G002492		1.61	32.3	840	5.1	37.2	0.001	0.03	0.27	8.0	1.6	0.7	31.7	<0.01	0.07
G002493		2.30	27.7	770	5.3	26.5	0.001	0.02	0.35	7.3	1.0	0.8	27.3	<0.01	0.06

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR								
		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002454		0.050	0.10	2.06	41	0.11	25.50	51
G002455		0.073	0.11	0.96	55	0.15	4.63	56
G002456		0.086	0.09	0.93	60	0.13	6.26	61
G002457		0.067	0.08	0.66	57	0.12	3.80	49
G002458		0.030	0.05	0.95	23	0.06	4.82	29
								<0.5
G002459		0.058	0.07	0.82	33	0.17	4.35	45
G002460		0.075	0.08	0.65	35	0.10	5.05	50
G002461		0.077	0.08	0.88	46	0.11	7.15	50
G002462		0.071	0.11	0.93	59	0.17	10.70	69
G002463		0.118	0.15	0.64	64	0.15	3.66	54
								0.9
G002464		0.130	0.16	0.42	63	0.13	2.94	48
G002465		0.136	0.17	0.74	74	0.17	4.17	75
G002466		0.093	0.11	0.89	48	0.13	4.75	48
G002467		0.113	0.27	1.35	61	0.21	14.90	83
G002468		0.124	0.15	0.82	60	0.29	5.76	56
								1.5
G002469		0.086	0.13	0.84	49	0.12	6.26	59
G002470		0.097	0.13	0.80	51	0.11	5.12	62
G002471		0.095	0.13	0.80	51	0.11	7.06	56
G002472		0.100	0.14	1.01	55	0.16	8.78	61
G002473		0.086	0.11	0.59	39	0.14	3.06	51
								0.7
G002474		0.082	0.09	0.56	36	0.25	3.07	45
G002475		0.089	0.15	1.49	54	1.13	6.49	56
G002476		0.050	0.05	0.38	36	6.78	1.20	32
G002477		0.108	0.11	0.55	54	8.31	2.69	44
G002478		0.149	0.18	3.60	60	26.80	6.93	57
								1.5
G002479		0.175	0.32	2.72	83	15.70	11.00	82
G002480		<0.005	<0.02	0.07	<1	<0.05	0.57	3
G002481		0.181	0.37	1.52	90	8.06	9.93	76
G002482		0.184	0.50	1.91	107	9.57	11.80	79
G002483		0.200	0.44	1.58	96	6.33	11.15	81
								6.4
G002484		0.169	0.29	1.76	84	5.87	12.50	82
G002485		0.187	0.38	1.58	98	4.02	10.35	93
G002486		0.186	0.49	1.01	96	5.28	8.74	86
G002487		0.153	0.21	0.50	86	5.06	3.95	54
G002488		0.170	0.33	1.37	87	10.45	8.71	76
								2.5
G002489		0.186	0.35	1.53	95	10.60	10.55	73
G002490		0.184	0.36	1.53	95	7.67	10.50	72
G002491		0.168	0.36	1.18	85	14.25	8.69	63
G002492		0.161	0.79	1.47	99	8.98	9.29	80
G002493		0.183	0.28	0.95	91	6.32	7.94	57
								3.4

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002494		0.66	0.010	0.15	2.48	7.3	<0.2	<10	200	0.88	0.24	0.45	<0.01	40.50	17.5	52
G002495		0.60	0.057	0.21	2.34	5.7	<0.2	<10	150	1.36	0.43	0.61	0.14	46.10	17.3	52
G002496		0.62	0.009	0.23	1.98	6.6	<0.2	<10	80	0.66	4.33	0.20	0.12	20.70	10.0	35
G002497		0.38	0.010	0.16	2.15	5.5	<0.2	<10	140	1.06	0.47	0.35	0.03	32.20	19.4	54

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
G002494		2.14	118.0	3.56	8.49	0.12	0.13	0.05	0.043	0.10	20.3	15.8	0.84	283	122.00	0.03
G002495		3.30	272.0	2.89	8.49	0.15	0.08	0.05	0.062	0.20	23.1	15.3	0.92	252	128.00	0.05
G002496		1.73	74.2	2.90	8.91	0.07	0.03	0.04	0.027	0.07	9.8	10.4	0.45	264	26.50	0.03
G002497		4.22	131.5	3.54	10.05	0.10	0.04	0.08	0.049	0.21	15.1	13.1	0.80	558	59.90	0.04

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
G002494		2.17	30.6	640	5.7	22.3	0.001	0.02	0.36	8.4	1.2	0.7	30.6	<0.01	0.05	5.4
G002495		2.38	34.4	870	4.7	37.6	0.002	0.04	0.34	8.3	1.2	0.8	43.7	<0.01	0.07	4.9
G002496		2.06	20.5	400	6.9	13.3	<0.001	0.04	0.41	3.6	0.8	0.7	18.9	0.01	0.06	1.3
G002497		3.27	30.6	430	5.0	59.9	<0.001	0.05	0.33	6.9	1.0	1.2	33.7	<0.01	0.08	3.8

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 5 (A - D)

Finalized Date: 9-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074507

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	TI	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
	LOR	0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002494		0.196	0.24	1.33	85	7.99	10.65	65	6.3
G002495		0.200	0.30	1.55	83	22.60	10.80	83	3.5
G002496		0.142	0.14	0.65	72	6.99	3.90	55	1.4
G002497		0.194	0.38	0.96	81	12.10	5.35	64	1.8

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 8-AUG-2007

Account: EIANGX

CERTIFICATE VA07074508

Project: North Dawson

P.O. No.: NGX07-02

This report is for 169 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002001		0.48	0.005	0.24	2.02	4.9	<0.2	<10	200	0.31	0.24	0.61	0.42	27.20	15.0	40
G002002		0.42	0.006	0.14	1.68	3.7	<0.2	<10	110	0.16	0.17	0.35	0.21	13.10	9.2	39
G002003		0.24	<0.005	0.13	1.39	3.8	<0.2	<10	150	0.23	0.15	1.14	0.27	19.90	8.7	27
G002004		0.32	<0.005	0.18	1.45	4.1	<0.2	<10	180	0.26	0.17	0.64	0.36	37.80	10.8	27
G002005		0.32	0.012	0.18	1.59	4.5	<0.2	<10	240	0.27	0.14	0.60	0.26	22.70	11.6	28
G002006		0.52	0.007	0.08	1.83	4.0	<0.2	<10	230	0.17	0.17	0.49	0.13	15.10	9.3	34
G002007		0.30	<0.005	0.19	1.91	4.3	<0.2	<10	300	0.25	0.16	0.67	0.29	21.30	11.5	41
G002008		0.44	0.009	0.17	1.94	5.0	<0.2	<10	210	0.30	0.14	0.97	0.25	28.40	11.7	40
G002009		0.28	NSS	0.18	1.25	4.9	<0.2	<10	210	0.26	0.12	1.81	0.30	21.70	8.7	26
G002010		0.34	0.005	0.40	1.59	5.5	<0.2	<10	280	0.34	0.16	0.33	1.10	38.00	16.0	30
G002011		0.30	0.006	0.43	1.33	4.0	<0.2	<10	260	0.35	0.15	0.27	1.06	35.70	13.4	25
G002012		0.34	0.009	0.58	1.31	4.5	<0.2	<10	160	0.38	0.19	0.22	0.35	24.40	5.2	23
G002013		0.30	0.008	0.32	1.72	3.7	<0.2	<10	240	0.28	0.18	0.54	0.19	23.60	14.5	42
G002014		0.34	<0.005	0.22	1.51	5.8	<0.2	<10	130	0.36	0.21	0.30	0.32	27.70	6.8	29
G002015		0.26	0.008	0.53	1.35	3.3	<0.2	<10	170	0.38	0.13	0.52	0.45	32.10	8.0	23
G002016		0.42	<0.005	0.08	1.44	4.4	<0.2	<10	90	0.19	0.18	0.19	0.11	14.20	6.6	27
G002017		0.42	0.005	0.14	1.58	4.1	<0.2	<10	110	0.23	0.15	0.27	0.14	18.05	8.3	32
G002018		0.38	0.005	0.11	1.92	5.1	<0.2	<10	130	0.26	0.16	0.26	0.18	19.45	9.8	42
G002019		0.34	<0.005	0.12	1.60	4.2	<0.2	<10	120	0.25	0.13	0.30	0.12	18.30	7.8	32
G002020		0.40	0.005	0.11	2.01	5.0	<0.2	<10	150	0.34	0.14	0.23	0.11	19.55	11.2	38
G002021		0.38	<0.005	0.32	2.26	5.0	<0.2	<10	120	0.33	0.17	0.62	0.28	32.20	19.8	51
G002022		0.26	<0.005	0.20	2.99	6.5	<0.2	<10	350	0.51	0.15	0.74	0.24	47.70	23.7	69
G002023		0.24	<0.005	0.10	0.97	2.7	<0.2	<10	90	0.14	0.14	0.20	0.13	12.15	5.4	21
G002024		0.32	0.006	0.18	1.81	3.0	<0.2	<10	150	0.33	0.11	0.51	0.20	20.10	10.4	41
G002025		0.22	<0.005	0.18	1.98	3.7	<0.2	<10	210	0.30	0.10	0.87	0.15	22.90	12.7	50
G002026		0.40	<0.005	0.17	2.55	4.1	<0.2	<10	240	0.47	0.11	1.05	0.19	39.90	18.5	58
G002027		0.48	0.005	0.11	3.25	4.9	<0.2	<10	240	0.57	0.11	1.01	0.13	36.70	19.0	73
G002028		0.28	<0.005	0.11	1.67	2.8	<0.2	<10	200	0.35	0.07	2.72	0.26	22.80	9.2	34
G002029		0.32	0.006	0.08	2.41	3.5	<0.2	<10	170	0.52	0.08	1.77	0.22	25.30	15.4	50
G002030		0.28	<0.005	0.09	2.15	3.6	<0.2	<10	160	0.49	0.08	1.81	0.23	24.50	13.8	45
G002031		0.28	<0.005	0.08	1.24	5.6	<0.2	<10	130	0.32	0.07	3.37	0.34	20.20	8.6	27
G002032		0.28	<0.005	0.11	1.70	7.1	<0.2	<10	230	0.41	0.09	2.66	0.36	22.10	10.7	40
G002033		0.26	<0.005	0.12	1.67	6.5	<0.2	<10	320	0.29	0.10	2.11	0.52	20.20	8.2	40
G002034		0.36	<0.005	0.31	2.09	6.4	<0.2	<10	240	0.30	0.15	0.54	0.72	19.30	10.7	54
G002035		0.28	<0.005	0.22	0.55	5.0	<0.2	<10	70	0.07	0.10	0.07	0.12	7.34	2.2	13
G002036		0.28	<0.005	0.26	0.51	1.4	<0.2	<10	140	0.21	0.11	0.08	0.80	15.10	2.2	15
G002037		0.28	0.005	0.40	2.61	10.7	<0.2	<10	260	0.46	0.21	0.29	0.32	24.80	12.7	65
G002038		0.22	<0.005	0.27	0.37	1.8	<0.2	<10	60	0.06	0.12	0.10	0.17	6.52	1.9	11
G002039		0.20	<0.005	0.10	0.55	2.2	<0.2	<10	50	0.06	0.15	0.08	0.07	5.76	2.8	13
G002040		0.06	<0.005	<0.01	0.01	0.1	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.01	0.1	1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
G002001		0.67	35.4	2.84	6.37	0.09	0.04	0.04	0.026	0.07	14.1	9.5	0.94	930	1.18	0.02
G002002		0.62	21.6	2.40	5.78	0.07	0.02	0.02	0.018	0.06	6.9	7.4	0.91	349	0.87	0.02
G002003		0.61	24.8	1.82	4.11	0.05	0.04	0.07	0.018	0.06	10.7	7.1	0.60	513	0.95	0.03
G002004		0.66	24.5	1.92	4.66	0.09	0.03	0.08	0.019	0.06	19.6	6.7	0.53	767	1.01	0.02
G002005		0.67	25.3	2.15	5.23	0.09	0.04	0.06	0.022	0.05	11.4	7.6	0.56	544	0.93	0.03
G002006		0.80	20.0	2.35	6.40	0.07	0.04	0.03	0.020	0.06	8.1	8.4	0.73	312	1.26	0.03
G002007		0.72	32.7	2.56	6.27	0.09	0.05	0.05	0.024	0.07	11.7	9.2	0.79	526	1.48	0.03
G002008		0.65	38.6	2.54	5.95	0.09	0.07	0.04	0.025	0.06	15.0	9.6	0.74	491	1.41	0.03
G002009		0.51	31.3	1.70	3.70	0.07	0.05	0.06	0.018	0.05	11.9	5.8	0.48	400	1.17	0.03
G002010		0.70	54.3	2.40	5.73	0.09	0.03	0.04	0.025	0.07	21.6	8.2	0.50	664	1.73	0.03
G002011		0.63	53.4	1.94	5.07	0.09	0.03	0.04	0.021	0.05	20.4	6.8	0.38	560	1.40	0.03
G002012		0.79	25.2	2.00	5.93	0.08	0.04	0.06	0.020	0.05	15.2	8.2	0.24	177	1.36	0.03
G002013		0.70	27.5	2.28	5.78	0.07	0.03	0.06	0.020	0.08	13.7	8.4	0.67	541	1.13	0.03
G002014		0.74	22.6	1.98	5.92	0.08	0.03	0.05	0.022	0.07	15.7	8.1	0.42	170	1.11	0.02
G002015		0.58	28.2	1.62	4.87	0.08	0.02	0.08	0.019	0.08	18.5	5.4	0.33	129	1.22	0.03
G002016		0.58	14.4	2.00	6.20	0.07	0.03	0.03	0.019	0.06	7.8	7.2	0.44	180	0.91	0.02
G002017		0.66	15.5	2.15	6.15	0.07	0.02	0.04	0.019	0.07	9.6	9.2	0.52	209	0.76	0.02
G002018		0.82	17.8	2.60	7.39	0.08	0.03	0.05	0.021	0.09	11.0	11.3	0.63	252	0.97	0.02
G002019		0.74	16.5	2.19	5.92	0.07	0.03	0.03	0.021	0.07	9.5	9.4	0.54	217	0.72	0.02
G002020		0.85	17.6	2.76	7.18	0.08	0.03	0.05	0.021	0.08	10.0	12.5	0.61	406	0.98	0.03
G002021		0.81	31.7	3.48	7.38	0.07	0.03	0.03	0.028	0.14	16.2	17.1	0.81	311	1.16	0.03
G002022		1.85	35.4	3.97	8.71	0.10	0.06	0.02	0.033	0.35	20.3	18.4	1.13	863	0.84	0.07
G002023		0.85	12.9	1.76	6.47	0.06	0.02	0.02	0.013	0.15	6.5	5.0	0.32	185	1.56	0.03
G002024		1.20	27.3	2.23	7.08	0.08	0.03	0.04	0.018	0.10	11.6	12.9	0.63	218	0.93	0.04
G002025		1.39	25.9	2.57	7.52	0.08	0.03	0.04	0.018	0.16	14.2	13.3	0.72	276	1.06	0.03
G002026		1.56	33.0	3.24	8.21	0.12	0.05	0.06	0.024	0.31	25.0	18.1	0.86	586	1.07	0.04
G002027		2.45	30.4	4.05	9.71	0.13	0.05	0.02	0.028	0.51	19.1	24.3	1.18	586	0.69	0.06
G002028		1.27	22.9	1.90	4.67	0.08	0.05	0.06	0.016	0.17	13.4	11.4	0.55	376	0.65	0.04
G002029		2.41	24.6	2.88	7.55	0.09	0.05	0.04	0.019	0.39	13.3	19.4	0.89	507	0.61	0.06
G002030		2.19	27.5	2.54	6.75	0.09	0.04	0.04	0.018	0.34	13.3	17.7	0.79	451	0.53	0.05
G002031		1.51	21.6	1.52	3.85	0.07	0.05	0.07	0.015	0.18	11.0	9.7	0.43	393	0.63	0.04
G002032		1.81	28.3	2.02	5.27	0.08	0.06	0.05	0.019	0.19	12.0	11.8	0.81	419	0.67	0.05
G002033		1.26	27.4	2.02	5.85	0.08	0.05	0.05	0.020	0.14	11.0	11.2	0.64	188	1.00	0.04
G002034		2.08	33.5	2.48	8.51	0.07	0.04	0.04	0.023	0.14	10.5	13.6	0.73	288	2.17	0.03
G002035		0.51	9.3	0.99	4.18	<0.05	<0.02	0.04	0.009	0.04	3.8	2.1	0.11	66	1.30	0.02
G002036		0.61	31.0	0.74	2.94	0.05	<0.02	0.07	0.011	0.06	8.0	1.4	0.08	45	1.03	0.02
G002037		1.63	35.9	3.17	9.27	0.08	0.04	0.07	0.032	0.08	13.1	16.5	0.71	303	1.61	0.03
G002038		0.39	9.1	0.88	3.36	<0.05	<0.02	0.05	0.008	0.03	4.3	1.2	0.06	85	1.16	0.02
G002039		1.12	5.1	0.88	4.45	<0.05	<0.02	0.05	0.011	0.05	3.0	2.4	0.13	221	0.80	0.02
G002040		<0.05	0.6	0.01	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002001		1.22	27.9	520	9.5	10.4	<0.001	0.04	0.28	5.1	0.9	0.5	36.7	<0.01	0.07
G002002		1.13	22.2	330	5.8	11.4	<0.001	0.03	0.20	4.2	0.6	0.4	21.5	<0.01	0.05
G002003		0.98	18.4	630	6.1	8.2	<0.001	0.08	0.29	3.6	0.8	0.4	45.2	0.01	0.04
G002004		1.18	20.4	530	6.9	8.1	<0.001	0.06	0.41	3.6	0.9	0.4	37.3	<0.01	0.05
G002005		1.17	19.2	570	7.0	9.4	<0.001	0.05	0.33	3.7	0.8	0.4	38.8	<0.01	0.04
G002006		1.52	21.9	360	6.3	9.8	<0.001	0.03	0.24	3.9	0.6	0.5	32.2	<0.01	0.04
G002007		1.45	28.6	530	7.3	13.7	0.002	0.05	0.27	4.5	0.8	0.5	39.4	<0.01	0.04
G002008		1.44	31.1	580	7.0	10.3	0.001	0.06	0.32	4.9	1.0	0.4	50.2	<0.01	0.04
G002009		1.00	21.2	660	6.0	7.8	0.002	0.11	0.42	3.0	0.9	0.3	62.9	<0.01	0.04
G002010		1.15	26.5	550	8.3	11.9	0.001	0.04	0.29	4.0	0.9	0.4	25.3	<0.01	0.04
G002011		0.99	21.9	450	7.8	10.2	0.001	0.04	0.24	3.4	0.9	0.4	21.9	<0.01	0.03
G002012		1.42	11.9	290	8.2	9.2	<0.001	0.03	0.24	2.9	0.7	0.4	20.0	<0.01	0.04
G002013		0.97	23.1	660	8.0	12.3	<0.001	0.05	0.23	3.7	0.8	0.4	26.6	<0.01	0.04
G002014		1.18	19.2	550	9.8	13.2	<0.001	0.05	0.30	2.7	0.8	0.5	24.5	<0.01	0.04
G002015		0.95	20.3	600	6.7	10.3	<0.001	0.06	0.31	2.1	0.8	0.4	34.8	<0.01	0.04
G002016		1.38	17.1	350	7.3	10.4	<0.001	0.04	0.21	2.9	0.6	0.5	18.0	<0.01	0.03
G002017		1.26	20.8	480	7.1	11.0	<0.001	0.04	0.18	2.9	0.6	0.5	19.4	<0.01	0.03
G002018		1.71	29.4	450	7.5	13.6	<0.001	0.03	0.20	3.8	0.8	0.5	22.1	<0.01	0.04
G002019		1.38	20.5	640	6.6	10.6	<0.001	0.04	0.19	3.2	0.7	0.4	21.8	<0.01	0.03
G002020		1.72	23.1	590	7.0	12.6	<0.001	0.04	0.22	3.4	0.8	0.5	20.3	<0.01	0.04
G002021		2.34	66.6	460	8.1	23.7	<0.001	0.07	0.30	4.0	1.0	0.5	40.4	<0.01	0.06
G002022		2.37	57.4	470	11.9	59.3	<0.001	0.04	0.29	7.5	1.0	0.6	42.8	<0.01	0.05
G002023		1.75	14.3	320	6.1	33.3	<0.001	0.03	0.23	2.4	0.4	0.6	16.7	<0.01	0.03
G002024		1.69	27.7	470	5.7	19.3	<0.001	0.05	0.22	3.7	0.7	0.5	31.2	<0.01	0.04
G002025		1.67	31.6	590	5.1	26.3	<0.001	0.08	0.23	3.8	0.9	0.4	40.2	<0.01	0.04
G002026		1.96	37.9	760	6.9	42.8	<0.001	0.08	0.25	5.0	1.1	0.5	55.2	<0.01	0.04
G002027		2.58	45.4	830	9.4	65.0	<0.001	0.04	0.17	7.2	1.1	0.7	61.8	<0.01	0.04
G002028		1.69	23.5	680	4.7	29.0	0.001	0.11	0.24	3.1	1.0	0.3	133.0	0.01	0.03
G002029		2.55	35.8	690	6.5	58.8	<0.001	0.07	0.17	4.6	1.0	0.4	98.4	<0.01	0.03
G002030		2.27	32.5	690	6.1	52.3	<0.001	0.08	0.20	4.2	0.9	0.4	98.2	<0.01	0.03
G002031		1.57	21.9	700	4.2	28.4	0.001	0.16	0.26	2.5	0.9	0.3	119.5	0.01	0.02
G002032		2.06	30.9	720	5.6	31.2	<0.001	0.12	0.50	3.7	1.0	0.4	65.9	0.01	0.03
G002033		2.24	29.8	500	5.1	15.8	0.001	0.11	0.37	4.2	1.1	0.4	83.7	0.01	0.04
G002034		2.46	31.3	460	6.8	35.7	<0.001	0.06	0.28	4.6	1.0	0.6	37.7	<0.01	0.04
G002035		0.68	7.2	240	3.6	4.1	<0.001	0.02	0.27	1.4	0.4	0.4	9.0	<0.01	0.02
G002036		0.43	13.0	600	3.9	6.3	<0.001	0.05	0.18	0.5	0.5	0.3	12.8	<0.01	0.02
G002037		2.43	36.9	510	8.4	17.7	<0.001	0.04	0.40	5.1	1.1	0.8	27.4	<0.01	0.06
G002038		0.46	6.6	420	4.4	4.3	<0.001	0.03	0.33	0.7	0.3	0.4	10.0	<0.01	0.02
G002039		1.00	5.3	200	4.4	14.4	<0.001	0.02	0.19	1.4	0.2	0.4	8.6	<0.01	0.02
G002040		<0.05	0.3	10	0.5	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002001		0.080	0.09	1.03	65	0.12	10.15	64
G002002		0.085	0.07	0.42	59	0.16	3.76	57
G002003		0.060	0.06	0.67	42	0.14	6.88	47
G002004		0.066	0.08	0.73	46	0.12	15.85	49
G002005		0.075	0.07	0.82	52	0.14	6.99	50
G002006		0.106	0.09	0.48	62	0.18	3.89	54
G002007		0.095	0.08	0.77	64	0.13	6.54	71
G002008		0.089	0.08	1.25	59	0.11	9.99	59
G002009		0.059	0.06	0.91	42	0.12	8.70	41
G002010		0.078	0.07	1.79	59	0.12	11.50	50
G002011		0.066	0.06	1.75	46	0.17	10.70	39
G002012		0.077	0.08	1.11	47	0.13	6.41	29
G002013		0.073	0.09	1.46	57	0.13	7.08	50
G002014		0.073	0.09	1.29	48	0.17	7.53	47
G002015		0.049	0.07	1.07	36	0.18	10.15	43
G002016		0.089	0.08	0.63	61	0.16	3.46	42
G002017		0.084	0.08	0.77	58	0.31	4.48	52
G002018		0.102	0.10	0.69	68	0.17	4.70	62
G002019		0.093	0.08	0.81	57	0.17	4.90	49
G002020		0.100	0.10	0.81	69	0.16	5.14	54
G002021		0.084	0.11	0.74	67	0.11	6.83	76
G002022		0.133	0.21	0.70	102	0.12	12.25	74
G002023		0.107	0.15	0.40	47	0.22	2.47	33
G002024		0.091	0.12	0.84	55	0.13	5.88	47
G002025		0.098	0.14	0.87	66	0.15	7.07	54
G002026		0.116	0.22	1.01	79	0.16	14.05	62
G002027		0.165	0.30	1.03	93	0.16	11.65	83
G002028		0.070	0.16	0.79	43	0.12	8.90	55
G002029		0.112	0.27	0.84	61	0.16	8.97	78
G002030		0.098	0.25	0.77	56	0.12	8.98	71
G002031		0.052	0.16	1.38	34	0.09	7.01	61
G002032		0.075	0.17	0.86	49	0.75	9.12	63
G002033		0.082	0.13	1.95	47	0.20	7.31	67
G002034		0.118	0.16	0.83	66	0.17	5.13	78
G002035		0.053	0.10	0.22	35	0.08	1.14	21
G002036		0.026	0.05	0.75	18	0.07	3.48	26
G002037		0.121	0.18	1.07	83	0.34	5.89	73
G002038		0.039	0.05	0.28	30	0.19	0.97	18
G002039		0.064	0.09	0.20	29	0.24	0.98	20
G002040		<0.005	<0.02	0.07	<1	<0.05	0.63	2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002041		0.34	<0.005	0.09	2.41	9.9	<0.2	<10	130	0.34	0.25	0.22	0.16	20.80	10.7	59
G002042		0.26	<0.005	0.15	0.67	3.1	<0.2	<10	200	0.11	0.15	0.25	0.60	10.05	5.6	13
G002043		0.48	<0.005	0.22	1.85	6.3	<0.2	<10	180	0.57	0.19	0.23	0.30	63.60	6.6	30
G002044		0.40	<0.005	0.40	1.74	7.0	<0.2	<10	210	0.46	0.24	0.32	0.45	73.50	15.4	24
G002045		0.46	<0.005	0.27	1.93	7.2	<0.2	<10	220	0.47	0.17	0.36	0.28	80.50	14.1	28
G002046		0.40	<0.005	0.20	2.06	6.6	<0.2	<10	230	0.56	0.15	0.36	0.41	108.00	20.1	30
G002047		0.38	<0.005	0.21	0.68	2.3	<0.2	<10	180	0.24	0.13	0.20	0.17	62.50	3.7	11
G002048		0.36	<0.005	0.10	0.83	3.5	<0.2	<10	170	0.25	0.13	0.23	0.37	54.20	3.9	14
G002049		0.52	<0.005	0.21	1.83	5.7	<0.2	<10	310	0.57	0.16	0.38	0.21	137.50	9.8	22
G002050		0.34	<0.005	0.23	2.00	6.2	<0.2	<10	310	0.61	0.18	0.36	0.21	150.50	10.3	21
G002051		0.38	<0.005	0.05	1.46	4.7	<0.2	<10	150	0.22	0.09	0.34	0.14	19.50	8.1	27
G002052		0.42	0.005	0.06	1.47	5.6	<0.2	<10	110	0.18	0.11	0.25	0.14	17.35	10.2	28
G002053		0.40	<0.005	0.05	1.38	4.9	<0.2	<10	110	0.17	0.10	0.25	0.13	14.00	10.1	26
G002054		0.42	<0.005	0.04	1.43	4.4	<0.2	<10	120	0.19	0.08	0.30	0.13	18.15	8.0	26
G002055		0.48	<0.005	0.06	1.30	5.4	<0.2	<10	100	0.15	0.09	0.27	0.10	14.35	10.6	25
G002056		0.34	<0.005	0.07	1.25	4.1	<0.2	<10	100	0.21	0.09	0.29	0.13	15.60	6.4	24
G002057		0.32	<0.005	0.04	1.34	4.5	<0.2	<10	90	0.17	0.09	0.36	0.10	15.60	11.1	24
G002058		0.38	<0.005	0.06	1.72	5.8	<0.2	<10	140	0.39	0.09	0.47	0.12	25.30	10.1	29
G002059		0.42	<0.005	0.04	1.47	4.2	<0.2	<10	90	0.17	0.10	0.29	0.06	15.10	7.2	26
G002060		0.34	<0.005	0.11	1.46	4.4	<0.2	<10	120	0.17	0.13	0.57	0.17	16.95	8.4	39
G002061		0.34	<0.005	0.10	1.61	3.7	<0.2	<10	200	0.24	0.12	0.59	0.19	43.90	11.0	36
G002062		0.48	<0.005	0.07	1.57	2.4	<0.2	<10	60	0.12	0.14	0.20	0.10	14.00	6.5	32
G002063		0.36	<0.005	0.30	0.74	2.7	<0.2	<10	100	0.16	0.09	0.27	0.30	16.10	4.3	16
G002064		0.38	<0.005	0.06	1.72	5.9	<0.2	<10	90	0.23	0.13	0.26	0.10	19.45	8.8	30
G002065		0.46	0.007	0.08	1.23	4.4	<0.2	<10	70	0.13	0.12	0.25	0.12	17.10	5.6	23
G002066		0.44	0.009	0.08	1.05	2.8	<0.2	<10	60	0.09	0.09	0.29	0.09	17.65	5.8	21
G002067		0.26	0.008	0.07	1.08	3.1	<0.2	<10	70	0.11	0.11	0.26	0.10	16.30	4.8	19
G002068		0.34	<0.005	0.18	2.17	2.2	<0.2	<10	270	0.41	0.09	0.28	0.15	21.00	13.9	48
G002069		0.26	<0.005	0.25	1.86	3.4	<0.2	<10	210	0.45	0.10	0.84	0.17	32.10	10.1	39
G002070		0.40	<0.005	0.19	1.85	4.3	<0.2	<10	200	0.37	0.10	0.77	0.18	25.10	10.8	40
G002071		0.44	<0.005	0.14	2.38	4.8	<0.2	<10	200	0.43	0.10	1.12	0.23	40.10	13.2	51
G002072		0.34	<0.005	0.27	1.03	2.5	<0.2	<10	120	0.35	0.11	0.40	0.56	25.90	11.9	22
G002073		0.48	0.009	0.09	1.24	6.0	<0.2	<10	70	0.29	0.20	0.21	0.27	26.80	7.9	32
G002074		0.44	<0.005	0.13	3.20	4.5	<0.2	<10	250	0.52	0.15	0.68	0.16	39.40	25.4	75
G002075		0.38	<0.005	0.18	2.85	5.0	<0.2	<10	260	0.54	0.14	0.91	0.25	28.90	22.2	73
G002076		0.34	<0.005	0.08	1.33	3.0	<0.2	<10	80	0.14	0.11	0.25	0.09	14.55	5.5	31
G002077		0.38	<0.005	0.06	2.09	2.8	<0.2	<10	190	0.31	0.12	0.58	0.16	35.20	13.5	46
G002078		0.38	<0.005	0.08	1.98	3.1	<0.2	<10	170	0.30	0.11	0.74	0.23	30.90	13.8	43
G002079		0.28	<0.005	0.08	2.12	3.6	<0.2	<10	190	0.32	0.11	0.53	0.16	34.10	13.8	52
G002080		0.06	<0.005	<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	<0.01	<0.01	1.03	0.1	1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002041		2.08	17.9	3.45	9.16	0.08	0.09	0.02	0.028	0.09	14.3	14.1	0.67	413	1.41
G002042		0.97	13.8	1.49	4.85	0.05	<0.02	0.03	0.013	0.05	5.0	2.9	0.16	2020	0.98
G002043		2.36	38.3	2.48	7.78	0.09	0.04	0.04	0.029	0.08	38.4	8.9	0.40	284	1.30
G002044		2.56	18.2	2.48	7.50	0.10	0.05	0.06	0.029	0.09	42.1	8.7	0.41	1110	1.68
G002045		4.00	19.9	2.64	7.67	0.11	0.05	0.11	0.028	0.09	40.8	12.5	0.48	1605	1.09
G002046		5.01	20.5	2.95	7.54	0.13	0.06	0.13	0.034	0.11	54.3	13.3	0.47	1875	1.24
G002047		2.95	13.1	1.25	5.42	0.09	0.02	0.06	0.012	0.08	41.8	2.6	0.16	466	0.93
G002048		3.14	17.0	1.36	4.68	0.10	0.02	0.04	0.014	0.09	38.7	4.5	0.22	248	1.17
G002049		7.85	19.7	2.59	7.42	0.16	0.07	0.16	0.029	0.13	89.5	11.2	0.42	612	1.18
G002050		7.48	21.0	2.65	7.92	0.17	0.08	0.17	0.037	0.12	101.5	11.8	0.44	597	1.34
G002051		0.72	13.0	2.02	4.97	0.09	0.04	0.02	0.016	0.06	9.6	10.4	0.51	235	0.47
G002052		0.70	12.0	2.02	5.47	0.07	0.04	0.04	0.016	0.05	8.8	9.8	0.48	407	0.62
G002053		0.74	10.7	2.13	5.38	0.08	0.04	0.03	0.014	0.06	7.0	9.6	0.49	375	0.63
G002054		0.69	11.2	1.96	4.89	0.08	0.04	0.02	0.015	0.06	8.9	9.8	0.51	248	0.45
G002055		0.63	10.0	2.08	5.01	0.07	0.04	0.03	0.013	0.05	7.2	9.1	0.48	420	0.93
G002056		0.47	17.2	1.93	4.85	0.07	0.04	0.06	0.015	0.04	8.1	7.9	0.38	191	0.67
G002057		0.55	10.4	1.86	4.84	0.08	0.04	0.04	0.013	0.05	7.6	9.5	0.49	368	0.47
G002058		0.61	25.0	2.40	5.35	0.09	0.06	0.03	0.019	0.05	12.3	12.0	0.54	255	0.52
G002059		0.67	11.2	1.84	5.69	0.07	0.04	0.05	0.017	0.04	7.5	10.7	0.46	171	0.50
G002060		0.76	14.0	2.03	5.66	0.07	0.04	0.05	0.014	0.06	8.6	8.6	0.70	414	0.65
G002061		0.73	21.1	2.13	5.34	0.10	0.04	0.05	0.015	0.07	25.2	8.6	0.75	430	0.72
G002062		0.71	13.6	1.83	5.85	0.07	0.02	0.04	0.016	0.04	7.2	8.5	0.63	169	0.59
G002063		0.36	31.9	1.21	2.18	0.06	0.02	0.17	0.011	0.03	8.0	2.5	0.17	141	1.01
G002064		0.70	15.4	3.02	5.61	0.08	0.03	0.05	0.020	0.04	9.6	10.0	0.55	274	0.86
G002065		0.60	11.7	1.93	4.93	0.07	0.02	0.04	0.012	0.04	9.1	6.4	0.45	145	0.81
G002066		0.56	9.4	1.61	4.20	0.07	<0.02	0.03	0.009	0.04	9.4	5.3	0.49	169	0.54
G002067		0.54	10.4	1.56	4.44	0.06	0.02	0.05	0.011	0.03	8.5	5.7	0.38	117	0.66
G002068		1.15	25.4	2.46	7.93	0.10	0.02	0.05	0.017	0.26	11.0	11.0	0.76	357	0.68
G002069		1.05	29.1	2.30	6.00	0.11	0.03	0.04	0.022	0.21	20.1	12.4	0.68	307	0.87
G002070		1.10	27.8	2.45	6.46	0.10	0.04	0.05	0.017	0.23	15.6	13.0	0.72	317	0.92
G002071		1.47	29.3	2.95	7.45	0.11	0.05	0.03	0.019	0.28	21.8	16.2	0.85	274	0.67
G002072		0.68	31.9	1.39	4.09	0.08	0.02	0.05	0.012	0.08	13.6	3.9	0.23	214	0.98
G002073		0.83	32.0	3.31	7.17	0.08	0.02	0.02	0.017	0.12	19.9	6.2	0.37	120	1.73
G002074		2.59	39.1	4.16	10.75	0.13	0.05	0.03	0.026	0.62	22.6	21.5	1.30	661	1.03
G002075		2.10	32.1	3.71	9.36	0.10	0.04	0.02	0.021	0.44	14.8	21.0	1.16	468	1.09
G002076		1.26	10.8	1.66	6.03	0.07	0.02	0.04	0.011	0.05	7.6	7.1	0.50	151	0.41
G002077		1.41	18.2	2.87	6.69	0.11	0.05	0.03	0.018	0.26	18.1	16.4	1.05	501	0.62
G002078		1.27	18.5	2.69	6.26	0.10	0.05	0.03	0.018	0.23	16.3	15.9	0.97	474	0.63
G002079		1.32	17.7	3.01	6.57	0.11	0.06	0.04	0.018	0.18	17.6	15.6	1.01	336	0.78
G002080		<0.05	0.6	0.02	0.06	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	0.06

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002041		2.82	28.4	320	9.4	22.7	<0.001	0.02	0.79	5.0	0.8	0.7	18.7	<0.01	0.04
G002042		1.17	9.4	340	6.1	12.6	<0.001	0.03	0.31	1.6	0.3	0.5	19.8	<0.01	0.02
G002043		2.37	20.4	410	12.3	24.0	<0.001	0.03	0.40	3.7	0.8	0.7	22.3	<0.01	0.03
G002044		2.90	17.0	550	13.9	29.4	<0.001	0.04	0.60	4.1	0.8	0.7	31.0	<0.01	0.04
G002045		2.82	17.5	770	12.8	26.7	<0.001	0.06	0.60	4.3	1.0	0.7	32.9	<0.01	0.03
G002046		3.00	17.9	990	14.3	31.1	<0.001	0.07	0.57	5.2	1.1	0.7	31.9	<0.01	0.03
G002047		1.91	6.9	690	9.6	26.3	<0.001	0.03	0.32	1.9	0.5	0.6	21.5	<0.01	0.02
G002048		1.51	10.0	420	10.4	24.5	<0.001	0.02	0.62	2.2	0.5	0.5	21.8	<0.01	0.02
G002049		3.62	14.3	900	12.0	37.4	<0.001	0.06	1.30	4.7	1.1	0.8	34.6	<0.01	0.03
G002050		3.62	15.4	900	13.8	35.6	<0.001	0.06	1.41	5.2	1.2	0.8	36.5	<0.01	0.03
G002051		1.46	19.7	590	4.9	9.9	<0.001	0.02	0.28	3.9	0.6	0.4	26.3	<0.01	0.02
G002052		1.37	17.4	530	5.4	9.3	<0.001	0.03	0.27	3.3	0.6	0.4	20.9	<0.01	0.02
G002053		1.47	16.5	510	4.9	9.8	<0.001	0.03	0.30	3.0	0.5	0.4	19.6	<0.01	0.02
G002054		1.44	18.1	570	4.5	10.4	<0.001	0.02	0.26	3.6	0.6	0.4	22.1	<0.01	0.02
G002055		1.29	15.8	570	4.7	8.8	<0.001	0.03	0.25	3.0	0.6	0.4	22.0	<0.01	0.02
G002056		1.19	13.5	620	5.1	4.2	<0.001	0.05	0.31	2.5	0.6	0.4	25.0	<0.01	0.03
G002057		1.44	15.4	610	4.7	7.1	<0.001	0.03	0.26	3.4	0.5	0.4	26.4	<0.01	0.02
G002058		1.59	20.9	800	5.2	6.4	<0.001	0.03	0.38	4.7	0.7	0.4	33.8	<0.01	0.03
G002059		1.36	17.0	610	5.6	5.7	<0.001	0.03	0.31	3.0	0.5	0.4	23.7	<0.01	0.02
G002060		1.44	18.4	490	7.9	11.9	<0.001	0.05	0.32	3.2	0.6	0.4	37.0	<0.01	0.03
G002061		1.29	22.4	630	6.9	13.2	<0.001	0.06	0.29	3.6	0.8	0.4	40.5	<0.01	0.03
G002062		1.12	18.4	480	8.7	7.2	<0.001	0.03	0.23	2.8	0.6	0.4	17.8	<0.01	0.02
G002063		0.53	11.3	1400	4.2	4.3	<0.001	0.14	0.29	0.7	0.9	0.2	26.3	<0.01	0.04
G002064		1.49	18.8	620	7.3	8.2	<0.001	0.03	0.35	3.6	1.0	0.4	22.0	<0.01	0.04
G002065		1.15	15.1	490	6.9	7.5	<0.001	0.04	0.20	2.4	0.7	0.3	20.3	<0.01	0.03
G002066		0.86	14.2	590	5.9	8.0	<0.001	0.03	0.15	2.1	0.6	0.3	20.3	<0.01	0.03
G002067		0.95	13.1	500	6.2	7.0	<0.001	0.04	0.27	2.1	0.6	0.3	20.8	<0.01	0.02
G002068		1.81	33.5	690	5.9	29.3	<0.001	0.04	0.14	4.2	0.8	0.5	21.1	<0.01	0.04
G002069		1.52	30.4	810	5.5	24.9	0.002	0.07	0.24	3.8	1.1	0.4	49.5	<0.01	0.03
G002070		1.64	31.3	930	5.6	25.9	0.001	0.06	0.23	3.7	1.0	0.4	45.1	<0.01	0.03
G002071		2.13	39.2	750	7.3	41.6	0.001	0.12	0.25	4.6	1.3	0.5	52.7	<0.01	0.04
G002072		0.93	23.6	620	6.5	12.1	<0.001	0.08	0.19	1.3	0.8	0.3	31.1	<0.01	0.04
G002073		1.81	38.9	380	12.2	15.2	<0.001	0.07	0.31	2.3	0.9	0.5	21.5	<0.01	0.07
G002074		2.87	54.4	800	10.1	74.6	<0.001	0.03	0.18	7.2	1.3	0.7	39.5	<0.01	0.05
G002075		2.43	51.5	570	7.9	59.0	<0.001	0.08	0.18	5.3	1.1	0.6	61.5	<0.01	0.04
G002076		1.19	16.8	450	6.4	15.2	<0.001	0.04	0.15	2.5	0.6	0.4	20.9	<0.01	0.02
G002077		1.89	27.3	900	6.2	31.3	<0.001	0.05	0.18	5.3	0.9	0.5	37.3	<0.01	0.03
G002078		1.72	28.0	860	6.1	30.1	<0.001	0.08	0.18	4.9	0.9	0.5	48.5	<0.01	0.02
G002079		2.00	31.4	780	6.1	25.9	<0.001	0.06	0.22	5.1	0.9	0.5	35.6	<0.01	0.03
G002080		<0.05	0.4	10	0.4	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002041		0.141	0.22	0.75	81	0.40	4.58	68
G002042		0.074	0.09	0.28	44	0.13	1.67	50
G002043		0.094	0.16	2.50	59	0.16	9.44	49
G002044		0.099	0.24	1.84	58	0.22	10.45	59
G002045		0.093	0.36	2.46	55	0.17	11.90	60
G002046		0.097	0.49	3.81	55	0.19	15.45	61
G002047		0.079	0.23	1.21	31	0.10	7.29	29
G002048		0.067	0.20	1.44	32	0.24	6.86	33
G002049		0.100	0.44	4.81	48	0.63	18.55	56
G002050		0.092	0.44	5.52	47	0.71	20.30	55
G002051		0.108	0.09	0.66	54	0.21	5.68	47
G002052		0.102	0.09	0.71	57	0.13	4.34	47
G002053		0.105	0.08	0.55	61	0.22	3.93	44
G002054		0.108	0.08	0.65	53	0.12	5.09	45
G002055		0.093	0.07	0.49	61	0.19	3.87	46
G002056		0.078	0.07	0.79	51	0.11	3.86	38
G002057		0.103	0.06	0.50	55	0.23	4.74	45
G002058		0.103	0.06	0.67	62	0.20	8.16	45
G002059		0.092	0.07	0.46	49	0.16	4.07	42
G002060		0.099	0.09	0.80	51	0.60	3.89	52
G002061		0.080	0.09	1.16	50	0.11	11.95	49
G002062		0.077	0.08	0.63	38	0.15	3.18	56
G002063		0.021	0.04	1.35	18	0.06	5.07	27
G002064		0.089	0.08	0.73	58	0.12	5.14	54
G002065		0.067	0.07	0.63	45	0.09	4.06	46
G002066		0.053	0.06	0.64	31	0.18	4.14	44
G002067		0.056	0.06	0.60	32	0.08	3.72	38
G002068		0.108	0.14	0.83	65	0.35	5.79	64
G002069		0.090	0.13	2.84	56	0.23	12.05	57
G002070		0.096	0.13	2.35	63	0.34	9.86	58
G002071		0.104	0.20	1.47	71	0.18	13.25	84
G002072		0.042	0.06	1.16	28	0.10	6.22	26
G002073		0.085	0.07	0.74	68	0.16	6.93	52
G002074		0.166	0.34	1.15	97	0.26	12.25	93
G002075		0.143	0.24	2.47	85	0.23	7.82	73
G002076		0.078	0.11	0.62	34	0.15	3.55	44
G002077		0.129	0.21	3.97	69	0.18	10.85	72
G002078		0.116	0.18	3.60	63	0.16	10.55	83
G002079		0.131	0.18	2.86	70	0.19	10.55	75
G002080		<0.005	<0.02	0.08	<1	<0.05	0.59	2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002081		0.44	<0.005	0.07	2.09	5.5	<0.2	<10	150	0.40	0.12	0.68	0.18	31.50	11.6	41
G002082		0.40	<0.005	0.09	2.33	5.1	<0.2	<10	170	0.54	0.11	1.63	0.19	32.10	12.8	47
G002083		0.42	0.006	0.10	2.29	5.4	<0.2	<10	230	0.41	0.10	2.19	0.28	25.70	12.9	47
G002084		0.42	<0.005	0.07	2.21	3.8	<0.2	<10	190	0.32	0.11	0.77	0.23	35.40	14.6	49
G002085		0.38	0.006	0.06	2.21	3.0	<0.2	<10	190	0.35	0.11	0.62	0.23	38.30	15.6	53
G002086		0.42	0.010	0.09	2.25	4.0	<0.2	<10	210	0.35	0.13	0.90	0.32	36.60	14.9	50
G002087		0.52	0.005	0.06	2.06	3.7	<0.2	<10	180	0.31	0.12	0.67	0.25	33.50	12.1	44
G002088		0.56	<0.005	0.08	1.98	3.9	<0.2	<10	200	0.31	0.12	0.63	0.23	43.90	10.6	39
G002089		0.24	0.007	0.08	0.58	1.9	<0.2	<10	80	0.11	0.10	0.19	0.26	7.30	2.6	31
G002090		0.30	0.005	0.06	0.64	2.2	<0.2	<10	90	0.11	0.12	0.23	0.18	8.26	3.4	37
G002091		0.66	0.005	0.08	2.01	8.4	<0.2	<10	140	0.40	0.13	0.47	0.19	30.10	12.5	37
G002092		0.46	0.005	0.06	1.74	6.8	<0.2	<10	110	0.23	0.13	0.42	0.15	18.40	9.6	33
G002093		0.56	0.005	0.33	2.34	8.4	<0.2	<10	210	0.40	0.40	0.31	0.36	60.40	10.9	27
G002094		0.44	0.006	0.14	0.99	3.5	<0.2	<10	190	0.23	0.10	0.35	0.31	77.60	4.3	12
G002095		0.36	<0.005	0.19	1.32	6.4	<0.2	<10	170	0.39	0.20	0.22	0.26	52.10	5.1	18
G002096		0.38	0.007	0.21	0.65	2.2	<0.2	<10	130	0.32	0.10	0.12	0.44	47.10	2.0	13
G002097		0.46	<0.005	0.07	1.93	15.3	<0.2	<10	150	0.27	0.16	0.32	0.12	30.40	15.6	23
G002098		0.56	0.007	0.04	2.29	10.3	<0.2	<10	140	0.24	0.19	0.29	0.11	25.00	9.6	28
G002099		0.46	0.010	0.12	1.92	6.4	<0.2	<10	220	0.34	0.16	0.42	0.15	53.90	10.0	23
G002100		0.48	0.005	0.12	1.97	8.8	<0.2	<10	250	0.35	0.17	0.40	0.18	74.90	15.1	23
G002101		0.52	0.005	0.11	1.91	6.9	<0.2	<10	180	0.39	0.16	0.36	0.16	51.00	8.9	23
G002102		0.52	0.007	0.08	1.72	6.6	<0.2	<10	150	0.26	0.18	0.24	0.10	33.90	9.3	20
G002103		0.58	0.009	0.12	2.07	7.7	<0.2	<10	200	0.31	0.16	0.42	0.11	53.60	8.9	22
G002104		0.38	0.018	0.10	1.39	5.2	<0.2	<10	150	0.19	0.10	0.37	0.19	22.80	14.3	27
G002105		0.36	0.024	0.15	2.22	8.2	<0.2	<10	210	0.29	0.16	0.54	0.27	32.20	17.7	41
G002106		0.36	0.008	0.05	1.47	4.0	<0.2	<10	120	0.18	0.09	0.39	0.14	21.10	7.3	27
G002107		0.36	0.015	0.08	1.36	5.2	<0.2	<10	120	0.19	0.10	0.33	0.13	19.35	8.9	25
G002108		0.58	<0.005	0.05	1.69	5.7	<0.2	<10	100	0.22	0.11	0.43	0.13	18.90	7.6	29
G002109		0.52	0.010	0.03	1.38	4.5	<0.2	<10	100	0.16	0.08	0.47	0.11	19.35	7.0	24
G002110		0.46	<0.005	0.04	1.46	4.6	<0.2	<10	110	0.21	0.09	0.45	0.13	19.05	8.7	25
G002111		0.50	0.007	0.06	1.71	6.6	<0.2	<10	140	0.36	0.11	0.53	0.19	23.50	10.2	30
G002112		0.44	0.005	0.06	1.63	5.5	<0.2	<10	120	0.28	0.10	0.62	0.11	20.40	9.8	28
G002113		0.40	0.006	0.06	1.61	6.2	<0.2	<10	120	0.29	0.09	0.62	0.19	23.20	9.7	30
G002114		0.40	0.011	0.16	2.02	4.2	<0.2	<10	130	0.28	0.13	1.72	0.20	30.60	13.8	37
G002115		0.32	<0.005	0.10	1.19	4.9	<0.2	<10	80	0.12	0.12	0.35	0.14	12.35	7.4	27
G002116		0.42	0.011	0.13	1.39	3.1	<0.2	<10	80	0.16	0.13	0.41	0.13	18.20	5.8	28
G002117		0.38	0.014	0.15	1.23	2.8	<0.2	<10	60	0.11	0.12	0.29	0.12	14.75	5.3	24
G002118		0.50	0.016	0.10	1.16	2.8	<0.2	<10	60	0.13	0.10	0.33	0.13	15.65	4.9	22
G002119		0.38	0.012	0.22	1.14	3.8	<0.2	<10	80	0.13	0.16	0.37	0.18	17.45	6.0	24
G002120		Not Recvd														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002081		1.75	19.6	2.89	6.32	0.09	0.04	0.11	0.023	0.20	15.3	13.8	0.78	313	0.56
G002082		2.90	26.4	2.88	6.85	0.10	0.06	0.06	0.024	0.34	15.7	16.2	0.95	400	0.53
G002083		2.39	29.6	2.77	6.95	0.10	0.06	0.04	0.023	0.28	12.5	15.0	1.03	513	0.61
G002084		1.76	20.8	3.13	6.45	0.11	0.04	0.02	0.022	0.31	16.7	14.9	1.19	759	0.67
G002085		1.76	21.0	3.35	6.75	0.13	0.05	0.02	0.022	0.40	15.9	15.6	1.39	505	0.67
G002086		1.62	23.9	3.08	6.64	0.11	0.05	0.03	0.024	0.27	18.2	16.2	1.16	777	0.80
G002087		1.54	19.2	2.89	6.33	0.10	0.05	0.03	0.023	0.22	17.2	14.9	1.00	441	0.67
G002088		1.53	17.2	2.72	6.02	0.11	0.05	0.05	0.021	0.21	23.2	13.0	0.88	372	0.97
G002089		0.51	13.9	0.96	2.71	<0.05	<0.02	0.06	0.012	0.05	3.6	1.0	0.12	70	0.77
G002090		0.71	13.1	1.19	3.27	<0.05	0.02	0.07	0.011	0.05	4.0	1.6	0.18	170	0.91
G002091		1.00	28.5	3.23	5.74	0.08	0.05	0.03	0.027	0.06	14.6	11.4	0.71	395	1.04
G002092		0.87	17.8	2.72	5.61	0.06	0.04	0.04	0.024	0.06	8.6	10.0	0.64	373	0.92
G002093		5.64	17.9	3.32	8.76	0.10	0.07	0.18	0.043	0.16	39.0	10.3	0.48	1160	2.04
G002094		3.68	16.3	1.67	4.01	0.10	0.06	0.13	0.021	0.10	44.0	4.1	0.26	193	1.04
G002095		3.48	21.0	2.53	7.28	0.08	0.05	0.05	0.028	0.12	27.2	6.5	0.31	423	1.48
G002096		0.72	32.9	1.02	2.44	0.05	<0.02	0.10	0.018	0.03	26.9	1.1	0.07	42	0.56
G002097		6.20	12.8	3.28	8.18	0.08	0.08	0.06	0.032	0.16	16.1	12.4	0.61	816	1.31
G002098		5.23	11.4	3.74	9.43	0.09	0.18	0.04	0.035	0.14	13.6	16.6	0.69	471	1.19
G002099		5.16	15.1	3.09	7.57	0.10	0.09	0.08	0.032	0.20	27.9	12.7	0.60	577	0.96
G002100		4.87	17.6	3.20	7.89	0.10	0.08	0.07	0.035	0.17	38.2	13.3	0.53	1100	1.28
G002101		6.31	15.7	3.21	7.99	0.11	0.08	0.06	0.036	0.18	27.2	16.0	0.60	501	1.11
G002102		10.45	13.0	2.89	8.22	0.08	0.06	0.08	0.031	0.18	20.7	10.8	0.51	601	1.62
G002103		13.70	14.4	3.08	8.51	0.11	0.12	0.12	0.038	0.24	32.7	14.2	0.64	555	1.23
G002104		0.93	13.9	2.14	4.79	0.06	0.03	0.07	0.019	0.06	10.8	8.6	0.48	588	1.10
G002105		1.42	19.1	3.19	7.76	0.09	0.06	0.09	0.029	0.11	15.3	13.8	0.77	812	1.42
G002106		0.78	11.7	2.06	4.82	0.07	0.05	0.02	0.019	0.07	9.8	9.4	0.55	244	0.49
G002107		0.86	11.4	2.01	4.92	0.07	0.03	0.06	0.018	0.06	9.2	8.5	0.48	291	1.19
G002108		0.78	15.2	2.34	5.61	0.06	0.04	0.03	0.023	0.05	8.8	11.1	0.57	246	0.69
G002109		0.58	11.0	2.09	4.51	0.06	0.05	0.14	0.019	0.05	8.9	8.7	0.52	246	0.48
G002110		0.63	13.5	2.15	4.69	0.06	0.05	0.03	0.020	0.05	8.8	9.2	0.53	331	0.53
G002111		0.74	29.5	2.61	5.29	0.07	0.05	0.02	0.025	0.05	10.7	10.7	0.60	333	0.78
G002112		0.77	20.8	2.43	5.22	0.07	0.06	0.03	0.025	0.05	9.4	10.2	0.57	291	1.02
G002113		0.65	20.1	2.57	5.01	0.07	0.08	0.02	0.023	0.06	10.6	10.7	0.64	322	0.56
G002114		0.80	30.5	3.01	5.00	0.08	0.07	0.04	0.022	0.08	15.1	7.5	1.21	581	0.83
G002115		0.69	12.1	2.10	4.60	0.05	0.02	0.06	0.013	0.06	5.9	5.8	0.54	363	2.06
G002116		0.73	13.7	2.05	4.79	0.05	0.02	0.05	0.015	0.05	9.3	5.7	0.64	162	0.77
G002117		0.69	9.8	1.77	4.40	<0.05	0.02	0.03	0.015	0.04	7.9	6.3	0.57	146	0.47
G002118		0.61	9.7	1.70	4.14	<0.05	0.02	0.04	0.013	0.04	8.3	6.1	0.49	137	0.47
G002119		0.73	14.2	2.13	4.41	<0.05	<0.02	0.07	0.015	0.05	9.8	5.2	0.54	199	1.11
G002120															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002081		1.57	26.5	700	7.4	26.3	<0.001	0.04	0.21	4.2	0.7	0.5	37.5	<0.01	0.02
G002082		2.07	30.0	740	7.2	45.8	<0.001	0.05	0.20	4.6	0.8	0.6	65.4	<0.01	0.03
G002083		2.09	30.6	870	7.0	43.7	<0.001	0.07	0.21	4.7	1.0	0.6	67.3	0.01	0.03
G002084		1.61	29.1	1010	6.2	33.7	<0.001	0.03	0.20	5.3	0.6	0.5	38.7	<0.01	0.02
G002085		1.51	30.6	1090	5.9	35.8	<0.001	0.02	0.16	5.9	0.6	0.5	29.0	<0.01	0.03
G002086		1.68	31.9	880	6.9	33.4	<0.001	0.06	0.19	5.5	0.8	0.6	50.1	<0.01	0.02
G002087		1.68	25.8	880	6.1	27.8	<0.001	0.03	0.21	5.0	0.6	0.6	34.8	<0.01	0.02
G002088		1.63	23.2	790	5.7	26.8	<0.001	0.04	0.24	4.2	0.7	0.5	38.8	<0.01	0.02
G002089		0.39	5.6	620	3.8	4.1	<0.001	0.06	0.75	0.5	0.5	0.2	13.9	<0.01	0.02
G002090		0.48	6.5	550	3.2	6.6	<0.001	0.05	1.10	0.8	0.5	0.2	16.1	<0.01	0.05
G002091		1.58	23.0	750	6.8	11.1	<0.001	0.01	1.01	4.6	0.6	0.5	29.9	<0.01	0.03
G002092		1.34	20.3	620	6.3	11.2	<0.001	0.02	0.57	3.8	0.5	0.5	28.9	<0.01	0.03
G002093		3.14	14.4	660	22.9	41.7	<0.001	0.02	1.07	6.1	0.8	1.0	26.3	<0.01	0.04
G002094		2.26	9.0	900	9.2	17.7	<0.001	0.09	0.52	3.1	0.9	0.5	32.4	0.01	0.02
G002095		3.23	11.4	420	10.3	32.1	<0.001	0.02	0.57	3.0	0.5	0.9	20.9	<0.01	0.03
G002096		0.45	7.7	660	8.4	3.6	<0.001	0.05	0.23	0.7	0.8	0.3	17.1	<0.01	0.02
G002097		4.08	13.6	610	18.7	41.2	<0.001	0.01	0.61	4.4	0.4	1.0	22.9	<0.01	0.02
G002098		4.92	13.9	400	21.3	35.3	<0.001	<0.01	0.64	4.8	0.4	1.2	22.0	<0.01	0.03
G002099		4.81	12.6	750	16.9	45.8	<0.001	0.03	0.52	4.9	0.6	1.0	28.7	<0.01	0.02
G002100		4.42	13.0	780	12.3	43.2	<0.001	0.03	0.49	5.0	0.7	1.0	30.1	<0.01	0.03
G002101		4.92	12.6	820	10.8	48.6	<0.001	0.02	0.49	4.7	0.6	1.1	25.0	<0.01	0.03
G002102		4.48	10.3	570	12.0	53.1	<0.001	0.03	0.50	4.2	0.4	1.2	21.0	<0.01	0.03
G002103		6.31	11.7	800	10.4	62.9	<0.001	0.04	0.63	5.6	0.6	1.3	29.0	<0.01	0.02
G002104		1.24	18.2	750	5.3	11.7	<0.001	0.04	0.28	3.4	0.6	0.4	27.4	<0.01	0.02
G002105		1.97	24.9	1160	8.3	18.8	<0.001	0.07	0.43	5.0	0.8	0.7	38.6	<0.01	0.03
G002106		1.37	17.3	630	4.6	10.1	<0.001	0.01	0.24	3.7	0.3	0.5	22.6	<0.01	0.01
G002107		1.27	15.9	740	5.1	11.1	<0.001	0.04	0.26	3.2	0.5	0.4	24.1	<0.01	0.02
G002108		1.45	17.2	670	6.1	8.0	<0.001	0.01	0.34	3.8	0.5	0.5	26.9	<0.01	0.02
G002109		1.32	14.6	700	4.6	7.1	<0.001	0.01	0.25	3.4	0.3	0.4	25.8	<0.01	0.01
G002110		1.33	15.9	700	5.0	8.0	<0.001	0.01	0.28	3.6	0.4	0.4	27.7	<0.01	0.02
G002111		1.38	20.6	740	5.7	9.5	<0.001	0.02	0.36	4.1	0.6	0.5	36.7	<0.01	0.03
G002112		1.49	18.8	670	5.4	8.5	<0.001	0.02	0.37	4.3	0.5	0.5	36.2	<0.01	0.03
G002113		1.57	19.6	730	5.2	8.6	<0.001	0.01	0.35	4.5	0.5	0.5	36.3	<0.01	0.02
G002114		0.96	24.8	810	6.8	10.3	<0.001	0.10	0.31	4.1	1.2	0.3	47.1	<0.01	0.06
G002115		1.02	14.5	620	6.0	8.2	<0.001	0.05	0.24	2.5	0.6	0.4	24.6	<0.01	0.04
G002116		0.97	17.5	560	7.8	9.5	<0.001	0.04	0.17	2.4	0.7	0.3	23.6	<0.01	0.03
G002117		0.77	15.4	460	7.5	8.0	<0.001	0.01	0.18	2.8	0.5	0.3	16.2	<0.01	0.02
G002118		0.77	13.9	560	6.7	7.2	<0.001	0.02	0.17	2.5	0.5	0.3	17.3	<0.01	0.03
G002119		0.72	14.8	650	8.1	7.7	<0.001	0.05	0.18	2.2	0.7	0.3	20.1	<0.01	0.05
G002120															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002081		0.109	0.17	1.06	62	0.50	8.87	71
G002082		0.107	0.28	0.92	60	0.34	10.50	72
G002083		0.098	0.26	0.87	67	0.19	9.50	72
G002084		0.128	0.21	2.21	70	0.24	10.40	70
G002085		0.129	0.24	5.77	76	0.20	10.40	75
G002086		0.131	0.21	3.18	70	0.24	11.75	88
G002087		0.134	0.19	3.84	68	0.34	10.85	70
G002088		0.117	0.17	2.80	63	0.22	11.25	64
G002089		0.037	0.04	0.40	26	0.08	1.62	19
G002090		0.050	0.06	0.39	33	0.12	1.58	25
G002091		0.116	0.10	1.17	71	0.25	8.68	64
G002092		0.109	0.07	0.56	70	0.25	5.00	57
G002093		0.118	0.44	4.62	63	0.24	11.65	65
G002094		0.064	0.16	2.63	27	0.17	13.60	31
G002095		0.127	0.24	1.46	61	0.18	9.67	44
G002096		0.025	0.05	2.58	17	0.08	8.32	12
G002097		0.176	0.53	1.17	74	0.19	7.28	65
G002098		0.219	0.52	0.95	88	0.30	5.80	69
G002099		0.169	0.45	2.47	63	0.20	10.30	59
G002100		0.160	0.43	2.96	71	0.19	13.10	57
G002101		0.177	0.50	2.54	66	0.18	11.35	61
G002102		0.164	0.58	1.88	71	0.20	6.77	55
G002103		0.190	0.92	2.58	58	0.20	11.55	68
G002104		0.092	0.11	0.94	50	0.22	5.74	45
G002105		0.149	0.16	1.30	81	0.23	8.22	70
G002106		0.116	0.09	0.75	53	0.55	6.11	43
G002107		0.095	0.11	0.80	46	0.18	4.71	44
G002108		0.119	0.08	0.62	64	0.22	5.28	53
G002109		0.117	0.06	0.68	57	0.35	5.80	44
G002110		0.112	0.07	0.59	58	0.20	5.85	47
G002111		0.106	0.07	0.76	65	0.17	8.26	51
G002112		0.117	0.06	0.51	64	0.19	6.29	47
G002113		0.129	0.08	0.60	69	0.36	7.87	53
G002114		0.070	0.10	1.05	57	0.12	11.55	74
G002115		0.070	0.06	0.46	45	0.11	3.06	45
G002116		0.061	0.08	0.69	35	0.25	4.26	55
G002117		0.063	0.07	0.55	35	0.10	3.46	50
G002118		0.062	0.06	0.54	32	0.18	3.74	49
G002119		0.050	0.07	0.91	43	0.14	4.01	43
G002120								

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002121		0.52	0.110	0.12	1.26	3.9	<0.2	<10	70	0.12	0.16	0.29	0.10	16.05	7.6	29
G002122		0.36	0.006	0.09	0.94	2.5	<0.2	<10	70	0.13	0.11	0.31	0.10	14.80	4.9	21
G002123		0.46	0.005	0.07	1.01	2.4	<0.2	<10	60	0.11	0.12	0.24	0.08	13.75	3.9	19
G002124		0.36	0.018	0.12	0.87	2.8	<0.2	<10	50	0.10	0.12	0.21	0.09	13.75	3.3	18
G002125		0.46	0.005	0.08	1.00	2.8	<0.2	<10	60	0.13	0.11	0.20	0.11	13.65	3.6	18
G002126		0.36	<0.005	0.15	1.02	3.4	<0.2	<10	70	0.15	0.14	0.21	0.14	18.30	3.9	20
G002127		0.44	0.016	0.17	1.01	3.4	<0.2	<10	80	0.14	0.16	0.21	0.14	18.15	3.7	23
G002128		0.40	<0.005	0.12	1.10	3.1	<0.2	<10	80	0.14	0.12	0.20	0.12	17.75	4.1	22
G002129		0.28	0.008	0.10	1.19	3.2	<0.2	<10	80	0.17	0.11	0.24	0.09	15.35	5.4	30
G002130		0.30	0.007	0.11	1.20	3.3	<0.2	<10	80	0.14	0.11	0.25	0.09	14.45	5.4	30
G002131		0.34	0.006	0.13	1.27	4.3	<0.2	<10	100	0.18	0.13	0.29	0.15	22.50	5.5	27
G002132		0.44	0.006	0.10	1.14	3.5	<0.2	<10	80	0.14	0.11	0.25	0.13	19.40	4.7	23
G002133		0.30	<0.005	0.09	1.15	3.6	<0.2	<10	70	0.13	0.11	0.25	0.13	17.05	4.7	22
G002134		0.36	0.007	0.08	1.32	3.9	<0.2	<10	80	0.17	0.11	0.27	0.15	19.05	5.5	25
G002135		0.32	0.010	0.09	1.03	3.2	<0.2	<10	80	0.13	0.10	0.28	0.11	16.50	4.5	21
G002136		0.60	0.006	0.06	1.90	5.2	<0.2	<10	140	0.47	0.10	0.64	0.15	28.40	15.0	39
G002137		0.38	<0.005	0.07	2.14	4.6	<0.2	<10	210	0.45	0.08	1.49	0.23	24.40	11.8	46
G002138		0.44	<0.005	0.09	2.26	7.1	<0.2	<10	230	0.34	0.18	1.81	0.22	18.60	16.9	85
G002139		0.34	0.006	0.22	1.88	12.1	<0.2	<10	470	0.35	0.19	0.76	0.58	23.40	13.5	51
G002140		0.30	0.009	0.71	0.69	12.4	<0.2	<10	290	0.22	0.11	0.22	0.49	14.15	2.6	18
G002141		0.40	0.010	0.71	0.62	3.8	<0.2	<10	230	0.11	0.10	0.32	0.55	10.60	2.7	18
G002142		0.36	0.005	0.07	1.51	9.5	<0.2	<10	90	0.23	0.16	0.19	0.15	16.95	6.8	34
G002143		0.34	<0.005	0.40	0.53	2.2	<0.2	<10	120	0.17	0.09	0.21	0.32	26.80	1.9	9
G002144		0.42	<0.005	0.06	1.03	4.0	<0.2	<10	90	0.13	0.11	0.28	0.13	13.15	5.0	29
G002145		0.46	0.018	0.20	2.16	9.4	<0.2	<10	140	0.59	0.39	0.25	0.27	28.10	10.6	29
G002146		0.50	0.006	0.18	2.08	6.8	<0.2	<10	210	0.43	0.41	0.24	0.25	41.00	6.2	22
G002147		0.58	<0.005	0.09	1.98	8.7	<0.2	<10	120	0.28	0.46	0.22	0.19	23.80	8.8	23
G002148		0.36	0.009	0.54	2.01	6.8	<0.2	<10	250	0.94	0.28	0.34	0.30	95.20	5.7	23
G002149		0.48	0.005	0.05	3.40	9.7	<0.2	<10	160	0.76	0.47	0.17	0.14	51.00	16.1	28
G002150		0.48	<0.005	0.05	3.37	9.4	<0.2	<10	170	0.74	0.47	0.17	0.13	52.90	16.0	27
G002151		0.68	<0.005	0.04	1.17	4.6	<0.2	<10	90	0.19	0.17	0.12	0.13	18.20	4.0	13
G002152		0.36	<0.005	0.12	1.38	7.5	<0.2	<10	220	0.44	0.15	0.29	0.26	110.50	4.3	16
G002153		0.44	<0.005	0.17	1.32	12.7	<0.2	<10	250	0.36	0.16	0.30	0.07	86.60	5.6	15
G002154		0.42	0.005	0.20	2.54	12.4	<0.2	<10	310	0.58	0.25	0.41	0.32	100.50	11.7	25
G002155		0.52	<0.005	0.06	2.25	15.4	<0.2	<10	160	0.30	0.20	0.34	0.11	39.10	10.7	24
G002156		0.46	<0.005	0.13	2.50	14.0	<0.2	<10	280	0.47	0.21	0.57	0.14	93.80	9.6	24
G002157		0.48	<0.005	0.18	1.14	4.6	<0.2	<10	120	0.19	0.17	0.21	0.17	34.00	4.0	11
G002158		0.62	0.007	0.04	1.67	4.5	<0.2	<10	130	0.20	0.10	0.41	0.15	23.00	9.1	29
G002159		0.38	<0.005	0.08	1.86	4.0	<0.2	<10	190	0.22	0.13	0.41	0.19	26.10	10.7	32
G002160		Not Recvd														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002121		0.69	9.7	2.23	5.12	<0.05	0.02	0.04	0.017	0.04	8.8	6.9	0.58	276	1.04
G002122		0.73	9.9	1.51	4.09	<0.05	<0.02	0.06	0.013	0.04	7.9	5.0	0.36	134	0.60
G002123		0.59	8.3	1.47	4.30	<0.05	<0.02	0.03	0.013	0.04	7.2	5.0	0.40	114	0.32
G002124		0.67	9.8	1.51	4.22	<0.05	<0.02	0.07	0.012	0.04	7.5	4.3	0.30	87	0.43
G002125		0.66	8.2	1.46	4.17	<0.05	<0.02	0.03	0.013	0.04	7.1	5.0	0.35	104	0.29
G002126		0.79	12.9	1.54	4.35	<0.05	0.02	0.07	0.016	0.04	9.4	4.6	0.27	87	0.43
G002127		0.80	14.6	1.78	4.31	<0.05	0.02	0.06	0.015	0.04	9.2	4.2	0.28	96	0.46
G002128		0.82	13.0	1.63	4.68	<0.05	<0.02	0.06	0.015	0.04	9.2	5.0	0.33	106	0.34
G002129		1.28	11.1	1.86	5.38	0.05	<0.02	0.05	0.014	0.05	8.2	6.7	0.48	138	0.43
G002130		1.24	11.1	1.87	5.38	0.05	0.02	0.05	0.014	0.05	7.8	6.7	0.48	140	0.44
G002131		0.88	16.7	2.07	4.69	0.05	0.02	0.08	0.016	0.05	11.2	5.9	0.41	152	0.43
G002132		0.76	12.9	1.69	4.61	<0.05	0.02	0.03	0.015	0.04	9.9	5.4	0.38	126	0.34
G002133		0.77	11.9	1.82	4.52	<0.05	0.02	0.04	0.015	0.04	8.6	5.8	0.40	127	0.42
G002134		0.79	12.1	1.88	4.83	<0.05	0.02	0.03	0.017	0.05	9.7	7.2	0.47	133	0.34
G002135		0.70	10.8	1.70	4.10	<0.05	0.02	0.06	0.013	0.04	8.5	4.9	0.35	124	0.49
G002136		2.25	16.2	2.78	5.81	0.09	0.03	0.04	0.021	0.32	14.9	14.5	0.75	558	0.36
G002137		2.23	21.9	2.63	6.41	0.09	0.04	0.02	0.021	0.33	12.4	14.7	0.99	423	0.40
G002138		2.13	30.0	2.83	6.58	0.08	0.06	0.04	0.021	0.14	9.3	15.5	1.25	458	0.40
G002139		2.59	24.1	2.73	6.78	0.07	0.04	0.09	0.028	0.11	11.9	12.0	0.83	605	1.47
G002140		1.42	31.7	1.45	2.76	0.05	0.02	0.14	0.013	0.05	7.3	1.8	0.13	57	1.20
G002141		3.89	24.2	0.87	2.68	<0.05	<0.02	0.34	0.012	0.05	5.6	2.7	0.14	67	1.25
G002142		1.75	10.6	2.82	6.94	<0.05	0.03	0.04	0.020	0.05	9.1	9.7	0.42	233	1.26
G002143		0.52	12.3	0.80	1.93	<0.05	<0.02	0.11	0.010	0.03	16.6	0.7	0.06	51	0.77
G002144		1.60	10.0	1.60	4.60	<0.05	0.02	0.04	0.015	0.06	7.2	6.5	0.35	140	0.79
G002145		4.77	19.1	3.25	7.84	0.06	0.07	0.05	0.038	0.16	20.7	14.7	0.55	530	1.03
G002146		4.04	15.7	2.50	8.18	0.07	0.05	0.09	0.032	0.14	31.1	8.4	0.37	496	0.98
G002147		4.25	11.7	3.11	8.79	0.07	0.07	0.07	0.032	0.16	19.6	11.0	0.49	460	1.19
G002148		3.67	26.4	2.70	6.81	0.11	0.08	0.23	0.039	0.11	74.6	8.0	0.32	259	1.22
G002149		10.20	14.7	4.62	12.10	0.09	0.14	0.04	0.061	0.34	40.8	23.6	0.69	1215	1.35
G002150		9.65	14.3	4.62	12.10	0.09	0.14	0.04	0.059	0.34	42.9	23.1	0.69	1270	1.34
G002151		5.37	9.5	2.22	7.62	0.05	0.05	0.03	0.021	0.16	13.4	5.2	0.29	252	0.97
G002152		6.34	12.3	1.98	5.60	0.14	0.07	0.23	0.027	0.17	115.0	6.1	0.24	528	0.88
G002153		11.90	10.2	2.40	7.57	0.11	0.08	0.13	0.028	0.22	69.0	7.9	0.36	332	1.04
G002154		7.94	22.2	3.97	9.54	0.12	0.12	0.13	0.047	0.31	49.3	18.9	0.66	827	1.21
G002155		6.79	15.1	4.02	9.70	0.10	0.12	0.06	0.037	0.26	23.6	17.8	0.73	662	1.01
G002156		8.72	17.9	3.76	9.35	0.14	0.15	0.16	0.045	0.32	55.7	17.9	0.69	642	1.26
G002157		10.40	15.1	2.10	7.42	0.06	0.06	0.09	0.023	0.14	21.2	4.4	0.26	203	1.45
G002158		0.91	12.4	2.37	5.30	0.06	0.05	0.04	0.020	0.09	10.1	10.5	0.62	297	0.49
G002159		0.97	17.9	2.21	5.85	0.07	0.04	0.07	0.024	0.08	11.1	11.4	0.60	355	0.58
G002160															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002121		0.88	15.0	460	9.2	7.2	<0.001	0.02	0.17	3.0	0.5	0.4	16.6	<0.01	0.04
G002122		0.73	11.0	400	6.0	6.1	<0.001	0.03	0.18	2.2	0.5	0.3	17.6	<0.01	0.02
G002123		0.65	10.6	400	6.6	6.6	<0.001	0.02	0.13	2.3	0.4	0.3	14.2	<0.01	0.02
G002124		0.68	9.8	430	6.9	7.6	<0.001	0.03	0.14	1.8	0.6	0.3	13.7	<0.01	0.03
G002125		0.70	10.2	370	6.7	8.3	<0.001	0.01	0.13	2.3	0.4	0.3	13.3	<0.01	0.02
G002126		0.79	12.7	570	7.9	8.5	0.001	0.04	0.19	2.0	0.6	0.4	16.5	0.01	0.02
G002127		0.76	12.2	620	7.3	7.3	<0.001	0.06	0.18	1.7	0.7	0.4	15.9	<0.01	0.04
G002128		0.81	13.1	490	6.7	9.9	<0.001	0.04	0.17	2.2	0.6	0.4	14.0	<0.01	0.03
G002129		1.02	15.7	420	6.2	8.6	<0.001	0.03	0.14	2.8	0.6	0.4	15.2	<0.01	0.03
G002130		1.06	15.7	410	6.0	8.5	<0.001	0.03	0.14	2.8	0.5	0.4	15.4	<0.01	0.03
G002131		0.98	16.4	680	7.2	11.5	<0.001	0.05	0.38	2.7	0.8	0.4	18.4	<0.01	0.03
G002132		0.82	14.6	510	6.9	10.0	<0.001	0.03	0.17	2.6	0.6	0.3	15.9	<0.01	0.02
G002133		0.84	13.2	520	6.6	8.7	<0.001	0.03	0.17	2.4	0.5	0.3	15.6	<0.01	0.03
G002134		0.93	16.2	480	6.6	8.1	<0.001	0.02	0.17	2.9	0.5	0.4	15.9	<0.01	0.03
G002135		0.81	11.7	510	5.2	7.4	<0.001	0.05	0.17	2.0	0.6	0.3	17.4	<0.01	0.02
G002136		1.39	25.9	810	6.8	33.4	<0.001	0.01	0.20	4.4	0.5	0.4	34.3	<0.01	0.02
G002137		1.69	29.0	1100	6.3	39.2	<0.001	0.03	0.16	5.1	0.6	0.5	46.4	<0.01	0.03
G002138		2.01	47.9	810	5.3	25.5	<0.001	0.06	0.23	5.4	0.8	0.4	48.0	0.01	0.03
G002139		1.60	25.5	650	7.2	22.0	<0.001	0.05	0.23	6.4	1.0	0.5	30.4	<0.01	0.04
G002140		0.66	10.7	880	4.2	5.8	<0.001	0.11	0.22	1.4	1.9	0.3	18.0	<0.01	0.06
G002141		0.54	11.8	750	4.0	8.7	<0.001	0.09	0.34	1.5	1.8	0.3	23.1	<0.01	0.04
G002142		1.44	14.0	370	6.5	10.7	<0.001	0.01	0.37	3.2	0.5	0.5	14.6	<0.01	0.05
G002143		0.32	6.4	890	3.7	2.9	<0.001	0.07	0.22	0.8	0.6	0.2	16.5	<0.01	0.04
G002144		0.97	12.0	450	5.0	10.8	<0.001	0.03	0.38	2.8	0.5	0.4	18.4	<0.01	0.02
G002145		3.44	15.7	440	16.4	34.3	<0.001	0.01	0.91	5.0	0.5	1.0	18.4	<0.01	0.03
G002146		2.55	11.9	470	16.4	31.4	<0.001	0.02	0.67	5.0	0.5	0.9	21.1	<0.01	0.04
G002147		3.24	13.3	410	18.8	33.0	<0.001	0.01	0.82	4.8	0.4	1.0	16.9	<0.01	0.04
G002148		2.73	14.0	740	22.0	21.3	<0.001	0.06	0.83	6.2	1.2	0.7	33.3	0.01	0.05
G002149		4.25	14.1	580	29.6	64.3	<0.001	<0.01	1.20	7.1	0.6	1.3	13.2	<0.01	0.04
G002150		4.03	13.8	580	30.2	62.6	<0.001	0.01	1.18	7.2	0.5	1.3	13.4	<0.01	0.04
G002151		3.13	6.4	240	11.6	38.8	<0.001	0.01	0.66	3.2	0.3	0.9	12.7	<0.01	0.03
G002152		1.89	6.9	740	26.3	28.4	<0.001	0.03	1.22	3.9	0.9	0.6	18.0	<0.01	0.02
G002153		3.94	8.4	420	20.8	58.7	<0.001	0.01	0.68	4.2	0.5	1.0	24.9	<0.01	0.03
G002154		6.43	15.2	930	58.9	57.9	<0.001	0.03	0.88	6.4	0.8	1.2	30.6	<0.01	0.03
G002155		6.19	15.5	840	14.6	53.2	0.002	0.01	0.80	5.5	0.5	1.3	23.5	<0.01	0.03
G002156		6.83	13.8	920	15.9	68.6	<0.001	0.05	0.82	7.0	0.9	1.3	40.4	0.01	0.02
G002157		4.46	6.9	430	9.7	48.9	<0.001	0.03	0.49	3.3	0.4	1.1	20.9	<0.01	0.02
G002158		1.68	18.5	710	5.5	13.9	0.001	0.01	0.30	4.3	0.3	0.5	25.3	<0.01	0.02
G002159		1.49	19.5	730	6.9	13.2	0.001	0.03	0.38	4.4	0.5	0.5	28.7	<0.01	0.02
G002160															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002121		0.073	0.07	0.56	65	0.24	3.08	51
G002122		0.057	0.05	0.53	30	0.09	3.05	36
G002123		0.057	0.07	0.51	28	0.09	2.89	36
G002124		0.045	0.07	0.67	22	0.08	2.67	29
G002125		0.060	0.07	0.46	28	0.11	2.69	34
G002126		0.052	0.07	0.71	22	0.29	3.83	31
G002127		0.052	0.06	0.73	28	0.12	3.73	30
G002128		0.062	0.08	0.56	27	0.13	3.76	33
G002129		0.074	0.08	0.52	40	0.18	3.37	41
G002130		0.073	0.07	0.54	41	0.46	3.43	41
G002131		0.065	0.08	0.70	33	0.12	5.24	41
G002132		0.065	0.08	0.57	31	0.18	4.33	38
G002133		0.065	0.07	0.53	36	0.16	3.73	38
G002134		0.075	0.07	0.55	39	0.10	4.44	44
G002135		0.057	0.06	0.50	33	0.15	3.53	35
G002136		0.102	0.22	0.71	52	0.35	8.30	65
G002137		0.100	0.24	0.72	63	0.24	7.86	65
G002138		0.095	0.16	0.66	70	0.19	6.14	66
G002139		0.101	0.17	1.25	86	0.49	8.06	95
G002140		0.038	0.07	1.45	20	0.15	5.26	26
G002141		0.034	0.17	1.09	14	0.10	3.76	24
G002142		0.119	0.09	0.64	77	0.45	3.00	47
G002143		0.022	0.03	0.81	15	0.09	4.45	12
G002144		0.076	0.07	0.64	37	0.30	2.89	35
G002145		0.135	0.42	2.50	64	0.34	5.50	63
G002146		0.114	0.32	3.35	47	0.31	9.09	50
G002147		0.153	0.40	1.60	73	0.93	5.83	56
G002148		0.087	0.27	8.66	45	0.28	21.20	43
G002149		0.186	0.83	1.96	90	0.32	9.97	76
G002150		0.180	0.83	2.15	88	0.27	10.40	75
G002151		0.144	0.43	0.62	58	0.16	3.94	35
G002152		0.080	0.57	4.18	35	0.27	19.65	39
G002153		0.144	0.79	2.58	53	0.16	14.10	42
G002154		0.189	0.71	4.38	74	0.23	15.20	86
G002155		0.219	0.59	1.55	80	0.32	9.82	80
G002156		0.199	0.70	5.45	72	0.22	18.75	80
G002157		0.134	0.44	1.80	51	0.15	5.59	35
G002158		0.138	0.11	0.83	60	0.12	5.87	52
G002159		0.125	0.12	1.05	59	0.24	6.29	54
G002160								

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002161		0.50	0.009	0.06	1.81	5.7	<0.2	<10	170	0.22	0.12	0.40	0.16	27.60	9.6	33
G002162		0.48	0.005	0.06	1.56	3.7	<0.2	<10	130	0.17	0.12	0.37	0.16	21.00	7.7	26
G002163		0.32	<0.005	0.06	1.61	4.5	<0.2	<10	120	0.18	0.11	0.37	0.14	21.90	10.0	27
G002164		0.42	<0.005	0.08	1.67	4.0	<0.2	<10	140	0.16	0.14	0.34	0.16	23.90	13.7	28
G002165		0.54	<0.005	0.08	1.91	5.1	<0.2	<10	150	0.20	0.14	0.35	0.17	25.80	9.2	31
G002166		0.44	0.006	0.26	2.08	5.1	<0.2	<10	130	0.15	0.30	0.47	0.23	20.30	15.3	40
G002167		0.50	<0.005	0.16	1.89	4.1	<0.2	<10	100	0.18	0.31	0.50	0.26	21.50	13.3	31
G002168		0.44	0.005	0.20	1.65	4.0	<0.2	<10	60	0.14	0.23	0.18	0.12	15.15	7.3	27
G002169		0.34	0.014	0.19	1.92	5.6	<0.2	<10	170	0.27	0.14	1.71	0.41	40.50	16.0	32

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
G002161		0.94	16.9	2.60	5.66	0.07	0.06	0.05	0.023	0.09	12.0	11.0	0.64	324	0.52	0.01
G002162		0.86	15.2	2.10	5.20	0.06	0.03	0.08	0.021	0.07	9.3	9.4	0.53	268	0.53	0.01
G002163		0.86	11.5	2.27	5.29	0.07	0.04	0.04	0.022	0.09	9.4	10.0	0.58	383	0.50	0.01
G002164		0.95	12.8	2.29	5.44	0.05	0.04	0.09	0.023	0.08	10.9	9.3	0.55	551	0.70	0.01
G002165		1.08	14.4	2.57	6.41	0.07	0.04	0.05	0.024	0.09	11.6	11.6	0.66	300	0.60	0.01
G002166		0.68	42.5	3.05	6.28	0.06	0.02	0.06	0.022	0.07	8.6	8.3	1.31	496	1.06	<0.01
G002167		0.61	69.0	2.75	5.34	0.05	0.02	0.05	0.019	0.06	9.1	8.2	1.16	457	0.75	<0.01
G002168		0.73	22.6	2.45	6.17	<0.05	<0.02	0.07	0.018	0.05	6.9	5.6	0.88	229	0.71	<0.01
G002169		0.80	48.7	3.02	5.04	0.09	0.07	0.06	0.022	0.11	22.2	7.9	1.08	963	0.79	0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002161		1.73	20.4	760	5.9	14.3	<0.001	0.02	0.36	4.6	0.4	0.5	24.9	<0.01	0.02
G002162		1.41	15.7	720	6.1	12.3	<0.001	0.02	0.34	3.6	0.4	0.5	26.6	0.01	0.02
G002163		1.54	17.0	670	5.7	13.4	<0.001	0.01	0.27	3.9	0.4	0.5	23.7	<0.01	0.01
G002164		1.53	15.7	760	6.3	15.0	<0.001	0.05	0.31	3.6	0.5	0.5	25.1	<0.01	0.01
G002165		1.73	19.5	690	7.3	18.0	<0.001	0.03	0.33	4.3	0.4	0.6	26.3	<0.01	0.02
G002166		1.00	22.8	590	9.1	11.8	0.001	0.03	0.25	3.9	0.7	0.4	25.2	<0.01	0.11
G002167		0.96	20.2	530	10.1	9.8	<0.001	0.02	0.22	3.7	0.6	0.4	24.9	<0.01	0.10
G002168		0.86	14.4	600	9.3	9.3	<0.001	0.04	0.23	2.4	0.7	0.4	18.6	<0.01	0.06
G002169		1.04	29.1	890	8.5	15.2	0.001	0.08	0.36	4.4	1.2	0.3	51.3	0.01	0.06

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 6 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07074508

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002161		0.133	0.11	1.01	65	0.24	6.78	55	2.0
G002162		0.114	0.10	0.84	49	0.14	4.84	47	1.0
G002163		0.124	0.10	0.78	58	0.19	5.16	51	1.2
G002164		0.105	0.11	1.11	51	0.16	4.65	52	1.1
G002165		0.123	0.12	1.15	61	0.15	5.12	58	1.3
G002166		0.081	0.09	0.65	60	0.12	5.23	67	0.6
G002167		0.077	0.08	0.64	51	0.22	6.74	73	<0.5
G002168		0.061	0.09	0.56	49	0.09	3.28	50	<0.5
G002169		0.064	0.13	1.35	50	0.13	18.00	88	1.9

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 7-AUG-2007

Account: EIANGX

CERTIFICATE VA07074509

Project: North Dawson / Echo

P.O. No.: NGX07-02

This report is for 130 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002498		0.34	<0.005	0.03	0.81	2.8	<0.2	<10	40	0.32	1.27	0.07	0.11	8.05	2.8	7
G002499		0.36	<0.005	0.07	0.29	1.0	<0.2	<10	20	<0.05	0.12	0.05	0.04	2.84	1.7	4
G002500		0.38	0.006	0.05	1.58	6.1	<0.2	<10	90	0.62	0.94	0.22	0.22	20.50	8.5	20
G002820		0.06	<0.005	0.01	0.01	<0.1	<0.2	<10	10	<0.05	0.01	0.01	0.02	1.58	0.1	<1
G002860		0.04	<0.005	<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.03	0.1	<1
G003300		0.06	<0.005	0.04	<0.01	<0.1	<0.2	<10	10	<0.05	0.01	0.01	0.02	1.32	0.1	<1
G003341		0.66	<0.005	0.05	1.46	5.3	<0.2	<10	100	1.71	2.22	0.23	0.32	25.10	6.7	19
G003342		0.40	<0.005	0.06	1.05	4.9	<0.2	<10	70	0.51	0.89	0.13	0.26	12.00	4.0	14
G003343		0.58	0.006	0.03	0.74	4.1	<0.2	<10	50	0.35	1.34	0.17	0.13	15.30	4.2	15
G003344		0.50	<0.005	0.12	2.08	7.1	<0.2	<10	150	1.00	2.21	0.17	0.21	22.60	7.1	23
G003345		0.44	<0.005	0.07	0.50	1.0	<0.2	<10	60	0.28	0.30	0.09	0.47	8.36	1.8	7
G003346		0.56	0.011	0.09	1.43	7.8	<0.2	<10	150	0.59	1.60	0.21	0.38	17.50	7.0	22
G003347		0.48	<0.005	0.08	0.45	1.2	<0.2	<10	40	0.12	0.42	0.06	0.12	8.34	1.4	7
G003348		0.26	0.016	0.46	0.61	2.0	<0.2	<10	260	0.59	0.28	0.66	0.28	22.90	5.2	4
G003349		0.42	<0.005	0.10	1.59	4.1	<0.2	<10	180	0.83	0.73	0.31	0.07	21.90	5.7	21
G003350		0.54	<0.005	0.10	1.71	4.4	<0.2	<10	180	0.88	0.75	0.29	0.07	22.80	6.0	22
G003401		0.48	<0.005	0.15	1.74	4.5	<0.2	<10	170	0.44	1.46	0.26	0.09	16.05	5.4	25
G003402		0.42	<0.005	0.26	1.58	3.0	<0.2	<10	190	0.64	1.24	0.31	0.16	19.20	3.8	23
G003403		0.34	<0.005	0.32	0.89	3.0	<0.2	<10	190	0.67	0.66	0.36	0.31	20.20	2.8	13
G003404		0.40	0.007	0.37	1.59	6.4	<0.2	<10	320	1.17	1.36	0.52	0.45	33.90	24.9	20
G003405		0.34	<0.005	0.36	2.37	8.1	<0.2	<10	480	2.39	1.81	1.13	0.44	76.10	10.5	23
G003406		0.52	<0.005	0.18	2.06	7.6	<0.2	<10	120	0.73	2.02	0.12	0.25	14.50	6.9	25
G003407		0.38	<0.005	0.22	1.17	5.9	<0.2	<10	100	0.56	1.82	0.14	0.28	14.40	3.8	17
G003408		0.38	<0.005	0.04	0.73	1.4	<0.2	<10	90	1.45	0.28	0.08	0.19	18.95	1.7	8
G003409		0.54	<0.005	0.04	1.48	6.6	<0.2	<10	80	0.73	1.04	0.13	0.15	17.55	4.9	20
G003410		0.42	<0.005	0.09	1.16	3.5	<0.2	<10	80	0.34	0.96	0.14	0.11	12.45	3.6	17
G003411		0.28	0.014	0.12	0.32	0.9	<0.2	<10	30	0.10	0.21	0.08	0.37	4.44	1.1	8
G003412		0.38	<0.005	0.20	0.91	1.5	<0.2	<10	120	0.90	0.68	0.32	0.09	13.25	2.8	14
G003413		0.30	0.005	0.34	1.44	2.7	<0.2	<10	220	1.36	1.33	0.71	0.10	29.50	3.1	20
G003414		0.36	<0.005	0.09	1.91	3.9	<0.2	<10	190	0.80	1.04	0.38	0.09	22.70	11.1	25
G003415		0.32	0.006	0.09	1.42	2.8	<0.2	<10	160	1.08	0.57	0.37	0.08	28.00	4.7	19
G003416		0.40	<0.005	0.01	0.31	1.3	<0.2	<10	20	<0.05	0.22	0.04	0.04	4.35	1.4	4
G003417		0.48	0.005	0.02	1.19	4.4	<0.2	<10	100	0.58	0.84	0.29	0.21	27.80	7.7	21
G003418		0.24	0.005	0.08	0.29	1.1	<0.2	<10	30	0.07	0.52	0.07	0.09	3.91	1.4	5
G003419		0.30	0.020	0.19	0.44	2.0	<0.2	<10	110	0.36	0.63	0.34	0.56	9.80	2.2	8
G003420		0.46	<0.005	0.09	0.47	2.5	<0.2	<10	50	0.10	1.13	0.08	0.22	6.60	2.3	8
G003421		0.44	0.007	0.46	1.52	4.2	<0.2	<10	240	2.34	0.29	0.69	0.50	66.90	4.2	12
G003422		0.42	0.006	0.35	1.99	7.1	<0.2	<10	290	1.53	0.54	1.15	0.96	33.20	10.5	27
G003423		0.34	<0.005	0.69	1.77	5.7	<0.2	<10	270	4.24	0.56	1.34	0.81	74.80	24.9	23
G003424		0.34	0.006	0.27	0.39	0.9	<0.2	<10	80	0.37	0.09	0.17	0.34	10.35	1.7	6

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002498		1.45	8.1	1.25	3.92	<0.05	<0.02	0.04	0.009	0.03	4.1	5.5	0.13	105	0.61
G002499		0.33	5.1	0.82	2.24	<0.05	<0.02	0.03	<0.005	0.02	1.5	0.6	0.04	45	0.42
G002500		1.65	10.3	2.30	5.01	<0.05	0.03	0.04	0.022	0.05	10.1	20.9	0.33	511	0.68
G002820		<0.05	0.8	0.02	0.06	<0.05	0.03	<0.01	<0.005	<0.01	0.8	0.2	<0.01	<5	0.05
G002860		<0.05	0.6	0.01	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05
G003300		<0.05	0.6	0.01	<0.05	<0.05	0.03	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05
G003341		3.76	10.5	2.26	4.88	<0.05	0.04	0.03	0.024	0.05	11.4	18.2	0.34	645	0.59
G003342		1.66	9.7	1.85	5.31	<0.05	0.03	0.07	0.014	0.05	6.0	10.6	0.19	207	0.84
G003343		1.99	6.5	1.56	4.32	<0.05	0.02	0.03	0.013	0.06	7.5	9.5	0.21	293	0.60
G003344		3.70	16.1	2.65	8.21	<0.05	0.10	0.03	0.028	0.05	11.9	20.0	0.41	241	0.97
G003345		0.78	5.0	0.82	3.23	<0.05	<0.02	0.05	0.006	0.04	4.2	1.1	0.04	47	0.52
G003346		1.99	10.5	2.24	5.85	<0.05	0.03	0.06	0.021	0.08	8.6	19.3	0.33	359	0.94
G003347		0.74	7.0	0.68	3.45	<0.05	<0.02	0.03	0.007	0.03	4.2	1.9	0.05	47	0.50
G003348		0.29	10.3	0.96	0.87	<0.05	0.03	0.15	0.009	0.04	11.8	1.0	0.09	300	0.73
G003349		2.88	10.1	1.86	5.75	<0.05	0.03	0.05	0.023	0.05	11.6	28.3	0.39	141	0.69
G003350		3.03	10.9	1.98	5.89	<0.05	0.03	0.05	0.024	0.05	12.1	29.2	0.40	141	0.68
G003401		2.07	6.9	1.86	6.55	<0.05	0.02	0.09	0.021	0.05	8.5	17.5	0.40	113	0.64
G003402		1.61	7.9	1.47	5.36	<0.05	0.03	0.12	0.019	0.05	10.1	12.0	0.29	83	0.55
G003403		0.77	11.2	1.42	2.52	<0.05	0.03	0.11	0.012	0.04	10.5	3.9	0.15	47	0.72
G003404		1.56	15.1	2.23	4.82	<0.05	0.04	0.10	0.020	0.05	16.4	11.0	0.30	1170	1.61
G003405		1.60	27.7	2.10	5.50	0.08	0.11	0.16	0.028	0.09	35.0	11.7	0.34	1140	0.95
G003406		1.90	14.4	2.55	7.35	<0.05	0.03	0.05	0.026	0.06	7.7	17.0	0.32	276	0.89
G003407		1.25	13.4	1.64	6.18	<0.05	0.02	0.07	0.019	0.05	7.6	7.0	0.18	202	1.23
G003408		0.79	10.6	0.76	3.12	<0.05	0.02	0.03	0.009	0.03	10.1	2.2	0.10	51	0.41
G003409		1.39	8.2	2.25	6.08	<0.05	0.04	0.04	0.021	0.04	9.0	13.8	0.31	194	0.58
G003410		1.59	6.3	1.46	4.63	<0.05	0.02	0.05	0.012	0.05	6.5	9.5	0.25	168	0.56
G003411		0.31	4.8	0.50	1.69	<0.05	<0.02	0.09	0.006	0.03	2.4	0.6	0.03	52	0.44
G003412		0.87	5.7	0.93	3.31	<0.05	0.02	0.08	0.012	0.03	6.7	6.3	0.17	77	0.37
G003413		1.31	13.7	1.30	4.11	0.05	0.05	0.21	0.021	0.05	15.8	13.2	0.24	61	0.54
G003414		2.20	9.2	2.07	5.95	<0.05	0.03	0.07	0.025	0.05	11.2	30.6	0.42	522	0.62
G003415		2.34	11.5	1.55	5.29	<0.05	0.03	0.06	0.022	0.05	15.5	25.1	0.36	141	0.59
G003416		0.50	1.0	0.75	3.46	<0.05	<0.02	0.02	<0.005	0.02	2.2	1.2	0.06	62	0.43
G003417		1.51	12.4	1.98	4.10	0.05	0.07	0.02	0.016	0.06	13.5	23.1	0.41	323	0.50
G003418		0.47	2.9	0.70	2.18	<0.05	<0.02	0.04	<0.005	0.03	2.0	1.8	0.04	80	0.44
G003419		0.78	6.4	0.68	1.97	<0.05	<0.02	0.11	0.006	0.06	5.3	2.8	0.09	160	0.70
G003420		1.07	5.6	0.92	2.75	<0.05	<0.02	0.06	<0.005	0.04	3.4	3.8	0.08	108	0.49
G003421		2.53	17.7	1.48	4.10	0.12	0.06	0.10	0.020	0.05	43.7	7.3	0.16	135	0.79
G003422		3.42	24.4	2.44	6.14	0.08	0.07	0.10	0.029	0.11	18.4	20.9	0.48	1115	1.12
G003423		4.04	17.9	2.55	5.47	0.14	0.08	0.18	0.035	0.05	43.8	11.1	0.28	3980	1.41
G003424		2.47	4.8	0.40	1.69	<0.05	<0.02	0.09	0.005	0.05	6.0	1.7	0.05	179	0.52

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002498		0.64	5.1	310	9.2	7.0	<0.001	0.01	0.18	1.0	0.5	0.5	8.2	<0.01	0.02
G002499		0.27	2.1	290	2.1	1.5	<0.001	0.01	0.10	0.6	0.4	0.2	8.0	<0.01	0.02
G002500		1.67	15.0	790	12.1	10.6	<0.001	0.01	0.33	2.7	0.7	0.8	12.8	<0.01	0.03
G002820		<0.05	0.4	20	0.9	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01
G002860		<0.05	0.3	10	0.5	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01
G003300		<0.05	0.3	10	0.7	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01
G003341		0.98	15.2	750	19.0	12.9	<0.001	0.02	0.30	2.9	0.4	1.1	15.2	<0.01	0.02
G003342		0.97	9.1	370	10.3	12.5	<0.001	0.03	0.31	1.7	0.5	0.6	14.7	<0.01	0.04
G003343		0.71	9.7	510	11.7	13.2	<0.001	0.02	0.26	1.5	0.5	0.7	10.9	<0.01	0.03
G003344		1.66	18.0	200	20.3	16.1	<0.001	0.01	0.34	4.0	0.4	1.4	19.7	<0.01	0.03
G003345		0.34	2.9	470	4.6	4.3	<0.001	0.07	0.13	0.8	0.6	0.4	14.5	<0.01	0.02
G003346		1.42	16.4	660	12.5	16.9	<0.001	0.04	0.36	2.7	0.5	0.9	18.2	<0.01	0.03
G003347		0.40	3.1	250	6.3	4.3	<0.001	0.02	0.13	0.8	0.3	0.4	7.7	<0.01	0.01
G003348		0.18	5.8	1790	2.7	3.2	0.001	0.20	0.40	0.6	1.1	<0.2	50.0	0.01	0.03
G003349		1.11	13.7	850	11.3	11.7	0.001	0.06	0.23	2.2	0.8	1.3	25.1	<0.01	0.03
G003350		1.11	14.4	870	11.9	11.9	0.001	0.06	0.23	2.2	0.7	1.3	23.9	<0.01	0.02
G003401		0.74	14.1	640	14.0	11.0	<0.001	0.04	0.26	2.4	0.5	0.8	22.3	<0.01	0.02
G003402		0.67	11.5	990	11.3	8.4	<0.001	0.10	0.27	2.1	0.8	0.7	28.4	<0.01	0.03
G003403		0.43	7.9	1250	6.6	5.9	<0.001	0.14	0.24	1.3	1.0	0.3	36.9	<0.01	0.04
G003404		0.76	14.8	1000	14.3	8.8	<0.001	0.10	0.37	3.0	1.0	0.6	48.4	0.01	0.03
G003405		0.98	23.0	1160	15.3	13.5	<0.001	0.13	0.72	4.8	1.8	0.6	93.2	0.01	0.04
G003406		1.27	15.9	510	16.0	12.4	<0.001	0.03	0.31	3.3	0.7	0.9	12.6	<0.01	0.03
G003407		0.85	10.7	590	12.2	8.6	<0.001	0.04	0.28	2.0	0.6	0.9	16.3	<0.01	0.04
G003408		0.19	4.1	360	5.7	4.4	<0.001	0.02	0.11	0.5	0.6	0.4	13.1	<0.01	0.01
G003409		1.20	12.2	360	13.1	8.3	<0.001	0.02	0.29	2.7	0.5	0.6	11.9	<0.01	0.03
G003410		0.65	9.3	460	9.8	9.5	<0.001	0.03	0.18	1.7	0.4	0.7	12.6	<0.01	0.02
G003411		0.11	3.0	780	3.3	1.8	<0.001	0.06	0.09	0.4	0.5	0.3	9.7	<0.01	0.01
G003412		0.27	5.6	870	7.2	3.6	<0.001	0.07	0.17	1.1	0.6	0.4	23.5	<0.01	0.02
G003413		0.69	12.4	1430	11.7	6.5	<0.001	0.18	0.32	2.7	1.3	0.5	55.9	0.01	0.04
G003414		0.86	14.8	670	13.3	12.9	<0.001	0.04	0.23	3.2	0.6	0.9	30.1	<0.01	0.02
G003415		1.04	13.5	970	10.4	11.7	<0.001	0.07	0.20	1.9	0.9	1.2	30.0	<0.01	0.02
G003416		0.40	1.7	100	3.7	2.9	<0.001	0.01	0.09	0.8	0.2	0.3	6.0	<0.01	0.02
G003417		1.39	16.4	730	7.1	12.2	<0.001	0.01	0.28	3.4	0.3	0.9	15.2	<0.01	0.02
G003418		0.32	2.5	350	3.4	3.5	<0.001	0.03	0.11	0.7	0.4	0.3	7.4	<0.01	0.01
G003419		0.29	5.0	810	3.5	5.5	<0.001	0.07	0.22	0.7	0.6	0.4	24.5	<0.01	0.02
G003420		0.32	4.4	520	6.1	5.2	<0.001	0.04	0.17	0.5	0.6	0.4	8.4	<0.01	0.02
G003421		0.86	10.1	1550	12.8	13.8	<0.001	0.19	0.36	1.7	2.0	0.6	55.3	0.01	0.05
G003422		1.73	21.3	1160	19.7	31.3	<0.001	0.16	0.66	4.8	1.6	1.1	75.0	0.01	0.04
G003423		0.72	10.0	1590	33.6	17.1	<0.001	0.18	0.36	3.8	2.8	0.7	80.4	0.01	0.07
G003424		0.46	2.5	1100	4.6	6.9	<0.001	0.10	0.09	0.5	0.9	0.4	18.0	<0.01	0.02

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: Eiangx

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
G002498		0.053	0.07	3.11	29	0.14	1.72	25
G002499		0.043	0.03	0.28	24	0.05	0.50	15
G002500		0.075	0.11	1.24	49	0.35	5.44	66
G002820		<0.005	<0.02	0.10	<1	<0.05	0.77	4
G002860		<0.005	<0.02	0.09	<1	<0.05	0.63	4
G003300		<0.005	<0.02	0.09	<1	<0.05	0.65	3
G003341		0.047	0.11	7.36	41	0.19	10.30	70
G003342		0.066	0.09	0.96	42	0.18	2.49	38
G003343		0.056	0.09	1.25	40	0.21	3.98	44
G003344		0.073	0.20	2.18	61	0.22	5.47	62
G003345		0.040	0.07	1.38	23	0.07	2.95	15
G003346		0.063	0.11	1.74	49	0.21	5.60	63
G003347		0.040	0.06	0.89	19	0.09	1.36	13
G003348		0.006	0.07	4.10	9	0.07	13.55	10
G003349		0.053	0.20	7.96	40	0.16	7.53	43
G003350		0.052	0.22	8.15	42	0.16	7.69	44
G003401		0.051	0.16	4.43	41	0.15	4.74	47
G003402		0.037	0.16	8.79	27	0.22	8.17	35
G003403		0.021	0.12	9.87	18	0.11	11.60	22
G003404		0.035	0.16	12.30	41	0.18	17.60	42
G003405		0.038	0.16	25.80	38	0.24	50.30	57
G003406		0.061	0.12	4.81	56	0.22	4.15	57
G003407		0.052	0.10	5.16	48	0.21	4.90	39
G003408		0.019	0.05	8.27	14	0.07	11.45	15
G003409		0.074	0.10	2.53	51	0.18	5.83	40
G003410		0.048	0.11	2.92	33	0.14	3.90	37
G003411		0.016	0.04	1.26	15	<0.05	1.22	17
G003412		0.023	0.13	10.70	18	0.08	5.99	18
G003413		0.024	0.16	19.35	19	0.15	17.05	27
G003414		0.053	0.17	8.74	44	0.14	7.99	53
G003415		0.048	0.14	12.90	32	0.16	11.25	39
G003416		0.049	0.04	0.18	24	0.09	0.57	13
G003417		0.087	0.10	1.68	42	0.17	8.26	48
G003418		0.033	0.03	0.39	19	0.07	0.75	14
G003419		0.020	0.05	1.39	17	0.10	4.20	29
G003420		0.033	0.05	0.64	25	0.13	1.43	22
G003421		0.029	0.14	17.70	23	0.15	23.40	28
G003422		0.058	0.21	22.70	49	0.22	16.45	86
G003423		0.032	0.31	46.70	47	0.17	30.60	44
G003424		0.016	0.07	4.88	10	<0.05	2.75	16

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003425		0.34	<0.005	0.18	0.52	1.5	<0.2	<10	120	0.55	0.11	0.18	0.23	21.30	2.9	8
G003426		0.40	<0.005	0.04	1.67	2.4	<0.2	<10	150	0.65	0.26	0.32	0.14	31.20	7.3	24
G003427		0.44	<0.005	0.10	1.35	2.9	<0.2	<10	200	0.78	0.23	0.55	0.29	23.90	6.6	16
G003428		0.34	<0.005	0.10	2.13	6.8	<0.2	<10	190	1.03	0.46	0.33	0.35	33.10	12.7	27
G003429		0.24	<0.005	0.09	1.24	4.2	<0.2	<10	90	0.61	0.33	0.27	0.85	16.90	5.7	18
G003430		0.24	<0.005	0.09	1.38	4.9	<0.2	<10	90	0.65	0.40	0.24	0.70	17.45	6.7	19
G003431		0.30	0.008	0.12	1.48	4.8	<0.2	<10	100	0.66	0.39	0.21	0.22	20.20	5.7	22
G003432		0.58	<0.005	0.09	1.64	5.5	<0.2	<10	140	0.73	0.47	0.26	0.18	25.80	8.5	23
G003433		0.28	0.007	0.32	2.22	8.8	<0.2	<10	230	1.33	0.88	0.27	0.54	23.00	8.4	28
G003434		0.34	<0.005	0.05	1.51	3.6	<0.2	<10	140	0.65	0.51	0.24	0.19	24.30	5.6	21
G003435		0.20	0.005	0.12	1.11	3.9	<0.2	<10	120	1.47	0.31	0.34	0.58	19.25	8.4	16
G003436		0.32	<0.005	0.09	1.27	4.5	<0.2	<10	90	0.65	0.40	0.12	0.18	18.55	5.0	19
G003437		0.30	<0.005	0.11	1.91	8.5	<0.2	<10	160	0.92	0.44	0.21	0.20	29.80	9.8	26
G003438		0.32	<0.005	0.12	0.79	2.8	<0.2	<10	110	0.21	0.22	0.13	0.29	10.30	3.7	13
G003439		0.44	<0.005	0.12	1.87	4.2	<0.2	<10	130	0.55	0.36	0.14	0.12	22.20	5.8	27
G003440		0.06	<0.005	0.01	0.01	0.3	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.32	0.1	<1
G003441		0.40	<0.005	0.09	1.92	6.1	<0.2	<10	200	1.14	0.42	0.28	0.11	31.90	10.5	24
G003442		0.34	<0.005	0.22	1.63	5.6	<0.2	<10	200	0.51	0.33	0.26	0.24	28.50	83.6	25
G003443		0.26	<0.005	0.10	1.93	4.8	<0.2	<10	160	0.51	0.31	0.31	0.13	24.50	6.8	26
G003444		0.26	<0.005	0.38	1.47	4.9	<0.2	<10	250	0.79	0.30	0.38	0.24	30.80	35.8	20
G003445		0.46	<0.005	0.04	1.59	4.1	<0.2	<10	150	0.77	0.32	0.28	0.16	23.00	8.0	21
G003446		0.34	0.014	0.16	0.49	1.4	<0.2	<10	280	0.56	0.12	0.81	1.12	30.40	2.8	5
G003447		0.36	0.026	0.20	0.66	2.3	<0.2	<10	100	0.26	0.20	0.13	0.30	14.65	2.6	12
G003448		0.38	0.010	0.05	1.31	7.4	<0.2	<10	100	0.43	0.36	0.15	0.12	21.40	7.3	20
G003986		0.30	<0.005	0.29	0.88	2.8	<0.2	<10	130	0.66	0.26	0.23	0.16	18.35	11.9	19
G003987		0.38	<0.005	0.22	0.44	2.9	<0.2	<10	130	0.45	0.09	0.39	0.36	21.00	16.1	4
G003988		0.42	0.012	0.16	0.53	5.8	<0.2	<10	150	0.57	0.12	0.29	0.18	17.45	10.2	8
C271187		0.30	<0.005	0.09	1.72	7.7	<0.2	<10	120	0.47	1.54	0.14	0.26	17.20	5.2	24
C271188		0.44	<0.005	0.11	1.10	3.6	<0.2	<10	110	0.28	0.71	0.11	0.35	11.40	3.5	15
C271189		0.22	<0.005	0.19	0.69	2.6	<0.2	<10	120	0.26	0.47	0.13	0.43	12.80	2.5	14
C271190		0.30	0.006	0.15	0.90	3.8	<0.2	<10	120	0.26	0.67	0.13	0.33	13.60	3.4	14
C271191		0.44	<0.005	0.15	1.46	9.1	<0.2	<10	110	0.42	0.81	0.10	0.17	21.40	6.4	20
C271192		0.42	<0.005	0.07	1.52	7.3	<0.2	<10	90	0.45	0.52	0.20	0.23	27.50	8.3	24
C271193		0.36	0.006	0.36	0.92	3.9	<0.2	<10	190	0.39	0.25	0.29	0.31	22.30	3.0	10
C271194		0.58	0.006	0.12	1.91	3.9	<0.2	<10	200	0.60	0.62	0.25	0.19	28.40	5.8	27
C271195		0.42	<0.005	0.09	1.59	4.3	<0.2	<10	170	1.24	0.56	0.45	0.09	32.80	7.9	20
C271196		0.40	<0.005	0.04	0.28	0.9	<0.2	<10	20	<0.05	0.14	0.05	0.03	3.04	1.3	3
C271197		0.36	0.029	0.08	0.95	5.6	<0.2	<10	80	0.30	0.64	0.19	0.25	17.00	4.6	17
C271198		0.36	<0.005	0.08	0.83	3.6	<0.2	<10	80	0.28	0.60	0.14	0.11	13.40	3.8	15
C271199		0.34	<0.005	0.12	1.14	4.8	<0.2	<10	130	0.58	1.05	0.16	0.26	13.70	4.2	18

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003425		1.50	6.9	0.81	2.62	0.05	0.02	0.08	0.009	0.10	13.4	7.4	0.10	155	0.83
G003426		2.70	11.1	1.87	5.61	0.07	0.07	0.02	0.025	0.08	16.3	29.6	0.55	324	0.31
G003427		2.46	11.7	1.58	4.93	0.06	0.03	0.03	0.018	0.05	12.7	25.2	0.33	398	0.52
G003428		3.91	17.0	2.75	7.26	0.07	0.03	0.06	0.026	0.08	13.9	27.6	0.52	1895	0.95
G003429		2.64	9.6	1.88	5.20	<0.05	0.02	0.04	0.015	0.11	9.1	20.5	0.35	421	0.58
G003430		3.10	10.4	2.10	6.46	0.05	0.02	0.04	0.019	0.11	9.6	25.5	0.39	445	0.71
G003431		2.09	9.6	2.29	5.89	0.06	0.02	0.03	0.018	0.07	10.6	19.3	0.43	379	0.79
G003432		2.19	12.2	2.16	5.51	0.07	0.03	0.05	0.020	0.08	13.1	18.6	0.39	666	0.74
G003433		2.37	18.1	2.61	6.94	0.07	0.06	0.10	0.022	0.11	11.6	14.1	0.26	949	1.52
G003434		2.34	10.0	1.75	6.06	0.07	0.03	0.04	0.015	0.08	13.1	16.2	0.37	291	0.56
G003435		2.41	9.5	1.51	4.35	0.05	0.02	0.11	0.011	0.08	11.1	17.0	0.30	980	0.66
G003436		3.87	9.9	2.03	5.82	0.05	0.03	0.06	0.016	0.10	9.6	22.6	0.31	243	0.89
G003437		3.67	14.7	3.23	7.06	0.08	0.04	0.05	0.022	0.08	15.2	26.7	0.48	496	1.11
G003438		1.76	6.6	1.14	3.95	<0.05	<0.02	0.07	0.009	0.05	5.5	5.7	0.14	147	1.08
G003439		3.50	13.8	2.10	7.37	0.05	0.03	0.07	0.018	0.06	11.7	23.7	0.42	276	0.78
G003440		<0.05	0.5	0.02	0.07	<0.05	<0.02	<0.01	<0.005	<0.01	0.7	0.2	<0.01	<5	<0.05
G003441		4.18	12.5	2.68	6.13	0.07	0.03	0.05	0.026	0.07	17.4	25.1	0.46	1205	0.77
G003442		2.20	13.4	2.98	6.69	0.07	0.02	0.06	0.025	0.07	11.5	17.6	0.45	4720	2.34
G003443		3.07	12.3	2.27	6.33	0.07	0.04	0.04	0.022	0.10	13.0	27.2	0.50	240	0.52
G003444		2.20	16.7	2.57	5.33	0.07	0.03	0.12	0.026	0.08	14.6	12.1	0.25	2160	1.81
G003445		4.09	11.7	2.26	5.99	0.07	0.05	0.02	0.019	0.16	11.6	37.9	0.49	534	0.43
G003446		1.03	13.1	0.69	1.72	0.07	0.04	0.15	0.008	0.07	20.9	3.3	0.12	258	0.77
G003447		1.47	10.1	1.03	2.88	<0.05	0.02	0.11	0.010	0.06	8.1	3.3	0.09	96	1.08
G003448		3.47	11.4	2.45	6.65	0.07	0.03	0.03	0.018	0.12	11.3	29.4	0.36	562	0.97
G003986		1.19	10.6	2.08	3.10	0.05	0.02	0.13	0.014	0.04	8.4	5.0	0.10	421	0.97
G003987		0.27	15.1	3.53	0.68	0.06	0.02	0.12	0.005	0.03	11.1	0.4	0.05	859	2.69
G003988		0.33	11.1	3.70	1.22	0.07	0.02	0.08	<0.005	0.03	10.1	1.1	0.04	602	0.77
C271187		1.76	14.2	2.40	8.26	0.05	0.03	0.04	0.017	0.07	9.3	11.4	0.34	169	1.08
C271188		1.10	11.9	1.50	5.21	<0.05	<0.02	0.03	0.010	0.05	6.3	7.0	0.21	137	0.60
C271189		1.12	10.2	0.92	3.44	<0.05	<0.02	0.04	0.007	0.05	7.0	4.3	0.12	97	0.82
C271190		1.12	10.8	1.25	4.45	<0.05	<0.02	0.03	0.008	0.05	7.4	6.2	0.18	124	0.67
C271191		3.06	11.7	2.88	9.47	0.07	0.06	0.03	0.023	0.08	11.0	33.7	0.35	269	1.00
C271192		1.84	13.7	2.49	5.64	0.06	0.06	0.02	0.022	0.07	13.3	27.4	0.45	391	0.65
C271193		0.53	15.0	2.35	2.35	0.06	0.04	0.09	0.012	0.03	11.7	3.8	0.13	43	0.87
C271194		1.45	16.8	1.67	5.84	0.07	0.05	0.10	0.024	0.05	14.7	15.7	0.45	124	0.22
C271195		3.82	13.1	2.06	5.33	0.07	0.05	0.04	0.022	0.07	16.9	36.0	0.41	285	0.66
C271196		0.42	2.1	0.58	2.47	<0.05	0.02	0.02	<0.005	0.02	1.5	0.8	0.05	37	0.30
C271197		1.22	11.5	1.61	4.42	0.05	0.04	0.04	0.016	0.05	8.7	10.0	0.26	194	0.85
C271198		1.70	6.7	1.40	3.92	<0.05	0.02	0.04	0.012	0.06	6.8	10.4	0.23	189	0.66
C271199		1.90	9.3	1.52	4.74	<0.05	0.03	0.05	0.015	0.05	7.0	9.8	0.24	140	0.78

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003425		0.60	4.4	1030	4.6	11.7	<0.001	0.09	0.17	0.9	1.0	0.7	22.4	0.01	0.02
G003426		2.06	17.0	750	9.3	17.8	<0.001	0.02	0.34	4.0	0.6	1.4	23.6	<0.01	0.01
G003427		1.23	11.6	780	7.0	9.2	<0.001	0.07	0.22	2.4	0.9	1.0	56.5	<0.01	0.02
G003428		1.21	18.9	980	13.3	22.4	<0.001	0.09	0.37	2.6	1.0	1.3	29.6	<0.01	0.03
G003429		1.09	10.7	780	9.2	24.3	<0.001	0.06	0.25	1.4	0.6	1.2	25.4	<0.01	0.02
G003430		1.31	12.7	740	10.7	28.8	<0.001	0.05	0.27	1.7	0.6	1.5	24.3	<0.01	0.02
G003431		1.14	12.5	560	8.8	18.5	<0.001	0.05	0.30	2.0	0.6	1.1	19.8	<0.01	0.02
G003432		1.35	13.4	950	10.0	18.9	<0.001	0.06	0.34	3.1	0.9	1.3	22.5	<0.01	0.01
G003433		1.84	17.2	1370	14.6	23.0	<0.001	0.13	0.53	3.9	1.2	1.3	32.3	<0.01	0.05
G003434		1.81	12.6	440	11.1	23.8	<0.001	0.02	0.30	3.1	0.6	1.4	24.5	<0.01	0.01
G003435		0.95	10.6	1100	8.2	16.3	<0.001	0.08	0.27	1.2	1.0	0.9	35.7	<0.01	0.01
G003436		1.79	11.5	680	10.2	24.7	<0.001	0.06	0.27	1.7	0.8	1.8	14.9	<0.01	0.02
G003437		1.88	17.6	810	12.2	22.3	<0.001	0.06	0.38	3.5	1.0	1.5	23.1	<0.01	0.03
G003438		0.65	6.7	780	6.3	8.1	<0.001	0.07	0.23	0.9	0.8	0.8	18.5	<0.01	0.02
G003439		1.56	14.5	900	12.0	13.8	<0.001	0.09	0.32	2.4	0.9	1.5	15.6	<0.01	0.03
G003440		<0.05	0.4	20	0.5	0.2	<0.001	0.01	<0.05	<0.1	<0.2	<0.2	0.8	<0.01	<0.01
G003441		1.13	15.9	930	12.8	15.0	<0.001	0.07	0.29	2.6	1.0	1.2	21.1	<0.01	0.02
G003442		1.04	15.4	930	15.4	15.2	<0.001	0.08	0.43	3.1	0.9	0.9	24.6	<0.01	0.04
G003443		1.97	16.0	910	9.5	22.0	<0.001	0.06	0.36	4.2	0.8	1.4	23.9	<0.01	0.01
G003444		0.80	12.3	1670	11.3	12.9	<0.001	0.17	0.39	2.6	1.4	0.7	37.0	<0.01	0.02
G003445		2.78	12.9	750	9.0	33.8	<0.001	0.02	0.27	4.0	0.5	2.0	19.2	<0.01	0.01
G003446		0.74	6.3	1220	3.5	11.6	<0.001	0.19	0.32	1.4	1.4	0.4	76.9	0.01	0.02
G003447		0.66	5.8	1040	5.3	9.2	<0.001	0.11	0.24	1.1	0.9	0.6	17.3	<0.01	0.03
G003448		2.91	13.8	600	9.4	25.3	<0.001	0.04	0.38	3.2	0.7	2.2	12.4	<0.01	0.03
G003986		0.45	4.5	2080	8.1	6.0	<0.001	0.19	0.20	0.9	1.3	0.5	20.6	<0.01	0.02
G003987		0.23	4.0	1530	1.3	2.4	<0.001	0.19	0.12	1.5	1.4	<0.2	32.5	<0.01	0.02
G003988		0.41	4.2	1520	2.1	2.5	<0.001	0.19	0.16	1.0	1.3	0.2	26.4	<0.01	0.02
C271187		1.41	15.0	390	14.4	15.2	<0.001	0.03	0.32	2.6	0.6	0.9	18.0	<0.01	0.04
C271188		0.72	8.9	280	9.0	10.5	<0.001	0.02	0.17	1.3	0.4	0.7	13.2	<0.01	0.02
C271189		0.44	8.3	540	5.4	9.3	<0.001	0.05	0.18	0.9	0.5	0.5	17.1	<0.01	0.01
C271190		0.71	9.1	390	7.2	10.8	<0.001	0.03	0.20	1.6	0.5	0.6	15.9	<0.01	0.01
C271191		3.19	12.5	380	13.6	23.8	<0.001	0.01	0.42	3.1	0.5	2.3	11.2	<0.01	0.06
C271192		2.17	16.8	550	9.2	14.6	<0.001	0.01	0.32	3.3	0.6	1.3	14.8	<0.01	0.03
C271193		0.57	8.1	1280	4.8	3.5	<0.001	0.13	0.29	1.5	1.5	0.2	35.5	0.01	0.04
C271194		1.21	17.1	430	11.4	9.6	<0.001	0.02	0.43	4.6	0.8	0.7	21.7	<0.01	0.03
C271195		1.24	14.3	1000	11.4	18.8	<0.001	0.05	0.25	2.6	1.1	1.3	37.9	<0.01	0.02
C271196		0.18	1.2	230	2.9	2.0	<0.001	0.01	0.05	0.3	0.3	0.2	7.1	<0.01	0.01
C271197		0.96	11.0	620	7.8	10.4	<0.001	0.04	0.29	1.8	0.8	0.7	16.4	<0.01	0.03
C271198		0.66	7.8	440	6.5	11.7	<0.001	0.02	0.21	1.3	0.4	0.7	12.5	<0.01	0.02
C271199		0.75	10.5	630	10.3	13.1	<0.001	0.04	0.23	1.5	0.7	0.6	16.2	<0.01	0.02

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003425		0.033	0.10	7.29	18	0.07	5.66	21	<0.5
G003426		0.113	0.17	6.18	47	0.17	8.10	56	1.9
G003427		0.055	0.15	25.40	34	0.11	7.99	40	0.7
G003428		0.078	0.28	6.08	59	0.21	7.58	68	0.7
G003429		0.066	0.13	3.92	45	0.14	3.65	60	0.5
G003430		0.074	0.16	3.99	51	0.18	3.72	59	0.5
G003431		0.080	0.14	5.47	54	0.20	5.94	52	0.5
G003432		0.076	0.16	6.24	48	0.17	8.29	52	0.6
G003433		0.084	0.18	10.90	68	0.24	10.55	54	2.0
G003434		0.093	0.18	4.68	41	0.19	6.94	48	0.7
G003435		0.047	0.13	9.69	35	0.20	7.66	47	<0.5
G003436		0.065	0.19	5.30	45	0.18	3.87	45	0.7
G003437		0.091	0.23	7.84	59	0.24	8.42	55	1.0
G003438		0.041	0.12	1.02	29	0.12	1.72	20	<0.5
G003439		0.076	0.25	3.86	46	0.22	4.52	40	0.8
G003440		<0.005	<0.02	0.11	<1	<0.05	0.70	3	<0.5
G003441		0.064	0.22	6.99	53	0.19	10.70	53	0.5
G003442		0.077	0.32	2.98	58	0.18	4.97	53	0.6
G003443		0.099	0.18	3.45	46	0.18	6.52	57	1.2
G003444		0.044	0.33	9.61	51	0.15	8.71	40	0.6
G003445		0.118	0.25	3.04	50	0.16	6.81	56	1.4
G003446		0.024	0.08	7.56	12	0.07	13.80	42	0.5
G003447		0.034	0.09	3.74	23	0.10	4.12	20	<0.5
G003448		0.110	0.21	1.71	59	0.25	4.41	48	1.2
G003986		0.017	0.37	10.20	25	0.08	5.03	13	<0.5
G003987		0.009	0.19	10.15	17	0.07	7.35	15	0.5
G003988		0.014	0.15	8.76	18	0.07	9.51	7	<0.5
C271187		0.088	0.13	2.09	63	0.22	4.27	51	0.8
C271188		0.059	0.09	1.84	36	0.13	2.18	37	<0.5
C271189		0.038	0.07	2.08	25	0.11	4.25	26	<0.5
C271190		0.056	0.08	2.12	33	0.13	4.32	31	<0.5
C271191		0.132	0.19	1.88	70	0.22	3.37	47	1.7
C271192		0.110	0.15	1.44	56	0.20	5.27	49	1.4
C271193		0.026	0.07	5.14	19	0.09	8.56	15	<0.5
C271194		0.085	0.15	3.94	44	0.16	7.71	46	0.7
C271195		0.059	0.20	20.80	39	0.16	12.60	48	0.6
C271196		0.031	0.04	0.44	15	0.05	0.62	9	<0.5
C271197		0.060	0.08	1.35	40	0.16	4.48	36	0.6
C271198		0.059	0.08	1.19	37	0.13	3.16	34	<0.5
C271199		0.048	0.11	3.49	35	0.18	4.63	40	0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
C271201		0.44	<0.005	0.07	0.64	3.2	<0.2	<10	50	0.24	0.61	0.06	0.14	10.35	2.8	10
C271202		0.42	<0.005	0.13	1.31	5.8	<0.2	<10	90	0.59	1.50	0.11	0.16	12.10	3.7	18
C271203		0.38	<0.005	0.08	1.00	4.5	<0.2	<10	90	0.36	1.26	0.11	0.14	13.55	3.3	14
C271204		0.48	<0.005	0.04	2.05	10.8	<0.2	<10	80	0.89	3.29	0.10	0.19	24.10	7.2	26
C271205		0.50	<0.005	0.11	0.59	2.2	<0.2	<10	60	0.46	0.80	0.06	0.29	11.10	1.9	8
C271206		0.40	<0.005	0.07	1.89	10.0	<0.2	<10	110	0.94	1.98	0.17	0.39	22.80	12.1	26
C271207		0.38	<0.005	0.05	0.37	1.2	<0.2	<10	60	0.24	0.29	0.07	0.09	8.63	1.8	6
C271208		0.40	<0.005	0.07	0.30	1.0	<0.2	<10	40	0.06	0.23	0.07	0.17	4.15	1.3	6
C271209		0.42	<0.005	0.24	1.31	4.9	<0.2	<10	90	0.38	0.93	0.09	0.26	10.80	6.6	16
C271210		0.38	<0.005	0.08	1.27	6.6	<0.2	<10	70	0.21	0.73	0.07	0.21	13.55	3.5	14
C271211		0.50	<0.005	0.09	2.17	9.6	<0.2	<10	100	0.57	1.48	0.11	0.26	16.00	8.5	25
C271212		0.38	<0.005	0.11	0.26	0.7	<0.2	<10	20	<0.05	0.11	0.04	0.03	3.76	1.1	3
C271213		0.30	<0.005	0.18	0.25	0.6	<0.2	<10	80	0.05	0.11	0.06	0.32	3.29	1.1	5
C271214		0.36	<0.005	0.04	0.19	0.1	<0.2	<10	30	<0.05	0.07	0.04	0.10	3.63	0.9	3
C271215		0.46	<0.005	0.04	1.46	8.5	<0.2	<10	90	0.28	0.55	0.11	0.15	17.25	6.6	20
C271216		0.32	<0.005	0.18	0.39	2.3	0.2	<10	40	0.11	0.29	0.08	0.49	8.25	1.4	8
C271217		0.38	<0.005	0.07	1.16	5.3	<0.2	<10	110	0.24	0.63	0.11	0.12	14.35	5.1	14
C271218		0.42	<0.005	0.46	2.57	10.3	<0.2	<10	310	0.90	1.38	0.29	0.27	26.90	8.5	30
C271219		0.36	<0.005	0.12	1.83	6.8	<0.2	<10	220	0.44	0.71	0.34	0.07	19.45	6.9	24
C271220		0.44	<0.005	0.13	1.84	7.4	<0.2	<10	220	0.41	0.75	0.32	0.07	18.35	6.3	24
C271221		0.56	0.006	0.10	1.79	6.7	<0.2	<10	200	0.52	0.59	0.26	0.27	30.30	8.7	28
C271222		0.22	<0.005	0.09	1.05	3.9	<0.2	<10	120	0.39	0.63	0.19	0.14	17.50	5.0	17
C271223		0.30	<0.005	0.51	1.88	9.0	<0.2	<10	250	0.59	1.29	0.35	0.33	23.20	11.8	30
C271224		0.46	<0.005	0.10	1.66	4.5	<0.2	<10	180	0.34	0.90	0.21	0.19	18.05	6.3	25
C271225		0.50	<0.005	0.08	1.80	7.8	<0.2	<10	170	0.51	0.44	0.27	0.21	29.90	10.2	28
C271226		0.40	<0.005	0.09	1.62	6.0	<0.2	<10	120	0.33	0.71	0.20	0.14	20.00	5.9	25
C271227		0.48	<0.005	0.08	0.78	5.0	<0.2	<10	60	0.20	0.94	0.14	0.24	16.95	3.7	13
C271228		0.66	<0.005	0.06	1.91	7.9	<0.2	<10	120	0.66	0.27	0.28	0.24	31.40	9.9	26
C271229		0.30	0.008	0.39	0.91	6.1	<0.2	<10	330	1.09	0.21	1.00	0.31	59.50	15.5	11
C271230		0.54	<0.005	0.16	1.73	7.1	<0.2	<10	190	0.61	0.42	0.34	0.15	21.40	9.1	26
C271231		0.88	<0.005	0.06	2.01	4.5	<0.2	<10	150	0.61	0.38	0.31	0.12	29.50	7.4	25
C271232		0.62	<0.005	0.11	2.51	6.2	<0.2	<10	210	0.61	0.50	0.38	0.16	27.40	12.9	34
C271233		0.76	<0.005	0.04	1.96	4.3	<0.2	<10	140	0.45	0.32	0.30	0.13	32.70	8.7	28
C271234		0.56	<0.005	0.10	0.80	5.2	<0.2	<10	100	0.29	0.18	0.18	0.12	11.00	8.7	16
C271235		0.70	<0.005	0.05	2.12	9.1	<0.2	<10	120	0.71	0.36	0.16	0.11	22.20	10.6	30
C271236		0.48	<0.005	0.13	2.45	8.4	<0.2	<10	180	1.29	0.41	0.27	0.15	27.00	10.3	31
C271237		0.56	<0.005	0.05	1.80	6.8	<0.2	<10	80	0.47	0.46	0.12	0.15	22.10	6.8	26
C271238		0.48	0.008	0.06	1.11	6.2	<0.2	<10	60	0.24	0.25	0.12	0.11	17.10	4.5	18
C271239		0.44	<0.005	0.06	1.65	7.4	<0.2	<10	160	0.60	0.54	0.28	0.32	28.40	8.6	26
C271240		0.04	<0.005	<0.01	0.01	0.1	<0.2	<10	10	<0.05	0.03	0.01	0.01	1.33	0.1	<1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
C271201		1.07	9.5	1.18	4.18	<0.05	0.02	0.02	0.012	0.04	5.4	4.4	0.11	102	0.65
C271202		2.12	12.7	1.69	5.93	<0.05	0.03	0.03	0.020	0.06	6.4	10.1	0.23	181	0.86
C271203		1.57	9.7	1.37	5.20	<0.05	0.03	0.02	0.013	0.05	6.8	5.5	0.21	107	0.82
C271204		3.41	13.2	3.15	8.78	0.07	0.13	0.02	0.029	0.06	12.5	18.7	0.41	266	1.42
C271205		1.35	8.1	0.90	3.22	<0.05	0.02	0.03	0.010	0.03	5.7	3.0	0.09	57	0.51
C271206		2.26	13.9	2.94	6.78	0.06	0.08	0.04	0.027	0.07	10.7	21.1	0.41	635	1.05
C271207		0.72	4.6	0.71	2.34	<0.05	0.02	0.01	0.006	0.03	4.4	1.5	0.08	53	0.41
C271208		0.55	5.2	0.62	2.33	<0.05	<0.02	0.02	<0.005	0.03	2.2	0.8	0.05	46	0.39
C271209		1.22	10.7	2.10	6.66	<0.05	0.03	0.07	0.018	0.05	5.4	9.3	0.16	489	0.81
C271210		0.94	9.3	2.22	7.86	<0.05	0.04	0.03	0.016	0.03	6.9	8.4	0.13	122	1.01
C271211		2.12	13.9	3.08	8.30	0.06	0.05	0.04	0.029	0.06	8.3	18.0	0.35	305	1.29
C271212		0.72	6.0	0.58	2.22	<0.05	<0.02	0.01	<0.005	0.02	2.0	0.8	0.05	42	0.27
C271213		0.28	8.9	0.46	1.24	<0.05	0.02	0.07	0.005	0.03	1.7	0.3	0.02	29	0.35
C271214		0.28	2.8	0.49	1.86	<0.05	<0.02	0.01	<0.005	0.02	1.9	0.6	0.02	28	0.15
C271215		1.71	9.0	2.77	7.98	0.06	0.06	0.04	0.019	0.05	8.8	22.3	0.32	284	0.95
C271216		0.73	7.3	0.61	4.16	<0.05	0.02	0.07	0.007	0.04	4.2	1.6	0.05	49	0.48
C271217		1.72	7.0	1.89	5.17	<0.05	0.03	0.02	0.015	0.06	7.3	17.4	0.25	211	0.60
C271218		2.83	19.2	2.81	7.93	0.07	0.06	0.09	0.036	0.08	14.9	21.9	0.38	168	1.46
C271219		1.92	10.6	2.17	5.66	0.05	0.04	0.07	0.024	0.06	10.2	18.0	0.43	214	0.61
C271220		2.02	10.7	2.22	5.90	0.06	0.04	0.06	0.025	0.06	9.6	19.2	0.43	180	0.64
C271221		1.73	20.7	2.31	5.48	0.08	0.07	0.03	0.025	0.06	15.0	24.6	0.52	357	0.59
C271222		1.76	11.0	1.58	4.43	0.05	0.03	0.04	0.016	0.06	8.7	14.3	0.28	238	0.66
C271223		2.60	17.7	2.69	6.53	0.05	0.03	0.13	0.030	0.10	9.7	17.3	0.39	1015	1.94
C271224		1.90	10.5	1.81	5.97	0.06	0.03	0.06	0.021	0.05	9.3	15.9	0.39	134	0.63
C271225		1.85	19.7	2.52	5.58	0.08	0.04	0.05	0.024	0.06	14.7	22.3	0.50	428	0.77
C271226		1.55	11.6	2.01	5.74	0.06	0.04	0.05	0.020	0.06	10.2	15.3	0.44	147	0.69
C271227		1.21	9.6	1.38	4.18	0.05	0.03	0.02	0.011	0.05	8.4	7.5	0.20	162	0.76
C271228		2.83	21.6	2.66	5.77	0.07	0.05	0.05	0.026	0.10	15.1	29.6	0.56	408	0.65
C271229		0.89	25.0	2.38	2.55	0.12	0.04	0.18	0.015	0.05	34.3	4.0	0.16	2680	1.96
C271230		4.12	14.3	2.70	7.15	0.06	0.04	0.06	0.027	0.12	11.2	28.7	0.38	340	1.11
C271231		3.85	13.6	2.16	7.02	0.08	0.04	0.04	0.028	0.11	14.5	36.7	0.55	251	0.46
C271232		4.81	15.4	3.11	8.36	0.09	0.05	0.05	0.033	0.12	13.8	36.5	0.58	670	0.87
C271233		2.95	14.6	2.23	6.50	0.07	0.05	0.02	0.024	0.08	15.8	30.9	0.57	213	0.38
C271234		1.80	10.1	2.10	4.40	<0.05	<0.02	0.03	0.012	0.04	4.9	5.4	0.21	1320	1.71
C271235		2.82	12.6	3.34	6.46	0.06	0.02	0.04	0.028	0.05	10.5	26.1	0.47	713	0.83
C271236		5.57	20.2	3.12	7.61	0.08	0.03	0.04	0.030	0.09	13.6	27.9	0.57	631	1.01
C271237		4.06	16.0	2.90	8.33	0.06	0.04	0.04	0.024	0.06	10.7	26.7	0.43	259	0.96
C271238		1.43	10.9	2.23	6.68	0.05	0.02	0.06	0.015	0.05	8.2	10.9	0.22	229	0.76
C271239		3.33	18.3	2.79	7.26	0.07	0.04	0.04	0.024	0.11	14.1	32.6	0.51	411	0.84
C271240		<0.05	0.6	0.02	0.07	<0.05	<0.02	<0.01	<0.005	<0.01	0.6	0.2	<0.01	<5	0.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
C271201		0.63	5.6	270	6.7	9.6	<0.001	0.01	0.17	1.1	0.4	0.5	9.3	<0.01	0.03
C271202		0.61	10.0	480	14.5	11.9	<0.001	0.02	0.21	1.1	0.6	0.6	12.6	<0.01	0.04
C271203		0.70	8.2	280	9.7	9.1	<0.001	0.01	0.21	1.5	0.5	0.6	14.0	<0.01	0.03
C271204		1.88	15.5	290	19.6	19.6	<0.001	<0.01	0.41	4.0	0.6	1.0	11.6	<0.01	0.05
C271205		0.32	4.5	340	7.2	7.3	<0.001	0.02	0.11	0.7	0.6	0.3	10.4	<0.01	0.03
C271206		1.59	17.7	560	19.3	16.4	<0.001	0.01	0.40	3.4	0.7	0.7	15.8	<0.01	0.05
C271207		0.29	2.8	210	3.5	5.9	<0.001	<0.01	0.11	0.8	0.3	0.3	10.4	<0.01	0.02
C271208		0.19	2.4	220	2.8	4.0	<0.001	0.01	0.08	0.4	0.3	0.2	10.8	<0.01	0.01
C271209		1.18	9.1	340	11.8	11.2	<0.001	0.02	0.27	1.8	0.6	0.8	11.9	<0.01	0.04
C271210		1.53	6.5	270	10.1	7.0	<0.001	0.01	0.32	1.7	0.5	0.8	9.8	<0.01	0.03
C271211		1.71	15.8	450	17.4	15.7	<0.001	0.01	0.39	3.1	0.7	0.8	12.9	<0.01	0.04
C271212		0.29	1.3	130	2.3	3.7	<0.001	<0.01	<0.05	0.6	0.2	0.2	6.8	<0.01	0.01
C271213		0.15	3.3	490	2.4	1.7	<0.001	0.03	0.06	0.6	0.5	0.2	11.9	<0.01	0.01
C271214		0.07	1.1	210	1.5	2.7	<0.001	<0.01	<0.05	0.3	0.2	0.2	7.6	<0.01	0.01
C271215		2.39	12.9	310	9.9	11.0	<0.001	0.01	0.36	2.6	0.6	1.3	12.0	<0.01	0.04
C271216		0.54	3.4	580	5.8	5.5	<0.001	0.03	0.22	0.6	0.6	1.0	9.4	<0.01	0.03
C271217		1.18	10.1	380	8.5	14.3	<0.001	0.01	0.21	1.9	0.4	1.0	10.8	<0.01	0.03
C271218		1.49	20.5	1300	14.7	18.1	<0.001	0.07	0.42	3.9	1.3	1.1	32.5	<0.01	0.04
C271219		1.14	14.6	750	10.7	11.2	<0.001	0.04	0.25	2.8	0.9	0.9	27.6	<0.01	0.02
C271220		1.19	15.0	760	11.0	11.9	<0.001	0.03	0.26	2.8	0.8	1.0	26.1	<0.01	0.03
C271221		1.43	20.9	650	10.4	13.8	<0.001	<0.01	0.38	4.9	0.7	0.9	19.6	<0.01	0.03
C271222		0.86	10.4	510	7.7	13.8	<0.001	0.02	0.24	1.9	0.6	0.7	15.8	<0.01	0.02
C271223		1.43	16.2	1490	15.7	20.7	<0.001	0.13	0.56	3.6	0.9	1.0	28.3	<0.01	0.04
C271224		0.81	15.5	710	12.3	10.4	<0.001	0.03	0.33	2.3	0.8	0.7	19.1	<0.01	0.02
C271225		1.17	19.6	800	9.1	12.4	<0.001	<0.01	0.42	3.8	0.8	0.8	19.5	<0.01	0.03
C271226		1.10	15.6	630	12.0	10.1	<0.001	0.03	0.35	2.7	0.9	0.7	17.2	<0.01	0.03
C271227		0.69	9.1	370	7.1	10.7	<0.001	0.01	0.23	1.2	0.5	0.7	13.1	<0.01	0.03
C271228		2.16	22.1	870	11.8	22.1	<0.001	0.02	0.41	4.1	0.8	1.3	17.2	<0.01	0.02
C271229		0.53	8.7	2100	7.0	7.1	<0.001	0.26	0.44	2.0	2.4	0.3	81.0	0.01	0.07
C271230		2.41	12.6	1490	10.5	26.8	<0.001	0.10	0.33	3.9	1.1	2.3	25.9	<0.01	0.03
C271231		2.67	16.3	900	11.3	27.3	<0.001	0.02	0.36	4.5	0.7	1.9	18.0	<0.01	0.02
C271232		2.60	21.4	820	13.9	34.9	<0.001	0.05	0.40	5.9	0.9	2.0	27.9	<0.01	0.03
C271233		2.24	18.6	690	11.2	19.2	<0.001	0.01	0.38	4.4	0.6	1.5	18.7	<0.01	0.03
C271234		0.32	8.5	1030	5.1	10.7	<0.001	0.11	0.26	0.8	0.7	0.6	20.1	<0.01	0.03
C271235		1.23	17.8	720	11.7	12.5	<0.001	0.05	0.31	2.6	0.9	1.0	14.2	<0.01	0.03
C271236		1.63	22.1	910	16.9	24.4	<0.001	0.05	0.38	4.1	0.9	1.5	20.6	<0.01	0.03
C271237		2.77	17.0	370	12.4	20.4	<0.001	0.04	0.35	3.4	0.7	1.7	13.0	<0.01	0.04
C271238		2.17	10.7	460	9.3	9.4	<0.001	0.04	0.35	2.0	0.6	1.3	10.3	0.01	0.03
C271239		2.39	19.6	620	10.1	25.6	<0.001	0.04	0.36	3.5	0.8	1.6	25.5	<0.01	0.03
C271240		<0.05	0.4	20	0.6	0.2	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
C271201		0.057	0.07	0.92	33	0.15	2.38	22
C271202		0.047	0.11	5.92	40	0.16	4.18	36
C271203		0.063	0.09	2.61	38	0.15	4.18	32
C271204		0.092	0.15	4.52	77	0.26	7.33	53
C271205		0.034	0.05	2.70	22	0.09	4.65	17
C271206		0.083	0.11	2.49	61	0.24	5.26	57
C271207		0.038	0.04	1.61	18	0.07	4.20	14
C271208		0.033	0.04	0.35	18	0.05	0.81	10
C271209		0.066	0.10	0.76	49	0.16	1.77	32
C271210		0.075	0.09	0.49	69	0.19	1.55	30
C271211		0.085	0.13	1.90	67	0.29	2.91	51
C271212		0.036	0.03	0.83	15	0.05	0.63	10
C271213		0.024	0.03	0.34	13	<0.05	0.69	10
C271214		0.023	0.02	0.17	15	<0.05	0.36	9
C271215		0.103	0.12	0.59	66	0.18	2.39	40
C271216		0.042	0.05	0.46	23	0.10	0.97	22
C271217		0.069	0.12	0.95	43	0.14	2.84	39
C271218		0.059	0.26	9.78	63	0.27	9.95	57
C271219		0.062	0.19	4.56	47	0.17	5.78	46
C271220		0.061	0.17	3.95	48	0.36	5.54	48
C271221		0.092	0.15	3.12	52	0.29	8.14	65
C271222		0.062	0.11	2.91	37	0.15	4.51	38
C271223		0.055	0.25	6.85	66	0.23	7.54	62
C271224		0.060	0.18	3.95	39	0.33	4.25	51
C271225		0.088	0.14	2.82	55	0.23	7.77	60
C271226		0.074	0.15	2.03	42	0.28	4.67	54
C271227		0.054	0.08	1.10	37	0.19	3.22	35
C271228		0.115	0.20	4.09	58	0.22	7.30	67
C271229		0.021	0.35	28.40	38	0.14	20.50	21
C271230		0.068	0.29	8.13	58	0.19	6.79	45
C271231		0.120	0.27	3.52	56	0.17	7.75	55
C271232		0.121	0.30	3.85	67	0.25	6.79	72
C271233		0.121	0.22	2.48	56	0.20	7.04	57
C271234		0.029	0.10	3.14	48	0.08	2.22	29
C271235		0.076	0.18	5.46	60	0.18	4.67	59
C271236		0.084	0.25	6.56	64	0.31	7.44	69
C271237		0.131	0.21	1.77	72	0.21	3.06	50
C271238		0.109	0.11	0.67	62	0.21	2.38	38
C271239		0.129	0.20	2.40	67	0.24	5.79	63
C271240		<0.005	<0.02	0.12	<1	<0.05	0.69	3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: Eiangx

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
Sample Description	0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
C271241	0.36	<0.005	0.06	1.91	7.0	<0.2	<10	140	1.21	0.41	0.23	0.18	34.60	8.9	25
C271242	0.40	<0.005	0.09	1.05	4.3	<0.2	<10	70	0.25	0.40	0.09	0.13	21.20	3.4	13
C271243	0.48	<0.005	0.14	2.25	6.4	<0.2	<10	200	1.84	0.55	0.48	0.10	39.00	8.8	27
C271244	0.34	<0.005	0.13	0.93	5.4	<0.2	<10	50	0.20	0.32	0.13	0.16	21.10	4.8	18
C271245	0.44	0.007	0.12	2.44	9.0	<0.2	<10	160	1.43	0.60	0.21	0.12	26.10	8.1	31
C271246	0.34	<0.005	0.35	1.47	5.3	<0.2	<10	190	0.92	0.45	0.27	0.48	21.70	11.9	23
C271247	0.42	<0.005	0.13	2.24	7.9	<0.2	<10	150	0.90	0.46	0.23	0.11	22.80	8.8	31
C271248	0.52	<0.005	0.07	2.19	7.3	<0.2	<10	170	1.17	0.57	0.25	0.09	37.90	12.8	29
C271249	0.32	<0.005	0.15	1.77	6.2	<0.2	<10	320	0.68	0.40	0.25	0.17	33.40	48.4	24
C271250	0.28	<0.005	0.17	1.71	6.4	<0.2	<10	420	0.72	0.39	0.27	0.21	38.70	64.3	24

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: Eiangx

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
Sample Description															
C271241	6.29	19.0	3.01	7.34	0.07	0.03	0.04	0.031	0.11	15.1	30.7	0.52	490	0.76	0.01
C271242	2.06	11.5	2.12	10.85	0.05	0.02	0.02	0.016	0.04	10.3	9.3	0.11	142	1.15	<0.01
C271243	7.98	23.2	3.05	8.88	0.08	0.03	0.05	0.035	0.12	20.7	35.5	0.57	422	0.93	0.01
C271244	2.09	12.9	1.86	6.62	0.05	0.04	0.04	0.016	0.06	10.4	11.5	0.26	177	0.79	0.01
C271245	6.76	21.4	3.06	8.16	0.08	0.03	0.07	0.035	0.10	12.9	32.8	0.54	278	1.15	0.01
C271246	3.78	16.0	2.16	5.32	0.05	0.02	0.07	0.026	0.06	8.8	12.2	0.30	2170	1.50	0.01
C271247	4.80	14.6	2.88	7.22	0.07	0.02	0.06	0.029	0.07	11.6	22.8	0.52	358	1.05	<0.01
C271248	5.45	13.6	3.40	7.10	0.08	0.03	0.06	0.030	0.06	18.2	30.0	0.50	808	0.87	0.01
C271249	3.21	10.3	6.11	6.21	0.10	0.02	0.08	0.023	0.05	11.7	22.0	0.35	5100	1.37	0.01
C271250	2.95	11.2	6.05	6.05	0.10	0.02	0.11	0.023	0.05	12.4	18.8	0.32	8910	1.52	0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: Eiangx

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
Sample Description															
C271241	2.06	19.1	790	17.2	26.6	<0.001	0.04	0.37	3.8	0.9	1.5	17.9	<0.01	0.03	2.8
C271242	2.42	6.8	340	13.3	9.2	<0.001	0.04	0.38	1.9	0.5	2.2	10.3	<0.01	0.03	2.0
C271243	2.20	19.1	860	23.6	38.2	<0.001	0.08	0.32	4.3	1.2	2.5	32.3	<0.01	0.04	2.0
C271244	2.44	12.1	470	9.5	14.7	<0.001	0.03	0.34	2.5	0.6	1.6	12.4	<0.01	0.03	2.5
C271245	2.13	23.0	870	19.9	26.8	<0.001	0.08	0.41	4.0	1.1	1.9	18.7	<0.01	0.02	1.2
C271246	0.75	13.6	1430	15.0	18.4	<0.001	0.15	0.31	1.9	1.1	0.9	25.4	<0.01	0.05	0.2
C271247	1.30	20.6	910	17.0	19.8	<0.001	0.08	0.36	3.3	1.1	1.2	18.9	<0.01	0.02	0.8
C271248	1.41	18.9	900	18.7	19.8	<0.001	0.05	0.28	4.1	1.0	1.4	16.9	<0.01	0.02	2.0
C271249	0.97	14.3	1050	12.4	10.7	<0.001	0.11	0.27	3.3	1.2	1.1	22.1	<0.01	0.03	0.7
C271250	0.79	13.9	1210	12.3	10.3	<0.001	0.12	0.28	3.2	1.4	1.0	23.8	<0.01	0.04	0.6

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 5 (A - D)

Finalized Date: 7-AUG-2007

Account: EIANGX

Project: North Dawson / Echo

CERTIFICATE OF ANALYSIS VA07074509

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
C271241		0.101	0.19	3.30	63	0.19	6.35	82	1.1
C271242		0.121	0.12	0.82	81	0.15	2.05	27	0.9
C271243		0.070	0.30	4.95	62	0.20	9.07	68	0.8
C271244		0.098	0.15	1.20	58	0.21	3.20	37	1.2
C271245		0.077	0.34	7.27	64	0.44	8.17	64	1.1
C271246		0.046	0.41	9.13	49	0.20	6.92	40	0.5
C271247		0.071	0.23	6.26	62	0.25	6.52	61	0.8
C271248		0.067	0.27	12.20	60	0.21	9.62	61	0.6
C271249		0.045	0.52	8.59	39	0.17	6.68	45	<0.5
C271250		0.044	0.51	10.15	39	0.14	7.16	42	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 8-AUG-2007

Account: EIANGX

CERTIFICATE VA07078220

Project: North Dawson

P.O. No.: NGX07-02

This report is for 59 Rock samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
PUL-QC	Pulverizing QC Test
CRU-31	Fine crushing - 70% <2mm
SPL-21	Split sample - riffle splitter
PUL-31	Pulverize split to 85% <75 um

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
C274851		1.60	0.005	0.10	2.51	2.9	<0.2	<10	130	0.15	0.09	2.48	0.18	13.40	27.0	15
C274852		1.42	<0.005	0.09	0.42	2.2	<0.2	<10	60	0.11	0.02	0.21	0.05	3.37	2.7	13
C274853		1.48	<0.005	0.03	0.01	0.6	<0.2	<10	<10	<0.05	0.09	0.03	0.01	0.49	0.8	6
C274854		1.72	<0.005	0.06	4.95	0.3	<0.2	<10	10	5.17	0.08	4.60	0.09	38.40	3.2	27
C274855		1.54	<0.005	0.02	0.01	0.1	<0.2	<10	<10	0.09	0.14	0.02	0.01	0.21	0.3	12
C274856		1.70	<0.005	0.38	5.78	0.1	<0.2	<10	70	2.67	0.32	3.85	0.16	86.70	17.2	40
C274857		1.00	<0.005	0.01	0.32	0.1	<0.2	<10	40	0.97	0.14	0.09	0.02	71.80	2.6	5
C274858		0.50	<0.005	0.01	0.03	<0.1	<0.2	<10	<10	0.09	0.09	0.03	0.02	2.08	0.6	9
C274901		1.02	<0.005	0.06	<0.01	0.4	<0.2	<10	10	<0.05	0.01	0.08	0.01	1.12	1.1	13
C274902		1.04	<0.005	0.02	0.09	0.6	<0.2	<10	10	<0.05	0.01	0.04	0.02	1.76	1.9	13
C274903		1.16	<0.005	0.06	0.02	<0.1	<0.2	<10	20	<0.05	0.04	0.01	0.02	1.16	0.4	18
C274904		1.00	<0.005	0.10	0.55	5.7	<0.2	<10	60	0.27	0.08	1.93	0.34	33.40	3.5	18
C274905		0.98	<0.005	0.06	0.25	0.2	<0.2	<10	70	0.11	0.16	0.04	0.07	8.97	3.4	15
C274906		0.82	<0.005	0.03	0.15	0.2	<0.2	<10	70	0.22	0.08	0.38	0.07	14.05	1.2	9
C274907		1.20	0.008	1.93	0.06	0.2	<0.2	<10	20	<0.05	11.80	0.01	0.02	0.65	0.3	14
C274908		0.94	0.029	5.31	<0.01	0.4	<0.2	<10	10	<0.05	23.60	0.01	0.03	0.51	0.3	13
C274909		0.88	<0.005	0.12	0.04	0.1	<0.2	<10	20	<0.05	0.44	0.04	0.04	3.77	1.5	16
C274910		1.22	<0.005	0.07	<0.01	1.0	<0.2	<10	<10	<0.05	0.16	0.01	<0.01	0.23	0.2	13
C274911		1.16	<0.005	0.02	<0.01	1.6	<0.2	<10	<10	<0.05	0.02	<0.01	0.01	0.22	0.3	12
C274912		1.04	<0.005	0.04	0.01	0.1	<0.2	<10	<10	<0.05	0.05	0.02	0.01	2.09	1.8	16
C274913		0.92	<0.005	0.07	0.20	1.1	<0.2	<10	50	0.06	0.05	0.17	0.02	3.28	2.9	12
C274914		1.02	<0.005	0.09	1.05	0.3	<0.2	<10	80	0.16	0.10	0.14	0.03	20.80	6.5	29
C274915		1.18	<0.005	0.15	1.27	<0.1	<0.2	<10	220	0.35	0.17	0.36	0.03	49.60	5.9	13
C274916		0.76	<0.005	0.10	1.13	0.4	<0.2	<10	180	0.20	0.13	0.26	0.03	53.90	4.3	21
C274917		0.82	<0.005	0.09	0.86	<0.1	<0.2	<10	170	0.34	0.17	0.93	0.08	17.20	6.3	15
C274918		1.04	<0.005	0.17	2.09	2.7	<0.2	<10	210	1.62	0.33	1.60	0.03	22.10	3.8	19
C274919		0.80	<0.005	0.02	<0.01	0.1	<0.2	<10	10	<0.05	0.04	0.01	0.01	0.49	0.6	12
C274920		0.76	<0.005	<0.01	0.13	0.1	<0.2	<10	40	0.09	0.19	0.10	0.01	2.64	0.8	15
C274921		Not Recvd														
C274922		Not Recvd														
C274923		Not Recvd														
C274924		1.32	<0.005	0.03	2.38	1.0	<0.2	<10	50	4.01	0.08	3.10	0.11	44.30	6.1	29
C274925		1.10	<0.005	0.09	3.75	0.4	<0.2	<10	120	1.47	0.11	1.91	0.04	64.50	13.5	64
C274926		1.26	<0.005	0.05	2.81	<0.1	<0.2	<10	200	0.71	0.06	0.62	<0.01	50.70	10.3	91
C274927		1.68	<0.005	0.03	1.52	0.4	<0.2	<10	30	2.79	0.33	4.47	0.32	20.30	3.4	11
C274928		1.32	<0.005	0.02	1.96	0.3	<0.2	<10	40	3.33	0.19	3.40	0.17	29.90	3.9	20
C274929		1.62	<0.005	0.07	3.23	0.3	<0.2	<10	180	2.54	0.12	1.52	0.03	58.30	11.3	81
C274930		1.54	<0.005	0.07	2.40	0.2	<0.2	<10	40	3.91	0.25	3.79	0.19	23.10	3.8	14
C274931		2.04	<0.005	0.08	2.86	0.5	<0.2	<10	50	3.23	0.16	2.88	0.12	35.10	3.6	23
C274932		Not Recvd														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd, ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
C274851		1.49	35.1	4.39	8.63	0.09	0.02	<0.01	0.026	0.91	6.4	9.2	1.99	605	0.58
C274852		0.32	40.8	0.65	1.57	<0.05	<0.02	<0.01	0.006	0.12	1.7	1.5	0.16	63	0.17
C274853		<0.05	28.1	0.40	0.15	<0.05	<0.02	<0.01	<0.005	<0.01	0.3	0.1	0.01	23	3.36
C274854		1.84	46.1	0.82	20.90	0.37	0.30	0.01	0.046	0.03	20.4	3.2	0.10	221	13.95
C274855		0.06	4.8	0.29	0.34	0.17	<0.02	0.01	0.016	<0.01	<0.2	0.3	<0.01	18	1825.00
C274856		2.27	826.0	2.74	21.70	0.21	0.13	0.01	0.045	0.16	44.1	7.3	0.39	213	24.50
C274857		1.58	4.4	1.13	1.62	0.05	0.03	0.02	0.014	0.11	31.4	6.0	0.04	142	9.64
C274858		0.16	5.8	0.32	0.27	<0.05	<0.02	<0.01	<0.005	0.01	1.0	0.7	0.01	30	1.49
C274901		<0.05	9.4	0.41	0.12	<0.05	<0.02	<0.01	<0.005	<0.01	0.5	0.2	0.01	26	1.71
C274902		0.16	6.5	0.35	0.44	<0.05	<0.02	0.01	<0.005	0.05	0.9	1.1	0.04	25	0.53
C274903		<0.05	11.4	0.31	0.17	<0.05	<0.02	<0.01	<0.005	0.01	0.6	0.2	0.01	22	0.55
C274904		0.16	26.4	0.55	2.46	0.08	0.13	<0.01	0.005	0.05	19.6	2.0	0.19	164	1.54
C274905		0.08	26.9	1.06	1.05	<0.05	0.04	<0.01	<0.005	0.05	4.4	1.3	0.12	106	1.64
C274906		0.18	4.8	0.29	0.66	<0.05	0.09	<0.01	<0.005	0.12	7.4	0.5	0.03	136	0.53
C274907		<0.05	6.5	0.47	0.14	<0.05	<0.02	<0.01	0.009	0.01	0.4	0.1	0.01	35	0.51
C274908		<0.05	47.5	0.39	0.08	<0.05	<0.02	<0.01	0.120	<0.01	0.3	0.1	<0.01	16	0.23
C274909		<0.05	10.9	0.60	0.29	<0.05	0.02	<0.01	<0.005	0.02	1.8	0.4	<0.01	56	0.35
C274910		<0.05	10.1	0.24	0.06	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	<0.1	<0.01	14	0.46
C274911		<0.05	1.8	0.23	0.10	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.1	<0.01	15	0.63
C274912		<0.05	7.9	0.35	0.15	<0.05	<0.02	<0.01	<0.005	<0.01	0.7	0.2	0.02	21	0.14
C274913		0.11	26.3	0.76	0.97	<0.05	<0.02	<0.01	<0.005	0.04	1.8	1.3	0.09	57	0.30
C274914		1.59	20.8	2.20	3.62	0.05	0.05	<0.01	0.017	0.28	6.0	9.5	0.46	100	0.72
C274915		1.67	241.0	2.16	7.27	0.13	0.18	<0.01	0.030	0.43	25.9	10.4	0.38	235	99.70
C274916		3.16	122.0	2.19	7.75	0.13	0.23	0.02	0.026	0.55	29.0	8.4	0.43	286	41.00
C274917		5.12	207.0	0.76	3.29	0.08	0.07	<0.01	0.010	0.05	10.7	4.1	0.16	144	18.85
C274918		0.50	120.0	0.72	6.88	0.09	0.07	0.02	0.027	0.04	11.6	3.4	0.20	114	135.00
C274919		0.06	5.5	0.32	0.54	0.24	<0.02	0.01	<0.005	<0.01	0.3	0.3	<0.01	22	677.00
C274920		0.15	6.2	0.39	1.16	0.30	0.02	0.01	<0.005	0.02	1.2	1.0	0.05	38	724.00
C274921															
C274922															
C274923		2.42	39.1	2.33	15.15	1.27	0.28	<0.01	0.168	0.26	24.4	7.1	0.30	726	49.60
C274924		4.69	131.5	3.43	16.75	0.23	0.09	0.05	0.062	0.99	33.0	17.8	0.87	409	32.10
C274925		4.40	50.5	3.18	12.70	0.11	0.05	<0.01	0.032	1.33	26.2	20.0	1.23	277	56.50
C274926		0.32	14.6	2.70	17.60	3.37	0.23	0.22	0.536	0.03	10.9	1.8	0.09	1480	60.10
C274927															
C274928		0.68	15.1	1.86	12.55	1.24	0.39	0.31	0.183	0.03	14.7	3.5	0.14	814	27.70
C274929		5.12	108.5	3.34	14.65	0.20	0.11	0.01	0.065	1.11	29.5	18.4	0.99	418	234.00
C274930		0.75	86.0	1.96	14.15	1.50	0.17	0.28	0.285	0.07	11.9	2.6	0.15	910	91.30
C274931		0.78	91.2	1.08	10.85	0.37	0.27	0.09	0.059	0.04	18.2	2.7	0.13	286	24.00
C274932															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd, ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
C274851		<0.05	13.9	520	7.3	40.9	<0.001	0.98	0.07	10.2	0.5	0.5	29.3	<0.01	0.04
C274852		0.25	6.4	300	1.7	6.7	<0.001	0.02	<0.05	1.4	0.5	0.2	4.1	<0.01	0.05
C274853		0.07	8.2	10	0.5	0.3	<0.001	<0.01	0.06	0.2	0.3	<0.2	1.1	<0.01	0.03
C274854		2.17	9.7	950	2.5	2.7	0.001	0.02	0.09	4.9	0.4	3.0	366.0	0.06	0.01
C274855		0.17	1.8	10	0.5	0.2	0.163	0.11	0.05	<0.1	1.1	0.4	1.4	0.01	0.14
C274856		1.54	28.6	280	2.5	18.0	0.002	0.93	<0.05	5.0	3.7	2.5	382.0	0.07	0.18
C274857		0.20	3.6	490	2.7	12.6	<0.001	<0.01	<0.05	0.7	0.4	0.4	5.3	<0.01	<0.01
C274858		0.09	1.1	30	0.8	1.5	<0.001	<0.01	<0.05	0.2	<0.2	0.2	1.6	<0.01	<0.01
C274901		0.06	3.7	90	0.5	0.3	<0.001	0.03	<0.05	0.2	0.2	<0.2	2.0	<0.01	0.02
C274902		0.07	5.0	20	0.9	3.9	<0.001	0.01	<0.05	0.3	<0.2	<0.2	3.2	<0.01	0.01
C274903		0.05	1.7	30	0.7	0.6	<0.001	<0.01	<0.05	0.2	<0.2	<0.2	1.1	<0.01	<0.01
C274904		1.14	15.8	3280	8.0	4.0	0.011	0.07	0.18	0.9	0.9	0.9	33.4	0.01	0.02
C274905		0.08	8.8	140	5.1	2.3	<0.001	<0.01	0.08	0.8	0.4	0.2	1.5	<0.01	0.05
C274906		0.13	2.1	150	3.3	7.4	<0.001	<0.01	0.06	0.5	<0.2	0.2	10.1	<0.01	0.01
C274907		0.06	1.6	10	2.1	0.3	<0.001	<0.01	0.13	0.1	<0.2	0.2	0.7	<0.01	0.20
C274908		<0.05	1.1	20	4.2	0.2	<0.001	<0.01	0.30	0.1	0.3	0.5	0.6	<0.01	0.38
C274909		<0.05	5.1	160	4.3	0.8	<0.001	<0.01	<0.05	0.5	0.2	<0.2	1.0	<0.01	0.03
C274910		<0.05	1.1	10	0.5	<0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.4	<0.01	0.01
C274911		<0.05	1.1	10	0.8	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.3	<0.01	<0.01
C274912		0.05	6.4	30	0.6	0.2	<0.001	<0.01	0.06	0.2	0.2	<0.2	0.6	<0.01	0.01
C274913		0.24	6.2	630	1.5	2.3	<0.001	<0.01	0.10	0.9	0.5	<0.2	8.1	<0.01	0.05
C274914		0.99	22.2	590	6.0	24.4	<0.001	<0.01	0.13	3.4	0.7	0.4	6.0	0.01	0.06
C274915		1.05	4.6	370	1.6	38.5	0.004	0.15	<0.05	5.9	1.7	1.3	34.2	<0.01	0.07
C274916		0.97	6.8	440	1.5	62.6	0.001	0.02	<0.05	6.4	1.0	1.4	19.5	<0.01	0.04
C274917		0.53	24.4	1270	0.6	5.0	0.007	0.15	<0.05	1.3	1.5	0.6	45.8	<0.01	0.06
C274918		0.78	17.7	460	0.9	4.0	0.002	<0.01	<0.05	1.3	0.5	2.3	108.5	0.01	0.06
C274919		0.14	1.3	10	0.6	0.3	0.029	0.02	<0.05	<0.1	0.3	0.3	1.1	<0.01	0.13
C274920		0.71	2.6	70	0.5	2.0	0.044	<0.01	<0.05	0.4	0.4	0.5	4.7	<0.01	0.19
C274921															
C274922															
C274923		2.31	12.4	390	0.9	23.8	0.005	<0.01	0.09	4.2	0.4	11.1	109.5	0.02	0.03
C274924		2.35	29.9	400	2.4	89.5	0.002	0.02	<0.05	10.4	0.7	2.3	161.0	0.01	0.05
C274925		1.66	27.1	360	1.7	97.5	0.004	0.05	<0.05	11.2	0.5	1.8	48.2	<0.01	0.03
C274926		4.04	4.3	350	0.9	2.9	0.002	<0.01	0.05	2.7	<0.2	60.8	12.5	0.02	0.01
C274927															
C274928		4.83	6.8	530	0.6	4.0	0.002	<0.01	<0.05	3.3	<0.2	12.5	64.1	0.03	0.02
C274929		3.39	32.9	480	1.9	85.3	0.003	0.04	<0.05	10.1	0.4	3.3	85.7	0.01	0.03
C274930		2.95	4.9	440	0.6	6.4	0.005	0.01	<0.05	2.4	0.3	25.3	108.5	0.02	0.05
C274931		2.90	9.3	590	0.9	3.3	0.001	0.02	<0.05	2.6	0.2	2.9	173.0	0.04	0.02
C274932															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
C274851		0.115	0.21	0.42	90	<0.05	7.88	98	0.6
C274852		0.019	0.04	0.14	16	0.40	1.10	17	<0.5
C274853		<0.005	<0.02	<0.05	1	<0.05	0.18	2	<0.5
C274854		0.150	<0.02	1.40	29	19.60	9.92	28	6.3
C274855		<0.005	0.04	<0.05	<1	1.34	0.19	<2	0.5
C274856		0.133	0.10	3.04	30	8.00	12.55	43	2.4
C274857		<0.005	0.07	7.66	4	<0.05	8.28	32	1.0
C274858		<0.005	<0.02	0.41	1	<0.05	0.55	5	0.5
C274901		<0.005	<0.02	0.06	1	<0.05	0.45	<2	<0.5
C274902		<0.005	<0.02	0.08	2	<0.05	0.46	5	<0.5
C274903		<0.005	<0.02	<0.05	2	<0.05	0.25	2	<0.5
C274904		0.018	0.02	7.06	39	0.18	19.40	19	3.5
C274905		<0.005	<0.02	0.78	7	<0.05	3.37	23	1.7
C274906		<0.005	0.04	0.53	2	<0.05	3.72	7	3.0
C274907		<0.005	<0.02	0.05	1	<0.05	0.13	2	<0.5
C274908		<0.005	<0.02	0.07	1	<0.05	0.17	6	<0.5
C274909		<0.005	<0.02	0.11	3	<0.05	1.37	11	0.6
C274910		<0.005	<0.02	<0.05	<1	0.43	0.14	<2	<0.5
C274911		<0.005	<0.02	<0.05	1	<0.05	0.10	2	<0.5
C274912		<0.005	<0.02	0.10	1	<0.05	0.60	2	<0.5
C274913		0.011	<0.02	0.18	7	<0.05	2.43	8	<0.5
C274914		0.050	0.15	2.73	23	<0.05	6.70	51	1.7
C274915		0.113	0.24	3.28	29	0.33	10.55	31	4.7
C274916		0.142	0.35	2.48	49	28.00	9.95	38	5.9
C274917		0.030	0.03	2.05	22	4.49	9.06	18	2.1
C274918		0.124	0.03	0.93	18	2.02	5.74	22	2.0
C274919		<0.005	0.03	<0.05	1	0.45	0.20	<2	0.5
C274920		0.017	0.04	0.30	7	0.80	1.00	4	0.8
C274921									
C274922									
C274923									
C274924		0.129	0.16	1.92	46	340.00	7.30	54	7.7
C274925		0.273	0.56	1.89	65	72.00	12.90	66	1.8
C274926		0.264	0.60	1.84	69	2.56	6.91	48	1.0
C274927		0.071	0.03	3.84	155	176.50	4.50	42	6.9
C274928		0.144	0.04	2.72	59	270.00	7.41	49	9.4
C274929		0.321	0.56	1.95	74	4.81	10.70	59	2.5
C274930		0.073	0.05	3.14	76	270.00	5.04	40	4.8
C274931		0.150	0.02	1.29	25	73.50	7.83	29	5.8
C274932									

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
C274933		1.00	<0.005	<0.01	0.04	<0.1	<0.2	<10	10	<0.05	0.01	0.03	<0.01	0.70	0.3	13
C274934		1.06	<0.005	<0.01	<0.01	<0.1	<0.2	<10	<10	<0.05	<0.01	<0.01	<0.01	0.08	0.1	14
C274935		1.08	<0.005	<0.01	0.01	<0.1	<0.2	<10	<10	<0.05	0.01	<0.01	<0.01	0.18	0.1	12
C274936		1.16	<0.005	0.01	0.01	0.9	<0.2	<10	<10	<0.05	0.01	<0.01	<0.01	0.25	0.3	11
C274937		1.02	<0.005	0.01	0.02	0.5	<0.2	<10	<10	<0.05	0.01	0.01	0.01	0.17	0.2	10
C274938		1.20	<0.005	<0.01	0.01	<0.1	<0.2	<10	<10	<0.05	<0.01	<0.01	<0.01	0.03	0.2	14
C274939		1.12	<0.005	<0.01	0.01	<0.1	<0.2	<10	<10	<0.05	<0.01	<0.01	<0.01	0.03	0.2	10
C274951		0.84	<0.005	0.07	0.20	1.3	<0.2	<10	40	<0.05	0.04	0.18	0.07	5.08	2.9	21
C274952		1.00	<0.005	0.09	0.03	0.2	<0.2	<10	<10	<0.05	0.13	<0.01	0.01	0.82	0.5	11
C274953		1.28	<0.005	0.06	0.29	0.3	<0.2	<10	50	0.09	0.02	0.49	0.12	6.38	4.1	15
C274954		1.16	0.011	0.32	0.28	0.8	<0.2	<10	10	<0.05	0.47	1.80	0.18	11.15	2.8	8
C274955		0.76	<0.005	0.04	3.70	5.4	<0.2	<10	390	0.56	0.08	2.31	0.08	1.35	6.5	16
C274956		0.44	<0.005	0.01	0.03	0.4	<0.2	<10	10	0.05	0.06	0.04	<0.01	0.42	0.3	9
C274957		0.76	<0.005	0.02	0.13	0.1	<0.2	<10	10	0.38	0.04	0.22	0.02	0.34	0.7	13
C274958		0.92	<0.005	<0.01	0.13	0.1	<0.2	<10	10	0.53	0.04	0.14	<0.01	12.35	0.9	15
C274959		0.88	<0.005	0.10	1.04	<0.1	<0.2	<10	20	1.43	0.26	2.61	<0.01	11.70	2.7	16
C274960		0.86	<0.005	1.69	0.09	0.2	<0.2	<10	540	0.06	4.40	0.07	0.06	1.51	0.6	12
C274961		1.30	<0.005	0.02	0.17	0.1	<0.2	<10	10	0.24	1.40	0.04	0.02	2.96	0.3	6
C274962		0.98	<0.005	0.02	0.01	<0.1	<0.2	<10	10	<0.05	0.05	<0.01	<0.01	0.05	0.2	13

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
	Units LOR	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
C274933		<0.05	1.9	0.32	0.18	<0.05	<0.02	<0.01	<0.005	0.01	0.3	0.3	0.01	28	0.60
C274934		<0.05	0.8	0.19	<0.05	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.1	<0.01	15	0.41
C274935		<0.05	1.1	0.24	0.05	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.1	<0.01	18	2.44
C274936		<0.05	7.4	0.40	0.10	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.1	<0.01	24	0.46
C274937		0.05	1.3	0.25	0.11	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.2	<0.01	19	0.19
C274938		<0.05	1.1	0.29	0.08	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.2	<0.01	21	0.19
C274939		<0.05	1.0	0.25	0.09	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.1	<0.01	20	0.19
C274951		0.13	9.7	0.73	0.62	<0.05	0.02	<0.01	<0.005	0.03	2.5	1.0	0.14	171	0.41
C274952		<0.05	2.1	0.28	0.08	<0.05	<0.02	<0.01	<0.005	<0.01	0.3	0.1	<0.01	41	0.14
C274953		0.19	14.2	0.78	0.92	<0.05	<0.02	<0.01	<0.005	0.09	3.2	1.4	0.11	171	0.72
C274954		<0.05	6.6	0.52	1.07	<0.05	0.05	<0.01	0.008	0.01	5.2	1.2	0.24	397	0.28
C274955		0.74	4.9	2.37	7.92	0.06	<0.02	<0.01	0.016	0.87	0.6	7.4	1.39	515	0.15
C274956		<0.05	3.5	0.24	0.11	<0.05	<0.02	<0.01	<0.005	<0.01	0.2	0.2	0.01	28	243.00
C274957		0.24	18.8	0.37	1.00	0.09	0.02	0.09	0.019	0.01	0.2	0.4	0.01	82	19.50
C274958		0.07	10.6	0.33	0.67	<0.05	0.05	<0.01	0.007	<0.01	7.1	0.2	0.01	56	74.50
C274959		1.21	12.2	1.38	7.82	1.38	0.34	0.02	0.113	0.03	5.7	2.2	0.08	612	860.00
C274960		0.05	16.2	0.68	0.27	<0.05	0.02	<0.01	<0.005	0.03	0.9	0.3	0.03	99	4.50
C274961		0.44	1.0	0.25	0.53	<0.05	0.44	<0.01	<0.005	0.11	1.3	1.8	<0.01	152	6.43
C274962		<0.05	1.3	0.28	0.05	<0.05	<0.02	<0.01	<0.005	<0.01	<0.2	0.2	<0.01	23	0.44

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
C274933		0.12	1.0	10	0.2	0.9	<0.001	<0.01	<0.05	0.2	<0.2	0.2	1.4	<0.01	<0.01
C274934		<0.05	0.6	<10	<0.2	<0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	<0.2	<0.01	<0.01
C274935		0.06	0.8	10	0.2	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.2	<0.01	<0.01
C274936		0.07	1.2	10	0.2	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.2	<0.01	<0.01
C274937		0.05	1.1	10	0.8	0.4	<0.001	<0.01	0.05	0.2	<0.2	<0.2	0.3	<0.01	<0.01
C274938		0.06	1.0	10	0.2	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	<0.2	<0.01	<0.01
C274939		<0.05	0.8	<10	0.2	0.6	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	<0.2	<0.01	<0.01
C274951		0.10	9.1	70	3.4	2.8	<0.001	<0.01	0.14	0.7	0.3	<0.2	4.9	<0.01	0.02
C274952		<0.05	1.3	10	2.7	0.2	<0.001	<0.01	<0.05	0.2	<0.2	<0.2	0.4	<0.01	0.05
C274953		0.08	9.6	180	3.5	5.1	<0.001	0.01	0.06	0.7	0.3	0.2	20.0	<0.01	0.02
C274954		<0.05	1.6	170	1.9	0.3	<0.001	0.09	<0.05	3.1	0.3	<0.2	18.6	<0.01	0.68
C274955		0.05	10.7	200	7.0	39.5	<0.001	0.67	0.08	8.8	0.9	0.3	56.9	<0.01	0.04
C274956		0.05	1.0	20	0.2	0.3	0.005	<0.01	<0.05	0.3	<0.2	<0.2	0.9	<0.01	0.04
C274957		0.21	1.4	30	0.2	0.5	0.002	0.01	<0.05	0.4	<0.2	0.9	2.4	<0.01	<0.01
C274958		0.98	2.1	30	0.2	0.4	0.009	<0.01	<0.05	0.6	<0.2	0.8	5.2	<0.01	0.01
C274959		2.33	5.4	390	0.6	2.9	0.025	0.04	0.08	2.3	1.2	7.8	25.4	0.01	0.11
C274960		0.77	1.7	40	185.5	2.4	0.001	0.18	0.05	0.3	0.6	0.2	18.9	<0.01	0.28
C274961		0.17	0.5	70	5.4	12.3	<0.001	<0.01	<0.05	0.4	<0.2	0.5	0.9	<0.01	<0.01
C274962		0.06	1.0	<10	1.3	0.8	<0.001	<0.01	<0.05	0.2	<0.2	<0.2	0.2	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 3 (A - D)

Finalized Date: 8-AUG-2007

Account: EIANX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07078220

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
C274933		<0.005	<0.02	<0.05	1	1.08	0.18	<2	<0.5
C274934		<0.005	<0.02	<0.05	<1	0.39	<0.05	<2	<0.5
C274935		<0.005	<0.02	<0.05	<1	0.31	<0.05	<2	<0.5
C274936		<0.005	<0.02	0.23	1	0.29	0.11	<2	<0.5
C274937		<0.005	<0.02	<0.05	<1	<0.05	<0.05	2	<0.5
C274938		<0.005	<0.02	<0.05	<1	0.05	<0.05	<2	<0.5
C274939		<0.005	<0.02	<0.05	<1	<0.05	<0.05	<2	<0.5
C274951		0.005	0.02	0.16	5	<0.05	1.57	12	0.5
C274952		<0.005	<0.02	<0.05	<1	<0.05	0.48	<2	<0.5
C274953		<0.005	0.03	0.23	5	0.76	3.51	15	<0.5
C274954		<0.005	<0.02	0.18	6	<0.05	4.12	17	1.2
C274955		0.067	0.18	<0.05	38	0.12	2.75	39	<0.5
C274956		<0.005	<0.02	<0.05	2	0.23	0.24	<2	<0.5
C274957		0.005	0.02	0.14	3	93.10	0.38	4	0.7
C274958		0.030	<0.02	0.30	2	7.25	1.58	6	1.0
C274959		0.082	0.03	1.60	39	162.50	3.77	28	6.4
C274960		<0.005	0.02	2.06	2	0.83	1.41	2	0.5
C274961		<0.005	0.06	0.67	<1	0.97	2.17	2	5.0
C274962		<0.005	<0.02	<0.05	<1	0.11	<0.05	<2	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). Interference: Mo>400ppm on ICP-MS Cd,ICP-AES results shown.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 12-AUG-2007

Account: EIANX

CERTIFICATE VA07079523

Project: North Dawson

P.O. No.: NGX07-02

This report is for 251 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
Au-GRA21	Au 30g FA-GRAV finish	WST-SIM
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002501		0.38	<0.005		0.06	2.09	11.6	<0.2	<10	200	0.35	0.16	0.31	0.15	37.40	11.6
G002502		0.34	0.006		0.09	1.83	7.6	<0.2	<10	160	0.24	0.19	0.27	0.10	25.60	8.8
G002503		0.28	<0.005		0.06	2.15	8.1	<0.2	<10	190	0.33	0.19	0.26	0.12	39.20	12.3
G002504		0.32	<0.005		0.17	1.82	6.9	<0.2	<10	170	0.35	0.20	0.18	0.11	36.60	6.2
G002505		0.40	0.019		0.09	1.87	11.0	<0.2	<10	170	0.37	0.33	0.29	0.13	32.20	9.3
G002506		0.28	0.007		0.06	1.11	7.4	<0.2	<10	120	0.18	0.21	0.15	0.13	12.25	4.5
G002507		0.50	0.009		0.05	1.68	13.0	<0.2	<10	140	0.36	0.22	0.17	0.12	32.20	8.2
G002508		0.40	0.009		0.08	1.68	8.4	<0.2	<10	130	0.28	0.16	0.17	0.14	30.80	6.6
G002509		0.36	<0.005		0.11	1.83	8.4	<0.2	<10	120	0.33	0.17	0.23	0.25	29.60	12.3
G002510		0.26	0.006		0.06	1.91	8.3	<0.2	<10	130	0.29	0.22	0.23	0.14	26.40	11.0
G002511		0.36	0.005		0.10	2.14	8.9	<0.2	<10	170	0.32	0.18	0.30	0.14	28.10	12.8
G002512		0.38	<0.005		0.07	1.97	10.8	<0.2	<10	110	0.31	0.20	0.20	0.14	22.60	13.5
G002513		0.46	0.005		0.05	2.24	10.2	<0.2	<10	120	0.27	0.24	0.25	0.12	19.90	11.6
G002514		0.34	0.006		0.11	2.20	8.3	<0.2	<10	140	0.35	0.19	0.23	0.11	21.10	12.3
G002515		0.36	0.006		0.14	2.54	11.6	<0.2	<10	210	0.41	0.18	0.33	0.24	25.00	16.4
G002516		0.40	0.008		0.20	2.60	12.4	<0.2	<10	330	0.48	0.22	0.45	0.35	25.80	20.7
G002517		0.36	0.007		0.14	2.69	11.9	<0.2	<10	310	0.44	0.18	0.29	0.34	23.60	16.7
G002518		0.30	0.005		0.11	2.03	7.1	<0.2	<10	190	0.23	0.13	0.19	0.27	14.50	9.0
G002519		0.20	0.007		0.22	2.41	8.5	<0.2	<10	320	0.39	0.14	0.66	0.30	21.70	12.1
G002520		0.30	0.006		0.13	2.26	6.8	<0.2	<10	250	0.48	0.11	1.68	0.19	20.70	13.6
G002521		0.30	0.005		0.10	1.82	6.9	<0.2	<10	150	0.39	0.10	2.67	0.47	24.30	11.4
G002522		0.34	<0.005		0.08	2.49	8.0	<0.2	<10	150	0.56	0.12	1.36	0.14	31.10	15.5
G002523		0.28	0.005		0.10	2.62	3.1	<0.2	<10	190	0.59	0.10	1.30	0.18	29.20	16.1
G002524		0.34	<0.005		0.12	2.60	3.7	<0.2	<10	190	0.48	0.09	1.28	0.17	21.80	14.0
G002525		0.30	<0.005		0.12	2.94	4.1	<0.2	<10	210	0.45	0.11	0.96	0.16	24.20	17.9
G002526		0.40	0.005		0.12	3.12	5.2	<0.2	<10	240	0.53	0.13	0.62	0.15	31.10	19.8
G002527		0.40	<0.005		0.06	3.48	5.4	<0.2	<10	270	0.55	0.13	0.52	0.11	28.30	21.5
G002528		0.24	<0.005		0.13	3.12	4.8	<0.2	<10	220	0.54	0.13	0.39	0.14	24.00	19.1
G002529		0.36	0.005		0.12	3.07	4.9	<0.2	<10	180	0.72	0.10	1.72	0.25	28.90	20.2
G002530		0.42	0.007		0.09	3.18	7.9	<0.2	<10	160	0.59	0.13	0.38	0.15	36.10	19.9
G002531		0.24	<0.005		0.27	2.81	9.7	<0.2	<10	140	0.64	0.14	0.72	0.33	23.80	19.3
G002532		0.30	<0.005		0.15	2.53	4.5	<0.2	<10	200	0.49	0.12	1.03	0.26	33.10	17.2
G002533		0.46	<0.005		0.04	1.86	5.2	<0.2	<10	110	0.20	0.10	0.38	0.12	18.90	14.7
G002534		0.46	<0.005		0.10	1.82	5.3	<0.2	<10	110	0.25	0.14	0.30	0.13	17.85	11.6
G002535		0.34	0.007		0.16	1.74	5.2	<0.2	<10	140	0.29	0.15	0.34	0.15	20.10	9.3
G002536		0.42	<0.005		0.11	2.02	7.0	<0.2	<10	140	0.32	0.18	0.33	0.15	18.85	14.7
G002537		0.50	0.012		0.15	2.35	6.2	<0.2	<10	220	0.46	0.18	0.41	0.17	29.40	15.6
G002538		0.36	0.009		0.26	1.73	4.8	<0.2	<10	130	0.37	0.21	0.21	0.22	23.40	8.0
G002539		0.30	0.006		0.26	1.81	4.3	<0.2	<10	170	0.27	0.24	0.42	0.21	19.85	9.3
G002540		0.04	<0.005		0.01	0.02	0.3	<0.2	<10	10	<0.05	<0.01	0.01	0.01	0.97	0.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cr	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm
		1	0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5
G002501		26	4.85	12.7	3.32	8.56	0.14	0.07	0.09	0.037	0.17	21.0	19.5	0.64	547
G002502		22	4.55	11.4	2.95	9.38	0.12	0.06	0.03	0.032	0.17	16.3	12.0	0.56	420
G002503		23	6.48	12.9	3.49	9.06	0.14	0.09	0.04	0.037	0.15	25.8	14.6	0.56	720
G002504		21	6.31	12.1	2.37	6.99	0.10	0.08	0.13	0.030	0.08	25.0	12.2	0.38	232
G002505		21	9.86	11.3	3.79	9.62	0.13	0.12	0.06	0.041	0.17	19.2	13.4	0.56	638
G002506		16	5.90	8.2	2.53	8.48	0.09	0.04	0.02	0.023	0.08	6.5	8.8	0.27	311
G002507		21	10.90	10.3	3.60	9.86	0.14	0.07	0.05	0.037	0.26	22.0	10.9	0.48	650
G002508		20	4.07	13.4	2.48	7.78	0.11	0.09	0.03	0.027	0.09	20.9	11.6	0.43	304
G002509		33	3.49	15.9	3.08	8.02	0.12	0.04	0.04	0.035	0.10	18.3	13.5	0.51	889
G002510		39	2.89	13.6	3.19	9.43	0.07	0.15	0.03	0.034	0.09	15.5	17.3	0.60	351
G002511		39	2.47	13.5	3.16	9.14	0.12	0.05	0.03	0.030	0.12	17.1	15.7	0.65	560
G002512		40	2.93	14.0	3.78	10.10	0.13	0.08	0.02	0.033	0.15	13.7	13.3	0.60	895
G002513		46	2.37	18.1	3.36	10.00	0.13	0.05	0.05	0.030	0.15	12.5	14.8	0.74	441
G002514		61	1.98	15.7	2.98	8.48	0.11	0.06	0.03	0.029	0.09	12.1	17.3	0.68	344
G002515		60	2.52	20.9	3.61	9.37	0.13	0.05	0.03	0.035	0.15	13.8	21.1	0.80	525
G002516		64	2.09	31.2	3.60	9.40	0.13	0.03	0.05	0.035	0.11	13.9	21.2	0.82	703
G002517		63	1.88	26.7	3.77	10.05	0.14	0.09	0.05	0.032	0.15	13.0	23.9	0.82	378
G002518		56	1.70	19.9	2.45	8.79	0.11	0.04	0.02	0.022	0.10	7.8	14.3	0.68	176
G002519		61	2.13	29.3	2.92	8.74	0.13	0.03	0.03	0.026	0.19	12.1	18.4	0.85	239
G002520		55	2.23	27.2	2.64	7.31	0.13	0.05	0.03	0.025	0.29	11.3	18.7	0.88	450
G002521		36	1.86	36.5	2.28	5.40	0.11	0.05	0.04	0.020	0.21	16.7	17.0	0.64	384
G002522		52	2.70	23.1	3.02	8.07	0.14	0.04	0.04	0.030	0.37	17.9	21.3	0.82	435
G002523		52	1.86	25.9	3.01	8.23	0.12	0.03	0.04	0.025	0.39	14.9	20.2	0.92	530
G002524		57	1.94	26.4	3.09	8.49	0.12	0.04	0.03	0.025	0.41	13.6	20.8	0.96	342
G002525		71	2.25	28.0	3.64	10.25	0.14	0.04	0.03	0.024	0.38	14.2	24.3	1.11	447
G002526		69	2.13	31.0	3.99	10.05	0.15	0.04	0.01	0.028	0.44	16.4	26.5	1.12	517
G002527		80	2.14	29.1	4.29	12.05	0.17	0.04	0.01	0.030	0.57	12.0	30.5	1.35	446
G002528		68	1.81	33.1	3.84	10.70	0.14	0.05	0.03	0.029	0.22	14.4	26.4	1.05	362
G002529		56	2.58	39.1	3.68	8.54	0.15	0.05	0.04	0.026	0.33	15.6	24.7	1.12	660
G002530		95	1.75	46.1	3.90	8.95	0.14	0.07	0.01	0.030	0.33	16.8	23.4	1.19	354
G002531		56	1.85	43.7	3.76	10.45	0.12	0.04	0.01	0.027	0.34	14.5	16.0	0.98	387
G002532		55	1.51	27.9	3.08	7.59	0.12	0.05	0.04	0.022	0.30	17.0	18.9	0.93	686
G002533		36	0.71	12.1	2.88	6.46	0.11	0.03	<0.01	0.019	0.10	9.3	11.9	0.76	546
G002534		35	0.77	14.5	2.64	6.55	0.09	0.02	0.01	0.023	0.06	9.0	12.0	0.61	369
G002535		30	0.68	19.7	2.38	5.85	0.09	0.02	0.09	0.025	0.06	10.7	9.9	0.52	242
G002536		37	0.69	17.4	2.86	6.85	0.10	0.03	0.02	0.026	0.07	9.7	11.7	0.67	479
G002537		46	0.90	31.3	3.20	7.27	0.13	0.04	0.01	0.029	0.14	17.4	13.0	0.80	588
G002538		29	0.67	28.9	2.22	6.70	0.09	0.02	0.03	0.023	0.08	14.1	8.3	0.46	174
G002539		48	0.78	24.4	2.48	6.72	0.08	0.03	0.05	0.022	0.09	12.0	8.7	0.69	256
G002540		<1	<0.05	0.7	0.02	0.07	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Na	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta
		%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01
G002501		0.01	3.81	16.1	630	11.1	44.4	<0.001	0.02	0.84	5.0	1.1	0.9	24.1	<0.01
G002502		0.01	3.59	12.5	310	11.5	58.9	<0.001	0.02	0.76	4.4	0.9	1.0	23.3	<0.01
G002503		0.01	3.78	13.9	530	14.1	37.0	<0.001	0.01	1.21	5.1	1.1	1.0	19.3	<0.01
G002504		0.01	2.61	10.7	270	11.0	19.0	<0.001	0.02	0.55	4.2	0.8	0.7	17.6	<0.01
G002505		0.01	4.64	11.9	680	13.3	42.7	<0.001	0.02	1.38	5.4	1.1	1.1	19.1	<0.01
G002506		0.01	2.78	7.6	320	10.4	31.8	<0.001	0.02	0.54	2.7	0.7	0.8	14.6	<0.01
G002507		0.01	4.07	10.5	470	13.6	83.9	<0.001	0.02	2.58	5.2	1.0	1.1	16.2	<0.01
G002508		0.01	2.86	12.1	310	11.8	26.2	<0.001	0.01	0.35	4.0	0.8	0.8	15.5	<0.01
G002509		0.01	2.46	15.8	520	19.2	29.6	<0.001	0.03	0.42	4.0	1.0	0.8	20.9	<0.01
G002510		<0.01	1.98	19.0	320	11.9	24.3	<0.001	0.01	0.44	5.1	0.4	0.9	18.5	<0.01
G002511		0.01	2.67	21.8	440	11.1	25.1	<0.001	0.02	0.38	5.0	0.9	0.8	21.9	<0.01
G002512		0.01	3.79	19.9	490	13.1	38.6	<0.001	0.02	0.58	5.0	1.1	0.9	15.3	<0.01
G002513		0.01	2.28	26.3	320	10.3	38.5	<0.001	0.02	0.49	5.8	1.0	0.7	18.8	<0.01
G002514		0.01	2.02	31.8	260	8.9	21.7	<0.001	0.01	0.41	4.8	1.0	0.6	20.1	<0.01
G002515		0.01	2.30	35.4	510	9.1	30.0	<0.001	0.02	0.56	5.8	1.3	0.7	25.9	<0.01
G002516		0.01	1.90	39.2	570	8.7	20.0	<0.001	0.03	0.56	5.6	1.3	0.8	31.6	<0.01
G002517		0.01	2.55	42.9	340	9.3	21.4	<0.001	0.02	0.42	5.5	1.2	0.6	22.7	<0.01
G002518		0.01	2.00	30.0	180	6.0	18.4	<0.001	0.02	0.30	4.5	0.9	0.6	18.8	<0.01
G002519		0.01	2.33	34.9	540	7.0	33.5	<0.001	0.05	0.25	5.2	1.3	0.5	38.2	<0.01
G002520		0.04	1.98	32.8	600	6.2	41.4	<0.001	0.08	0.20	5.1	1.2	0.4	58.5	<0.01
G002521		0.04	1.68	33.9	850	5.7	33.5	<0.001	0.16	0.26	3.1	1.3	0.3	92.3	<0.01
G002522		0.05	2.15	34.1	620	7.5	49.4	<0.001	0.05	0.23	5.3	1.0	0.5	76.8	<0.01
G002523		0.02	2.09	34.6	690	6.5	47.0	<0.001	0.07	0.15	5.2	1.1	0.5	66.4	<0.01
G002524		0.04	2.01	35.7	650	6.9	50.7	<0.001	0.07	0.15	5.1	1.2	0.5	71.8	<0.01
G002525		0.04	2.25	44.0	490	7.3	49.7	<0.001	0.04	0.16	5.9	1.1	0.6	53.3	<0.01
G002526		0.03	2.02	46.2	620	9.1	51.6	<0.001	0.03	0.18	6.4	1.4	0.7	44.3	<0.01
G002527		0.04	2.33	53.1	600	7.1	60.6	<0.001	0.02	0.18	7.9	1.4	0.7	32.7	<0.01
G002528		0.03	2.45	46.4	390	6.9	36.6	<0.001	0.03	0.20	6.2	1.4	0.6	28.3	<0.01
G002529		0.07	2.35	45.1	810	8.8	56.0	<0.001	0.05	0.21	5.3	1.5	0.5	100.5	<0.01
G002530		0.03	2.13	82.1	360	8.2	32.0	<0.001	0.06	0.33	5.9	1.5	0.6	28.6	<0.01
G002531		0.04	2.95	49.4	320	9.0	37.7	<0.001	0.03	0.25	5.4	1.3	0.6	33.2	<0.01
G002532		0.03	1.89	39.8	620	7.2	40.1	<0.001	0.07	0.18	5.1	1.4	0.4	46.0	<0.01
G002533		0.01	1.33	23.6	840	5.9	12.5	<0.001	0.02	0.15	3.5	0.8	0.4	19.8	<0.01
G002534		0.01	1.26	21.9	540	7.9	11.0	<0.001	0.03	0.19	3.5	0.9	0.5	21.0	<0.01
G002535		0.01	1.04	19.3	590	7.3	9.1	<0.001	0.04	0.22	3.3	1.0	0.5	22.7	<0.01
G002536		0.01	1.31	23.6	660	9.3	11.6	<0.001	0.03	0.21	4.1	1.0	0.5	21.3	<0.01
G002537		0.01	1.46	32.9	720	9.9	19.1	<0.001	0.02	0.21	5.4	1.3	0.5	24.1	<0.01
G002538		0.01	1.19	21.6	380	10.7	11.8	<0.001	0.03	0.20	3.4	0.8	0.5	18.5	<0.01
G002539		0.01	0.98	28.1	490	9.9	11.8	<0.001	0.04	0.21	4.1	0.9	0.5	25.2	<0.01
G002540		<0.01	<0.05	0.4	10	0.5	0.2	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn	Zr
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002501		9.2	0.174	0.39	1.98	75	0.23	8.70	73	2.7
G002502		6.2	0.177	0.42	1.51	75	0.21	5.11	60	2.3
G002503		10.3	0.176	0.47	1.61	77	0.28	8.69	70	3.5
G002504		12.4	0.115	0.34	2.09	48	0.14	5.85	47	3.1
G002505		8.4	0.185	0.59	1.48	83	0.31	9.44	77	4.3
G002506		2.1	0.131	0.31	0.42	69	0.18	2.15	36	1.6
G002507		8.5	0.158	1.07	1.30	78	0.92	7.11	83	2.7
G002508		5.9	0.129	0.34	1.04	58	0.17	5.26	49	3.3
G002509		4.4	0.123	0.29	1.32	70	0.23	5.97	61	1.5
G002510		6.2	0.149	0.27	0.88	71	0.22	5.96	60	4.2
G002511		4.8	0.141	0.25	0.92	77	0.24	5.80	69	1.7
G002512		5.9	0.167	0.31	0.90	89	0.40	4.97	72	3.3
G002513		3.5	0.162	0.25	0.66	96	0.77	4.47	76	1.8
G002514		3.7	0.134	0.19	0.61	68	0.19	4.92	62	2.4
G002515		3.7	0.147	0.24	0.73	85	0.22	6.02	81	1.9
G002516		2.1	0.138	0.21	1.03	96	0.31	7.14	97	1.2
G002517		3.5	0.172	0.21	0.67	94	0.18	5.10	93	3.5
G002518		1.5	0.138	0.16	0.44	70	0.13	3.17	73	1.4
G002519		1.6	0.122	0.20	0.92	74	0.25	6.44	73	1.3
G002520		1.2	0.101	0.22	0.98	63	0.24	8.52	70	1.8
G002521		0.9	0.072	0.20	1.63	50	0.11	11.15	70	1.9
G002522		2.9	0.118	0.30	0.97	63	0.16	9.84	67	1.4
G002523		2.0	0.110	0.25	0.91	63	0.14	9.28	78	1.1
G002524		1.6	0.120	0.24	0.96	70	0.15	8.87	76	1.6
G002525		2.3	0.157	0.25	0.69	86	0.18	7.38	75	1.4
G002526		3.1	0.155	0.27	0.90	91	0.17	9.36	76	1.5
G002527		4.2	0.168	0.29	0.69	111	0.16	7.02	76	1.5
G002528		2.8	0.148	0.20	0.72	96	0.16	6.42	73	2.0
G002529		2.7	0.123	0.31	0.89	68	0.20	11.55	87	1.8
G002530		5.2	0.163	0.23	0.78	85	0.17	6.63	81	2.5
G002531		2.4	0.154	0.21	0.67	76	0.22	7.81	67	1.6
G002532		2.4	0.112	0.22	1.22	72	0.17	9.77	89	1.7
G002533		2.4	0.121	0.10	0.48	82	0.45	5.16	66	1.0
G002534		1.1	0.101	0.09	0.69	72	0.35	4.47	58	0.8
G002535		0.7	0.086	0.08	1.14	59	0.17	5.50	50	0.7
G002536		1.6	0.108	0.08	0.86	79	0.19	5.00	60	1.1
G002537		3.2	0.120	0.13	1.18	79	0.17	9.66	71	1.5
G002538		1.2	0.088	0.09	1.16	53	0.15	6.25	47	0.9
G002539		1.0	0.083	0.11	1.38	62	0.13	5.27	53	1.0
G002540		0.2	<0.005	<0.02	0.07	1	<0.05	0.60	2	0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002541		0.32	<0.005		0.12	1.85	5.8	<0.2	<10	160	0.18	0.16	0.26	0.20	13.80	10.1
G002542		0.24	<0.005		0.33	1.64	5.1	<0.2	<10	330	0.33	0.21	1.16	0.30	39.80	9.1
G002543		0.24	0.010		0.16	1.54	3.9	<0.2	<10	190	0.31	0.13	1.84	0.13	21.20	11.6
G002544		0.32	<0.005		0.12	1.66	4.8	<0.2	<10	220	0.29	0.14	1.50	0.18	25.60	13.5
G002545		0.34	0.009		0.15	2.05	5.1	<0.2	<10	360	0.30	0.19	0.63	0.15	30.80	14.1
G002546		0.38	0.008		0.12	1.64	5.1	<0.2	<10	170	0.17	0.15	0.51	0.27	15.25	7.4
G002547		0.28	0.007		0.11	1.91	4.0	<0.2	<10	180	0.22	0.18	0.61	0.24	20.00	11.1
G002548		0.30	0.008		0.17	1.76	4.4	<0.2	<10	200	0.28	0.16	0.74	0.25	25.10	11.7
G002549		0.34	0.006		0.19	1.85	4.0	<0.2	<10	220	0.34	0.16	1.16	0.27	27.60	12.6
G002550		0.26	0.010		0.15	1.99	5.0	<0.2	<10	170	0.23	0.28	0.57	0.26	23.10	15.4
G002551		0.36	0.018		0.08	1.98	5.5	<0.2	<10	160	0.32	0.22	0.43	0.21	24.40	13.4
G002552		0.22	<0.005		0.06	1.56	6.0	<0.2	<10	100	0.17	0.10	0.30	0.12	16.15	9.2
G002553		0.28	0.007		0.04	1.38	4.7	<0.2	<10	100	0.14	0.10	0.30	0.12	15.15	7.8
G002554		0.42	0.010		0.05	1.56	6.7	<0.2	<10	100	0.18	0.10	0.34	0.10	18.45	10.2
G002555		0.36	0.007		0.05	1.90	6.6	<0.2	<10	110	0.31	0.10	0.36	0.12	20.50	9.4
G002556		0.40	0.015		0.07	1.72	6.3	<0.2	<10	150	0.30	0.10	0.63	0.15	25.40	11.5
G002557		0.34	<0.005		0.07	1.99	3.5	<0.2	<10	190	0.29	0.11	0.50	0.16	29.40	12.3
G002558		0.26	<0.005		0.13	2.21	2.1	<0.2	<10	290	0.27	0.13	0.75	0.17	19.70	10.0
G002559		0.14	<0.005		0.16	1.85	3.2	<0.2	<10	200	0.25	0.12	1.44	0.31	18.85	12.1
G002560		0.26	<0.005		0.09	2.05	3.0	<0.2	<10	190	0.29	0.10	0.82	0.29	30.70	14.2
G002561		0.22	0.007		0.08	2.33	23.9	<0.2	<10	220	0.41	0.15	0.56	0.17	25.10	10.8
G002562		0.12	0.018		0.17	1.16	10.5	<0.2	<10	210	0.30	0.11	0.90	0.41	26.90	10.6
G002563		0.22	0.007		0.12	1.45	5.8	<0.2	<10	190	0.34	0.11	0.63	0.09	16.00	7.0
G002564		0.14	0.025		0.30	1.78	6.3	<0.2	<10	320	0.50	0.13	1.41	0.72	50.50	12.1
G002565		0.46	0.012		0.31	4.05	6.8	<0.2	<10	370	0.73	0.17	0.67	0.16	39.00	19.6
G002566		0.34	<0.005		0.08	0.52	1.8	<0.2	<10	70	0.10	0.08	0.18	0.06	7.11	2.8
G002567		0.34	0.005		0.24	2.82	13.4	<0.2	<10	360	0.61	0.20	0.60	0.23	34.70	17.2
G002568		0.54	0.007		0.12	3.06	10.0	<0.2	<10	270	0.66	0.16	0.49	0.13	36.80	14.4
G002569		0.40	0.005		0.17	3.15	9.4	<0.2	<10	390	0.68	0.25	0.57	0.26	39.50	18.6
G002570		0.46	<0.005		0.12	2.81	8.7	<0.2	<10	300	0.54	0.13	0.46	0.17	31.20	13.5
G002571		0.46	0.009		0.16	2.75	21.7	<0.2	<10	360	0.55	0.13	0.47	0.14	30.30	14.8
G002572		0.52	0.031		0.25	2.48	8.3	<0.2	<10	300	0.55	0.17	0.41	0.27	36.80	11.3
G002573		0.48	0.088		0.20	2.36	57.7	<0.2	<10	310	0.86	0.20	0.38	0.33	56.90	15.0
G002574		0.42	0.007		0.12	1.99	12.1	<0.2	<10	220	0.59	0.47	0.31	0.88	60.90	11.0
G002575		0.46	0.010		0.16	4.29	3.8	<0.2	<10	560	0.73	0.30	0.76	0.12	20.20	21.5
G002576		0.44	0.009		0.24	4.02	6.2	<0.2	<10	380	0.52	0.22	0.69	0.20	25.00	18.1
G002577		0.42	<0.005		0.41	3.44	15.9	<0.2	<10	620	0.68	0.20	0.51	0.91	44.40	16.2
G002578		0.34	<0.005		0.38	1.87	1.9	<0.2	<10	210	0.27	0.12	0.59	0.46	20.10	7.7
G002579		0.34	<0.005		0.10	0.32	2.2	<0.2	<10	70	0.13	0.06	0.21	0.28	11.35	7.1
G002580		0.06	<0.005		0.01	0.01	<0.1	<0.2	<10	10	<0.05	0.01	0.01	0.01	1.39	0.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cr	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm
		1	0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5
G002541		37	0.63	16.4	2.87	7.09	0.09	0.04	0.02	0.022	0.08	7.4	10.6	0.72	287
G002542		28	0.77	32.3	2.19	5.33	0.12	0.04	0.08	0.025	0.10	28.8	8.2	0.45	356
G002543		23	0.51	36.7	1.99	4.19	0.08	0.07	0.04	0.020	0.06	11.4	7.8	0.46	534
G002544		29	0.66	33.4	2.31	4.95	0.08	0.07	0.03	0.023	0.07	12.8	8.6	0.57	658
G002545		39	0.80	35.4	2.77	6.17	0.10	0.05	0.03	0.027	0.07	16.1	10.1	0.69	604
G002546		30	0.77	18.2	2.13	6.17	0.07	0.03	0.06	0.019	0.06	8.1	8.3	0.50	274
G002547		37	0.65	21.3	2.39	6.25	0.08	0.03	0.04	0.022	0.07	10.1	9.3	0.68	477
G002548		33	0.62	25.6	2.34	5.31	0.08	0.03	0.05	0.021	0.07	12.5	8.7	0.67	586
G002549		34	0.60	35.6	2.37	5.35	0.08	0.03	0.06	0.022	0.07	14.1	8.6	0.75	758
G002550		43	0.72	26.1	2.82	6.42	0.09	0.04	0.05	0.026	0.08	11.3	9.3	0.91	642
G002551		37	0.70	28.2	2.78	6.29	0.09	0.02	0.04	0.026	0.06	12.4	9.6	0.83	570
G002552		29	0.75	12.4	2.33	5.48	0.09	0.03	0.03	0.019	0.06	7.8	10.2	0.51	297
G002553		28	0.76	8.2	2.03	5.09	0.09	0.03	0.07	0.021	0.06	7.3	9.4	0.51	269
G002554		29	0.82	10.9	2.68	5.50	0.11	0.02	0.03	0.021	0.06	9.1	9.9	0.54	533
G002555		32	0.75	16.5	2.65	5.63	0.10	0.04	0.03	0.023	0.06	9.8	13.7	0.60	272
G002556		33	0.68	25.2	2.73	5.18	0.11	0.06	0.11	0.023	0.07	12.5	12.5	0.66	392
G002557		40	1.39	19.1	2.88	6.21	0.11	0.03	0.03	0.022	0.28	15.2	17.2	0.96	529
G002558		56	1.07	27.1	2.27	6.60	0.09	0.03	0.05	0.021	0.11	10.8	13.5	1.15	293
G002559		35	0.66	29.0	2.35	5.27	0.07	0.03	0.06	0.021	0.07	10.5	9.4	0.83	909
G002560		47	1.27	19.1	2.62	6.23	0.10	0.04	0.04	0.022	0.24	16.2	15.4	1.00	960
G002561		47	1.11	21.4	3.17	6.77	0.12	0.09	0.04	0.027	0.15	12.9	13.7	0.80	226
G002562		24	0.54	27.4	2.01	3.42	0.10	0.03	0.10	0.014	0.07	20.6	4.7	0.35	525
G002563		30	0.82	19.8	2.04	5.10	0.10	0.02	0.04	0.018	0.09	15.9	8.2	0.53	309
G002564		31	0.93	39.5	2.12	4.56	0.15	0.04	0.10	0.020	0.15	51.9	8.2	0.53	1230
G002565		95	2.96	47.3	4.52	12.00	0.19	0.04	0.07	0.037	0.57	28.9	19.2	1.49	451
G002566		12	0.51	8.0	1.08	3.06	0.05	<0.02	0.02	0.007	0.05	4.8	2.2	0.18	76
G002567		53	1.78	41.3	3.56	8.63	0.14	0.03	0.05	0.034	0.25	19.9	13.7	0.90	607
G002568		54	1.48	34.6	3.09	9.06	0.14	0.05	0.04	0.035	0.17	19.9	14.6	0.94	240
G002569		61	1.61	36.2	3.83	9.84	0.15	0.03	0.05	0.037	0.26	29.4	13.7	0.97	808
G002570		58	1.33	30.8	3.46	8.79	0.13	0.04	0.03	0.033	0.24	16.8	13.4	0.97	351
G002571		63	2.28	36.6	3.80	8.86	0.15	0.04	0.03	0.036	0.37	17.8	14.7	1.11	397
G002572		51	1.51	40.8	3.33	7.46	0.14	0.09	0.04	0.038	0.27	21.4	16.0	1.00	295
G002573		54	2.41	44.2	3.92	7.88	0.16	0.05	0.03	0.041	0.28	28.6	12.9	0.87	494
G002574		41	1.44	22.7	3.20	5.34	0.11	0.05	0.03	0.029	0.18	16.7	10.9	0.77	691
G002575		77	1.98	42.8	3.92	11.90	0.13	0.03	0.02	0.046	0.37	9.1	13.6	2.07	670
G002576		76	2.32	49.4	4.47	11.75	0.16	0.04	0.02	0.036	0.42	14.2	15.8	2.11	578
G002577		132	2.90	56.4	4.01	11.30	0.19	0.08	0.04	0.048	0.51	23.0	13.7	1.99	555
G002578		32	0.78	50.7	1.58	5.29	0.08	0.03	0.06	0.018	0.12	9.5	7.2	0.72	215
G002579		5	0.16	7.5	1.10	1.97	0.06	<0.02	0.02	0.005	0.02	5.3	1.0	0.12	577
G002580		<1	<0.05	0.7	0.02	0.06	<0.05	<0.02	<0.01	<0.005	<0.01	0.7	0.1	<0.01	5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Na	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta
		%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01
G002541		0.01	1.39	21.0	280	7.1	10.7	<0.001	0.02	0.22	4.2	0.9	0.5	20.0	<0.01
G002542		0.02	1.15	22.8	740	10.0	15.8	<0.001	0.08	0.30	3.5	1.2	0.4	56.7	<0.01
G002543		0.02	1.01	21.0	770	5.2	5.8	0.002	0.11	0.29	3.4	1.5	0.3	60.8	<0.01
G002544		0.02	1.23	23.9	610	6.4	9.2	0.001	0.08	0.28	4.5	1.2	0.4	56.9	<0.01
G002545		0.02	1.23	27.4	580	8.2	10.7	<0.001	0.05	0.26	5.0	1.2	0.5	35.6	<0.01
G002546		0.02	1.21	18.5	390	7.2	10.5	<0.001	0.04	0.27	3.3	0.7	0.5	31.0	<0.01
G002547		0.01	1.16	22.8	420	8.3	12.1	<0.001	0.04	0.24	4.2	0.8	0.5	34.6	<0.01
G002548		0.01	1.00	22.6	570	7.3	9.5	<0.001	0.05	0.26	4.1	0.8	0.4	35.5	<0.01
G002549		0.02	0.94	24.6	650	7.2	8.8	<0.001	0.07	0.33	4.0	0.9	0.4	48.8	<0.01
G002550		0.01	1.14	24.6	530	10.6	10.7	<0.001	0.04	0.28	5.8	1.0	0.5	30.9	<0.01
G002551		0.01	1.03	22.6	470	9.8	8.9	<0.001	0.03	0.24	4.7	1.0	0.5	28.5	<0.01
G002552		0.02	1.28	18.0	530	5.4	7.8	<0.001	0.03	0.26	3.4	0.7	0.4	20.5	<0.01
G002553		0.01	1.17	16.5	580	4.9	9.2	<0.001	0.03	0.21	3.1	0.6	0.4	19.3	<0.01
G002554		0.01	1.19	16.7	700	5.2	8.7	<0.001	0.03	0.26	3.2	0.7	0.5	20.7	<0.01
G002555		0.02	1.40	19.6	670	5.8	9.5	<0.001	0.03	0.30	4.1	0.8	0.4	22.9	<0.01
G002556		0.03	1.40	23.7	780	5.4	8.3	<0.001	0.03	0.34	5.2	0.9	0.4	35.8	<0.01
G002557		0.01	1.39	24.0	800	5.5	28.1	<0.001	0.04	0.18	5.4	1.0	0.5	26.1	<0.01
G002558		0.02	1.21	30.5	740	7.6	15.2	<0.001	0.14	0.20	5.0	0.8	0.5	34.3	<0.01
G002559		0.02	0.99	25.0	620	7.0	10.4	0.001	0.13	0.24	3.8	0.9	0.4	54.6	<0.01
G002560		0.02	1.42	28.4	740	5.8	27.8	<0.001	0.11	0.20	5.3	0.9	0.5	36.3	<0.01
G002561		0.03	1.90	27.6	730	8.2	22.1	<0.001	0.03	0.99	6.1	1.1	0.5	29.1	<0.01
G002562		0.02	0.73	18.3	1110	5.0	8.6	<0.001	0.18	0.83	2.3	1.5	0.3	40.5	<0.01
G002563		0.03	1.19	18.1	710	5.8	10.3	<0.001	0.08	0.50	2.5	0.9	0.4	34.0	<0.01
G002564		0.03	1.07	32.3	1270	5.9	17.6	<0.001	0.17	1.13	3.1	1.6	0.3	64.0	0.01
G002565		0.06	1.64	63.1	1130	7.7	55.5	<0.001	0.04	0.66	10.4	2.0	0.6	30.9	<0.01
G002566		0.02	0.29	7.3	270	2.9	6.0	<0.001	0.03	0.21	0.7	0.4	0.3	12.3	<0.01
G002567		0.02	1.48	44.9	950	9.9	29.9	<0.001	0.07	0.94	5.9	1.4	0.7	33.1	<0.01
G002568		0.02	2.01	39.4	940	9.7	23.6	<0.001	0.04	1.08	7.1	1.3	0.8	26.9	<0.01
G002569		0.02	1.95	47.7	830	11.7	33.6	<0.001	0.07	1.19	6.9	1.5	0.8	31.5	<0.01
G002570		0.02	1.88	40.9	990	8.6	25.6	<0.001	0.04	0.87	6.2	1.4	0.7	28.2	<0.01
G002571		0.03	1.10	42.0	770	7.9	36.5	<0.001	0.02	1.17	9.8	1.3	0.8	27.1	<0.01
G002572		0.01	1.20	42.1	700	10.7	29.8	<0.001	0.02	2.67	8.1	1.2	0.6	24.1	<0.01
G002573		0.01	1.20	45.5	820	15.3	28.0	<0.001	0.02	116.00	8.7	1.5	0.9	19.8	<0.01
G002574		0.01	1.13	24.2	520	61.1	20.6	<0.001	0.04	6.24	4.7	1.2	0.5	20.1	<0.01
G002575		0.06	1.47	40.6	580	6.8	35.4	<0.001	0.07	0.42	13.9	1.3	1.0	30.2	<0.01
G002576		0.04	0.98	44.8	880	8.1	38.9	<0.001	0.03	0.30	12.3	1.6	0.6	27.8	<0.01
G002577		0.01	0.65	71.7	840	12.8	46.3	<0.001	0.03	0.24	14.0	2.1	0.9	24.7	<0.01
G002578		0.03	0.57	19.6	1080	5.5	14.0	<0.001	0.24	0.25	4.0	1.2	0.3	22.4	<0.01
G002579		0.02	0.38	4.2	440	2.5	1.3	<0.001	0.04	0.15	1.0	0.5	<0.2	11.4	<0.01
G002580		<0.01	<0.05	0.3	10	0.5	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2
									0.5
G002541		1.6	0.121	0.08	0.49	78	0.20	3.54	53
G002542		0.9	0.070	0.09	2.42	48	0.15	14.80	49
G002543		0.8	0.065	0.07	3.93	48	0.20	9.91	37
G002544		1.4	0.085	0.08	1.48	57	0.12	9.18	55
G002545		1.6	0.098	0.09	1.05	66	0.14	9.72	56
G002546		0.9	0.097	0.09	0.51	57	0.17	3.80	51
G002547		1.3	0.096	0.09	0.71	58	0.12	4.97	62
G002548		1.2	0.082	0.08	0.84	55	0.12	8.19	53
G002549		0.7	0.069	0.08	1.00	52	0.34	12.20	52
G002550		1.9	0.083	0.09	0.99	67	0.13	7.36	62
G002551		1.2	0.079	0.09	0.98	64	0.17	8.11	56
G002552		1.2	0.111	0.08	0.60	63	0.16	3.94	47
G002553		1.2	0.108	0.08	0.51	57	0.13	4.11	45
G002554		1.2	0.121	0.09	0.56	77	0.23	4.58	47
G002555		1.7	0.125	0.10	0.73	69	0.19	5.62	56
G002556		2.2	0.132	0.08	1.19	72	0.34	8.95	55
G002557		3.2	0.126	0.20	3.72	68	0.21	9.97	66
G002558		1.4	0.105	0.14	1.38	54	0.14	7.54	68
G002559		0.8	0.073	0.09	2.69	47	0.15	8.52	72
G002560		2.4	0.125	0.19	3.12	64	0.17	10.10	78
G002561		4.6	0.138	0.15	1.05	84	0.15	7.51	69
G002562		0.5	0.045	0.09	1.37	54	0.11	14.70	32
G002563		0.6	0.072	0.07	0.93	53	0.17	10.20	48
G002564		0.8	0.053	0.16	2.43	45	0.12	34.10	69
G002565		5.6	0.171	0.38	2.06	122	0.17	15.20	99
G002566		<0.2	0.045	0.05	0.33	28	0.06	2.01	24
G002567		1.8	0.109	0.18	1.21	92	0.21	11.30	98
G002568		4.6	0.136	0.20	1.41	85	0.19	11.15	77
G002569		2.8	0.116	0.22	2.14	99	0.21	18.55	108
G002570		3.1	0.126	0.17	1.15	88	0.19	8.47	82
G002571		3.4	0.147	0.23	1.28	99	0.17	15.15	76
G002572		5.2	0.129	0.19	1.61	84	0.28	13.55	107
G002573		8.0	0.106	0.25	1.30	83	0.17	15.80	111
G002574		9.7	0.089	0.25	1.29	62	0.14	5.98	108
G002575		2.4	0.132	0.22	0.87	116	0.13	6.38	90
G002576		3.1	0.147	0.27	0.99	126	0.12	11.10	98
G002577		4.8	0.111	0.44	1.82	133	0.10	15.55	164
G002578		0.3	0.060	0.14	0.74	47	0.08	13.70	41
G002579		0.3	0.050	0.06	0.33	19	0.05	5.36	12
G002580		0.3	<0.005	<0.02	0.10	1	<0.05	0.65	2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002581		0.44	0.007		0.24	2.74	6.2	<0.2	<10	240	0.32	0.14	0.55	0.19	15.95	23.3
G002582		0.40	0.009		0.27	3.11	4.7	<0.2	<10	560	0.41	0.18	0.81	0.41	13.80	18.1
G002583		0.58	0.018		0.29	3.18	3.9	<0.2	<10	590	0.64	0.40	0.65	0.41	24.00	19.2
G002584		0.48	0.013		0.40	4.30	2.2	<0.2	<10	460	0.46	0.16	0.92	0.25	12.80	31.8
G002585		0.48	0.009		0.26	2.92	4.3	<0.2	<10	470	0.75	0.18	0.39	0.41	23.30	13.5
G002586		0.44	0.014		0.38	3.98	9.7	<0.2	<10	630	0.70	0.52	0.62	0.70	35.50	35.5
G002587		Not Recvd														
G002588		0.46	0.013		0.17	3.40	7.8	<0.2	<10	560	0.83	0.61	0.47	0.16	27.60	16.1
G002589		0.46	0.031		0.25	2.79	28.7	<0.2	<10	500	0.94	0.26	0.47	0.26	42.20	14.4
G002590		0.42	0.041		0.36	2.80	44.1	<0.2	<10	350	0.92	0.24	0.40	0.23	35.20	12.6
G002591		0.48	0.016		0.29	2.16	29.9	<0.2	<10	230	0.46	0.11	0.58	0.18	18.60	18.2
G002592		0.40	0.009		0.15	2.76	11.6	<0.2	<10	270	0.81	0.14	0.48	0.12	26.70	13.0
G002593		0.68	0.021		0.24	2.76	52.7	<0.2	<10	320	0.83	0.15	0.49	0.23	43.70	14.5
G002594		0.58	0.037		0.22	2.89	113.5	<0.2	<10	400	0.90	0.20	0.41	0.19	47.10	15.2
G002595		0.26	0.020		0.42	2.59	66.5	<0.2	<10	430	0.74	0.36	0.74	0.30	34.00	15.9
G002596		0.40	0.009		0.11	2.28	25.4	<0.2	<10	270	0.55	0.23	0.36	0.20	22.70	11.9
G002597		0.42	0.049		0.20	2.33	19.0	<0.2	<10	220	0.75	0.16	0.38	0.15	41.30	15.5
G002598		0.44	0.014		0.29	2.69	25.1	<0.2	<10	260	0.82	0.26	0.40	0.22	65.50	15.9
G002599		0.52	0.015		0.13	2.31	19.2	<0.2	<10	240	0.70	0.16	0.44	0.24	43.60	12.3
G002600		0.40	0.007		0.17	2.56	9.0	<0.2	<10	300	0.54	0.13	0.91	0.42	27.90	15.0
G002601		0.28	0.005		0.24	0.98	8.0	<0.2	<10	330	0.45	0.12	1.02	0.48	37.50	14.3
G002602		0.32	<0.005		0.17	0.97	10.0	<0.2	<10	190	0.31	0.13	0.48	0.07	23.70	13.9
G002603		0.44	0.008		0.20	2.63	18.4	<0.2	<10	270	0.70	0.15	0.52	0.23	51.70	18.0
G002604		0.44	0.005		0.35	2.62	35.3	<0.2	<10	240	0.64	0.22	0.46	0.29	38.80	15.0
G002605		0.30	<0.005		0.03	0.42	2.2	<0.2	<10	20	0.10	0.06	0.12	0.04	5.74	2.6
G002606		0.32	<0.005		0.16	2.26	13.0	0.6	<10	210	0.64	0.14	0.39	0.22	28.20	13.4
G002607		0.28	<0.005		0.06	0.75	5.2	<0.2	<10	50	0.13	0.09	0.10	0.05	7.96	4.4
G002608		0.32	<0.005		0.12	1.22	8.3	<0.2	<10	100	0.25	0.13	0.13	0.17	12.15	6.3
G002609		0.46	0.023		0.23	2.59	24.8	<0.2	<10	320	0.81	0.23	0.44	0.21	38.80	15.3
G002610		0.54	0.008		0.24	2.65	13.2	<0.2	<10	250	0.74	0.23	0.38	0.17	32.10	13.1
G002611		0.46	<0.005		0.16	2.56	19.6	<0.2	<10	280	0.58	0.14	0.43	0.16	23.10	15.3
G002612		0.40	0.018		0.14	2.75	41.2	<0.2	<10	330	0.72	0.16	0.50	0.15	25.50	19.4
G002613		0.44	0.064		0.31	2.44	353.0	<0.2	<10	320	0.76	0.26	0.29	0.28	42.60	13.6
G002614		0.52	0.036		0.37	5.39	39.0	<0.2	<10	700	1.44	0.59	0.64	0.24	25.50	25.9
G002615		0.38	1.120	1.07	2.17	1.86	1775.0	1.2	<10	320	0.41	0.28	0.19	0.43	31.60	15.7
G002616		0.46	0.010		0.26	3.13	21.1	<0.2	<10	450	0.69	0.38	0.48	0.42	23.50	15.0
G002617		0.48	<0.005		0.27	3.15	7.9	<0.2	<10	470	0.98	0.17	0.42	0.30	30.20	13.3
G002618		0.46	<0.005		0.21	3.47	5.8	<0.2	<10	560	1.03	0.18	0.39	0.33	30.50	16.8
G002619		0.30	<0.005		0.09	2.80	13.8	<0.2	<10	300	0.62	0.15	0.71	0.19	26.70	12.6
G002620		0.04	<0.005		0.01	0.01	0.4	<0.2	<10	10	<0.05	0.01	0.01	0.02	1.29	0.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Cr ppm 1	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05
G002581		67	0.81	57.1	3.97	7.26	0.12	0.02	0.04	0.022	0.18	7.4	10.3	1.40	696	0.96
G002582		79	1.27	50.8	4.15	8.17	0.12	<0.02	0.05	0.022	0.38	6.8	10.9	2.11	695	2.05
G002583		49	1.21	72.2	4.79	9.63	0.16	0.09	0.02	0.036	0.28	13.9	13.9	1.74	634	1.80
G002584		117	2.26	68.2	5.40	12.05	0.21	0.11	0.02	0.052	0.67	7.6	15.9	3.00	1055	0.82
G002585		66	1.67	36.4	3.33	9.20	0.13	0.05	0.03	0.039	0.24	12.4	13.5	1.34	441	2.58
G002586		93	3.22	108.5	5.84	11.85	0.23	0.14	0.01	0.054	0.73	19.2	13.8	3.05	1020	1.79
G002587																
G002588		82	2.58	47.0	3.87	9.91	0.14	0.07	0.03	0.035	0.32	14.1	17.4	1.68	431	0.83
G002589		62	2.20	47.6	3.64	9.10	0.16	0.07	0.03	0.037	0.35	27.6	13.4	1.27	435	1.14
G002590		57	2.22	46.5	3.65	8.96	0.15	0.04	0.05	0.038	0.25	22.9	15.0	1.03	284	1.06
G002591		42	1.89	24.7	3.11	6.11	0.10	0.03	0.05	0.019	0.25	10.1	10.6	0.92	752	1.12
G002592		49	1.75	31.6	3.25	8.62	0.13	0.04	0.02	0.030	0.31	15.2	12.5	0.98	308	0.91
G002593		51	2.10	38.6	3.72	8.22	0.16	0.10	0.02	0.036	0.37	18.2	14.0	1.01	398	0.91
G002594		58	2.53	46.2	3.76	9.70	0.17	0.07	0.05	0.042	0.40	27.0	15.5	1.10	459	1.08
G002595		50	1.95	48.3	3.62	8.97	0.13	0.04	0.08	0.034	0.21	23.7	10.4	0.79	715	2.30
G002596		54	1.69	30.6	3.41	8.96	0.12	0.03	0.02	0.030	0.29	12.2	13.0	0.90	345	1.30
G002597		47	1.56	39.7	3.37	7.09	0.14	0.07	0.03	0.028	0.21	23.6	13.1	0.81	390	0.95
G002598		57	2.09	48.4	3.60	8.28	0.18	0.06	0.04	0.034	0.27	39.1	15.0	0.95	293	1.06
G002599		49	1.34	39.1	2.93	7.14	0.16	0.11	0.03	0.030	0.19	25.7	12.9	0.83	210	0.77
G002600		58	1.47	34.1	2.78	7.39	0.15	0.07	0.05	0.029	0.20	20.8	13.0	0.97	650	0.83
G002601		17	0.46	40.5	1.73	3.41	0.12	0.08	0.08	0.019	0.04	26.1	2.8	0.25	3490	2.17
G002602		21	0.56	20.1	2.16	4.14	0.09	0.03	0.05	0.016	0.03	16.8	4.1	0.32	914	2.17
G002603		59	1.83	35.0	3.82	7.95	0.20	0.05	0.05	0.028	0.23	33.7	16.0	0.99	703	1.07
G002604		51	1.63	33.4	3.57	7.99	0.14	0.04	0.06	0.031	0.18	23.5	16.2	0.83	430	1.43
G002605		6	0.25	6.8	0.94	2.65	<0.05	<0.02	0.02	0.007	0.02	2.7	1.5	0.12	71	0.30
G002606		41	1.37	33.5	2.93	7.00	0.13	0.05	0.22	0.026	0.24	15.4	12.1	0.79	286	0.87
G002607		18	0.64	9.6	1.50	4.42	0.05	<0.02	0.02	0.011	0.05	4.4	3.7	0.27	140	0.66
G002608		28	0.88	20.3	2.11	5.75	0.06	0.02	0.08	0.017	0.09	6.1	5.2	0.39	217	1.22
G002609		53	1.91	37.1	3.69	8.15	0.15	0.07	0.03	0.035	0.31	19.9	14.3	0.98	419	0.84
G002610		52	1.57	31.7	3.49	8.66	0.13	0.05	0.04	0.032	0.21	16.8	15.3	0.96	275	1.16
G002611		58	1.74	36.3	3.50	7.31	0.13	0.06	0.04	0.028	0.20	12.4	15.7	0.96	271	1.06
G002612		65	2.86	32.5	4.11	8.19	0.15	0.07	0.02	0.028	0.41	12.6	17.1	1.29	409	0.89
G002613		49	1.70	46.2	3.41	7.74	0.13	0.03	0.25	0.035	0.15	22.1	12.7	0.84	294	1.09
G002614		102	3.81	66.0	5.86	13.25	0.20	0.14	0.02	0.051	0.60	13.0	19.5	2.89	1010	0.73
G002615		48	1.42	43.6	4.64	6.97	0.10	0.02	0.10	0.029	0.13	15.6	6.8	0.80	556	1.81
G002616		65	1.63	47.6	3.72	8.89	0.13	0.06	0.03	0.033	0.23	12.1	14.5	1.44	388	1.00
G002617		93	2.86	46.8	3.51	9.89	0.15	0.12	0.03	0.042	0.32	15.9	16.0	1.54	406	2.75
G002618		87	2.21	44.1	3.60	10.90	0.17	0.10	0.02	0.045	0.35	15.9	16.4	1.62	451	2.35
G002619		73	2.14	33.8	3.00	8.10	0.14	0.05	0.03	0.029	0.31	14.0	15.9	1.15	212	0.71
G002620		1	<0.05	1.1	0.02	0.06	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Na %	ME-MS41 Nb ppm	ME-MS41 Ni ppm	ME-MS41 P ppm	ME-MS41 Pb ppm	ME-MS41 Rb ppm	ME-MS41 Re ppm	ME-MS41 S %	ME-MS41 Sb ppm	ME-MS41 Sc ppm	ME-MS41 Se ppm	ME-MS41 Sn ppm	ME-MS41 Sr ppm	ME-MS41 Ta ppm	ME-MS41 Te ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002581		0.02	0.75	34.8	620	5.8	20.8	<0.001	0.06	0.24	5.7	1.2	0.3	29.0	<0.01	0.09
G002582		0.04	0.85	46.6	840	8.8	25.9	<0.001	0.06	0.24	5.9	1.3	0.4	42.4	<0.01	0.09
G002583		0.04	0.77	34.7	750	7.3	31.9	<0.001	0.02	0.27	14.6	1.4	0.6	31.0	<0.01	0.23
G002584		0.07	0.32	57.4	630	8.1	57.6	<0.001	0.01	0.19	21.8	1.0	0.7	32.4	<0.01	0.12
G002585		0.02	0.97	36.3	880	10.4	25.4	<0.001	0.03	0.26	8.9	1.3	0.8	24.6	<0.01	0.06
G002586		0.05	0.26	62.5	710	14.4	59.0	<0.001	0.02	0.37	19.7	1.9	0.8	32.4	0.01	0.45
G002587																
G002588		0.02	1.21	44.6	780	8.1	31.0	<0.001	0.02	9.30	11.2	0.8	0.8	22.4	<0.01	0.15
G002589		0.03	1.36	42.9	730	10.7	35.0	<0.001	0.02	19.90	9.1	1.1	0.8	26.3	<0.01	0.08
G002590		0.01	1.62	47.2	840	15.9	32.3	<0.001	0.02	16.80	7.6	1.1	0.8	19.2	<0.01	0.09
G002591		0.02	0.73	21.2	700	5.5	26.2	<0.001	0.06	7.34	4.5	1.1	0.3	20.3	<0.01	0.04
G002592		0.03	1.85	38.4	730	9.5	34.9	<0.001	0.03	4.20	6.5	0.8	0.8	24.2	<0.01	0.05
G002593		0.03	1.86	40.9	900	10.4	38.9	<0.001	0.03	2.74	7.3	0.9	0.8	27.8	<0.01	0.07
G002594		0.02	1.90	46.4	810	12.8	41.2	<0.001	0.02	3.32	9.1	1.2	0.9	22.3	<0.01	0.08
G002595		0.02	1.35	42.5	1050	9.9	29.4	<0.001	0.11	4.29	4.8	1.5	0.7	37.2	<0.01	0.15
G002596		0.01	1.90	34.3	740	10.2	28.2	<0.001	0.03	1.85	5.9	0.6	0.8	20.3	<0.01	0.08
G002597		0.01	1.54	50.3	860	9.6	23.1	<0.001	0.02	2.35	6.2	0.9	0.6	22.8	<0.01	0.05
G002598		0.02	1.66	55.7	960	11.1	28.9	<0.001	0.03	2.56	7.5	1.5	0.7	22.5	<0.01	0.06
G002599		0.01	1.26	35.7	890	10.7	22.8	<0.001	0.02	3.41	7.0	1.0	0.6	23.4	<0.01	0.05
G002600		0.04	1.54	40.8	980	8.3	28.0	<0.001	0.07	1.12	6.6	1.4	0.5	37.8	<0.01	0.05
G002601		0.03	0.43	27.5	1610	5.3	5.3	<0.001	0.15	0.91	1.6	1.9	0.2	48.3	0.01	0.08
G002602		0.02	0.55	15.9	1150	6.3	4.8	<0.001	0.10	0.48	1.7	1.2	0.3	29.5	<0.01	0.05
G002603		0.02	1.59	48.0	980	9.6	27.3	<0.001	0.04	0.79	7.1	1.4	0.6	25.8	<0.01	0.05
G002604		0.01	1.54	48.9	820	11.4	22.5	<0.001	0.05	0.91	6.0	1.2	0.6	28.4	<0.01	0.05
G002605		0.02	0.47	3.3	340	2.3	1.8	<0.001	0.01	0.14	0.7	0.3	0.2	9.3	<0.01	0.01
G002606		0.01	1.52	35.6	1030	9.4	23.6	<0.001	0.02	0.82	5.5	0.8	0.6	20.0	<0.01	0.05
G002607		0.01	0.51	10.3	330	4.6	6.6	<0.001	0.02	0.39	1.5	0.4	0.3	9.2	<0.01	0.03
G002608		0.01	0.85	16.8	620	6.3	11.6	<0.001	0.06	0.54	2.4	0.7	0.5	11.4	<0.01	0.04
G002609		0.01	1.22	34.3	900	12.7	33.9	<0.001	0.01	1.02	8.8	1.0	0.8	24.5	<0.01	0.10
G002610		0.01	1.95	34.0	970	12.5	25.1	<0.001	0.03	1.14	7.2	1.0	0.7	21.9	<0.01	0.11
G002611		0.02	1.38	33.1	670	9.0	24.7	<0.001	0.03	1.75	7.1	0.9	0.5	23.2	<0.01	0.04
G002612		0.04	1.06	31.8	700	8.2	47.1	<0.001	0.01	1.68	8.0	0.9	0.6	26.6	<0.01	0.07
G002613		0.01	1.23	36.3	810	14.4	18.4	<0.001	0.03	8.22	7.0	1.3	0.6	17.6	<0.01	0.09
G002614		0.07	0.68	58.4	930	10.3	60.0	<0.001	0.03	1.42	19.1	1.2	1.1	29.6	<0.01	0.09
G002615		0.01	0.55	40.5	740	22.8	15.1	<0.001	0.16	79.10	4.4	1.0	0.5	31.7	<0.01	0.60
G002616		0.03	1.09	40.3	730	10.6	27.5	<0.001	0.02	0.81	9.5	1.0	0.7	32.2	<0.01	0.24
G002617		0.02	0.92	48.7	860	13.3	34.2	<0.001	0.02	0.37	10.7	1.2	0.8	31.7	<0.01	0.06
G002618		0.02	1.17	44.6	880	11.5	34.6	<0.001	0.02	0.27	12.3	1.2	0.9	29.1	<0.01	0.05
G002619		0.06	1.96	40.7	910	6.1	38.7	<0.001	0.04	0.33	8.0	0.9	0.6	28.4	<0.01	0.04
G002620		<0.01	<0.05	0.8	20	1.8	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2
									0.5
G002581		1.0	0.103	0.14	0.57	91	0.10	6.09	73
G002582		1.4	0.156	0.19	0.70	111	0.07	6.66	105
G002583		3.6	0.137	0.25	0.85	133	0.13	14.55	88
G002584		2.4	0.174	0.43	0.44	142	0.06	17.25	113
G002585		2.7	0.120	0.24	1.03	106	0.10	8.95	94
G002586		4.5	0.139	0.46	1.17	139	0.07	23.20	107
G002587									
G002588		3.8	0.150	0.23	0.79	108	0.24	9.03	72
G002589		5.1	0.137	0.22	1.40	97	0.11	13.40	88
G002590		5.9	0.116	0.22	1.46	83	0.11	14.50	85
G002591		0.9	0.092	0.21	0.73	75	0.07	7.30	53
G002592		3.3	0.122	0.21	1.07	78	0.14	8.92	73
G002593		6.3	0.149	0.25	1.24	83	0.14	10.00	86
G002594		5.9	0.144	0.28	1.68	97	0.15	15.75	86
G002595		1.1	0.086	0.23	1.67	90	0.15	13.80	91
G002596		2.9	0.137	0.18	0.80	94	0.13	6.59	83
G002597		6.1	0.132	0.18	1.46	76	0.13	11.20	72
G002598		6.3	0.129	0.22	2.15	83	0.10	18.45	86
G002599		6.3	0.147	0.17	1.57	80	0.12	12.90	62
G002600		2.5	0.112	0.19	1.31	72	0.11	15.70	89
G002601		0.4	0.032	0.18	1.43	33	0.08	22.00	39
G002602		0.3	0.046	0.08	1.21	48	0.14	9.39	27
G002603		3.9	0.137	0.20	1.97	85	0.10	17.55	74
G002604		3.5	0.118	0.17	1.52	79	0.12	10.85	92
G002605		0.2	0.049	0.02	0.17	20	0.05	1.48	10
G002606		4.0	0.120	0.17	1.06	74	0.11	8.08	73
G002607		0.2	0.065	0.05	0.30	42	0.06	1.92	26
G002608		0.4	0.082	0.09	0.56	60	0.17	2.99	37
G002609		5.8	0.152	0.24	1.39	89	0.09	13.00	74
G002610		3.8	0.125	0.17	1.14	83	0.10	9.88	71
G002611		3.2	0.132	0.17	1.03	86	0.10	9.28	61
G002612		4.4	0.158	0.31	1.07	100	0.13	9.26	75
G002613		2.3	0.103	0.17	1.60	84	0.10	14.60	69
G002614		4.3	0.190	0.37	1.30	176	0.13	11.75	101
G002615		1.8	0.052	0.26	0.92	70	0.14	6.89	63
G002616		3.4	0.152	0.20	0.96	97	0.13	9.48	76
G002617		4.6	0.144	0.38	1.56	124	0.07	12.65	121
G002618		4.2	0.140	0.31	1.19	125	0.10	11.35	102
G002619		3.3	0.153	0.24	1.46	87	0.12	9.04	68
G002620		0.2	<0.005	<0.02	0.14	<1	<0.05	0.69	4

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002621		0.40	0.009		0.13	2.70	14.8	<0.2	<10	320	0.50	0.27	0.77	0.30	34.20	15.3
G002622		0.28	0.009		0.25	2.93	15.0	<0.2	<10	340	0.63	0.30	0.76	0.20	36.40	12.9
G002623		0.30	0.014		0.33	3.66	29.5	<0.2	<10	390	0.66	0.47	0.61	0.19	34.50	13.2
G002624		0.22	0.012		0.50	3.05	23.4	<0.2	<10	490	0.87	0.30	0.95	0.67	70.00	15.6
G002625		0.42	<0.005		0.12	2.67	18.7	<0.2	<10	310	0.57	0.18	0.49	0.14	33.60	12.7
G002626		Not Recvd														
G002627		0.48	0.007		0.10	3.24	98.4	<0.2	<10	430	0.50	0.17	0.54	0.15	24.30	19.0
G002628		0.46	<0.005		0.20	2.91	7.4	<0.2	<10	290	0.74	0.21	0.45	0.22	30.60	16.1
G002629		0.50	0.012		0.24	2.44	12.0	<0.2	<10	290	0.72	0.57	0.54	0.32	29.70	11.4
G002630		0.38	0.081		0.21	2.83	281.0	<0.2	<10	250	0.61	0.23	0.37	0.19	26.30	12.9
G002631		0.44	0.006		0.20	2.40	13.0	<0.2	<10	210	0.41	0.28	0.30	0.36	18.65	13.9
G002632		0.42	0.008		0.16	3.73	38.3	<0.2	<10	320	0.60	0.43	0.36	0.34	19.80	19.2
G002633		0.44	0.022		0.11	3.85	75.2	<0.2	<10	380	0.45	0.13	0.64	0.11	17.55	21.3
G002634		0.40	0.008		0.20	3.54	8.1	<0.2	<10	400	0.50	0.28	0.37	0.39	22.60	17.2
G002635		0.52	<0.005		0.23	3.29	4.8	<0.2	<10	340	0.84	0.21	0.43	0.30	23.90	13.6
G002636		0.40	0.006		0.17	3.88	4.4	<0.2	<10	370	0.58	0.18	0.53	0.22	15.30	16.7
G002637		0.38	0.005		0.11	2.65	3.3	<0.2	<10	230	0.26	0.16	0.48	0.16	9.44	11.7
G002638		0.46	0.008		0.12	2.79	4.6	<0.2	<10	240	0.41	0.23	0.39	0.18	16.65	14.4
G002639		0.36	0.005		0.15	2.74	6.2	<0.2	<10	360	0.53	0.25	0.44	0.34	17.70	10.5
G002640		0.30	0.005		0.43	1.91	5.5	<0.2	<10	460	0.51	0.18	0.86	0.55	19.45	14.2
G002641		0.28	0.005		0.39	3.00	5.5	<0.2	<10	470	0.42	0.27	1.19	0.92	17.25	15.8
G002642		0.36	<0.005		0.22	3.24	4.5	<0.2	<10	360	0.50	0.21	0.53	0.25	18.15	15.5
G002643		Not Recvd														
G002644		0.40	0.018		0.40	2.50	42.8	<0.2	<10	280	0.62	0.25	0.44	0.40	32.40	11.5
G002645		0.28	0.012		0.33	1.97	37.0	<0.2	<10	170	0.27	0.27	0.26	0.10	9.26	9.9
G002646		0.36	0.088		0.24	2.94	153.0	<0.2	<10	230	0.37	0.24	0.36	0.25	17.80	14.6
G002647		0.38	0.011		0.14	3.17	54.1	<0.2	<10	440	0.63	0.41	0.31	0.32	21.10	15.0
G002648		0.38	0.008		0.13	2.75	10.1	<0.2	<10	260	0.75	0.41	0.38	0.26	30.90	13.7
G002649		0.42	0.008		0.15	3.41	9.2	<0.2	<10	510	0.74	0.22	0.38	0.12	26.80	15.3
G002650		0.42	0.005		0.13	2.41	5.8	<0.2	<10	510	0.60	0.24	0.36	0.26	27.70	11.3
G002651		0.48	0.009		0.12	2.31	30.2	<0.2	<10	280	0.75	0.24	0.34	0.25	38.90	10.2
G002652		0.52	0.020		0.09	3.21	70.5	<0.2	<10	320	0.65	0.22	0.36	0.17	25.40	14.0
G002653		0.44	0.011		0.03	4.90	29.5	<0.2	<10	750	1.17	0.28	0.74	0.08	48.80	20.5
G002654		0.48	0.011		0.14	3.57	36.5	<0.2	<10	330	0.94	0.49	0.52	0.15	42.10	19.0
G002655		0.52	0.016		0.11	2.92	19.4	<0.2	<10	270	0.68	0.31	0.43	0.11	37.30	14.1
G002656		0.30	<0.005		0.17	1.32	11.2	<0.2	<10	160	0.31	0.16	0.29	0.07	12.05	6.3
G002657		0.40	0.009		0.10	2.70	25.9	<0.2	<10	270	0.65	0.24	0.47	0.10	33.40	11.8
G002658		0.48	0.008		0.18	2.53	12.0	<0.2	<10	230	0.69	0.23	0.67	0.17	32.30	15.3
G002659		0.54	0.008		0.15	2.89	8.2	<0.2	<10	240	0.71	0.22	0.63	0.12	32.20	15.6
G002660		0.42	0.005		0.09	3.51	7.2	<0.2	<10	560	0.68	0.22	0.62	0.06	23.40	15.7

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cr	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm
		1	0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5
G002621		67	2.05	32.5	3.26	8.10	0.14	0.06	0.03	0.032	0.23	19.3	12.3	0.99	487
G002622		63	2.32	37.8	2.90	8.75	0.14	0.05	0.05	0.031	0.22	23.5	13.5	0.92	397
G002623		64	1.97	35.0	4.20	9.04	0.14	0.06	0.12	0.036	0.31	21.1	13.9	0.98	413
G002624		45	1.47	55.5	3.15	8.06	0.18	0.08	0.10	0.037	0.20	37.8	10.6	0.68	1360
G002625		47	1.49	33.5	3.14	8.27	0.16	0.07	0.02	0.031	0.29	17.4	13.4	0.95	308
G002626		76	2.33	32.8	3.96	8.66	0.13	0.04	0.02	0.028	0.36	10.0	13.5	1.20	555
G002627		41	2.42	27.6	3.74	9.79	0.13	0.05	0.03	0.037	0.32	14.0	13.4	0.97	393
G002628		51	2.02	33.9	3.11	7.39	0.15	0.12	0.02	0.030	0.22	17.2	11.8	0.99	397
G002629		46	1.23	38.2	3.48	7.55	0.12	0.08	0.06	0.031	0.14	12.9	12.8	0.91	361
G002630		46	1.23	38.2	3.48	7.55	0.12	0.08	0.06	0.031	0.14	12.9	12.8	0.91	361
G002631		47	1.38	30.8	3.24	8.88	0.09	0.03	0.02	0.031	0.10	8.5	12.3	0.93	611
G002632		61	2.00	40.4	4.05	11.25	0.12	0.05	0.03	0.034	0.25	8.9	16.2	1.62	831
G002633		60	2.03	46.6	4.15	10.30	0.15	0.06	0.02	0.020	0.51	8.2	15.4	1.65	477
G002634		61	1.87	50.4	3.88	9.92	0.15	0.06	0.02	0.035	0.35	10.9	14.9	1.78	468
G002635		80	2.05	34.7	3.54	9.89	0.14	0.05	0.01	0.038	0.13	11.8	12.9	1.43	454
G002636		69	1.35	32.3	3.72	10.70	0.14	0.05	0.02	0.032	0.26	7.3	14.5	1.82	407
G002637		45	0.81	26.3	3.37	7.16	0.10	0.02	0.02	0.018	0.11	4.5	10.8	1.49	475
G002638		86	0.98	25.3	3.41	8.13	0.12	0.05	0.02	0.030	0.09	8.1	12.9	1.50	429
G002639		57	1.18	26.1	3.07	8.23	0.10	0.03	0.02	0.031	0.07	8.6	11.8	1.06	470
G002640		38	0.78	29.6	2.23	5.34	0.09	0.06	0.07	0.023	0.05	9.4	6.9	0.62	1870
G002641		109	1.33	30.3	3.01	8.03	0.11	0.05	0.06	0.026	0.20	8.5	12.9	1.64	647
G002642		57	1.25	31.9	3.53	8.94	0.12	0.04	0.03	0.026	0.24	8.6	15.6	1.47	493
G002643		75	1.69	43.1	3.18	7.85	0.14	0.07	0.04	0.035	0.13	16.1	13.6	1.17	311
G002644		30	1.02	26.6	2.39	5.89	0.07	0.02	0.04	0.017	0.07	4.4	7.9	0.73	299
G002645		30	1.02	26.6	2.39	5.89	0.07	0.02	0.04	0.017	0.07	4.4	7.9	0.73	299
G002646		47	1.79	35.2	3.49	7.98	0.13	0.04	0.03	0.026	0.19	8.4	13.8	1.20	387
G002647		76	1.82	35.3	3.76	10.20	0.13	0.03	0.01	0.031	0.23	9.2	16.9	1.36	529
G002648		41	1.31	36.5	3.33	8.33	0.13	0.06	0.01	0.029	0.17	13.3	12.3	0.93	460
G002649		57	1.35	43.2	3.56	9.81	0.15	0.08	0.02	0.027	0.26	12.8	13.4	1.23	442
G002650		50	1.32	38.7	2.65	7.72	0.12	0.04	0.01	0.026	0.18	13.4	11.1	0.83	298
G002651		46	2.11	32.0	3.07	6.91	0.13	0.06	0.03	0.028	0.19	20.0	12.0	0.80	251
G002652		64	2.58	30.6	3.43	9.28	0.13	0.05	0.02	0.029	0.31	12.3	13.2	1.05	284
G002653		126	4.81	48.9	5.61	15.50	0.24	0.11	0.01	0.044	1.49	32.9	16.3	2.00	633
G002654		59	1.86	33.1	4.27	10.25	0.18	0.06	0.03	0.038	0.36	21.0	13.7	1.01	516
G002655		56	1.58	33.2	3.39	8.60	0.16	0.06	0.02	0.033	0.28	19.1	12.8	0.92	278
G002656		24	0.80	15.0	1.77	4.81	0.07	0.02	0.03	0.016	0.07	6.9	5.8	0.38	265
G002657		55	1.63	30.3	3.16	8.42	0.17	0.07	0.03	0.032	0.26	16.9	13.5	0.98	224
G002658		60	2.39	31.3	3.07	8.00	0.13	0.07	0.01	0.029	0.26	16.9	13.3	0.99	222
G002659		72	2.49	32.7	3.50	8.71	0.12	0.06	0.02	0.028	0.25	16.8	15.2	1.18	308
G002660		106	3.53	40.3	3.31	11.15	0.15	0.06	0.01	0.028	0.89	15.0	23.5	1.90	209

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Na	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta
		%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01
G002621		0.05	2.21	42.5	950	7.5	32.0	<0.001	0.05	0.43	7.5	1.1	0.6	29.9	<0.01
G002622		0.03	1.87	50.9	930	8.0	30.8	<0.001	0.07	0.55	6.4	1.5	0.6	40.2	0.01
G002623		0.02	1.81	44.4	930	10.1	32.7	<0.001	0.07	1.17	7.8	1.5	0.7	30.7	<0.01
G002624		0.02	1.71	44.6	1180	9.6	25.7	<0.001	0.14	1.89	6.6	3.1	0.6	53.3	0.01
G002625		0.02	1.64	34.2	880	7.4	32.8	<0.001	0.01	1.53	8.0	0.9	0.7	28.5	<0.01
G002626															
G002627		0.03	1.40	36.3	770	8.1	37.6	<0.001	0.02	9.01	7.5	0.8	0.6	27.4	<0.01
G002628		0.01	2.23	29.9	830	13.3	33.8	<0.001	0.02	0.83	7.8	1.0	0.9	27.2	<0.01
G002629		0.02	1.06	30.7	650	14.7	27.6	<0.001	0.01	1.71	8.8	0.7	0.7	31.1	<0.01
G002630		0.01	1.99	39.5	760	9.8	17.3	<0.001	0.02	3.86	6.6	0.9	0.6	20.4	<0.01
G002631		0.01	1.55	32.0	530	14.9	15.1	<0.001	0.02	0.73	6.1	0.7	0.7	21.6	<0.01
G002632		0.02	1.42	43.7	700	10.6	24.4	<0.001	0.03	1.03	8.7	0.9	0.8	20.6	<0.01
G002633		0.07	1.61	39.6	920	6.0	41.9	<0.001	0.02	0.51	7.8	0.7	0.4	27.5	<0.01
G002634		0.02	1.03	36.6	640	17.3	29.4	<0.001	0.02	0.40	11.3	0.9	0.8	23.5	<0.01
G002635		0.02	1.12	44.2	900	13.9	20.8	<0.001	0.04	0.27	9.0	2.0	0.7	30.5	<0.01
G002636		0.07	1.18	38.3	510	9.2	30.4	<0.001	0.04	0.19	11.2	1.2	0.6	26.8	<0.01
G002637		0.02	0.77	20.8	620	4.4	13.6	<0.001	0.05	0.21	3.7	0.8	0.4	21.1	<0.01
G002638		0.01	0.98	51.5	510	8.4	15.4	<0.001	0.02	0.23	7.4	0.8	0.5	23.2	<0.01
G002639		0.02	0.90	34.8	800	8.4	14.1	<0.001	0.07	0.25	4.9	1.3	0.6	30.4	<0.01
G002640		0.03	0.69	26.5	1270	6.0	10.1	0.002	0.14	0.39	3.3	3.3	0.4	43.3	0.01
G002641		0.02	0.89	62.0	900	7.5	22.7	0.001	0.13	0.38	5.9	2.4	0.4	44.2	<0.01
G002642		0.03	1.07	30.9	660	7.6	28.4	0.001	0.07	0.25	7.1	1.3	0.5	27.8	<0.01
G002643															
G002644		0.01	0.91	45.0	840	14.0	22.1	<0.001	0.02	1.99	8.9	1.5	0.6	27.6	<0.01
G002645		0.02	0.65	17.8	580	5.4	11.1	<0.001	0.06	0.44	2.8	1.0	0.4	18.9	<0.01
G002646		0.02	1.21	29.6	630	9.8	21.1	<0.001	0.02	4.13	6.7	0.7	0.5	21.0	<0.01
G002647		0.01	1.50	46.1	570	12.3	22.5	<0.001	0.03	8.98	7.8	0.8	0.7	21.5	<0.01
G002648		0.01	2.17	36.1	810	10.8	22.7	<0.001	0.02	0.72	5.8	0.8	0.7	26.3	<0.01
G002649		0.02	1.97	42.4	780	7.3	30.3	<0.001	0.02	0.54	9.0	1.0	0.7	27.7	<0.01
G002650		0.01	1.41	36.3	690	7.7	18.6	<0.001	0.02	0.45	5.5	0.9	0.6	27.1	<0.01
G002651		0.01	1.66	30.8	760	12.9	23.1	<0.001	0.01	1.33	6.7	0.8	0.6	20.6	<0.01
G002652		0.02	1.97	35.6	870	8.6	33.6	<0.001	0.02	0.86	8.1	0.8	0.8	20.6	<0.01
G002653		0.05	0.48	72.5	1310	6.9	105.5	<0.001	0.01	0.71	18.9	1.1	1.0	27.9	0.01
G002654		0.03	1.95	43.8	1080	8.7	39.3	<0.001	0.03	0.50	9.9	1.5	0.8	27.3	<0.01
G002655		0.02	2.07	39.5	900	8.7	31.4	<0.001	0.02	0.47	8.0	1.0	0.7	23.7	<0.01
G002656		0.02	0.81	16.3	660	5.5	9.7	<0.001	0.06	0.24	2.6	1.1	0.4	19.5	<0.01
G002657		0.02	1.91	35.8	760	9.0	31.1	<0.001	0.02	0.42	8.4	0.9	0.7	20.6	<0.01
G002658		0.05	2.08	40.9	990	7.8	37.1	0.001	0.02	0.32	7.9	0.7	0.8	23.9	<0.01
G002659		0.05	1.99	44.2	920	8.1	35.7	<0.001	0.02	0.28	8.7	0.7	0.7	23.8	<0.01
G002660		0.03	1.74	53.8	1880	5.3	73.7	<0.001	0.08	0.23	11.1	0.5	0.6	19.8	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn	Zr
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002621		3.8	0.129	0.21	1.32	79	0.17	11.55	78	1.5
G002622		1.7	0.112	0.19	1.91	69	0.17	13.80	85	1.4
G002623		3.0	0.130	0.21	2.29	100	0.20	12.00	106	1.6
G002624		1.6	0.082	0.23	3.43	76	0.22	25.40	100	1.6
G002625		4.2	0.146	0.19	1.28	84	0.19	11.15	75	2.4
G002626										
G002627		2.9	0.143	0.22	0.77	100	0.16	7.61	83	1.3
G002628		3.8	0.136	0.22	1.29	101	0.17	8.82	75	1.3
G002629		3.7	0.138	0.19	1.39	81	0.20	11.15	74	4.5
G002630		3.3	0.119	0.14	0.78	78	0.17	7.64	67	2.4
G002631		1.4	0.104	0.10	0.68	79	0.17	4.66	67	0.9
G002632		2.5	0.117	0.14	0.81	96	0.17	6.24	91	1.2
G002633		2.0	0.182	0.25	0.47	104	0.16	6.27	82	1.9
G002634		2.8	0.131	0.25	0.65	108	0.12	6.76	99	1.8
G002635		2.2	0.102	0.29	1.15	125	0.18	6.95	112	1.7
G002636		1.9	0.137	0.21	0.66	116	0.18	5.93	97	1.6
G002637		0.3	0.106	0.08	0.36	82	0.13	2.94	81	0.5
G002638		1.9	0.112	0.14	0.69	97	0.11	4.67	91	1.4
G002639		0.5	0.086	0.13	1.00	81	0.14	5.65	88	0.9
G002640		0.4	0.054	0.18	1.54	53	0.12	11.15	56	1.5
G002641		0.6	0.081	0.17	1.42	90	0.10	8.02	121	1.4
G002642		1.1	0.121	0.17	0.79	94	0.12	6.21	95	1.1
G002643										
G002644		3.5	0.106	0.26	1.52	107	0.17	10.10	128	2.3
G002645		0.2	0.071	0.10	0.56	53	0.12	2.96	43	0.5
G002646		1.7	0.125	0.18	0.57	84	0.30	5.61	81	1.2
G002647		2.2	0.114	0.12	0.64	109	0.22	5.40	110	1.0
G002648		3.3	0.111	0.15	0.93	69	0.19	7.66	81	1.5
G002649		3.5	0.133	0.17	0.99	88	0.19	8.14	67	2.4
G002650		1.4	0.117	0.12	1.32	76	0.14	7.92	67	0.8
G002651		4.4	0.128	0.24	1.02	75	0.15	10.10	72	2.0
G002652		2.6	0.144	0.23	0.81	99	0.19	8.48	73	1.3
G002653		6.4	0.232	0.55	1.42	188	0.16	20.60	113	3.4
G002654		5.5	0.147	0.25	1.59	97	0.28	13.80	81	1.7
G002655		4.8	0.148	0.22	1.51	87	0.20	9.97	76	1.9
G002656		0.4	0.057	0.09	0.82	43	0.11	4.04	36	0.6
G002657		5.2	0.140	0.21	1.30	89	0.37	9.59	66	2.3
G002658		5.4	0.139	0.25	0.97	82	0.28	10.60	76	2.5
G002659		5.1	0.153	0.24	1.32	93	0.26	10.55	86	2.0
G002660		4.8	0.181	0.39	0.88	111	0.30	8.31	74	2.2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21	Au-AA23	Au-GRA21	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Au	Au	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co
		kg	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002661		0.28	0.009		0.14	2.77	9.3	<0.2	<10	380	0.47	0.18	0.73	0.17	28.50	23.3
G002662		0.46	0.015		0.11	2.73	12.2	<0.2	<10	390	0.50	0.16	0.49	0.10	23.50	13.9
G002663		0.32	0.008		0.39	2.33	15.8	<0.2	<10	380	0.62	0.24	0.95	0.36	40.70	12.8
G002664		0.32	0.010		0.52	2.38	22.5	<0.2	<10	450	0.46	0.26	0.85	0.50	31.10	13.0
G002665		0.42	0.011		0.21	2.69	34.8	<0.2	<10	360	0.56	0.25	0.50	0.21	24.90	11.9
G002666		0.58	0.011		0.16	2.95	54.4	<0.2	<10	350	0.69	0.31	0.49	0.19	30.00	15.2
G002667		0.42	0.018		0.18	2.81	80.7	<0.2	<10	320	0.45	0.26	0.52	0.19	19.40	18.8
G002668		0.60	0.009		0.19	2.78	24.2	<0.2	<10	300	0.68	0.22	0.44	0.21	30.00	16.7
G002669		0.46	0.007		0.35	4.21	18.5	<0.2	<10	590	0.89	0.24	0.72	0.38	26.20	23.6
G002670		0.48	0.008		0.14	2.69	17.6	<0.2	<10	390	0.66	0.20	0.48	0.15	36.20	14.0
G002671		0.40	0.006		0.25	0.49	3.2	<0.2	<10	70	0.11	0.07	0.19	0.15	4.34	2.4
G002672		0.40	<0.005		0.08	0.29	2.2	<0.2	<10	40	0.05	0.04	0.09	0.09	2.93	2.0
G002673		0.32	<0.005		0.18	1.94	5.1	<0.2	<10	280	0.37	0.17	0.39	0.28	13.75	8.6
G002674		0.50	0.007		0.19	2.86	8.8	<0.2	<10	310	0.49	0.14	0.49	0.10	26.90	14.7
G002675		0.48	0.008		0.21	2.24	6.7	<0.2	<10	260	0.52	0.13	0.44	0.10	23.00	12.0
G002676		0.44	0.007		0.15	2.47	14.0	<0.2	<10	370	0.59	0.13	0.84	0.37	30.90	21.5
G002677		0.42	0.008		0.34	2.60	20.0	<0.2	<10	300	0.44	0.24	0.46	0.31	24.30	10.5
G002678		0.42	0.006		0.08	2.01	16.1	<0.2	<10	180	0.33	0.13	0.37	0.15	21.00	10.4
G002679		0.48	0.022		0.20	2.81	99.3	<0.2	<10	330	0.71	0.20	0.41	0.14	30.30	16.5
G002680		0.44	0.052		0.30	2.58	167.0	<0.2	<10	260	0.57	0.20	0.40	0.14	28.00	11.5
G002681		0.32	0.031		0.36	2.12	182.5	<0.2	<10	320	0.48	0.22	0.58	0.30	27.50	19.4
G002682		0.58	0.014		0.23	2.77	21.8	<0.2	<10	300	0.56	0.19	0.47	0.13	29.90	15.4
G002683		0.52	0.014		0.11	2.62	28.1	<0.2	<10	300	0.45	0.19	0.46	0.13	23.50	15.0
G002684		0.56	0.022		0.20	2.56	50.7	<0.2	<10	330	0.65	0.23	0.43	0.18	33.40	13.9
G002685		0.66	0.051		0.25	2.75	65.5	<0.2	<10	490	0.67	0.60	0.43	0.16	29.20	15.6
G002686		0.58	0.023		0.34	3.32	19.4	<0.2	<10	530	0.79	0.51	0.60	0.24	25.40	16.2
G002687		0.46	0.024		0.53	3.85	5.8	<0.2	<10	660	0.73	0.75	0.45	1.15	22.90	21.3
G002688		0.56	0.007		0.30	3.20	3.7	<0.2	<10	340	0.42	0.36	0.50	0.23	17.65	14.7
G002689		0.48	0.052		0.58	3.44	3.5	<0.2	<10	580	0.91	1.55	0.47	0.88	31.80	15.0
G002690		0.56	<0.005		0.11	3.09	3.8	<0.2	<10	410	0.49	0.13	0.38	0.14	20.60	14.1
G002691		0.48	<0.005		0.10	2.67	4.3	<0.2	<10	270	0.38	0.19	0.47	0.22	19.90	14.0
G002692		0.64	0.005		0.14	2.87	5.1	<0.2	<10	370	0.61	0.20	0.57	0.28	25.60	13.4
G002693		0.60	0.010		0.19	2.92	6.3	<0.2	<10	410	0.58	0.30	0.49	0.36	24.10	13.8
G002694		0.56	<0.005		0.15	2.70	4.7	<0.2	<10	340	0.45	0.20	0.40	0.25	20.20	11.6
G002695		0.50	0.011		0.09	2.50	5.0	<0.2	<10	250	0.39	0.18	0.44	0.19	21.00	12.3
G002696		0.36	<0.005		0.14	2.40	4.1	<0.2	<10	250	0.34	0.24	0.48	0.28	18.85	16.6
G002697		0.44	0.008		0.11	2.78	4.4	<0.2	<10	360	0.42	0.18	0.41	0.20	20.50	9.8
G002698		0.42	<0.005		0.31	1.11	2.8	<0.2	<10	160	0.35	0.11	0.22	0.28	10.20	3.9
G002699		0.48	0.006		0.24	3.40	9.6	<0.2	<10	320	0.41	0.34	0.31	0.30	16.20	16.2
G002700		0.04	0.005		<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.13	0.1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cr	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm
		1	0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5
G002661		75	1.89	27.9	3.52	8.85	0.13	0.04	0.03	0.031	0.40	15.2	16.2	1.16	924
G002662		65	1.82	32.6	3.19	8.64	0.12	0.05	0.02	0.026	0.45	13.5	13.8	1.07	233
G002663		44	1.42	38.0	2.91	7.46	0.12	0.05	0.04	0.030	0.18	29.9	11.2	0.71	654
G002664		32	1.05	31.8	3.01	6.86	0.09	0.05	0.08	0.028	0.08	17.9	10.2	0.47	2040
G002665		49	1.47	29.9	3.03	8.11	0.09	0.04	0.03	0.030	0.20	13.7	12.9	0.84	335
G002666		59	1.87	33.3	3.98	9.13	0.14	0.09	0.02	0.033	0.36	15.9	13.3	1.07	304
G002667		61	2.38	28.2	3.40	8.26	0.10	0.04	0.02	0.028	0.36	10.2	13.4	1.09	408
G002668		52	1.60	37.6	3.42	8.34	0.11	0.06	0.02	0.031	0.20	14.6	13.4	0.97	467
G002669		72	2.55	43.2	5.73	12.25	0.17	0.07	0.02	0.039	0.47	14.0	18.6	1.94	895
G002670		51	1.71	37.0	3.61	8.21	0.12	0.08	0.02	0.031	0.22	18.3	12.3	0.99	494
G002671		10	0.46	6.8	1.06	2.87	<0.05	<0.02	0.02	0.008	0.03	2.2	1.8	0.16	94
G002672		6	0.36	5.8	0.77	1.85	<0.05	<0.02	0.01	<0.005	0.02	1.5	0.9	0.12	55
G002673		53	1.22	23.1	2.71	7.61	0.08	0.02	0.02	0.024	0.09	7.0	8.7	0.88	529
G002674		68	1.76	29.8	3.24	8.46	0.12	0.03	0.03	0.028	0.30	15.0	15.1	1.08	468
G002675		49	1.46	23.6	2.67	7.03	0.09	0.03	0.03	0.023	0.16	12.8	12.7	0.75	423
G002676		62	2.00	27.8	3.67	7.57	0.13	0.04	0.03	0.030	0.32	15.8	11.9	0.97	2220
G002677		51	1.29	26.9	3.33	8.76	0.09	0.02	0.05	0.031	0.16	14.7	10.9	0.76	364
G002678		41	1.17	19.6	2.83	7.12	0.09	0.07	0.01	0.022	0.17	11.2	10.4	0.76	288
G002679		56	1.56	32.9	3.56	8.96	0.12	0.03	0.01	0.032	0.28	16.7	13.0	0.97	533
G002680		48	1.54	30.1	3.44	7.90	0.11	0.04	0.03	0.030	0.22	17.7	13.3	0.86	262
G002681		41	1.25	25.8	2.96	7.05	0.08	0.03	0.07	0.027	0.15	15.2	8.6	0.68	1170
G002682		48	2.29	31.8	3.56	8.70	0.12	0.07	0.03	0.030	0.33	16.0	14.7	1.03	344
G002683		59	1.51	29.6	3.16	7.30	0.10	0.07	0.01	0.024	0.21	11.9	12.0	1.06	348
G002684		53	1.34	34.9	3.14	7.94	0.11	0.05	0.01	0.031	0.19	17.0	10.6	1.00	321
G002685		62	1.49	44.7	3.58	8.65	0.13	0.06	0.02	0.033	0.12	15.0	12.7	1.21	528
G002686		85	2.24	42.6	3.98	10.35	0.14	0.06	0.01	0.040	0.34	13.7	13.5	1.68	504
G002687		112	2.06	49.3	4.59	11.25	0.12	0.03	0.03	0.031	0.28	12.1	14.6	2.46	726
G002688		54	1.78	55.2	3.83	9.31	0.13	0.05	0.02	0.033	0.24	9.4	13.3	1.74	458
G002689		99	3.16	47.1	3.95	11.40	0.15	0.11	0.02	0.071	0.53	17.4	11.5	2.01	751
G002690		46	1.32	34.3	3.52	9.26	0.12	0.05	0.02	0.028	0.21	10.5	12.8	1.41	438
G002691		62	1.16	31.8	3.39	8.53	0.11	0.05	0.01	0.024	0.18	10.6	13.2	1.73	369
G002692		62	1.06	35.4	3.51	8.44	0.11	0.09	0.01	0.030	0.16	12.9	11.8	1.27	417
G002693		71	1.38	35.0	3.55	9.14	0.17	0.07	0.02	0.039	0.20	12.8	13.1	1.30	425
G002694		71	1.35	25.8	3.06	9.22	0.14	0.03	0.02	0.037	0.12	10.3	12.3	1.19	486
G002695		50	0.95	27.7	2.83	8.18	0.14	0.04	0.03	0.030	0.08	10.0	13.1	0.96	353
G002696		43	1.07	30.3	2.97	8.01	0.12	0.02	0.04	0.027	0.06	8.7	13.3	1.12	827
G002697		49	1.40	28.5	3.44	9.72	0.16	0.03	0.02	0.040	0.15	10.6	13.1	1.15	426
G002698		27	1.14	18.3	1.45	4.15	0.10	<0.02	0.03	0.018	0.07	5.0	3.7	0.37	149
G002699		94	1.99	51.0	4.09	11.20	0.18	0.03	0.01	0.059	0.26	7.5	14.0	2.09	496
G002700		<1	<0.05	0.8	0.02	0.09	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	0.01	<5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Na %	ME-MS41 Nb ppm	ME-MS41 Ni ppm	ME-MS41 P ppm	ME-MS41 Pb ppm	ME-MS41 Rb ppm	ME-MS41 Re ppm	ME-MS41 S %	ME-MS41 Sb ppm	ME-MS41 Sc ppm	ME-MS41 Se ppm	ME-MS41 Sn ppm	ME-MS41 Sr ppm	ME-MS41 Ta ppm	ME-MS41 Te ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002661		0.03	2.36	42.4	1510	5.9	31.9	<0.001	0.05	0.48	6.7	0.8	0.6	30.4	<0.01	0.04
G002662		0.02	1.69	37.9	1120	9.5	35.8	<0.001	0.02	0.40	7.0	0.6	0.6	21.3	<0.01	0.05
G002663		0.03	1.56	31.7	1080	9.0	21.6	0.001	0.11	0.79	5.0	1.6	0.7	44.0	0.01	0.07
G002664		0.03	0.95	31.1	1250	8.5	10.8	<0.001	0.15	0.79	4.2	1.7	0.5	38.5	0.01	0.10
G002665		0.02	1.60	32.2	890	10.3	23.4	<0.001	0.05	0.79	6.5	0.8	0.7	26.3	<0.01	0.07
G002666		0.03	1.43	35.7	900	10.1	38.4	<0.001	0.02	0.84	9.8	0.9	0.8	24.5	<0.01	0.09
G002667		0.04	1.22	30.9	780	8.6	35.7	<0.001	0.02	1.09	7.6	0.7	0.6	26.4	<0.01	0.07
G002668		0.02	1.63	36.9	860	12.4	23.9	<0.001	0.02	1.02	7.7	1.0	0.7	24.4	<0.01	0.09
G002669		0.06	1.01	53.2	820	11.5	50.0	<0.001	0.02	0.95	14.8	1.5	0.6	44.3	<0.01	0.07
G002670		0.02	1.42	36.8	780	10.3	28.4	<0.001	0.01	2.20	9.0	0.9	0.7	27.7	<0.01	0.07
G002671		0.03	0.38	5.0	400	3.7	6.1	<0.001	0.04	0.33	0.8	0.4	0.2	12.8	<0.01	0.02
G002672		0.02	0.19	3.4	210	1.7	4.4	<0.001	0.02	0.13	0.6	0.2	0.2	8.4	<0.01	0.02
G002673		0.03	0.60	24.2	930	7.8	14.3	<0.001	0.09	0.25	2.4	1.0	0.6	27.1	<0.01	0.05
G002674		0.03	1.70	42.5	1030	7.1	31.3	<0.001	0.02	0.58	7.4	0.7	0.6	24.3	<0.01	0.05
G002675		0.02	1.33	34.4	790	6.3	19.8	<0.001	0.05	0.50	5.0	0.8	0.5	27.0	<0.01	0.05
G002676		0.06	1.74	36.7	1110	5.8	29.4	<0.001	0.05	0.50	6.5	1.0	0.6	34.2	<0.01	0.06
G002677		0.02	1.34	32.9	880	9.7	20.3	<0.001	0.07	0.86	4.4	0.8	0.7	29.6	<0.01	0.07
G002678		0.02	1.83	28.2	890	7.5	17.6	<0.001	0.02	0.82	5.0	0.5	0.6	20.4	<0.01	0.04
G002679		0.02	1.65	39.5	940	10.1	28.8	<0.001	0.03	1.18	7.4	0.8	0.8	23.0	<0.01	0.08
G002680		0.02	1.62	37.0	840	9.2	23.2	<0.001	0.02	1.56	6.6	0.9	0.7	22.8	<0.01	0.07
G002681		0.03	1.48	27.7	1050	9.3	17.4	<0.001	0.11	1.35	4.3	1.1	0.6	34.3	<0.01	0.11
G002682		0.02	1.22	32.2	850	8.3	33.4	<0.001	0.02	2.57	8.1	0.8	0.7	26.6	<0.01	0.06
G002683		0.03	1.01	29.6	670	7.5	25.0	<0.001	0.01	5.89	7.1	0.6	0.5	26.8	<0.01	0.06
G002684		0.02	1.41	32.3	820	12.0	24.7	<0.001	0.02	7.60	7.8	0.8	0.7	34.3	<0.01	0.09
G002685		0.02	1.34	40.1	830	12.5	17.0	<0.001	<0.01	2.64	8.8	1.0	0.8	24.7	<0.01	0.17
G002686		0.04	1.13	43.0	890	19.6	38.7	<0.001	0.01	1.14	11.0	0.7	1.0	32.3	<0.01	0.21
G002687		0.03	1.09	50.7	830	20.3	26.4	<0.001	0.02	0.30	11.9	0.8	0.7	19.3	<0.01	0.37
G002688		0.04	0.78	31.9	600	7.8	26.5	<0.001	0.01	0.26	10.9	0.7	0.6	31.0	<0.01	0.22
G002689		0.02	0.61	51.2	970	37.3	40.7	<0.001	0.01	0.24	12.6	1.9	1.0	31.3	<0.01	0.53
G002690		0.03	1.32	27.9	680	6.5	22.7	<0.001	0.02	0.23	9.6	0.7	0.6	23.1	<0.01	0.05
G002691		0.02	0.78	32.1	660	5.7	21.0	<0.001	0.01	0.24	7.4	0.5	0.5	24.7	<0.01	0.05
G002692		0.04	1.08	33.2	800	9.0	21.0	<0.001	0.02	0.31	9.5	1.0	0.6	32.9	<0.01	0.08
G002693		0.03	0.98	38.6	830	13.8	26.1	<0.001	0.02	0.32	9.0	1.6	0.7	37.1	<0.01	0.11
G002694		0.03	1.12	33.2	690	10.0	19.0	<0.001	0.05	0.25	7.0	1.4	0.7	31.7	<0.01	0.08
G002695		0.02	1.30	31.1	750	7.6	15.1	<0.001	0.03	0.29	6.6	1.1	0.6	29.9	<0.01	0.07
G002696		0.02	0.90	25.7	710	9.8	13.4	<0.001	0.07	0.29	4.6	1.3	0.5	27.6	<0.01	0.07
G002697		0.03	1.56	28.3	380	7.9	17.7	<0.001	0.04	0.22	8.5	1.3	0.8	26.0	<0.01	0.08
G002698		0.02	0.40	12.7	760	4.5	10.1	<0.001	0.07	0.24	1.3	1.4	0.3	18.9	<0.01	0.05
G002699		0.01	0.74	45.0	720	11.5	23.6	<0.001	0.03	0.52	17.9	1.8	0.8	19.2	<0.01	0.18
G002700		<0.01	<0.05	0.5	10	0.5	0.2	<0.001	0.01	0.06	0.2	<0.2	<0.2	0.6	<0.01	0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2
									0.5
G002661		3.5	0.141	0.21	1.10	84	0.20	10.10	63
G002662		3.2	0.154	0.21	0.88	96	0.20	8.13	67
G002663		1.0	0.089	0.16	1.88	76	0.21	22.20	76
G002664		0.8	0.059	0.18	1.93	59	0.15	14.90	55
G002665		2.3	0.116	0.16	1.28	87	0.18	8.71	80
G002666		4.6	0.146	0.23	1.45	100	0.18	10.90	74
G002667		2.9	0.139	0.24	0.85	89	0.16	6.97	75
G002668		3.8	0.135	0.18	1.29	89	0.22	9.09	80
G002669		4.2	0.174	0.35	1.73	157	0.26	11.50	140
G002670		4.6	0.137	0.19	2.11	87	0.19	13.30	77
G002671		<0.2	0.042	0.04	0.40	24	0.10	1.16	19
G002672		<0.2	0.034	0.03	0.23	18	0.05	0.79	10
G002673		0.2	0.069	0.12	0.93	83	0.13	3.90	69
G002674		3.6	0.142	0.19	1.19	87	0.18	9.30	73
G002675		1.4	0.100	0.15	1.07	66	0.16	8.04	60
G002676		2.2	0.125	0.26	1.02	97	0.17	12.80	66
G002677		1.0	0.106	0.13	1.26	86	0.22	7.47	81
G002678		3.4	0.138	0.12	0.69	78	0.21	6.39	57
G002679		3.9	0.130	0.18	1.15	91	0.23	9.05	75
G002680		4.3	0.122	0.17	1.16	77	0.20	9.81	76
G002681		1.1	0.081	0.18	1.26	65	0.17	8.85	67
G002682		4.3	0.169	0.22	1.39	91	0.17	12.60	68
G002683		3.6	0.149	0.18	1.03	83	0.15	8.19	66
G002684		4.0	0.127	0.18	1.39	82	0.17	10.25	76
G002685		3.8	0.127	0.17	1.94	89	0.17	9.81	92
G002686		4.0	0.167	0.24	1.27	105	0.18	10.20	94
G002687		2.5	0.150	0.21	0.98	138	1.51	10.90	111
G002688		2.7	0.136	0.21	0.76	102	0.18	7.99	84
G002689		4.9	0.117	0.42	1.19	131	0.12	9.29	325
G002690		2.2	0.139	0.18	0.67	99	0.13	8.83	69
G002691		2.6	0.157	0.17	0.58	92	0.14	8.77	98
G002692		3.8	0.148	0.18	1.11	100	0.17	10.80	78
G002693		4.0	0.146	0.22	1.25	106	0.15	8.31	99
G002694		1.5	0.112	0.18	0.85	101	0.14	5.47	89
G002695		2.0	0.122	0.14	0.77	83	0.18	6.10	75
G002696		0.6	0.092	0.14	0.54	77	0.11	6.25	90
G002697		2.1	0.120	0.13	0.80	96	0.13	5.92	94
G002698		<0.2	0.040	0.13	0.97	46	0.08	3.30	40
G002699		2.4	0.102	0.22	0.62	149	0.11	4.85	106
G002700		0.3	<0.005	<0.02	0.08	<1	<0.05	0.65	3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002701		0.46	0.011		0.16	3.62	35.7	<0.2	<10	300	0.41	0.17	0.45	0.12	18.05	19.5
G002702		0.44	0.017		0.34	2.43	90.3	<0.2	<10	220	0.49	0.44	0.32	0.33	24.20	13.9
G002703		0.54	0.031		0.26	2.75	97.3	<0.2	<10	400	0.60	0.25	0.36	0.21	32.00	16.3
G002704		0.56	0.011		0.21	2.96	19.9	<0.2	<10	380	0.67	0.21	0.42	0.22	40.30	15.9
G002705		0.60	0.009		0.19	2.97	12.6	<0.2	<10	440	0.63	0.21	0.44	0.26	33.90	16.6
G002706		0.58	0.014		0.34	2.88	11.6	<0.2	<10	300	0.62	0.48	0.34	0.29	36.30	15.6
G002707		0.50	0.015		0.17	2.79	28.4	<0.2	<10	300	0.61	0.20	0.40	0.17	33.20	14.4
G002708		0.46	0.014		0.18	2.85	20.2	<0.2	<10	290	0.53	0.22	0.37	0.14	27.70	13.4
G002709		0.38	0.010		0.33	2.05	14.9	<0.2	<10	280	0.47	0.19	0.37	0.18	24.80	10.4
G002710		0.36	0.007		0.34	2.20	8.9	<0.2	<10	300	0.35	0.18	0.40	0.09	21.50	7.1
G002711		0.36	0.010		0.35	2.74	29.2	<0.2	<10	340	0.48	0.25	0.37	0.15	30.80	17.8
G002712		0.46	0.006		0.35	2.75	8.9	<0.2	<10	320	0.70	0.17	0.40	0.15	44.90	13.5
G002713		0.42	0.005		0.20	2.96	4.6	<0.2	<10	400	0.44	0.10	0.38	0.12	28.50	13.2
G002714		0.44	0.007		0.18	3.08	8.9	<0.2	<10	350	0.57	0.15	0.42	0.14	39.00	18.0
G002715		0.54	0.015		0.16	4.18	59.6	<0.2	<10	450	0.53	0.16	0.93	0.11	22.80	27.4
G002716		0.60	0.010		0.32	3.46	23.0	<0.2	<10	350	0.50	0.35	0.33	0.39	26.60	17.8
G002717		0.36	<0.005		0.23	2.53	4.8	<0.2	<10	310	0.56	0.18	0.32	0.31	24.00	8.8
G002718		0.40	0.005		0.16	3.16	4.4	<0.2	<10	450	0.48	0.19	0.38	0.21	24.50	15.4
G002719		0.46	0.007		0.10	2.34	5.0	<0.2	<10	200	0.28	0.18	0.39	0.19	12.75	15.9
G002720		0.44	<0.005		0.12	2.78	5.1	<0.2	<10	270	0.46	0.17	0.47	0.22	21.00	12.2
G002721		0.56	0.009		0.19	2.74	10.0	<0.2	<10	370	0.56	0.16	0.39	0.29	28.80	16.5
G002722		0.52	0.010		0.14	2.66	5.2	<0.2	<10	340	0.43	0.21	0.48	0.19	21.40	11.8
G002723		0.52	<0.005		0.14	4.67	2.1	<0.2	<10	500	0.35	0.14	0.71	0.14	15.55	22.9
G002724		0.32	0.006		0.08	1.89	3.0	<0.2	<10	190	0.24	0.09	0.51	0.12	17.65	8.0
G002725		0.38	<0.005		0.09	2.10	6.5	<0.2	<10	240	0.37	0.13	0.56	0.13	22.80	10.3
G002726		0.30	0.005		0.10	1.78	5.1	<0.2	<10	230	0.29	0.11	0.58	0.12	19.60	9.0
G002727		0.38	0.006		0.08	2.09	2.0	<0.2	<10	240	0.36	0.09	0.54	0.17	24.50	8.9
G002728		0.44	<0.005		0.18	1.31	1.5	<0.2	<10	140	0.27	0.05	0.30	0.12	22.80	7.0
G002729		0.42	0.014		0.29	2.44	51.0	<0.2	<10	230	0.66	0.26	0.34	0.35	68.10	18.7
G002730		0.40	<0.005		0.18	1.94	7.7	<0.2	<10	150	0.49	0.17	0.23	0.29	41.70	14.7
G002731		0.46	0.007		0.22	2.95	8.3	<0.2	<10	400	0.82	0.18	0.36	0.16	54.20	14.0
G002732		0.48	0.011		0.16	3.10	9.3	<0.2	<10	340	0.78	0.16	0.38	0.10	44.00	17.8
G002733		0.34	<0.005		0.12	2.98	6.3	<0.2	<10	390	0.80	0.16	0.35	0.30	61.60	19.2
G002734		0.40	0.009		0.15	2.73	8.0	<0.2	<10	260	0.70	0.21	0.33	0.13	55.00	15.8
G002735		0.38	0.009		0.14	1.96	9.6	<0.2	<10	120	0.41	0.19	0.19	0.14	19.20	9.8
G002736		0.42	0.010		0.25	2.52	12.8	<0.2	<10	280	0.55	0.26	0.37	0.20	21.00	15.6
G002737		0.54	0.011		0.18	2.68	11.0	<0.2	<10	410	0.58	0.25	0.35	0.23	29.00	14.4
G002738		0.42	0.009		0.20	3.02	7.4	<0.2	<10	360	0.48	0.34	0.48	0.31	23.20	22.9
G002739		0.50	0.010		0.21	2.88	7.7	<0.2	<10	310	0.49	0.28	0.38	0.24	21.70	18.1
G002740		Empty Bag														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cr	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn
		ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm
		1	0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5
G002701		39	1.72	39.6	3.54	9.93	0.17	0.04	0.01	0.032	0.26	8.2	14.8	1.59	394
G002702		39	1.51	30.9	3.48	8.78	0.14	0.03	0.02	0.038	0.11	11.6	13.0	0.89	724
G002703		51	1.53	47.8	3.45	8.23	0.16	0.06	0.03	0.035	0.11	16.7	14.3	0.92	522
G002704		54	1.47	44.1	3.27	8.82	0.17	0.09	0.03	0.037	0.18	20.0	14.1	0.95	417
G002705		62	2.09	45.4	3.30	9.00	0.17	0.05	0.02	0.034	0.27	18.6	14.2	1.14	349
G002706		53	1.95	39.8	3.73	8.88	0.17	0.05	0.02	0.037	0.28	19.5	14.0	0.98	345
G002707		52	1.74	35.3	3.03	9.36	0.17	0.04	0.02	0.035	0.25	18.4	13.6	0.89	295
G002708		53	1.58	31.4	3.16	9.52	0.16	0.03	0.02	0.035	0.20	15.1	13.2	0.86	284
G002709		33	1.14	27.2	2.20	7.69	0.12	0.02	0.04	0.029	0.07	15.7	9.1	0.49	452
G002710		38	1.20	23.6	2.17	7.94	0.12	0.02	0.03	0.031	0.07	13.6	10.9	0.58	166
G002711		49	1.61	29.9	3.46	9.79	0.16	0.02	0.04	0.037	0.09	17.1	13.2	0.71	789
G002712		65	2.14	36.6	3.25	8.92	0.18	0.04	0.03	0.033	0.38	23.7	19.5	1.02	260
G002713		76	2.05	29.6	3.04	9.37	0.18	0.03	0.02	0.031	0.53	18.2	15.4	1.09	279
G002714		71	2.82	38.0	3.52	9.69	0.19	0.04	0.01	0.033	0.48	21.4	18.1	1.16	295
G002715		71	2.45	62.1	5.01	13.65	0.21	0.04	0.01	0.023	0.77	10.7	17.1	1.86	623
G002716		60	2.08	52.8	3.94	11.20	0.18	0.03	0.02	0.051	0.20	13.5	18.0	1.53	490
G002717		62	2.02	33.1	3.10	9.44	0.14	0.03	0.03	0.036	0.17	12.2	10.7	1.00	286
G002718		51	1.50	35.6	3.42	10.10	0.15	0.03	<0.01	0.041	0.18	11.7	13.5	1.23	572
G002719		43	0.94	29.2	3.18	7.66	0.13	0.02	0.01	0.024	0.06	6.1	13.1	1.20	691
G002720		58	1.12	29.4	2.98	9.17	0.16	0.03	0.02	0.037	0.09	10.7	12.9	1.09	394
G002721		57	1.20	40.5	3.48	8.65	0.19	0.11	0.01	0.036	0.17	14.6	13.2	1.05	345
G002722		50	1.07	29.4	3.08	8.54	0.15	0.05	0.02	0.035	0.13	11.3	12.8	1.00	301
G002723		65	2.56	61.1	5.31	14.65	0.21	0.04	<0.01	0.058	0.54	7.6	17.4	2.69	782
G002724		38	1.14	12.8	1.98	6.76	0.14	0.05	0.01	0.024	0.13	8.7	13.3	0.66	190
G002725		43	1.26	17.8	2.51	6.81	0.15	0.07	0.02	0.028	0.17	12.1	13.3	0.72	270
G002726		40	1.09	16.8	2.16	6.35	0.13	0.04	0.01	0.023	0.12	9.9	11.5	0.65	512
G002727		45	1.19	16.1	2.05	7.01	0.14	0.05	0.01	0.023	0.12	14.3	13.6	0.74	211
G002728		32	0.95	21.7	1.31	4.64	0.11	0.02	0.04	0.017	0.11	19.6	8.1	0.56	145
G002729		52	2.08	46.6	3.76	8.18	0.19	0.04	0.01	0.038	0.25	27.3	19.7	0.86	421
G002730		42	2.02	33.1	3.11	6.81	0.14	0.02	0.04	0.029	0.12	19.4	13.6	0.58	379
G002731		66	2.99	54.0	4.01	9.55	0.21	0.07	0.05	0.043	0.36	29.0	17.3	1.07	405
G002732		56	1.50	42.8	3.51	9.90	0.19	0.05	0.03	0.039	0.21	23.9	15.1	0.93	292
G002733		57	1.47	42.5	3.75	9.41	0.18	0.04	0.05	0.039	0.22	24.3	16.1	0.87	414
G002734		54	1.50	50.1	3.85	8.59	0.20	0.07	0.04	0.035	0.28	33.3	16.5	0.85	337
G002735		33	1.15	20.9	3.36	8.65	0.12	0.02	0.06	0.029	0.08	8.9	12.8	0.44	432
G002736		50	2.16	31.9	3.43	8.17	0.16	0.04	0.04	0.032	0.19	10.8	17.5	0.99	442
G002737		58	1.44	40.1	3.28	8.95	0.16	0.03	0.03	0.037	0.15	15.0	13.5	1.04	512
G002738		86	1.33	42.0	3.50	8.40	0.15	0.05	0.04	0.031	0.18	10.0	14.5	1.44	929
G002739		60	1.44	39.5	3.71	9.00	0.15	0.04	0.03	0.038	0.19	10.5	14.5	1.27	731
G002740															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Na	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01
G002701		0.05	1.11	28.2	570	8.1	31.1	<0.001	0.03	0.60	9.1	1.2	0.5	25.5	<0.01
G002702		0.01	1.76	29.2	670	16.1	17.3	<0.001	0.02	1.38	6.1	1.3	0.8	20.5	<0.01
G002703		0.02	1.59	44.9	720	10.9	18.2	<0.001	0.02	35.00	7.7	1.5	0.7	27.7	<0.01
G002704		0.02	1.56	43.4	920	11.8	27.8	<0.001	0.02	1.20	9.0	1.4	0.8	27.6	<0.01
G002705		0.02	1.27	41.5	840	10.2	34.5	<0.001	0.02	1.03	9.1	1.6	0.7	27.5	<0.01
G002706		0.01	1.37	36.5	830	15.8	34.0	<0.001	0.02	0.81	8.8	1.8	0.8	23.2	<0.01
G002707		0.02	1.63	38.1	920	10.4	34.3	<0.001	0.02	1.08	7.9	1.3	0.8	27.8	<0.01
G002708		0.01	1.89	37.7	890	10.7	26.9	<0.001	0.03	0.89	6.3	1.2	0.8	24.9	<0.01
G002709		0.02	1.08	25.7	920	9.9	14.3	<0.001	0.08	0.73	3.9	1.2	0.6	29.3	<0.01
G002710		0.02	1.27	27.6	870	8.4	12.4	<0.001	0.07	0.63	4.1	0.9	0.6	28.4	<0.01
G002711		0.01	1.18	35.1	920	11.5	16.4	<0.001	0.07	1.24	4.9	1.3	0.8	30.4	<0.01
G002712		0.01	1.26	41.1	970	8.5	40.1	<0.001	0.01	0.98	9.3	1.3	0.7	23.2	<0.01
G002713		0.02	1.85	43.4	870	6.2	49.3	<0.001	0.02	0.43	8.1	1.1	0.7	21.7	<0.01
G002714		0.02	1.60	46.5	800	7.8	53.1	<0.001	0.02	0.58	8.6	1.4	0.7	26.0	<0.01
G002715		0.12	1.98	50.2	1500	6.8	60.7	<0.001	0.02	0.59	8.1	1.6	0.4	39.0	<0.01
G002716		0.02	1.02	38.1	540	20.4	25.8	0.001	0.03	0.72	13.8	1.8	0.8	24.9	<0.01
G002717		0.03	1.13	35.0	760	9.5	21.8	0.001	0.05	0.28	7.3	2.1	0.7	27.4	<0.01
G002718		0.03	1.21	32.1	650	9.3	24.9	<0.001	0.03	0.24	10.5	1.5	0.8	28.2	<0.01
G002719		0.01	0.89	24.2	580	6.1	13.3	<0.001	0.04	0.26	4.0	1.0	0.4	22.3	<0.01
G002720		0.03	1.12	35.8	600	7.4	16.2	0.001	0.04	0.26	7.1	1.4	0.6	28.6	<0.01
G002721		0.02	1.13	37.6	730	9.5	24.9	<0.001	0.01	0.36	9.3	1.8	0.6	46.9	<0.01
G002722		0.02	1.13	29.6	710	8.1	20.9	<0.001	0.03	0.30	8.0	1.2	0.6	30.7	<0.01
G002723		0.08	0.36	32.6	710	9.8	55.5	<0.001	0.01	0.20	22.1	1.9	0.8	31.9	<0.01
G002724		0.02	1.75	22.1	910	7.2	18.7	<0.001	0.03	0.75	5.0	0.8	0.6	27.6	<0.01
G002725		0.03	1.93	26.2	960	8.1	25.3	<0.001	0.02	1.02	5.9	1.0	0.6	28.7	<0.01
G002726		0.03	1.77	24.8	1020	6.8	18.3	<0.001	0.05	0.81	4.7	0.9	0.6	28.6	<0.01
G002727		0.03	1.97	29.1	1150	7.0	16.8	<0.001	0.03	0.68	5.6	0.9	0.6	28.1	<0.01
G002728		0.03	0.99	25.7	660	4.6	16.3	<0.001	0.05	0.39	4.5	0.8	0.3	17.7	<0.01
G002729		0.02	1.90	76.5	870	11.4	33.3	0.001	0.04	0.74	6.4	1.5	0.8	26.7	<0.01
G002730		0.01	1.17	40.4	800	9.1	19.5	0.001	0.07	0.58	3.5	1.1	0.6	23.6	<0.01
G002731		0.02	1.73	51.2	750	10.7	45.9	<0.001	0.02	0.81	11.2	1.7	0.8	26.6	<0.01
G002732		0.02	2.10	49.3	970	9.4	30.8	0.001	0.03	0.87	8.0	1.5	0.8	26.7	<0.01
G002733		0.03	2.31	63.6	920	9.4	30.9	0.001	0.05	0.59	6.9	1.7	0.7	29.7	0.01
G002734		0.02	2.01	53.4	660	9.0	37.2	<0.001	0.04	2.08	8.4	1.6	0.7	27.8	<0.01
G002735		0.01	1.52	20.6	710	10.2	12.2	0.001	0.06	0.88	2.8	1.2	0.6	19.9	<0.01
G002736		0.01	1.45	37.4	610	11.8	29.3	<0.001	0.04	5.56	7.1	1.3	0.6	26.2	<0.01
G002737		0.01	1.54	44.5	850	11.0	21.1	<0.001	0.03	2.02	6.9	1.4	0.7	24.0	<0.01
G002738		0.03	1.02	42.8	720	7.7	23.5	0.001	0.06	0.36	7.7	1.4	0.5	26.4	<0.01
G002739		0.02	1.36	35.5	730	11.8	22.9	<0.001	0.06	0.29	7.7	1.4	0.7	24.7	<0.01
G002740															

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Th	Ti	Ti	U	V	W	Y	Zn
		ppm	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.2	0.005	0.02	0.05	1	0.05	0.05	2
									0.5
G002701		1.8	0.137	0.21	0.55	100	0.34	6.47	84
G002702		3.4	0.104	0.13	0.82	75	0.30	5.79	79
G002703		3.5	0.129	0.16	1.44	82	0.19	10.80	74
G002704		4.8	0.135	0.19	1.53	87	0.19	14.05	85
G002705		4.2	0.148	0.22	1.47	101	0.17	10.30	111
G002706		4.5	0.135	0.23	1.43	97	0.19	10.05	103
G002707		4.4	0.137	0.21	1.11	88	0.18	9.27	83
G002708		2.7	0.129	0.18	1.10	90	0.18	7.17	85
G002709		0.7	0.070	0.12	1.36	62	0.17	9.69	57
G002710		0.7	0.083	0.12	1.17	53	0.15	7.15	58
G002711		0.7	0.095	0.15	1.43	89	0.18	8.27	82
G002712		6.0	0.140	0.25	2.18	88	0.16	15.30	71
G002713		3.9	0.159	0.25	0.97	93	0.26	9.63	75
G002714		4.7	0.163	0.28	1.28	99	0.17	12.05	79
G002715		2.5	0.224	0.35	0.55	121	0.22	6.46	99
G002716		3.2	0.129	0.23	0.94	120	0.12	9.00	112
G002717		1.9	0.098	0.24	1.14	103	0.14	6.99	93
G002718		1.8	0.109	0.19	0.84	103	0.20	7.54	90
G002719		0.6	0.102	0.10	0.43	77	0.12	3.49	76
G002720		1.0	0.106	0.15	0.88	99	0.14	5.84	83
G002721		4.2	0.145	0.19	1.16	95	0.16	13.20	76
G002722		3.1	0.134	0.15	0.73	83	0.13	7.53	68
G002723		1.8	0.175	0.32	0.32	159	0.50	11.15	118
G002724		3.0	0.126	0.14	0.53	52	0.17	5.76	60
G002725		4.7	0.131	0.15	0.87	71	0.16	6.97	67
G002726		2.5	0.099	0.12	0.81	57	0.21	6.56	61
G002727		4.0	0.129	0.17	0.98	55	0.14	8.41	64
G002728		1.6	0.075	0.11	1.13	38	0.08	9.98	34
G002729		6.1	0.108	0.21	1.52	75	0.16	13.90	112
G002730		0.9	0.079	0.21	1.13	68	0.13	8.61	80
G002731		6.8	0.149	0.41	1.82	107	1.38	18.50	94
G002732		4.5	0.124	0.20	1.76	89	0.21	14.95	79
G002733		4.4	0.123	0.19	1.78	88	0.17	13.05	95
G002734		7.1	0.129	0.22	2.41	76	0.18	22.20	80
G002735		0.6	0.093	0.12	0.79	78	0.18	4.14	57
G002736		2.5	0.111	0.18	1.26	88	0.20	6.24	95
G002737		2.6	0.115	0.14	1.34	90	0.17	8.69	93
G002738		1.4	0.099	0.15	1.05	96	0.20	8.77	78
G002739		1.8	0.108	0.15	0.93	94	0.19	7.12	92
G002740									

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 8 - A

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	Au-GRA21 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm
		0.02	0.005	0.05	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1
G002741		0.46	0.008		0.32	3.28	3.4	<0.2	<10	410	0.43	0.64	0.37	0.24	20.30	17.6
G002742		0.40	0.007		0.19	2.46	5.7	<0.2	<10	260	0.32	0.17	0.41	0.23	21.00	13.2
G002743		0.46	0.005		0.11	2.18	5.8	<0.2	<10	260	0.42	0.19	0.35	0.28	27.30	11.8
G002744		0.44	0.009		0.32	2.19	6.5	<0.2	<10	280	0.31	0.19	1.28	0.38	18.85	18.0
G002745		0.36	0.007		0.11	2.39	3.7	<0.2	<10	210	0.24	0.12	0.56	0.16	14.00	15.9
G002746		0.50	<0.005		0.08	2.02	3.8	<0.2	<10	270	0.25	0.17	0.50	0.28	14.30	12.1
G002747		0.38	0.020		0.29	1.66	14.9	<0.2	<10	260	0.36	0.19	0.56	0.44	15.90	11.9
G002748		0.44	<0.005		0.25	2.02	4.6	<0.2	<10	350	0.36	0.28	0.75	0.77	21.70	39.5
G002749		0.44	0.007		0.43	2.27	4.5	<0.2	<10	440	0.59	0.22	0.93	0.57	45.20	17.0
G002750 A		0.42	0.007		0.21	2.43	5.2	<0.2	<10	430	0.40	0.68	0.49	0.24	18.75	17.2
G002750 B		0.54	0.009		0.17	2.68	6.2	<0.2	<10	450	0.42	0.71	0.43	0.23	19.75	17.9

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 8 - B

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Cr ppm 1	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05
G002741		50	1.54	46.3	3.04	9.04	0.15	0.06	0.04	0.038	0.23	10.6	15.9	1.58	389	1.35
G002742		44	1.06	26.1	2.97	7.13	0.13	0.06	0.03	0.029	0.10	10.4	13.2	1.02	324	1.54
G002743		40	0.76	32.5	2.63	6.70	0.14	0.11	0.03	0.030	0.09	13.0	11.9	0.93	258	0.96
G002744		41	0.93	59.0	3.07	6.06	0.12	0.06	0.06	0.026	0.13	10.0	10.8	0.84	823	1.51
G002745		45	0.79	25.8	2.67	7.03	0.12	0.04	0.05	0.026	0.10	6.7	11.9	1.06	627	0.74
G002746		39	0.77	17.0	2.51	6.24	0.12	0.03	0.03	0.022	0.08	7.3	11.6	0.93	505	1.07
G002747		34	1.05	28.4	2.30	5.52	0.10	0.03	0.05	0.026	0.06	8.0	8.6	0.66	802	1.87
G002748		31	1.08	42.1	2.83	5.87	0.11	0.03	0.05	0.025	0.12	9.1	8.7	0.91	2070	1.94
G002749		35	1.30	55.5	2.86	7.37	0.14	0.05	0.07	0.032	0.19	25.2	10.6	0.83	743	1.80
G002750 A		65	1.36	32.4	3.05	7.06	0.13	0.03	0.06	0.027	0.20	9.8	12.6	1.20	607	0.91
G002750 B		69	1.38	35.5	3.32	7.78	0.14	0.04	0.03	0.029	0.24	9.6	12.4	1.32	560	0.85

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 8 - C

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Na %	ME-MS41 Nb ppm	ME-MS41 Ni ppm	ME-MS41 P ppm	ME-MS41 Pb ppm	ME-MS41 Rb ppm	ME-MS41 Re ppm	ME-MS41 S %	ME-MS41 Sb ppm	ME-MS41 Sc ppm	ME-MS41 Se ppm	ME-MS41 Sn ppm	ME-MS41 Sr ppm	ME-MS41 Ta ppm	ME-MS41 Te ppm
		0.01	0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002741		0.03	1.05	31.1	550	9.7	27.0	0.002	0.11	0.31	8.9	1.9	0.7	29.2	<0.01	0.19
G002742		0.01	1.22	29.0	640	8.7	16.2	0.001	0.03	0.29	6.9	1.5	0.5	27.5	<0.01	0.08
G002743		0.01	1.06	28.1	600	9.4	13.8	<0.001	0.02	0.35	6.8	1.1	0.5	22.9	<0.01	0.08
G002744		0.03	1.02	29.6	1150	7.2	19.4	0.001	0.17	0.43	5.2	1.5	0.4	39.5	<0.01	0.11
G002745		0.03	0.95	25.2	780	7.9	13.5	<0.001	0.06	0.28	6.8	0.9	0.4	24.3	<0.01	0.04
G002746		0.02	1.00	24.8	750	6.8	12.7	<0.001	0.05	0.27	4.7	1.0	0.4	29.7	<0.01	0.07
G002747		0.03	0.65	21.9	1040	9.3	10.7	0.002	0.11	0.28	3.5	1.9	0.4	32.5	<0.01	0.12
G002748		0.03	0.62	21.9	1200	7.5	16.6	0.001	0.13	0.28	3.7	1.7	0.4	38.7	<0.01	0.29
G002749		0.03	1.64	32.3	1190	8.6	29.9	0.001	0.16	0.35	4.4	1.7	0.5	44.3	<0.01	0.14
G002750 A		0.03	0.82	31.6	670	7.0	26.3	0.001	0.06	0.47	6.0	1.2	0.5	29.3	<0.01	0.12
G002750 B		0.03	0.84	34.6	570	7.5	29.6	<0.001	0.04	0.42	7.0	1.2	0.6	24.6	<0.01	0.12

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 8 - D

Total # Pages: 8 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079523

Sample Description	Method Analyte Units LOR	ME-MS41 Th ppm 0.2	ME-MS41 Ti % 0.005	ME-MS41 Tl ppm 0.02	ME-MS41 U ppm 0.05	ME-MS41 V ppm 1	ME-MS41 W ppm 0.05	ME-MS41 Y ppm 0.05	ME-MS41 Zn ppm 2	ME-MS41 Zr ppm 0.5
G002741		2.1	0.124	0.22	0.99	87	0.14	10.65	81	2.1
G002742		2.4	0.120	0.15	1.05	81	0.12	6.97	75	2.6
G002743		3.4	0.123	0.12	0.90	71	0.15	10.85	62	4.3
G002744		0.7	0.078	0.15	1.05	71	0.12	10.10	87	2.3
G002745		1.3	0.108	0.13	0.60	70	2.56	4.75	67	1.4
G002746		1.4	0.095	0.10	0.56	62	0.14	5.49	75	1.4
G002747		0.4	0.057	0.13	1.14	60	0.11	6.99	72	1.2
G002748		0.4	0.063	0.21	0.85	66	0.12	11.15	82	1.1
G002749		1.1	0.076	0.16	2.72	68	0.14	24.20	81	1.7
G002750 A		1.2	0.094	0.15	1.34	80	0.11	7.51	73	1.2
G002750 B		1.6	0.105	0.16	1.22	87	0.26	6.90	73	1.2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

Page: 1
Finalized Date: 10-AUG-2007
Account: EIANX

CERTIFICATE VA07079981

Project: North Dawson

P.O. No.: NGX07-02

This report is for 202 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002170		0.36	0.005	0.21	1.79	5.0	<0.2	<10	140	0.34	0.18	1.73	0.44	39.70	15.7	32
G002171		0.52	<0.005	0.11	1.69	4.6	<0.2	<10	80	0.18	0.16	0.49	0.13	14.60	11.1	31
G002172		0.36	<0.005	0.13	1.35	3.5	<0.2	<10	80	0.16	0.14	0.50	0.15	16.90	7.1	28
G002173		0.36	<0.005	0.48	1.09	2.6	<0.2	<10	80	0.14	0.18	0.35	0.20	24.30	5.3	21
G002174		0.34	0.005	0.33	1.64	3.2	<0.2	<10	170	0.21	0.18	0.86	0.35	35.80	14.1	43
G002175		0.34	0.008	0.25	0.85	2.4	<0.2	<10	110	0.11	0.15	0.32	0.15	18.20	6.0	20
G002176		0.42	0.015	0.12	1.23	3.0	<0.2	<10	90	0.17	0.16	0.33	0.10	20.60	6.5	22
G002177		0.36	0.006	0.18	0.79	2.8	<0.2	<10	70	0.13	0.13	0.37	0.13	20.00	3.6	16
G002178		0.36	<0.005	0.24	0.85	2.5	<0.2	<10	80	0.15	0.12	0.57	0.15	23.20	3.9	15
G002179		0.30	0.008	0.13	0.92	3.1	<0.2	<10	70	0.14	0.16	0.22	0.12	16.70	3.7	16
G002180		0.30	0.006	0.14	0.96	3.4	<0.2	<10	70	0.13	0.15	0.21	0.11	15.75	3.9	16
G002181		0.32	<0.005	0.15	1.00	3.1	<0.2	<10	80	0.12	0.14	0.20	0.12	19.35	3.5	19
G002182		0.44	<0.005	0.20	1.35	3.5	<0.2	<10	70	0.18	0.17	0.18	0.15	19.75	8.1	29
G002183		0.34	<0.005	0.08	1.17	2.4	<0.2	<10	100	0.14	0.11	0.23	0.12	19.20	5.6	25
G002184		0.58	<0.005	0.09	1.61	5.7	<0.2	<10	110	0.20	0.19	0.25	0.12	17.35	9.4	38
G002185		0.46	<0.005	0.08	1.17	3.4	<0.2	<10	70	0.14	0.17	0.22	0.13	20.80	4.9	22
G002186		0.34	<0.005	0.15	1.02	3.1	<0.2	<10	80	0.14	0.11	0.22	0.14	17.40	4.5	19
G002187		0.50	<0.005	0.08	1.28	5.4	<0.2	<10	70	0.14	0.15	0.21	0.13	18.90	5.8	24
G002188		0.42	0.008	0.07	1.20	4.1	<0.2	<10	60	0.12	0.12	0.23	0.11	15.05	5.0	23
G002189		0.28	0.006	0.10	1.48	5.1	<0.2	<10	80	0.20	0.13	0.21	0.14	23.80	6.7	28
G002190		0.28	0.007	0.08	1.56	3.9	<0.2	<10	90	0.19	0.11	0.21	0.10	20.70	5.6	30
G002191		0.42	<0.005	0.07	1.79	8.3	<0.2	<10	140	0.42	0.10	1.16	0.10	32.90	12.3	36
G002192		0.54	0.009	0.11	3.12	6.4	<0.2	<10	280	0.73	0.14	1.00	0.12	33.70	16.4	63
G002193		0.44	0.007	0.06	2.48	7.6	<0.2	<10	190	0.40	0.19	0.99	0.12	27.70	20.1	114
G002194		0.50	<0.005	0.22	2.58	7.7	<0.2	<10	350	0.62	0.49	0.21	0.60	24.30	14.1	62
G002195		0.44	<0.005	0.07	0.22	1.2	<0.2	<10	20	<0.05	0.07	0.03	0.07	2.78	1.3	4
G002196		0.24	0.010	1.62	1.12	22.4	<0.2	<10	380	0.34	0.23	0.15	1.65	24.90	6.4	24
G002197		0.30	0.008	0.19	0.39	4.9	<0.2	<10	250	0.08	0.07	0.31	0.53	7.05	2.2	10
G002198		0.42	<0.005	0.18	1.01	8.7	<0.2	<10	140	0.14	0.14	0.22	0.30	17.80	4.1	33
G002199		0.42	<0.005	0.05	1.56	4.4	<0.2	<10	120	0.19	0.12	0.27	0.17	21.50	14.7	25
G002200		0.40	0.005	0.08	1.51	4.4	<0.2	<10	120	0.17	0.12	0.28	0.12	19.35	12.6	24
G002201		0.40	<0.005	0.12	1.67	7.2	<0.2	<10	140	0.21	0.13	0.32	0.15	24.10	23.1	26
G002202		0.32	<0.005	0.09	1.48	4.0	<0.2	<10	130	0.23	0.18	0.26	0.16	26.90	11.6	24
G002203		0.42	<0.005	0.10	1.67	5.7	<0.2	<10	130	0.24	0.14	0.29	0.15	26.50	13.2	27
G002204		0.50	<0.005	0.21	1.59	4.7	<0.2	<10	120	0.24	0.16	0.91	0.38	24.70	14.8	28
G002205		0.40	0.005	0.84	1.96	5.6	<0.2	<10	160	0.36	0.28	1.12	1.16	36.30	20.4	45
G002206		0.36	<0.005	0.27	1.74	4.7	<0.2	<10	70	0.17	0.25	0.43	0.23	16.65	11.6	37
G002207		0.42	0.006	0.33	1.82	5.1	<0.2	<10	150	0.28	0.30	1.15	0.27	29.10	16.0	34
G002208		0.50	<0.005	0.21	1.75	4.6	<0.2	<10	150	0.21	0.24	0.85	0.21	19.45	15.9	35
G002209		0.38	<0.005	0.24	1.35	5.0	<0.2	<10	70	0.14	0.19	0.20	0.14	16.15	6.1	26

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002170		0.86	45.4	2.82	5.01	0.10	0.07	0.06	0.021	0.08	24.0	10.0	0.98	913	0.90
G002171		0.64	14.9	2.84	5.51	0.06	0.03	0.03	0.018	0.06	8.0	10.3	0.97	278	0.89
G002172		0.75	13.7	2.09	4.78	0.05	0.02	0.04	0.015	0.05	9.5	7.8	0.67	223	0.79
G002173		0.92	15.5	1.58	5.13	0.06	0.02	0.09	0.015	0.06	13.5	4.4	0.37	164	0.90
G002174		1.09	24.0	2.38	5.47	0.11	0.05	0.10	0.021	0.06	23.3	7.4	0.73	786	1.19
G002175		0.82	12.6	1.40	3.71	0.06	0.02	0.09	0.012	0.04	10.9	3.4	0.30	196	1.11
G002176		0.69	14.1	1.90	4.51	0.07	0.03	0.07	0.015	0.04	11.0	6.3	0.48	146	0.74
G002177		0.67	14.0	1.44	3.56	0.06	0.02	0.10	0.012	0.04	10.7	3.1	0.23	97	0.92
G002178		0.62	12.1	1.49	3.45	0.08	0.02	0.11	0.012	0.04	14.9	3.4	0.27	100	1.15
G002179		0.69	12.1	1.60	3.79	0.06	0.02	0.08	0.013	0.04	8.8	3.2	0.24	85	0.69
G002180		0.74	12.2	1.57	4.31	0.06	0.02	0.09	0.013	0.04	8.2	4.4	0.27	93	0.82
G002181		0.62	13.0	1.61	3.95	0.06	0.02	0.07	0.013	0.04	9.8	3.6	0.27	103	0.53
G002182		1.05	15.2	2.07	5.97	0.07	0.02	0.06	0.017	0.05	10.5	8.1	0.48	166	0.71
G002183		0.95	11.7	1.55	4.85	0.06	0.02	0.06	0.011	0.05	9.9	6.7	0.43	144	0.45
G002184		1.41	12.9	2.32	6.75	0.07	0.02	0.06	0.017	0.06	9.1	10.7	0.67	294	0.80
G002185		0.82	11.9	1.63	4.93	0.07	0.02	0.05	0.019	0.04	10.7	5.7	0.37	120	0.46
G002186		0.66	12.9	1.70	3.75	0.05	0.02	0.08	0.014	0.04	8.7	3.8	0.29	99	0.58
G002187		0.87	12.6	1.91	5.33	0.07	0.03	0.05	0.016	0.04	9.9	7.3	0.45	127	0.57
G002188		0.81	10.7	1.79	4.79	0.08	0.03	0.04	0.017	0.04	9.8	6.7	0.44	122	0.46
G002189		0.88	14.8	2.16	5.29	0.09	0.03	0.05	0.019	0.05	12.4	8.2	0.50	130	0.45
G002190		0.74	12.1	2.30	4.24	0.06	0.03	0.05	0.015	0.06	10.7	6.7	0.52	136	0.35
G002191		1.42	18.5	2.88	4.79	0.11	0.07	0.08	0.020	0.10	15.9	12.3	0.61	572	0.36
G002192		3.26	35.0	3.62	9.65	0.16	0.08	0.04	0.031	0.35	16.6	24.4	1.33	300	0.48
G002193		2.05	36.8	3.09	7.40	0.13	0.06	0.03	0.021	0.15	12.5	19.2	1.48	814	0.34
G002194		3.52	55.4	3.58	9.11	0.12	0.11	0.03	0.038	0.15	12.5	15.0	0.83	303	2.23
G002195		0.30	4.4	0.60	1.80	<0.05	<0.02	0.02	<0.005	0.01	1.4	0.5	0.03	29	0.38
G002196		4.25	59.3	1.88	4.70	0.09	0.03	0.63	0.025	0.06	12.4	6.2	0.21	182	3.37
G002197		1.01	15.0	0.80	1.76	<0.05	<0.02	0.24	0.006	0.04	3.5	1.1	0.08	75	0.84
G002198		2.09	17.2	1.52	5.05	0.09	0.02	0.17	0.017	0.05	9.2	4.6	0.31	106	0.62
G002199		1.08	9.2	2.30	5.83	0.09	0.04	0.13	0.020	0.06	11.1	10.3	0.54	547	0.82
G002200		0.91	9.2	2.23	5.48	0.08	0.03	0.06	0.016	0.06	10.0	9.3	0.55	459	1.08
G002201		1.09	10.9	2.72	5.73	0.08	0.04	0.06	0.021	0.07	12.2	10.0	0.55	898	1.90
G002202		1.03	13.1	2.07	5.77	0.08	0.04	0.10	0.025	0.06	14.3	8.6	0.47	335	0.71
G002203		1.20	13.0	2.35	6.27	0.09	0.04	0.06	0.025	0.08	13.7	10.6	0.55	417	0.88
G002204		0.52	30.7	2.54	4.63	0.09	0.06	0.05	0.021	0.04	12.9	8.1	0.89	697	1.03
G002205		1.04	69.6	3.10	6.22	0.16	0.06	0.11	0.030	0.05	29.1	8.6	1.15	823	1.78
G002206		0.80	23.5	2.65	5.96	0.08	0.03	0.07	0.018	0.04	8.7	7.6	1.16	291	1.35
G002207		0.75	42.3	2.59	5.87	0.10	0.05	0.06	0.023	0.06	15.1	9.0	0.95	621	1.13
G002208		0.66	21.2	2.69	5.06	0.07	0.03	0.05	0.017	0.06	9.5	6.5	0.89	950	1.32
G002209		0.85	15.6	2.10	5.19	0.06	0.02	0.06	0.017	0.05	7.0	5.1	0.56	215	1.00

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G002170		0.86	31.2	780	8.4	13.9	<0.001	0.09	0.29	4.5	1.4	0.3	59.2	0.01	0.06	1.8
G002171		0.99	26.5	520	9.2	9.6	<0.001	0.02	0.17	3.9	0.6	0.3	26.0	<0.01	0.04	2.9
G002172		0.85	20.4	580	8.9	9.6	<0.001	0.03	0.15	3.1	0.7	0.3	26.5	<0.01	0.03	1.4
G002173		0.84	12.0	650	17.3	10.2	<0.001	0.06	0.21	1.9	1.0	0.4	26.9	<0.01	0.08	0.5
G002174		0.99	24.5	760	12.1	11.6	<0.001	0.06	0.27	3.6	1.4	0.4	44.3	0.01	0.06	1.6
G002175		0.65	9.9	750	7.8	7.1	<0.001	0.06	0.21	1.6	0.8	0.3	23.2	<0.01	0.04	0.3
G002176		0.92	15.3	570	9.5	5.9	<0.001	0.03	0.27	2.4	0.8	0.3	21.3	<0.01	0.04	1.2
G002177		0.72	9.3	710	7.8	6.3	<0.001	0.09	0.22	1.5	1.0	0.3	25.3	<0.01	0.04	0.3
G002178		0.74	9.4	770	8.1	6.0	<0.001	0.09	0.20	1.7	1.0	0.3	30.5	<0.01	0.04	0.3
G002179		0.77	8.6	610	9.2	5.6	<0.001	0.06	0.18	1.4	0.8	0.3	18.1	<0.01	0.03	0.2
G002180		0.83	10.3	550	9.6	7.3	<0.001	0.05	0.20	1.7	0.8	0.3	19.1	<0.01	0.04	0.3
G002181		0.77	9.5	560	8.4	6.7	<0.001	0.05	0.18	1.6	0.8	0.3	17.7	<0.01	0.03	0.2
G002182		1.09	19.7	460	10.1	7.4	<0.001	0.03	0.18	2.5	0.7	0.4	17.7	<0.01	0.04	0.6
G002183		0.93	15.8	420	6.8	9.5	<0.001	0.03	0.17	2.4	0.6	0.4	20.0	<0.01	0.03	0.6
G002184		1.23	22.2	490	9.6	13.3	<0.001	0.02	0.20	3.3	0.6	0.6	20.7	<0.01	0.04	1.0
G002185		0.95	14.2	480	8.4	9.2	<0.001	0.03	0.18	2.3	0.7	0.4	19.1	<0.01	0.03	0.5
G002186		0.75	10.9	650	6.6	6.1	<0.001	0.06	0.15	1.5	0.8	0.3	18.0	<0.01	0.03	0.2
G002187		1.03	16.1	460	9.8	8.5	<0.001	0.02	0.25	2.5	0.7	0.4	18.3	<0.01	0.04	0.7
G002188		1.03	14.6	460	7.7	8.7	<0.001	0.02	0.18	2.3	0.7	0.4	17.9	<0.01	0.03	0.7
G002189		1.19	18.5	520	8.6	9.3	<0.001	0.03	0.21	2.8	0.8	0.4	19.0	<0.01	0.03	0.9
G002190		0.99	15.1	540	7.4	7.7	<0.001	0.03	0.17	2.4	0.6	0.3	16.0	<0.01	0.02	0.8
G002191		1.44	23.9	540	7.7	11.8	<0.001	0.04	0.26	4.2	0.9	0.4	49.8	<0.01	0.03	3.0
G002192		2.54	38.0	920	11.3	46.1	<0.001	0.01	0.22	7.9	1.0	0.7	47.8	<0.01	0.05	4.8
G002193		2.49	67.6	1180	6.0	23.1	<0.001	0.01	0.18	5.1	0.6	0.4	41.7	<0.01	0.02	3.8
G002194		2.34	35.3	560	17.4	13.2	<0.001	0.04	0.23	7.2	1.1	0.8	27.7	0.01	0.07	2.6
G002195		0.26	1.9	120	2.0	1.4	<0.001	<0.01	0.13	0.5	0.2	0.2	6.9	<0.01	0.02	<0.2
G002196		0.74	24.2	850	9.9	9.5	<0.001	0.05	1.01	1.9	3.4	0.5	22.6	0.01	0.08	0.2
G002197		0.45	9.7	980	3.5	4.3	<0.001	0.11	0.24	1.1	1.2	0.2	25.8	<0.01	0.02	<0.2
G002198		1.02	17.3	580	6.7	11.8	<0.001	0.06	0.34	2.0	1.4	0.4	21.4	<0.01	0.04	0.3
G002199		1.35	15.7	580	6.8	10.9	<0.001	0.01	0.26	3.4	0.6	0.5	20.0	<0.01	0.03	1.5
G002200		1.29	14.9	640	6.2	8.8	<0.001	0.02	0.25	3.4	0.5	0.5	20.7	<0.01	0.02	1.0
G002201		1.43	16.2	730	7.9	12.3	<0.001	0.05	0.31	3.6	0.7	0.5	24.3	<0.01	0.03	1.2
G002202		1.44	15.2	560	7.2	10.9	<0.001	0.06	0.30	3.3	0.8	0.5	23.9	<0.01	0.04	1.0
G002203		1.46	17.6	670	8.1	14.7	<0.001	0.05	0.32	3.9	0.7	0.5	23.9	<0.01	0.03	1.4
G002204		0.75	21.0	640	9.4	7.1	0.001	0.06	0.25	4.0	1.1	0.3	36.1	<0.01	0.06	1.2
G002205		0.75	31.4	610	16.1	10.4	0.001	0.05	0.33	5.8	1.9	0.3	50.6	0.01	0.11	1.2
G002206		0.90	23.9	400	8.5	5.7	<0.001	0.03	0.22	3.9	0.9	0.4	24.4	<0.01	0.12	1.2
G002207		0.97	25.1	650	10.3	10.4	0.001	0.05	0.32	3.8	1.2	0.4	51.5	<0.01	0.13	1.1
G002208		0.77	19.6	660	10.2	9.1	<0.001	0.05	0.19	2.8	0.8	0.3	34.4	<0.01	0.08	0.8
G002209		0.65	15.0	620	12.6	9.9	<0.001	0.03	0.25	2.1	0.6	0.4	18.8	<0.01	0.04	0.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
G002170		0.060	0.13	1.18	47	0.31	19.10	87
G002171		0.062	0.09	0.61	44	0.38	3.58	66
G002172		0.060	0.08	0.82	39	0.27	4.20	61
G002173		0.043	0.10	1.06	24	0.14	4.44	46
G002174		0.061	0.12	1.60	45	0.15	8.99	77
G002175		0.044	0.07	0.94	27	0.13	3.88	34
G002176		0.067	0.07	0.94	35	0.11	3.94	48
G002177		0.041	0.06	0.99	19	0.08	4.01	30
G002178		0.043	0.06	1.43	20	0.11	4.81	30
G002179		0.047	0.06	0.83	26	0.21	2.97	28
G002180		0.050	0.07	0.78	28	0.09	2.98	30
G002181		0.054	0.06	0.75	26	0.07	3.78	32
G002182		0.077	0.10	0.74	48	0.28	3.54	49
G002183		0.073	0.08	0.52	30	0.11	4.04	41
G002184		0.094	0.10	0.60	55	0.14	3.62	65
G002185		0.067	0.08	0.66	29	0.26	4.12	39
G002186		0.052	0.06	0.65	27	0.11	3.59	34
G002187		0.073	0.10	0.59	40	0.13	3.94	46
G002188		0.070	0.08	0.59	35	0.24	3.99	42
G002189		0.076	0.09	0.72	43	0.14	5.22	49
G002190		0.082	0.08	0.63	47	0.12	4.43	52
G002191		0.093	0.14	0.86	53	1.85	8.66	57
G002192		0.154	0.31	1.08	92	0.49	9.45	81
G002193		0.117	0.17	0.87	61	0.17	6.19	48
G002194		0.140	0.12	1.10	91	0.28	7.68	108
G002195		0.034	0.03	0.14	17	<0.05	0.49	9
G002196		0.047	0.56	2.71	40	0.34	8.94	73
G002197		0.031	0.12	0.69	10	0.07	2.84	29
G002198		0.061	0.22	0.99	25	0.15	3.99	39
G002199		0.111	0.11	0.98	56	0.21	4.22	49
G002200		0.111	0.11	0.85	57	0.14	3.94	48
G002201		0.108	0.12	1.06	84	0.21	4.46	53
G002202		0.100	0.11	1.18	42	0.29	4.58	44
G002203		0.114	0.13	1.22	58	0.18	5.02	51
G002204		0.060	0.06	0.94	50	0.13	8.69	66
G002205		0.056	0.11	1.98	58	0.13	17.55	74
G002206		0.065	0.09	0.56	52	0.11	3.47	55
G002207		0.066	0.09	0.85	53	0.13	9.58	65
G002208		0.070	0.08	0.55	57	0.10	4.66	70
G002209		0.059	0.10	0.63	44	0.12	2.89	49

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002210		0.32	<0.005	0.29	1.21	3.6	<0.2	<10	80	0.16	0.20	0.19	0.14	16.25	5.8	24
G002211		0.42	0.006	0.20	2.29	4.0	<0.2	<10	110	0.29	0.20	0.93	0.21	35.30	12.9	46
G002212		0.52	<0.005	0.25	2.04	5.4	<0.2	<10	130	0.28	0.20	0.79	0.32	38.20	16.1	46
G002213		0.44	0.007	0.55	1.56	4.9	<0.2	<10	120	0.25	0.24	0.37	0.69	42.50	11.4	33
G002214		0.34	<0.005	0.18	0.39	1.1	<0.2	<10	30	0.05	0.10	0.07	0.07	13.75	1.7	7
G002215		0.32	<0.005	0.24	0.46	1.8	<0.2	<10	30	0.07	0.13	0.05	0.08	7.72	2.3	10
G002218		0.38	0.008	0.16	1.26	3.5	<0.2	<10	140	0.15	0.14	0.76	0.15	25.60	9.3	23
G002219		0.30	<0.005	0.19	0.90	2.7	<0.2	<10	100	0.15	0.11	0.61	0.27	27.00	13.0	18
G002220		0.40	<0.005	0.30	1.15	3.4	<0.2	<10	120	0.24	0.14	0.89	0.20	41.90	11.5	20
G002221		0.40	<0.005	0.17	0.78	2.5	<0.2	<10	70	0.10	0.12	0.34	0.18	15.65	3.3	16
G002222		0.28	<0.005	0.13	1.00	4.3	<0.2	<10	90	0.14	0.12	0.29	0.13	19.60	3.7	18
G002223		0.40	<0.005	0.18	1.01	3.3	<0.2	<10	100	0.15	0.13	0.25	0.18	27.20	4.2	19
G002224		0.36	<0.005	0.19	0.85	3.6	<0.2	<10	80	0.17	0.16	0.16	0.22	14.85	4.3	18
G002225		0.48	<0.005	0.15	1.64	3.4	<0.2	<10	130	0.16	0.10	0.27	0.13	20.00	10.5	36
G002226		0.46	<0.005	0.21	1.65	4.4	<0.2	<10	120	0.23	0.15	0.25	0.15	22.00	11.1	34
G002227		0.46	<0.005	0.13	1.07	4.4	<0.2	<10	70	0.13	0.12	0.21	0.12	19.25	4.1	20
G002228		0.38	0.005	0.19	1.07	4.6	<0.2	<10	70	0.15	0.16	0.22	0.14	20.90	4.7	21
G002229		0.40	<0.005	0.12	1.11	3.8	<0.2	<10	70	0.12	0.11	0.22	0.12	17.55	4.5	22
G002230		0.36	<0.005	0.10	1.34	4.5	<0.2	<10	60	0.13	0.13	0.18	0.08	19.45	5.6	27
G002231		0.32	0.016	0.13	1.24	4.5	<0.2	<10	70	0.15	0.13	0.19	0.09	17.45	5.4	26
G002232		0.46	0.006	0.09	1.37	3.5	<0.2	<10	70	0.15	0.12	0.21	0.10	22.40	5.6	29
G002233		0.36	<0.005	0.06	1.61	5.0	<0.2	<10	100	0.21	0.14	0.28	0.17	24.70	9.9	35
G002234		0.44	<0.005	0.08	2.66	8.3	<0.2	<10	170	0.57	0.13	1.12	0.11	29.50	14.1	48
G002235		0.44	<0.005	0.06	2.04	5.9	<0.2	<10	160	0.35	0.10	1.32	0.12	21.80	10.9	38
G002236		0.42	<0.005	0.06	2.28	5.4	<0.2	<10	140	0.41	0.11	1.28	0.14	26.50	14.5	56
G002237		0.32	<0.005	0.19	1.48	5.4	<0.2	<10	330	0.31	0.11	2.43	0.51	20.00	11.2	37
G002238		0.52	<0.005	0.16	1.63	7.5	<0.2	<10	340	0.32	0.13	1.39	0.38	23.80	11.9	34
G002239		0.36	<0.005	0.16	1.49	10.8	<0.2	<10	300	0.34	0.13	1.20	0.43	28.20	12.2	40
G002240		0.02	0.010	0.01	0.02	0.3	<0.2	<10	10	<0.05	0.01	0.01	0.01	1.63	0.2	1
G002241		0.38	0.006	0.18	2.52	9.3	<0.2	<10	340	0.49	0.29	0.44	0.25	69.10	23.9	38
G002242		0.50	<0.005	0.11	2.43	10.8	<0.2	<10	210	0.34	0.37	0.26	0.19	39.70	12.1	35
G002243		0.48	0.006	0.09	2.08	6.3	<0.2	<10	220	0.31	0.28	0.27	0.17	39.40	11.0	28
G002244		0.34	0.007	0.32	1.60	5.2	<0.2	<10	320	0.57	0.23	0.42	0.33	106.00	12.0	22
G002245		0.58	0.006	0.09	2.01	4.1	<0.2	<10	210	0.27	0.15	0.32	0.11	38.70	6.2	24
G002246		0.42	<0.005	0.31	1.70	5.5	<0.2	<10	230	0.31	0.14	0.32	0.16	56.90	5.5	24
G002247		0.36	<0.005	0.27	0.85	4.3	<0.2	<10	330	0.32	0.11	0.44	0.20	97.20	7.4	14
G002248		0.46	<0.005	0.04	1.19	3.9	<0.2	<10	120	0.19	0.14	0.12	0.10	30.60	4.1	14
G002249		0.28	0.006	0.06	2.12	10.4	<0.2	<10	180	0.46	0.20	0.12	0.24	63.60	5.9	25
G002250		0.34	0.005	0.09	2.10	10.3	<0.2	<10	180	0.40	0.21	0.12	0.25	62.30	5.5	25
G002251		0.26	0.007	0.13	1.28	5.2	<0.2	<10	140	0.38	0.14	0.09	0.27	43.80	3.5	15

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002210		0.84	16.7	1.88	4.76	0.07	<0.02	0.07	0.019	0.05	7.1	4.4	0.46	177	0.95
G002211		1.00	30.6	3.07	6.44	0.12	0.06	0.07	0.027	0.08	16.4	11.0	1.35	277	0.64
G002212		1.22	30.5	3.25	5.91	0.13	0.05	0.05	0.026	0.09	16.6	9.6	1.12	731	1.14
G002213		1.28	28.5	2.64	6.16	0.11	0.03	0.05	0.025	0.07	21.4	7.8	0.56	416	1.55
G002214		0.47	6.9	0.62	3.07	0.05	<0.02	0.03	0.006	0.03	6.3	0.9	0.05	40	0.52
G002215		0.64	14.2	0.97	3.31	<0.05	<0.02	0.05	0.011	0.03	3.2	1.1	0.06	61	0.85
G002218		0.61	17.5	2.03	3.80	0.08	0.04	0.06	0.015	0.05	12.0	5.9	0.45	469	1.09
G002219		0.68	17.3	1.46	3.34	0.08	0.05	0.10	0.013	0.04	12.2	4.3	0.28	774	1.06
G002220		0.72	20.2	1.82	4.04	0.13	0.05	0.10	0.020	0.05	27.7	5.6	0.35	623	1.57
G002221		0.64	10.9	1.35	3.12	0.05	0.02	0.07	0.010	0.05	7.2	2.8	0.21	125	0.90
G002222		0.70	12.3	1.49	3.60	0.06	0.03	0.10	0.012	0.05	8.6	3.6	0.24	106	0.86
G002223		0.76	16.1	1.53	3.58	0.07	0.03	0.12	0.014	0.04	11.5	3.6	0.24	133	0.60
G002224		0.94	16.3	1.40	4.51	0.06	0.02	0.32	0.016	0.04	6.4	3.7	0.21	301	1.01
G002225		0.95	15.6	2.48	4.40	0.06	0.02	0.05	0.014	0.08	8.7	8.4	0.62	400	0.67
G002226		1.37	19.1	2.52	5.88	0.08	0.03	0.08	0.019	0.07	9.3	11.4	0.61	279	0.97
G002227		0.85	13.3	1.76	4.54	0.07	0.02	0.05	0.015	0.04	8.3	5.3	0.34	105	0.66
G002228		0.82	14.4	1.93	4.11	0.08	0.02	0.08	0.021	0.04	9.0	5.4	0.35	112	0.74
G002229		0.72	11.9	1.73	4.31	0.06	0.02	0.06	0.015	0.04	7.6	5.4	0.35	112	0.55
G002230		0.94	13.3	2.11	5.17	0.08	0.03	0.05	0.019	0.04	8.8	7.4	0.43	110	0.45
G002231		0.93	14.3	1.96	4.91	0.06	0.03	0.06	0.017	0.05	7.9	6.3	0.36	95	0.53
G002232		1.03	13.4	1.96	5.14	0.08	0.02	0.12	0.016	0.05	9.8	7.6	0.48	134	0.51
G002233		1.08	16.3	2.47	6.16	0.09	0.03	0.05	0.020	0.06	10.8	10.6	0.58	342	0.73
G002234		2.03	23.2	3.64	6.06	0.13	0.06	0.04	0.020	0.24	12.2	18.0	0.88	465	0.44
G002235		1.11	18.8	2.66	5.13	0.08	0.05	0.06	0.020	0.08	9.1	13.7	0.73	352	0.76
G002236		1.31	23.7	2.82	6.78	0.12	0.06	0.04	0.023	0.07	11.1	17.7	1.03	357	0.49
G002237		1.50	34.6	2.04	4.85	0.12	0.09	0.12	0.022	0.11	8.4	11.6	0.78	617	0.85
G002238		1.63	25.4	2.49	5.22	0.12	0.07	0.07	0.022	0.10	9.7	12.1	0.72	543	0.99
G002239		2.94	24.1	2.45	4.95	0.12	0.07	0.10	0.025	0.11	11.8	11.4	0.68	498	1.12
G002240		<0.05	0.8	0.02	0.08	<0.05	0.02	<0.01	<0.005	<0.01	0.7	0.1	0.01	5	<0.05
G002241		5.78	22.2	3.65	9.11	0.18	0.07	0.13	0.042	0.18	27.9	15.0	0.62	2050	1.83
G002242		6.38	18.3	3.71	9.64	0.14	0.09	0.08	0.038	0.19	20.6	13.4	0.58	741	1.65
G002243		5.36	13.0	3.24	6.30	0.12	0.06	0.06	0.028	0.18	21.3	11.2	0.54	823	1.10
G002244		4.29	26.7	2.33	6.05	0.19	0.09	0.20	0.031	0.13	42.5	8.5	0.37	774	1.17
G002245		4.56	12.1	2.86	5.57	0.12	0.05	0.12	0.022	0.18	22.0	8.7	0.55	369	0.74
G002246		4.28	17.4	2.65	5.73	0.15	0.08	0.18	0.026	0.14	27.8	7.5	0.41	271	0.99
G002247		1.56	17.1	1.61	2.86	0.10	0.04	0.14	0.018	0.07	55.3	2.3	0.14	547	1.34
G002248		5.97	10.9	2.05	5.88	0.08	0.03	0.03	0.021	0.13	21.8	4.4	0.26	222	1.00
G002249		8.32	18.4	3.45	8.28	0.11	0.07	0.08	0.039	0.17	53.8	8.5	0.42	403	1.75
G002250		8.27	18.5	3.44	8.23	0.11	0.07	0.09	0.042	0.17	51.9	8.2	0.41	389	1.70
G002251		5.03	14.8	2.05	5.55	0.07	0.03	0.08	0.025	0.11	37.5	4.6	0.22	172	1.29

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01
G002210		0.55	13.7	690	10.4	9.8	<0.001	0.04	0.20	1.7	0.7	0.4	19.0	<0.01	0.04
G002211		1.08	34.3	650	15.3	11.4	<0.001	0.04	0.25	5.8	1.2	0.4	38.5	<0.01	0.06
G002212		0.99	34.8	780	14.8	14.8	<0.001	0.04	0.23	4.9	1.1	0.4	38.3	<0.01	0.06
G002213		1.04	22.5	940	32.3	12.9	<0.001	0.06	0.27	3.2	1.0	0.5	29.1	<0.01	0.09
G002214		0.39	3.3	310	6.2	4.1	<0.001	0.01	0.12	0.8	0.3	0.3	10.6	<0.01	0.03
G002215		0.44	5.3	280	6.7	3.3	<0.001	0.01	0.21	1.0	0.3	0.3	8.7	<0.01	0.02
G002218		0.82	15.0	670	9.3	6.6	<0.001	0.05	0.20	2.4	0.6	0.3	31.5	<0.01	0.03
G002219		0.74	12.5	830	8.4	6.8	<0.001	0.08	0.20	2.1	0.8	0.3	33.6	<0.01	0.03
G002220		0.93	15.5	760	11.7	8.3	<0.001	0.09	0.25	2.7	1.2	0.3	45.7	0.01	0.02
G002221		0.59	8.3	880	8.4	5.8	<0.001	0.09	0.16	1.1	0.6	0.3	22.9	<0.01	0.02
G002222		0.74	9.6	690	8.6	8.4	<0.001	0.07	0.20	1.8	0.6	0.3	23.0	<0.01	0.02
G002223		0.71	11.0	810	8.9	8.2	<0.001	0.07	0.20	1.7	0.9	0.3	22.2	<0.01	0.02
G002224		0.64	11.5	850	10.0	11.2	<0.001	0.06	0.23	1.3	0.6	0.4	17.8	<0.01	0.04
G002225		0.80	20.1	610	7.1	10.3	<0.001	0.03	0.15	2.5	0.4	0.3	15.4	<0.01	0.02
G002226		1.28	23.7	690	9.0	13.1	<0.001	0.05	0.23	3.2	0.8	0.4	22.6	<0.01	0.04
G002227		0.88	12.3	550	8.1	8.0	<0.001	0.05	0.21	2.1	0.8	0.4	19.7	<0.01	0.02
G002228		0.87	13.4	670	7.8	8.1	<0.001	0.05	0.19	2.1	0.7	0.3	19.8	<0.01	0.03
G002229		0.88	12.5	550	7.3	7.5	<0.001	0.05	0.16	2.1	0.7	0.3	19.2	<0.01	0.01
G002230		1.16	17.0	420	8.7	7.7	<0.001	0.03	0.17	2.7	0.6	0.4	19.2	0.01	0.02
G002231		1.17	16.0	550	8.8	7.6	<0.001	0.05	0.17	2.4	0.8	0.4	20.4	<0.01	0.03
G002232		1.09	17.5	440	7.9	9.1	<0.001	0.03	0.18	2.8	0.6	0.4	18.7	<0.01	0.02
G002233		1.30	21.9	470	8.2	11.6	<0.001	0.03	0.26	3.5	0.5	0.5	23.5	<0.01	0.03
G002234		2.17	31.2	630	10.0	28.3	<0.001	0.03	0.30	5.0	0.6	0.5	56.4	<0.01	0.03
G002235		1.53	22.2	730	7.9	13.0	<0.001	0.06	0.22	4.0	0.7	0.4	56.1	<0.01	0.02
G002236		2.61	40.1	830	8.6	12.3	<0.001	0.05	0.22	5.4	0.7	0.4	55.3	<0.01	0.03
G002237		1.58	28.3	860	6.7	23.4	<0.001	0.13	0.29	4.0	1.5	0.4	52.3	0.01	0.04
G002238		1.75	24.0	790	8.1	19.4	<0.001	0.09	0.26	4.4	1.1	0.4	43.6	<0.01	0.03
G002239		1.66	26.2	800	7.1	18.3	<0.001	0.07	0.32	4.2	1.2	0.4	41.7	<0.01	0.04
G002240		0.06	0.5	20	0.6	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	1.2	<0.01	<0.01
G002241		3.17	20.1	810	16.5	40.4	<0.001	0.05	0.77	6.1	1.2	1.0	42.2	<0.01	0.04
G002242		4.08	17.3	450	17.0	43.6	<0.001	0.01	0.89	5.3	0.7	1.1	27.4	<0.01	0.05
G002243		2.63	11.4	580	14.3	33.0	<0.001	0.02	0.63	3.9	0.6	0.8	20.8	<0.01	0.03
G002244		2.53	15.1	1020	11.3	33.9	<0.001	0.09	0.66	5.2	1.5	0.7	44.9	0.01	0.04
G002245		2.44	10.0	730	10.9	30.4	<0.001	0.04	0.44	3.9	0.6	0.7	22.2	<0.01	0.01
G002246		2.68	10.7	920	13.3	27.9	<0.001	0.08	0.53	3.6	0.9	0.6	30.6	0.01	0.02
G002247		0.93	8.0	1150	7.7	9.4	<0.001	0.12	0.54	2.1	1.1	0.3	37.3	0.01	0.03
G002248		2.33	6.4	360	9.6	26.6	<0.001	0.03	0.48	2.9	0.4	0.7	14.1	<0.01	0.01
G002249		3.64	10.8	470	14.1	33.2	<0.001	0.03	0.80	4.9	0.8	0.9	14.5	<0.01	0.03
G002250		3.63	10.6	480	14.3	35.1	<0.001	0.04	0.80	4.8	0.8	0.9	15.0	<0.01	0.02
G002251		2.03	7.9	410	7.8	21.9	<0.001	0.03	0.46	2.8	0.6	0.6	13.3	<0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	Ti	U	V	W	Y	Zn	Zr
		%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002210		0.046	0.09	0.80	36	0.10	2.93	41	<0.5
G002211		0.071	0.11	1.21	56	0.10	9.36	88	1.2
G002212		0.076	0.13	1.32	59	0.12	9.15	94	0.9
G002213		0.069	0.13	1.42	58	0.25	8.00	78	0.6
G002214		0.033	0.06	0.45	18	0.07	1.84	12	<0.5
G002215		0.048	0.07	0.33	32	0.11	1.33	18	<0.5
G002218		0.067	0.07	1.20	46	0.19	5.83	50	0.8
G002219		0.048	0.08	1.02	28	0.19	6.13	38	1.8
G002220		0.054	0.10	3.07	32	0.15	11.10	45	0.9
G002221		0.037	0.05	0.77	20	0.09	2.67	30	<0.5
G002222		0.054	0.09	0.85	24	0.36	3.69	29	0.6
G002223		0.048	0.08	1.04	23	0.10	5.07	29	<0.5
G002224		0.045	0.07	0.58	33	0.11	2.48	28	<0.5
G002225		0.095	0.09	0.56	60	0.11	3.98	59	<0.5
G002226		0.088	0.12	0.84	52	0.13	4.17	62	0.7
G002227		0.061	0.08	0.69	31	0.18	3.46	35	<0.5
G002228		0.056	0.08	0.78	35	0.13	4.12	37	<0.5
G002229		0.062	0.08	0.64	31	0.08	3.29	37	<0.5
G002230		0.078	0.08	0.68	45	0.11	3.01	42	0.6
G002231		0.068	0.08	0.74	38	0.18	2.81	37	0.7
G002232		0.081	0.08	0.67	38	0.11	4.31	44	0.5
G002233		0.098	0.10	0.70	57	0.18	4.94	55	0.7
G002234		0.126	0.20	0.73	63	0.48	7.31	73	1.4
G002235		0.093	0.11	0.68	57	0.32	5.97	57	1.3
G002236		0.103	0.13	0.71	53	0.17	5.72	60	1.6
G002237		0.074	0.15	1.12	53	0.13	7.20	72	2.3
G002238		0.102	0.14	1.17	63	0.24	7.44	84	1.8
G002239		0.098	0.17	1.33	62	0.36	8.23	84	1.6
G002240		<0.005	<0.02	0.10	1	<0.05	0.73	3	<0.5
G002241		0.142	0.50	4.30	75	0.25	13.00	72	1.3
G002242		0.180	0.54	2.39	82	0.28	7.16	71	2.2
G002243		0.152	0.42	2.81	63	0.23	7.28	69	1.2
G002244		0.086	0.36	5.98	43	0.19	18.20	50	1.2
G002245		0.143	0.36	2.13	52	0.13	7.57	61	1.0
G002246		0.103	0.36	3.42	45	0.19	10.25	48	1.4
G002247		0.037	0.14	3.94	32	0.13	17.00	27	0.9
G002248		0.113	0.38	1.97	45	0.15	5.64	39	0.8
G002249		0.135	0.52	5.03	64	0.20	11.75	63	2.2
G002250		0.133	0.51	5.11	64	0.24	11.30	62	2.2
G002251		0.085	0.29	3.59	37	0.15	6.84	34	0.9

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002252		0.50	<0.005	0.22	2.12	5.3	<0.2	<10	310	0.43	0.17	0.39	0.18	74.90	10.2	20
G002253		0.46	0.005	0.07	1.29	6.5	<0.2	<10	120	0.22	0.17	0.23	0.16	16.60	4.6	17
G002254		0.36	0.005	0.20	1.62	5.2	<0.2	<10	220	0.27	0.24	0.37	0.19	34.30	10.6	21
G002255		0.42	0.008	0.04	1.35	3.0	<0.2	<10	90	0.11	0.09	0.31	0.09	15.85	5.9	21
G002256		0.32	0.013	0.06	1.33	2.8	<0.2	<10	90	0.16	0.09	0.30	0.10	14.25	5.5	21
G002257		0.34	<0.005	0.07	2.17	3.2	<0.2	<10	200	0.25	0.18	1.03	0.18	27.70	13.6	67
G002258		0.34	0.006	0.25	2.22	3.0	<0.2	<10	190	0.12	0.19	1.26	0.66	11.05	18.8	51
G002259		0.34	0.005	0.08	2.32	2.3	<0.2	<10	100	0.18	0.08	0.77	0.26	9.86	17.7	40
G002260		0.40	0.006	0.29	2.41	2.3	<0.2	<10	230	0.18	0.11	1.34	0.49	11.00	17.8	82
G002261		0.36	0.005	0.22	1.42	4.8	<0.2	<10	140	0.26	0.14	1.55	0.21	26.00	11.8	24
G002262		0.32	0.005	0.20	1.48	4.7	<0.2	<10	170	0.23	0.13	1.25	0.43	26.90	12.4	23
G002263		0.42	<0.005	0.23	1.73	3.7	<0.2	<10	150	0.24	0.19	1.00	0.45	24.50	12.8	34
G002264		0.24	<0.005	0.20	1.61	4.3	<0.2	<10	100	0.11	0.23	0.52	0.13	10.70	10.6	34
G002265		0.30	0.032	0.25	1.32	3.8	<0.2	<10	210	0.28	0.19	2.71	0.56	19.95	11.6	23
G002266		0.34	0.014	0.35	1.21	4.6	<0.2	<10	230	0.24	0.13	2.22	0.71	44.00	18.9	22
G002267		0.32	0.008	0.18	1.82	3.5	<0.2	<10	120	0.21	0.13	1.16	0.23	25.50	12.6	34
G002268		0.52	0.008	0.21	1.70	3.9	<0.2	<10	110	0.21	0.13	0.98	0.33	35.80	14.0	44
G002269		0.42	0.007	0.30	1.32	3.4	<0.2	<10	110	0.13	0.17	0.79	0.26	18.80	8.3	28
G002270		0.32	<0.005	0.48	1.11	3.1	<0.2	<10	200	0.23	0.16	0.58	0.44	45.70	6.6	18
G002271		0.32	0.006	0.40	1.26	3.3	<0.2	<10	200	0.20	0.17	0.44	0.35	42.60	7.7	21
G002272		0.36	<0.005	0.36	1.03	2.9	<0.2	<10	120	0.19	0.12	2.40	0.40	44.50	8.4	16
G002273		0.34	<0.005	0.28	1.06	3.2	<0.2	<10	80	0.14	0.15	0.76	0.23	24.90	6.7	22
G002274		0.32	0.007	0.51	0.83	1.8	<0.2	<10	160	0.26	0.08	0.85	0.38	52.00	4.6	15
G002275		0.34	0.006	0.13	0.26	0.6	<0.2	<10	40	0.08	0.10	0.16	0.13	7.32	1.4	5
G002276		0.42	0.007	0.22	0.70	1.8	<0.2	<10	120	0.10	0.08	0.51	0.24	26.90	4.9	13
G002277		0.24	0.007	0.20	1.13	2.8	<0.2	<10	150	0.14	0.13	0.48	0.27	29.90	12.2	21
G002278		0.36	0.019	0.27	1.02	3.2	<0.2	<10	130	0.28	0.08	0.44	0.29	30.20	5.0	15
G002279		0.54	0.005	0.14	1.10	3.1	<0.2	<10	80	0.12	0.12	0.26	0.12	16.05	4.0	21
G002280		0.04	0.021	<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.02	1.06	0.1	<1
G002281		0.32	0.014	0.14	0.92	2.8	<0.2	<10	90	0.12	0.10	0.31	0.12	19.70	3.4	16
G002282		0.40	0.005	0.09	1.00	2.6	<0.2	<10	60	0.08	0.11	0.24	0.09	11.95	4.0	20
G002283		0.40	0.005	0.11	1.12	3.9	<0.2	<10	70	0.13	0.12	0.28	0.12	18.40	5.7	24
G002284		0.46	<0.005	0.12	1.32	3.9	<0.2	<10	80	0.16	0.12	0.23	0.14	23.30	6.9	29
G002285		0.40	0.007	0.13	1.24	4.1	<0.2	<10	80	0.15	0.13	0.23	0.13	23.40	6.3	26
G002286		0.50	<0.005	0.24	1.21	5.8	<0.2	<10	80	0.15	0.14	0.23	0.12	19.60	8.7	28
G002287		0.36	<0.005	0.26	0.89	6.7	<0.2	<10	100	0.25	0.12	0.29	0.20	33.90	13.3	18
G002288		0.44	<0.005	0.10	1.49	5.2	<0.2	<10	100	0.18	0.13	0.30	0.14	17.60	10.2	32
G002289		0.34	<0.005	0.07	0.89	3.2	<0.2	<10	100	0.16	0.09	0.34	0.13	15.35	5.3	20
G002290		0.28	<0.005	0.08	0.87	3.1	<0.2	<10	100	0.15	0.09	0.37	0.14	16.35	5.2	20
G002291		0.42	<0.005	0.09	1.87	5.8	<0.2	<10	170	0.51	0.11	1.37	0.48	34.50	17.2	33

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002252		9.24	15.1	3.72	8.79	0.15	0.10	0.08	0.041	0.36	60.0	14.0	0.61	1010	1.26
G002253		2.15	12.2	2.75	7.13	0.05	0.04	0.02	0.022	0.11	9.1	5.7	0.29	266	1.36
G002254		3.68	19.6	3.05	6.96	0.08	0.04	0.04	0.031	0.21	19.9	11.4	0.52	1380	1.24
G002255		0.90	7.5	1.83	4.74	0.06	0.03	0.03	0.016	0.06	8.8	7.9	0.48	197	0.46
G002256		0.91	8.1	1.77	4.78	0.05	0.03	0.04	0.014	0.06	7.9	7.2	0.46	173	0.48
G002257		1.21	27.4	2.86	6.22	0.10	0.05	0.03	0.019	0.25	13.6	11.7	1.35	707	0.69
G002258		0.79	51.7	3.07	5.59	0.09	0.03	0.07	0.013	0.21	6.2	9.6	1.61	839	0.84
G002259		0.71	41.4	3.26	6.19	0.07	0.02	0.05	0.012	0.16	4.3	10.5	1.75	471	0.93
G002260		0.67	89.8	3.20	5.93	0.08	0.02	0.07	0.016	0.09	5.2	9.2	1.71	1010	0.70
G002261		0.68	32.2	2.13	4.05	0.06	0.04	0.06	0.020	0.04	12.9	6.6	0.47	622	0.95
G002262		0.48	32.8	2.31	3.99	0.08	0.06	0.04	0.019	0.04	14.3	7.8	0.63	841	0.83
G002263		0.58	38.1	2.48	4.89	0.07	0.05	0.04	0.022	0.04	12.8	7.4	0.94	644	0.82
G002264		0.69	19.0	2.38	5.37	0.06	0.02	0.05	0.015	0.05	5.7	6.8	0.95	447	1.07
G002265		0.59	68.8	1.94	3.24	0.08	0.06	0.06	0.015	0.04	12.6	4.6	0.67	845	0.83
G002266		0.51	53.5	2.32	3.13	0.10	0.06	0.08	0.016	0.04	27.1	3.6	0.44	2680	1.87
G002267		0.73	28.6	2.72	4.81	0.07	0.04	0.05	0.017	0.06	14.4	6.8	1.12	514	0.84
G002268		0.94	36.6	2.59	4.66	0.11	0.05	0.03	0.017	0.09	23.2	7.0	1.02	610	1.00
G002269		0.72	19.2	2.35	4.78	0.05	0.03	0.04	0.019	0.07	10.3	6.3	0.50	294	0.95
G002270		0.75	26.0	1.98	4.31	0.07	0.02	0.12	0.017	0.05	28.5	4.7	0.26	278	1.13
G002271		0.83	26.1	2.19	5.04	0.08	0.02	0.08	0.018	0.05	26.5	6.1	0.31	292	1.16
G002272		0.53	34.9	1.49	2.68	0.10	0.07	0.10	0.017	0.04	35.8	4.3	0.31	716	0.90
G002273		0.74	20.0	1.98	4.36	0.06	0.03	0.06	0.017	0.05	17.6	5.8	0.36	195	0.87
G002274		0.70	25.0	1.13	2.36	0.10	0.04	0.13	0.012	0.04	45.2	2.5	0.19	210	0.79
G002275		0.41	5.9	0.54	1.63	<0.05	<0.02	0.04	0.005	0.03	4.2	0.5	0.04	63	0.40
G002276		0.77	14.1	1.10	2.19	0.05	<0.02	0.13	0.010	0.05	15.0	2.6	0.19	237	0.82
G002277		0.79	15.1	1.59	4.14	0.06	0.02	0.09	0.015	0.05	15.4	5.9	0.36	1040	0.97
G002278		0.48	21.8	1.76	2.47	0.06	0.02	0.15	0.017	0.03	16.1	2.6	0.17	156	0.95
G002279		0.81	12.8	1.63	4.82	0.05	<0.02	0.06	0.015	0.04	8.5	5.1	0.35	127	0.59
G002280		<0.05	0.7	0.02	0.06	<0.05	<0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05
G002281		0.65	13.3	1.55	3.45	0.05	<0.02	0.09	0.013	0.04	10.3	3.2	0.22	103	0.96
G002282		0.75	9.1	1.59	4.43	<0.05	<0.02	0.04	0.012	0.04	6.4	5.1	0.38	115	0.56
G002283		0.84	12.3	1.75	5.07	0.06	0.02	0.06	0.012	0.04	9.9	6.3	0.42	139	0.73
G002284		0.98	14.9	1.89	5.59	0.07	0.02	0.05	0.016	0.04	12.5	7.5	0.48	144	0.52
G002285		0.71	15.7	1.98	5.29	0.07	0.03	0.05	0.015	0.04	12.7	6.7	0.43	134	0.56
G002286		0.88	15.9	2.15	5.17	0.06	0.02	0.05	0.014	0.05	10.1	7.1	0.46	261	1.19
G002287		0.55	22.0	2.63	3.04	0.09	0.02	0.10	0.015	0.04	16.7	3.5	0.21	676	2.50
G002288		1.30	12.6	2.25	6.07	0.07	0.02	0.08	0.016	0.06	9.4	9.5	0.58	307	1.10
G002289		1.06	13.8	1.51	3.71	0.06	<0.02	0.08	0.011	0.04	8.1	4.4	0.27	155	0.75
G002290		1.00	14.2	1.48	3.61	0.06	0.02	0.08	0.010	0.04	8.6	4.3	0.26	153	0.79
G002291		1.65	28.3	2.62	5.27	0.10	0.05	0.06	0.018	0.08	16.4	16.5	0.59	941	0.58

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002252		5.15	10.8	900	12.5	70.2	<0.001	0.03	0.89	5.8	0.8	1.1	25.2	<0.01	0.02
G002253		2.48	9.0	370	9.8	18.3	<0.001	0.02	0.54	2.5	0.4	0.8	19.2	<0.01	0.03
G002254		2.82	16.7	1210	32.8	38.2	<0.001	0.02	0.43	3.8	0.4	0.8	26.5	<0.01	0.02
G002255		1.10	12.6	490	4.8	10.7	<0.001	0.03	0.17	2.9	0.4	0.4	18.2	<0.01	<0.01
G002256		1.08	12.1	510	5.0	10.2	<0.001	0.04	0.17	2.7	0.5	0.4	18.6	<0.01	<0.01
G002257		1.68	28.2	720	8.3	25.9	0.001	0.06	0.18	4.6	0.6	0.5	35.3	<0.01	0.03
G002258		0.63	24.8	610	10.7	21.5	<0.001	0.10	0.23	4.0	0.9	0.2	27.5	<0.01	0.06
G002259		0.76	23.0	510	4.3	19.0	<0.001	0.06	0.24	2.9	0.6	0.2	18.5	<0.01	0.03
G002260		0.56	32.1	820	9.5	11.5	<0.001	0.08	0.21	4.5	0.7	0.2	30.7	<0.01	0.04
G002261		0.84	15.6	820	6.6	5.4	<0.001	0.10	0.26	3.3	1.2	0.3	45.6	<0.01	0.03
G002262		0.89	19.9	620	6.5	6.4	<0.001	0.07	0.28	3.9	1.2	0.3	40.6	<0.01	0.04
G002263		0.73	23.9	730	7.6	6.1	<0.001	0.07	0.26	4.1	1.1	0.3	37.1	<0.01	0.07
G002264		0.68	19.6	550	5.9	9.0	<0.001	0.05	0.18	3.1	0.6	0.3	26.5	<0.01	0.07
G002265		0.58	29.5	900	4.8	7.1	0.002	0.16	0.40	2.7	1.6	0.2	85.1	0.01	0.13
G002266		0.57	31.9	1380	6.6	6.5	0.001	0.17	0.43	2.3	1.9	0.2	86.0	0.01	0.07
G002267		0.76	27.9	860	9.8	9.1	0.001	0.08	0.23	3.3	0.9	0.3	42.8	<0.01	0.04
G002268		0.83	35.4	690	7.9	12.8	<0.001	0.05	0.23	3.8	1.0	0.3	41.4	<0.01	0.03
G002269		1.14	20.0	570	9.7	8.3	<0.001	0.06	0.19	2.9	0.7	0.4	35.8	<0.01	0.05
G002270		0.61	15.9	1100	9.7	6.8	<0.001	0.10	0.24	1.4	1.0	0.3	34.8	<0.01	0.04
G002271		0.66	16.9	850	9.8	7.3	<0.001	0.07	0.20	1.6	1.0	0.3	27.9	<0.01	0.05
G002272		0.65	17.4	890	7.1	4.9	0.001	0.16	0.32	2.1	1.9	0.2	64.1	0.01	0.03
G002273		0.83	17.6	680	9.1	8.0	<0.001	0.07	0.21	2.2	0.9	0.3	28.7	<0.01	0.03
G002274		0.53	15.5	1140	4.0	5.3	0.001	0.16	0.23	1.8	1.6	0.2	41.1	0.01	0.01
G002275		0.16	2.7	480	4.0	5.0	<0.001	0.04	0.11	0.5	0.4	0.2	10.8	<0.01	0.01
G002276		0.48	9.6	990	5.1	7.0	<0.001	0.11	0.21	1.3	0.8	0.2	28.6	<0.01	0.01
G002277		0.72	14.6	800	7.5	8.4	<0.001	0.08	0.23	2.2	0.9	0.3	27.5	<0.01	0.02
G002278		0.59	10.6	1120	5.1	3.4	<0.001	0.15	0.22	1.6	1.2	0.2	26.0	<0.01	0.03
G002279		0.73	12.2	590	7.5	6.1	<0.001	0.06	0.19	1.8	0.7	0.3	18.6	<0.01	0.02
G002280		<0.05	0.4	10	0.7	0.1	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01
G002281		0.63	10.6	750	6.3	5.2	<0.001	0.10	0.20	1.4	0.9	0.3	21.2	<0.01	0.01
G002282		0.75	11.8	440	6.6	6.1	<0.001	0.04	0.13	1.8	0.5	0.3	16.2	<0.01	0.02
G002283		1.04	18.1	550	7.3	8.6	<0.001	0.05	0.18	2.6	0.7	0.4	20.4	<0.01	0.03
G002284		1.05	23.6	550	8.2	9.2	<0.001	0.04	0.17	3.1	0.8	0.4	18.9	<0.01	0.03
G002285		1.08	20.8	530	7.7	8.4	<0.001	0.05	0.22	2.8	0.9	0.4	20.9	<0.01	0.04
G002286		0.89	20.4	860	6.8	8.9	<0.001	0.05	0.23	2.4	0.8	0.4	18.7	<0.01	0.04
G002287		0.67	15.5	1410	6.3	5.5	<0.001	0.12	0.29	1.9	1.3	0.2	25.1	<0.01	0.07
G002288		1.15	21.2	650	7.3	10.6	<0.001	0.04	0.22	3.5	0.7	0.4	23.5	<0.01	0.03
G002289		0.84	12.1	680	5.1	8.0	<0.001	0.07	0.21	2.2	0.8	0.3	25.6	<0.01	0.04
G002290		0.84	12.1	730	4.7	7.6	<0.001	0.08	0.20	2.1	0.8	0.3	27.9	<0.01	0.03
G002291		1.45	32.2	760	6.6	18.9	0.001	0.08	0.27	4.1	1.2	0.3	86.8	0.01	0.04

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002252		0.182	0.71	4.41	66	0.21	18.25	69
G002253		0.126	0.20	0.70	64	0.15	2.55	40
G002254		0.128	0.22	0.82	60	0.20	7.67	55
G002255		0.107	0.09	0.79	42	0.33	3.83	43
G002256		0.099	0.09	0.82	38	0.12	3.42	41
G002257		0.135	0.18	1.52	68	0.15	6.50	71
G002258		0.086	0.13	0.34	76	0.13	7.82	100
G002259		0.102	0.10	0.34	77	0.10	2.53	57
G002260		0.083	0.11	0.39	95	0.10	5.56	88
G002261		0.055	0.07	1.00	43	0.11	9.36	41
G002262		0.068	0.06	1.18	46	0.32	12.10	64
G002263		0.057	0.06	0.71	48	0.19	9.10	70
G002264		0.065	0.07	0.42	54	0.11	3.09	62
G002265		0.040	0.08	0.82	33	0.08	11.45	59
G002266		0.035	0.10	1.52	33	0.09	20.00	62
G002267		0.059	0.09	0.87	46	0.12	8.71	73
G002268		0.064	0.10	1.13	46	0.09	13.10	72
G002269		0.061	0.09	0.74	47	0.12	3.78	62
G002270		0.033	0.09	1.19	34	0.10	8.70	40
G002271		0.039	0.09	1.17	39	0.10	8.41	46
G002272		0.032	0.07	2.01	24	0.07	17.20	43
G002273		0.044	0.07	1.04	39	0.10	7.24	53
G002274		0.029	0.08	1.34	16	0.09	20.60	30
G002275		0.023	0.05	0.57	14	<0.05	1.47	14
G002276		0.033	0.06	0.97	18	0.07	6.59	30
G002277		0.056	0.09	0.90	35	0.11	6.78	43
G002278		0.038	0.07	1.39	26	0.15	7.01	28
G002279		0.058	0.08	0.62	28	0.09	3.54	40
G002280		<0.005	<0.02	0.08	<1	<0.05	0.58	4
G002281		0.044	0.06	0.73	20	0.09	4.72	29
G002282		0.065	0.07	0.48	31	0.26	2.76	39
G002283		0.073	0.09	0.58	39	0.13	4.59	44
G002284		0.077	0.10	0.62	38	0.11	5.58	49
G002285		0.068	0.09	0.69	38	0.14	5.69	45
G002286		0.064	0.10	0.70	56	0.15	4.75	46
G002287		0.034	0.08	1.21	60	0.12	8.18	29
G002288		0.087	0.10	0.55	55	0.14	4.33	56
G002289		0.048	0.07	0.64	24	0.09	3.94	30
G002290		0.045	0.07	0.67	24	0.11	4.35	30
G002291		0.080	0.18	1.05	52	0.24	13.35	90

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002292		0.56	0.005	0.08	1.60	7.1	<0.2	<10	150	0.34	0.10	0.85	0.31	26.10	16.7	31
G002293		0.40	<0.005	0.08	1.66	8.6	<0.2	<10	160	0.32	0.11	0.63	0.34	25.80	21.3	42
G002294		0.44	<0.005	0.06	1.33	5.1	<0.2	<10	100	0.18	0.10	0.35	0.11	15.55	8.0	29
G002295		0.36	<0.005	0.12	1.63	4.8	<0.2	<10	150	0.23	0.21	0.20	0.14	20.10	13.2	23
G002296		0.42	0.007	0.11	1.32	4.3	<0.2	<10	140	0.25	0.16	0.21	0.20	34.40	5.5	21
G002297		0.58	0.007	0.09	1.92	6.3	<0.2	<10	170	0.40	0.19	0.20	0.14	46.20	14.7	25
G002298		0.40	<0.005	0.16	2.09	8.8	<0.2	<10	310	0.49	0.23	0.32	0.18	95.40	41.4	27
G002299		0.44	<0.005	0.08	1.66	6.1	<0.2	<10	140	0.32	0.22	0.15	0.16	42.30	6.5	22
G002300		0.42	0.006	0.07	2.29	7.0	<0.2	<10	150	0.35	0.23	0.23	0.18	38.00	13.4	28
G002301		0.64	<0.005	0.12	2.14	6.8	<0.2	<10	270	0.46	0.22	0.34	0.13	92.40	10.7	25
G002302		0.48	0.006	0.04	2.03	10.4	<0.2	<10	240	0.35	0.29	0.32	0.13	44.30	12.3	23
G002303		0.38	<0.005	0.14	1.40	4.2	<0.2	<10	140	0.31	0.21	0.11	0.09	94.00	3.8	16
G002304		0.34	<0.005	0.09	1.04	4.5	<0.2	<10	130	0.17	0.18	0.12	0.09	14.25	4.5	11
G002305		0.52	<0.005	0.09	1.27	5.1	<0.2	<10	160	0.25	0.18	0.22	0.15	21.70	5.9	16
G002306		0.58	<0.005	0.06	0.93	3.8	<0.2	<10	150	0.17	0.15	0.10	0.11	18.35	3.8	10
G002307		0.38	<0.005	0.06	1.17	5.8	<0.2	<10	160	0.22	0.18	0.15	0.16	20.60	7.0	15
G002308		0.38	0.006	0.18	2.56	4.5	<0.2	<10	180	0.27	0.12	0.62	0.20	16.30	19.9	61
G002309		0.36	0.010	0.18	2.44	4.2	<0.2	<10	170	0.26	0.12	0.54	0.21	16.70	18.7	59
G002310		0.34	0.006	0.18	2.41	4.2	<0.2	<10	170	0.29	0.11	0.55	0.21	17.75	19.1	58
G002311		0.30	0.005	0.15	1.83	2.9	<0.2	<10	160	0.26	0.09	1.99	0.49	12.85	15.4	37
G002312		0.38	0.006	0.14	2.29	3.0	<0.2	<10	150	0.25	0.11	1.36	0.28	15.55	18.4	43
G002313		0.28	0.010	0.11	1.86	3.8	<0.2	<10	160	0.20	0.10	1.90	0.56	15.45	17.7	32
G002314		0.36	0.007	0.25	2.09	5.4	<0.2	<10	160	0.26	0.14	1.67	0.35	17.40	20.8	42
G002315		0.30	0.005	0.20	1.86	3.4	<0.2	<10	210	0.22	0.11	1.20	0.23	12.75	17.8	46
G002316		0.26	0.006	0.26	1.32	4.8	<0.2	<10	300	0.34	0.15	2.05	1.06	23.50	13.5	47
G002317		0.38	0.008	0.34	1.87	4.5	<0.2	<10	150	0.33	0.19	1.08	0.20	31.90	13.7	40
G002318		0.28	0.009	0.59	1.77	6.3	<0.2	<10	230	0.26	0.23	0.81	0.63	34.90	15.9	32
G002319		0.32	0.010	0.54	1.41	7.1	<0.2	<10	150	0.23	0.24	0.92	0.74	32.10	20.5	41
G002320		0.04	<0.005	0.03	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.01	0.94	0.1	<1
G002321		0.28	0.007	0.56	1.46	6.7	<0.2	<10	70	0.20	0.33	0.52	0.79	25.30	12.5	46
G002322		0.54	0.008	0.27	2.50	3.7	<0.2	<10	80	0.22	0.35	0.54	0.12	10.35	20.3	66
G002323		0.44	0.009	0.25	1.43	7.1	<0.2	<10	110	0.23	0.17	1.32	0.27	25.40	11.5	34
G002324		0.26	0.011	0.38	1.56	5.5	<0.2	<10	170	0.30	0.19	1.93	0.86	34.20	19.9	58
G002325		0.40	0.007	1.17	1.14	3.5	<0.2	<10	140	0.45	0.15	1.06	0.61	51.80	3.8	16
G002326		0.42	<0.005	0.46	1.07	4.2	<0.2	<10	70	0.19	0.24	0.29	0.22	20.90	9.1	24
G002327		0.36	<0.005	0.33	1.36	8.2	<0.2	<10	60	0.22	0.24	0.14	0.17	15.80	6.0	21
G002328		0.48	<0.005	0.34	1.26	6.0	<0.2	<10	90	0.29	0.22	0.14	0.21	37.30	10.9	21
G002329		0.50	<0.005	0.15	2.40	11.1	<0.2	<10	100	0.55	0.21	0.18	0.19	27.30	12.8	36
G002330		0.48	<0.005	0.15	2.41	11.0	<0.2	<10	100	0.53	0.21	0.16	0.21	26.00	11.6	36
G002331		0.42	<0.005	0.22	2.35	13.8	<0.2	<10	80	0.46	0.23	0.18	0.18	18.60	8.3	38

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002292		1.54	18.6	2.48	5.21	0.08	0.04	0.06	0.017	0.06	12.5	12.6	0.57	988	0.57
G002293		2.16	18.6	2.69	6.05	0.09	0.03	0.04	0.018	0.08	12.2	14.6	0.73	1090	0.72
G002294		1.41	9.5	1.98	5.43	0.06	0.02	0.03	0.014	0.06	8.1	9.8	0.55	224	0.63
G002295		4.55	15.9	2.59	8.86	0.07	0.05	0.05	0.023	0.16	10.4	8.1	0.41	1140	1.32
G002296		2.91	14.1	2.04	6.66	0.08	0.05	0.07	0.019	0.11	19.0	6.2	0.34	243	1.00
G002297		5.46	21.9	3.14	8.01	0.11	0.07	0.05	0.033	0.14	27.2	10.9	0.49	759	1.29
G002298		4.77	26.8	3.59	9.14	0.15	0.07	0.08	0.035	0.15	47.8	11.0	0.50	3620	2.31
G002299		4.20	16.1	2.52	8.16	0.09	0.06	0.04	0.026	0.11	25.6	8.7	0.35	314	1.13
G002300		5.91	15.9	3.68	9.32	0.11	0.12	0.06	0.038	0.19	22.1	15.4	0.61	808	1.21
G002301		7.87	16.4	3.37	8.92	0.19	0.10	0.07	0.035	0.24	55.7	14.5	0.62	592	1.17
G002302		11.70	11.3	3.75	9.44	0.15	0.13	0.03	0.035	0.35	32.6	16.5	0.66	987	1.41
G002303		3.43	14.4	2.00	6.78	0.14	0.07	0.09	0.025	0.07	81.2	7.2	0.26	178	0.80
G002304		9.38	9.1	2.42	7.98	0.06	0.06	0.02	0.019	0.22	9.3	5.8	0.29	297	1.26
G002305		7.43	9.8	2.29	6.42	0.07	0.04	0.04	0.026	0.14	16.1	11.0	0.35	539	1.13
G002306		7.82	7.6	2.29	7.88	0.05	0.03	0.03	0.018	0.13	8.7	5.2	0.24	271	1.04
G002307		2.57	10.5	2.50	7.78	0.06	0.04	0.03	0.022	0.13	14.3	7.6	0.27	781	1.24
G002308		0.70	38.9	3.73	7.92	0.09	0.04	0.05	0.021	0.10	8.1	12.7	1.74	640	0.84
G002309		0.66	37.9	3.51	7.38	0.08	0.04	0.05	0.019	0.09	8.3	11.9	1.63	573	0.78
G002310		0.67	40.8	3.43	7.44	0.08	0.04	0.05	0.020	0.08	8.8	12.2	1.59	583	0.80
G002311		0.58	48.1	2.53	5.17	0.09	0.06	0.06	0.013	0.13	6.8	8.9	1.27	719	0.61
G002312		0.72	37.5	3.32	6.72	0.11	0.06	0.04	0.018	0.21	7.6	11.2	1.65	816	0.58
G002313		0.76	40.2	2.83	5.60	0.09	0.07	0.04	0.016	0.12	7.4	9.6	1.22	942	0.72
G002314		0.73	47.8	3.33	6.18	0.10	0.07	0.04	0.018	0.14	9.7	11.6	1.40	898	0.90
G002315		0.53	37.3	2.85	5.75	0.08	0.05	0.04	0.016	0.05	6.4	10.6	1.40	905	0.94
G002316		0.44	42.5	2.09	4.06	0.07	0.07	0.06	0.018	0.04	11.7	7.5	0.72	1760	1.68
G002317		0.60	34.9	2.68	5.73	0.09	0.09	0.05	0.022	0.04	16.0	11.8	1.10	499	1.40
G002318		0.89	37.0	2.78	5.89	0.09	0.05	0.07	0.026	0.05	18.5	11.9	0.67	723	2.80
G002319		0.74	39.1	2.87	5.38	0.09	0.06	0.08	0.025	0.04	16.2	8.1	0.74	1060	3.20
G002320		<0.05	0.8	0.02	<0.05	<0.05	<0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05
G002321		0.68	27.1	2.86	7.06	0.07	0.04	0.08	0.025	0.05	15.0	9.1	0.81	727	3.72
G002322		0.89	44.9	3.21	6.84	0.07	0.03	0.04	0.015	0.05	5.0	12.3	2.01	499	0.99
G002323		0.70	36.8	2.97	5.04	0.10	0.08	0.06	0.022	0.05	12.8	6.5	0.91	502	1.92
G002324		0.96	58.6	2.57	4.98	0.11	0.08	0.07	0.020	0.05	19.4	7.2	1.06	1030	1.98
G002325		0.62	61.7	1.60	3.94	0.16	0.04	0.10	0.022	0.03	63.8	3.6	0.18	79	1.01
G002326		0.99	25.2	2.43	5.55	0.07	0.02	0.03	0.017	0.09	11.5	6.9	0.45	216	1.20
G002327		1.05	19.5	2.77	8.84	0.05	0.03	0.04	0.020	0.04	7.9	6.3	0.23	140	2.00
G002328		0.88	37.5	2.71	5.51	0.06	0.02	0.05	0.020	0.04	14.5	8.0	0.30	349	1.42
G002329		1.27	26.5	3.84	8.68	0.07	0.03	0.06	0.034	0.05	13.5	16.5	0.48	355	2.01
G002330		1.25	25.4	3.89	8.80	0.07	0.03	0.05	0.033	0.05	13.0	16.4	0.48	338	1.92
G002331		1.28	22.1	4.92	11.05	0.07	0.03	0.08	0.038	0.05	8.7	18.1	0.39	267	2.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002292		1.32	26.1	700	7.0	17.0	<0.001	0.05	0.22	4.1	0.8	0.3	53.6	<0.01	0.03
G002293		1.46	34.1	900	5.9	17.2	<0.001	0.04	0.18	4.0	0.7	0.4	40.5	<0.01	0.04
G002294		1.30	18.3	540	6.1	13.6	<0.001	0.03	0.15	3.2	0.6	0.4	27.9	<0.01	0.02
G002295		3.20	12.6	350	10.3	62.3	<0.001	0.02	0.34	4.3	0.4	0.9	18.9	<0.01	0.04
G002296		2.80	11.8	440	7.5	26.1	<0.001	0.03	0.36	4.1	0.6	0.8	21.1	<0.01	0.04
G002297		3.35	14.2	560	11.5	38.7	<0.001	0.02	0.47	5.8	0.7	0.9	19.3	<0.01	0.04
G002298		3.22	18.0	690	15.5	35.5	<0.001	0.04	0.57	7.2	1.1	0.9	32.7	<0.01	0.05
G002299		2.83	12.2	290	9.4	34.0	<0.001	0.02	0.38	4.5	0.6	0.8	18.8	<0.01	0.04
G002300		4.32	15.7	540	13.7	49.7	<0.001	0.01	0.61	6.6	0.7	1.1	19.7	<0.01	0.03
G002301		4.21	15.6	770	12.9	55.3	<0.001	0.03	0.97	7.8	1.0	1.0	30.1	<0.01	0.03
G002302		5.86	13.8	600	15.6	80.9	<0.001	0.02	1.06	6.0	0.6	1.2	29.4	<0.01	0.03
G002303		3.18	8.2	280	9.8	18.3	<0.001	0.02	0.44	4.4	0.8	0.8	17.0	<0.01	0.03
G002304		4.08	6.7	250	9.1	72.9	<0.001	0.01	0.63	3.2	0.3	1.1	12.5	<0.01	0.03
G002305		2.70	9.4	570	8.4	30.6	<0.001	0.02	0.61	3.4	0.5	0.8	19.0	<0.01	0.02
G002306		2.59	5.4	480	8.1	39.0	<0.001	0.02	1.03	2.5	0.3	1.0	12.4	<0.01	0.02
G002307		2.44	9.3	500	9.1	37.3	<0.001	0.01	0.64	3.3	0.3	0.8	16.7	<0.01	0.03
G002308		0.89	29.3	610	8.5	13.4	<0.001	0.05	0.22	7.3	0.9	0.3	24.4	<0.01	0.05
G002309		0.82	27.6	580	8.0	11.6	<0.001	0.05	0.21	6.9	0.9	0.3	22.8	<0.01	0.05
G002310		0.81	27.5	610	7.8	10.9	<0.001	0.05	0.22	7.0	1.0	0.3	23.5	<0.01	0.05
G002311		0.67	23.3	690	6.4	16.8	<0.001	0.11	0.26	5.0	1.1	0.2	38.1	<0.01	0.05
G002312		0.85	22.8	570	7.2	21.7	<0.001	0.08	0.21	7.4	0.9	0.3	31.9	<0.01	0.04
G002313		0.84	22.6	660	7.8	15.8	<0.001	0.10	0.26	5.7	1.0	0.3	43.5	<0.01	0.05
G002314		0.81	29.8	660	7.3	17.8	<0.001	0.09	0.27	7.1	1.3	0.3	43.8	<0.01	0.07
G002315		0.58	33.3	620	6.0	8.9	<0.001	0.08	0.23	7.0	1.0	0.2	43.3	<0.01	0.07
G002316		0.63	45.7	1040	9.9	5.7	0.001	0.15	0.33	4.3	1.6	0.2	74.9	<0.01	0.12
G002317		0.80	32.4	690	11.5	6.1	<0.001	0.09	0.31	6.8	1.6	0.3	39.0	<0.01	0.07
G002318		0.89	33.1	830	9.9	9.6	<0.001	0.07	0.30	4.6	1.5	0.4	45.0	<0.01	0.09
G002319		0.64	32.8	1040	17.7	7.8	0.001	0.10	0.31	5.5	1.7	0.3	57.5	<0.01	0.13
G002320		<0.05	0.3	10	0.5	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01
G002321		0.62	28.7	1230	23.5	6.6	<0.001	0.08	0.26	4.2	1.4	0.4	34.4	<0.01	0.22
G002322		0.57	44.7	460	10.1	9.4	0.001	0.06	0.19	6.8	0.7	0.3	21.1	<0.01	0.14
G002323		0.60	28.5	1020	7.3	7.6	0.001	0.16	0.23	5.2	2.0	0.2	51.1	<0.01	0.06
G002324		0.59	50.8	1110	10.7	9.4	0.002	0.15	0.33	4.7	2.2	0.2	80.4	<0.01	0.10
G002325		0.51	19.5	760	14.1	5.8	0.001	0.09	0.20	1.7	2.2	0.2	55.8	0.01	0.06
G002326		1.03	30.1	370	14.1	14.6	<0.001	0.02	0.17	3.0	0.6	0.4	22.0	<0.01	0.06
G002327		1.25	15.2	270	13.7	10.3	<0.001	0.02	0.35	3.0	0.5	0.6	17.5	<0.01	0.06
G002328		0.86	27.9	440	11.2	7.8	<0.001	0.03	0.31	3.0	0.7	0.4	18.9	<0.01	0.08
G002329		1.56	29.4	680	12.6	10.9	<0.001	0.05	0.51	3.8	1.0	0.6	17.4	0.02	0.06
G002330		1.56	27.4	620	12.1	10.7	<0.001	0.05	0.50	3.8	0.8	0.6	16.3	0.01	0.07
G002331		1.97	19.4	680	15.9	7.8	<0.001	0.05	0.57	4.0	0.9	0.7	17.4	0.01	0.08

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Ti	Ti	U	V	W	Y	Zn
		%	ppm	ppm	ppm	ppm	ppm	ppm
		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002292		0.085	0.15	0.82	55	0.37	8.93	77
G002293		0.095	0.15	0.74	63	0.22	7.61	82
G002294		0.096	0.11	0.47	52	0.19	4.02	58
G002295		0.143	0.36	0.93	63	0.22	3.57	46
G002296		0.107	0.30	1.78	48	0.26	7.04	41
G002297		0.137	0.40	2.84	65	0.23	8.89	55
G002298		0.134	0.45	3.94	80	0.24	16.30	56
G002299		0.123	0.30	1.76	55	0.19	6.61	41
G002300		0.167	0.57	1.86	70	0.98	8.98	69
G002301		0.162	0.69	2.95	67	0.34	19.55	72
G002302		0.205	1.02	2.06	74	0.51	11.30	76
G002303		0.102	0.36	5.00	36	0.24	15.35	33
G002304		0.149	0.81	0.65	59	0.16	2.72	41
G002305		0.108	0.58	0.97	47	0.13	5.29	44
G002306		0.113	0.55	0.88	49	0.13	2.76	38
G002307		0.107	0.24	0.75	58	0.17	3.72	43
G002308		0.101	0.11	0.42	93	0.12	8.25	75
G002309		0.094	0.10	0.43	86	0.11	9.00	72
G002310		0.092	0.10	0.45	84	0.11	10.30	69
G002311		0.072	0.11	0.36	60	0.09	8.69	67
G002312		0.103	0.14	0.34	81	0.12	9.35	83
G002313		0.083	0.13	0.43	66	0.08	8.56	66
G002314		0.084	0.13	0.59	73	0.12	12.75	69
G002315		0.066	0.08	0.57	74	0.09	7.20	60
G002316		0.038	0.08	0.90	41	0.09	11.45	68
G002317		0.051	0.07	0.90	52	0.14	13.20	65
G002318		0.055	0.09	1.14	49	0.15	13.40	87
G002319		0.044	0.08	1.29	51	0.18	11.45	71
G002320		<0.005	<0.02	0.08	<1	<0.05	0.57	2
G002321		0.044	0.09	1.06	61	0.14	6.32	64
G002322		0.068	0.11	0.32	56	0.17	5.37	58
G002323		0.040	0.07	1.17	56	0.09	11.00	62
G002324		0.042	0.10	1.29	47	0.09	14.00	88
G002325		0.032	0.06	2.17	24	0.09	23.60	22
G002326		0.072	0.11	0.67	46	0.11	5.86	67
G002327		0.065	0.14	0.53	69	0.15	3.22	35
G002328		0.065	0.09	0.96	47	0.13	5.77	56
G002329		0.083	0.13	0.83	71	0.18	6.03	50
G002330		0.084	0.13	0.82	74	0.18	5.98	51
G002331		0.107	0.11	0.70	89	0.20	4.25	54

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002332		0.36	0.005	0.17	1.23	7.4	<0.2	<10	70	0.19	0.19	0.14	0.13	13.35	6.2	24
G002333		0.36	<0.005	0.10	0.57	2.1	<0.2	<10	30	0.10	0.08	0.06	0.04	4.32	2.5	7
G002334		0.46	0.007	0.20	0.80	6.6	<0.2	<10	60	0.16	0.18	0.15	0.20	11.65	5.7	22
G002335		0.38	0.005	0.14	0.64	3.0	<0.2	<10	30	0.09	0.11	0.07	0.09	6.57	3.6	11
G002336		0.38	0.005	0.20	0.40	2.6	<0.2	<10	30	0.06	0.15	0.05	0.07	5.82	2.7	10
G002337		0.32	0.010	0.24	0.52	3.2	<0.2	<10	50	0.12	0.14	0.13	0.26	12.05	4.1	12
G002338		0.34	0.007	0.43	1.80	4.4	<0.2	<10	190	0.36	0.20	0.93	0.38	48.90	18.7	44
G002339		0.36	<0.005	0.16	1.65	3.0	<0.2	<10	160	0.20	0.15	0.40	0.19	23.80	9.5	48
G002340		0.38	0.009	0.24	1.64	4.3	<0.2	<10	140	0.28	0.17	0.33	0.15	23.10	16.8	43
G002341		0.38	<0.005	0.10	1.05	3.0	<0.2	<10	90	0.16	0.11	0.21	0.11	15.05	6.8	29
G002342		0.34	0.005	0.20	1.87	4.7	<0.2	<10	150	0.30	0.15	0.36	0.24	30.20	22.1	42
G002343		0.46	<0.005	0.10	1.61	4.1	<0.2	<10	120	0.24	0.15	0.31	0.15	22.60	12.6	37
G002344		0.30	0.011	0.14	1.45	5.3	<0.2	<10	120	0.27	0.15	0.32	0.15	19.60	15.4	32
G002345		0.24	<0.005	0.10	1.83	4.4	<0.2	<10	170	0.36	0.12	0.41	0.17	22.80	15.5	41
G002346		0.42	0.007	0.08	1.42	4.2	<0.2	<10	100	0.18	0.12	0.28	0.12	14.45	7.6	31
G002347		0.44	<0.005	0.07	1.33	4.5	<0.2	<10	100	0.20	0.12	0.29	0.12	16.15	6.6	29
G002348		0.50	<0.005	0.08	1.58	11.1	<0.2	<10	100	0.26	0.15	0.31	0.11	16.15	15.4	35
G002349		0.42	<0.005	0.08	1.58	7.8	<0.2	<10	110	0.25	0.14	0.56	0.11	17.65	11.7	36
G002350		0.34	<0.005	0.24	2.26	11.9	<0.2	<10	340	0.59	0.35	0.79	0.36	88.10	15.0	46
G002351		0.32	0.007	0.22	2.05	11.1	<0.2	<10	340	0.63	0.32	0.89	0.36	93.90	14.2	40
G002352		0.42	<0.005	0.05	1.97	13.0	<0.2	<10	120	0.36	0.24	0.44	0.51	22.60	9.6	30
G002353		0.42	0.005	0.08	1.66	15.7	<0.2	<10	150	0.38	0.69	0.24	0.40	28.60	16.4	30
G002354		0.44	0.006	0.13	1.45	12.2	<0.2	<10	90	0.28	0.86	0.21	0.31	21.50	7.0	21
G002355		0.44	0.010	0.23	1.58	19.3	<0.2	<10	320	1.23	0.92	1.07	0.82	96.50	8.0	19
G002356		0.54	<0.005	0.07	0.99	12.5	<0.2	<10	80	0.56	0.84	0.12	0.17	31.60	3.3	11
G002357		0.32	<0.005	0.44	1.15	8.9	<0.2	<10	140	0.31	0.52	0.16	0.71	14.85	5.0	16
G002358		0.36	<0.005	0.10	0.98	9.5	<0.2	<10	80	0.29	0.40	0.11	0.38	14.75	4.0	14
G002359		0.44	<0.005	0.09	1.88	12.0	<0.2	<10	220	0.41	0.30	0.23	1.11	19.85	13.4	28
G002360		0.40	<0.005	0.14	2.26	9.3	<0.2	<10	460	0.62	0.20	0.25	0.27	33.70	17.5	35
G002361		0.44	0.006	0.31	1.83	10.0	<0.2	<10	170	0.37	0.21	0.23	0.55	17.80	7.2	22
G002362		0.30	0.010	0.19	0.56	2.8	<0.2	<10	50	0.11	0.13	0.05	0.19	7.88	2.0	11
G002363		0.38	<0.005	0.07	0.39	1.1	<0.2	<10	30	0.08	0.07	0.05	0.07	4.71	1.2	7
G002364		0.44	<0.005	0.58	1.64	8.7	<0.2	<10	320	0.31	0.21	0.22	0.27	15.60	9.9	33
G002365		0.54	0.011	0.17	2.02	11.3	<0.2	<10	140	0.43	0.21	0.27	0.76	30.40	14.2	44
G002366		0.32	<0.005	0.06	2.42	15.4	<0.2	<10	50	0.48	0.39	0.12	0.30	24.20	19.7	44
G002367		0.34	0.008	0.25	0.74	5.1	<0.2	<10	60	0.15	0.31	0.17	0.25	7.91	5.6	16
G002368		0.44	<0.005	0.05	1.35	7.3	<0.2	<10	70	0.20	0.20	0.15	0.12	12.50	8.1	25
G002369		0.46	0.005	0.21	1.14	10.2	<0.2	<10	90	0.22	0.22	0.12	0.50	21.80	9.8	32
G002370		0.34	0.006	0.20	0.54	3.8	<0.2	<10	60	0.12	0.12	0.07	0.50	11.85	4.5	14
G002371		0.46	0.007	0.28	1.80	10.0	<0.2	<10	70	0.28	0.29	0.16	0.57	41.20	18.3	43

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002332		1.07	19.1	2.62	7.79	0.05	0.02	0.05	0.020	0.03	6.6	9.0	0.26	155	1.88
G002333		0.37	9.8	1.05	3.61	<0.05	<0.02	0.03	0.008	0.01	2.2	1.9	0.07	62	0.61
G002334		0.75	19.5	2.44	6.38	0.05	0.02	0.07	0.017	0.06	5.8	2.8	0.21	238	1.86
G002335		0.47	12.6	1.41	3.96	<0.05	<0.02	0.06	0.010	0.02	3.4	2.2	0.14	90	0.96
G002336		0.50	12.0	0.97	3.71	<0.05	<0.02	0.05	0.009	0.03	3.2	0.9	0.06	55	1.12
G002337		0.43	19.7	1.24	3.71	<0.05	<0.02	0.07	0.012	0.04	6.7	1.4	0.09	95	1.12
G002338		1.26	39.6	2.99	6.74	0.16	0.05	0.06	0.023	0.15	39.2	13.5	0.86	446	0.85
G002339		1.13	17.6	2.28	7.11	0.08	0.03	0.04	0.018	0.06	14.2	11.0	0.74	234	0.95
G002340		1.71	20.9	2.71	7.28	0.08	0.03	0.05	0.020	0.13	12.5	11.5	0.72	602	1.10
G002341		1.18	15.7	1.83	5.54	0.05	0.02	0.03	0.012	0.09	8.2	6.7	0.46	193	0.67
G002342		1.33	21.7	2.75	7.39	0.08	0.03	0.07	0.019	0.10	14.8	15.6	0.72	953	1.00
G002343		0.98	17.8	2.53	6.59	0.08	0.03	0.05	0.020	0.07	12.0	13.7	0.65	420	0.74
G002344		1.35	17.7	2.44	5.93	0.07	0.03	0.05	0.021	0.07	10.0	10.6	0.53	535	1.11
G002345		1.54	17.5	2.68	6.87	0.08	0.03	0.05	0.022	0.10	11.6	14.4	0.70	505	0.91
G002346		1.27	13.0	1.96	6.23	0.07	0.03	0.06	0.019	0.06	7.6	10.3	0.54	190	0.55
G002347		1.17	13.1	1.87	5.78	0.07	0.02	0.04	0.016	0.06	8.2	9.2	0.49	152	0.49
G002348		1.00	13.4	3.00	7.00	0.08	0.03	0.05	0.023	0.05	8.3	12.8	0.59	406	1.40
G002349		1.34	17.1	2.60	6.34	0.08	0.04	0.05	0.021	0.07	9.1	12.9	0.66	329	0.69
G002350		5.24	34.4	2.94	8.61	0.15	0.08	0.15	0.036	0.16	47.4	13.0	0.61	938	2.19
G002351		4.57	34.9	2.68	7.76	0.15	0.08	0.16	0.031	0.15	50.2	11.0	0.55	978	2.01
G002352		2.41	18.1	3.07	7.21	0.08	0.07	0.04	0.030	0.13	12.6	13.3	0.57	405	1.12
G002353		5.41	23.6	3.33	8.40	0.10	0.06	0.04	0.033	0.25	16.8	10.0	0.52	1840	2.07
G002354		2.85	13.4	2.54	7.35	0.07	0.06	0.05	0.024	0.12	14.6	9.1	0.37	400	1.75
G002355		2.38	20.9	2.74	6.16	0.22	0.12	0.30	0.038	0.13	93.2	9.5	0.33	1640	3.73
G002356		2.37	10.2	2.41	6.38	0.07	0.05	0.04	0.028	0.08	19.3	4.5	0.20	287	2.60
G002357		1.33	13.0	2.03	6.50	0.05	0.02	0.04	0.020	0.06	9.2	7.1	0.23	403	1.58
G002358		1.29	8.3	1.97	5.99	<0.05	0.04	0.03	0.017	0.07	8.6	7.1	0.21	204	1.21
G002359		1.59	14.5	3.09	8.46	0.06	0.03	0.03	0.028	0.06	9.5	12.9	0.44	1130	1.69
G002360		3.27	18.3	3.56	8.16	0.07	0.09	0.04	0.036	0.06	15.2	12.0	0.49	3100	1.44
G002361		3.47	12.5	3.54	9.17	0.06	0.07	0.05	0.031	0.11	9.2	15.5	0.43	603	1.48
G002362		0.66	19.0	1.21	4.23	<0.05	<0.02	0.03	0.010	0.02	4.2	1.8	0.07	78	0.97
G002363		0.38	8.4	0.71	2.65	<0.05	<0.02	0.02	0.006	0.02	2.5	0.8	0.04	31	0.40
G002364		0.72	31.0	3.23	7.89	0.06	<0.02	0.06	0.025	0.05	7.4	12.1	0.54	387	2.23
G002365		1.04	41.5	3.76	6.63	0.08	0.04	0.07	0.032	0.08	12.5	16.2	0.72	468	2.05
G002366		0.73	43.5	4.72	7.21	0.08	0.08	0.06	0.037	0.04	7.0	16.9	1.04	548	1.55
G002367		0.43	21.8	1.54	4.26	<0.05	<0.02	0.10	0.018	0.03	4.0	4.0	0.26	133	1.38
G002368		0.72	20.5	2.60	6.65	0.06	0.03	0.03	0.021	0.04	5.8	10.3	0.48	284	0.88
G002369		0.80	26.9	3.03	6.96	0.07	0.03	0.05	0.024	0.04	9.6	7.8	0.40	386	3.14
G002370		0.47	17.2	1.37	3.29	<0.05	<0.02	0.04	0.014	0.03	5.6	2.9	0.15	146	1.45
G002371		0.84	55.9	4.65	6.64	0.09	0.09	0.03	0.029	0.05	12.2	11.6	0.95	562	4.15

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002332		1.02	15.9	410	9.5	7.7	<0.001	0.04	0.45	2.8	0.6	0.6	15.9	<0.01	0.06
G002333		0.24	4.4	230	3.4	2.5	<0.001	0.02	0.18	0.7	0.4	0.3	8.0	<0.01	0.02
G002334		0.79	14.7	580	7.6	9.7	<0.001	0.05	0.39	1.8	0.6	0.5	14.2	<0.01	0.06
G002335		0.39	7.6	340	3.8	3.9	<0.001	0.03	0.27	1.2	0.5	0.3	9.1	<0.01	0.03
G002336		0.37	6.7	360	4.2	2.3	<0.001	0.03	0.30	1.2	0.5	0.4	9.6	<0.01	0.03
G002337		0.32	12.4	650	5.0	3.0	<0.001	0.05	0.33	0.9	0.6	0.4	14.0	<0.01	0.04
G002338		1.05	52.8	930	10.8	18.6	<0.001	0.08	0.24	6.4	1.5	0.4	46.7	0.01	0.05
G002339		1.05	31.6	700	7.5	10.8	<0.001	0.06	0.23	4.6	0.8	0.4	26.9	<0.01	0.03
G002340		1.26	27.9	720	8.9	21.0	<0.001	0.06	0.18	5.0	0.8	0.6	22.9	<0.01	0.04
G002341		1.02	18.8	380	5.2	22.4	<0.001	0.04	0.17	3.2	0.5	0.4	16.4	<0.01	0.03
G002342		1.17	30.1	730	8.7	20.0	<0.001	0.06	0.20	4.9	0.8	0.5	26.3	<0.01	0.04
G002343		1.18	26.0	540	7.2	14.7	<0.001	0.04	0.19	4.3	0.7	0.5	23.9	<0.01	0.03
G002344		1.11	21.3	820	7.3	13.5	<0.001	0.07	0.25	4.0	0.8	0.4	26.6	<0.01	0.04
G002345		1.36	28.3	770	7.1	18.7	<0.001	0.05	0.19	4.8	0.8	0.4	29.4	<0.01	0.03
G002346		1.09	19.0	630	6.8	13.9	<0.001	0.05	0.18	3.6	0.7	0.4	23.3	<0.01	0.02
G002347		1.09	18.3	530	6.2	13.2	<0.001	0.04	0.18	3.5	0.7	0.4	23.5	<0.01	0.02
G002348		1.33	20.5	620	8.0	11.7	<0.001	0.05	0.37	3.8	0.7	0.5	25.4	<0.01	0.03
G002349		1.44	22.3	740	7.1	13.6	<0.001	0.06	0.29	4.5	0.8	0.5	36.0	<0.01	0.04
G002350		2.23	30.6	810	10.7	41.2	0.001	0.10	0.60	8.2	1.6	0.8	65.7	0.01	0.06
G002351		2.16	29.3	860	10.1	36.5	0.001	0.12	0.68	7.5	1.7	0.7	73.4	0.01	0.05
G002352		2.56	18.7	410	13.2	28.8	<0.001	0.03	0.53	5.4	0.6	0.8	39.8	<0.01	0.03
G002353		2.84	15.4	460	19.1	60.0	<0.001	0.02	0.61	6.0	0.5	1.2	21.8	<0.01	0.06
G002354		2.62	11.5	320	17.8	31.0	<0.001	0.02	0.63	4.2	0.4	1.1	19.8	<0.01	0.06
G002355		2.77	12.7	720	23.1	27.3	<0.001	0.07	1.07	7.3	1.8	1.1	74.9	0.01	0.07
G002356		2.87	5.6	220	16.1	20.9	<0.001	0.01	1.19	3.9	0.4	1.5	13.0	<0.01	0.04
G002357		1.79	9.9	350	19.1	10.4	<0.001	0.02	0.48	2.6	0.4	0.8	17.6	<0.01	0.04
G002358		1.78	8.0	350	14.9	15.0	<0.001	0.01	0.43	2.5	0.3	0.7	12.6	<0.01	0.03
G002359		1.81	18.3	290	14.3	13.1	<0.001	0.02	0.65	4.0	0.4	0.8	25.7	<0.01	0.05
G002360		1.65	25.5	360	12.2	17.0	<0.001	0.03	0.64	5.9	0.5	0.7	27.4	<0.01	0.05
G002361		3.42	12.3	540	51.7	29.0	<0.001	0.04	0.54	4.3	0.4	0.9	20.7	<0.01	0.03
G002362		0.47	5.9	280	7.1	3.6	<0.001	0.04	0.24	1.0	0.4	0.4	8.0	<0.01	0.03
G002363		0.21	3.2	220	3.3	1.9	<0.001	0.02	0.11	0.5	0.3	0.2	7.4	<0.01	0.02
G002364		0.92	29.7	660	10.2	8.2	<0.001	0.06	0.50	2.7	0.8	0.6	23.0	<0.01	0.06
G002365		1.27	47.0	790	9.8	11.8	<0.001	0.07	0.41	4.1	1.1	0.4	24.2	<0.01	0.07
G002366		1.21	34.1	510	40.3	6.3	<0.001	0.05	0.40	5.4	0.9	0.4	11.8	0.01	0.07
G002367		0.61	9.8	660	5.3	3.2	<0.001	0.07	0.31	2.0	0.7	0.4	16.3	<0.01	0.19
G002368		1.28	18.4	320	7.4	6.0	<0.001	0.02	0.36	3.4	0.5	0.5	12.8	<0.01	0.08
G002369		0.94	32.4	480	13.7	7.5	<0.001	0.03	0.47	2.9	0.9	0.5	15.3	<0.01	0.13
G002370		0.26	14.6	350	6.7	3.7	<0.001	0.03	0.25	1.0	0.5	0.3	10.5	<0.01	0.06
G002371		0.93	53.3	730	26.1	7.9	<0.001	0.04	0.47	5.2	1.5	0.4	15.4	<0.01	0.11

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002332		0.079	0.09	0.53	73	0.16	3.13	35
G002333		0.038	0.04	0.24	27	0.07	1.05	17
G002334		0.078	0.08	0.54	68	0.28	3.00	44
G002335		0.048	0.06	0.39	34	0.08	1.56	21
G002336		0.043	0.05	0.38	35	0.10	1.19	18
G002337		0.035	0.05	0.46	38	0.12	3.26	24
G002338		0.091	0.12	1.14	73	0.14	21.60	71
G002339		0.092	0.11	0.66	53	0.13	7.30	66
G002340		0.111	0.17	0.75	67	0.19	6.07	63
G002341		0.078	0.10	0.51	44	0.12	3.53	43
G002342		0.103	0.16	0.85	65	0.24	6.74	72
G002343		0.101	0.12	0.78	54	0.14	5.54	63
G002344		0.081	0.14	0.79	56	0.31	5.52	55
G002345		0.102	0.14	0.86	57	0.32	7.00	69
G002346		0.087	0.11	0.64	42	0.34	3.70	53
G002347		0.086	0.11	0.60	40	0.18	4.46	50
G002348		0.097	0.13	0.59	100	0.37	4.28	66
G002349		0.100	0.12	0.80	67	0.15	5.15	52
G002350		0.094	0.45	5.99	66	0.43	23.20	71
G002351		0.081	0.43	6.36	59	0.45	26.40	66
G002352		0.127	0.30	1.63	65	0.19	4.93	61
G002353		0.147	0.94	2.37	74	0.62	8.82	76
G002354		0.119	0.42	1.59	54	0.23	5.66	62
G002355		0.059	0.49	25.00	40	0.36	55.60	84
G002356		0.070	0.77	4.96	45	0.37	8.42	60
G002357		0.071	0.21	1.20	49	0.21	3.12	49
G002358		0.079	0.16	0.76	48	0.15	2.76	42
G002359		0.089	0.24	0.66	76	0.19	3.32	68
G002360		0.097	0.38	0.64	81	0.17	4.70	71
G002361		0.132	0.31	0.90	74	0.22	3.36	70
G002362		0.043	0.09	0.42	35	0.10	1.27	21
G002363		0.031	0.05	0.27	19	0.05	0.85	10
G002364		0.069	0.11	0.62	74	0.17	3.26	73
G002365		0.096	0.12	0.91	69	0.15	5.53	76
G002366		0.066	0.07	0.48	59	0.11	5.89	84
G002367		0.049	0.04	0.38	41	0.13	2.10	25
G002368		0.097	0.06	0.36	63	0.32	2.68	38
G002369		0.073	0.10	0.67	65	0.19	3.67	62
G002370		0.032	0.05	0.40	31	0.08	2.11	27
G002371		0.063	0.11	0.98	66	0.16	6.50	107

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-AA23 Au ppm 0.005	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
G002372		0.48	0.012	0.61	1.56	12.9	<0.2	<10	460	0.35	0.26	0.47	0.58	17.35	13.2	31
G002373		0.30	0.006	0.50	0.90	3.8	<0.2	<10	270	0.31	0.11	2.84	0.64	17.20	9.3	37

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
Sample Description															
G002372	0.75	32.6	3.95	5.46	0.08	0.03	0.06	0.034	0.04	11.2	10.8	0.60	459	5.08	0.02
G002373	0.38	39.1	1.37	2.73	0.07	0.09	0.09	0.014	0.03	11.5	3.3	0.48	997	1.20	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
G002372		0.69	38.6	710	14.0	6.9	<0.001	0.06	0.80	4.2	1.4	0.4	34.5	<0.01	0.12	1.5
G002373		0.52	46.6	1190	6.1	2.9	0.001	0.21	0.36	2.2	2.1	0.2	102.5	0.01	0.19	0.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079981

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	TI	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
	LOR	0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002372		0.050	0.08	0.96	57	0.16	8.57	122	1.0
G002373		0.026	0.07	0.78	25	0.06	11.50	46	2.7

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 10-AUG-2007

Account: EIANGX

CERTIFICATE VA07079982

Project: North Dawson

P.O. No.: NGX07-02

This report is for 202 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002801		0.30	<0.005	0.38	1.07	5.3	<0.2	<10	120	0.28	0.12	0.29	0.11	17.55	6.4	29
G002802		0.40	0.008	0.06	1.37	2.1	<0.2	<10	120	0.19	0.12	0.29	0.16	16.75	4.4	35
G002803		0.44	<0.005	0.18	2.22	2.4	<0.2	<10	150	0.36	0.12	0.46	0.13	19.70	10.7	50
G002804		0.30	0.006	0.11	1.22	1.8	<0.2	<10	120	0.20	0.10	0.40	0.09	13.15	4.3	28
G002805		0.28	<0.005	0.21	1.47	8.2	<0.2	<10	170	0.35	0.15	0.60	0.15	36.00	26.2	29
G002806		0.26	0.009	0.12	3.25	3.1	<0.2	<10	300	0.50	0.08	0.90	0.15	25.90	14.7	85
G002807		0.48	0.007	0.22	2.39	6.1	<0.2	<10	170	0.72	0.23	0.33	0.18	84.50	23.4	53
G002808		0.48	0.008	0.13	1.76	12.4	<0.2	<10	110	0.48	0.22	0.21	0.17	56.50	16.9	46
G002809		0.36	<0.005	0.34	3.11	11.5	<0.2	<10	160	0.68	0.16	0.31	0.31	61.30	20.7	49
G002810		0.40	0.009	0.22	3.12	11.8	<0.2	<10	160	0.77	0.17	0.31	0.33	67.10	22.3	50
G002811		0.40	0.006	0.11	2.79	8.2	<0.2	<10	230	0.75	0.18	0.27	0.24	51.40	18.5	55
G002812		0.56	0.008	0.30	2.98	7.6	<0.2	<10	330	0.77	0.22	0.36	0.19	42.40	16.0	58
G002813		0.44	0.007	0.14	3.00	7.2	<0.2	<10	340	0.73	0.18	0.40	0.18	50.40	16.2	56
G002814		0.50	0.005	0.14	2.96	6.7	<0.2	<10	360	0.73	0.19	0.54	0.13	38.40	15.8	52
G002815		0.38	0.027	0.18	2.49	71.9	<0.2	<10	230	0.53	0.14	0.43	0.21	24.50	13.8	51
G002816		0.48	0.007	0.47	2.32	8.4	<0.2	<10	460	0.59	0.22	0.71	0.34	49.40	13.7	47
G002817		0.96	0.007	0.22	2.44	5.2	<0.2	<10	550	0.55	0.23	0.60	0.31	27.10	14.6	49
G002818		0.42	0.005	0.37	2.44	5.7	<0.2	<10	300	0.41	0.23	0.79	0.54	23.20	17.2	44
G002819		0.32	0.012	0.51	2.87	18.2	<0.2	<10	280	0.30	0.30	0.68	0.59	15.70	11.0	48
G002821		0.82	0.007	0.34	2.32	7.3	<0.2	<10	260	0.33	0.20	0.66	0.48	20.20	18.3	72
G002822		0.46	0.007	0.20	1.97	8.7	<0.2	<10	240	0.29	0.15	0.68	0.42	19.25	21.7	36
G002823		0.32	0.005	0.17	2.11	12.3	<0.2	<10	220	0.23	0.14	0.50	0.38	13.10	15.3	36
G002824		0.22	0.006	0.27	1.57	6.5	<0.2	<10	210	0.23	0.13	0.56	0.39	15.20	15.2	29
G002825		0.28	0.010	0.14	2.55	7.8	<0.2	<10	150	0.36	0.16	0.40	0.30	25.10	17.3	42
G002826		0.52	0.016	0.45	2.42	20.4	<0.2	<10	130	0.30	0.17	0.41	0.52	28.60	15.8	46
G002827		0.30	<0.005	0.49	0.81	1.1	<0.2	<10	200	0.23	0.07	0.78	1.20	22.80	4.3	16
G002828		0.40	<0.005	0.14	2.59	6.1	<0.2	<10	170	0.29	0.11	0.50	0.27	18.55	17.6	43
G002829		0.20	0.006	0.14	2.62	4.7	<0.2	<10	190	0.18	0.11	0.43	0.34	11.90	13.6	58
G002830		0.22	0.009	0.11	2.67	5.3	<0.2	<10	180	0.19	0.11	0.40	0.28	12.35	13.6	57
G002831		0.22	0.007	0.19	2.22	4.3	<0.2	<10	180	0.20	0.15	0.39	0.18	12.30	11.9	52
G002832		0.50	0.014	0.11	2.36	5.2	<0.2	<10	180	0.37	0.15	0.34	0.24	27.10	13.5	47
G002833		0.54	0.005	0.06	2.22	4.5	<0.2	<10	170	0.51	0.23	0.39	0.22	50.10	13.5	48
G002834		0.50	0.005	0.07	2.40	4.9	<0.2	<10	160	0.40	0.15	0.41	0.13	20.20	13.8	42
G002835		0.38	0.007	0.09	1.35	5.0	<0.2	<10	110	0.35	0.35	0.57	0.19	20.00	11.3	29
G002836		0.56	0.007	0.11	2.17	6.4	<0.2	<10	150	0.35	0.13	0.61	0.18	24.80	13.9	39
G002837		0.36	<0.005	0.25	2.53	7.1	<0.2	<10	280	0.56	0.22	0.66	0.22	41.50	14.7	45
G002838		0.42	<0.005	0.14	2.87	6.2	<0.2	<10	210	0.64	0.75	0.37	0.17	52.10	18.8	102
G002839		0.48	<0.005	0.10	2.90	6.0	<0.2	<10	210	0.59	0.41	0.47	0.11	38.80	35.7	98
G002840		0.40	<0.005	0.17	2.53	9.7	<0.2	<10	170	0.62	0.26	0.42	0.13	52.90	30.3	63
G002841		0.48	<0.005	0.09	3.37	4.5	<0.2	<10	220	0.65	0.15	0.48	0.09	33.50	20.7	141

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002801		0.83	18.7	2.55	4.07	0.06	<0.02	0.09	0.016	0.06	9.9	6.1	0.37	179	1.43
G002802		1.01	13.7	1.47	7.22	0.06	0.02	0.06	0.018	0.05	9.6	6.6	0.42	109	0.63
G002803		1.43	15.4	2.47	7.52	0.10	0.09	0.04	0.025	0.14	10.4	16.9	0.90	248	0.37
G002804		0.71	12.4	1.30	4.72	0.05	0.02	0.07	0.015	0.05	7.3	7.3	0.39	119	0.46
G002805		0.89	21.4	3.30	5.18	0.09	0.05	0.04	0.025	0.05	15.8	8.3	0.46	937	1.85
G002806		1.86	27.3	3.31	10.65	0.15	0.05	0.04	0.043	0.35	14.2	16.8	1.48	461	0.65
G002807		2.16	43.9	4.24	7.98	0.16	0.05	0.03	0.036	0.22	52.0	16.5	0.85	433	0.93
G002808		2.44	35.6	3.89	7.03	0.10	0.03	0.03	0.032	0.12	23.6	10.9	0.63	350	0.97
G002809		1.77	39.8	3.74	7.89	0.11	0.09	0.05	0.035	0.23	18.1	13.2	0.76	333	1.06
G002810		1.79	41.0	3.80	8.14	0.10	0.11	0.04	0.034	0.25	19.1	14.0	0.77	350	1.09
G002811		1.89	37.5	3.94	8.85	0.11	0.07	0.04	0.035	0.29	21.0	13.3	0.85	431	1.10
G002812		2.21	45.5	3.90	8.90	0.13	0.06	0.10	0.042	0.27	25.0	13.3	0.91	496	1.43
G002813		1.74	38.2	3.64	8.47	0.12	0.05	0.03	0.036	0.34	25.6	12.0	0.94	557	1.26
G002814		1.73	26.5	3.57	9.21	0.11	0.06	0.02	0.036	0.48	19.3	12.0	1.03	325	1.08
G002815		1.44	28.8	3.77	6.44	0.10	0.05	0.05	0.027	0.18	13.3	12.4	0.97	270	1.70
G002816		1.33	38.6	2.93	7.30	0.13	0.06	0.06	0.032	0.21	33.3	8.7	0.82	672	1.34
G002817		1.13	41.4	3.09	7.33	0.11	0.07	0.04	0.033	0.21	16.5	9.3	1.04	526	1.86
G002818		1.17	42.5	2.97	6.79	0.11	0.05	0.05	0.023	0.20	16.0	9.1	1.23	751	1.35
G002819		1.49	51.6	3.05	8.01	0.10	0.04	0.06	0.029	0.23	10.6	10.6	1.68	382	0.86
G002821		1.30	30.0	3.36	7.09	0.11	0.06	0.04	0.031	0.12	10.3	10.5	1.34	632	2.05
G002822		0.98	28.2	2.88	6.03	0.08	0.06	0.04	0.022	0.05	10.6	9.8	1.01	1260	1.27
G002823		0.77	25.5	3.90	6.29	0.09	0.03	0.04	0.017	0.06	6.9	8.7	1.40	843	1.40
G002824		0.67	35.9	2.37	4.88	0.06	0.04	0.05	0.015	0.04	7.6	6.4	0.86	2010	1.14
G002825		0.88	29.0	3.19	7.13	0.10	0.09	0.03	0.022	0.11	11.7	11.3	1.68	355	2.10
G002826		0.77	38.1	3.70	6.73	0.10	0.09	0.03	0.026	0.09	16.8	12.6	1.51	412	1.69
G002827		0.40	42.2	0.80	2.62	0.07	0.05	0.08	0.011	0.03	15.6	2.5	0.29	723	0.57
G002828		0.89	29.3	4.36	7.20	0.10	0.06	0.10	0.023	0.08	8.8	11.7	1.47	561	0.93
G002829		0.75	29.1	3.37	7.88	0.06	0.03	0.05	0.022	0.05	6.8	11.0	1.71	632	0.82
G002830		0.77	27.3	3.41	7.83	0.06	0.04	0.05	0.025	0.05	6.9	11.6	1.68	551	0.77
G002831		0.75	21.3	2.91	7.50	0.06	0.03	0.04	0.022	0.06	6.7	8.5	1.43	403	1.13
G002832		0.95	38.3	2.85	6.75	0.09	0.17	0.03	0.027	0.08	14.0	11.3	1.19	290	0.44
G002833		1.05	31.6	2.56	6.66	0.10	0.30	0.02	0.029	0.08	26.4	11.4	0.89	238	0.56
G002834		1.14	34.5	3.32	7.22	0.10	0.07	0.03	0.027	0.09	10.6	12.3	1.20	291	0.73
G002835		0.93	22.9	2.23	4.93	0.06	0.04	0.04	0.023	0.04	13.8	6.5	0.43	672	1.13
G002836		1.15	49.2	3.28	6.46	0.08	0.06	0.04	0.026	0.08	13.3	10.8	0.93	755	0.69
G002837		1.63	43.5	3.41	7.43	0.10	0.07	0.08	0.032	0.14	27.1	11.2	0.80	547	1.19
G002838		1.42	28.0	3.54	8.81	0.13	0.11	0.04	0.031	0.31	25.5	12.7	1.59	574	1.05
G002839		2.01	20.8	3.94	8.63	0.13	0.15	0.02	0.024	0.62	20.5	12.8	1.79	1460	1.02
G002840		2.04	17.8	4.07	8.64	0.12	0.07	0.04	0.028	0.40	27.0	10.8	1.31	2520	1.84
G002841		2.46	20.1	3.75	9.67	0.13	0.07	0.04	0.022	0.58	18.1	13.6	2.00	548	0.79

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002801		0.65	19.0	1430	4.5	8.0	<0.001	0.09	0.50	2.0	1.1	0.3	21.8	<0.01	0.07
G002802		1.06	16.8	800	8.4	6.5	<0.001	0.05	0.39	3.6	0.6	0.6	21.0	<0.01	0.02
G002803		1.71	31.2	680	9.0	19.8	<0.001	0.01	0.63	6.1	0.4	0.6	28.0	<0.01	0.03
G002804		0.91	16.5	760	5.9	6.2	<0.001	0.06	1.97	3.4	0.6	0.4	22.7	<0.01	0.02
G002805		1.29	23.6	1130	6.1	8.2	0.001	0.08	0.63	4.4	1.4	0.4	30.3	<0.01	0.07
G002806		1.81	42.6	1330	5.4	36.9	0.001	0.07	0.30	12.3	0.9	0.7	37.0	<0.01	0.03
G002807		2.23	92.3	840	11.4	28.8	0.001	0.06	0.41	6.4	1.6	0.7	28.2	0.01	0.08
G002808		1.30	64.1	700	10.2	16.9	<0.001	0.05	0.46	4.3	1.1	0.7	28.0	<0.01	0.07
G002809		3.06	62.2	750	9.2	24.1	<0.001	0.06	0.41	6.4	1.1	0.6	22.7	0.01	0.06
G002810		3.06	64.2	750	9.7	25.3	<0.001	0.06	0.39	6.8	1.1	0.6	23.4	0.01	0.07
G002811		2.58	52.0	740	10.2	31.0	<0.001	0.03	0.36	7.3	1.1	0.7	20.3	0.01	0.07
G002812		1.88	52.2	700	9.6	32.1	<0.001	0.03	0.48	8.5	1.2	0.8	26.7	<0.01	0.07
G002813		2.15	45.6	770	8.8	34.8	0.001	0.03	0.61	6.7	1.1	0.8	26.1	0.01	0.06
G002814		2.60	35.7	950	10.5	48.1	0.001	0.03	1.14	7.5	1.1	1.0	29.6	<0.01	0.06
G002815		1.67	29.3	710	8.0	25.4	0.001	0.03	3.02	6.0	1.1	0.5	22.7	<0.01	0.06
G002816		1.40	36.8	920	10.2	27.7	0.001	0.07	1.74	6.3	1.9	0.6	36.2	0.01	0.10
G002817		1.43	38.2	690	7.5	28.7	0.001	0.05	0.32	7.1	1.3	0.6	32.1	<0.01	0.10
G002818		1.00	29.9	760	10.5	21.9	0.001	0.08	0.32	5.5	1.5	0.4	32.2	<0.01	0.13
G002819		0.98	29.4	640	11.1	28.1	0.001	0.11	0.47	8.1	1.5	0.5	30.6	<0.01	0.15
G002821		0.97	45.3	1050	11.1	17.2	<0.001	0.07	0.31	7.9	1.5	0.5	29.3	<0.01	0.10
G002822		0.93	25.5	1060	6.9	8.1	0.001	0.09	0.32	5.2	1.9	0.4	31.0	<0.01	0.05
G002823		0.79	22.4	890	6.6	8.7	<0.001	0.06	0.33	4.7	1.0	0.3	25.4	<0.01	0.07
G002824		0.54	21.1	1190	6.7	5.8	<0.001	0.10	0.30	3.4	1.6	0.3	25.7	<0.01	0.04
G002825		0.89	29.0	700	10.4	13.3	<0.001	0.02	0.53	6.5	1.1	0.4	18.2	<0.01	0.07
G002826		0.81	34.0	680	11.5	14.1	<0.001	0.03	0.64	7.9	0.9	0.3	17.2	<0.01	0.08
G002827		0.56	15.2	1350	3.8	3.8	0.001	0.18	0.36	2.2	2.3	0.2	28.4	0.01	0.03
G002828		1.15	25.0	730	6.5	11.0	<0.001	0.05	0.33	5.8	0.7	0.4	21.9	<0.01	0.04
G002829		0.91	27.9	870	7.9	6.9	0.001	0.06	0.25	6.8	0.6	0.4	21.3	<0.01	0.03
G002830		1.02	27.8	710	8.3	7.3	<0.001	0.05	0.26	6.9	0.5	0.4	20.4	<0.01	0.03
G002831		0.95	24.9	880	8.2	7.3	<0.001	0.06	0.23	5.8	0.7	0.4	21.4	<0.01	0.03
G002832		1.19	26.5	580	8.6	14.7	<0.001	0.02	0.33	7.2	0.6	0.5	20.5	<0.01	0.03
G002833		1.31	28.6	690	15.1	18.6	<0.001	0.01	0.38	7.7	0.8	0.6	24.9	<0.01	0.05
G002834		1.37	27.4	660	9.4	15.3	0.001	0.05	0.30	6.3	0.8	0.4	22.6	<0.01	0.04
G002835		0.89	18.9	740	7.8	8.8	<0.001	0.07	0.31	3.3	1.0	0.4	24.4	<0.01	0.07
G002836		1.25	27.1	720	6.9	12.6	<0.001	0.03	0.33	7.2	0.9	0.5	29.6	<0.01	0.04
G002837		1.72	31.1	910	14.0	24.2	<0.001	0.09	0.33	6.7	1.4	0.6	34.6	<0.01	0.09
G002838		2.56	45.1	660	21.6	43.9	<0.001	0.04	0.28	7.0	1.1	0.9	27.5	<0.01	0.17
G002839		2.16	52.7	760	21.9	60.8	<0.001	0.03	0.24	5.5	0.7	0.8	32.4	<0.01	0.11
G002840		2.17	31.7	1250	14.5	52.0	<0.001	0.08	0.30	4.9	0.9	0.8	36.7	<0.01	0.05
G002841		2.65	57.6	950	12.0	57.1	0.001	0.06	0.22	5.7	0.8	0.7	38.6	<0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002801		0.038	0.08	1.25	41	0.14	6.92	39	<0.5
G002802		0.093	0.13	0.82	35	0.12	5.51	36	0.7
G002803		0.154	0.17	0.58	57	0.20	6.64	70	3.4
G002804		0.064	0.09	0.79	28	0.11	4.34	35	0.8
G002805		0.063	0.11	1.52	55	0.19	9.54	47	1.4
G002806		0.152	0.24	0.84	124	0.15	10.85	77	1.4
G002807		0.117	0.22	2.01	78	0.45	21.00	110	1.1
G002808		0.084	0.14	1.22	67	0.15	11.50	88	0.6
G002809		0.129	0.16	1.07	77	0.22	11.90	93	2.9
G002810		0.132	0.17	1.08	79	0.20	12.45	93	3.5
G002811		0.130	0.19	1.24	91	0.47	14.00	91	2.4
G002812		0.118	0.23	2.01	93	0.20	16.35	98	1.6
G002813		0.121	0.21	1.55	89	0.16	15.80	97	1.4
G002814		0.128	0.27	1.40	80	0.15	12.00	92	2.0
G002815		0.118	0.18	1.40	82	0.21	8.20	81	1.7
G002816		0.090	0.16	2.37	79	0.17	27.10	97	1.2
G002817		0.105	0.15	2.92	80	1.36	14.70	87	2.2
G002818		0.095	0.16	1.27	75	0.12	16.80	86	1.3
G002819		0.107	0.21	1.05	90	0.18	13.00	106	1.2
G002821		0.093	0.17	1.05	85	0.28	8.22	115	2.1
G002822		0.084	0.12	1.24	66	0.12	10.70	84	1.7
G002823		0.091	0.09	0.58	75	0.12	6.30	89	1.2
G002824		0.056	0.12	0.77	50	0.11	9.34	65	1.2
G002825		0.123	0.13	1.06	85	0.14	7.85	96	3.0
G002826		0.109	0.11	1.00	83	0.11	13.65	102	3.0
G002827		0.032	0.08	1.56	16	0.07	14.55	37	1.7
G002828		0.137	0.12	0.51	95	0.13	6.24	98	2.0
G002829		0.107	0.10	0.48	98	0.12	6.98	119	1.1
G002830		0.120	0.10	0.37	99	0.11	6.38	118	1.3
G002831		0.101	0.11	0.47	85	0.13	5.00	78	0.9
G002832		0.150	0.14	0.77	85	0.15	9.46	73	6.5
G002833		0.147	0.15	1.85	80	0.17	13.80	68	11.0
G002834		0.130	0.12	1.03	92	0.18	8.41	64	2.5
G002835		0.067	0.09	0.96	47	0.22	13.80	45	1.2
G002836		0.117	0.11	0.91	81	0.18	17.45	67	2.0
G002837		0.112	0.20	2.19	83	0.19	16.85	81	2.3
G002838		0.167	0.29	2.45	74	0.98	10.70	96	4.2
G002839		0.201	0.43	1.44	77	0.19	6.76	87	6.1
G002840		0.168	0.42	3.25	79	0.24	7.62	79	2.4
G002841		0.206	0.44	1.70	93	0.24	6.00	70	3.0

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002842		0.52	0.008	0.12	2.86	5.5	<0.2	<10	220	0.55	0.19	0.42	0.15	32.50	15.9	111
G002843		0.36	<0.005	0.12	2.77	4.6	<0.2	<10	270	0.51	0.15	0.63	0.12	34.00	23.1	135
G002844		0.54	0.007	0.22	2.62	4.8	<0.2	<10	290	0.39	0.20	0.41	0.30	16.55	18.4	52
G002845		0.38	0.024	0.44	2.56	42.4	<0.2	<10	290	0.34	0.24	0.51	0.36	16.00	9.2	53
G002846		0.40	0.005	0.15	2.24	5.4	<0.2	<10	220	0.30	0.17	0.44	0.32	16.10	13.7	46
G002847		0.38	<0.005	0.16	1.92	7.4	<0.2	<10	220	0.29	0.17	0.70	0.42	15.45	13.2	38
G002848		0.54	0.005	0.09	2.02	7.5	<0.2	<10	160	0.29	0.15	0.38	0.20	16.25	14.7	40
G002849		0.28	0.006	0.15	2.55	4.9	<0.2	<10	180	0.22	0.13	0.39	0.17	12.40	17.7	47
G002850		0.36	0.005	0.16	2.65	5.6	<0.2	<10	190	0.24	0.14	0.42	0.19	13.90	19.0	49
G002851		0.38	<0.005	0.12	2.70	16.1	<0.2	<10	150	0.25	0.14	0.36	0.18	12.80	13.9	40
G002852		0.22	<0.005	0.19	1.56	1.4	<0.2	<10	150	0.23	0.07	0.98	0.30	11.60	6.2	27
G002853		0.34	0.009	0.15	2.18	4.1	<0.2	<10	150	0.26	0.13	0.58	0.19	16.30	10.1	40
G002854		0.24	0.008	0.10	2.74	2.5	<0.2	<10	190	0.30	0.11	0.52	0.21	16.40	16.6	52
G002855		0.40	0.009	0.11	2.42	3.1	<0.2	<10	200	0.24	0.11	0.53	0.41	18.10	12.1	51
G002856		0.24	0.006	0.12	2.32	4.5	<0.2	<10	190	0.18	0.10	0.53	0.26	13.90	13.7	45
G002857		0.46	0.005	0.32	1.18	4.3	<0.2	<10	120	0.29	0.09	0.33	0.37	15.60	9.4	22
G002858		0.54	0.007	0.21	2.81	2.6	<0.2	<10	220	0.22	0.12	0.38	0.27	12.75	15.0	96
G002859		0.50	0.009	0.16	2.74	4.2	<0.2	<10	160	0.39	0.38	0.32	0.25	35.50	15.4	81
G002861		0.48	0.013	0.20	2.32	9.1	<0.2	<10	200	0.57	0.21	0.50	0.24	36.20	16.1	43
G002862		0.32	0.010	0.40	2.90	8.3	<0.2	<10	350	0.60	0.27	0.56	0.17	37.10	13.8	53
G002863		0.40	0.007	0.19	3.00	4.7	<0.2	<10	340	0.54	0.21	0.54	0.21	47.60	16.3	108
G002864		0.38	<0.005	0.16	2.63	5.7	<0.2	<10	200	0.53	0.77	0.39	0.17	40.60	11.2	84
G002865		0.40	0.005	0.16	2.25	3.6	<0.2	<10	160	0.41	0.33	0.45	0.11	35.20	8.5	67
G002866		0.38	0.005	0.12	2.65	6.7	<0.2	<10	190	0.47	0.23	0.53	0.13	28.10	12.3	90
G002867		0.50	0.006	0.10	2.84	5.5	<0.2	<10	210	0.56	0.21	0.46	0.15	41.60	19.6	113
G002868		0.42	0.006	0.09	3.19	4.3	<0.2	<10	220	0.67	0.17	0.43	0.11	32.80	20.6	163
G002869		0.44	<0.005	0.07	2.79	3.6	<0.2	<10	260	0.44	0.15	0.58	0.11	20.70	17.6	157
G002870		0.44	0.006	0.06	2.74	3.3	<0.2	<10	240	0.47	0.12	0.53	0.13	20.90	16.8	149
G002871		0.36	<0.005	0.08	2.31	7.0	<0.2	<10	160	0.42	0.15	0.50	0.12	18.00	10.8	48
G002872		0.48	<0.005	0.12	2.70	6.2	<0.2	<10	190	0.45	0.13	0.43	0.12	24.70	14.6	64
G002873		0.38	<0.005	0.11	2.49	5.3	<0.2	<10	180	0.47	0.12	0.45	0.14	31.80	14.4	56
G002874		0.64	<0.005	0.09	2.44	4.8	<0.2	<10	240	0.44	0.10	0.58	0.19	30.00	16.1	64
G002875		0.32	0.009	0.22	2.32	10.3	<0.2	<10	170	0.44	0.14	0.54	0.17	28.00	12.9	54
G002876		0.44	0.006	0.10	2.05	2.8	<0.2	<10	160	0.36	0.15	0.51	0.14	21.70	9.5	44
G002877		0.54	0.007	0.12	1.85	2.9	<0.2	<10	150	0.28	0.13	0.64	0.14	23.10	11.6	50
G002878		0.34	<0.005	0.09	1.57	6.4	<0.2	<10	110	0.34	0.12	0.27	0.17	22.80	9.8	34
G002879		0.38	<0.005	0.18	2.84	11.4	<0.2	<10	220	0.60	0.19	0.55	0.16	53.50	24.8	71
G002880		0.36	0.014	0.19	2.06	10.7	<0.2	<10	120	0.39	0.25	0.16	0.20	25.80	11.3	42
G002881		0.44	0.008	0.15	2.23	13.5	<0.2	<10	180	0.40	0.23	0.32	0.26	35.90	13.8	51
G002882		0.36	0.028	0.44	2.84	9.4	<0.2	<10	430	0.69	0.25	0.61	0.26	55.20	16.6	58

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002842		2.10	25.9	3.24	9.73	0.18	0.07	0.11	0.024	0.42	15.7	14.7	1.63	431	0.84
G002843		2.07	21.5	3.49	9.91	0.16	0.05	0.04	0.019	0.61	17.0	10.7	1.88	1295	1.29
G002844		1.31	37.4	3.43	7.78	0.14	0.04	0.05	0.026	0.17	9.0	10.8	1.33	498	1.28
G002845		1.85	29.8	3.16	8.52	0.12	0.05	0.07	0.036	0.14	8.2	13.4	1.30	315	1.53
G002846		0.85	22.1	3.07	7.24	0.11	0.05	0.04	0.023	0.06	7.3	11.8	1.19	443	0.78
G002847		0.73	23.8	2.83	6.36	0.11	0.05	0.05	0.022	0.05	8.8	10.2	0.95	581	1.20
G002848		0.83	25.3	3.23	6.68	0.13	0.09	0.18	0.021	0.10	9.2	10.5	1.17	324	0.70
G002849		0.97	24.8	3.43	8.41	0.14	0.05	0.05	0.016	0.11	6.0	12.0	1.78	432	0.58
G002850		1.04	27.3	3.61	8.76	0.14	0.04	0.06	0.017	0.12	6.5	12.4	1.82	479	0.73
G002851		0.90	27.3	3.94	8.30	0.13	0.05	0.04	0.020	0.10	6.1	14.0	1.77	415	0.88
G002852		0.52	35.3	1.64	5.34	0.08	0.05	0.09	0.014	0.04	6.3	8.5	0.94	315	0.53
G002853		0.86	21.6	2.68	7.42	0.11	0.06	0.05	0.022	0.08	8.2	12.8	1.26	309	1.03
G002854		0.94	36.7	3.21	9.26	0.13	0.06	0.04	0.024	0.10	7.5	15.2	1.65	383	0.54
G002855		0.87	29.2	2.82	8.36	0.12	0.07	0.05	0.024	0.11	8.4	13.3	1.43	388	0.40
G002856		0.79	29.5	3.54	8.34	0.12	0.04	0.05	0.022	0.12	6.4	11.4	1.50	436	1.01
G002857		0.57	51.8	2.07	4.40	0.08	0.03	0.08	0.018	0.04	7.9	4.6	0.46	659	0.95
G002858		0.94	39.1	3.33	9.18	0.12	0.04	0.06	0.027	0.12	6.5	13.2	2.23	479	0.73
G002859		1.28	77.5	3.67	8.54	0.15	0.08	0.03	0.030	0.14	17.0	12.6	1.93	496	0.75
G002861		1.19	38.8	3.63	7.60	0.13	0.06	0.07	0.030	0.06	16.4	11.9	0.78	735	1.14
G002862		1.77	50.4	3.60	8.94	0.14	0.07	0.11	0.035	0.14	23.5	13.5	0.90	548	2.20
G002863		1.46	43.1	3.51	8.93	0.18	0.12	0.05	0.023	0.45	24.8	13.6	1.70	422	0.76
G002864		1.32	27.9	3.43	8.84	0.18	0.14	0.04	0.026	0.44	20.4	13.2	1.56	351	0.92
G002865		1.93	14.3	2.79	9.19	0.15	0.06	0.04	0.018	0.52	18.7	8.8	1.48	316	0.98
G002866		2.03	20.2	3.30	8.99	0.14	0.08	0.08	0.021	0.45	17.1	13.3	1.55	341	1.01
G002867		2.07	26.0	3.69	8.73	0.13	0.14	0.04	0.025	0.54	21.5	13.0	1.70	498	0.90
G002868		2.39	23.8	3.49	10.45	0.17	0.09	0.03	0.024	0.53	18.6	16.4	1.93	387	0.67
G002869		2.08	21.4	3.12	8.95	0.16	0.07	0.04	0.021	0.54	12.9	15.8	1.82	361	0.58
G002870		2.06	22.0	2.96	8.93	0.16	0.07	0.04	0.019	0.51	13.1	16.5	1.73	305	0.45
G002871		1.60	17.9	3.04	7.75	0.12	0.06	0.04	0.026	0.14	10.1	17.1	0.84	236	0.42
G002872		1.87	33.8	3.75	8.37	0.15	0.08	0.04	0.026	0.24	13.9	17.7	1.10	273	0.50
G002873		1.43	28.1	3.34	7.66	0.14	0.09	0.04	0.026	0.20	16.7	15.0	0.99	253	0.53
G002874		1.41	46.4	3.41	8.12	0.17	0.18	0.02	0.025	0.30	15.6	14.8	1.13	321	0.58
G002875		1.52	31.7	3.67	7.52	0.15	0.12	0.04	0.027	0.18	14.4	14.8	0.95	250	0.93
G002876		1.10	22.1	2.26	6.73	0.12	0.12	0.05	0.027	0.11	11.9	14.0	0.79	218	0.39
G002877		1.33	16.4	2.47	6.81	0.13	0.08	0.07	0.024	0.13	12.9	14.4	0.88	301	0.50
G002878		1.10	26.5	2.75	6.20	0.10	0.03	0.04	0.022	0.08	13.3	9.9	0.57	233	0.78
G002879		4.94	49.5	4.47	10.30	0.23	0.07	0.06	0.034	0.31	44.8	28.9	1.23	641	1.17
G002880		1.56	30.4	3.72	11.10	0.08	0.04	0.03	0.027	0.13	15.5	11.7	0.53	233	1.85
G002881		1.86	30.4	3.77	9.18	0.12	0.04	0.03	0.030	0.19	18.6	12.4	0.80	350	1.31
G002882		2.10	43.7	3.51	9.65	0.23	0.06	0.08	0.037	0.33	49.0	12.8	0.98	477	1.48

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002842		2.09	52.2	830	16.4	47.3	<0.001	0.03	0.37	5.5	0.6	0.8	29.0	<0.01	0.03
G002843		2.04	51.8	1040	12.7	49.0	<0.001	0.06	0.23	5.0	0.7	0.8	34.9	0.01	0.03
G002844		0.92	32.8	560	10.7	22.0	0.001	0.04	0.30	6.0	0.9	0.5	20.0	<0.01	0.10
G002845		0.85	34.4	640	16.9	24.8	0.001	0.05	0.79	7.9	1.1	0.6	22.8	<0.01	0.15
G002846		0.87	26.5	690	8.4	12.6	<0.001	0.03	0.31	5.1	0.7	0.4	18.5	<0.01	0.06
G002847		0.88	26.7	920	8.7	9.5	<0.001	0.07	0.34	4.4	1.0	0.4	24.6	<0.01	0.05
G002848		1.13	28.7	650	7.7	15.6	<0.001	0.01	0.37	4.8	0.6	0.4	16.9	<0.01	0.04
G002849		0.95	27.7	580	12.1	14.9	<0.001	0.03	0.39	4.5	0.6	0.4	16.5	<0.01	0.05
G002850		1.01	28.2	640	10.8	15.8	<0.001	0.04	0.41	4.9	0.7	0.4	18.7	<0.01	0.06
G002851		0.87	25.2	690	9.1	13.7	<0.001	0.03	0.43	5.4	0.6	0.4	16.6	<0.01	0.05
G002852		0.62	19.2	1190	7.5	6.1	0.001	0.17	0.46	3.1	1.1	0.3	22.9	0.01	0.03
G002853		0.92	28.2	820	11.7	13.3	<0.001	0.06	0.56	5.1	0.6	0.4	17.9	<0.01	0.02
G002854		1.02	28.6	670	8.5	17.4	<0.001	0.04	0.34	7.3	0.5	0.5	20.5	<0.01	0.03
G002855		1.16	25.0	810	10.7	17.9	<0.001	0.05	0.35	7.1	0.5	0.5	18.8	<0.01	0.03
G002856		0.94	24.8	690	8.6	15.9	<0.001	0.05	0.31	6.5	0.5	0.4	20.4	<0.01	0.03
G002857		0.55	11.8	690	6.1	6.1	<0.001	0.07	0.28	3.4	1.0	0.3	17.3	0.01	0.05
G002858		0.77	38.7	390	9.2	13.0	<0.001	0.04	0.30	9.0	0.7	0.4	18.8	<0.01	0.03
G002859		0.85	39.5	600	12.7	21.3	<0.001	0.02	0.31	10.8	0.9	0.5	18.4	0.01	0.07
G002861		1.26	32.7	740	13.5	13.3	<0.001	0.04	0.47	6.1	1.1	0.6	23.9	0.01	0.09
G002862		1.66	39.0	830	22.9	22.7	0.001	0.08	0.42	6.8	2.0	0.7	23.7	0.01	0.05
G002863		1.72	53.0	750	14.6	45.7	<0.001	0.03	0.34	6.9	0.9	0.7	27.9	0.01	0.05
G002864		2.22	39.0	650	22.5	43.5	<0.001	0.03	0.34	5.7	0.9	1.0	21.4	<0.01	0.14
G002865		2.46	37.2	900	13.3	52.9	<0.001	0.04	0.23	4.1	0.6	1.0	30.6	<0.01	0.06
G002866		1.96	40.5	1070	15.6	50.1	<0.001	0.06	0.30	4.6	0.6	0.7	31.5	<0.01	0.04
G002867		2.53	51.3	800	16.1	51.5	<0.001	0.03	0.22	5.1	0.5	0.7	33.3	<0.01	0.02
G002868		2.27	64.1	830	14.4	49.0	<0.001	0.03	0.24	5.3	0.5	0.8	28.0	<0.01	0.02
G002869		2.00	61.2	820	11.6	47.3	<0.001	0.03	0.26	4.6	0.5	0.6	31.0	<0.01	0.02
G002870		2.00	59.6	770	11.8	47.5	<0.001	0.02	0.26	4.6	0.4	0.6	29.1	<0.01	0.02
G002871		1.89	30.7	630	10.2	23.3	<0.001	0.04	0.44	5.4	0.7	0.6	25.8	<0.01	0.03
G002872		1.95	37.6	720	9.8	32.2	<0.001	0.03	0.46	6.3	0.7	0.6	21.9	<0.01	0.04
G002873		1.86	35.1	790	9.1	26.3	<0.001	0.02	0.46	6.3	0.8	0.6	21.8	<0.01	0.04
G002874		1.07	44.4	880	7.5	30.2	<0.001	0.01	0.47	7.5	0.9	0.6	27.2	<0.01	0.04
G002875		1.93	38.7	760	10.2	25.8	<0.001	0.02	0.61	6.2	0.9	0.6	25.9	<0.01	0.04
G002876		1.76	30.1	700	10.1	18.9	<0.001	0.02	1.25	5.4	0.6	0.6	24.8	<0.01	0.03
G002877		1.72	37.0	1240	9.4	21.9	0.001	0.03	0.61	4.8	0.6	0.5	26.1	<0.01	0.03
G002878		1.21	33.4	690	7.9	12.0	<0.001	0.03	0.63	3.4	0.7	0.5	19.5	<0.01	0.04
G002879		2.96	89.7	620	12.4	45.4	0.001	0.02	0.57	6.9	1.4	1.0	30.9	0.01	0.06
G002880		2.11	43.9	390	11.4	17.4	<0.001	0.02	0.48	3.9	0.7	1.0	21.0	<0.01	0.08
G002881		2.16	43.5	530	10.4	25.5	<0.001	0.02	0.54	5.1	0.7	0.8	27.3	<0.01	0.07
G002882		1.68	45.6	810	9.9	31.9	0.001	0.04	0.52	8.1	1.7	0.9	34.3	0.01	0.07

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002842		0.186	0.39	1.59	80	0.18	7.37	65
G002843		0.179	0.43	1.95	84	0.14	5.85	70
G002844		0.105	0.16	0.94	83	0.12	6.51	86
G002845		0.095	0.22	0.80	88	0.12	5.50	119
G002846		0.095	0.12	0.57	75	0.43	4.28	82
G002847		0.085	0.11	0.93	67	0.12	6.63	75
G002848		0.127	0.14	0.66	70	0.12	5.03	61
G002849		0.135	0.13	0.42	83	0.10	3.98	91
G002850		0.144	0.14	0.50	89	0.11	4.51	93
G002851		0.132	0.16	0.31	103	0.13	4.61	90
G002852		0.056	0.09	0.63	33	0.07	4.93	58
G002853		0.112	0.12	0.63	63	0.09	4.61	85
G002854		0.165	0.16	0.49	100	0.35	3.98	96
G002855		0.143	0.17	0.47	83	0.16	4.81	96
G002856		0.127	0.14	0.40	95	0.12	4.28	97
G002857		0.056	0.09	0.67	47	0.08	9.06	48
G002858		0.111	0.11	0.45	99	0.13	7.13	99
G002859		0.114	0.17	1.65	104	0.42	14.45	103
G002861		0.107	0.15	2.12	71	0.21	14.50	65
G002862		0.112	0.24	4.84	82	0.21	15.95	84
G002863		0.186	0.35	2.22	82	0.96	13.00	71
G002864		0.170	0.34	1.88	72	0.15	7.13	85
G002865		0.178	0.43	1.71	61	0.18	5.21	80
G002866		0.177	0.39	1.89	85	0.17	5.30	68
G002867		0.187	0.39	1.34	76	0.15	6.30	68
G002868		0.197	0.39	1.23	89	0.26	4.61	65
G002869		0.192	0.34	1.01	79	0.25	4.54	68
G002870		0.194	0.35	0.97	75	0.18	4.59	64
G002871		0.144	0.20	1.01	71	0.17	5.11	70
G002872		0.167	0.27	2.18	87	0.20	6.43	70
G002873		0.153	0.22	1.88	78	0.14	8.47	67
G002874		0.172	0.22	1.09	90	0.20	10.40	74
G002875		0.145	0.21	1.22	82	0.15	7.26	70
G002876		0.142	0.15	1.05	56	0.16	5.61	66
G002877		0.119	0.16	1.01	54	0.18	6.33	69
G002878		0.099	0.12	0.90	62	0.21	5.94	56
G002879		0.178	0.35	2.13	87	0.25	18.30	100
G002880		0.127	0.12	0.85	91	0.15	5.79	62
G002881		0.123	0.14	1.08	82	0.17	8.47	88
G002882		0.119	0.21	2.44	96	0.30	25.30	90

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002883		0.60	0.009	0.28	2.62	10.0	<0.2	<10	340	0.77	0.20	0.48	0.25	55.70	17.0	54
G002884		0.44	<0.005	0.15	3.02	7.0	<0.2	<10	340	0.73	0.19	0.65	0.16	54.90	18.8	58
G002885		0.36	0.008	0.11	2.73	6.6	<0.2	<10	300	0.69	0.16	0.82	0.15	33.30	14.5	52
G002886		0.42	0.011	0.23	2.07	30.6	<0.2	<10	320	0.51	0.21	0.84	0.23	26.30	11.7	50
G002887		0.54	0.006	0.31	3.23	5.0	<0.2	<10	520	0.49	0.18	0.96	1.43	22.30	33.5	94
G002888		0.50	0.007	0.18	2.25	7.5	<0.2	<10	250	0.30	0.17	0.80	0.42	17.40	13.9	48
G002889		0.46	0.039	0.18	2.30	6.9	<0.2	<10	210	0.27	0.13	0.65	0.38	18.85	13.8	60
G002890		0.28	0.015	0.19	2.30	8.4	<0.2	<10	200	0.26	0.13	0.65	0.36	17.85	14.8	59
G002891		0.24	0.012	0.48	2.32	9.9	<0.2	<10	260	0.44	0.22	1.11	0.76	37.00	17.0	61
G002892		0.52	0.006	0.20	2.33	14.1	<0.2	<10	180	0.32	0.15	0.65	0.42	24.80	17.3	43
G002893		0.36	0.006	0.15	2.32	7.4	<0.2	<10	240	0.34	0.14	0.80	0.66	26.20	19.2	45
G002894		0.30	0.010	0.15	2.04	14.3	<0.2	<10	300	0.27	0.15	0.70	0.39	19.60	23.8	47
G002895		0.34	0.010	0.14	2.26	3.8	<0.2	<10	170	0.22	0.19	0.42	0.41	17.90	16.0	49
G002896		0.28	0.010	0.33	2.13	7.7	<0.2	<10	240	0.31	0.13	0.48	0.96	26.60	36.2	45
G002897		0.36	0.013	0.10	2.28	3.8	<0.2	<10	160	0.25	0.11	0.43	0.32	18.25	15.7	48
G002898		0.56	0.007	0.09	2.88	3.9	<0.2	<10	160	0.34	0.12	0.40	0.21	18.30	16.5	52
G002899		0.40	0.007	0.09	2.98	6.2	<0.2	<10	210	0.38	0.12	0.37	0.37	26.20	21.6	54
G002900		0.04	<0.005	0.01	0.02	<0.1	<0.2	<10	10	<0.05	0.01	0.01	0.01	1.37	0.1	<1
G002901		0.20	0.041	0.96	2.13	84.9	<0.2	<10	430	0.66	0.26	1.03	0.58	54.00	15.1	42
G002902		0.46	0.017	0.21	2.89	49.8	<0.2	<10	280	0.62	0.15	0.42	0.29	30.40	18.5	61
G002903		0.38	0.007	0.07	3.04	18.8	<0.2	<10	270	0.73	0.13	0.45	0.27	36.40	21.6	56
G002904		0.38	0.006	0.18	3.47	7.8	<0.2	<10	310	0.87	0.23	0.60	0.19	51.50	26.2	74
G002905		0.40	0.009	0.16	2.97	13.2	<0.2	<10	330	0.65	0.19	0.54	0.20	45.50	15.5	57
G002906		0.44	0.007	0.05	3.20	7.5	<0.2	<10	430	0.83	0.15	0.38	0.09	24.40	21.1	84
G002907		0.46	0.008	0.19	2.70	9.8	<0.2	<10	300	0.84	0.19	0.21	0.10	68.20	15.8	65
G002908		0.34	<0.005	0.10	1.20	11.6	<0.2	<10	90	0.32	0.23	0.15	0.22	16.35	12.3	31
G002909		0.50	0.018	0.15	2.21	12.7	<0.2	<10	190	0.58	0.16	0.54	0.32	59.40	13.7	47
G002910		0.46	0.050	0.09	2.21	7.5	<0.2	<10	170	0.47	0.15	0.43	0.15	39.00	11.4	46
G002910D		0.36	0.009	0.09	2.18	7.7	<0.2	<10	180	0.47	0.15	0.42	0.15	39.90	11.4	46
G002911		0.44	0.008	0.07	2.35	10.3	<0.2	<10	210	0.40	0.15	0.47	0.15	31.60	11.6	44
G002912		0.44	<0.005	0.07	0.34	0.9	<0.2	<10	60	0.11	0.07	0.30	0.04	8.36	2.6	6
G002913		0.36	<0.005	0.07	2.17	9.8	<0.2	<10	250	0.39	0.17	0.57	0.16	20.70	12.7	42
G002914		0.40	<0.005	0.08	1.48	4.1	<0.2	<10	180	0.21	0.12	0.39	0.09	13.85	6.3	29
G002915		0.36	<0.005	0.11	1.16	2.2	<0.2	<10	140	0.19	0.12	0.39	0.06	13.45	4.2	26
G002916		0.44	0.006	0.11	2.28	11.4	<0.2	<10	220	0.44	0.15	0.50	0.21	35.40	19.5	52
G002917		0.36	0.005	0.07	2.04	8.6	<0.2	<10	160	0.27	0.18	0.40	0.14	19.70	8.8	41
G002918		0.36	<0.005	0.13	1.95	7.4	<0.2	<10	160	0.36	0.13	0.37	0.11	21.50	10.2	39
G002919		0.28	<0.005	0.23	0.35	1.7	<0.2	<10	60	0.14	0.05	0.16	0.05	24.80	3.9	8
G002920		0.30	0.009	0.24	2.44	3.6	<0.2	<10	200	0.48	0.15	0.50	0.24	52.10	14.1	68
G002921		0.42	<0.005	0.23	2.64	5.6	<0.2	<10	210	0.65	0.14	0.59	0.19	102.50	23.5	75

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002883		2.12	39.5	3.63	9.13	0.21	0.06	0.09	0.037	0.31	42.1	12.4	0.90	621	1.57
G002884		1.77	37.3	3.71	10.30	0.20	0.06	0.05	0.036	0.37	33.4	12.7	1.02	596	1.28
G002885		1.59	31.1	3.18	9.16	0.16	0.05	0.05	0.028	0.32	19.7	10.7	0.90	438	0.94
G002886		2.04	24.7	2.83	7.43	0.14	0.05	0.08	0.030	0.24	18.4	10.1	0.87	351	1.00
G002887		1.74	82.0	3.34	9.07	0.17	0.05	0.08	0.024	0.38	17.6	11.4	2.27	445	1.86
G002888		0.97	29.5	3.03	6.99	0.11	0.05	0.05	0.022	0.07	11.4	11.3	1.41	413	0.99
G002889		0.82	23.3	3.22	6.23	0.09	0.05	0.06	0.022	0.07	10.8	11.5	1.48	620	1.09
G002890		0.84	25.0	3.50	6.42	0.10	0.05	0.07	0.021	0.08	12.0	11.4	1.48	646	1.17
G002891		1.20	49.1	3.59	7.28	0.19	0.10	0.08	0.032	0.11	29.7	11.1	1.31	664	1.99
G002892		0.79	35.6	4.30	7.05	0.14	0.07	0.06	0.026	0.06	17.3	11.6	1.31	577	1.23
G002893		0.66	42.1	3.48	7.17	0.12	0.06	0.06	0.025	0.06	16.1	10.8	1.44	1180	1.04
G002894		0.70	39.4	3.13	6.79	0.09	0.05	0.06	0.022	0.04	10.8	9.0	1.20	1540	1.53
G002895		0.69	24.8	3.04	7.34	0.11	0.03	0.05	0.026	0.05	10.1	11.3	1.51	688	0.99
G002896		0.73	44.9	3.72	7.03	0.12	0.04	0.07	0.023	0.06	13.8	8.7	1.30	2920	1.82
G002897		0.74	34.8	3.21	6.97	0.14	0.07	0.03	0.020	0.15	9.6	10.9	1.53	474	0.76
G002898		0.92	32.0	3.57	9.04	0.11	0.05	0.05	0.024	0.08	9.8	13.3	1.70	399	0.52
G002899		0.89	48.3	4.13	9.12	0.14	0.10	0.05	0.027	0.14	13.8	13.2	1.74	454	0.57
G002900		<0.05	0.9	0.02	0.07	<0.05	0.02	0.01	<0.005	<0.01	0.7	0.1	<0.01	<5	0.05
G002901		1.49	48.4	3.06	7.48	0.16	0.07	0.21	0.034	0.12	34.4	7.8	0.62	1210	2.30
G002902		2.16	40.1	3.86	8.92	0.15	0.05	0.06	0.032	0.31	19.0	15.7	1.14	500	1.14
G002903		2.44	49.0	3.83	9.25	0.16	0.05	0.03	0.033	0.39	17.2	13.6	1.08	489	0.97
G002904		2.49	48.3	4.44	12.10	0.18	0.05	0.04	0.039	0.54	24.1	14.3	1.33	458	1.47
G002905		1.34	37.9	3.66	9.09	0.18	0.07	0.06	0.035	0.23	28.6	13.1	0.90	290	1.38
G002906		3.70	34.7	4.42	11.40	0.18	0.04	0.04	0.042	0.48	13.4	14.6	1.36	457	1.07
G002907		2.72	46.8	4.36	9.00	0.19	0.05	0.06	0.035	0.36	38.4	12.8	0.93	314	1.14
G002908		1.55	25.1	3.12	7.96	0.07	<0.02	0.06	0.024	0.06	11.5	8.2	0.35	828	1.67
G002909		1.36	46.9	3.25	7.25	0.20	0.11	0.05	0.027	0.16	35.2	12.6	0.79	306	0.80
G002910		1.25	29.8	2.87	7.36	0.13	0.07	0.04	0.027	0.09	22.7	13.3	0.75	252	0.87
G002910D		1.23	29.8	2.98	7.21	0.13	0.07	0.05	0.029	0.09	23.3	13.2	0.74	275	0.90
G002911		1.09	23.8	2.74	7.30	0.11	0.07	0.05	0.028	0.06	18.1	14.1	0.72	203	0.72
G002912		0.26	8.5	0.71	2.16	<0.05	0.02	0.04	0.006	0.02	5.3	1.3	0.14	111	0.43
G002913		1.04	18.4	2.73	7.46	0.11	0.04	0.05	0.029	0.08	12.8	13.8	0.69	403	1.01
G002914		0.85	12.1	1.64	5.54	0.07	0.03	0.04	0.013	0.05	6.3	9.1	0.48	237	0.56
G002915		0.63	13.7	1.18	5.14	0.05	0.03	0.04	0.012	0.03	7.1	6.7	0.37	99	0.60
G002916		1.60	34.1	4.09	7.43	0.14	0.08	0.03	0.022	0.23	16.6	13.6	0.88	457	1.10
G002917		0.98	14.7	2.36	7.30	0.09	0.04	0.03	0.023	0.07	11.3	11.4	0.70	175	0.66
G002918		1.04	20.1	2.58	6.62	0.09	0.04	0.04	0.022	0.06	14.0	12.6	0.62	190	0.76
G002919		0.19	12.1	0.84	2.04	0.08	0.02	0.03	<0.005	0.01	19.1	1.0	0.09	395	0.77
G002920		1.92	33.4	3.44	9.20	0.17	0.05	0.06	0.031	0.17	35.5	19.6	1.19	223	0.88
G002921		5.23	50.2	3.91	9.79	0.27	0.11	0.03	0.026	0.27	72.6	25.4	1.44	503	0.67

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002883		1.75	40.6	870	10.1	32.7	<0.001	0.03	0.56	7.5	1.7	0.8	30.1	0.01	0.08
G002884		2.18	43.3	800	8.9	38.2	<0.001	0.03	0.78	7.1	1.2	0.9	35.9	0.01	0.09
G002885		2.05	37.8	850	8.2	35.4	<0.001	0.05	0.97	5.5	1.1	0.8	37.8	0.01	0.07
G002886		1.52	34.3	990	13.8	28.4	<0.001	0.04	3.17	6.2	1.0	0.8	34.3	<0.01	0.07
G002887		0.97	66.5	630	8.6	33.4	0.004	0.31	0.35	7.6	2.3	0.4	30.2	0.01	0.11
G002888		0.94	30.9	810	7.5	14.9	0.002	0.08	0.30	5.8	1.2	0.4	34.1	<0.01	0.06
G002889		0.66	31.7	790	9.6	11.2	<0.001	0.04	0.37	5.4	1.0	0.3	23.0	<0.01	0.05
G002890		0.68	32.8	800	9.1	12.0	0.001	0.05	0.36	5.6	1.1	0.3	23.3	<0.01	0.04
G002891		0.85	50.2	940	12.0	17.0	0.001	0.07	0.58	7.1	1.9	0.4	42.4	0.01	0.14
G002892		0.98	28.5	810	8.5	10.3	0.001	0.07	0.46	6.6	1.7	0.4	27.4	0.01	0.05
G002893		0.81	33.9	810	7.0	10.2	0.001	0.06	0.40	6.0	1.5	0.4	34.3	0.01	0.06
G002894		0.69	28.0	1160	8.1	6.4	0.001	0.08	0.62	4.9	1.4	0.4	34.1	0.01	0.06
G002895		0.79	28.7	830	7.4	8.0	<0.001	0.02	0.36	5.9	0.7	0.4	22.3	<0.01	0.03
G002896		0.61	29.1	1050	9.0	10.0	<0.001	0.06	0.40	5.9	1.3	0.3	26.0	0.01	0.08
G002897		0.77	30.3	780	7.9	17.1	<0.001	<0.01	0.25	6.1	0.5	0.4	23.1	<0.01	0.06
G002898		0.94	30.5	680	8.8	14.0	<0.001	0.01	0.28	6.7	0.6	0.5	24.2	<0.01	0.04
G002899		1.21	30.3	600	9.4	20.5	<0.001	<0.01	0.33	9.7	0.7	0.5	24.4	<0.01	0.04
G002900		<0.05	0.5	10	0.7	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.9	<0.01	0.01
G002901		1.06	37.6	1870	12.9	18.1	0.001	0.16	25.00	4.8	2.3	0.6	56.5	0.01	0.14
G002902		1.63	45.4	600	10.0	32.7	<0.001	0.02	2.03	7.5	0.9	0.7	26.7	0.01	0.09
G002903		2.03	57.4	930	10.5	38.3	<0.001	0.02	1.78	6.9	0.9	0.7	24.8	0.01	0.09
G002904		2.65	89.8	650	9.7	52.2	<0.001	0.10	2.13	8.0	1.2	1.5	44.9	0.01	0.09
G002905		1.61	39.7	840	10.1	26.5	0.001	0.01	2.51	8.5	1.6	0.8	33.1	0.01	0.06
G002906		1.77	48.2	970	10.1	41.0	<0.001	<0.01	0.79	9.8	0.8	0.9	20.1	<0.01	0.08
G002907		1.82	53.9	650	10.6	34.1	<0.001	0.09	0.62	7.7	1.3	0.8	23.6	0.01	0.08
G002908		0.90	29.1	570	10.0	14.5	<0.001	0.03	0.56	1.9	0.6	0.6	18.3	<0.01	0.07
G002909		1.46	45.2	1100	8.2	20.4	0.001	0.01	1.51	7.4	1.2	0.6	32.9	0.01	0.06
G002910		1.78	36.7	810	9.1	14.0	<0.001	0.01	1.27	6.0	0.9	0.6	27.6	<0.01	0.05
G002910D		1.83	36.9	830	9.1	14.5	<0.001	0.01	1.49	6.0	0.9	0.6	27.9	0.01	0.05
G002911		1.81	34.4	800	8.6	9.8	<0.001	0.01	1.27	5.9	0.8	0.6	28.5	<0.01	0.04
G002912		0.49	6.1	630	1.8	2.5	<0.001	0.01	0.20	0.9	0.5	0.2	19.8	<0.01	0.02
G002913		1.78	28.3	830	8.2	14.2	<0.001	0.01	1.00	5.4	0.8	0.6	30.6	<0.01	0.05
G002914		0.97	19.4	730	8.5	7.7	<0.001	0.01	0.52	3.1	0.5	0.5	19.8	<0.01	0.02
G002915		0.62	16.7	970	7.2	4.3	<0.001	0.05	0.48	2.2	0.6	0.4	21.3	<0.01	0.02
G002916		1.40	38.4	910	9.1	28.3	<0.001	<0.01	0.98	6.8	0.8	0.7	24.9	<0.01	0.04
G002917		1.39	30.8	840	10.1	10.7	<0.001	0.01	0.96	4.6	0.6	0.6	21.3	<0.01	0.03
G002918		1.19	34.7	880	8.5	10.8	<0.001	0.02	0.81	4.3	0.8	0.5	22.4	<0.01	0.03
G002919		0.25	7.3	610	2.2	1.4	<0.001	0.04	0.19	1.1	0.8	0.2	13.6	<0.01	0.01
G002920		1.42	61.8	1070	12.7	22.6	0.001	0.05	0.42	7.9	1.3	0.7	20.4	0.01	0.02
G002921		0.94	79.5	890	11.7	42.1	<0.001	<0.01	0.40	10.3	1.4	1.4	29.0	0.01	0.04

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002883		0.109	0.21	3.18	91	0.21	21.10	91
G002884		0.129	0.22	2.16	89	0.16	17.40	90
G002885		0.112	0.19	1.79	73	0.13	10.35	82
G002886		0.089	0.29	1.97	70	0.16	9.44	87
G002887		0.124	0.22	2.74	107	0.12	14.20	301
G002888		0.093	0.11	1.04	72	0.18	8.13	86
G002889		0.095	0.10	0.85	75	0.09	8.47	93
G002890		0.094	0.10	0.95	76	0.08	8.94	91
G002891		0.088	0.18	1.81	79	0.11	23.80	111
G002892		0.108	0.10	1.56	90	0.15	15.80	100
G002893		0.084	0.09	1.63	73	0.12	12.70	104
G002894		0.080	0.08	1.57	72	0.11	9.45	97
G002895		0.102	0.07	0.65	74	0.10	6.48	102
G002896		0.083	0.13	1.11	80	0.13	11.40	86
G002897		0.136	0.11	0.50	84	0.12	5.38	79
G002898		0.148	0.13	0.55	94	0.11	5.05	88
G002899		0.177	0.16	0.83	114	0.12	9.61	88
G002900		<0.005	<0.02	0.12	<1	<0.05	0.71	3
G002901		0.056	0.21	3.55	63	0.15	19.85	90
G002902		0.132	0.22	1.73	93	0.15	9.52	97
G002903		0.144	0.23	1.04	92	0.29	9.27	94
G002904		0.139	0.29	2.03	91	0.17	12.80	131
G002905		0.139	0.17	2.40	84	0.19	17.20	72
G002906		0.161	0.34	0.83	135	0.18	7.14	96
G002907		0.120	0.27	2.11	80	0.14	14.65	98
G002908		0.080	0.10	0.64	68	0.12	3.95	60
G002909		0.147	0.15	1.67	79	0.21	15.10	71
G002910		0.131	0.13	1.30	74	0.18	10.70	70
G002910D		0.129	0.14	1.30	74	0.19	11.65	70
G002911		0.137	0.13	1.18	72	0.20	9.26	63
G002912		0.038	0.02	0.35	15	0.05	3.26	16
G002913		0.123	0.11	1.06	71	0.19	5.83	74
G002914		0.079	0.10	0.55	37	0.13	3.86	49
G002915		0.058	0.08	0.62	26	0.10	4.38	35
G002916		0.144	0.20	1.12	82	0.22	10.70	75
G002917		0.120	0.12	0.64	62	0.20	5.90	61
G002918		0.093	0.11	1.08	59	0.20	7.88	59
G002919		0.029	0.04	0.87	19	0.07	9.88	10
G002920		0.105	0.22	1.69	81	0.11	14.50	94
G002921		0.130	0.32	3.24	84	0.15	34.80	85

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21	Au-AA23	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Recvd Wt.	Au	Ag	Al	As	Au	B	Ba	Be	Bi	Ca	Cd	Ce	Co	Cr
		kg	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002922		0.38	<0.005	0.36	0.94	5.6	<0.2	<10	100	0.22	0.18	0.20	0.14	16.75	7.8	22
G002923		0.40	0.015	0.07	2.43	7.7	<0.2	<10	120	0.47	0.18	0.21	0.27	30.50	15.3	56
G002924		0.42	<0.005	0.15	1.94	7.8	<0.2	<10	180	0.32	0.16	0.30	0.18	17.35	8.8	43
G002925		0.58	<0.005	0.22	2.91	7.3	<0.2	<10	380	0.57	0.20	0.55	0.27	30.40	19.1	59
G002926		0.42	0.031	0.23	2.48	9.0	<0.2	<10	250	0.59	0.19	0.53	0.19	35.40	16.5	45
G002927		0.30	0.015	0.71	2.74	32.7	<0.2	<10	400	0.60	0.17	0.69	0.59	57.60	27.6	53
G002928		0.44	0.022	0.36	2.06	68.4	<0.2	<10	310	0.51	0.18	0.68	0.28	31.20	14.5	42
G002929		0.38	0.005	0.40	2.07	4.5	<0.2	<10	580	0.51	0.20	0.73	0.50	26.80	8.3	44
G002930		0.32	<0.005	0.25	2.40	3.4	<0.2	<10	400	0.42	0.16	0.98	0.31	19.85	12.8	43
G002930D		0.36	0.005	0.29	2.78	6.2	<0.2	<10	400	0.55	0.20	0.95	0.41	22.70	17.4	48
G002931		1.50	0.008	0.31	1.16	8.3	<0.2	<10	170	0.26	0.15	0.49	0.30	21.60	30.0	32
G002932		0.48	0.005	0.06	2.19	5.9	<0.2	<10	140	0.27	0.14	0.42	0.10	17.95	10.2	45
G002933		0.40	0.006	0.12	2.27	6.9	<0.2	<10	180	0.32	0.14	0.59	0.11	19.55	14.5	52
G002934		0.42	0.008	0.07	2.59	10.4	<0.2	<10	210	0.54	0.14	0.51	0.19	23.70	13.3	60
G002935		0.36	0.010	0.12	1.64	5.5	<0.2	<10	180	0.40	0.13	0.66	0.12	24.90	17.1	38
G002936		0.38	0.016	0.16	2.26	12.2	<0.2	<10	230	0.54	0.20	0.50	0.22	66.50	17.8	49
G002937		0.30	0.006	0.24	2.73	4.2	<0.2	<10	240	0.63	0.18	1.21	0.38	51.30	19.0	68
G002938		0.36	0.005	0.12	2.42	8.6	<0.2	<10	180	0.46	0.19	0.31	0.18	21.50	17.4	75
G002939		0.36	<0.005	0.15	3.16	10.3	<0.2	<10	100	0.75	0.15	0.31	0.36	23.80	22.5	47
G002940		0.04	<0.005	0.01	0.02	0.1	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.42	0.1	<1
G002941		1.02	0.012	0.18	1.09	12.0	<0.2	<10	90	0.27	0.15	0.19	0.14	23.00	8.7	28
G002942		0.32	<0.005	0.09	0.64	3.6	<0.2	<10	40	0.08	0.14	0.06	0.06	10.10	2.6	13
G002943		0.36	0.008	0.18	2.81	11.4	<0.2	<10	310	0.76	0.19	0.27	0.19	42.20	17.5	55
G002944		0.34	0.007	0.32	3.24	6.1	<0.2	<10	340	0.71	0.18	0.59	0.24	47.50	16.6	66
G002945		0.36	0.006	0.15	2.41	6.3	<0.2	<10	300	0.48	0.14	0.81	0.16	23.80	13.8	47
G002946		0.34	0.032	0.35	2.44	35.9	<0.2	<10	350	0.59	0.16	0.65	0.22	29.20	15.1	58
G002947		0.36	<0.005	0.31	2.35	8.1	<0.2	<10	400	0.56	0.25	1.26	0.55	32.70	14.1	48
G002948		0.36	<0.005	0.25	2.43	4.1	<0.2	<10	410	0.37	0.20	0.96	0.33	20.40	12.9	50
G002949		0.38	0.007	0.41	2.45	11.5	<0.2	<10	280	0.27	0.29	0.88	0.56	19.10	14.7	47
G002950		0.40	0.006	0.25	2.08	7.7	<0.2	<10	260	0.27	0.13	0.73	0.37	17.85	15.4	43
G002950D		0.38	0.012	0.23	2.05	7.5	<0.2	<10	240	0.22	0.13	0.69	0.17	16.55	14.1	41
G002951		0.40	0.021	0.77	2.72	23.0	<0.2	<10	300	0.24	0.13	0.55	0.55	18.55	18.9	51
G002952		0.50	0.012	0.20	2.00	9.9	<0.2	<10	160	0.20	0.14	0.51	0.40	15.55	15.1	39
G002953		0.56	0.012	0.20	2.17	14.5	<0.2	<10	140	0.23	0.13	0.54	0.22	17.15	16.5	41
G002954		0.44	0.014	0.27	2.20	13.6	<0.2	<10	200	0.25	0.15	0.78	0.45	15.40	14.0	42
G002955		0.40	0.012	0.17	2.45	7.2	<0.2	<10	200	0.25	0.13	0.57	0.26	13.60	14.4	46
G002956		0.36	0.007	0.33	0.70	4.5	<0.2	<10	180	0.22	0.09	0.49	0.24	15.45	10.5	12
G002957		0.28	0.009	0.16	1.14	4.0	<0.2	<10	180	0.17	0.09	0.41	0.36	8.90	8.7	29
G002958		0.46	0.010	0.12	2.57	5.6	<0.2	<10	160	0.24	0.10	0.36	0.24	13.60	13.9	54
G002959		0.42	0.010	0.15	3.10	4.2	<0.2	<10	270	0.26	0.10	0.42	0.26	17.20	23.4	64

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002922		1.24	23.1	2.18	5.41	0.06	0.02	0.10	0.015	0.05	7.1	4.6	0.26	288	1.83
G002923		2.21	30.6	4.11	8.56	0.10	0.03	0.05	0.032	0.17	15.2	14.7	0.76	316	1.09
G002924		1.41	20.2	2.92	8.37	0.09	0.04	0.06	0.023	0.15	11.0	11.0	0.68	225	1.38
G002925		2.24	32.7	3.78	10.60	0.14	0.05	0.04	0.031	0.35	16.7	13.7	1.02	763	1.63
G002926		1.21	34.1	3.21	8.42	0.14	0.04	0.05	0.025	0.16	21.1	11.5	0.72	669	1.83
G002927		1.65	72.7	3.48	7.51	0.16	0.09	0.10	0.026	0.21	26.6	11.5	0.82	1515	1.71
G002928		1.57	33.9	2.98	8.03	0.12	0.05	0.08	0.023	0.15	20.7	10.6	0.72	540	1.60
G002929		1.09	31.7	2.09	6.88	0.10	0.06	0.07	0.022	0.10	14.5	9.4	0.77	298	0.89
G002930		1.03	34.7	2.75	7.36	0.11	0.06	0.05	0.022	0.13	14.2	11.3	1.01	452	1.18
G002930D		1.19	46.8	3.52	8.74	0.13	0.07	0.05	0.027	0.13	17.4	12.9	1.10	504	1.85
G002931		0.66	23.4	3.73	4.86	0.08	0.02	0.07	0.016	0.04	10.8	5.6	0.37	1985	2.77
G002932		1.36	12.7	2.59	7.65	0.09	0.07	0.03	0.019	0.11	8.0	16.4	0.84	212	0.52
G002933		1.49	15.3	3.58	8.27	0.11	0.05	0.03	0.020	0.13	10.0	14.8	0.94	438	1.54
G002934		1.51	32.5	3.26	8.31	0.13	0.20	0.10	0.029	0.22	12.0	15.2	1.01	233	0.76
G002935		1.08	19.0	2.80	5.81	0.06	0.04	0.04	0.028	0.06	11.3	10.4	0.58	944	1.18
G002936		1.26	49.6	5.03	7.33	0.20	0.18	0.05	0.031	0.14	33.2	15.5	0.76	211	1.17
G002937		2.01	38.6	3.71	9.55	0.20	0.06	0.05	0.044	0.29	30.8	19.9	1.53	817	0.90
G002938		4.88	30.5	4.36	11.00	0.12	0.04	0.04	0.033	0.26	9.7	17.5	1.10	516	1.17
G002939		1.27	25.8	4.11	7.69	0.10	0.12	0.07	0.034	0.07	10.9	22.9	0.59	526	1.25
G002940		<0.05	0.7	0.02	0.08	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05
G002941		1.17	22.7	2.84	5.48	0.07	0.02	0.04	0.016	0.10	10.2	6.2	0.33	230	1.14
G002942		0.80	10.4	1.34	6.29	<0.05	<0.02	0.03	0.006	0.03	4.7	2.0	0.12	71	1.29
G002943		2.23	36.5	3.83	9.30	0.15	0.08	0.07	0.035	0.31	23.4	15.1	0.89	494	1.35
G002944		1.98	41.0	3.54	10.90	0.18	0.08	0.06	0.030	0.36	33.4	14.3	1.12	339	1.06
G002945		1.53	25.9	3.04	8.79	0.12	0.06	0.03	0.022	0.29	17.0	11.6	0.86	427	1.20
G002946		1.83	33.5	3.44	8.52	0.14	0.06	0.05	0.032	0.33	16.7	11.7	1.08	518	1.10
G002947		1.32	43.1	2.94	7.71	0.17	0.09	0.07	0.023	0.18	30.6	11.6	0.93	525	1.61
G002948		1.27	30.0	2.89	8.02	0.11	0.06	0.05	0.019	0.19	13.0	11.0	1.26	392	1.16
G002949		1.25	38.8	3.18	7.87	0.13	0.06	0.05	0.026	0.16	13.8	9.9	1.40	487	1.33
G002950		0.79	24.2	2.86	6.39	0.10	0.05	0.03	0.021	0.06	9.2	11.2	1.15	682	1.42
G002950D		0.76	22.1	2.82	6.34	0.10	0.04	0.03	0.019	0.05	8.9	11.1	1.16	479	1.23
G002951		1.26	48.9	3.63	7.63	0.13	0.05	0.06	0.020	0.15	10.2	13.9	1.77	910	1.10
G002952		0.73	19.8	2.94	6.21	0.11	0.07	0.03	0.017	0.08	8.9	11.4	1.24	531	1.25
G002953		0.76	22.0	3.41	6.61	0.11	0.09	0.05	0.021	0.07	8.4	11.9	1.26	418	1.47
G002954		0.87	28.8	2.99	6.91	0.10	0.07	0.04	0.022	0.06	8.4	11.3	1.23	508	1.19
G002955		0.77	20.3	3.24	7.58	0.10	0.06	0.04	0.023	0.06	7.4	13.6	1.44	431	1.12
G002956		0.34	35.4	1.35	2.67	<0.05	0.04	0.05	0.011	0.02	6.7	1.7	0.19	1835	1.35
G002957		0.55	26.5	1.90	4.09	0.06	<0.02	0.05	0.011	0.04	4.9	4.6	0.63	770	1.11
G002958		0.82	32.0	3.31	8.20	0.10	0.05	0.04	0.020	0.08	6.9	12.4	1.55	381	0.63
G002959		0.90	38.9	4.17	9.22	0.15	0.08	0.03	0.020	0.26	8.0	12.3	2.08	660	0.50

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002922		0.55	19.3	780	7.9	14.3	<0.001	0.05	0.61	1.3	0.7	0.5	19.9	0.01	0.05
G002923		1.92	52.0	660	12.1	22.2	<0.001	<0.01	0.89	5.2	0.8	0.8	17.5	<0.01	0.05
G002924		1.31	28.3	640	10.5	18.1	<0.001	0.01	0.68	4.5	0.6	0.7	20.0	<0.01	0.04
G002925		1.84	46.6	870	13.2	36.6	<0.001	0.02	1.00	7.4	0.8	1.0	30.0	<0.01	0.08
G002926		1.23	43.8	970	10.6	22.4	<0.001	0.06	1.53	4.6	1.3	0.7	28.3	0.01	0.05
G002927		0.90	44.2	1070	9.5	28.5	<0.001	0.08	2.51	8.7	2.0	0.5	30.4	0.01	0.07
G002928		1.25	36.4	1070	14.4	25.7	<0.001	0.07	11.60	4.4	1.2	0.7	36.9	0.01	0.07
G002929		0.87	36.5	950	10.4	19.3	<0.001	0.08	1.54	4.2	1.4	0.5	37.0	0.01	0.05
G002930		1.09	32.2	860	8.0	22.6	0.001	0.08	4.8	4.8	1.3	0.6	35.9	0.01	0.07
G002930D		1.35	38.3	850	10.0	25.2	0.001	0.10	0.34	6.0	1.6	0.7	38.6	0.01	0.10
G002931		0.67	19.2	1380	8.0	6.7	<0.001	0.11	0.48	2.6	1.1	0.4	30.7	<0.01	0.07
G002932		1.53	30.7	780	10.0	18.6	<0.001	<0.01	0.55	5.0	0.5	0.7	23.3	<0.01	0.02
G002933		1.59	32.4	960	9.7	17.2	<0.001	0.01	0.43	5.4	0.6	0.6	27.6	<0.01	0.03
G002934		1.48	40.0	820	12.9	26.1	<0.001	<0.01	0.78	7.1	0.6	0.6	24.1	<0.01	0.05
G002935		1.26	26.3	970	7.3	9.5	0.006	0.04	0.52	3.8	0.7	0.4	27.5	<0.01	0.04
G002936		1.69	47.3	730	10.2	25.7	0.001	0.01	1.13	9.3	2.2	0.6	25.2	0.01	0.04
G002937		1.58	65.7	1340	14.0	31.3	0.001	0.05	0.35	9.0	1.4	0.7	29.5	0.01	0.04
G002938		1.95	53.2	600	13.6	31.1	<0.001	0.02	0.37	7.7	0.7	1.0	19.9	<0.01	0.05
G002939		1.94	50.3	710	11.1	11.6	<0.001	0.02	0.53	5.5	0.9	0.6	20.5	0.03	0.05
G002940		<0.05	0.5	10	0.6	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01
G002941		1.03	29.1	470	8.6	12.1	<0.001	0.01	0.39	2.7	0.6	0.5	20.8	<0.01	0.05
G002942		0.86	7.3	220	7.1	6.2	<0.001	<0.01	0.32	1.5	0.4	0.7	8.8	<0.01	0.03
G002943		1.90	46.4	560	11.6	33.0	<0.001	<0.01	0.50	8.4	1.1	0.9	20.6	0.01	0.06
G002944		1.96	52.9	820	11.7	44.1	<0.001	0.05	0.63	7.3	1.4	0.9	30.0	0.01	0.05
G002945		1.98	37.4	710	8.8	34.0	<0.001	0.04	1.02	5.2	0.9	0.8	37.2	<0.01	0.05
G002946		1.25	44.5	700	11.5	31.2	<0.001	0.01	3.74	8.6	1.2	0.8	28.2	<0.01	0.08
G002947		1.21	40.6	930	10.1	29.5	0.001	0.08	0.77	5.1	2.2	0.7	45.6	0.01	0.09
G002948		0.98	33.6	720	8.5	30.8	<0.001	0.08	0.25	5.1	1.3	0.5	36.1	<0.01	0.07
G002949		0.83	28.3	720	9.8	27.0	<0.001	0.07	0.33	6.2	1.4	0.4	39.3	0.01	0.16
G002950		0.74	29.7	780	9.9	9.9	<0.001	0.06	0.31	4.9	1.4	0.4	33.4	<0.01	0.05
G002950D		0.68	26.6	830	6.9	7.5	<0.001	0.05	0.29	4.7	1.3	0.4	31.4	<0.01	0.06
G002951		0.62	31.4	710	6.0	17.4	<0.001	0.06	0.48	8.1	1.1	0.3	24.9	<0.01	0.05
G002952		0.64	25.9	760	8.4	12.0	<0.001	0.03	0.43	5.2	0.9	0.3	20.3	<0.01	0.05
G002953		0.72	26.9	730	9.9	10.5	<0.001	0.05	0.49	5.5	1.5	0.3	20.3	<0.01	0.04
G002954		0.65	29.3	990	9.6	9.0	<0.001	0.07	0.51	5.3	1.2	0.4	28.7	<0.01	0.06
G002955		0.78	27.6	720	8.8	9.1	<0.001	0.03	0.42	6.1	1.0	0.4	22.7	<0.01	0.04
G002956		0.33	8.9	1050	3.5	2.3	<0.001	0.10	0.30	1.7	1.4	0.2	21.4	<0.01	0.05
G002957		0.38	14.4	960	4.8	6.7	<0.001	0.08	0.25	2.8	0.7	0.3	21.3	<0.01	0.05
G002958		0.82	26.8	690	9.6	10.2	<0.001	0.02	0.32	6.2	0.5	0.4	19.5	<0.01	0.04
G002959		0.67	31.7	710	8.4	21.5	<0.001	0.01	0.26	8.7	0.5	0.4	19.4	<0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G002922		0.054	0.11	0.75	55	0.11	3.07	47
G002923		0.111	0.18	0.99	74	0.12	6.89	85
G002924		0.110	0.14	0.76	79	0.16	5.22	58
G002925		0.134	0.24	1.13	93	0.19	8.85	103
G002926		0.092	0.15	1.88	70	0.18	13.30	81
G002927		0.081	0.23	2.34	77	0.16	23.50	77
G002928		0.080	0.16	1.74	67	0.19	14.65	89
G002929		0.073	0.10	2.65	58	0.12	12.75	90
G002930		0.084	0.10	2.50	66	0.10	12.90	108
G002930D		0.096	0.13	3.16	83	0.17	16.60	107
G002931		0.056	0.12	1.32	63	0.14	6.22	45
G002932		0.137	0.18	0.74	59	0.15	4.41	70
G002933		0.137	0.16	0.83	78	0.21	5.51	76
G002934		0.160	0.21	0.91	110	0.15	6.37	74
G002935		0.080	0.11	1.03	61	<0.05	6.10	63
G002936		0.133	0.16	3.14	83	0.19	25.30	72
G002937		0.106	0.26	1.66	94	0.15	16.30	99
G002938		0.178	0.24	0.80	122	0.16	6.42	92
G002939		0.118	0.09	0.89	71	0.32	6.02	81
G002940		<0.005	<0.02	0.10	<1	<0.05	0.60	3
G002941		0.077	0.11	0.81	55	0.12	5.53	55
G002942		0.083	0.06	0.37	53	0.11	1.48	18
G002943		0.124	0.24	1.90	86	0.17	14.20	89
G002944		0.119	0.28	2.31	86	0.35	18.10	99
G002945		0.106	0.20	1.13	68	0.14	9.93	84
G002946		0.106	0.24	1.65	92	0.15	14.80	93
G002947		0.080	0.16	3.53	71	0.17	21.70	96
G002948		0.101	0.16	2.12	81	0.11	9.20	86
G002949		0.097	0.18	0.77	84	0.10	15.35	93
G002950		0.085	0.13	0.86	70	0.14	8.22	86
G002950D		0.081	0.10	0.78	67	0.11	7.75	76
G002951		0.099	0.15	0.92	82	0.11	15.15	102
G002952		0.093	0.11	0.63	69	0.11	9.81	81
G002953		0.098	0.10	1.17	73	1.77	6.45	83
G002954		0.089	0.10	0.88	72	0.12	8.57	111
G002955		0.119	0.11	0.76	82	0.14	6.61	114
G002956		0.034	0.09	0.80	25	0.08	9.31	31
G002957		0.055	0.06	0.43	52	0.09	6.38	52
G002958		0.135	0.13	0.34	97	0.12	5.51	88
G002959		0.175	0.17	0.37	119	0.15	7.02	91

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G002960		0.40	<0.005	0.09	2.41	3.1	<0.2	<10	170	0.23	0.12	0.48	0.17	17.75	14.2	51
G002961		0.38	0.010	0.08	2.41	3.6	<0.2	<10	170	0.29	0.13	0.48	0.38	18.80	11.0	50
G002962		0.34	0.006	0.10	2.90	2.0	<0.2	<10	150	0.15	0.09	0.74	0.16	10.35	18.5	150
G002963		0.46	0.007	0.11	1.96	3.9	<0.2	<10	150	0.29	0.10	0.66	0.24	24.20	14.7	34
G002964		0.42	<0.005	0.03	1.78	2.1	<0.2	<10	130	0.09	0.05	0.36	0.07	4.71	4.6	30
G002965		0.42	0.008	0.06	1.83	4.7	<0.2	<10	160	0.29	0.12	0.50	0.18	20.20	12.2	35
G002966		0.50	0.007	0.10	2.58	8.2	<0.2	<10	190	0.47	0.36	0.42	0.15	44.50	16.9	75
G002967		0.42	<0.005	0.16	2.56	2.7	<0.2	<10	160	0.49	0.49	0.45	0.15	33.90	8.9	80
G002968		0.34	0.006	0.29	1.11	2.4	<0.2	<10	170	0.29	0.15	0.47	0.08	20.80	5.6	41
G002969		0.44	0.005	0.07	2.49	3.4	<0.2	<10	180	0.29	0.23	0.53	0.09	31.40	10.7	88
G002970		0.44	<0.005	0.07	2.73	5.5	<0.2	<10	230	0.32	0.13	0.55	0.15	28.40	13.6	135
G002970D		0.34	<0.005	0.10	2.61	7.3	<0.2	<10	240	0.31	0.17	0.60	0.19	31.20	14.4	123
G002971		0.44	<0.005	0.10	2.50	3.0	<0.2	<10	230	0.37	0.14	0.58	0.15	28.70	14.2	111
G002972		0.38	<0.005	0.08	2.77	4.7	<0.2	<10	210	0.36	0.16	0.49	0.16	31.60	17.4	117
G002973		0.28	0.010	0.16	1.39	2.6	<0.2	<10	190	0.32	0.09	0.38	0.24	23.90	7.1	72
G002974		0.40	<0.005	0.20	1.13	2.0	<0.2	<10	160	0.27	0.09	0.49	0.18	22.30	5.2	39
G002975		0.42	<0.005	0.12	2.64	3.9	<0.2	<10	250	0.29	0.21	0.65	0.14	28.00	13.7	131
G002976		0.46	0.007	0.11	2.71	7.6	<0.2	<10	190	0.48	0.54	0.40	0.23	58.10	13.7	103
G002977		0.38	0.005	0.08	2.17	5.1	<0.2	<10	220	0.30	0.17	0.40	0.27	34.50	12.8	48
G002978		0.36	0.006	0.12	2.08	5.5	<0.2	<10	130	0.29	0.14	0.40	0.09	19.20	10.4	36
G002979		0.52	0.006	0.09	2.51	5.8	<0.2	<10	200	0.33	0.12	0.49	0.27	30.70	12.8	48
G002980		0.48	<0.005	0.08	2.04	2.9	<0.2	<10	190	0.18	0.11	0.64	0.11	12.30	10.5	33
G002981		0.74	0.007	0.04	2.20	7.9	<0.2	<10	180	0.19	0.11	0.49	0.15	14.50	9.4	45
G002982		0.42	<0.005	0.06	0.16	0.9	<0.2	<10	40	0.06	0.06	0.17	0.18	3.23	0.5	5
G002983		0.48	0.013	0.09	2.75	2.9	<0.2	<10	150	0.19	0.09	0.41	0.29	12.35	15.5	53
G002984		0.44	<0.005	0.06	2.16	7.0	<0.2	<10	150	0.36	0.21	0.40	0.14	17.40	9.5	48
G002985		0.48	<0.005	0.10	2.46	5.5	<0.2	<10	160	0.65	0.15	0.35	0.11	26.80	21.7	52
G002986		0.32	<0.005	0.06	0.85	1.3	<0.2	<10	90	0.15	0.06	0.26	0.08	6.87	4.9	24
G002987		0.46	<0.005	0.09	2.31	4.3	<0.2	<10	210	0.29	0.11	0.50	0.10	14.90	15.8	62
G002988		0.46	<0.005	0.08	2.40	3.3	<0.2	<10	160	0.37	0.11	0.56	0.12	17.00	11.7	63
G002989		0.56	0.009	0.07	2.23	3.9	<0.2	<10	150	0.52	0.15	0.45	0.19	35.90	11.2	48
G002990		0.46	0.005	0.07	1.91	4.4	<0.2	<10	160	0.30	0.14	0.52	0.12	18.00	8.6	46
G002991		0.44	0.006	0.24	2.39	5.3	<0.2	<10	230	0.55	0.15	0.64	0.17	49.20	15.0	54
G002992		0.42	<0.005	0.34	0.96	5.8	<0.2	<10	70	0.20	0.56	0.11	0.23	14.90	4.9	23
G002993		0.38	<0.005	0.38	1.09	3.5	<0.2	<10	80	0.42	0.21	0.29	1.05	25.90	6.2	24
G002994		0.42	<0.005	0.13	0.45	3.8	<0.2	<10	30	0.11	0.18	0.05	0.13	7.93	2.3	12
G002995		0.38	<0.005	0.29	0.25	0.8	<0.2	<10	30	0.06	0.06	0.06	0.14	4.57	1.3	6
G002996		0.38	0.007	0.42	2.14	12.0	<0.2	<10	360	0.72	0.20	0.70	0.26	71.30	19.6	52
G002997		0.40	0.005	0.14	2.11	4.9	<0.2	<10	250	0.54	0.18	0.32	0.19	29.00	12.5	49
G002998		0.40	0.014	0.20	2.29	3.7	<0.2	<10	290	0.64	0.15	0.75	0.21	40.90	16.4	49

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G002960		0.77	20.0	2.82	7.69	0.09	0.05	0.04	0.021	0.06	9.3	12.0	1.32	612	0.65
G002961		0.82	22.4	2.47	7.49	0.08	0.09	0.05	0.025	0.05	9.5	13.3	1.11	258	0.55
G002962		0.65	17.3	3.50	9.30	0.11	0.05	0.04	0.017	0.05	5.6	11.2	2.31	595	0.58
G002963		0.88	37.9	3.61	6.29	0.11	0.07	0.03	0.028	0.08	10.5	9.2	1.04	516	0.63
G002964		0.40	8.7	2.87	2.29	<0.05	<0.02	0.02	0.007	0.04	2.2	3.3	0.68	594	0.40
G002965		0.82	23.4	2.80	5.62	0.10	0.10	0.02	0.020	0.09	9.5	9.8	0.71	445	0.65
G002966		1.17	21.0	3.79	7.54	0.14	0.18	0.04	0.023	0.22	22.7	12.2	1.23	452	0.87
G002967		1.43	20.6	2.31	8.42	0.12	0.10	0.06	0.024	0.36	19.0	13.6	1.49	293	1.15
G002968		0.98	20.0	1.49	3.82	0.06	0.03	0.06	0.012	0.18	13.0	3.1	0.58	286	1.17
G002969		1.98	10.6	2.76	9.79	0.13	0.05	0.03	0.015	0.50	17.0	8.4	1.68	319	0.86
G002970		2.01	11.8	3.01	9.38	0.14	0.05	0.03	0.012	0.56	14.9	11.1	1.86	318	0.81
G002970D		1.96	14.1	3.19	9.39	0.14	0.05	0.04	0.015	0.52	16.3	9.7	1.76	465	1.41
G002971		1.69	15.1	2.78	7.99	0.12	0.05	0.05	0.016	0.48	15.0	10.7	1.60	358	0.82
G002972		1.95	15.2	3.26	9.37	0.13	0.07	0.03	0.019	0.50	16.1	12.5	1.74	539	1.09
G002973		1.13	16.0	1.88	4.64	0.08	0.03	0.06	0.012	0.25	14.2	4.4	0.83	389	1.21
G002974		0.78	15.0	1.51	3.66	0.06	0.03	0.09	0.010	0.24	12.4	3.0	0.67	369	1.10
G002975		1.61	12.0	2.91	9.79	0.13	0.05	0.03	0.011	0.57	15.5	8.1	2.09	398	1.08
G002976		1.26	20.8	3.52	8.43	0.15	0.16	0.03	0.024	0.41	32.4	12.1	1.70	407	1.34
G002977		1.11	17.1	2.82	7.09	0.09	0.05	0.06	0.022	0.11	14.3	10.1	0.87	1405	1.45
G002978		1.08	28.1	2.80	6.61	0.07	0.04	0.05	0.022	0.06	9.8	10.0	0.67	333	0.83
G002979		1.01	33.3	3.34	7.13	0.10	0.11	0.03	0.023	0.07	13.1	11.6	0.91	364	0.63
G002980		0.77	15.3	2.39	6.62	0.06	0.06	0.03	0.018	0.04	6.4	11.0	0.92	715	0.59
G002981		0.66	13.4	2.70	6.86	0.06	0.06	0.03	0.020	0.04	7.2	10.7	1.07	253	1.37
G002982		0.12	12.2	0.13	1.08	<0.05	<0.02	0.04	0.005	0.01	1.6	0.5	0.05	27	0.19
G002983		0.75	29.4	3.21	8.07	0.12	0.11	0.04	0.021	0.12	6.2	12.5	1.73	359	0.43
G002984		1.73	19.9	2.73	7.19	0.10	0.12	0.03	0.030	0.16	9.3	19.6	0.85	197	0.45
G002985		1.50	29.2	3.74	7.03	0.12	0.09	0.03	0.030	0.16	13.6	18.4	0.87	662	0.77
G002986		0.60	9.7	1.29	3.19	0.06	0.04	0.04	0.013	0.09	3.6	6.0	0.39	135	0.85
G002987		1.45	18.8	3.09	8.04	0.14	0.05	0.04	0.025	0.24	7.2	17.3	1.14	355	1.02
G002988		1.51	18.7	2.74	7.50	0.12	0.06	0.03	0.029	0.19	8.5	16.8	1.10	244	0.58
G002989		1.39	31.8	2.50	6.98	0.11	0.12	0.03	0.031	0.20	16.4	17.3	0.89	208	0.46
G002990		1.13	17.0	2.30	6.65	0.09	0.09	0.03	0.027	0.09	9.6	15.7	0.79	186	0.59
G002991		1.76	37.8	3.02	8.06	0.14	0.10	0.06	0.034	0.16	33.9	19.3	0.93	268	0.91
G002992		1.54	21.7	2.29	6.87	0.06	0.02	0.07	0.033	0.06	7.3	6.6	0.26	149	1.32
G002993		0.79	40.5	1.99	5.07	0.06	0.02	0.10	0.022	0.06	12.9	6.4	0.21	164	1.11
G002994		0.50	12.8	1.05	4.78	<0.05	<0.02	0.04	0.012	0.03	3.9	1.4	0.07	54	1.09
G002995		0.26	6.5	0.56	1.46	<0.05	<0.02	0.06	0.008	0.02	2.5	0.5	0.03	26	0.64
G002996		2.11	44.6	3.17	7.62	0.20	0.05	0.09	0.036	0.24	44.3	12.9	0.79	967	1.78
G002997		1.84	25.2	3.03	7.58	0.13	0.03	0.05	0.030	0.29	16.2	11.8	0.83	396	1.19
G002998		1.53	29.2	3.04	8.10	0.15	0.03	0.05	0.029	0.33	23.0	11.2	0.91	494	1.20

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G002960		0.96	25.5	780	10.2	9.3	<0.001	0.02	0.30	6.2	0.5	0.4	25.5	<0.01	0.04
G002961		1.16	27.4	670	12.7	8.1	<0.001	0.02	0.39	6.3	0.5	0.5	24.2	<0.01	0.04
G002962		0.66	48.0	830	6.3	7.3	<0.001	0.06	0.25	7.9	0.5	0.3	23.1	<0.01	0.02
G002963		0.74	22.0	690	8.8	10.4	<0.001	0.03	0.42	9.8	0.7	0.4	24.1	<0.01	0.05
G002964		0.21	7.6	770	2.2	2.7	<0.001	0.06	0.14	1.1	0.2	<0.2	8.4	<0.01	0.02
G002965		1.16	23.9	770	7.1	12.0	<0.001	0.02	0.30	5.0	0.4	0.4	26.5	<0.01	0.05
G002966		1.63	36.5	670	16.9	35.5	<0.001	0.02	0.39	5.4	0.7	0.6	26.5	<0.01	0.09
G002967		1.92	37.8	790	25.6	41.7	<0.001	0.04	0.31	4.6	0.7	0.8	29.5	<0.01	0.06
G002968		0.68	16.8	1320	8.3	19.4	<0.001	0.14	0.28	1.8	0.8	0.4	32.0	<0.01	0.07
G002969		1.91	39.0	860	11.9	55.5	<0.001	0.04	0.21	4.1	0.4	0.8	39.8	<0.01	0.03
G002970		1.83	49.0	880	9.9	53.6	<0.001	0.04	0.22	4.3	0.4	0.7	39.0	<0.01	0.02
G002970D		1.85	46.0	990	10.6	51.0	<0.001	0.06	0.23	4.1	0.6	0.7	42.7	<0.01	0.03
G002971		1.84	43.3	630	10.3	52.3	<0.001	0.05	0.27	4.4	0.5	0.6	39.8	<0.01	0.03
G002972		2.07	46.0	780	11.0	58.7	<0.001	0.05	0.28	4.7	0.5	0.7	38.6	<0.01	0.02
G002973		0.90	24.7	1060	3.8	26.4	<0.001	0.12	0.26	2.3	0.8	0.4	31.0	<0.01	0.04
G002974		0.85	16.0	1420	6.0	19.7	<0.001	0.14	0.18	1.6	0.9	0.4	33.4	<0.01	0.05
G002975		1.87	50.3	1050	9.5	46.9	<0.001	0.06	0.22	3.8	0.6	0.7	39.3	<0.01	0.05
G002976		2.00	42.6	650	21.2	48.5	<0.001	0.02	0.29	5.5	1.0	0.8	26.7	<0.01	0.10
G002977		1.26	24.8	630	13.4	20.1	<0.001	0.04	0.31	4.8	0.6	0.5	24.5	<0.01	0.05
G002978		0.92	20.5	660	8.1	9.1	<0.001	0.04	0.34	4.9	0.6	0.5	21.9	<0.01	0.04
G002979		1.04	27.3	770	7.6	10.9	<0.001	0.01	0.41	6.8	0.6	0.5	25.0	<0.01	0.04
G002980		0.81	19.6	670	8.6	5.6	<0.001	0.05	0.26	4.0	0.5	0.4	28.5	<0.01	0.02
G002981		0.89	22.0	730	9.1	4.4	<0.001	0.04	0.34	4.8	0.4	0.4	19.4	<0.01	0.02
G002982		0.23	1.7	290	3.4	0.6	<0.001	0.04	0.16	0.9	0.3	0.2	12.0	0.01	0.02
G002983		0.81	26.0	550	8.7	13.8	<0.001	0.01	0.31	7.8	0.4	0.4	18.8	<0.01	0.03
G002984		1.89	28.8	610	9.2	22.6	<0.001	0.03	0.33	5.1	0.7	0.6	24.2	0.03	0.05
G002985		1.78	28.7	770	6.6	20.8	<0.001	0.03	0.36	5.6	1.0	0.5	21.4	0.02	0.06
G002986		0.74	14.3	480	2.6	11.2	<0.001	0.02	0.15	2.2	0.5	0.3	15.1	0.01	0.03
G002987		1.37	36.2	690	6.4	29.5	<0.001	0.01	0.30	6.1	0.7	0.5	24.1	<0.01	0.04
G002988		1.75	35.7	830	10.0	25.5	<0.001	0.01	0.36	6.0	0.6	0.6	25.0	<0.01	0.04
G002989		2.15	33.2	620	8.5	30.1	<0.001	0.02	0.60	6.5	0.9	0.6	24.6	0.01	0.04
G002990		1.67	32.2	850	7.6	12.8	<0.001	0.03	0.56	4.8	0.8	0.6	26.8	0.01	0.03
G002991		1.81	50.0	620	9.0	25.5	<0.001	0.06	0.47	7.0	1.6	0.7	29.6	0.01	0.04
G002992		1.25	17.1	400	8.8	9.0	<0.001	0.03	0.39	2.4	0.7	0.7	12.5	<0.01	0.05
G002993		0.78	27.2	610	6.7	11.9	<0.001	0.05	0.36	1.3	0.9	0.4	24.5	<0.01	0.04
G002994		0.50	8.0	250	5.3	3.1	<0.001	0.02	0.23	1.0	0.5	0.5	8.3	<0.01	0.03
G002995		0.16	3.2	350	2.0	1.8	<0.001	0.03	0.11	0.7	0.5	0.2	8.8	<0.01	0.02
G002996		1.25	35.9	980	9.4	28.6	<0.001	0.09	0.51	7.4	2.5	0.7	39.4	<0.01	0.07
G002997		1.87	31.4	500	8.2	33.5	<0.001	0.02	0.39	6.8	1.0	0.8	20.1	<0.01	0.06
G002998		1.83	34.8	770	8.5	38.4	<0.001	0.06	0.49	6.3	1.3	0.8	34.5	<0.01	0.06

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
LOR									
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G002960		0.126	0.12	0.53	75	0.20	6.05	85	1.7
G002961		0.121	0.12	0.66	74	0.23	5.59	103	2.9
G002962		0.129	0.07	0.33	120	0.13	4.74	78	1.5
G002963		0.097	0.13	0.53	93	0.41	13.10	75	2.2
G002964		0.077	0.04	0.16	74	0.05	1.48	56	<0.5
G002965		0.121	0.12	0.59	69	1.07	6.23	60	2.9
G002966		0.155	0.25	1.57	78	0.29	8.11	72	5.3
G002967		0.157	0.31	2.39	57	0.15	7.05	83	3.2
G002968		0.058	0.19	2.75	32	0.13	6.60	34	1.1
G002969		0.189	0.35	1.16	67	1.09	4.71	69	1.7
G002970		0.198	0.35	0.95	85	0.17	4.75	68	1.7
G002970D		0.182	0.36	1.21	95	0.38	5.54	68	1.7
G002971		0.174	0.32	1.26	68	0.17	5.72	69	1.9
G002972		0.192	0.39	1.18	82	0.24	6.05	76	2.5
G002973		0.075	0.20	2.26	42	0.12	5.37	44	1.0
G002974		0.054	0.17	2.88	32	0.10	5.22	31	1.3
G002975		0.188	0.29	1.55	81	0.24	5.04	69	1.7
G002976		0.170	0.34	3.76	73	0.44	9.03	90	5.7
G002977		0.120	0.18	1.51	70	0.18	8.37	64	1.4
G002978		0.092	0.13	0.72	73	0.22	7.35	55	1.1
G002979		0.130	0.14	0.76	89	0.21	11.65	64	3.3
G002980		0.094	0.10	0.41	61	0.15	4.96	62	1.5
G002981		0.092	0.10	0.39	87	0.16	4.82	67	1.5
G002982		0.029	0.04	0.23	4	0.10	1.42	7	<0.5
G002983		0.171	0.16	0.34	95	0.20	4.73	84	3.5
G002984		0.138	0.23	0.82	65	0.29	5.17	66	2.4
G002985		0.134	0.22	1.20	74	0.30	6.32	58	1.9
G002986		0.065	0.09	0.45	31	0.11	2.53	24	0.5
G002987		0.155	0.20	0.47	91	0.75	5.29	87	1.8
G002988		0.153	0.19	0.60	70	0.51	5.49	71	2.4
G002989		0.141	0.19	1.65	63	0.15	9.51	60	3.1
G002990		0.114	0.13	0.76	57	0.14	5.64	61	2.3
G002991		0.114	0.19	1.73	77	0.15	18.55	88	2.4
G002992		0.091	0.12	0.59	65	0.14	2.57	35	0.9
G002993		0.046	0.07	0.71	39	0.12	3.88	44	1.1
G002994		0.055	0.06	0.34	38	0.11	1.37	15	0.6
G002995		0.026	0.03	0.26	13	0.09	1.10	4	<0.5
G002996		0.084	0.27	3.33	85	0.15	32.00	72	1.3
G002997		0.125	0.20	1.24	86	0.14	8.84	70	2.0
G002998		0.101	0.22	1.57	74	0.14	15.20	77	1.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - A

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-AA23 Au ppm 0.005	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
G002999		0.46	<0.005	0.23	2.19	1.8	<0.2	<10	370	0.35	0.16	0.93	0.23	16.80	8.2	56
G003000		0.04	<0.005	0.01	0.02	<0.1	<0.2	<10	10	<0.05	<0.01	0.02	0.02	1.24	0.1	1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - B

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
G002999		1.19	31.1	2.07	6.98	0.10	0.04	0.04	0.022	0.19	11.2	10.6	1.28	293	0.62	0.03
G003000		<0.05	1.0	0.04	0.12	<0.05	<0.02	<0.01	<0.005	<0.01	0.6	0.2	0.02	5	0.07	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - C

Total # Pages: 7 (A - D)

Finalized Date: 10-AUG-2007


Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079982

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
G002999		1.01	31.0	660	6.7	23.3	0.002	0.16	0.26	6.2	1.5	0.5	34.7	<0.01	0.02	1.9
G003000		<0.05	0.6	20	0.6	0.4	<0.001	<0.01	<0.05	0.2	<0.2	<0.2	1.0	<0.01	0.01	0.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

Page: 1
Finalized Date: 10-AUG-2007
Account: EIANX

CERTIFICATE VA07079985

Project: North Dawson

P.O. No.: NGX07-02

This report is for 189 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003001		0.38	0.005	0.16	1.81	5.1	<0.2	<10	150	0.30	0.27	0.28	0.31	22.60	14.1	38
G003002		0.22	<0.005	0.18	1.49	3.6	<0.2	<10	130	0.25	0.21	0.40	0.24	16.95	10.1	31
G003003		0.18	<0.005	0.14	1.60	3.9	<0.2	<10	110	0.23	0.26	0.27	0.22	16.20	7.4	30
G003004		0.52	<0.005	0.15	1.79	4.8	<0.2	<10	170	0.31	0.20	0.44	0.22	22.00	13.8	33
G003005		0.20	<0.005	0.15	1.69	3.6	<0.2	<10	230	0.24	0.16	0.58	0.30	17.80	8.4	34
G003006		0.38	0.005	0.14	1.80	4.1	<0.2	<10	170	0.22	0.18	0.38	0.17	14.00	9.5	35
G003007		0.10	<0.005	0.20	1.53	6.5	<0.2	<10	290	0.30	0.13	1.46	0.55	25.30	11.8	31
G003008		0.70	0.022	0.16	1.89	6.6	<0.2	<10	170	0.33	0.14	0.50	0.27	29.60	14.8	46
G003009		0.32	<0.005	0.28	2.04	4.8	<0.2	<10	200	0.35	0.20	0.87	0.30	28.20	13.7	50
G003010		0.40	<0.005	0.29	2.11	4.5	<0.2	<10	190	0.36	0.22	0.76	0.26	29.40	15.4	53
G003011		0.76	0.008	0.22	2.09	5.1	<0.2	<10	270	0.41	0.19	0.47	0.40	31.90	15.4	54
G003012		0.12	0.006	0.33	1.85	4.9	<0.2	<10	520	0.43	0.18	1.60	0.60	43.70	12.9	39
G003013		0.36	0.005	0.37	1.78	4.3	<0.2	<10	280	0.44	0.19	0.96	0.40	29.30	10.8	39
G003014		0.22	<0.005	0.24	2.11	5.9	<0.2	<10	220	0.37	0.22	0.43	0.25	26.90	13.7	52
G003015		0.14	<0.005	0.37	1.16	3.5	<0.2	<10	190	0.55	0.09	0.54	0.24	55.00	5.3	17
G003016		0.42	<0.005	0.09	2.02	7.9	<0.2	<10	170	0.35	0.22	0.32	0.15	21.10	12.6	38
G003017		0.26	0.005	0.18	1.66	4.0	<0.2	<10	140	0.31	0.18	0.33	0.19	19.90	9.3	34
G003018		0.06	NSS	0.08	0.49	1.7	<0.2	<10	150	0.20	0.05	0.79	0.26	26.80	4.1	5
G003019		0.28	<0.005	0.10	1.01	3.2	<0.2	<10	100	0.21	0.12	0.14	0.13	14.05	5.1	22
G003020		0.48	0.005	0.10	2.79	6.1	<0.2	<10	240	0.53	0.13	0.35	0.17	26.10	18.7	57
G003021		0.60	<0.005	0.08	2.64	5.4	<0.2	<10	160	0.48	0.11	0.30	0.11	21.60	17.4	57
G003022		0.26	<0.005	0.10	3.02	6.7	<0.2	<10	130	0.53	0.14	0.63	0.15	24.30	19.1	57
G003023		0.42	<0.005	0.08	1.64	4.3	<0.2	<10	110	0.31	0.13	0.42	0.42	15.95	11.2	35
G003024		0.42	<0.005	0.16	2.95	6.2	<0.2	<10	180	0.80	0.18	0.54	0.18	50.70	17.4	53
G003025		0.18	<0.005	0.14	1.89	2.5	<0.2	<10	180	0.41	0.11	1.00	0.23	26.10	12.9	43
G003026		0.40	<0.005	0.30	2.17	3.9	<0.2	<10	230	0.58	0.12	1.52	0.29	41.70	12.8	45
G003027		0.34	<0.005	0.09	1.79	3.4	<0.2	<10	160	0.37	0.10	2.23	0.19	21.40	11.3	40
G003028		0.30	<0.005	0.14	2.09	5.1	<0.2	<10	180	0.47	0.11	2.07	0.21	24.60	13.5	45
G003029		0.40	<0.005	0.10	1.98	4.7	<0.2	<10	160	0.48	0.09	2.06	0.27	24.40	12.9	41
G003030		0.46	<0.005	0.10	2.32	13.0	<0.2	<10	130	0.53	0.14	1.72	0.19	27.50	16.9	57
G003031		0.44	<0.005	0.11	2.37	13.4	<0.2	<10	140	0.57	0.14	1.74	0.21	27.50	17.2	60
G003032		0.14	<0.005	0.14	1.26	7.1	<0.2	<10	270	0.34	0.07	2.77	0.40	14.85	6.8	30
G003033		0.44	<0.005	0.21	2.28	13.4	<0.2	<10	270	0.43	0.20	0.40	0.30	20.60	9.9	57
G003034		0.52	<0.005	0.57	2.03	16.4	<0.2	<10	340	0.46	0.20	0.29	0.66	24.50	10.5	56
G003035		0.44	0.005	0.42	1.74	28.8	<0.2	<10	350	0.51	0.21	0.22	0.80	32.20	12.2	51
G003036		0.60	<0.005	0.21	1.78	13.2	<0.2	<10	190	0.33	0.25	0.12	0.41	19.90	11.1	59
G003037		0.34	0.005	0.27	2.40	11.8	<0.2	<10	280	0.65	0.38	0.28	0.80	47.40	9.0	48
G003038		0.32	<0.005	0.19	1.13	3.3	<0.2	<10	110	0.46	0.18	0.18	0.20	30.90	5.7	27
G003039		0.38	<0.005	0.05	2.10	8.2	<0.2	<10	90	0.34	0.35	0.20	0.13	22.20	7.6	42
G003040		0.06	<0.005	<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.13	0.1	<1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003001		0.65	31.7	2.98	6.18	0.09	<0.02	0.04	0.028	0.05	12.3	10.4	0.91	650	1.10
G003002		0.53	21.8	2.33	5.17	0.06	0.04	0.06	0.021	0.05	8.9	7.5	0.77	404	0.72
G003003		0.66	21.1	2.22	5.89	0.06	<0.02	0.03	0.022	0.05	8.4	9.1	0.69	201	0.73
G003004		0.75	25.0	2.65	5.90	0.08	<0.02	0.03	0.024	0.06	10.5	10.3	0.82	608	0.76
G003005		0.75	23.7	2.29	5.70	0.06	0.04	0.04	0.021	0.06	9.2	8.8	0.72	266	0.73
G003006		0.67	22.6	2.55	6.43	0.07	<0.02	0.04	0.021	0.05	7.0	9.9	0.93	301	0.95
G003007		0.65	38.5	2.14	5.12	0.09	0.03	0.07	0.021	0.06	12.9	8.2	0.71	566	1.21
G003008		0.74	38.0	3.02	6.03	0.11	0.04	0.03	0.025	0.07	14.1	11.3	0.95	298	0.96
G003009		0.90	35.4	2.88	6.72	0.09	0.02	0.05	0.024	0.07	14.5	10.8	1.06	537	1.30
G003010		0.95	33.9	2.95	6.86	0.09	0.05	0.04	0.025	0.08	15.3	11.2	1.11	614	1.34
G003011		1.24	42.0	3.29	7.32	0.12	0.03	0.03	0.031	0.14	15.3	12.8	1.10	452	2.16
G003012		0.78	47.3	2.55	5.59	0.14	0.04	0.07	0.027	0.08	29.4	9.7	0.71	712	1.40
G003013		0.71	45.3	2.42	6.02	0.08	0.05	0.08	0.024	0.09	17.8	9.8	0.65	331	1.05
G003014		0.86	33.9	3.17	7.50	0.10	<0.02	0.03	0.026	0.09	14.2	14.3	0.96	394	1.15
G003015		0.45	31.6	1.76	3.30	0.12	<0.02	0.11	0.018	0.05	26.4	4.0	0.24	91	1.50
G003016		0.76	18.0	3.41	8.36	0.08	0.04	0.02	0.027	0.07	10.7	13.0	0.64	455	1.46
G003017		0.74	20.2	2.28	6.22	0.07	<0.02	0.05	0.021	0.07	10.4	9.4	0.56	233	0.91
G003018		0.09	11.6	0.72	0.80	0.06	<0.02	0.10	0.012	0.03	11.9	0.7	0.10	159	0.69
G003019		0.74	18.6	1.57	4.77	<0.05	0.02	0.04	0.014	0.07	7.2	5.2	0.31	140	0.63
G003020		2.00	29.3	3.81	9.07	0.10	0.06	0.01	0.023	0.50	13.8	23.4	1.04	596	0.74
G003021		2.44	28.3	3.70	8.82	0.09	0.05	0.01	0.019	0.49	11.3	21.8	1.05	594	0.80
G003022		3.08	29.9	4.18	9.94	0.10	0.09	0.02	0.023	0.68	14.0	26.1	1.23	425	1.08
G003023		1.31	21.5	2.43	8.09	0.05	0.04	0.02	0.015	0.11	9.3	14.8	0.60	293	0.90
G003024		2.30	31.8	4.05	9.87	0.09	0.08	0.02	0.032	0.54	24.2	23.7	1.05	440	1.17
G003025		1.45	26.1	2.40	6.64	0.06	0.03	0.07	0.017	0.14	16.3	12.5	0.61	272	0.95
G003026		1.36	33.7	2.83	7.10	0.10	0.05	0.09	0.020	0.21	28.9	17.5	0.74	352	0.73
G003027		1.29	23.4	2.37	5.28	0.07	0.05	0.07	0.018	0.20	13.7	13.9	0.63	397	0.50
G003028		1.82	26.3	2.78	7.14	0.08	0.06	0.05	0.020	0.20	14.8	19.6	0.76	415	0.56
G003029		2.01	25.8	2.51	6.58	0.09	0.07	0.04	0.017	0.25	13.7	19.6	0.72	445	0.52
G003030		2.87	28.1	3.05	7.85	0.10	0.07	0.05	0.020	0.38	15.2	25.8	0.87	503	0.52
G003031		3.00	29.5	3.14	8.20	0.10	0.07	0.04	0.020	0.37	15.3	27.4	0.89	497	0.54
G003032		1.25	27.0	1.58	4.05	0.07	0.06	0.09	0.014	0.14	8.8	10.1	0.68	281	0.69
G003033		1.96	28.1	2.93	9.37	0.07	0.08	0.03	0.025	0.14	11.6	21.0	0.83	241	1.56
G003034		2.50	37.8	2.93	8.35	0.07	0.04	0.06	0.026	0.16	13.3	16.8	0.71	333	2.83
G003035		2.73	49.3	3.02	7.39	0.09	0.04	0.07	0.025	0.16	17.1	15.6	0.58	250	3.56
G003036		2.20	21.3	2.57	9.33	0.05	0.05	0.03	0.023	0.14	10.8	14.0	0.60	371	2.23
G003037		1.64	40.5	3.20	9.03	0.06	0.09	0.04	0.034	0.10	29.9	13.5	0.57	230	2.31
G003038		1.80	15.4	1.77	5.81	<0.05	0.03	0.03	0.015	0.07	18.6	6.2	0.27	354	0.99
G003039		2.10	15.3	3.28	8.48	0.05	0.10	0.01	0.026	0.12	15.3	12.0	0.56	366	1.87
G003040		<0.05	0.6	0.02	<0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003001		0.78	26.0	480	9.4	8.1	<0.001	0.01	0.25	5.0	0.7	0.4	18.9	<0.01	0.07
G003002		0.83	18.8	440	6.4	7.0	<0.001	0.01	0.17	4.0	0.7	0.4	21.6	0.01	0.06
G003003		0.87	17.7	360	7.9	6.4	<0.001	0.02	0.19	3.8	0.6	0.5	18.6	<0.01	0.06
G003004		0.92	21.1	500	9.6	9.7	<0.001	0.02	0.24	4.9	0.8	0.4	25.5	<0.01	0.05
G003005		1.13	19.7	460	6.4	8.7	<0.001	0.03	0.22	4.0	0.8	0.5	33.4	0.01	0.04
G003006		1.03	20.9	300	7.3	7.7	<0.001	0.01	0.19	4.4	0.5	0.4	22.8	<0.01	0.04
G003007		0.92	25.4	620	6.9	10.2	0.001	0.08	0.37	4.2	1.3	0.4	57.4	<0.01	0.04
G003008		1.09	33.6	660	8.0	10.4	<0.001	0.02	0.27	6.2	0.9	0.4	27.0	<0.01	0.04
G003009		0.98	33.9	550	9.1	12.2	<0.001	0.04	0.23	5.3	1.1	0.4	36.2	<0.01	0.04
G003010		1.07	34.9	580	9.0	12.6	<0.001	0.03	0.22	5.5	1.0	0.4	33.0	<0.01	0.06
G003011		0.93	42.9	690	9.6	17.7	<0.001	0.03	0.22	6.9	1.2	0.5	29.9	<0.01	0.05
G003012		0.84	31.8	860	8.3	12.0	<0.001	0.07	0.36	4.9	1.8	0.4	59.4	<0.01	0.04
G003013		1.06	27.4	590	8.2	13.4	0.001	0.06	0.23	4.5	1.3	0.5	39.5	0.01	0.04
G003014		1.15	28.6	510	9.6	14.8	<0.001	0.02	0.21	5.0	0.8	0.5	23.9	<0.01	0.03
G003015		0.58	14.4	1050	6.7	5.6	<0.001	0.12	0.25	2.5	1.6	0.3	32.6	<0.01	0.04
G003016		1.74	23.2	390	12.1	12.7	<0.001	0.01	0.26	4.7	0.6	0.6	23.9	<0.01	0.04
G003017		1.08	22.4	630	8.5	11.5	<0.001	0.04	0.18	3.3	0.8	0.5	21.8	<0.01	0.03
G003018		0.15	8.7	700	3.5	1.3	<0.001	0.10	0.24	1.6	0.9	<0.2	46.0	0.01	0.01
G003019		0.78	14.8	520	5.4	10.7	<0.001	0.03	0.19	2.0	0.5	0.4	14.4	<0.01	0.03
G003020		2.19	37.6	930	7.5	51.7	<0.001	0.01	0.18	5.1	0.7	0.6	23.4	<0.01	0.04
G003021		2.16	36.5	850	7.4	52.0	<0.001	0.01	0.17	4.0	0.6	0.5	20.2	<0.01	0.05
G003022		3.16	44.0	330	10.1	79.9	<0.001	0.01	0.25	5.9	0.6	0.8	37.0	<0.01	0.04
G003023		2.13	28.5	270	7.4	25.5	<0.001	0.01	0.21	3.7	0.4	0.5	29.0	<0.01	0.03
G003024		3.13	43.6	480	15.4	65.9	<0.001	0.02	0.26	6.3	0.8	1.0	34.4	<0.01	0.04
G003025		1.65	35.0	750	4.9	29.1	0.001	0.09	<0.05	3.3	1.0	0.4	49.4	0.01	0.02
G003026		1.60	32.9	660	6.7	32.9	<0.001	0.09	0.26	4.7	1.1	0.4	70.3	0.01	0.03
G003027		1.45	25.8	690	4.7	30.7	<0.001	0.10	0.20	3.4	0.8	0.4	99.6	0.01	0.02
G003028		1.94	30.8	640	6.8	36.6	<0.001	0.08	0.21	4.6	0.9	0.5	97.1	0.01	0.02
G003029		1.93	30.1	690	5.9	43.2	<0.001	0.07	0.24	4.1	0.9	0.4	101.5	0.01	0.03
G003030		2.19	40.0	680	9.0	54.0	<0.001	0.07	0.27	4.5	0.8	0.5	91.0	0.01	0.03
G003031		2.24	41.9	670	9.3	55.9	<0.001	0.07	0.27	4.8	0.8	0.5	92.9	0.01	0.04
G003032		1.33	24.7	750	3.6	16.2	0.001	0.11	0.49	3.2	0.8	0.3	74.1	0.01	0.02
G003033		2.54	33.4	350	8.3	23.2	<0.001	0.02	0.31	5.6	0.7	0.7	29.3	<0.01	0.05
G003034		1.91	29.9	600	8.1	23.6	0.001	0.05	0.38	4.9	1.4	0.6	29.5	<0.01	0.05
G003035		1.92	34.5	760	9.6	24.7	<0.001	0.06	0.81	4.4	2.1	0.6	31.2	<0.01	0.07
G003036		2.13	43.3	320	9.4	26.9	<0.001	0.01	0.39	4.0	0.6	0.9	16.5	<0.01	0.05
G003037		2.55	29.9	420	10.4	24.3	<0.001	0.02	<0.05	5.1	0.8	0.9	27.9	<0.01	0.05
G003038		1.42	11.5	440	7.7	20.2	<0.001	0.02	<0.05	2.5	0.4	0.6	16.4	<0.01	0.02
G003039		3.10	19.9	280	11.0	30.3	<0.001	0.01	<0.05	4.1	0.4	1.2	17.5	<0.01	0.02
G003040		<0.05	0.2	10	0.4	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003001		0.073	0.08	0.73	61	0.34	7.39	63
G003002		0.069	0.07	0.53	51	0.12	5.50	47
G003003		0.077	0.09	0.63	52	0.18	4.15	46
G003004		0.088	0.09	0.77	60	0.09	6.59	54
G003005		0.090	0.08	0.69	53	0.16	5.40	52
G003006		0.101	0.08	0.46	64	0.12	3.51	52
G003007		0.067	0.08	0.94	47	0.22	9.45	51
G003008		0.108	0.09	1.07	67	0.13	9.18	68
G003009		0.085	0.09	1.27	67	0.13	7.76	60
G003010		0.087	0.10	1.26	68	0.14	8.39	85
G003011		0.105	0.13	1.42	75	0.23	9.69	104
G003012		0.063	0.11	2.10	56	0.16	19.80	68
G003013		0.072	0.08	4.51	57	0.19	11.95	45
G003014		0.109	0.11	1.53	81	0.11	7.99	62
G003015		0.039	0.05	2.77	24	0.19	13.25	55
G003016		0.140	0.10	0.68	93	0.15	5.55	57
G003017		0.082	0.09	1.06	53	0.12	5.40	48
G003018		0.016	0.02	0.94	7	0.47	7.40	19
G003019		0.060	0.07	0.63	37	0.14	3.45	31
G003020		0.158	0.27	0.84	85	0.22	7.75	90
G003021		0.155	0.31	0.79	83	0.26	6.09	87
G003022		0.195	0.47	0.69	88	0.33	6.70	81
G003023		0.110	0.13	0.53	57	0.15	4.70	60
G003024		0.168	0.39	0.95	76	0.31	8.62	83
G003025		0.088	0.14	0.92	49	0.12	8.75	48
G003026		0.095	0.19	1.51	61	0.17	16.50	55
G003027		0.085	0.16	0.66	50	0.12	8.46	54
G003028		0.102	0.20	0.84	60	0.21	9.35	62
G003029		0.097	0.21	0.77	54	0.16	9.19	59
G003030		0.116	0.28	0.75	62	0.28	10.35	69
G003031		0.120	0.28	0.80	64	0.25	10.45	72
G003032		0.064	0.11	0.55	45	0.77	6.86	61
G003033		0.154	0.18	0.78	87	1.30	5.61	97
G003034		0.132	0.21	1.16	94	0.28	6.39	105
G003035		0.119	0.27	1.46	78	0.18	7.08	114
G003036		0.137	0.20	0.67	72	0.21	4.36	69
G003037		0.128	0.19	2.49	80	0.21	8.90	71
G003038		0.085	0.14	1.15	43	0.26	4.84	34
G003039		0.150	0.25	1.23	73	0.70	4.58	64
G003040		<0.005	<0.02	0.08	<1	<0.05	0.60	2

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003041		0.20	<0.005	0.45	1.73	6.3	<0.2	<10	150	1.20	0.42	0.12	0.81	68.80	7.6	27
G003042		0.48	0.005	0.07	1.88	8.8	<0.2	<10	130	0.46	0.31	0.25	0.20	30.40	10.8	30
G003043		0.38	<0.005	0.05	2.74	10.4	<0.2	<10	170	0.72	0.29	0.19	0.28	30.50	9.2	34
G003044		0.30	<0.005	0.52	2.74	13.8	<0.2	<10	320	0.88	0.42	0.51	1.24	192.00	30.4	33
G003045		0.44	<0.005	0.10	2.37	13.3	<0.2	<10	130	0.48	0.26	0.15	0.18	33.00	11.0	31
G003046		0.06	0.009	0.18	0.98	2.8	<0.2	<10	390	0.49	0.06	0.90	0.67	309.00	3.6	8
G003047		0.44	<0.005	0.07	1.75	12.7	<0.2	<10	150	0.38	0.27	0.26	0.26	52.80	9.8	22
G003048		0.42	<0.005	0.10	1.14	6.9	<0.2	<10	180	0.45	0.17	0.23	0.25	113.00	3.8	14
G003049		0.46	<0.005	0.06	2.00	9.9	<0.2	<10	250	0.44	0.18	0.36	0.16	62.80	10.8	22
G003050		0.40	<0.005	0.06	1.99	10.1	<0.2	<10	260	0.46	0.20	0.36	0.18	69.40	11.0	23
G003051		0.20	0.007	0.33	1.22	5.4	<0.2	<10	390	0.46	0.16	0.38	0.41	166.50	25.9	16
G003052		0.34	<0.005	0.27	2.17	12.1	<0.2	<10	360	0.45	0.28	0.20	0.38	28.30	13.5	28
G003053		0.44	<0.005	0.07	1.10	5.0	<0.2	<10	160	0.17	0.18	0.19	0.16	26.40	5.7	14
G003054		0.32	<0.005	0.06	1.26	5.5	<0.2	<10	150	0.17	0.20	0.19	0.16	26.40	6.6	17
G003055		0.48	<0.005	0.13	2.14	10.7	<0.2	<10	200	0.31	0.19	0.82	0.28	32.20	17.4	43
G003056		0.32	<0.005	0.09	2.01	3.5	<0.2	<10	230	0.33	0.13	0.94	0.42	36.60	13.9	43
G003057		0.48	<0.005	0.15	2.23	3.5	<0.2	<10	240	0.37	0.15	1.09	0.40	36.80	13.3	51
G003058		0.52	0.009	0.18	1.84	4.9	<0.2	<10	190	0.38	0.28	1.82	0.38	51.50	32.0	48
G003059		0.30	<0.005	0.32	0.65	3.0	<0.2	<10	120	0.08	0.42	0.19	0.47	8.10	3.7	13
G003060		0.24	<0.005	0.27	0.53	1.6	<0.2	<10	420	0.22	0.06	2.00	0.68	38.30	2.4	9
G003061		0.40	<0.005	0.24	2.15	5.9	<0.2	<10	150	0.35	0.28	0.22	0.25	25.60	12.7	50
G003062		0.42	<0.005	0.31	1.93	6.0	<0.2	<10	170	0.48	0.18	0.19	0.20	25.60	15.3	36
G003063		0.46	<0.005	0.14	1.76	3.8	<0.2	<10	160	0.33	0.14	0.24	0.14	18.15	9.8	39
G003064		0.28	<0.005	0.31	1.77	4.6	<0.2	<10	140	0.50	0.14	0.18	0.15	21.90	11.0	41
G003065		0.52	<0.005	0.17	2.75	8.2	<0.2	<10	210	0.53	0.14	0.25	0.43	23.00	17.4	53
G003066		0.28	<0.005	0.22	0.76	3.1	<0.2	<10	150	0.17	0.16	0.19	0.24	17.70	6.2	14
G003067		0.38	<0.005	0.14	2.03	6.9	<0.2	<10	150	0.40	0.22	0.19	0.35	26.90	19.6	45
G003068		0.52	<0.005	0.14	2.34	5.9	<0.2	<10	160	0.39	0.13	0.54	0.12	23.10	16.7	64
G003069		0.54	<0.005	0.09	2.33	4.3	<0.2	<10	210	0.39	0.11	0.73	0.15	23.30	17.7	65
G003070		0.46	<0.005	0.09	2.50	4.6	<0.2	<10	220	0.46	0.11	0.76	0.15	23.20	19.1	66
G003071		Not Recvd														
G003072		0.34	<0.005	0.15	2.43	5.2	<0.2	<10	240	0.43	0.16	0.90	0.16	26.70	22.1	61
G003073		0.26	<0.005	0.15	2.28	5.0	<0.2	<10	200	0.44	0.13	1.19	0.19	27.30	19.9	56
G003074		0.36	<0.005	0.13	2.19	5.1	<0.2	<10	180	0.52	0.11	1.83	0.23	28.90	17.2	51
G003075		0.28	<0.005	0.09	1.30	3.4	<0.2	<10	150	0.35	0.07	2.45	0.26	22.90	9.1	29
G003076		0.32	<0.005	0.10	2.00	4.6	<0.2	<10	140	0.42	0.10	2.52	0.20	23.00	14.9	43
G003077		0.40	<0.005	0.10	2.46	2.0	<0.2	<10	160	0.61	0.23	2.38	0.19	23.30	11.9	49
G003078		0.64	<0.005	0.40	2.76	34.9	<0.2	<10	410	0.56	0.16	0.39	0.32	23.40	16.3	72
G003079		0.18	<0.005	0.66	0.70	10.5	<0.2	<10	580	0.34	0.07	0.96	1.37	31.70	5.3	10
G003080		0.04	0.024	0.01	0.01	0.3	<0.2	<10	10	<0.05	0.01	0.01	0.01	1.15	0.1	<1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003041		1.69	50.0	2.37	6.60	0.07	0.04	0.05	0.032	0.07	43.1	6.8	0.27	341	1.62
G003042		2.64	13.2	3.16	7.91	0.06	0.05	0.02	0.029	0.13	21.4	12.3	0.51	843	2.35
G003043		4.01	14.5	3.94	9.51	0.06	0.10	0.03	0.039	0.15	23.1	20.3	0.57	509	1.88
G003044		2.99	26.6	3.68	10.75	0.15	0.10	0.15	0.049	0.14	102.0	16.0	0.49	3350	2.30
G003045		5.80	12.4	4.32	11.25	0.06	0.12	0.04	0.040	0.18	19.8	21.4	0.65	634	1.82
G003046		1.43	15.5	0.93	3.16	0.26	0.06	0.18	0.013	0.07	184.5	2.9	0.16	293	0.74
G003047		7.21	12.2	3.37	10.30	0.09	0.10	0.03	0.035	0.18	30.1	17.2	0.56	706	1.73
G003048		6.77	17.2	1.81	6.40	0.10	0.06	0.07	0.024	0.09	78.7	8.6	0.27	187	1.00
G003049		10.65	12.8	3.72	9.40	0.14	0.12	0.04	0.032	0.35	36.1	19.5	0.69	777	1.09
G003050		10.25	14.0	3.63	9.48	0.13	0.12	0.04	0.038	0.32	42.8	19.2	0.66	795	1.34
G003051		3.96	19.4	2.17	5.75	0.13	0.05	0.17	0.028	0.10	93.3	4.0	0.27	3890	1.68
G003052		4.87	16.4	4.27	10.85	0.07	0.09	0.04	0.038	0.12	16.4	12.7	0.49	839	2.16
G003053		4.16	11.1	2.02	6.48	0.05	0.05	0.02	0.020	0.09	16.0	4.4	0.28	325	1.19
G003054		5.00	11.5	2.31	7.20	0.06	0.05	0.02	0.020	0.12	16.2	5.6	0.35	374	1.31
G003055		1.15	24.3	5.22	6.74	0.09	0.06	0.03	0.027	0.12	17.1	11.8	0.99	741	1.92
G003056		1.45	21.2	2.93	6.35	0.10	0.07	0.03	0.022	0.22	20.8	13.8	0.98	734	0.80
G003057		1.39	31.3	3.02	6.83	0.10	0.07	0.05	0.026	0.14	21.1	13.0	1.09	350	1.20
G003058		0.90	63.1	4.17	5.21	0.12	0.09	0.05	0.027	0.15	20.5	6.6	1.33	1080	1.84
G003059		0.38	16.5	1.64	5.70	<0.05	0.02	0.02	0.011	0.04	4.3	2.0	0.11	109	1.27
G003060		0.54	32.3	0.77	1.56	0.09	0.06	0.11	0.009	0.04	27.0	1.0	0.16	74	0.89
G003061		1.06	23.0	3.21	8.75	0.06	0.10	0.02	0.028	0.08	14.3	9.6	0.71	253	1.53
G003062		0.84	26.1	2.97	7.64	0.07	0.05	0.02	0.025	0.07	13.6	14.5	0.53	388	0.93
G003063		1.08	25.4	2.34	7.90	0.07	0.02	0.01	0.019	0.14	9.7	9.0	0.61	243	0.62
G003064		0.98	40.1	2.49	7.47	0.07	0.03	0.03	0.023	0.10	13.3	10.2	0.55	196	1.38
G003065		1.57	33.1	3.73	9.89	0.09	0.17	<0.01	0.030	0.21	11.6	18.1	0.85	311	1.19
G003066		0.70	17.3	1.34	5.07	<0.05	0.05	0.01	0.014	0.04	9.2	4.5	0.17	123	0.85
G003067		1.62	28.4	3.28	9.68	0.09	0.02	<0.01	0.028	0.15	17.0	18.5	0.67	517	1.41
G003068		2.55	31.7	3.45	10.05	0.11	0.04	0.03	0.027	0.35	14.8	18.5	0.98	340	1.28
G003069		2.29	30.3	3.32	9.15	0.11	0.04	<0.01	0.018	0.44	12.3	18.8	1.06	376	0.78
G003070		2.47	32.9	3.51	10.10	0.12	0.04	0.01	0.021	0.43	12.8	20.9	1.12	393	0.85
G003071															
G003072		2.26	33.0	3.50	10.05	0.11	0.05	0.02	0.025	0.25	15.3	22.1	0.97	582	1.00
G003073		2.22	34.6	3.22	9.22	0.11	0.05	0.03	0.022	0.26	16.4	20.7	0.87	458	0.85
G003074		2.50	33.4	2.97	7.80	0.12	0.07	0.05	0.021	0.28	17.0	19.1	0.82	527	0.63
G003075		1.57	28.2	1.77	4.24	0.09	0.06	0.07	0.015	0.11	14.9	9.4	0.49	350	0.58
G003076		2.91	30.4	2.59	7.01	0.12	0.06	0.06	0.019	0.32	14.1	19.1	0.76	409	0.45
G003077		3.18	36.3	2.29	8.28	0.12	0.08	0.02	0.022	0.36	15.3	19.9	0.95	187	0.16
G003078		2.81	49.4	4.04	10.75	0.09	0.07	0.02	0.037	0.30	13.0	18.3	1.16	314	1.57
G003079		0.44	40.9	0.98	1.49	0.09	0.05	0.18	0.015	0.05	15.3	1.8	0.14	124	3.48
G003080		<0.05	0.6	0.02	0.06	<0.05	<0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003041		1.58	20.0	700	13.3	14.8	<0.001	0.04	<0.05	3.5	0.9	0.6	14.3	<0.01	0.04
G003042		2.66	17.4	660	13.4	27.6	<0.001	0.02	0.36	4.2	0.6	0.9	19.7	<0.01	0.03
G003043		3.98	18.7	420	16.5	34.1	<0.001	0.01	0.05	5.4	0.6	1.1	18.2	<0.01	0.03
G003044		2.95	21.9	1320	27.6	28.2	<0.001	0.08	1.68	6.2	1.4	0.9	46.3	0.01	0.04
G003045		4.18	16.4	510	16.0	45.9	<0.001	0.01	1.22	5.7	0.4	1.1	16.1	<0.01	0.04
G003046		0.70	13.0	1620	5.9	8.8	<0.001	0.13	1.43	1.8	1.6	0.2	80.5	0.01	0.01
G003047		4.56	13.3	590	13.8	46.9	<0.001	0.01	7.02	5.3	0.5	1.1	22.5	<0.01	0.04
G003048		2.45	9.9	380	9.2	27.0	<0.001	0.02	4.00	3.8	0.6	0.7	22.4	<0.01	0.03
G003049		6.00	13.8	850	15.8	71.1	<0.001	0.01	3.07	6.0	0.6	1.1	25.6	<0.01	0.03
G003050		5.79	14.9	830	16.7	70.0	<0.001	0.02	3.08	5.8	0.7	1.1	27.6	<0.01	0.03
G003051		1.58	12.7	1060	14.3	25.4	<0.001	0.08	0.81	3.5	1.2	0.5	34.2	0.01	0.03
G003052		4.38	16.2	470	15.2	38.2	<0.001	0.03	0.96	4.6	0.5	1.1	23.0	<0.01	0.04
G003053		2.55	8.5	320	7.6	32.1	<0.001	0.03	0.69	3.1	0.5	0.8	18.4	<0.01	0.02
G003054		2.73	9.9	320	8.8	41.5	<0.001	0.03	0.74	3.4	0.4	0.8	17.7	<0.01	0.02
G003055		1.51	30.0	750	8.9	19.0	0.001	0.09	0.25	5.7	1.1	0.5	38.5	<0.01	0.05
G003056		1.68	30.2	850	6.6	29.8	<0.001	0.10	0.21	6.0	1.1	0.5	51.7	<0.01	0.02
G003057		1.63	33.3	790	7.6	21.5	0.002	0.14	0.25	6.3	1.4	0.5	47.1	<0.01	0.03
G003058		0.54	46.0	580	11.2	14.8	0.001	0.13	0.27	7.7	1.9	0.3	43.0	0.01	0.08
G003059		0.73	8.5	290	6.2	3.6	<0.001	0.03	0.35	1.3	0.4	0.5	15.9	<0.01	0.03
G003060		0.33	14.3	940	2.8	3.5	0.001	0.25	0.39	2.6	1.5	<0.2	66.9	0.01	0.02
G003061		2.03	40.0	420	12.1	15.4	<0.001	0.03	0.20	4.8	0.7	0.7	22.3	<0.01	0.05
G003062		2.18	35.3	380	10.2	12.0	<0.001	0.03	0.24	3.9	0.5	0.5	20.5	<0.01	0.04
G003063		1.77	27.0	550	8.1	17.3	<0.001	0.04	0.13	3.5	0.6	0.5	18.0	<0.01	0.03
G003064		1.78	34.1	530	8.7	15.7	<0.001	0.05	0.23	3.6	0.7	0.6	18.2	<0.01	0.03
G003065		2.71	42.2	450	8.5	27.3	<0.001	0.02	0.33	5.9	0.6	0.7	20.3	0.01	0.04
G003066		1.24	11.2	160	7.3	7.7	<0.001	0.02	0.23	2.3	0.2	0.5	23.3	<0.01	0.03
G003067		2.49	49.8	650	11.9	24.8	<0.001	0.05	0.23	4.8	0.6	0.7	23.1	<0.01	0.04
G003068		2.96	48.3	440	7.8	43.3	<0.001	0.05	0.19	6.4	0.7	0.8	33.4	<0.01	0.04
G003069		2.33	44.9	600	6.1	47.7	<0.001	0.03	0.16	5.7	0.6	0.6	37.8	<0.01	0.03
G003070		2.57	48.4	590	6.8	51.9	<0.001	0.03	0.18	6.1	0.6	0.6	41.1	<0.01	0.04
G003071															
G003072		2.64	45.0	510	7.8	42.7	<0.001	0.05	0.20	6.6	0.7	0.6	49.0	<0.01	0.03
G003073		2.40	42.0	500	7.9	43.6	<0.001	0.06	0.20	5.7	0.8	0.6	58.3	<0.01	0.04
G003074		2.42	38.1	590	7.1	48.0	<0.001	0.08	0.22	5.5	1.0	0.5	87.4	0.01	0.03
G003075		1.42	24.4	720	4.3	22.1	<0.001	0.14	0.26	3.1	1.0	0.3	94.7	0.01	0.01
G003076		2.51	35.9	640	6.7	47.9	<0.001	0.09	0.20	4.7	0.9	0.5	115.0	0.01	0.02
G003077		2.87	36.7	650	8.1	51.6	<0.001	0.09	0.21	5.2	0.9	0.5	108.5	0.01	0.03
G003078		2.01	43.8	450	11.9	29.5	<0.001	0.05	0.39	7.9	0.8	0.7	23.2	<0.01	0.06
G003079		0.34	32.3	1150	3.5	4.1	<0.001	0.17	0.87	1.9	5.3	<0.2	77.2	0.02	0.03
G003080		<0.05	0.3	10	0.5	0.2	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.6	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units LOR	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003041		0.075	0.11	4.70	45	0.62	11.60	35
G003042		0.112	0.29	1.95	62	1.34	8.41	77
G003043		0.144	0.37	1.75	77	0.25	7.76	82
G003044		0.090	0.46	5.95	67	0.70	25.00	96
G003045		0.179	0.45	1.17	94	0.51	6.48	82
G003046		0.023	0.15	4.62	10	0.40	40.60	32
G003047		0.174	0.58	1.48	75	4.21	9.42	73
G003048		0.100	0.34	3.69	42	2.62	12.20	37
G003049		0.219	0.76	2.00	73	3.12	13.30	85
G003050		0.205	0.71	2.27	71	3.11	13.90	83
G003051		0.067	0.42	4.05	39	0.24	17.50	50
G003052		0.176	0.35	1.04	94	0.44	4.48	87
G003053		0.117	0.28	1.07	52	0.32	4.85	43
G003054		0.133	0.34	1.06	58	0.30	4.70	49
G003055		0.102	0.14	3.15	96	0.21	10.75	86
G003056		0.127	0.21	6.80	66	0.20	13.70	83
G003057		0.112	0.19	9.08	69	0.14	13.70	79
G003058		0.055	0.16	1.85	59	0.16	21.00	85
G003059		0.070	0.06	0.32	54	0.10	1.41	27
G003060		0.021	0.04	1.29	13	0.07	21.30	16
G003061		0.123	0.13	0.99	75	0.16	5.81	68
G003062		0.079	0.10	0.83	59	0.15	5.48	73
G003063		0.097	0.11	0.86	57	0.17	4.32	53
G003064		0.084	0.10	1.20	53	0.22	4.88	44
G003065		0.159	0.19	0.66	80	0.18	5.41	66
G003066		0.064	0.07	0.46	36	0.13	2.54	24
G003067		0.113	0.15	0.84	68	0.15	5.92	78
G003068		0.150	0.25	0.83	82	0.49	6.18	73
G003069		0.151	0.23	0.68	83	0.94	5.56	71
G003070		0.154	0.25	0.72	83	0.21	5.78	70
G003071								
G003072		0.143	0.21	0.99	84	0.19	7.35	71
G003073		0.125	0.22	1.11	75	0.17	8.50	69
G003074		0.106	0.25	1.07	60	0.14	10.40	70
G003075		0.062	0.12	0.69	34	0.29	8.54	38
G003076		0.097	0.25	0.73	48	0.20	8.61	64
G003077		0.109	0.28	1.05	51	0.15	9.06	63
G003078		0.176	0.19	0.73	132	1.04	6.28	102
G003079		0.020	0.08	2.61	13	0.26	19.25	37
G003080		<0.005	<0.02	0.09	<1	<0.05	0.56	2
								<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003081		0.18	0.020	1.37	1.57	17.0	<0.2	<10	450	0.67	0.16	0.39	1.41	28.70	8.2	38
G003082		0.36	0.012	1.16	1.52	12.5	<0.2	<10	360	0.72	0.20	0.29	1.09	41.40	6.7	31
G003083		0.68	0.008	0.27	1.99	13.0	<0.2	<10	240	0.44	0.19	0.28	0.25	36.30	11.2	44
G003084		0.14	0.019	0.13	0.40	1.9	<0.2	<10	210	0.20	0.03	0.86	0.90	67.70	2.9	4
G003085		0.26	0.008	0.23	3.08	16.7	<0.2	<10	340	0.71	0.76	0.55	0.23	99.50	16.6	52
G003086		0.40	0.007	0.13	1.27	8.3	<0.2	<10	70	0.28	0.22	0.09	0.13	14.50	5.1	32
G003087		0.66	0.011	0.05	1.69	6.1	<0.2	<10	170	0.27	0.24	0.42	0.17	33.20	12.9	38
G003088		0.56	<0.005	0.09	1.93	5.1	<0.2	<10	180	0.36	0.14	0.63	0.18	34.70	12.2	36
G003089		0.34	<0.005	0.10	1.63	8.3	<0.2	<10	190	0.28	0.12	0.48	0.22	47.50	10.8	35
G003090		0.28	0.005	0.09	1.59	6.9	<0.2	<10	180	0.27	0.11	0.45	0.29	54.40	11.5	34
G003091		0.38	<0.005	0.23	1.21	17.4	<0.2	<10	210	0.41	0.30	0.30	0.53	57.80	7.6	18
G003092		0.50	0.006	0.17	1.22	10.1	<0.2	<10	240	0.44	0.25	0.23	0.64	82.60	5.3	15
G003093		0.20	NSS	0.17	0.58	3.9	<0.2	<10	140	0.13	0.05	0.49	0.24	28.00	9.4	9
G003094		Not Recvd														
G003095		0.48	0.008	0.06	1.11	4.4	<0.2	<10	80	0.12	0.08	0.20	0.10	14.35	6.8	27
G003096		0.32	<0.005	0.15	1.54	7.9	<0.2	<10	140	0.25	0.12	0.41	0.18	29.20	15.5	29
G003097		0.58	0.011	0.22	1.56	10.8	<0.2	<10	80	0.19	0.29	0.66	0.28	24.50	20.1	31
G003098		0.48	0.010	0.17	1.62	8.4	<0.2	<10	60	0.30	0.29	0.15	0.33	23.10	14.0	26
G003099		0.48	0.009	0.22	1.51	6.1	<0.2	<10	130	0.24	0.16	1.23	0.45	26.50	14.9	24
G003100		0.20	0.008	0.17	1.52	4.6	<0.2	<10	110	0.17	0.18	0.56	0.29	18.80	13.8	32
G003101		0.24	0.009	0.09	1.29	5.3	<0.2	<10	130	0.16	0.11	0.29	0.17	20.90	28.3	25
G003102		0.12	NSS	0.13	0.78	5.1	<0.2	<10	230	0.19	0.05	0.52	0.45	40.20	46.2	13
G003103		0.18	0.018	0.18	0.77	4.8	<0.2	<10	200	0.21	0.04	0.43	0.37	38.70	28.6	12
G003104		0.12	0.024	0.04	0.76	3.2	<0.2	<10	120	0.11	0.04	0.36	0.30	15.70	8.4	16
G003105		0.20	0.023	0.18	0.95	20.9	<0.2	<10	220	0.26	0.08	0.42	0.36	49.20	17.1	19
G003106		0.32	0.018	0.10	0.36	2.3	<0.2	<10	140	0.09	0.02	0.35	0.31	18.55	5.2	7
G003107		1.96	NSS	0.05	0.36	2.2	<0.2	<10	160	0.12	0.01	0.44	0.22	21.90	9.7	3
G003108		0.56	0.007	0.04	1.41	5.1	<0.2	<10	100	0.19	0.07	0.36	0.12	19.00	7.8	25
G003109		0.44	<0.005	0.13	1.75	4.5	<0.2	<10	100	0.19	0.18	0.54	0.21	20.10	15.4	29
G003110		0.62	<0.005	0.14	2.78	4.2	<0.2	<10	180	0.19	0.15	0.77	0.19	11.10	21.4	38
G003111		0.56	0.005	0.18	2.30	4.0	<0.2	<10	190	0.20	0.14	1.12	0.33	12.95	19.6	32
G003112		0.44	0.013	0.17	1.81	3.9	<0.2	<10	130	0.27	0.10	1.39	0.25	26.40	15.6	32
G003113		0.68	0.006	0.11	1.96	6.0	<0.2	<10	70	0.21	0.17	0.31	0.15	21.00	14.3	43
G003114		0.12	0.031	0.16	0.47	2.5	<0.2	<10	80	0.10	0.03	0.93	0.38	20.20	6.5	7
G003115		0.18	0.019	0.29	0.98	4.3	<0.2	<10	80	0.15	0.14	0.40	0.21	28.50	6.2	19
G003116		0.56	0.007	0.28	1.48	4.8	<0.2	<10	110	0.18	0.19	0.37	0.19	26.80	8.5	37
G003117		0.28	0.010	0.15	1.20	3.3	<0.2	<10	100	0.12	0.16	0.35	0.16	19.25	7.5	28
G003118		0.52	<0.005	0.11	1.16	4.6	<0.2	<10	80	0.14	0.18	0.22	0.11	17.80	5.3	21
G003119		0.34	0.008	0.26	0.91	3.5	<0.2	<10	60	0.11	0.15	0.40	0.11	16.40	4.3	19
G003120		0.04	<0.005	0.03	0.01	0.2	<0.2	<10	<10	<0.05	0.01	<0.01	0.01	1.05	0.1	<1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003081		2.13	78.9	2.32	5.96	0.10	0.04	0.22	0.028	0.08	16.8	9.0	0.38	137	2.00
G003082		1.41	77.6	2.20	4.75	0.08	0.05	0.25	0.033	0.07	18.6	8.1	0.32	115	2.08
G003083		1.93	29.5	2.92	6.66	0.09	0.05	0.10	0.030	0.13	18.0	13.8	0.59	267	1.68
G003084		0.15	11.6	0.46	0.75	0.07	0.03	0.15	0.007	0.05	38.3	0.5	0.08	129	1.04
G003085		5.02	29.7	3.29	9.38	0.15	0.08	0.08	0.031	0.27	53.4	19.4	0.86	731	1.44
G003086		2.04	15.3	2.38	7.20	0.05	0.04	0.04	0.020	0.08	7.3	7.8	0.27	206	1.54
G003087		1.83	19.7	2.95	5.50	0.11	0.05	0.01	0.020	0.37	14.2	16.9	1.03	585	0.79
G003088		1.56	20.7	2.91	6.15	0.10	0.06	0.03	0.024	0.21	17.1	17.1	0.87	493	0.75
G003089		1.36	15.7	2.28	5.19	0.10	0.05	0.05	0.019	0.12	23.3	10.8	0.86	487	1.06
G003090		1.28	14.4	2.31	5.03	0.10	0.04	0.05	0.020	0.13	25.8	10.6	0.86	704	1.16
G003091		5.73	32.8	2.93	8.51	0.08	0.07	0.05	0.033	0.17	30.6	6.7	0.32	994	1.63
G003092		3.88	16.5	2.09	6.47	0.09	0.06	0.08	0.026	0.12	47.4	6.6	0.31	325	1.04
G003093		0.32	12.8	1.46	1.26	0.05	0.02	0.12	0.012	0.03	14.5	1.5	0.13	350	1.48
G003094															
G003095		1.00	9.4	1.79	4.85	0.06	0.03	0.05	0.014	0.09	7.3	6.5	0.51	223	0.71
G003096		1.01	14.1	3.18	5.06	0.08	0.04	0.07	0.024	0.06	14.3	8.9	0.51	774	1.29
G003097		0.74	36.8	3.45	5.73	0.08	0.05	0.03	0.024	0.04	10.8	9.7	0.89	1130	2.23
G003098		0.63	44.7	3.60	5.88	0.07	0.04	0.04	0.024	0.03	10.4	10.1	0.66	411	1.74
G003099		0.56	40.1	2.64	4.59	0.09	0.08	0.04	0.024	0.05	13.9	9.7	0.82	810	1.17
G003100		0.64	21.5	2.32	5.04	0.06	0.03	0.06	0.020	0.05	8.5	7.9	0.85	576	0.98
G003101		0.70	11.8	2.06	4.71	0.06	0.03	0.05	0.018	0.06	9.6	8.8	0.45	1370	1.06
G003102		0.40	16.4	1.67	1.97	0.06	0.03	0.14	0.017	0.06	16.0	2.7	0.17	3990	2.04
G003103		0.37	18.4	2.09	1.73	0.07	0.03	0.13	0.013	0.05	17.1	2.3	0.15	1510	2.54
G003104		0.39	10.8	1.20	2.27	0.05	0.03	0.07	0.011	0.06	7.3	3.8	0.21	513	0.96
G003105		0.57	23.6	3.84	2.65	0.09	0.04	0.11	0.019	0.04	21.5	3.5	0.19	893	2.51
G003106		0.16	13.2	1.01	0.68	<0.05	0.02	0.10	0.009	0.05	8.9	0.5	0.06	213	2.10
G003107		0.08	12.3	1.11	0.47	<0.05	0.03	0.16	0.008	0.05	10.1	0.3	0.06	348	4.47
G003108		0.76	11.6	2.19	4.52	0.07	0.04	0.03	0.018	0.08	8.8	9.3	0.54	325	0.46
G003109		0.83	24.6	2.89	5.30	0.07	0.02	0.03	0.021	0.06	9.1	8.0	1.22	609	0.88
G003110		1.18	41.1	4.03	7.31	0.10	0.04	0.03	0.015	0.24	5.3	10.5	2.30	632	0.67
G003111		1.01	48.2	3.38	6.01	0.09	0.04	0.05	0.015	0.20	6.3	8.7	1.87	605	0.70
G003112		0.98	41.7	2.73	5.04	0.08	0.06	0.05	0.017	0.14	14.1	7.7	1.13	662	0.71
G003113		1.07	23.6	3.26	6.36	0.08	0.04	0.04	0.022	0.08	10.1	10.6	1.14	473	1.03
G003114		0.23	13.2	1.06	1.05	<0.05	0.03	0.11	0.008	0.05	10.6	1.1	0.16	196	1.68
G003115		0.72	19.5	2.15	3.56	0.06	0.02	0.09	0.015	0.05	14.8	4.3	0.31	222	1.33
G003116		1.13	18.8	2.22	6.16	0.05	0.03	0.06	0.021	0.06	14.2	8.5	0.64	184	1.00
G003117		0.96	14.1	1.89	4.89	0.05	0.02	0.06	0.016	0.05	10.1	6.7	0.51	226	0.97
G003118		0.85	13.8	1.91	5.06	<0.05	0.02	0.05	0.019	0.04	8.7	7.0	0.39	136	0.73
G003119		0.69	12.9	1.66	4.21	<0.05	0.02	0.05	0.013	0.05	10.0	4.2	0.30	145	1.03
G003120		<0.05	0.6	0.02	<0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	0.05

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003081		1.67	37.4	940	8.1	13.9	0.001	0.11	0.41	3.1	4.3	0.5	36.9	0.01	0.06
G003082		1.05	28.7	720	8.9	12.2	0.001	0.07	0.52	3.3	3.0	0.4	31.8	0.01	0.08
G003083		1.65	33.0	570	8.7	20.7	0.001	0.02	0.56	5.1	1.4	0.5	24.7	<0.01	0.05
G003084		0.17	8.5	1000	1.9	1.8	<0.001	0.11	0.40	1.6	1.0	<0.2	64.1	0.05	0.01
G003085		2.29	27.8	680	11.4	39.1	<0.001	0.04	4.52	6.8	1.2	0.5	47.0	0.01	0.19
G003086		2.02	11.3	290	7.7	20.2	<0.001	0.01	1.68	2.9	0.4	0.6	9.7	<0.01	0.04
G003087		1.30	29.3	700	6.6	32.6	<0.001	0.01	0.22	5.2	0.6	0.4	22.9	<0.01	0.03
G003088		1.62	27.4	810	7.3	25.6	0.001	0.04	0.23	5.7	0.8	0.5	36.2	<0.01	0.02
G003089		1.27	24.3	800	6.1	16.0	<0.001	0.04	0.37	4.7	0.8	0.4	29.5	<0.01	0.02
G003090		1.23	23.5	770	6.0	16.8	<0.001	0.04	0.39	4.5	0.7	0.3	27.9	<0.01	0.03
G003091		3.34	14.8	380	44.6	38.9	<0.001	0.03	1.14	3.5	0.5	0.9	26.9	<0.01	0.04
G003092		2.61	11.1	430	20.1	30.4	<0.001	0.02	0.69	4.0	0.7	0.7	20.8	0.01	0.03
G003093		0.48	8.8	1450	4.7	3.4	<0.001	0.12	0.30	1.3	1.0	<0.2	34.3	0.02	0.03
G003094															
G003095		1.20	15.3	390	4.7	11.0	<0.001	0.03	0.18	2.9	0.5	0.4	16.1	<0.01	0.02
G003096		1.35	18.5	930	7.9	12.8	<0.001	0.06	0.27	3.9	0.8	0.4	26.4	<0.01	0.03
G003097		0.79	36.7	650	11.5	9.8	<0.001	0.04	0.27	4.3	1.0	0.3	27.7	<0.01	0.11
G003098		0.89	25.9	380	14.2	5.9	<0.001	0.03	0.39	3.3	0.8	0.3	12.2	0.01	0.10
G003099		0.84	24.0	680	8.5	10.4	0.001	0.07	0.28	4.7	1.5	0.3	46.7	0.01	0.06
G003100		0.79	23.1	580	8.2	9.3	<0.001	0.05	0.21	3.6	0.9	0.3	28.6	<0.01	0.07
G003101		1.10	17.8	650	5.9	8.9	<0.001	0.04	0.29	3.3	0.6	0.4	21.5	<0.01	0.02
G003102		0.48	15.8	1290	4.7	5.3	<0.001	0.10	0.41	2.7	1.1	0.2	35.9	0.01	0.03
G003103		0.51	14.8	1440	3.1	4.2	<0.001	0.12	0.38	2.1	1.2	0.3	34.9	0.01	0.03
G003104		0.64	12.8	650	3.9	4.9	<0.001	0.05	0.27	2.0	0.8	0.4	25.7	0.02	0.02
G003105		0.84	19.0	1630	3.9	6.3	<0.001	0.10	0.38	3.8	1.5	0.2	36.6	0.01	0.03
G003106		0.25	7.9	1550	1.7	2.0	<0.001	0.11	0.21	1.3	1.0	<0.2	29.6	0.02	0.03
G003107		0.14	9.1	1280	1.5	1.5	<0.001	0.10	0.23	2.2	0.8	<0.2	37.9	0.02	0.02
G003108		1.36	16.3	670	5.1	11.0	<0.001	0.02	0.23	3.8	0.5	0.4	20.5	<0.01	0.01
G003109		0.72	22.3	510	10.3	9.4	<0.001	0.03	0.18	5.3	0.6	0.3	23.7	<0.01	0.08
G003110		0.71	26.0	460	13.3	23.5	<0.001	0.03	0.16	5.4	0.7	0.2	25.9	<0.01	0.09
G003111		0.70	24.9	580	15.5	20.1	<0.001	0.06	0.20	4.9	1.0	0.2	36.2	<0.01	0.09
G003112		1.01	28.5	620	7.1	17.2	<0.001	0.06	0.21	4.2	1.1	0.3	41.6	<0.01	0.05
G003113		1.30	33.9	560	11.6	12.1	<0.001	0.02	0.26	4.8	0.7	0.4	20.6	<0.01	0.05
G003114		0.29	10.4	990	4.5	2.8	<0.001	0.10	0.23	1.4	1.0	0.2	45.2	0.02	0.03
G003115		0.86	15.2	800	11.5	9.1	<0.001	0.08	0.21	2.0	1.3	0.3	25.9	0.01	0.05
G003116		1.05	25.2	550	14.4	11.6	<0.001	0.04	0.18	3.4	0.8	0.4	25.5	<0.01	0.04
G003117		0.93	16.8	500	8.8	10.3	<0.001	0.04	0.16	2.9	0.7	0.4	22.0	<0.01	0.03
G003118		0.93	15.1	460	8.9	8.4	<0.001	0.03	0.19	2.4	0.7	0.4	18.0	<0.01	0.03
G003119		0.88	11.5	580	9.9	7.3	<0.001	0.06	0.18	2.0	0.8	0.3	21.6	0.02	0.03
G003120		<0.05	0.3	10	0.7	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.4	<0.01	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
G003081		0.061	0.12	3.24	41	0.19	11.35	78	0.9
G003082		0.055	0.12	4.00	39	0.26	10.95	60	0.7
G003083		0.108	0.17	1.86	65	1.79	8.38	78	1.2
G003084		0.008	0.04	1.82	4	0.12	12.70	19	0.5
G003085		0.130	0.31	3.88	82	1.62	16.85	62	1.5
G003086		0.105	0.14	0.72	55	0.39	2.35	33	1.0
G003087		0.103	0.20	2.52	61	0.20	8.43	69	1.2
G003088		0.118	0.17	3.62	66	0.35	10.85	69	1.4
G003089		0.079	0.13	2.87	51	0.28	10.80	69	1.1
G003090		0.074	0.15	3.03	50	0.19	11.15	67	0.9
G003091		0.125	0.38	2.96	64	0.20	8.09	63	1.7
G003092		0.095	0.38	3.19	45	0.19	10.45	48	1.1
G003093		0.021	0.05	1.66	16	0.20	5.28	22	<0.5
G003094									
G003095		0.090	0.09	0.57	45	0.38	2.77	37	0.7
G003096		0.082	0.10	1.59	59	0.21	5.54	49	1.0
G003097		0.055	0.07	0.75	60	0.13	5.64	73	1.1
G003098		0.049	0.07	0.74	50	0.14	5.44	52	0.9
G003099		0.061	0.07	1.66	54	0.12	11.95	67	1.8
G003100		0.053	0.07	0.57	45	0.19	5.23	60	0.5
G003101		0.087	0.12	0.84	52	0.14	4.54	45	0.8
G003102		0.028	0.16	1.54	37	0.11	8.43	35	<0.5
G003103		0.025	0.06	1.78	29	0.14	9.80	23	<0.5
G003104		0.036	0.05	0.57	20	0.14	4.30	36	0.6
G003105		0.040	0.05	1.70	81	0.18	13.20	29	0.7
G003106		0.011	0.03	0.83	9	0.08	5.36	20	<0.5
G003107		0.008	0.03	0.72	7	0.13	6.63	20	0.6
G003108		0.110	0.08	0.80	57	0.49	5.47	48	1.0
G003109		0.059	0.08	0.54	57	0.14	6.38	73	0.5
G003110		0.100	0.15	0.39	91	0.13	4.96	104	0.9
G003111		0.080	0.13	0.46	75	0.14	6.53	101	1.1
G003112		0.073	0.13	0.83	50	0.11	12.10	68	1.4
G003113		0.092	0.10	0.78	64	0.10	5.01	85	1.4
G003114		0.018	0.03	0.91	11	0.10	5.32	27	0.7
G003115		0.043	0.07	1.40	31	0.13	6.00	42	<0.5
G003116		0.070	0.11	1.21	57	0.21	5.54	70	0.5
G003117		0.063	0.08	0.88	37	0.13	4.13	50	<0.5
G003118		0.063	0.07	0.71	41	0.13	3.71	45	<0.5
G003119		0.049	0.07	0.88	27	0.14	4.14	35	0.7
G003120		<0.005	<0.02	0.08	<1	<0.05	0.58	2	<0.5

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003121		0.12	0.019	0.17	0.78	2.9	<0.2	<10	60	0.12	0.11	0.29	0.16	15.35	3.7	17
G003122		0.34	0.007	0.15	0.91	3.6	<0.2	<10	80	0.13	0.15	0.25	0.13	17.45	3.6	17
G003123		0.50	0.008	0.13	0.92	3.5	<0.2	<10	70	0.15	0.14	0.22	0.12	17.15	3.4	17
G003124		0.26	0.005	0.10	1.15	3.6	<0.2	<10	80	0.17	0.18	0.20	0.15	18.90	4.2	22
G003125		0.42	<0.005	0.12	1.03	2.6	<0.2	<10	70	0.14	0.19	0.17	0.11	16.15	4.9	22
G003126		0.42	0.005	0.12	1.18	3.7	<0.2	<10	100	0.14	0.15	0.21	0.12	17.25	5.7	24
G003127		0.40	<0.005	0.15	1.22	3.5	<0.2	<10	100	0.16	0.15	0.28	0.12	15.40	5.8	29
G003128		0.38	0.005	0.10	1.22	4.3	<0.2	<10	80	0.17	0.14	0.25	0.12	18.70	5.9	25
G003129		0.34	0.006	0.16	1.00	4.7	<0.2	<10	80	0.15	0.13	0.25	0.14	18.80	4.6	20
G003130		0.36	0.008	0.16	1.07	4.7	<0.2	<10	80	0.13	0.13	0.24	0.14	19.05	4.7	22
G003131		0.36	<0.005	0.10	1.37	4.4	<0.2	<10	80	0.16	0.13	0.22	0.13	19.50	5.7	27
G003132		0.14	0.009	0.13	0.96	5.1	<0.2	<10	90	0.17	0.12	0.29	0.14	21.80	4.2	17
G003133		0.34	0.005	0.07	1.39	3.9	<0.2	<10	70	0.16	0.12	0.25	0.12	18.60	6.2	28
G003134		0.54	0.025	0.09	2.18	7.5	<0.2	<10	140	0.72	0.26	1.38	0.16	36.70	14.5	45
G003135		0.54	<0.005	0.08	2.75	11.7	<0.2	<10	210	0.52	0.15	1.72	0.16	26.50	18.4	93
G003136		0.46	0.009	0.30	2.16	25.8	<0.2	<10	480	0.49	0.22	1.14	0.84	26.60	16.0	56
G003137		0.28	<0.005	0.44	0.32	2.3	<0.2	<10	90	0.08	0.08	0.08	0.56	5.27	1.6	7
G003138		0.46	<0.005	0.08	0.14	2.1	<0.2	<10	10	<0.05	0.05	0.03	0.06	1.56	1.1	3
G003139		0.34	0.007	0.28	0.30	2.9	<0.2	<10	50	0.06	0.08	0.06	0.13	4.09	1.6	7
G003140		0.34	0.012	0.14	0.80	9.3	<0.2	<10	100	0.22	0.18	0.16	0.30	15.00	4.6	33
G003141		0.22	0.006	0.09	1.30	10.7	<0.2	<10	140	0.23	0.15	0.33	0.19	23.80	6.9	35
G003142		0.42	<0.005	0.15	1.89	8.0	<0.2	<10	200	0.52	0.30	0.15	0.27	66.20	8.3	25
G003143		0.36	<0.005	0.06	0.97	5.1	<0.2	<10	80	0.20	0.18	0.10	0.43	15.45	3.7	13
G003144		0.44	0.008	0.19	1.97	7.6	<0.2	<10	200	0.58	0.23	0.15	0.18	49.40	5.9	22
G003145		0.68	<0.005	0.07	2.51	10.2	<0.2	<10	220	0.49	0.24	0.31	0.15	38.00	11.2	27
G003146		0.52	0.007	0.15	1.76	6.7	<0.2	<10	220	0.71	0.28	0.20	0.24	66.80	5.3	21
G003147		0.52	<0.005	0.04	2.23	5.5	<0.2	<10	180	0.45	0.68	0.24	0.12	51.20	11.9	16
G003148		0.36	<0.005	0.07	0.67	3.7	<0.2	<10	110	0.10	0.21	0.12	0.11	12.25	2.6	10
G003149		0.60	<0.005	0.12	1.61	9.0	<0.2	<10	160	0.29	0.25	0.18	0.25	35.00	7.2	20
G003150		0.56	<0.005	0.11	1.99	12.6	<0.2	<10	250	0.39	0.27	0.22	0.25	33.10	9.2	21
G003151		0.50	<0.005	0.11	1.63	12.9	<0.2	<10	200	0.45	0.19	0.22	0.29	28.70	7.1	13
G003152		0.08	NSS	0.06	0.31	1.9	<0.2	<10	250	0.22	0.04	1.11	0.45	79.10	1.6	5
G003153		0.16	<0.005	0.28	0.84	4.6	<0.2	<10	90	0.12	0.14	0.12	0.21	19.40	2.6	13
G003154		0.62	<0.005	0.07	1.42	9.8	<0.2	<10	210	0.29	0.23	0.27	0.16	27.50	9.6	21
G003155		0.50	<0.005	0.07	1.76	12.3	<0.2	<10	300	0.37	0.23	0.23	0.16	25.10	12.8	22
G003156		0.42	<0.005	0.06	2.06	10.4	<0.2	<10	280	0.37	0.21	0.24	0.19	26.30	11.6	23
G003157		0.30	<0.005	0.06	2.32	11.1	<0.2	<10	400	0.43	0.22	0.37	0.51	28.30	15.2	31
G003158		0.60	<0.005	0.14	1.67	8.3	<0.2	<10	270	0.37	0.22	0.14	0.20	48.80	8.2	16
G003159		0.56	<0.005	0.10	2.79	11.1	<0.2	<10	570	0.79	0.27	0.52	0.13	147.00	12.3	26
G003160		Not Recvd														

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003121		0.49	12.9	1.31	3.24	<0.05	0.02	0.08	0.013	0.05	9.0	3.3	0.21	98	0.87
G003122		0.63	13.1	1.66	3.56	<0.05	0.02	0.09	0.013	0.05	9.3	3.4	0.21	94	0.88
G003123		0.71	13.3	1.65	4.12	0.05	0.02	0.06	0.014	0.04	9.1	3.9	0.24	88	0.61
G003124		0.81	15.5	1.72	5.25	<0.05	0.03	0.06	0.018	0.04	10.1	5.4	0.31	107	0.46
G003125		1.11	15.4	1.52	5.00	<0.05	0.02	0.05	0.017	0.04	8.8	5.4	0.33	117	0.47
G003126		0.98	16.0	1.90	5.10	0.05	0.02	0.05	0.016	0.05	9.3	6.7	0.41	144	0.55
G003127		1.22	15.2	1.90	5.50	0.06	0.02	0.05	0.016	0.06	8.6	7.5	0.46	143	0.64
G003128		0.86	15.0	1.98	4.69	0.05	0.02	0.04	0.016	0.05	10.0	7.1	0.42	157	0.60
G003129		0.69	16.7	1.97	4.01	0.05	0.02	0.06	0.014	0.04	9.7	4.9	0.29	112	0.80
G003130		0.73	16.6	1.96	4.29	0.05	0.02	0.06	0.016	0.04	9.9	5.3	0.31	113	0.83
G003131		1.06	15.8	2.11	5.24	0.05	0.03	0.04	0.018	0.06	10.6	7.7	0.46	143	0.62
G003132		0.62	16.1	2.11	3.13	0.06	0.02	0.07	0.014	0.04	11.7	3.9	0.24	122	0.89
G003133		1.02	12.5	2.04	5.37	0.05	0.03	0.03	0.017	0.06	10.0	8.7	0.51	153	0.42
G003134		3.85	29.1	3.24	6.92	0.12	0.08	0.05	0.025	0.38	20.6	18.0	0.85	499	0.69
G003135		3.05	35.6	4.06	8.84	0.12	0.08	0.03	0.027	0.38	13.9	22.8	1.34	306	0.65
G003136		2.90	39.6	3.25	7.57	0.10	0.07	0.07	0.036	0.16	14.0	15.2	1.01	806	1.67
G003137		0.43	14.4	0.60	1.44	<0.05	<0.02	0.08	0.008	0.04	2.7	0.4	0.04	42	0.76
G003138		0.30	4.5	0.59	1.39	<0.05	<0.02	0.01	<0.005	0.01	0.8	0.3	0.02	30	0.27
G003139		0.54	8.5	0.76	1.77	<0.05	<0.02	0.09	0.007	0.02	2.2	0.5	0.04	35	0.92
G003140		1.48	23.1	1.51	5.12	<0.05	0.02	0.04	0.018	0.08	7.9	3.4	0.24	135	1.30
G003141		1.47	14.3	2.06	5.92	0.06	0.04	0.08	0.021	0.07	13.5	8.6	0.45	205	1.37
G003142		5.46	19.3	2.91	8.22	0.10	0.08	0.13	0.038	0.17	48.3	9.9	0.41	601	1.95
G003143		2.16	13.4	1.78	5.61	<0.05	0.03	0.04	0.019	0.06	9.9	4.6	0.17	159	1.12
G003144		2.95	22.6	2.56	7.02	0.08	0.06	0.14	0.036	0.07	39.0	7.0	0.25	234	1.43
G003145		6.63	17.5	3.98	9.72	0.10	0.15	0.14	0.042	0.16	27.6	18.8	0.58	624	1.64
G003146		6.68	24.9	2.67	7.21	0.11	0.10	0.18	0.041	0.16	63.9	8.2	0.30	299	1.42
G003147		15.80	13.6	4.57	11.20	0.17	0.19	0.02	0.050	0.73	23.2	19.2	0.77	965	1.46
G003148		2.01	7.5	1.39	4.88	<0.05	0.03	0.03	0.013	0.07	6.2	3.6	0.17	143	1.02
G003149		7.33	11.8	3.20	9.24	0.06	0.10	0.03	0.029	0.20	17.6	9.4	0.41	409	1.95
G003150		10.75	12.4	3.89	10.05	0.09	0.08	0.05	0.041	0.22	22.0	12.7	0.50	775	1.91
G003151		15.00	12.7	4.03	8.50	0.08	0.07	0.05	0.046	0.25	19.2	10.3	0.36	759	2.01
G003152		0.61	10.7	0.36	0.97	0.09	0.05	0.19	0.005	0.06	64.1	0.6	0.10	191	0.80
G003153		3.20	15.8	1.62	3.74	<0.05	0.03	0.14	0.019	0.06	18.2	3.5	0.13	141	1.28
G003154		4.19	15.2	3.42	8.64	0.07	0.05	0.02	0.029	0.19	17.2	10.3	0.43	1270	1.95
G003155		1.90	16.6	3.00	8.15	0.06	0.04	0.03	0.030	0.09	13.3	10.7	0.37	1110	1.85
G003156		9.44	18.2	3.74	8.95	0.07	0.10	0.03	0.040	0.22	8.6	14.5	0.54	761	1.41
G003157		4.53	19.0	3.62	8.91	0.06	0.07	0.03	0.037	0.10	15.0	12.6	0.53	1640	1.86
G003158		7.29	16.2	3.10	10.45	0.09	0.13	0.04	0.038	0.19	49.4	10.0	0.33	547	2.05
G003159		19.15	23.6	4.82	12.15	0.25	0.33	0.17	0.060	0.56	138.0	20.5	0.80	957	1.87
G003160															<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G003121		0.77	11.1	600	8.0	4.7	<0.001	0.08	0.17	1.6	0.9	0.3	17.8	0.03	0.02	0.3
G003122		0.90	11.0	690	8.1	6.9	<0.001	0.07	0.20	1.8	0.9	0.3	19.7	0.02	0.03	0.3
G003123		0.88	10.6	520	7.3	7.7	<0.001	0.06	0.18	2.1	0.8	0.3	18.2	0.01	0.02	0.3
G003124		0.99	12.8	500	9.3	7.9	<0.001	0.05	0.19	2.3	0.9	0.4	17.8	0.01	0.03	0.3
G003125		0.81	13.5	500	7.6	9.2	<0.001	0.04	0.15	2.0	0.7	0.4	15.0	<0.01	0.03	0.3
G003126		1.00	16.6	520	7.0	10.2	<0.001	0.05	0.18	2.5	0.8	0.4	16.7	<0.01	0.03	0.5
G003127		1.21	18.1	580	8.1	12.8	<0.001	0.05	0.17	2.8	0.7	0.4	18.9	<0.01	0.03	0.6
G003128		1.08	17.6	580	7.1	9.9	<0.001	0.04	0.18	2.7	0.8	0.3	18.0	<0.01	0.03	0.7
G003129		0.94	14.0	720	6.8	7.9	<0.001	0.07	0.20	2.1	1.0	0.3	19.9	0.01	0.03	0.3
G003130		0.99	15.3	680	7.3	8.7	<0.001	0.07	0.20	2.3	0.9	0.3	19.6	0.01	0.03	0.4
G003131		1.15	17.3	490	7.1	10.1	<0.001	0.05	0.18	3.1	0.7	0.4	17.4	<0.01	0.02	0.8
G003132		0.84	13.5	730	5.7	6.5	<0.001	0.08	0.22	1.9	1.1	0.3	20.9	0.02	0.02	0.3
G003133		1.21	18.1	490	6.9	10.1	<0.001	0.03	0.16	3.2	0.6	0.4	17.4	<0.01	0.02	1.1
G003134		2.40	37.2	980	9.1	53.4	<0.001	0.04	0.22	6.0	0.9	0.5	68.6	<0.01	0.03	5.5
G003135		3.27	59.6	850	10.9	51.0	<0.001	0.06	0.18	6.8	0.9	0.5	66.1	<0.01	0.03	3.3
G003136		2.02	36.9	830	8.7	27.8	<0.001	0.07	0.35	7.3	1.7	0.5	36.9	<0.01	0.05	2.0
G003137		0.28	4.6	710	2.9	2.6	<0.001	0.07	0.23	0.7	0.7	0.2	13.2	0.01	0.03	<0.2
G003138		0.18	1.6	120	1.9	1.3	<0.001	0.01	0.12	0.5	<0.2	<0.2	5.3	<0.01	0.01	<0.2
G003139		0.22	3.5	360	2.5	1.7	<0.001	0.03	0.19	0.6	0.7	0.2	9.0	<0.01	0.02	<0.2
G003140		0.72	16.6	450	6.1	11.3	<0.001	0.04	0.25	1.7	0.6	0.5	13.5	<0.01	0.03	0.2
G003141		1.45	20.4	610	6.7	16.8	<0.001	0.07	0.28	3.5	0.9	0.7	23.7	<0.01	0.03	1.1
G003142		3.62	15.2	530	14.2	40.4	<0.001	0.03	0.95	6.3	0.9	1.1	16.9	<0.01	0.04	10.0
G003143		2.02	7.8	310	8.6	11.5	<0.001	0.02	0.41	2.5	0.5	0.6	13.3	<0.01	0.03	1.8
G003144		2.01	13.4	710	14.0	13.2	<0.001	0.06	0.59	4.3	0.9	0.7	18.3	<0.01	0.04	2.5
G003145		4.27	16.4	430	20.2	32.3	<0.001	0.01	0.72	6.2	0.6	1.1	25.1	<0.01	0.03	10.8
G003146		3.38	11.2	530	20.0	29.2	<0.001	0.04	0.69	5.4	1.0	0.8	22.9	<0.01	0.04	10.6
G003147		7.06	9.5	980	17.0	121.0	<0.001	0.01	1.06	7.5	0.6	1.5	14.4	<0.01	0.02	15.3
G003148		1.86	5.1	330	7.2	12.9	<0.001	0.01	0.38	2.2	0.2	0.6	14.0	<0.01	0.02	2.0
G003149		3.57	9.9	320	47.8	44.3	<0.001	0.01	0.97	4.5	0.4	1.0	18.6	<0.01	0.03	6.6
G003150		4.25	11.2	700	30.2	44.4	<0.001	0.01	1.15	5.6	0.5	1.2	24.0	<0.01	0.04	9.3
G003151		3.85	7.1	930	107.0	40.4	<0.001	0.02	2.10	5.4	0.5	1.1	18.6	<0.01	0.03	7.5
G003152		0.35	6.3	1040	5.0	2.6	<0.001	0.11	0.45	1.4	1.1	0.2	71.6	0.03	0.01	3.6
G003153		1.60	6.8	740	7.2	11.7	<0.001	0.06	0.26	2.0	0.8	0.5	13.2	0.01	0.03	2.2
G003154		2.67	12.3	690	11.5	30.0	<0.001	0.02	0.77	4.0	0.4	0.9	24.0	<0.01	0.04	4.7
G003155		2.17	15.2	390	12.2	19.8	0.001	0.01	0.63	3.7	0.4	0.7	24.7	0.01	0.04	4.0
G003156		5.03	19.0	480	11.9	54.0	0.001	0.02	0.85	5.0	0.4	1.1	26.1	0.01	0.03	5.2
G003157		2.70	21.9	340	12.6	25.6	0.001	0.02	0.71	5.1	0.5	0.9	36.2	0.01	0.05	5.1
G003158		5.04	9.5	340	26.3	40.6	0.001	0.02	0.73	4.7	0.5	1.2	20.8	0.01	0.04	12.5
G003159		6.07	16.1	720	28.4	91.3	0.001	0.02	1.33	11.1	1.3	1.5	38.9	0.01	0.03	36.1
G003160																

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
G003121		0.040	0.04	1.00	18	0.13	3.65	32
G003122		0.045	0.05	0.81	23	0.15	3.72	30
G003123		0.053	0.06	0.79	25	0.13	3.81	29
G003124		0.058	0.07	0.84	30	0.12	4.27	37
G003125		0.056	0.07	0.69	26	0.30	3.54	34
G003126		0.065	0.08	0.67	37	0.13	4.58	42
G003127		0.070	0.08	0.68	36	0.15	4.09	48
G003128		0.066	0.08	0.68	36	0.19	4.97	46
G003129		0.053	0.06	0.72	30	0.13	4.86	36
G003130		0.056	0.07	0.71	30	0.16	4.83	38
G003131		0.075	0.08	0.70	40	0.13	4.76	47
G003132		0.047	0.05	0.79	33	0.17	5.51	32
G003133		0.081	0.08	0.59	42	0.18	4.84	51
G003134		0.101	0.37	0.84	55	0.54	13.35	76
G003135		0.121	0.28	0.92	75	0.17	9.19	75
G003136		0.104	0.21	1.28	96	1.86	11.95	131
G003137		0.021	0.02	0.37	14	0.10	1.32	15
G003138		0.030	0.02	0.10	17	0.07	0.30	10
G003139		0.027	0.07	0.35	19	0.09	1.03	13
G003140		0.064	0.08	0.99	44	0.20	3.34	27
G003141		0.089	0.13	1.14	46	0.29	5.98	55
G003142		0.115	0.49	5.81	51	0.37	11.90	64
G003143		0.086	0.16	0.90	44	0.19	3.35	32
G003144		0.075	0.21	5.62	49	0.24	10.80	40
G003145		0.167	0.52	2.64	78	0.27	11.30	68
G003146		0.097	0.36	8.00	47	0.31	17.00	48
G003147		0.254	1.12	1.66	78	0.85	13.50	93
G003148		0.091	0.14	0.38	39	0.36	1.97	21
G003149		0.145	0.51	0.93	73	0.18	4.30	57
G003150		0.145	0.82	1.42	78	0.28	7.64	70
G003151		0.121	1.50	2.49	61	0.20	8.40	87
G003152		0.009	0.10	2.32	7	0.14	15.90	25
G003153		0.049	0.14	2.63	30	0.14	2.81	30
G003154		0.116	0.20	0.73	73	0.41	4.11	59
G003155		0.103	0.16	0.67	68	0.21	3.72	47
G003156		0.156	0.48	0.89	74	0.20	3.50	64
G003157		0.119	0.40	0.80	78	0.18	4.49	70
G003158		0.153	0.75	2.12	65	0.18	8.33	44
G003159		0.217	1.77	6.80	79	0.41	32.30	99
G003160								

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003161		0.44	0.005	0.13	1.60	7.9	<0.2	<10	160	0.32	0.19	0.16	0.23	28.80	7.7	17
G003162		0.56	<0.005	0.17	2.06	8.9	<0.2	<10	260	0.50	0.22	0.32	0.16	64.80	9.2	24
G003163		0.36	<0.005	0.05	1.66	7.7	<0.2	<10	180	0.31	0.23	0.23	0.17	42.60	9.4	21
G003164		0.30	0.006	0.35	1.61	9.2	<0.2	<10	320	0.51	0.19	0.45	0.31	144.00	43.2	24
G003165		0.36	<0.005	0.18	1.99	9.6	<0.2	<10	180	0.34	0.34	0.25	0.19	45.90	15.2	27
G003166		0.32	<0.005	0.13	1.83	7.3	<0.2	<10	170	0.39	0.37	0.22	0.16	48.50	6.5	24
G003167		0.50	<0.005	0.26	1.88	7.0	<0.2	<10	120	0.18	0.28	0.59	0.14	16.45	19.8	37
G003168		0.42	0.008	0.30	1.82	6.2	<0.2	<10	140	0.22	0.40	1.15	0.24	22.80	15.2	32
G003169		0.40	0.005	0.19	1.89	6.7	<0.2	<10	120	0.29	0.21	0.39	0.20	35.00	11.7	36
G003170		0.52	<0.005	0.17	1.92	6.7	<0.2	<10	110	0.26	0.21	0.37	0.17	28.90	10.7	36
G003171		0.32	<0.005	0.19	0.76	3.8	<0.2	<10	130	0.25	0.08	1.57	0.55	33.30	11.1	11
G003172		0.34	0.006	0.41	2.24	5.6	<0.2	<10	140	0.38	0.18	1.15	0.71	73.30	23.1	55
G003173		0.48	<0.005	0.42	1.51	4.7	<0.2	<10	140	0.24	0.24	0.79	0.65	50.40	15.0	28
G003174		0.16	<0.005	0.21	0.46	1.8	<0.2	<10	90	0.21	0.06	1.29	0.50	61.90	2.6	4
G003175		0.26	<0.005	0.15	0.29	1.4	<0.2	<10	50	0.09	0.03	0.45	0.52	14.80	2.3	6
G003176		0.30	<0.005	0.17	0.57	2.7	<0.2	<10	60	0.13	0.14	0.07	0.41	6.83	2.8	9
G003177		0.32	0.005	0.18	0.78	2.2	<0.2	<10	60	0.13	0.13	0.35	0.21	20.50	3.7	17
G003178		0.22	0.006	0.30	1.30	3.8	<0.2	<10	130	0.25	0.20	0.97	0.40	62.50	11.3	21
G003179		0.40	<0.005	0.19	0.90	2.8	<0.2	<10	70	0.14	0.18	0.27	0.16	16.85	4.7	19
G003180		0.48	<0.005	0.14	1.36	4.2	<0.2	<10	100	0.19	0.17	0.31	0.19	23.00	7.0	24
G003181		0.30	<0.005	0.15	1.02	3.3	<0.2	<10	90	0.16	0.15	0.23	0.17	20.40	13.6	18
G003182		0.28	<0.005	0.28	1.08	3.2	<0.2	<10	90	0.17	0.15	0.25	0.18	18.90	6.5	23
G003183		0.12	0.014	0.14	0.89	3.7	<0.2	<10	110	0.14	0.09	0.40	0.20	24.60	6.2	17
G003184		0.20	<0.005	0.10	1.04	3.6	<0.2	<10	70	0.11	0.11	0.24	0.13	15.90	4.5	21
G003185		0.56	<0.005	0.08	1.09	3.8	<0.2	<10	60	0.13	0.12	0.21	0.11	17.15	4.7	20
G003186		0.20	<0.005	0.16	0.96	4.7	<0.2	<10	80	0.11	0.10	0.26	0.15	21.90	4.2	17
G003187		0.36	<0.005	0.08	1.20	4.3	<0.2	<10	70	0.16	0.10	0.26	0.13	19.75	5.6	24
G003188		0.22	<0.005	0.18	0.68	3.7	<0.2	<10	100	0.16	0.04	0.37	0.18	34.80	3.9	7
G003189		0.32	<0.005	0.08	1.44	4.5	<0.2	<10	70	0.16	0.12	0.24	0.12	19.40	7.0	28

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003161		5.70	16.4	2.78	7.74	0.08	0.08	0.12	0.033	0.16	23.8	9.3	0.37	456	1.38
G003162		4.70	21.1	3.23	8.64	0.10	0.10	0.08	0.038	0.13	42.0	13.2	0.51	575	1.26
G003163		6.15	15.1	2.95	8.32	0.09	0.08	0.06	0.032	0.18	30.1	9.9	0.48	526	1.33
G003164		3.15	21.7	2.83	5.97	0.13	0.10	0.23	0.035	0.10	66.3	7.4	0.33	4050	1.94
G003165		4.96	17.1	2.89	8.28	0.08	0.07	0.14	0.033	0.15	29.7	10.5	0.48	774	1.52
G003166		4.49	17.4	2.53	7.19	0.08	0.06	0.11	0.030	0.15	29.5	9.6	0.43	269	1.04
G003167		0.84	27.2	3.01	6.39	0.07	0.03	0.05	0.024	0.05	8.4	8.2	1.13	833	1.60
G003168		0.69	38.8	2.68	5.68	0.07	0.06	0.05	0.022	0.06	12.6	7.8	1.03	631	1.36
G003169		0.82	38.3	3.06	6.26	0.07	0.06	0.04	0.026	0.07	18.1	9.3	0.82	274	1.02
G003170		0.82	32.3	2.97	6.16	0.07	0.06	0.03	0.025	0.07	15.7	9.4	0.84	246	0.90
G003171		0.40	40.9	1.51	2.05	0.08	0.07	0.11	0.011	0.04	18.1	2.6	0.26	984	1.46
G003172		1.29	70.4	3.37	6.74	0.15	0.11	0.07	0.025	0.12	48.2	10.9	1.31	1410	1.43
G003173		1.03	30.9	2.63	5.20	0.08	0.05	0.06	0.028	0.08	25.3	9.1	0.54	1340	1.58
G003174		0.24	29.9	0.59	1.09	0.08	0.06	0.09	0.008	0.02	33.6	0.7	0.10	173	0.76
G003175		0.28	17.9	0.53	1.03	<0.05	<0.02	0.07	0.007	0.03	8.7	0.4	0.05	65	0.85
G003176		0.36	16.9	1.04	3.74	<0.05	<0.02	0.04	0.012	0.02	3.6	1.3	0.07	62	0.94
G003177		0.94	17.6	1.20	3.52	<0.05	0.03	0.07	0.014	0.05	13.1	3.7	0.20	74	0.76
G003178		0.84	24.5	2.03	4.81	0.10	0.07	0.09	0.020	0.06	44.7	7.6	0.41	510	1.13
G003179		0.86	13.1	1.45	4.43	<0.05	0.02	0.05	0.016	0.05	9.6	4.5	0.28	132	0.92
G003180		0.89	15.7	1.92	5.63	0.05	0.04	0.07	0.022	0.05	13.9	7.6	0.42	172	0.79
G003181		0.79	15.9	1.62	4.72	<0.05	0.02	0.06	0.016	0.04	11.7	5.5	0.32	517	0.78
G003182		0.75	19.2	1.62	5.29	<0.05	0.03	0.07	0.017	0.05	10.3	6.2	0.35	155	0.86
G003183		0.71	17.4	1.67	3.08	0.05	0.02	0.09	0.014	0.04	13.1	4.3	0.24	146	1.88
G003184		0.75	12.0	1.55	5.05	<0.05	0.02	0.15	0.013	0.04	8.5	5.6	0.35	119	0.92
G003185		0.63	12.8	1.79	5.23	<0.05	0.02	0.05	0.014	0.04	9.2	5.7	0.37	117	0.68
G003186		0.68	16.9	1.78	3.47	0.05	0.02	0.08	0.015	0.03	11.7	3.9	0.23	98	1.08
G003187		0.85	13.5	1.82	5.04	0.05	0.03	0.04	0.016	0.05	10.6	7.3	0.44	132	0.49
G003188		0.17	20.0	1.84	0.85	0.06	0.03	0.09	0.013	0.02	18.4	0.5	0.06	95	1.12
G003189		0.91	13.9	2.25	5.90	0.06	0.03	0.05	0.017	0.05	10.7	9.2	0.53	163	0.62

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
G003161		3.84	10.9	560	11.2	34.2	<0.001	0.03	0.71	4.1	0.5	0.9	21.4	0.01	0.03	4.7
G003162		3.96	14.2	570	13.4	28.7	<0.001	0.03	0.73	6.3	0.8	1.0	28.0	0.01	0.03	8.5
G003163		4.12	12.0	450	11.0	38.4	<0.001	0.03	0.59	4.9	0.6	1.0	23.2	0.01	0.03	5.3
G003164		2.29	13.3	1050	11.3	20.1	0.001	0.12	0.90	6.8	1.4	0.7	42.1	0.01	0.04	4.2
G003165		3.00	14.6	580	13.7	32.7	<0.001	0.04	0.66	5.4	0.6	1.0	25.8	<0.01	0.03	5.3
G003166		2.64	13.1	540	11.2	33.7	<0.001	0.04	0.58	5.0	0.6	0.8	24.3	0.01	0.04	3.7
G003167		0.88	24.1	570	8.1	11.3	<0.001	0.05	0.22	4.8	0.8	0.4	29.7	0.01	0.10	1.1
G003168		0.98	25.5	700	7.9	10.5	0.001	0.08	0.26	4.5	0.9	0.3	50.6	0.01	0.15	1.1
G003169		1.32	29.6	640	14.3	10.4	<0.001	0.03	0.27	5.1	0.9	0.4	26.4	0.01	0.06	4.0
G003170		1.34	28.2	560	14.1	10.0	<0.001	0.03	0.27	5.0	0.8	0.4	26.2	<0.01	0.06	4.4
G003171		0.52	22.6	1090	5.4	7.1	0.001	0.15	0.47	1.8	1.4	0.2	69.3	0.03	0.06	0.7
G003172		1.06	49.6	810	11.2	17.8	0.003	0.10	0.34	6.1	2.0	0.3	48.3	0.01	0.07	2.9
G003173		1.08	26.0	860	16.2	12.8	0.002	0.08	0.27	3.6	1.3	0.4	41.5	0.02	0.07	1.7
G003174		0.27	9.7	840	4.1	2.2	0.001	0.12	0.30	1.7	1.3	<0.2	63.3	0.04	0.03	0.7
G003175		0.32	6.0	800	2.2	1.7	<0.001	0.10	0.15	0.7	0.7	0.2	24.1	0.03	0.03	<0.2
G003176		0.39	7.9	390	4.9	2.0	<0.001	0.03	0.27	0.8	0.5	0.3	13.0	0.01	0.03	<0.2
G003177		0.83	11.1	710	7.7	6.7	<0.001	0.09	0.18	1.9	0.7	0.4	23.9	0.02	0.03	0.4
G003178		1.14	22.8	610	12.5	10.0	0.001	0.07	0.27	3.6	1.2	0.4	42.5	0.01	0.03	1.9
G003179		0.87	12.4	580	9.9	9.0	<0.001	0.06	0.16	2.0	0.6	0.5	21.0	0.01	0.03	0.4
G003180		1.21	16.6	570	11.5	9.3	<0.001	0.05	0.21	3.4	0.7	0.5	25.3	0.01	0.03	0.8
G003181		0.94	13.5	510	8.3	8.1	<0.001	0.05	0.19	2.5	0.6	0.4	20.5	0.01	0.03	0.5
G003182		0.90	16.6	750	8.4	8.2	<0.001	0.06	0.19	2.2	0.7	0.4	22.9	0.01	0.04	0.3
G003183		0.73	17.7	950	6.9	6.7	<0.001	0.10	0.26	2.1	0.9	0.4	28.8	0.02	0.03	0.3
G003184		0.85	14.2	510	7.1	6.9	<0.001	0.05	0.18	2.1	0.6	0.4	20.9	0.01	0.03	0.2
G003185		0.97	13.6	450	7.4	7.9	<0.001	0.05	0.16	2.4	0.6	0.4	19.1	0.01	0.03	0.4
G003186		0.83	13.1	740	6.2	5.7	<0.001	0.09	0.20	1.8	0.9	0.3	21.8	0.02	0.03	0.2
G003187		1.17	17.5	480	6.6	9.6	<0.001	0.04	0.16	2.8	0.7	0.4	20.2	0.01	0.02	0.7
G003188		0.42	11.9	1020	3.6	1.6	<0.001	0.12	0.15	1.8	1.1	0.2	28.0	0.03	0.02	0.5
G003189		1.26	20.4	470	7.7	10.5	<0.001	0.04	0.18	3.3	0.6	0.4	20.3	0.01	0.03	1.0

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 6 (A - D)

Finalized Date: 10-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079985

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
G003161		0.131	0.44	1.81	58	0.22	7.18	52
G003162		0.145	0.40	4.98	66	0.26	13.60	61
G003163		0.156	0.45	3.36	68	0.33	9.24	61
G003164		0.073	0.52	9.68	47	0.40	20.10	44
G003165		0.131	0.42	3.43	57	0.37	8.79	66
G003166		0.115	0.37	3.87	47	0.29	9.14	56
G003167		0.074	0.08	0.68	63	0.14	4.77	66
G003168		0.063	0.08	0.73	53	0.13	9.52	70
G003169		0.088	0.10	1.22	59	0.21	8.65	79
G003170		0.091	0.09	1.06	59	0.16	6.57	79
G003171		0.024	0.06	1.08	21	0.13	13.00	51
G003172		0.066	0.14	2.18	60	0.19	33.40	93
G003173		0.061	0.11	1.83	48	0.14	11.60	84
G003174		0.013	0.03	1.40	8	0.13	13.25	17
G003175		0.016	0.02	0.76	10	0.10	3.30	17
G003176		0.032	0.07	0.36	31	0.10	1.52	24
G003177		0.039	0.06	0.88	22	0.25	4.86	33
G003178		0.061	0.09	1.91	41	0.17	18.05	57
G003179		0.053	0.07	0.92	27	0.21	3.23	33
G003180		0.078	0.09	1.32	40	0.14	5.55	51
G003181		0.062	0.07	0.85	35	0.28	4.42	38
G003182		0.058	0.07	0.87	32	0.18	4.08	42
G003183		0.042	0.07	0.84	28	0.16	6.13	33
G003184		0.061	0.08	0.50	28	0.13	3.34	38
G003185		0.065	0.08	0.55	35	0.14	3.67	39
G003186		0.044	0.06	0.76	24	0.14	5.16	30
G003187		0.078	0.07	0.59	36	0.60	4.86	46
G003188		0.028	<0.02	0.95	16	0.14	8.29	16
G003189		0.091	0.08	0.54	52	0.13	4.23	53

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 12-AUG-2007

Account: EIANGX

CERTIFICATE VA07079986

Project: North Dawson

P.O. No.: NGX07-02

This report is for 229 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003201		0.12	NSS	0.13	0.40	1.5	<0.2	<10	80	0.12	0.04	0.34	0.22	21.20	6.8	6
G003202		0.10	NSS	0.09	0.31	1.6	<0.2	<10	150	0.12	0.04	1.15	0.65	18.55	23.3	4
G003203		0.30	<0.005	0.23	1.91	6.6	<0.2	<10	180	0.39	0.14	0.49	0.21	25.20	23.1	45
G003204		0.46	<0.005	0.13	1.86	6.2	<0.2	<10	140	0.27	0.14	0.44	0.13	17.80	13.3	46
G003205		0.40	<0.005	0.18	2.00	12.1	<0.2	<10	450	0.42	0.11	2.40	0.36	24.20	13.1	56
G003206		0.50	<0.005	0.19	1.69	29.7	<0.2	<10	420	0.36	0.13	1.77	0.62	25.50	14.4	46
G003207		0.24	<0.005	0.19	1.47	14.5	<0.2	<10	330	0.34	0.17	1.30	0.92	22.40	11.7	37
G003208		0.96	<0.005	0.07	1.96	5.9	<0.2	<10	180	0.35	0.21	0.34	0.10	37.20	9.6	27
G003209		0.26	0.020	0.16	1.91	4.7	<0.2	<10	230	0.39	0.21	0.33	0.13	56.90	7.0	26
G003210		0.10	NSS	0.33	0.85	4.8	<0.2	<10	330	0.47	0.12	0.54	0.33	168.50	49.0	13
G003211		0.12	NSS	0.34	0.85	5.1	<0.2	<10	400	0.53	0.12	0.60	0.39	166.50	67.3	9
G003212		0.44	0.033	0.10	1.83	7.3	<0.2	<10	250	0.37	0.22	0.33	0.18	68.50	14.8	22
G003213		0.42	0.005	0.17	2.65	9.5	<0.2	<10	360	0.51	0.29	0.40	0.26	88.80	17.4	31
G003214		0.64	<0.005	0.06	2.31	8.1	<0.2	<10	240	0.39	0.20	0.31	0.19	44.40	13.6	27
G003215		0.38	<0.005	0.09	1.89	5.3	<0.2	<10	280	0.30	0.18	0.34	0.19	40.40	10.4	25
G003216		0.42	0.051	0.18	1.87	4.8	<0.2	<10	360	0.29	0.18	0.42	0.14	75.00	5.6	21
G003217		0.72	<0.005	0.03	2.05	6.0	<0.2	<10	310	0.30	0.15	0.40	0.10	31.60	9.6	26
G003218		0.48	<0.005	0.08	2.39	7.4	<0.2	<10	200	0.58	0.19	0.20	0.13	44.80	8.0	24
G003219		0.50	<0.005	0.10	1.98	7.7	<0.2	<10	180	0.36	0.24	0.11	0.13	47.50	7.2	23
G003220		0.18	NSS	0.10	0.40	0.8	<0.2	<10	240	0.19	0.03	1.24	0.30	95.60	1.0	1
G003221		0.16	NSS	0.12	0.45	3.0	<0.2	<10	270	0.22	0.11	1.33	0.32	140.00	0.9	1
G003222		0.66	<0.005	0.17	3.57	8.8	<0.2	<10	280	0.76	0.38	0.36	0.60	43.70	20.2	120
G003223		0.38	<0.005	0.14	2.36	4.3	<0.2	<10	200	0.37	0.13	1.91	0.33	25.20	15.9	53
G003224		0.24	<0.005	0.12	1.89	2.8	<0.2	<10	130	0.22	0.15	0.40	0.26	15.65	10.8	68
G003225		0.36	<0.005	0.12	2.94	4.4	<0.2	<10	280	0.37	0.17	1.57	0.17	24.60	20.8	76
G003226		0.36	<0.005	0.14	2.68	3.4	<0.2	<10	230	0.38	0.14	0.76	0.22	23.60	16.7	70
G003227		0.34	<0.005	0.14	2.41	3.7	<0.2	<10	180	0.36	0.14	1.24	0.17	21.20	14.9	59
G003228		0.32	<0.005	0.11	2.28	4.1	<0.2	<10	190	0.42	0.11	1.98	0.27	26.30	14.3	55
G003229		0.28	<0.005	0.10	2.25	4.3	<0.2	<10	160	0.36	0.12	1.81	0.23	24.40	15.7	49
G003230		0.30	<0.005	0.09	2.35	4.2	<0.2	<10	160	0.39	0.12	1.60	0.20	26.50	16.4	53
G003231		0.40	<0.005	0.11	2.24	4.6	<0.2	<10	160	0.38	0.12	2.10	0.14	21.50	15.0	49
G003232		0.36	0.006	0.11	1.77	5.4	<0.2	<10	110	0.38	0.14	3.48	0.20	22.50	11.2	35
G003233		0.48	<0.005	0.64	2.00	18.2	<0.2	<10	350	0.47	0.24	0.27	0.70	22.10	8.3	48
G003234		0.28	0.006	0.69	1.62	9.3	<0.2	<10	270	0.38	0.20	0.27	0.58	23.40	10.9	40
G003235		0.44	<0.005	0.56	0.67	7.0	<0.2	<10	200	0.25	0.10	0.14	0.94	17.80	4.5	18
G003236		0.48	<0.005	0.44	2.41	17.4	<0.2	<10	220	0.44	0.26	0.17	0.59	23.80	11.1	47
G003237		0.10	0.010	0.24	0.65	2.7	<0.2	<10	370	0.46	0.05	0.93	0.74	152.00	2.5	5
G003238		Not Recvd														
G003239		0.30	<0.005	0.20	1.79	6.7	<0.2	<10	170	0.29	0.31	0.29	0.15	27.30	8.9	86
G003240		0.06	<0.005	0.01	0.01	0.5	<0.2	<10	10	<0.05	<0.01	0.01	0.02	1.01	0.1	<1

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003201		0.41	12.4	0.72	1.27	0.05	<0.02	0.11	0.008	0.04	11.1	1.5	0.10	345	0.93
G003202		0.19	17.1	0.63	0.64	<0.05	0.02	0.13	0.007	0.05	9.5	0.5	0.12	1870	1.38
G003203		1.49	23.8	3.02	6.33	0.07	0.04	0.05	0.027	0.07	12.9	12.7	0.61	1560	1.05
G003204		1.51	20.7	2.77	6.90	0.07	0.04	0.04	0.022	0.08	8.9	13.1	0.71	614	0.84
G003205		3.06	39.0	2.62	6.47	0.11	0.10	0.06	0.026	0.20	13.2	13.3	1.01	549	0.67
G003206		2.79	39.1	2.45	5.92	0.10	0.10	0.07	0.027	0.14	13.0	12.0	0.83	518	1.17
G003207		2.39	31.7	2.30	5.04	0.10	0.08	0.11	0.027	0.11	10.8	10.2	0.71	520	1.32
G003208		5.46	17.3	3.15	7.63	0.10	0.11	0.05	0.037	0.18	23.7	10.8	0.57	539	1.01
G003209		5.25	22.3	2.60	7.49	0.10	0.07	0.10	0.035	0.16	29.3	9.0	0.49	407	0.93
G003210		1.62	23.5	1.83	3.07	0.18	0.05	0.21	0.026	0.05	78.5	2.2	0.15	3430	1.43
G003211		1.62	23.8	1.93	3.16	0.16	0.05	0.19	0.026	0.06	76.2	2.3	0.16	4740	1.40
G003212		6.07	19.7	3.12	7.59	0.11	0.09	0.08	0.036	0.17	39.3	10.6	0.51	1140	1.18
G003213		6.87	26.3	4.05	9.47	0.15	0.12	0.14	0.049	0.18	48.4	16.4	0.62	807	1.42
G003214		8.34	15.2	4.18	9.06	0.12	0.26	0.05	0.046	0.26	29.5	17.7	0.66	755	1.33
G003215		9.04	16.8	3.17	7.94	0.11	0.10	0.08	0.037	0.27	26.1	12.4	0.59	594	1.15
G003216		5.49	22.7	2.45	7.44	0.11	0.10	0.16	0.033	0.17	42.6	9.1	0.40	268	1.11
G003217		8.77	15.7	3.78	8.86	0.11	0.22	0.05	0.038	0.34	21.0	14.8	0.73	634	1.06
G003218		5.99	21.0	3.31	8.42	0.08	0.20	0.07	0.043	0.18	28.9	14.4	0.43	418	1.36
G003219		5.54	18.2	3.40	9.50	0.09	0.10	0.04	0.034	0.14	36.9	10.7	0.45	387	1.87
G003220		0.21	9.3	0.34	1.10	0.14	0.05	0.13	<0.005	0.03	61.2	0.4	0.16	70	0.49
G003221		0.22	11.7	0.36	1.32	0.17	0.06	0.15	0.006	0.03	93.3	0.4	0.16	56	0.45
G003222		2.93	59.7	4.89	11.80	0.10	0.07	0.02	0.069	0.45	14.4	18.3	1.45	434	4.60
G003223		2.21	39.1	3.11	7.33	0.11	0.07	0.05	0.025	0.42	15.7	16.0	0.97	754	0.55
G003224		1.97	23.2	2.56	9.51	0.07	0.03	0.04	0.018	0.15	9.2	10.6	0.86	210	0.90
G003225		2.41	37.0	3.78	9.17	0.10	0.07	0.03	0.029	0.34	14.1	20.5	1.16	624	0.87
G003226		1.99	34.7	3.52	8.97	0.09	0.04	0.04	0.024	0.29	13.7	18.3	1.03	412	0.79
G003227		2.17	29.5	3.28	8.65	0.09	0.05	0.05	0.025	0.23	11.6	16.4	0.96	365	0.82
G003228		2.13	30.3	2.81	7.27	0.10	0.07	0.06	0.026	0.32	15.3	16.2	0.91	499	0.58
G003229		2.56	29.8	3.03	7.76	0.11	0.08	0.08	0.023	0.35	12.4	20.6	0.85	478	0.52
G003230		2.64	30.3	3.18	8.01	0.12	0.07	0.05	0.023	0.42	13.7	20.8	0.89	486	0.49
G003231		2.32	28.5	2.93	7.44	0.10	0.08	0.06	0.025	0.22	13.2	18.4	0.77	412	0.48
G003232		2.39	35.7	2.30	5.36	0.11	0.09	0.08	0.020	0.31	15.9	14.2	0.64	422	0.52
G003233		2.20	42.5	3.02	8.28	0.08	0.05	0.05	0.029	0.15	11.5	11.2	0.62	246	2.87
G003234		1.75	45.8	2.28	7.08	0.07	0.04	0.05	0.027	0.10	12.0	9.2	0.45	450	2.35
G003235		1.12	51.7	1.13	3.09	0.06	<0.02	0.06	0.014	0.06	8.9	3.0	0.16	112	1.61
G003236		1.95	31.3	3.72	9.26	0.08	0.07	0.08	0.039	0.10	12.6	16.8	0.56	324	3.21
G003237		0.47	33.4	0.77	1.77	0.20	0.08	0.14	0.014	0.04	90.1	1.0	0.10	59	1.23
G003238															
G003239		2.55	20.9	2.83	7.91	0.08	0.08	0.03	0.023	0.16	17.3	8.8	0.65	325	1.74
G003240		<0.05	1.0	0.02	<0.05	<0.05	0.02	0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
G003201		0.37	8.1	1200	4.8	4.0	<0.001	0.09	0.32	1.0	0.7	<0.2	25.4	0.02	0.02	<0.2
G003202		0.22	12.1	1200	5.6	2.6	<0.001	0.16	0.49	1.2	0.9	0.4	59.8	0.02	0.02	0.3
G003203		1.41	25.2	720	9.1	13.9	<0.001	0.03	0.31	3.9	0.8	0.5	34.4	<0.01	0.03	1.2
G003204		1.63	26.1	610	8.3	15.7	<0.001	0.01	0.21	3.7	0.5	0.5	28.1	<0.01	0.03	1.4
G003205		2.13	37.8	890	6.7	29.5	<0.001	0.07	0.29	5.5	1.3	0.4	66.5	0.01	0.03	1.2
G003206		2.05	37.7	840	6.9	23.3	0.001	0.09	0.36	4.9	1.8	0.4	55.4	0.01	0.05	1.3
G003207		1.53	27.8	780	6.6	19.2	0.001	0.07	0.32	4.3	1.5	0.4	45.1	0.01	0.04	1.3
G003208		3.90	14.5	530	10.8	35.7	<0.001	<0.01	0.57	5.1	0.5	1.0	23.6	<0.01	0.02	9.9
G003209		3.07	15.1	660	9.7	36.4	<0.001	0.01	0.52	5.2	0.8	0.9	29.5	<0.01	0.02	3.9
G003210		0.84	11.8	1750	16.4	12.2	<0.001	0.21	1.25	2.7	1.7	0.2	51.8	0.01	0.03	0.4
G003211		0.78	11.8	1680	17.8	13.4	<0.001	0.12	1.21	3.3	1.7	0.2	55.2	0.01	0.03	0.8
G003212		4.04	14.3	700	11.7	35.9	<0.001	0.02	0.80	5.8	0.9	1.0	28.2	<0.01	0.03	5.8
G003213		4.67	19.9	920	16.8	35.4	<0.001	0.03	0.91	7.3	1.2	1.1	33.3	0.01	0.04	8.3
G003214		5.14	14.9	660	16.1	48.0	<0.001	<0.01	0.88	5.7	0.6	1.2	23.1	<0.01	0.02	15.3
G003215		4.71	12.6	750	16.0	52.3	<0.001	0.01	0.87	4.9	0.6	1.1	26.4	<0.01	0.02	8.6
G003216		3.39	14.3	840	11.5	33.5	<0.001	0.06	0.75	4.7	0.8	0.8	38.7	0.01	0.03	3.9
G003217		4.67	14.9	600	12.3	59.8	<0.001	<0.01	0.79	5.6	0.5	1.2	26.1	<0.01	0.02	13.4
G003218		4.34	14.4	490	14.3	34.4	<0.001	<0.01	0.72	4.9	0.5	1.0	18.8	<0.01	0.02	15.1
G003219		3.78	12.4	400	15.5	32.3	<0.001	<0.01	0.82	4.4	0.5	1.1	14.3	<0.01	0.02	6.6
G003220		0.22	6.2	580	2.2	1.7	0.001	0.10	0.42	2.1	1.0	<0.2	98.2	0.01	0.01	4.2
G003221		0.22	5.9	610	9.6	1.7	0.001	0.08	0.45	2.2	1.2	<0.2	107.5	0.01	0.01	5.3
G003222		1.91	117.0	650	22.9	45.7	<0.001	<0.01	0.30	8.1	1.4	1.0	25.8	0.01	0.07	6.0
G003223		2.21	41.4	900	8.2	51.4	<0.001	0.04	0.22	4.4	1.0	0.6	78.2	0.01	0.03	2.3
G003224		2.34	50.0	330	6.1	27.7	<0.001	<0.01	0.17	4.0	0.4	0.7	26.3	<0.01	0.03	2.0
G003225		2.42	52.6	470	6.8	48.8	<0.001	0.03	0.19	6.0	0.8	0.6	63.7	<0.01	0.03	2.7
G003226		2.11	42.6	590	8.2	36.3	<0.001	0.02	0.16	5.0	0.6	0.6	40.4	<0.01	0.03	2.0
G003227		2.09	38.4	480	7.9	33.7	<0.001	0.03	0.19	5.3	0.8	0.6	55.7	<0.01	0.04	2.5
G003228		2.14	34.0	760	7.1	41.4	<0.001	0.06	0.20	5.2	0.9	0.5	80.7	0.01	0.02	1.9
G003229		2.57	34.9	560	8.2	45.0	<0.001	0.05	0.19	5.1	0.9	0.5	80.6	0.01	0.03	2.3
G003230		2.64	36.0	530	8.6	47.2	<0.001	0.03	0.17	5.3	0.8	0.5	73.4	0.01	0.03	2.8
G003231		2.57	33.4	610	7.8	36.1	<0.001	0.05	0.24	4.7	0.8	0.5	88.4	0.01	0.03	1.7
G003232		1.74	30.8	720	6.3	35.9	<0.001	0.11	0.30	3.5	1.0	0.4	132.0	0.01	0.02	1.2
G003233		2.04	32.9	350	10.0	24.9	<0.001	<0.01	0.39	4.4	1.0	0.7	27.2	<0.01	0.06	2.3
G003234		1.56	25.0	620	8.2	18.3	<0.001	0.01	0.25	3.7	1.0	0.6	26.0	<0.01	0.04	1.7
G003235		0.58	14.4	510	4.7	10.2	<0.001	0.01	0.26	1.4	1.1	0.3	18.2	<0.01	0.03	0.2
G003236		2.20	29.7	720	11.6	18.6	<0.001	0.01	0.58	4.2	1.2	0.7	21.9	<0.01	0.06	2.9
G003237		0.30	19.8	1020	3.7	2.8	<0.001	0.23	0.71	3.2	1.9	<0.2	73.4	0.01	0.02	1.6
G003238																
G003239		2.85	22.1	370	8.1	33.3	<0.001	<0.01	0.47	4.3	0.5	0.7	20.7	<0.01	0.04	3.6
G003240		<0.05	0.8	10	1.5	0.1	<0.001	<0.01	0.05	<0.1	<0.2	<0.2	0.6	<0.01	<0.01	0.3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003201		0.018	0.05	0.63	9	0.10	5.57	18
G003202		0.008	0.04	0.46	6	0.09	6.14	29
G003203		0.096	0.15	0.78	64	0.19	7.89	69
G003204		0.109	0.14	0.69	68	0.37	4.46	70
G003205		0.104	0.22	1.50	66	0.31	11.60	72
G003206		0.096	0.17	1.90	65	0.15	10.65	95
G003207		0.092	0.20	1.37	65	0.15	8.58	107
G003208		0.162	0.50	1.69	67	0.29	9.07	62
G003209		0.118	0.46	3.00	49	0.26	11.70	55
G003210		0.028	0.36	6.13	34	0.16	26.40	27
G003211		0.026	0.42	5.71	40	0.16	25.20	30
G003212		0.141	0.51	3.38	64	0.23	13.75	63
G003213		0.162	0.65	5.49	76	0.27	17.00	76
G003214		0.220	0.86	2.47	81	0.27	11.35	80
G003215		0.179	0.75	2.69	64	0.20	9.75	70
G003216		0.107	0.49	4.18	43	0.20	12.80	51
G003217		0.237	0.88	1.69	80	0.37	10.05	79
G003218		0.149	0.54	2.36	63	0.25	8.36	55
G003219		0.161	0.47	1.51	78	0.21	7.62	57
G003220		0.010	0.05	2.62	4	0.05	21.60	13
G003221		0.009	0.04	3.24	3	0.08	24.60	14
G003222		0.146	0.36	1.13	122	0.21	11.90	223
G003223		0.120	0.29	1.18	61	0.14	10.80	75
G003224		0.122	0.20	0.55	56	0.17	4.20	53
G003225		0.163	0.29	0.94	92	0.20	8.19	80
G003226		0.152	0.23	0.89	84	0.17	6.65	72
G003227		0.127	0.25	0.88	71	0.16	6.26	72
G003228		0.107	0.28	0.82	64	0.31	9.87	75
G003229		0.129	0.29	0.78	62	0.15	7.58	68
G003230		0.149	0.31	0.82	68	0.37	8.34	70
G003231		0.118	0.25	0.77	61	0.15	8.46	64
G003232		0.075	0.29	1.04	42	0.18	11.80	59
G003233		0.130	0.21	0.97	102	0.85	6.38	101
G003234		0.098	0.17	1.65	69	0.44	6.26	90
G003235		0.041	0.12	1.39	27	0.09	4.94	32
G003236		0.132	0.28	0.92	89	0.23	4.18	92
G003237		0.017	0.05	5.22	8	0.10	31.80	17
G003238								
G003239		0.170	0.29	0.90	70	0.85	5.02	55
G003240		<0.005	<0.02	0.07	<1	<0.05	0.52	3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003241		0.30	<0.005	0.26	2.60	11.5	<0.2	<10	170	1.48	0.25	0.30	0.76	120.50	18.0	39
G003242		0.36	<0.005	0.23	1.61	7.7	<0.2	<10	210	0.44	0.51	0.29	0.18	16.50	8.1	23
G003243		0.10	<0.005	0.38	1.08	2.3	<0.2	<10	290	1.09	0.08	0.92	0.66	212.00	8.2	6
G003244		0.42	<0.005	0.11	2.31	9.6	<0.2	<10	170	0.73	0.37	0.16	0.25	68.40	7.5	27
G003245		0.34	<0.005	0.12	2.55	13.3	<0.2	<10	180	0.60	0.27	0.18	0.29	35.40	8.3	26
G003246		0.32	<0.005	0.13	1.85	8.2	<0.2	<10	260	0.47	0.22	0.34	0.28	99.00	15.6	22
G003247		0.56	<0.005	0.31	2.01	32.0	<0.2	<10	280	0.65	0.18	0.33	0.49	88.00	14.8	20
G003248		0.58	<0.005	0.08	1.96	4.3	<0.2	<10	180	0.36	0.12	0.54	0.23	66.20	11.9	39
G003249		0.62	<0.005	0.96	1.31	16.3	<0.2	<10	260	0.54	0.17	0.38	1.71	50.00	9.7	16
G003250		0.56	<0.005	0.82	1.58	24.9	<0.2	<10	230	0.64	0.19	0.38	1.16	52.30	10.8	16
G003251		0.18	<0.005	0.21	1.25	7.5	<0.2	<10	250	0.39	0.14	0.48	0.45	67.40	8.1	16
G003252		0.38	<0.005	0.10	1.95	8.9	<0.2	<10	170	0.29	0.15	0.24	0.11	49.80	9.9	20
G003253		0.36	<0.005	0.10	1.89	8.8	<0.2	<10	170	0.37	0.15	0.24	0.11	51.30	9.3	19
G003254		0.48	<0.005	0.08	2.00	4.6	<0.2	<10	170	0.27	0.13	0.74	0.09	16.10	11.9	50
G003255		0.18	<0.005	0.08	0.46	1.9	<0.2	<10	190	0.24	0.04	2.29	0.61	18.55	3.2	5
G003256		0.16	<0.005	0.11	1.94	5.2	<0.2	<10	220	0.47	0.14	1.49	0.55	36.70	14.9	35
G003257		0.44	<0.005	0.08	1.62	4.3	<0.2	<10	130	0.23	0.12	0.42	0.20	17.70	11.2	36
G003258		0.28	<0.005	0.11	1.92	5.0	<0.2	<10	190	0.33	0.13	0.54	0.23	29.30	15.9	40
G003259		0.46	<0.005	0.09	2.15	5.8	<0.2	<10	150	0.32	0.14	0.42	0.17	22.20	17.6	53
G003260		Not Recvd														
G003261		0.20	0.007	0.23	1.39	4.8	<0.2	<10	150	0.23	0.12	0.40	0.22	27.40	10.6	29
G003262		0.50	0.023	0.10	2.30	5.0	<0.2	<10	190	0.43	0.14	0.46	0.12	31.70	19.6	51
G003263		0.24	<0.005	0.16	0.70	2.4	<0.2	<10	160	0.20	0.08	0.60	0.36	44.00	5.3	13
G003264		0.32	<0.005	0.09	0.29	1.2	<0.2	<10	120	0.19	0.05	0.45	0.30	23.90	2.6	10
G003265		0.46	0.005	0.21	2.05	6.0	<0.2	<10	170	0.34	0.14	0.41	0.17	29.10	19.5	59
G003266		0.30	0.005	0.14	0.61	4.6	<0.2	<10	40	0.08	0.18	0.06	0.09	9.11	3.3	14
G003267		0.40	<0.005	0.20	0.58	1.5	<0.2	<10	50	0.13	0.09	0.06	0.13	5.46	2.5	9
G003268		0.34	<0.005	0.25	1.58	6.7	<0.2	<10	60	0.27	0.15	0.08	0.22	10.85	5.1	20
G003269		0.44	<0.005	0.30	2.55	10.9	<0.2	<10	150	0.63	0.15	0.29	0.22	85.70	23.4	50
G003270		0.46	<0.005	0.15	0.98	5.4	<0.2	<10	60	0.18	0.18	0.16	0.14	14.70	4.7	18
G003271		0.40	<0.005	0.16	0.95	5.8	<0.2	<10	60	0.19	0.19	0.15	0.16	14.25	4.9	18
G003272		0.38	<0.005	0.08	0.76	4.2	<0.2	<10	40	0.12	0.11	0.10	0.09	9.75	4.2	15
G003273		0.28	<0.005	<0.01	2.75	0.2	<0.2	<10	430	<0.05	<0.01	0.65	0.01	2.53	0.2	37
G003274		0.56	<0.005	0.08	1.79	5.7	<0.2	<10	140	0.36	0.14	0.33	0.15	37.00	11.4	28
G003275		0.34	<0.005	0.12	1.52	4.4	<0.2	<10	200	0.38	0.12	0.40	0.22	59.90	9.2	22
G003276		0.20	0.005	0.12	0.64	3.3	<0.2	<10	60	0.13	0.17	0.07	0.32	19.25	2.8	9
G003277		Destroyed														
G003278		0.34	0.006	0.26	1.42	4.6	<0.2	<10	180	0.30	0.14	0.34	0.16	52.20	7.5	16
G003279		0.28	<0.005	0.07	0.24	1.2	<0.2	<10	120	0.12	0.05	0.38	0.32	31.80	1.9	6
G003280		0.22	<0.005	0.13	0.25	0.7	<0.2	<10	230	0.19	0.02	0.84	0.50	102.50	2.2	3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003241		2.80	43.1	3.35	8.59	0.12	0.11	0.06	0.041	0.13	76.5	10.5	0.38	898	1.32
G003242		1.82	18.0	2.58	7.20	0.06	0.03	0.04	0.023	0.08	12.1	9.9	0.32	611	2.03
G003243		0.36	22.0	0.84	1.74	0.18	0.03	0.18	0.014	0.05	137.0	1.1	0.10	538	1.11
G003244		4.90	18.9	3.07	8.43	0.11	0.10	0.06	0.038	0.16	57.6	14.4	0.43	307	1.74
G003245		3.94	17.1	3.79	10.15	0.09	0.13	0.03	0.040	0.13	28.7	18.6	0.44	361	2.23
G003246		5.25	15.5	2.87	8.12	0.12	0.04	0.07	0.033	0.13	59.5	13.2	0.47	1610	1.55
G003247		12.45	15.1	3.46	8.38	0.13	0.08	0.35	0.044	0.24	48.9	20.4	0.57	1140	1.26
G003248		1.75	16.3	2.60	6.26	0.12	0.03	0.05	0.021	0.17	36.3	15.8	0.87	330	0.80
G003249		8.38	16.5	2.53	5.92	0.07	0.04	0.26	0.030	0.15	25.8	9.3	0.34	1810	1.06
G003250		8.99	13.4	3.29	6.73	0.10	0.07	0.34	0.038	0.21	28.6	13.4	0.46	1160	1.22
G003251		6.59	21.6	2.00	6.01	0.10	0.04	0.12	0.026	0.14	37.6	6.9	0.34	546	0.79
G003252		8.79	13.6	3.21	8.50	0.11	0.07	0.08	0.035	0.14	30.2	15.0	0.55	542	1.06
G003253		8.75	13.5	3.12	8.24	0.10	0.07	0.09	0.033	0.14	30.8	14.4	0.53	508	1.07
G003254		1.58	18.1	2.36	6.96	0.08	0.03	0.04	0.021	0.09	8.4	16.8	0.83	324	0.55
G003255		0.26	28.0	0.56	0.94	0.06	0.03	0.12	0.008	0.03	10.0	0.9	0.12	453	0.84
G003256		1.76	27.8	2.42	5.67	0.09	0.04	0.07	0.024	0.14	18.5	15.2	0.67	891	0.69
G003257		1.28	13.3	2.29	6.40	0.07	0.03	0.04	0.019	0.07	8.9	12.8	0.63	462	0.58
G003258		1.43	19.1	2.61	6.64	0.08	0.03	0.05	0.021	0.08	14.4	14.2	0.69	874	0.77
G003259		1.91	17.1	3.09	7.82	0.09	0.03	0.03	0.024	0.12	10.9	18.2	0.87	870	0.90
G003260															
G003261		0.98	21.4	2.27	4.97	0.07	0.02	0.12	0.018	0.06	13.4	8.5	0.43	505	1.16
G003262		1.76	23.7	3.29	7.81	0.11	0.04	0.04	0.025	0.24	15.6	18.3	0.90	610	0.69
G003263		0.40	19.5	1.14	2.35	0.07	0.02	0.10	0.013	0.04	22.7	3.1	0.20	232	1.01
G003264		0.40	17.5	0.51	1.10	<0.05	<0.02	0.07	0.007	0.04	13.1	0.7	0.07	97	0.88
G003265		1.01	25.5	3.44	8.23	0.08	0.03	0.05	0.027	0.07	16.2	12.8	0.93	778	1.21
G003266		0.51	14.3	1.58	5.70	<0.05	<0.02	0.03	0.011	0.03	4.1	2.1	0.13	84	1.27
G003267		0.56	15.0	0.94	2.87	<0.05	<0.02	0.01	0.009	0.02	2.7	2.0	0.05	54	0.62
G003268		0.94	16.9	2.25	6.40	0.05	0.03	0.06	0.020	0.03	5.3	9.4	0.17	136	1.02
G003269		2.70	49.0	4.05	8.42	0.16	0.04	0.02	0.029	0.21	64.4	25.8	1.23	452	0.66
G003270		0.60	18.2	1.97	6.26	0.05	0.02	0.05	0.017	0.05	7.3	3.5	0.16	142	1.79
G003271		0.58	17.6	2.01	6.06	0.05	0.02	0.06	0.016	0.05	7.0	4.0	0.17	146	1.70
G003272		0.45	12.8	1.62	4.35	0.05	<0.02	0.03	0.012	0.03	4.7	4.7	0.20	123	0.70
G003273		0.06	0.8	3.46	0.18	<0.05	<0.02	0.01	<0.005	0.21	1.3	0.2	0.57	463	<0.05
G003274		3.03	16.0	2.75	6.79	0.10	0.06	0.04	0.025	0.16	21.7	14.4	0.52	513	0.91
G003275		2.43	18.2	2.32	6.06	0.09	0.05	0.08	0.025	0.13	33.1	12.4	0.45	437	0.98
G003276		3.27	10.5	1.30	4.39	0.06	0.02	0.04	0.016	0.12	13.5	2.9	0.13	207	0.90
G003277															
G003278		4.00	14.1	2.08	6.08	0.10	0.05	0.13	0.025	0.14	37.1	9.6	0.33	406	1.06
G003279		0.71	10.2	0.58	1.40	0.05	<0.02	0.07	0.007	0.04	23.8	0.7	0.07	63	0.62
G003280		0.14	8.5	0.34	0.82	0.10	0.02	0.15	0.005	0.05	80.9	0.3	0.10	108	0.49

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003241		2.22	33.7	1380	14.9	32.5	<0.001	0.02	0.62	5.8	1.2	0.8	25.7	<0.01	0.06
G003242		2.16	14.6	360	10.7	18.5	<0.001	0.01	2.21	3.1	0.6	0.8	24.4	<0.01	0.05
G003243		0.31	13.6	1500	10.4	2.9	<0.001	0.15	1.15	2.1	1.2	<0.2	81.4	0.01	0.02
G003244		3.40	15.1	660	18.9	36.6	<0.001	0.01	3.32	5.9	1.0	0.9	18.5	<0.01	0.05
G003245		3.76	16.5	390	15.8	34.0	<0.001	0.01	3.02	5.1	1.0	1.0	16.1	<0.01	0.05
G003246		2.61	15.3	620	15.4	31.5	<0.001	0.03	1.25	4.4	0.9	0.8	31.4	<0.01	0.04
G003247		3.88	13.8	780	460.0	53.1	<0.001	0.02	1.99	6.2	1.0	1.0	24.3	<0.01	0.04
G003248		1.51	25.9	870	8.6	24.2	<0.001	0.04	0.26	4.9	0.9	0.5	33.0	<0.01	0.03
G003249		2.75	11.5	530	327.0	49.7	<0.001	0.03	2.26	3.6	0.8	0.7	30.7	<0.01	0.04
G003250		3.95	10.7	640	329.0	58.4	<0.001	0.02	4.24	4.8	0.9	0.8	26.8	<0.01	0.04
G003251		3.45	11.6	880	14.8	36.3	<0.001	0.06	0.54	3.7	0.9	0.7	41.9	<0.01	0.03
G003252		5.25	12.6	570	10.4	39.4	<0.001	0.03	0.46	5.1	0.9	1.1	20.5	<0.01	0.04
G003253		5.26	12.3	610	10.0	38.9	<0.001	0.03	0.46	5.0	1.0	1.1	21.2	<0.01	0.04
G003254		1.72	32.8	730	6.8	17.3	<0.001	0.03	0.21	4.3	0.7	0.5	41.1	<0.01	0.03
G003255		0.23	12.9	810	2.1	3.2	0.001	0.21	0.45	1.0	0.7	<0.2	107.5	<0.01	0.02
G003256		1.56	31.6	830	6.1	29.5	<0.001	0.08	0.30	3.7	1.0	0.4	83.1	<0.01	0.04
G003257		1.33	22.6	520	6.3	17.6	<0.001	0.04	0.16	3.4	0.7	0.5	30.1	<0.01	0.03
G003258		1.51	26.7	650	6.8	18.4	<0.001	0.05	0.22	4.3	0.9	0.5	35.9	<0.01	0.04
G003259		1.66	33.2	750	7.7	21.7	<0.001	0.03	0.18	4.6	0.9	0.6	32.4	<0.01	0.04
G003260															
G003261		1.00	20.2	1030	5.6	10.8	<0.001	0.10	0.27	3.1	1.0	0.4	29.2	<0.01	0.04
G003262		1.73	37.0	650	7.8	32.0	<0.001	0.02	0.23	6.0	0.9	0.6	31.3	<0.01	0.05
G003263		0.55	14.8	1040	3.0	5.6	<0.001	0.14	0.28	1.5	0.8	0.2	34.7	<0.01	0.02
G003264		0.32	9.8	700	2.5	3.6	<0.001	0.07	0.16	0.9	0.5	0.2	27.9	<0.01	0.02
G003265		1.23	38.6	860	8.7	11.0	<0.001	0.05	0.20	5.7	1.1	0.5	23.7	<0.01	0.05
G003266		0.83	10.8	360	6.7	4.7	<0.001	0.02	0.37	1.2	0.5	0.5	8.1	<0.01	0.04
G003267		0.15	8.8	290	3.1	2.6	<0.001	0.01	0.20	0.2	0.3	0.3	9.5	<0.01	0.02
G003268		1.27	13.5	320	7.2	4.4	<0.001	0.01	0.34	1.9	0.7	0.5	10.1	0.01	0.04
G003269		1.44	85.0	750	11.0	31.0	<0.001	0.01	0.25	6.5	1.5	0.5	17.6	<0.01	0.06
G003270		0.91	13.9	460	7.8	7.0	<0.001	0.03	0.42	1.6	0.6	0.6	14.8	<0.01	0.04
G003271		0.93	13.6	480	7.9	7.5	<0.001	0.04	0.46	1.6	0.7	0.6	15.7	<0.01	0.05
G003272		0.53	10.9	260	4.7	2.8	<0.001	0.01	0.27	1.2	0.5	0.3	9.4	<0.01	0.03
G003273		0.06	0.6	1480	0.2	0.6	<0.001	0.13	<0.05	0.1	<0.2	<0.2	1.1	<0.01	<0.01
G003274		3.13	15.6	600	8.2	30.6	<0.001	0.01	0.31	4.4	0.8	0.8	25.6	<0.01	0.03
G003275		2.93	15.2	890	6.7	31.6	<0.001	0.05	0.31	4.2	0.7	0.7	37.3	<0.01	0.03
G003276		1.75	5.0	410	7.9	31.3	<0.001	0.02	0.36	1.6	0.4	0.6	11.5	<0.01	0.02
G003277															
G003278		3.68	10.6	710	8.3	36.3	<0.001	0.06	0.30	4.3	0.8	0.7	31.5	<0.01	0.03
G003279		0.44	5.0	490	2.3	4.6	<0.001	0.06	0.17	0.7	0.5	0.2	33.6	<0.01	0.02
G003280		0.17	4.5	980	1.2	1.6	<0.001	0.15	0.39	1.6	0.8	<0.2	71.4	<0.01	0.01

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
Sample Description	0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003241	0.102	0.21	3.73	62	0.43	15.10	74	4.3
G003242	0.096	0.17	1.08	59	0.73	3.33	61	1.3
G003243	0.015	0.08	10.20	9	0.15	41.70	16	0.6
G003244	0.102	0.37	4.12	51	1.66	14.45	69	3.6
G003245	0.137	0.33	1.57	74	1.72	7.74	62	4.6
G003246	0.110	0.42	3.09	57	0.99	13.55	62	1.3
G003247	0.158	1.65	10.10	59	0.26	15.30	110	2.9
G003248	0.108	0.20	2.77	58	0.62	11.55	76	1.1
G003249	0.103	0.84	3.80	46	0.65	6.73	94	1.3
G003250	0.133	1.12	4.32	55	1.21	10.05	89	2.5
G003251	0.100	0.41	3.39	34	0.15	12.70	45	1.5
G003252	0.177	0.59	2.52	65	0.16	8.67	68	2.3
G003253	0.167	0.58	2.57	64	0.16	8.76	66	2.3
G003254	0.114	0.14	0.64	55	0.15	4.89	62	1.2
G003255	0.015	0.07	0.34	10	0.05	7.44	26	1.3
G003256	0.083	0.21	1.01	53	0.14	13.40	75	1.5
G003257	0.100	0.12	0.55	56	0.50	5.20	64	1.0
G003258	0.104	0.15	0.88	57	0.14	9.01	68	1.2
G003259	0.127	0.15	0.82	70	0.19	5.80	80	1.1
G003260								
G003261	0.066	0.12	1.07	52	0.15	7.08	48	0.9
G003262	0.151	0.19	0.84	73	0.15	8.82	75	1.9
G003263	0.035	0.08	1.05	22	0.06	11.40	29	0.5
G003264	0.022	0.03	0.44	11	<0.05	6.82	17	<0.5
G003265	0.102	0.13	0.82	103	0.20	8.22	73	0.9
G003266	0.072	0.08	0.37	57	0.11	1.58	26	0.5
G003267	0.024	0.05	0.29	25	0.08	1.19	15	<0.5
G003268	0.071	0.09	0.43	53	0.13	2.15	29	1.1
G003269	0.123	0.26	0.95	70	0.13	23.60	94	1.1
G003270	0.073	0.06	0.61	63	0.15	3.06	31	0.8
G003271	0.074	0.06	0.59	63	0.13	3.01	31	0.8
G003272	0.060	0.07	0.33	44	0.17	2.19	23	<0.5
G003273	0.113	<0.02	0.09	67	<0.05	0.45	70	<0.5
G003274	0.144	0.31	1.75	60	0.20	8.04	58	2.3
G003275	0.104	0.24	2.49	46	0.14	11.90	51	1.7
G003276	0.067	0.27	1.03	31	0.10	3.39	32	0.7
G003277								
G003278	0.108	0.31	2.63	42	0.12	10.10	44	1.8
G003279	0.028	0.05	1.26	14	0.05	7.11	22	<0.5
G003280	0.010	0.08	2.62	4	<0.05	19.10	27	0.7

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003281		0.14	0.013	0.37	0.93	2.2	<0.2	<10	320	0.50	0.07	0.69	0.34	245.00	6.1	9
G003282		0.36	<0.005	0.05	1.60	6.4	<0.2	<10	110	0.37	0.13	0.27	0.20	36.70	8.3	19
G003283		0.48	<0.005	0.11	0.61	2.5	<0.2	<10	50	0.13	0.15	0.06	0.24	15.80	2.6	8
G003284		0.38	<0.005	0.15	0.67	2.1	<0.2	<10	130	0.39	0.08	0.27	0.34	73.90	3.0	10
G003285		0.58	<0.005	0.05	1.68	5.5	<0.2	<10	170	0.50	0.18	0.26	0.30	55.90	9.4	27
G003286		0.26	0.006	0.14	0.64	1.1	<0.2	<10	270	0.56	0.03	0.72	1.45	213.00	1.6	4
G003287		0.26	0.007	0.23	0.61	1.9	<0.2	<10	290	0.47	0.04	0.84	0.70	189.00	3.8	8
G003288		0.54	0.007	0.05	1.67	2.4	<0.2	<10	130	0.32	0.08	0.61	0.12	23.30	12.7	35
G003289		0.30	<0.005	0.09	1.95	3.7	<0.2	<10	160	0.44	0.12	0.30	0.24	34.00	16.6	38
G003301		0.30	<0.005	0.11	1.88	3.2	<0.2	<10	130	0.26	0.12	0.67	0.15	17.25	11.2	40
G003302		0.36	<0.005	0.07	1.87	4.0	<0.2	<10	170	0.34	0.09	1.96	0.23	24.20	11.8	33
G003303		0.54	<0.005	0.05	2.43	4.5	<0.2	<10	160	0.55	0.10	0.69	0.20	20.80	13.6	48
G003304		0.32	<0.005	0.07	0.55	2.2	<0.2	<10	170	0.20	0.04	3.32	0.47	10.85	3.1	7
G003305		0.44	<0.005	0.10	1.21	2.7	<0.2	<10	360	0.36	0.08	2.70	0.34	18.15	7.9	20
G003306		0.56	<0.005	0.18	1.27	101.5	<0.2	<10	380	0.28	0.12	0.28	0.47	15.10	10.8	42
G003307		0.46	<0.005	0.10	1.59	6.6	<0.2	<10	170	0.20	0.11	0.79	0.22	15.25	12.2	33
G003308		0.42	0.206	0.08	1.42	7.6	<0.2	<10	150	0.28	0.13	0.40	0.18	27.40	10.5	30
G003309		0.24	<0.005	0.20	2.22	7.6	<0.2	<10	340	0.84	0.18	0.99	0.36	300.00	14.5	22
G003310		0.42	<0.005	0.12	1.21	3.7	<0.2	<10	70	0.42	0.11	0.09	0.07	40.50	3.7	13
G003311		0.32	<0.005	0.10	0.54	1.8	<0.2	<10	70	0.10	0.11	0.13	0.25	15.40	2.4	9
G003312		0.52	<0.005	0.10	1.74	6.8	<0.2	<10	150	0.40	0.23	0.27	0.43	38.80	10.4	21
G003313		0.42	<0.005	0.11	2.22	7.6	<0.2	<10	170	0.50	0.34	0.14	0.17	74.20	5.6	25
G003314		0.58	<0.005	0.06	1.73	5.9	<0.2	<10	110	0.38	0.16	0.25	0.20	40.00	7.7	19
G003315		0.46	<0.005	0.07	1.72	8.7	<0.2	<10	130	0.34	0.18	0.14	0.23	14.95	10.3	24
G003316		0.52	<0.005	0.65	1.69	7.1	<0.2	<10	180	0.47	0.27	0.24	0.39	46.80	18.6	24
G003317		0.42	<0.005	0.14	0.76	3.8	<0.2	<10	130	0.12	0.13	0.27	1.02	6.69	4.5	13
G003318		0.40	<0.005	0.05	1.82	7.2	<0.2	<10	130	0.62	0.19	0.23	0.41	55.70	8.6	24
G003319		0.68	0.005	0.12	2.33	7.8	<0.2	<10	230	1.35	0.22	0.63	0.01	35.40	16.6	57
G003320		Empty Bag														
G003321		0.28	<0.005	0.35	1.37	3.0	<0.2	<10	300	1.89	0.10	1.97	0.42	71.30	15.7	10
G003322		0.66	<0.005	0.09	2.45	10.7	<0.2	<10	270	1.24	0.23	0.61	<0.01	31.70	17.2	57
G003323		0.50	<0.005	0.11	0.48	2.0	<0.2	<10	50	0.20	0.07	0.11	0.02	4.44	2.4	9
G003324		0.60	<0.005	0.10	2.65	17.2	<0.2	<10	240	1.11	0.19	0.40	<0.01	27.60	12.2	53
G003325		0.72	<0.005	0.11	2.49	11.5	<0.2	<10	340	1.42	0.22	0.42	<0.01	50.80	14.3	59
G003326		0.48	0.006	0.10	1.84	8.5	<0.2	<10	220	1.04	0.35	0.50	<0.01	46.90	21.9	48
G003327		0.78	<0.005	0.08	2.18	7.6	<0.2	<10	190	0.78	0.18	0.34	<0.01	43.00	16.0	46
G003328		0.42	<0.005	0.17	0.48	1.5	<0.2	<10	150	0.53	0.07	0.42	0.55	47.70	6.3	9
G003329		0.64	0.005	0.06	2.42	6.2	<0.2	<10	210	0.74	0.29	0.42	0.02	45.20	12.5	101
G003330		0.68	0.005	0.06	2.45	5.4	<0.2	<10	220	0.73	0.29	0.44	<0.01	43.30	12.8	111
G003331		0.64	<0.005	0.08	2.33	4.3	<0.2	<10	210	0.59	0.51	0.45	0.11	53.70	13.7	73

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003281		1.77	18.6	1.11	2.82	0.20	0.03	0.23	0.018	0.07	159.0	2.4	0.16	715	0.74
G003282		7.07	12.0	3.06	7.50	0.11	0.08	0.03	0.035	0.28	23.0	15.7	0.53	610	0.98
G003283		3.06	9.2	1.23	4.38	0.06	0.02	0.02	0.013	0.11	10.8	2.7	0.13	167	0.78
G003284		1.45	19.6	1.10	3.00	0.09	0.02	0.06	0.015	0.06	44.4	3.5	0.16	166	0.51
G003285		5.19	18.8	2.91	7.24	0.10	0.06	0.03	0.030	0.27	35.2	13.7	0.52	520	0.92
G003286		0.27	15.6	0.50	1.42	0.14	0.03	0.15	0.008	0.07	108.0	0.7	0.10	122	0.55
G003287		0.42	16.8	0.56	1.44	0.12	0.03	0.26	0.011	0.06	97.1	1.0	0.12	960	0.57
G003288		1.43	14.1	2.24	5.74	0.09	<0.02	<0.01	0.020	0.17	11.4	14.3	0.75	436	0.48
G003289		1.47	30.8	2.61	6.87	0.10	0.02	0.08	0.021	0.14	16.9	17.0	0.64	449	0.69
G003301		0.98	17.5	2.38	7.50	0.07	0.03	0.04	0.020	0.07	9.1	15.2	0.70	212	0.72
G003302		1.58	23.0	2.39	5.39	0.08	0.04	0.06	0.018	0.21	13.0	16.6	0.61	441	0.53
G003303		1.93	20.8	3.03	8.02	0.09	0.03	0.01	0.019	0.32	10.3	19.9	0.84	410	0.53
G003304		0.29	29.5	0.56	1.11	<0.05	0.05	0.10	0.007	0.04	7.2	1.8	0.23	338	0.90
G003305		0.66	32.2	1.31	2.94	0.05	0.04	0.06	0.014	0.05	9.8	5.2	0.38	840	1.12
G003306		1.70	22.1	2.39	5.32	0.07	<0.02	0.13	0.026	0.09	7.5	6.5	0.52	319	2.35
G003307		1.18	13.3	2.27	5.75	0.06	0.03	0.06	0.019	0.08	7.8	10.8	0.62	468	1.00
G003308		1.66	14.0	2.02	4.95	0.08	0.02	0.04	0.019	0.11	14.7	8.7	0.47	732	3.73
G003309		2.32	25.2	2.40	6.31	0.25	0.08	0.22	0.030	0.11	177.5	7.0	0.28	936	1.56
G003310		1.88	9.1	1.76	4.61	0.07	0.06	0.07	0.019	0.06	32.0	6.3	0.19	195	0.70
G003311		2.14	8.4	1.13	3.90	0.05	0.02	0.03	0.010	0.07	11.4	2.3	0.13	111	1.02
G003312		6.73	15.7	3.17	7.72	0.09	0.07	0.07	0.037	0.22	26.7	13.0	0.47	669	1.30
G003313		3.92	15.8	2.76	8.36	0.12	0.07	0.06	0.034	0.11	69.4	13.5	0.34	267	1.34
G003314		10.85	10.0	3.60	8.74	0.10	0.09	0.01	0.036	0.25	20.4	12.9	0.55	639	1.11
G003315		2.15	14.1	3.03	8.26	0.06	0.02	0.02	0.026	0.05	7.7	12.6	0.32	630	1.77
G003316		4.66	21.8	3.05	7.17	0.10	0.04	0.12	0.036	0.11	40.7	9.6	0.30	1430	2.19
G003317		1.30	9.2	1.80	5.32	0.05	0.02	0.02	0.015	0.06	4.1	5.3	0.20	333	1.04
G003318		6.88	13.8	3.30	7.50	0.13	0.09	0.04	0.037	0.23	50.9	16.2	0.46	780	1.64
G003319		5.43	141.0	3.40	8.52	0.17	0.06	0.10	0.054	0.28	17.8	18.3	1.03	483	64.40
G003320															
G003321		1.00	164.5	1.33	2.60	0.08	0.05	0.19	0.028	0.05	29.3	2.0	0.22	6970	178.50
G003322		3.76	87.8	3.32	8.61	0.14	0.07	0.09	0.049	0.13	14.8	14.9	0.87	789	70.20
G003323		0.79	17.0	0.76	2.38	<0.05	<0.02	0.02	0.008	0.03	2.4	1.7	0.14	79	23.30
G003324		5.74	121.0	3.40	9.52	0.13	0.04	0.09	0.038	0.25	14.1	17.5	0.80	385	173.00
G003325		6.29	259.0	3.10	8.82	0.17	0.10	0.30	0.044	0.24	27.5	15.0	0.80	282	155.50
G003326		4.62	169.0	4.27	7.05	0.17	0.13	0.07	0.036	0.20	23.7	13.0	0.71	1700	303.00
G003327		3.31	108.0	2.84	7.51	0.14	0.05	0.06	0.029	0.17	21.7	13.8	0.72	435	146.00
G003328		0.57	58.1	0.71	1.64	0.08	<0.02	0.13	0.011	0.06	29.4	1.1	0.10	173	50.20
G003329		4.25	106.0	2.86	8.61	0.15	0.09	0.08	0.032	0.24	23.9	15.9	0.93	248	42.70
G003330		4.16	102.5	2.87	8.18	0.15	0.09	0.08	0.030	0.25	23.1	15.8	0.98	265	43.40
G003331		2.89	176.0	2.48	7.93	0.16	0.18	0.03	0.035	0.18	29.4	16.7	0.86	265	13.30

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
G003281		0.87	9.6	1400	5.5	8.7	<0.001	0.14	0.44	2.2	1.3	0.2	67.4	0.01	0.02	0.7
G003282		5.02	11.8	660	9.4	55.6	<0.001	0.02	0.48	4.9	0.9	1.0	20.3	<0.01	0.03	10.6
G003283		1.74	4.3	340	6.2	28.4	<0.001	0.03	0.27	1.6	0.3	0.6	10.2	<0.01	0.02	1.3
G003284		0.68	9.4	590	5.5	11.3	<0.001	0.06	0.21	1.2	0.6	0.3	27.1	<0.01	0.02	0.4
G003285		3.23	16.4	660	10.5	45.0	<0.001	0.02	0.41	4.9	0.9	0.8	19.5	<0.01	0.03	7.2
G003286		0.26	9.3	1070	2.2	3.0	<0.001	0.14	0.37	2.2	1.0	<0.2	73.7	0.01	0.01	1.2
G003287		0.32	9.1	1170	3.5	3.6	<0.001	0.16	0.57	3.2	1.1	<0.2	79.2	<0.01	0.02	1.3
G003288		1.39	24.4	810	5.5	23.6	<0.001	0.03	0.10	3.6	0.7	0.4	30.0	<0.01	0.03	2.3
G003289		1.64	30.8	750	7.3	24.3	<0.001	0.08	0.18	3.5	1.0	0.5	27.7	<0.01	0.04	0.9
G003301		1.89	25.9	480	5.2	16.3	<0.001	0.07	0.19	4.3	0.8	0.5	44.7	<0.01	0.03	1.0
G003302		1.96	26.5	710	4.8	39.2	<0.001	0.11	0.27	3.5	0.9	0.4	102.0	<0.01	0.03	1.0
G003303		2.61	31.7	530	5.6	39.6	<0.001	0.04	0.22	4.7	0.8	0.6	59.0	<0.01	0.04	2.5
G003304		0.34	15.3	1160	1.7	4.3	0.001	0.23	0.43	0.8	0.7	<0.2	106.5	<0.01	0.02	0.2
G003305		0.90	21.4	1110	2.8	8.5	0.001	0.17	0.37	1.9	1.1	0.2	99.5	<0.01	0.03	0.4
G003306		0.87	30.0	610	8.2	9.4	0.001	0.03	0.47	5.6	2.1	0.5	56.3	<0.01	0.04	1.4
G003307		1.56	20.8	640	5.6	16.6	<0.001	0.07	0.24	3.7	0.9	0.4	41.1	<0.01	0.02	0.9
G003308		1.49	17.9	770	5.1	20.2	<0.001	0.05	0.29	3.6	0.7	0.5	24.6	<0.01	0.03	2.2
G003309		2.26	17.2	1270	9.6	16.8	<0.001	0.15	0.69	6.8	2.0	0.5	99.2	0.01	0.03	3.9
G003310		1.99	6.3	180	6.8	11.6	<0.001	0.02	0.27	3.1	0.7	0.4	10.5	<0.01	0.02	11.1
G003311		1.36	5.4	220	4.2	22.5	<0.001	0.02	0.27	1.4	0.4	0.4	13.9	<0.01	0.02	0.8
G003312		4.38	14.1	740	11.0	55.4	<0.001	0.03	0.54	4.7	1.0	1.0	20.9	<0.01	0.03	8.8
G003313		3.19	14.4	360	10.4	21.1	<0.001	0.03	0.42	5.1	1.0	0.8	15.8	<0.01	0.05	12.2
G003314		5.22	12.0	430	11.7	51.1	<0.001	0.02	0.75	5.4	0.9	1.2	19.7	<0.01	0.03	9.9
G003315		1.85	15.1	320	11.1	14.7	<0.001	0.02	0.55	3.1	0.7	0.7	15.3	<0.01	0.05	2.1
G003316		2.34	11.3	610	13.5	26.2	<0.001	0.04	0.63	4.0	1.0	0.8	24.3	<0.01	0.04	7.4
G003317		1.30	7.7	240	5.5	13.3	<0.001	0.03	0.28	1.7	0.4	0.5	24.0	<0.01	0.03	0.4
G003318		5.22	13.9	500	14.4	52.4	<0.001	0.02	0.65	5.6	1.0	1.2	19.8	<0.01	0.04	19.2
G003319		2.14	43.5	880	4.1	45.7	0.001	0.03	0.24	9.0	1.0	0.8	29.5	<0.01	0.06	4.0
G003320																
G003321		0.35	33.4	1830	3.4	5.5	0.005	0.27	0.95	1.9	1.6	0.2	85.6	<0.01	0.05	0.4
G003322		1.60	29.8	850	5.2	28.7	0.001	0.02	0.27	9.1	1.2	0.8	39.2	<0.01	0.06	3.3
G003323		0.34	5.5	370	1.7	4.6	<0.001	0.03	0.10	0.9	0.3	0.2	10.0	<0.01	0.01	<0.2
G003324		1.77	40.6	890	5.2	37.6	0.001	0.03	0.24	7.6	1.3	0.9	28.4	<0.01	0.07	2.6
G003325		1.59	41.8	910	6.5	38.2	<0.001	0.01	0.28	10.0	1.9	1.0	31.7	<0.01	0.08	5.5
G003326		1.54	46.3	930	4.8	34.9	<0.001	0.01	0.28	7.9	1.8	0.9	39.0	<0.01	0.09	5.5
G003327		1.66	38.2	820	5.3	27.9	<0.001	0.01	0.28	7.1	1.4	0.7	23.1	<0.01	0.06	3.6
G003328		0.34	15.8	1090	2.2	5.0	<0.001	0.13	0.24	0.8	0.8	0.2	41.5	<0.01	0.02	<0.2
G003329		1.70	44.8	630	4.4	53.3	<0.001	0.01	0.23	8.6	1.2	1.1	34.1	<0.01	0.07	5.2
G003330		1.64	46.3	660	4.4	53.1	<0.001	0.01	0.22	8.4	1.0	1.0	34.5	<0.01	0.07	5.2
G003331		1.22	34.5	650	5.5	39.6	<0.001	0.01	0.36	7.8	1.2	0.7	36.0	<0.01	0.15	6.7

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
LOR									
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003281		0.025	0.19	5.34	15	0.08	41.10	32	<0.5
G003282		0.160	0.55	1.36	57	0.15	10.35	70	3.2
G003283		0.071	0.25	0.71	30	0.10	2.56	29	0.6
G003284		0.038	0.11	2.73	22	0.08	12.00	24	<0.5
G003285		0.136	0.57	2.24	60	0.22	11.80	63	2.0
G003286		0.012	0.08	5.53	5	0.05	33.90	26	0.7
G003287		0.014	0.13	6.93	8	0.07	31.50	31	0.5
G003288		0.100	0.14	0.78	50	0.48	5.97	59	0.5
G003289		0.096	0.14	0.97	56	0.19	6.98	70	0.7
G003301		0.107	0.12	0.69	55	0.15	4.60	59	1.1
G003302		0.093	0.18	0.88	46	0.16	9.05	66	1.7
G003303		0.143	0.18	0.60	60	0.15	6.02	70	1.0
G003304		0.017	0.08	0.40	13	<0.05	5.46	34	2.0
G003305		0.043	0.14	0.67	30	0.06	8.18	26	1.7
G003306		0.067	0.17	0.72	77	0.17	6.30	88	<0.5
G003307		0.098	0.13	0.66	58	0.12	4.46	73	1.2
G003308		0.082	0.17	1.47	47	0.50	7.32	57	0.7
G003309		0.060	0.23	11.40	38	0.28	63.70	42	2.5
G003310		0.084	0.15	2.72	34	0.13	7.03	27	2.2
G003311		0.072	0.16	0.55	29	0.13	3.03	22	0.6
G003312		0.152	0.66	1.76	60	0.15	10.35	73	2.6
G003313		0.102	0.27	2.63	52	0.16	13.35	48	2.6
G003314		0.178	0.71	1.58	66	0.21	9.41	70	3.9
G003315		0.091	0.15	0.62	72	0.15	2.63	53	1.1
G003316		0.093	0.36	6.26	56	0.20	11.60	55	1.3
G003317		0.082	0.10	0.35	46	0.12	1.35	33	0.6
G003318		0.144	0.69	4.20	54	0.65	16.30	88	3.9
G003319		0.194	0.38	1.45	92	17.45	10.70	70	3.0
G003320									
G003321		0.021	0.37	2.30	19	0.76	16.85	66	1.3
G003322		0.168	0.25	1.17	89	11.60	9.44	67	3.4
G003323		0.037	0.06	0.40	18	0.24	1.36	16	<0.5
G003324		0.149	0.40	1.18	101	1.33	7.76	86	1.8
G003325		0.157	0.38	4.00	104	1.71	31.50	89	4.8
G003326		0.152	0.29	3.31	89	6.21	18.50	80	6.5
G003327		0.146	0.26	2.59	83	2.55	12.85	66	2.5
G003328		0.024	0.09	1.55	14	0.12	13.90	37	<0.5
G003329		0.167	0.42	1.41	80	1.06	11.65	60	4.7
G003330		0.171	0.43	1.47	81	1.44	11.60	61	4.8
G003331		0.172	0.30	2.99	72	2.71	14.30	59	8.4

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003332		0.60	0.014	0.15	2.79	10.1	<0.2	<10	250	1.51	0.42	0.39	0.08	91.70	15.2	66
G003333		0.42	0.006	0.27	1.36	5.4	<0.2	<10	150	0.81	0.17	0.34	0.34	46.40	6.8	28
G003334		0.50	<0.005	0.06	2.34	9.1	<0.2	<10	210	0.99	0.17	0.37	<0.01	39.40	13.7	57
G003335		0.48	<0.005	0.05	1.81	10.3	<0.2	<10	210	1.47	0.22	0.37	<0.01	60.80	12.2	45
G003336		0.54	0.012	0.12	2.53	20.5	<0.2	<10	230	1.06	0.17	0.41	<0.01	30.90	10.2	52
G003337		0.76	<0.005	0.06	1.95	15.9	<0.2	<10	220	1.07	0.15	0.49	<0.01	31.90	12.6	47
G003338		0.76	<0.005	0.03	2.24	13.9	<0.2	<10	250	1.23	0.22	0.48	<0.01	28.70	13.0	55
G003339		0.66	<0.005	0.13	2.92	9.1	<0.2	<10	170	1.31	0.24	0.99	<0.01	35.20	20.9	78
G003340		0.54	0.005	0.04	2.34	7.5	<0.2	<10	150	1.35	0.22	0.44	<0.01	33.50	15.6	52
G003501		0.82	<0.005	0.19	2.35	4.2	<0.2	<10	240	0.34	0.13	0.43	0.23	19.55	19.0	63
G003502		0.58	<0.005	0.17	1.76	4.8	<0.2	<10	130	0.24	0.19	0.35	0.23	19.60	15.1	32
G003503		Not Recvd														
G003504		0.24	<0.005	0.20	1.79	4.1	<0.2	<10	190	0.31	0.17	0.61	0.24	30.30	14.4	33
G003505		0.38	<0.005	0.15	1.87	5.0	<0.2	<10	210	0.28	0.18	0.48	0.19	20.70	12.8	31
G003506		0.24	0.010	0.15	2.14	4.9	<0.2	<10	180	0.26	0.18	0.42	0.19	16.00	16.4	39
G003507		0.34	0.006	0.18	1.96	4.4	<0.2	<10	250	0.27	0.14	0.74	0.28	23.40	12.5	36
G003508		0.34	0.007	0.14	1.64	4.5	<0.2	<10	140	0.25	0.12	0.82	0.24	20.50	12.2	34
G003509		0.34	0.015	0.29	2.09	5.4	<0.2	<10	180	0.32	0.18	1.01	0.38	40.00	14.4	40
G003510		0.28	0.014	0.32	2.12	5.3	<0.2	<10	190	0.30	0.18	1.10	0.42	44.10	14.8	41
G003511		0.24	<0.005	0.16	2.39	4.9	<0.2	<10	240	0.30	0.17	0.49	0.64	23.00	18.1	58
G003512		0.30	0.015	0.18	1.88	3.9	<0.2	<10	180	0.40	0.13	0.54	0.26	37.60	18.4	38
G003513		0.32	<0.005	0.11	2.13	2.9	<0.2	<10	150	0.20	0.11	0.39	0.13	12.20	15.3	66
G003514		0.28	0.005	0.22	2.55	6.5	<0.2	<10	240	0.44	0.25	0.42	0.34	27.40	20.4	54
G003515		0.34	<0.005	0.11	2.37	7.5	<0.2	<10	160	0.48	0.19	0.25	0.22	20.70	15.2	45
G003516		0.24	0.006	0.20	2.25	6.0	<0.2	<10	170	0.50	0.15	0.20	0.21	23.20	13.4	41
G003517		0.24	<0.005	0.19	1.75	5.0	<0.2	<10	130	0.37	0.17	0.21	0.16	27.50	10.6	33
G003518		0.16	0.005	0.12	1.50	2.4	<0.2	<10	120	0.19	0.12	0.23	0.11	16.55	5.8	31
G003519		0.20	0.005	0.18	1.74	2.8	<0.2	<10	150	0.30	0.11	0.28	0.22	17.55	8.1	35
G003520		0.22	<0.005	0.13	2.13	3.9	<0.2	<10	170	0.41	0.10	0.96	0.24	34.90	14.8	44
G003521		0.08	<0.005	0.10	1.14	2.9	<0.2	<10	150	0.18	0.07	0.43	0.17	28.40	8.0	18
G003522		0.22	<0.005	0.12	1.47	3.6	<0.2	<10	110	0.19	0.11	0.31	0.13	16.35	9.0	23
G003523		0.22	0.010	0.22	2.40	3.3	<0.2	<10	240	0.24	0.10	1.71	0.45	14.25	20.1	63
G003524		0.18	0.006	0.22	2.22	3.1	<0.2	<10	240	0.21	0.12	2.42	0.59	13.25	18.7	57
G003525		0.44	<0.005	0.22	2.34	5.2	<0.2	<10	150	0.30	0.21	0.72	0.27	23.50	20.2	75
G003526		0.30	<0.005	0.09	2.63	5.0	<0.2	<10	120	0.23	0.44	0.29	0.61	10.70	28.3	24
G003527		0.24	<0.005	0.18	1.83	4.3	<0.2	<10	110	0.19	0.27	0.82	0.62	13.60	19.2	35
G003528		0.14	0.009	0.45	1.47	5.6	<0.2	<10	190	0.32	0.22	2.56	0.64	28.70	13.2	25
G003529		0.20	0.006	0.36	1.47	6.8	<0.2	<10	210	0.36	0.16	1.68	0.57	32.40	12.6	28
G003530		0.22	0.009	0.35	1.45	6.6	<0.2	<10	210	0.36	0.16	1.63	0.64	31.00	12.9	28
G003531		0.32	0.007	0.40	1.59	5.4	<0.2	<10	160	0.34	0.25	1.29	0.43	26.70	15.7	31

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003332		5.27	269.0	3.52	9.64	0.19	0.06	0.05	0.061	0.24	63.5	17.9	0.90	368	50.30
G003333		1.94	101.0	1.98	4.98	0.11	0.03	0.11	0.024	0.08	27.3	6.0	0.34	130	67.50
G003334		4.53	119.0	3.03	7.81	0.14	0.09	0.08	0.034	0.26	19.7	15.4	0.79	349	134.50
G003335		4.67	171.0	2.94	6.79	0.16	0.09	0.15	0.039	0.20	30.9	11.9	0.66	337	174.50
G003336		4.17	134.5	3.15	8.43	0.13	0.06	0.15	0.036	0.17	15.7	16.4	0.74	266	120.00
G003337		2.93	110.0	3.10	6.94	0.15	0.13	0.10	0.031	0.19	16.1	14.3	0.76	503	186.50
G003338		4.33	107.0	2.91	8.35	0.17	0.07	0.04	0.043	0.20	12.2	14.8	1.05	269	68.60
G003339		7.43	161.5	4.59	9.92	0.21	0.17	0.04	0.056	0.28	17.1	17.6	1.64	1220	88.50
G003340		3.48	101.5	3.48	8.48	0.17	0.09	0.03	0.048	0.14	15.2	16.5	0.82	303	98.30
G003501		1.13	73.2	3.72	7.05	0.09	0.02	0.02	0.021	0.26	10.6	13.0	1.47	532	2.54
G003502		0.60	27.2	2.88	5.62	0.07	0.02	0.03	0.023	0.06	9.6	9.0	0.83	665	1.20
G003503															
G003504		0.67	28.0	2.47	5.48	0.08	0.02	0.07	0.022	0.06	14.5	8.2	0.77	649	1.32
G003505		0.69	25.2	2.59	5.82	0.07	0.02	0.02	0.022	0.06	10.1	9.5	0.79	581	0.92
G003506		0.80	28.2	2.92	6.24	0.07	0.02	0.03	0.021	0.06	7.7	9.0	1.21	703	0.95
G003507		0.67	31.1	2.66	5.95	0.07	0.03	0.04	0.022	0.08	11.3	9.1	0.89	536	1.08
G003508		0.56	26.8	2.37	5.23	0.07	0.03	0.02	0.020	0.06	10.2	8.5	0.70	600	1.14
G003509		0.93	43.1	2.83	6.56	0.09	0.03	0.05	0.026	0.09	21.7	10.6	0.91	647	1.31
G003510		0.93	45.6	2.85	6.67	0.09	0.03	0.06	0.026	0.09	24.1	10.7	0.92	665	1.44
G003511		1.01	33.3	3.59	7.78	0.08	0.04	0.01	0.029	0.15	11.4	10.5	1.25	649	1.29
G003512		0.70	30.8	2.81	5.28	0.10	0.02	0.02	0.021	0.11	17.8	9.9	0.91	669	0.80
G003513		0.75	23.9	3.01	7.37	0.07	0.02	0.01	0.018	0.08	6.5	11.2	1.22	352	1.03
G003514		1.38	46.1	3.82	8.74	0.09	0.03	0.02	0.033	0.17	13.8	14.8	1.03	805	2.10
G003515		0.99	30.6	3.87	8.62	0.08	0.05	0.01	0.031	0.13	10.3	17.0	0.77	483	1.66
G003516		0.97	26.2	2.91	8.32	0.08	0.02	0.03	0.025	0.13	11.7	13.2	0.62	325	1.20
G003517		0.89	21.8	2.40	7.03	0.07	<0.02	0.03	0.020	0.07	13.6	11.0	0.49	242	0.98
G003518		0.81	17.3	1.78	6.51	0.07	<0.02	0.03	0.014	0.08	8.3	6.6	0.46	137	0.68
G003519		0.94	23.8	2.11	6.67	0.07	<0.02	0.04	0.017	0.12	8.9	9.0	0.58	183	0.98
G003520		1.43	24.7	2.59	6.69	0.11	0.03	0.03	0.019	0.28	17.8	16.9	0.77	574	0.82
G003521		0.61	13.1	1.75	3.31	0.07	<0.02	0.07	0.014	0.05	14.1	5.5	0.30	235	1.29
G003522		1.02	10.4	2.05	5.83	0.05	0.04	0.04	0.018	0.05	9.2	10.0	0.50	270	0.76
G003523		0.71	62.9	3.56	7.19	0.10	0.06	0.03	0.020	0.22	7.0	11.0	1.82	1030	0.66
G003524		0.71	60.5	3.30	6.28	0.09	0.06	0.06	0.016	0.22	7.7	9.4	1.70	810	0.70
G003525		0.63	44.5	3.77	7.11	0.09	0.06	0.04	0.026	0.07	11.3	12.1	1.66	856	1.01
G003526		0.93	41.6	4.80	8.87	0.08	0.04	0.03	0.020	0.22	5.3	14.1	1.81	903	1.43
G003527		0.70	29.9	3.01	6.39	0.06	0.04	0.05	0.023	0.05	6.1	9.5	1.07	1400	1.49
G003528		0.63	63.9	2.26	4.16	0.09	0.10	0.10	0.021	0.04	18.4	6.7	0.64	1200	1.35
G003529		0.59	50.5	2.43	4.57	0.09	0.09	0.06	0.024	0.04	18.9	8.0	0.61	642	1.42
G003530		0.55	52.7	2.39	4.48	0.08	0.08	0.06	0.026	0.04	17.6	7.8	0.60	649	1.41
G003531		0.60	58.5	2.54	5.06	0.08	0.09	0.05	0.023	0.04	16.9	8.2	0.78	958	1.42

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003332		2.27	59.9	820	5.6	44.6	<0.001	0.02	0.32	9.9	2.2	2.4	30.5	<0.01	0.08
G003333		1.05	25.6	870	3.9	15.5	<0.001	0.12	0.36	2.9	1.3	0.5	33.8	<0.01	0.06
G003334		1.79	40.1	770	5.3	40.5	<0.001	0.02	0.27	7.6	1.5	0.8	26.4	<0.01	0.07
G003335		1.68	31.2	810	6.3	31.2	<0.001	0.02	0.24	6.9	1.2	0.9	26.3	<0.01	0.08
G003336		1.74	35.5	870	5.5	28.2	<0.001	0.02	0.27	8.6	1.4	0.8	29.2	<0.01	0.06
G003337		1.36	37.0	780	4.6	30.2	<0.001	0.01	0.27	8.1	1.0	0.7	32.5	<0.01	0.06
G003338		1.71	30.3	920	4.6	32.7	<0.001	0.01	0.22	7.7	1.1	0.8	27.5	<0.01	0.07
G003339		1.12	47.7	860	4.1	56.7	<0.001	0.01	0.20	10.7	1.2	0.9	43.0	<0.01	0.09
G003340		2.14	30.3	730	4.8	31.4	<0.001	0.01	0.26	7.5	1.2	0.8	25.0	<0.01	0.06
G003501		0.63	38.5	710	5.4	19.6	<0.001	0.01	0.26	6.4	1.0	0.3	23.2	<0.01	0.07
G003502		0.81	22.4	550	6.2	8.8	<0.001	0.02	0.20	5.3	0.8	0.4	19.9	<0.01	0.07
G003503															
G003504		1.00	23.0	560	7.0	9.7	<0.001	0.05	0.32	4.8	0.9	0.4	34.4	<0.01	0.06
G003505		1.08	20.0	470	7.4	8.7	<0.001	0.03	0.23	4.3	0.8	0.4	29.4	<0.01	0.07
G003506		0.91	24.3	520	7.0	9.5	<0.001	0.03	0.21	4.8	0.9	0.4	23.9	<0.01	0.08
G003507		1.12	24.8	570	6.0	11.5	<0.001	0.05	0.24	4.7	1.0	0.4	40.2	<0.01	0.04
G003508		1.06	24.8	540	5.6	8.7	<0.001	0.05	0.23	4.2	0.9	0.4	38.7	<0.01	0.05
G003509		1.12	32.5	640	8.5	14.6	<0.001	0.06	0.28	5.3	1.3	0.5	44.2	<0.01	0.06
G003510		1.14	34.0	670	8.9	14.8	<0.001	0.06	0.33	5.5	1.5	0.5	47.8	<0.01	0.06
G003511		1.22	39.1	310	8.4	20.4	<0.001	0.03	0.27	5.9	1.0	0.5	28.2	<0.01	0.06
G003512		0.78	23.2	530	6.4	13.1	<0.001	0.03	0.18	4.8	1.2	0.3	23.4	<0.01	0.04
G003513		0.99	27.6	250	5.7	10.2	<0.001	0.01	0.16	5.0	0.8	0.4	17.6	<0.01	0.04
G003514		1.58	40.8	620	9.6	21.6	<0.001	0.03	0.23	6.6	1.3	0.6	26.3	<0.01	0.07
G003515		1.73	36.9	530	10.7	16.7	<0.001	0.01	0.24	5.6	1.1	0.6	19.1	<0.01	0.07
G003516		1.87	35.2	560	7.2	17.3	<0.001	0.05	0.19	4.2	1.1	0.6	20.0	<0.01	0.05
G003517		1.22	24.4	490	7.8	14.0	<0.001	0.03	0.16	3.1	0.8	0.5	20.1	<0.01	0.05
G003518		1.16	21.0	410	5.7	10.7	<0.001	0.04	0.13	2.6	0.7	0.4	19.0	<0.01	0.04
G003519		1.14	23.7	710	5.1	17.0	<0.001	0.06	0.19	2.6	0.8	0.5	22.1	<0.01	0.04
G003520		1.66	36.5	750	6.1	39.9	<0.001	0.06	0.18	4.2	1.2	0.4	47.1	<0.01	0.05
G003521		0.92	14.3	980	3.9	6.7	<0.001	0.09	0.31	2.5	0.7	0.3	32.8	<0.01	0.02
G003522		1.40	13.8	490	6.7	11.5	<0.001	0.04	0.25	3.6	0.4	0.5	22.2	<0.01	0.02
G003523		0.82	30.8	500	10.5	24.2	<0.001	0.08	0.22	8.0	0.8	0.2	32.6	0.01	0.07
G003524		0.74	28.7	550	26.1	26.5	<0.001	0.11	0.23	6.9	0.9	0.2	42.8	0.01	0.07
G003525		0.85	37.5	540	13.0	12.8	<0.001	0.04	0.26	8.3	0.9	0.3	25.6	<0.01	0.09
G003526		1.12	16.6	480	19.4	34.2	<0.001	0.04	0.29	6.1	0.6	0.3	15.0	<0.01	0.10
G003527		0.96	21.0	650	13.7	12.3	<0.001	0.07	0.28	4.7	0.7	0.3	30.8	<0.01	0.06
G003528		0.89	26.4	880	8.4	8.6	0.001	0.15	0.56	4.1	2.1	0.3	62.5	0.01	0.10
G003529		1.05	25.4	840	8.8	7.5	0.001	0.13	0.48	4.3	2.0	0.3	66.9	0.01	0.07
G003530		0.97	25.8	800	8.9	7.4	0.002	0.12	0.45	3.9	1.9	0.3	63.7	0.01	0.07
G003531		0.91	26.1	800	10.2	8.1	0.001	0.10	0.34	4.7	1.5	0.3	43.9	0.01	0.13

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
LOR									
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003332		0.161	0.35	3.94	87	7.40	36.10	91	2.7
G003333		0.063	0.16	1.92	49	0.41	14.65	47	1.0
G003334		0.160	0.36	1.70	105	1.67	10.80	75	4.1
G003335		0.148	0.52	2.47	85	2.63	18.20	68	4.5
G003336		0.144	0.42	1.75	92	2.40	11.50	70	2.9
G003337		0.166	0.38	1.39	79	3.01	9.81	66	6.6
G003338		0.178	0.32	0.98	98	10.15	7.02	68	3.5
G003339		0.224	0.45	0.64	101	9.54	10.30	80	8.4
G003340		0.186	0.26	1.01	86	13.20	7.04	60	4.5
G003501		0.113	0.14	0.59	88	0.18	7.29	81	1.2
G003502		0.070	0.07	0.61	59	0.11	6.75	60	0.7
G003503									
G003504		0.074	0.08	0.94	52	0.19	9.28	53	0.8
G003505		0.090	0.08	0.70	60	0.12	6.07	59	0.8
G003506		0.087	0.08	0.53	68	0.12	4.77	66	0.7
G003507		0.091	0.08	1.03	60	0.15	7.63	64	1.3
G003508		0.086	0.07	0.75	55	0.26	6.76	57	1.5
G003509		0.083	0.11	1.82	61	0.24	15.80	74	1.3
G003510		0.080	0.11	2.06	61	0.13	18.35	74	1.4
G003511		0.105	0.10	0.61	78	0.10	6.32	70	1.5
G003512		0.087	0.09	1.54	61	0.16	14.25	57	0.8
G003513		0.116	0.09	0.57	84	0.18	3.64	56	1.1
G003514		0.115	0.13	1.22	94	0.19	7.65	103	1.5
G003515		0.129	0.11	0.74	92	0.21	6.31	77	2.3
G003516		0.111	0.11	0.96	67	0.15	5.73	66	1.0
G003517		0.088	0.10	1.00	54	0.12	5.70	59	0.6
G003518		0.081	0.09	0.71	36	0.19	3.89	42	0.5
G003519		0.084	0.10	0.77	47	0.15	3.99	47	0.6
G003520		0.103	0.21	1.21	61	0.16	9.95	75	1.1
G003521		0.057	0.07	1.24	28	0.13	5.92	35	0.6
G003522		0.109	0.11	0.77	44	0.36	4.28	50	1.0
G003523		0.108	0.13	0.42	90	0.11	9.98	85	1.7
G003524		0.105	0.14	0.36	85	0.12	12.05	90	2.0
G003525		0.083	0.09	0.67	79	0.18	12.20	87	1.7
G003526		0.160	0.16	0.35	99	0.21	4.77	168	1.3
G003527		0.067	0.10	0.52	60	0.15	4.60	105	1.2
G003528		0.050	0.07	1.66	41	0.13	16.70	76	2.9
G003529		0.057	0.07	1.99	49	0.21	17.80	66	2.7
G003530		0.053	0.06	2.01	48	0.15	17.15	65	2.1
G003531		0.055	0.08	0.89	47	0.20	15.95	66	2.3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003532		0.20	0.008	0.32	0.76	4.1	<0.2	<10	210	0.24	0.13	2.87	0.70	21.10	26.9	16
G003533		0.38	0.005	0.26	2.04	6.3	<0.2	<10	110	0.24	0.36	0.53	0.17	21.50	14.1	39
G003534		0.14	0.006	0.35	1.48	6.2	<0.2	<10	220	0.30	0.18	1.82	0.96	41.90	22.5	31
G003535		0.28	0.006	0.44	1.89	6.5	<0.2	<10	170	0.32	0.22	1.67	0.82	62.50	25.0	68
G003536		0.20	<0.005	0.40	0.98	5.8	<0.2	<10	60	0.19	0.17	0.12	0.25	26.70	8.5	25
G003537		0.42	<0.005	0.18	1.76	5.0	<0.2	<10	120	0.31	0.16	0.87	0.21	34.10	13.8	37
G003538		0.24	<0.005	0.16	1.12	5.1	<0.2	<10	90	0.19	0.20	0.43	0.21	36.50	13.2	26
G003539		0.22	<0.005	0.07	0.17	0.5	<0.2	<10	20	<0.05	0.03	0.05	0.05	2.44	0.9	4
G003540		0.04	<0.005	<0.01	0.01	0.2	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.21	0.1	<1
G003541		0.18	<0.005	0.07	0.44	2.0	<0.2	<10	30	0.08	0.09	0.05	0.14	5.05	2.5	6
G003542		0.20	<0.005	0.32	0.43	2.6	<0.2	<10	40	0.10	0.14	0.14	0.45	5.61	3.6	13
G003543		0.18	<0.005	0.16	0.21	3.8	<0.2	<10	70	0.05	0.08	0.74	0.73	8.79	2.7	5
G003544		0.20	0.006	0.29	1.19	3.6	<0.2	<10	190	0.24	0.15	1.02	0.36	42.00	9.4	25
G003545		0.10	0.008	0.27	0.95	3.1	<0.2	<10	160	0.18	0.12	0.81	0.42	38.20	13.5	19
G003546		0.14	<0.005	0.25	1.12	3.4	<0.2	<10	90	0.13	0.15	0.35	0.19	17.25	6.4	29
G003547		0.14	0.018	0.23	0.78	3.2	<0.2	<10	110	0.12	0.07	0.87	0.29	22.50	5.3	17
G003548		0.12	0.011	0.26	0.48	2.7	<0.2	<10	100	0.15	0.04	0.63	0.19	40.10	4.8	8
G003549		0.10	NSS	0.18	1.00	3.7	<0.2	<10	120	0.20	0.09	0.41	0.22	59.20	8.1	19
G003550		0.10	<0.005	0.18	0.99	3.4	<0.2	<10	120	0.18	0.09	0.39	0.20	52.40	7.0	20
G003551		0.34	<0.005	0.18	1.34	3.6	<0.2	<10	80	0.18	0.15	0.25	0.13	23.10	8.5	32
G003552		0.44	<0.005	0.15	1.41	5.8	<0.2	<10	90	0.26	0.18	0.27	0.17	24.60	13.8	31
G003553		0.32	<0.005	0.14	1.89	6.7	<0.2	<10	100	0.27	0.15	0.33	0.15	20.50	12.9	41
G003554		0.26	<0.005	0.09	2.22	7.6	<0.2	<10	180	0.64	0.30	0.22	0.18	80.20	10.4	30
G003555		0.38	<0.005	0.05	2.04	7.0	<0.2	<10	160	0.25	0.28	0.31	0.17	35.00	8.1	23
G003556		0.26	<0.005	0.06	1.74	7.1	<0.2	<10	190	0.33	0.25	0.37	0.20	46.90	9.8	21
G003557		0.46	<0.005	0.03	2.33	7.2	<0.2	<10	170	0.37	0.22	0.35	0.13	31.40	10.5	25
G003558		0.36	<0.005	0.03	2.37	8.0	<0.2	<10	150	0.32	0.22	0.34	0.19	28.20	11.0	27
G003559		0.54	<0.005	0.03	2.34	7.2	<0.2	<10	150	0.40	0.19	0.38	0.12	34.00	12.5	27
G003560		0.16	0.016	0.15	0.64	3.8	<0.2	<10	190	0.25	0.14	0.78	0.25	59.00	3.7	12
G003561		0.20	0.005	0.05	1.02	2.3	<0.2	<10	260	0.19	0.10	1.88	0.22	39.10	4.0	14
G003562		0.26	<0.005	0.04	0.22	0.6	<0.2	<10	80	<0.05	0.07	0.15	0.24	3.81	1.1	5
G003563		0.24	0.007	0.20	1.83	6.6	<0.2	<10	130	0.25	0.25	0.32	0.10	26.60	5.9	20
G003564		0.32	0.006	0.15	2.51	7.7	<0.2	<10	190	0.48	0.21	0.38	0.10	40.00	9.8	26
G003565		0.34	0.005	0.08	3.36	11.2	<0.2	<10	230	0.74	0.27	0.26	0.20	59.50	15.3	36
G003566		0.22	<0.005	0.10	0.75	3.1	<0.2	<10	100	0.20	0.10	0.13	0.23	8.08	5.7	11
G003567		0.26	<0.005	0.20	0.59	2.6	<0.2	<10	80	0.14	0.08	0.14	0.07	16.70	2.2	7
G003568		0.28	<0.005	0.17	1.12	9.1	<0.2	<10	180	0.19	0.25	0.33	0.90	12.50	6.2	16
G003569		0.18	<0.005	0.21	0.80	3.4	<0.2	<10	190	0.14	0.22	0.19	1.40	13.70	5.5	14
G003570		0.20	<0.005	0.29	0.78	3.1	<0.2	<10	260	0.14	0.19	0.23	2.28	15.90	6.2	14
G003571		0.40	<0.005	0.05	1.66	9.6	<0.2	<10	170	0.44	0.21	0.33	0.24	53.60	8.1	21

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003532		0.39	53.1	1.59	2.52	0.06	0.05	0.08	0.015	0.03	10.2	2.5	0.35	1790	1.90
G003533		0.99	35.2	2.94	6.49	0.09	0.07	0.03	0.025	0.06	11.5	10.2	1.27	436	0.84
G003534		0.67	41.4	2.74	4.69	0.09	0.07	0.06	0.022	0.05	18.8	6.0	0.67	2880	2.24
G003535		0.97	48.3	3.26	5.86	0.11	0.10	0.07	0.025	0.06	30.9	8.0	1.11	1920	1.91
G003536		0.91	23.5	2.22	4.49	0.06	0.02	0.09	0.018	0.10	13.8	3.1	0.32	243	2.13
G003537		1.52	31.0	3.22	5.77	0.08	0.04	0.03	0.023	0.16	19.3	6.8	0.81	452	1.12
G003538		0.74	29.7	3.23	5.13	0.08	0.03	0.02	0.020	0.06	21.1	5.1	0.47	373	1.87
G003539		0.26	3.1	0.43	1.39	<0.05	<0.02	0.02	<0.005	0.02	1.3	0.3	0.03	29	0.33
G003540		<0.05	0.6	0.01	<0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.6	<0.1	<0.01	<5	<0.05
G003541		0.53	9.1	0.99	3.30	<0.05	<0.02	0.02	0.005	0.02	2.6	1.5	0.08	84	0.68
G003542		0.53	15.0	1.04	2.96	<0.05	<0.02	0.08	0.012	0.05	3.1	0.9	0.08	80	1.47
G003543		0.15	10.2	0.42	0.71	<0.05	0.02	0.15	<0.005	0.05	6.4	0.2	0.05	172	1.27
G003544		0.79	25.2	1.97	4.21	0.08	0.05	0.10	0.018	0.05	25.2	5.5	0.41	473	1.39
G003545		0.61	20.2	1.46	3.44	0.07	0.03	0.12	0.015	0.04	21.1	3.7	0.26	566	1.41
G003546		0.94	12.7	1.78	5.28	0.05	0.03	0.08	0.016	0.05	10.2	5.3	0.39	265	1.51
G003547		0.78	17.3	1.37	2.83	0.05	0.02	0.11	0.011	0.05	12.4	2.8	0.26	150	1.36
G003548		0.36	17.6	1.32	1.12	0.07	0.02	0.12	0.009	0.03	20.5	0.7	0.09	110	1.40
G003549		0.57	19.8	1.55	3.38	0.09	0.03	0.14	0.015	0.04	32.2	3.8	0.24	204	0.88
G003550		0.57	17.7	1.50	3.40	0.09	0.03	0.12	0.016	0.04	29.0	3.8	0.24	187	0.93
G003551		1.18	14.9	2.11	6.51	0.07	0.02	0.06	0.019	0.05	13.7	7.2	0.53	218	0.75
G003552		1.12	19.3	2.61	6.33	0.07	0.03	0.04	0.020	0.06	13.3	8.2	0.54	453	0.98
G003553		1.41	18.0	2.75	7.49	0.07	0.04	0.04	0.023	0.08	11.6	12.0	0.75	277	0.69
G003554		4.88	25.2	3.37	9.35	0.12	0.09	0.07	0.040	0.17	42.1	9.6	0.51	551	1.41
G003555		6.45	13.1	3.02	9.00	0.10	0.11	0.05	0.033	0.14	20.2	9.6	0.51	409	1.08
G003556		7.03	16.4	2.87	7.94	0.12	0.08	0.06	0.033	0.21	27.4	8.5	0.51	584	1.53
G003557		7.49	14.2	3.79	9.80	0.12	0.33	0.03	0.038	0.25	18.5	12.7	0.68	607	1.29
G003558		7.95	14.6	3.61	9.98	0.12	0.14	0.05	0.041	0.27	16.4	14.9	0.70	540	1.15
G003559		7.04	16.2	3.85	9.33	0.13	0.19	0.04	0.040	0.28	18.5	15.0	0.72	680	1.05
G003560		1.99	16.5	1.03	2.86	0.10	0.05	0.13	0.015	0.07	40.9	2.6	0.16	238	1.26
G003561		5.96	13.1	1.53	4.65	0.11	0.11	0.10	0.019	0.17	34.3	5.1	0.36	299	1.38
G003562		0.88	3.8	0.49	2.18	<0.05	<0.02	0.02	0.005	0.03	2.3	0.6	0.05	167	0.40
G003563		5.77	15.8	2.84	9.30	0.07	0.06	0.04	0.030	0.15	23.1	8.1	0.40	348	1.71
G003564		7.05	15.4	3.64	9.67	0.11	0.23	0.03	0.041	0.16	31.2	15.7	0.58	581	1.46
G003565		5.29	23.1	4.68	12.50	0.12	0.19	0.04	0.057	0.16	48.1	20.7	0.75	738	2.03
G003566		1.92	9.1	1.64	4.90	<0.05	0.02	0.03	0.014	0.04	4.6	3.5	0.10	354	0.76
G003567		1.62	8.1	0.87	3.66	<0.05	0.03	0.03	0.010	0.05	13.6	2.3	0.11	95	0.39
G003568		3.37	12.6	2.28	7.24	0.05	0.05	0.03	0.023	0.10	7.4	5.7	0.30	606	1.58
G003569		2.89	15.1	1.64	5.88	<0.05	0.02	0.02	0.016	0.06	9.5	3.3	0.18	775	1.13
G003570		2.63	16.6	1.59	5.52	<0.05	0.02	0.04	0.016	0.06	11.6	3.1	0.17	1100	1.22
G003571		9.00	15.7	2.99	7.93	0.14	0.12	0.07	0.037	0.20	42.8	9.5	0.42	577	1.58

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm 0.05	ppm 0.2	ppm 10	ppm 0.2	ppm 0.1	ppm 0.001	% 0.01	ppm 0.05	ppm 0.1	ppm 0.2	ppm 0.2	ppm 0.2	ppm 0.01	ppm 0.01	ppm 0.2
G003532		0.52	18.8	1240	5.5	5.0	0.002	0.20	0.39	2.4	1.6	0.2	91.1	0.01	0.11	0.4
G003533		1.11	24.8	520	8.8	12.4	<0.001	0.03	0.25	6.3	0.9	0.4	27.6	<0.01	0.11	2.7
G003534		0.86	32.6	1080	10.6	7.4	<0.001	0.12	0.42	3.7	1.6	0.3	81.5	0.01	0.07	1.4
G003535		0.91	52.3	1000	15.0	11.5	<0.001	0.11	0.32	4.8	1.8	0.3	63.7	0.01	0.07	3.1
G003536		0.99	23.9	680	12.5	12.1	<0.001	0.08	0.30	1.9	0.8	0.4	13.3	0.01	0.04	0.7
G003537		1.50	33.8	620	11.5	25.2	<0.001	0.05	0.20	4.1	0.8	0.5	36.2	<0.01	0.04	3.9
G003538		0.94	32.5	530	12.5	10.3	<0.001	0.04	0.23	2.8	0.8	0.3	25.4	<0.01	0.07	4.4
G003539		0.18	1.7	200	1.6	1.6	<0.001	0.02	0.06	0.5	0.2	<0.2	7.7	<0.01	0.01	<0.2
G003540		<0.05	0.3	10	0.5	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01	0.3
G003541		0.45	5.5	170	4.2	4.1	<0.001	0.01	0.18	0.8	0.2	0.3	7.3	<0.01	0.02	<0.2
G003542		0.44	8.9	640	6.2	4.8	<0.001	0.07	0.28	0.7	0.5	0.3	12.9	0.01	0.02	<0.2
G003543		0.18	5.4	900	2.7	2.4	<0.001	0.15	0.19	1.3	0.7	<0.2	35.3	0.03	0.01	0.3
G003544		1.05	20.1	870	8.0	8.8	0.001	0.12	0.31	3.2	1.0	0.3	47.0	0.01	0.03	0.9
G003545		0.79	18.7	1040	6.6	6.2	<0.001	0.14	0.33	2.4	1.1	0.3	43.9	0.01	0.03	0.3
G003546		0.93	16.1	730	8.6	8.0	<0.001	0.07	0.23	2.7	0.6	0.4	22.5	<0.01	0.03	0.5
G003547		0.63	14.4	1060	5.6	6.5	<0.001	0.16	0.34	1.7	0.9	0.2	41.5	0.02	0.02	0.2
G003548		0.32	12.0	1220	3.7	2.1	<0.001	0.15	0.28	1.6	1.0	<0.2	34.1	0.02	0.02	0.4
G003549		0.83	19.8	930	7.3	10.3	<0.001	0.12	0.23	2.5	1.1	0.2	28.1	0.02	0.03	0.4
G003550		0.83	19.5	900	7.1	9.7	<0.001	0.11	0.22	2.5	1.1	0.2	25.8	0.01	0.02	0.5
G003551		1.17	21.3	560	9.8	10.2	<0.001	0.04	0.17	3.2	0.7	0.5	19.3	<0.01	0.03	0.8
G003552		1.14	23.1	560	9.6	11.6	<0.001	0.04	0.23	3.4	0.5	0.5	20.1	<0.01	0.04	1.1
G003553		1.64	30.5	590	10.2	14.7	<0.001	0.03	0.20	4.6	0.6	0.5	22.9	<0.01	0.02	2.1
G003554		4.30	18.4	600	13.4	38.9	<0.001	0.04	0.48	5.7	0.8	1.1	20.5	<0.01	0.04	5.9
G003555		4.90	13.3	340	11.8	37.3	<0.001	0.03	0.45	5.3	0.5	1.1	26.8	<0.01	0.02	7.2
G003556		4.61	13.6	630	13.4	45.5	<0.001	0.03	0.49	5.7	0.6	1.0	28.0	<0.01	0.03	7.6
G003557		4.42	15.1	520	16.0	54.2	<0.001	0.01	0.47	6.1	0.5	1.1	23.3	<0.01	0.02	12.0
G003558		4.72	15.9	540	15.0	59.0	<0.001	0.01	0.48	6.1	0.6	1.1	24.0	<0.01	0.03	10.3
G003559		4.95	15.1	640	13.2	54.8	<0.001	0.01	0.52	6.3	0.6	1.1	24.6	<0.01	0.03	12.1
G003560		1.50	9.4	930	7.6	18.9	<0.001	0.13	0.48	2.5	1.1	0.3	51.8	0.04	0.03	1.1
G003561		3.64	9.6	600	7.3	37.6	0.001	0.13	0.47	3.3	0.9	0.6	87.5	0.03	0.02	4.1
G003562		0.38	2.2	150	3.2	6.6	<0.001	0.02	0.09	0.8	0.2	0.3	14.6	<0.01	0.01	<0.2
G003563		3.21	11.8	450	10.8	48.6	<0.001	0.04	0.33	4.2	0.5	0.9	21.2	<0.01	0.04	4.4
G003564		4.05	15.5	410	12.0	37.8	<0.001	0.02	0.48	6.3	0.6	1.0	24.9	<0.01	0.03	13.3
G003565		4.60	23.8	550	19.2	32.6	<0.001	0.02	0.50	7.9	0.7	1.2	22.2	<0.01	0.04	17.8
G003566		1.48	6.0	240	6.3	12.7	<0.001	0.01	0.22	1.6	0.3	0.4	13.5	<0.01	0.02	1.0
G003567		0.99	3.9	120	10.0	8.8	<0.001	0.01	0.16	1.7	0.2	0.3	13.5	<0.01	0.01	2.9
G003568		2.25	10.3	330	13.1	27.7	<0.001	0.02	0.38	3.0	0.3	0.7	28.6	<0.01	0.03	2.3
G003569		1.61	8.8	290	8.9	16.1	<0.001	0.02	0.33	2.2	0.3	0.6	21.0	<0.01	0.02	1.2
G003570		1.43	10.0	330	8.8	15.2	<0.001	0.02	0.32	2.2	0.3	0.6	24.4	<0.01	0.02	0.9
G003571		4.54	12.3	500	17.1	49.5	<0.001	0.04	0.71	5.7	0.8	1.1	26.9	<0.01	0.02	9.3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 6 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn	Zr
	Units LOR	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003532		0.028	0.06	0.76	26	0.12	9.75	41	1.3
G003533		0.093	0.09	0.79	56	0.18	9.14	76	2.0
G003534		0.051	0.12	1.27	45	0.13	14.90	87	1.8
G003535		0.052	0.12	2.13	53	0.15	19.45	99	2.2
G003536		0.054	0.10	0.98	39	0.19	5.70	45	0.5
G003537		0.088	0.16	1.21	48	0.18	8.91	92	1.2
G003538		0.046	0.10	1.37	42	0.17	7.87	76	0.6
G003539		0.024	0.02	0.14	11	0.05	0.48	7	<0.5
G003540		<0.005	<0.02	0.10	<1	<0.05	0.69	2	0.5
G003541		0.040	0.04	0.32	28	0.08	1.37	18	<0.5
G003542		0.031	0.06	0.43	27	0.11	1.39	28	<0.5
G003543		0.013	0.04	0.87	6	0.09	3.66	27	0.7
G003544		0.060	0.08	1.49	40	0.18	13.70	49	1.3
G003545		0.042	0.08	1.08	25	0.20	13.20	36	0.6
G003546		0.069	0.09	0.73	41	0.14	4.93	49	0.7
G003547		0.037	0.07	0.96	17	0.13	7.47	37	0.6
G003548		0.022	0.03	1.08	12	0.11	8.31	19	<0.5
G003549		0.045	0.08	1.22	20	0.12	14.00	35	0.5
G003550		0.045	0.07	1.11	19	0.15	12.45	35	0.5
G003551		0.093	0.09	0.73	55	0.13	6.15	51	0.7
G003552		0.098	0.09	0.79	69	0.27	6.06	59	0.8
G003553		0.123	0.13	0.75	57	0.31	5.83	70	1.1
G003554		0.140	0.39	3.83	66	0.27	14.65	66	2.0
G003555		0.170	0.43	1.56	64	0.22	7.64	63	3.0
G003556		0.154	0.51	2.40	61	0.26	12.45	61	2.3
G003557		0.205	0.63	1.40	76	0.17	10.10	79	8.7
G003558		0.198	0.62	1.38	73	0.21	9.06	84	4.3
G003559		0.212	0.61	1.57	76	0.21	10.20	79	6.0
G003560		0.040	0.12	4.37	17	0.19	16.30	29	1.3
G003561		0.082	0.33	2.60	27	0.23	14.70	46	3.3
G003562		0.037	0.05	0.17	16	0.06	0.74	16	<0.5
G003563		0.133	0.37	1.47	65	0.18	4.85	50	1.9
G003564		0.157	0.49	1.98	68	0.18	10.85	66	6.8
G003565		0.164	0.43	2.63	89	0.19	11.65	86	6.1
G003566		0.075	0.08	0.31	37	0.11	1.53	48	0.8
G003567		0.055	0.11	0.75	19	0.07	2.54	15	0.8
G003568		0.108	0.25	0.53	59	0.17	2.41	46	1.4
G003569		0.082	0.19	0.57	44	0.13	3.03	46	0.6
G003570		0.078	0.17	0.58	41	0.14	3.91	46	0.5
G003571		0.141	0.73	4.12	57	0.20	16.90	63	3.3

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - A

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003572		0.26	<0.005	0.18	1.23	8.8	<0.2	<10	390	0.49	0.15	1.08	0.84	114.00	13.1	18
G003573		0.38	<0.005	0.08	2.19	10.5	<0.2	<10	250	0.44	0.23	0.51	0.31	55.60	11.4	29
G003574		0.32	0.005	0.02	1.97	11.1	<0.2	<10	130	0.26	0.23	0.36	0.24	22.90	9.8	25
G003575		0.16	<0.005	0.15	1.56	16.8	<0.2	<10	420	0.66	2.08	0.66	1.01	110.00	38.1	22
G003576		0.36	<0.005	0.06	2.27	10.1	<0.2	<10	190	0.48	0.32	0.35	0.22	36.20	13.3	28
G003577		0.26	<0.005	0.35	1.24	3.5	<0.2	<10	250	0.63	0.24	0.36	0.83	77.00	6.3	19
G003578		0.22	<0.005	0.23	1.12	6.5	<0.2	<10	210	0.20	0.20	0.24	1.32	41.30	5.0	26
G003579		0.24	0.008	0.05	1.24	3.8	<0.2	<10	80	0.16	0.09	0.30	0.14	12.35	6.2	26
G003580		0.06	<0.005	<0.01	0.01	<0.1	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.21	0.1	<1
G003581		0.16	<0.005	0.07	1.42	4.6	<0.2	<10	100	0.21	0.10	0.33	0.13	16.60	9.3	30
G003582		0.26	0.007	0.09	1.89	5.7	<0.2	<10	120	0.32	0.14	0.31	0.13	20.30	22.9	37
G003583		0.34	<0.005	0.06	1.78	4.6	<0.2	<10	140	0.27	0.11	0.43	0.11	20.20	28.2	37
G003584		0.22	0.007	0.08	1.32	7.8	<0.2	<10	110	0.22	0.11	0.34	0.12	18.50	7.9	29
G003585		0.28	<0.005	0.10	1.17	5.3	<0.2	<10	90	0.16	0.12	0.26	0.15	15.85	6.0	27
G003586		0.24	<0.005	0.16	1.68	5.4	<0.2	<10	120	0.29	0.14	0.28	0.14	20.30	13.4	37
G003587		0.24	0.012	0.27	0.46	2.0	<0.2	<10	130	0.16	0.05	0.43	0.31	31.70	4.5	13
G003588		0.38	<0.005	0.05	2.14	6.3	<0.2	<10	110	0.41	0.16	0.29	0.15	21.20	18.0	45
G003589		0.22	<0.005	0.15	1.73	7.0	<0.2	<10	190	0.34	0.13	0.69	0.27	33.70	22.8	35
G003590		0.14	<0.005	0.17	1.28	5.6	<0.2	<10	220	0.35	0.09	1.01	0.41	49.60	29.3	23
G003591		0.36	<0.005	0.09	1.60	4.3	<0.2	<10	120	0.22	0.14	0.39	0.15	15.50	10.1	34
G003592		0.18	<0.005	0.10	2.11	5.7	<0.2	<10	220	0.44	0.13	0.85	0.21	27.70	16.5	45
G003593		0.36	<0.005	0.07	1.84	5.4	<0.2	<10	170	0.34	0.12	0.91	0.21	19.75	14.6	38
G003594		0.26	0.005	0.15	1.62	5.6	<0.2	<10	170	0.41	0.12	1.81	0.25	22.80	13.5	33
G003595		0.28	0.006	0.09	1.84	6.4	<0.2	<10	190	0.49	0.12	1.89	0.25	27.00	14.4	37
G003596		0.26	0.009	0.11	1.77	6.5	<0.2	<10	190	0.44	0.11	0.65	0.46	39.40	18.8	36
G003597		0.22	0.006	0.15	1.80	7.5	<0.2	<10	260	0.37	0.17	0.91	0.35	58.90	14.9	40
G003598		0.18	0.012	0.07	1.41	4.6	<0.2	<10	130	0.23	0.12	0.37	0.14	14.70	10.0	25
G003599		0.32	0.007	0.25	2.43	3.6	<0.2	<10	200	0.23	0.09	1.63	0.33	15.25	20.4	48
G003600		0.30	0.009	0.26	2.34	3.2	<0.2	<10	190	0.27	0.08	1.85	0.27	14.45	19.8	52

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - B

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
	Units LOR	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003572		3.67	23.2	2.31	5.11	0.20	0.11	0.21	0.027	0.09	90.2	5.5	0.33	1740	2.04
G003573		6.27	20.6	3.45	8.53	0.13	0.18	0.12	0.040	0.17	33.9	12.6	0.65	546	0.86
G003574		6.18	11.5	3.24	8.23	0.10	0.22	0.09	0.033	0.16	14.1	12.1	0.60	447	1.16
G003575		3.71	27.5	3.32	6.62	0.15	0.09	0.17	0.038	0.12	62.7	6.4	0.27	4690	3.08
G003576		5.81	20.3	3.46	8.50	0.11	0.13	0.07	0.040	0.17	20.2	14.4	0.62	665	1.01
G003577		2.34	49.5	1.71	5.62	0.09	0.05	0.10	0.026	0.07	42.7	3.9	0.22	292	0.95
G003578		3.42	26.0	2.00	6.34	0.07	0.03	0.07	0.022	0.10	25.0	4.2	0.26	167	1.68
G003579		1.11	9.2	1.89	5.61	0.05	0.03	0.04	0.015	0.05	6.7	8.2	0.47	157	0.58
G003580		<0.05	0.7	0.02	0.07	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05
G003581		1.57	13.7	2.25	5.78	0.06	0.03	0.07	0.020	0.05	9.2	8.5	0.47	296	0.68
G003582		1.67	14.6	3.10	7.36	0.07	0.04	0.04	0.026	0.06	10.6	14.3	0.66	800	0.87
G003583		1.57	13.2	2.80	7.02	0.08	0.03	0.03	0.021	0.09	10.5	13.8	0.71	1300	0.86
G003584		1.00	15.4	2.05	5.95	0.06	0.03	0.09	0.017	0.05	10.2	8.0	0.46	213	0.85
G003585		1.13	10.9	1.69	5.74	0.06	0.03	0.05	0.016	0.05	8.9	7.3	0.44	166	0.60
G003586		1.32	19.8	2.67	6.94	0.07	0.03	0.04	0.022	0.08	11.2	11.9	0.65	379	0.94
G003587		0.55	18.6	0.77	1.72	0.05	0.02	0.12	0.012	0.05	16.0	1.4	0.10	120	1.04
G003588		1.27	19.4	3.58	8.29	0.08	0.05	0.02	0.031	0.09	12.4	17.1	0.87	542	0.80
G003589		1.06	20.6	3.17	6.04	0.09	0.05	0.05	0.024	0.08	15.8	11.1	0.59	1580	1.52
G003590		0.73	29.4	2.56	3.92	0.09	0.05	0.08	0.024	0.05	21.9	6.0	0.33	2580	1.76
G003591		1.09	13.2	2.30	6.89	0.05	0.03	0.03	0.020	0.06	8.9	11.6	0.63	331	0.65
G003592		1.66	25.2	3.18	7.41	0.09	0.06	0.04	0.025	0.10	13.7	17.0	0.84	966	0.96
G003593		1.55	19.0	2.80	6.57	0.08	0.05	0.05	0.022	0.09	10.4	15.4	0.70	583	0.70
G003594		1.67	29.7	2.44	5.69	0.09	0.09	0.05	0.022	0.10	11.9	15.9	0.59	530	0.49
G003595		1.80	30.1	2.70	5.95	0.09	0.09	0.05	0.023	0.12	13.9	17.9	0.63	613	0.48
G003596		1.89	20.7	2.61	6.64	0.08	0.05	0.04	0.022	0.06	16.4	16.4	0.65	1880	0.70
G003597		1.77	23.9	2.36	6.37	0.11	0.06	0.08	0.022	0.13	31.1	11.7	0.78	792	1.42
G003598		0.86	13.1	2.12	5.99	0.05	0.04	0.06	0.021	0.06	7.8	9.6	0.48	414	1.05
G003599		0.91	56.3	3.54	7.50	0.11	0.07	0.05	0.022	0.24	7.5	11.3	1.74	916	0.59
G003600		0.80	67.8	3.42	6.96	0.10	0.07	0.05	0.020	0.13	7.3	11.4	1.67	861	0.61

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - C

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
	Units LOR	ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003572		2.42	13.3	1050	14.8	22.7	0.001	0.15	0.83	5.2	1.8	0.5	69.9	0.01	0.03
G003573		4.33	17.6	580	24.4	40.4	<0.001	0.03	0.63	7.7	0.8	1.0	34.5	<0.01	0.03
G003574		4.40	14.5	420	23.5	41.0	<0.001	0.01	0.59	5.4	0.5	1.0	24.9	<0.01	0.02
G003575		2.25	15.4	1140	32.4	35.9	<0.001	0.13	1.12	4.9	1.6	0.8	49.4	0.01	0.06
G003576		3.88	16.0	540	22.3	35.7	<0.001	0.01	0.57	6.3	0.7	1.0	25.1	<0.01	0.03
G003577		1.54	17.3	700	15.1	14.4	<0.001	0.07	0.34	2.9	0.9	0.7	31.1	0.01	0.03
G003578		1.73	13.7	490	6.5	23.7	<0.001	0.06	0.34	3.2	0.7	0.6	25.6	0.01	0.05
G003579		1.37	13.5	410	6.1	9.5	<0.001	0.04	0.15	2.7	0.4	0.4	20.5	<0.01	0.02
G003580		0.05	0.4	10	0.6	0.2	<0.001	0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01
G003581		1.45	16.0	590	7.0	13.5	<0.001	0.07	0.23	3.0	0.7	0.4	23.4	0.01	0.03
G003582		1.75	22.7	540	8.5	13.9	<0.001	0.04	0.19	4.3	0.6	0.5	22.9	<0.01	0.02
G003583		1.67	23.3	640	8.2	17.4	<0.001	0.05	0.17	4.2	0.5	0.5	27.3	<0.01	0.02
G003584		1.39	16.9	530	6.9	11.0	<0.001	0.07	0.22	3.1	0.8	0.4	24.5	0.01	0.03
G003585		1.06	14.7	550	6.6	10.5	<0.001	0.05	0.17	2.6	0.6	0.4	19.3	<0.01	0.02
G003586		1.48	24.8	630	7.7	13.1	<0.001	0.05	0.20	4.0	0.6	0.5	21.2	<0.01	0.02
G003587		0.52	11.2	1150	2.4	5.4	<0.001	0.14	0.22	1.1	0.9	0.2	27.3	0.02	0.03
G003588		1.94	33.0	490	10.1	12.9	<0.001	0.02	0.21	5.0	0.5	0.6	19.5	<0.01	0.04
G003589		1.44	25.9	910	7.6	15.2	<0.001	0.08	0.32	4.5	1.0	0.4	41.6	<0.01	0.04
G003590		0.94	22.1	1050	5.5	9.5	0.001	0.13	0.43	3.8	1.4	0.3	57.5	0.01	0.04
G003591		1.42	21.0	600	7.9	12.5	<0.001	0.04	0.24	3.8	0.4	0.5	25.5	<0.01	0.02
G003592		1.82	30.1	740	8.2	18.4	<0.001	0.07	0.25	5.4	0.9	0.5	41.3	<0.01	0.04
G003593		1.80	25.0	620	7.3	21.2	<0.001	0.06	0.23	4.5	0.7	0.5	48.9	<0.01	0.03
G003594		1.91	27.7	540	7.4	23.0	<0.001	0.08	0.16	4.4	0.8	0.4	86.2	0.01	0.01
G003595		2.10	29.3	520	7.7	25.8	<0.001	0.07	0.16	4.7	0.9	0.4	89.4	0.01	0.02
G003596		1.72	26.7	490	6.9	17.9	<0.001	0.04	0.13	4.4	0.8	0.4	39.5	<0.01	0.01
G003597		1.96	40.2	730	7.1	23.8	0.001	0.07	0.28	5.2	1.1	0.5	53.6	0.01	0.06
G003598		1.48	16.7	600	6.6	10.7	<0.001	0.03	0.20	3.5	0.5	0.5	26.2	<0.01	0.01
G003599		0.88	25.4	520	8.5	25.7	<0.001	0.07	0.12	7.9	0.8	0.3	30.3	0.01	0.03
G003600		0.84	26.7	560	7.7	17.2	<0.001	0.08	0.12	7.5	0.9	0.2	34.6	0.01	0.03

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 7 - D

Total # Pages: 7 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079986

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003572		0.073	0.36	8.71	40	0.23	37.00	47	2.3
G003573		0.177	0.57	3.10	70	0.22	15.45	86	6.1
G003574		0.183	0.56	1.13	70	0.18	7.27	78	6.4
G003575		0.075	0.41	6.99	60	0.32	25.00	67	1.9
G003576		0.170	0.54	2.35	65	0.20	10.05	81	4.5
G003577		0.060	0.14	6.01	31	0.15	17.00	35	0.7
G003578		0.085	0.19	2.00	45	0.28	6.12	41	0.9
G003579		0.096	0.07	0.48	44	0.30	3.26	51	0.9
G003580		<0.005	<0.02	0.14	<1	<0.05	0.71	3	0.5
G003581		0.083	0.11	0.73	41	0.13	4.91	54	1.0
G003582		0.119	0.14	0.80	73	0.30	5.30	80	1.0
G003583		0.121	0.17	0.67	65	0.33	5.53	73	0.9
G003584		0.078	0.11	0.74	41	0.18	5.10	49	1.0
G003585		0.082	0.09	0.55	34	0.14	4.31	45	0.7
G003586		0.101	0.11	0.76	58	0.16	5.64	62	0.9
G003587		0.024	0.05	0.94	14	0.11	9.12	22	<0.5
G003588		0.142	0.12	0.63	77	0.24	5.96	80	1.4
G003589		0.088	0.14	1.11	63	0.19	10.20	68	1.3
G003590		0.052	0.14	1.51	41	0.23	14.65	47	1.0
G003591		0.104	0.09	0.53	50	0.22	4.48	66	0.9
G003592		0.113	0.16	1.03	72	0.18	10.20	88	1.6
G003593		0.109	0.14	0.75	62	0.35	6.89	80	1.7
G003594		0.096	0.18	1.08	48	0.17	9.28	68	2.9
G003595		0.101	0.18	1.16	51	0.16	11.60	74	2.9
G003596		0.099	0.23	0.98	55	0.19	11.40	86	1.1
G003597		0.091	0.19	2.40	52	0.29	18.10	76	1.5
G003598		0.103	0.11	0.71	58	0.15	4.12	50	1.3
G003599		0.107	0.15	0.42	91	0.09	10.50	84	1.9
G003600		0.103	0.14	0.37	85	0.06	11.30	74	1.9

Comments: Sample G003277 was lost during preparation. Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 12-AUG-2007

Account: EIANGX

CERTIFICATE VA07079989

Project: North Dawson

P.O. No.: NGX07-02

This report is for 143 Soil samples submitted to our lab in Vancouver, BC, Canada on 18-JUL-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERA

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both
LOG-24	Pulp Login - Rcd w/o Barcode

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003601		0.44	0.018	0.30	2.56	4.5	<0.2	<10	220	0.20	0.11	1.28	0.42	16.50	22.0	35
G003602		0.36	0.010	0.20	2.47	3.8	<0.2	<10	220	0.26	0.11	1.20	0.31	20.40	20.6	43
G003603		0.26	0.032	0.17	1.72	2.8	<0.2	<10	160	0.21	0.11	1.74	0.73	11.15	16.0	51
G003604		0.46	0.021	0.16	1.93	4.5	<0.2	<10	110	0.24	0.22	0.79	0.18	19.80	16.9	55
G003605		0.46	<0.005	0.17	1.91	5.0	<0.2	<10	110	0.24	0.15	1.03	0.17	17.70	19.3	46
G003606		0.30	NSS	0.25	1.08	5.3	<0.2	<10	130	0.21	0.12	2.28	0.49	22.50	12.2	18
G003607		0.46	0.014	0.36	1.98	6.3	<0.2	<10	150	0.26	0.18	0.67	0.55	29.80	18.3	47
G003608		0.28	0.015	0.53	1.46	6.7	<0.2	<10	180	0.33	0.23	1.83	0.76	27.10	18.8	25
G003609		0.26	0.026	0.34	1.16	3.8	<0.2	<10	160	0.29	0.14	2.28	0.36	22.50	16.3	22
G003610		0.32	0.010	0.28	1.66	10.9	<0.2	<10	320	0.26	0.14	1.41	1.05	31.30	67.6	29
G003611		0.24	NSS	0.29	1.68	6.5	<0.2	<10	220	0.25	0.14	1.53	0.68	27.20	34.0	30
G003612		0.30	0.025	0.19	1.79	5.7	<0.2	<10	110	0.23	0.18	0.86	0.23	29.60	12.7	39
G003613		0.28	NSS	0.84	1.60	5.3	<0.2	<10	140	0.41	0.15	1.43	0.42	79.20	9.8	28
G003614		0.38	0.018	0.12	1.68	7.0	<0.2	<10	80	0.32	0.19	0.24	0.22	44.60	16.4	32
G003615		0.32	0.011	0.47	0.66	3.1	<0.2	<10	40	0.10	0.15	0.10	0.10	10.25	3.8	11
G003616		0.40	0.012	0.21	2.00	7.6	<0.2	<10	160	0.33	0.20	0.37	0.21	34.50	14.7	33
G003617		0.34	0.013	0.15	0.64	2.5	<0.2	<10	30	0.10	0.10	0.05	0.19	8.06	3.0	12
G003618		0.28	NSS	0.34	0.43	1.4	0.2	<10	50	0.16	0.06	1.20	0.41	39.60	2.5	9
G003619		0.32	0.021	0.20	1.26	6.1	<0.2	<10	100	0.22	0.43	0.20	0.13	12.35	7.3	26
G003620		0.06	<0.005	0.01	0.01	0.1	<0.2	<10	10	<0.05	<0.01	<0.01	0.01	1.17	0.1	<1
G003621		0.24	NSS	0.44	0.99	4.2	<0.2	<10	90	0.22	0.12	1.94	0.50	38.50	9.4	17
G003622		0.36	<0.005	0.45	1.41	3.7	<0.2	<10	110	0.20	0.14	0.94	0.28	35.90	6.7	34
G003623		0.16	0.008	0.41	1.41	4.9	<0.2	<10	170	0.34	0.12	1.07	0.54	92.10	15.1	22
G003624		0.42	0.050	0.20	1.40	3.6	<0.2	<10	120	0.18	0.16	0.65	0.13	24.10	11.3	34
G003625		0.22	0.159	0.32	0.45	2.2	<0.2	<10	100	0.18	0.05	1.54	0.33	74.70	2.7	7
G003626		0.20	0.009	0.33	1.21	5.0	<0.2	<10	90	0.23	0.14	0.33	0.21	35.30	9.3	30
G003627		0.20	<0.005	0.33	1.31	3.8	<0.2	<10	120	0.24	0.15	0.49	0.29	55.20	12.2	28
G003628		0.26	0.006	0.21	1.15	4.4	<0.2	<10	60	0.16	0.12	0.24	0.12	16.95	7.6	27
G003629		0.20	<0.005	0.14	0.63	1.8	<0.2	<10	480	0.62	0.07	1.28	0.74	214.00	2.8	5
G003630		0.38	0.021	0.18	2.29	10.3	<0.2	<10	220	0.49	0.41	0.40	0.32	53.10	11.3	31
G003631		0.40	0.008	0.13	2.82	13.0	<0.2	<10	260	0.54	0.53	0.37	0.51	49.70	9.7	33
G003632		0.34	0.005	0.15	2.71	11.3	<0.2	<10	310	0.57	0.47	0.45	0.19	59.70	10.3	32
G003633		0.24	0.008	0.22	1.00	3.6	<0.2	<10	460	0.51	0.16	1.28	0.73	131.00	2.7	11
G003634		0.28	0.008	0.22	1.92	10.3	<0.2	<10	410	0.70	0.56	0.69	0.98	130.00	5.3	22
G003635		0.38	<0.005	0.05	2.11	10.1	<0.2	<10	210	0.45	0.22	0.23	0.32	33.30	9.4	26
G003636		0.36	<0.005	0.17	1.88	5.4	<0.2	<10	220	0.27	0.14	0.33	0.05	34.50	5.8	21
G003637		0.30	<0.005	0.13	2.50	8.9	<0.2	<10	320	0.48	0.20	0.30	0.11	67.40	8.6	29
G003638		0.22	<0.005	0.17	0.89	3.6	<0.2	<10	220	0.24	0.17	0.27	0.27	15.65	7.3	14
G003639		0.38	<0.005	0.07	2.20	8.7	<0.2	<10	200	0.48	0.18	0.28	0.07	54.50	8.3	23
G003640		0.46	<0.005	0.05	2.22	7.7	<0.2	<10	230	0.51	0.14	0.35	0.07	79.00	10.9	26

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003601		0.85	41.7	3.88	7.25	0.10	0.04	0.04	0.022	0.38	7.8	9.9	1.70	952	0.92
G003602		0.67	39.0	3.61	6.92	0.08	0.05	0.03	0.021	0.17	9.9	9.2	1.69	943	0.88
G003603		0.49	47.0	2.50	5.00	0.07	0.03	0.05	0.020	0.06	5.5	6.2	1.25	748	0.95
G003604		0.55	19.6	3.33	5.89	0.08	0.04	0.02	0.029	0.05	8.8	8.8	1.35	718	1.05
G003605		0.51	18.7	2.92	5.66	0.05	0.04	0.04	0.021	0.04	7.1	8.1	1.18	827	1.02
G003606		0.40	42.6	1.84	2.92	0.05	0.05	0.05	0.016	0.03	11.4	4.8	0.52	835	1.14
G003607		0.66	36.7	3.22	5.80	0.07	0.05	0.04	0.026	0.05	15.9	9.6	0.99	508	1.85
G003608		0.53	77.8	2.44	3.95	0.07	0.06	0.07	0.021	0.04	14.7	5.8	0.59	1775	2.33
G003609		0.34	68.2	1.68	2.93	0.05	0.06	0.08	0.013	0.03	12.1	3.4	0.54	1340	1.78
G003610		0.70	45.5	3.84	4.32	0.07	0.04	0.06	0.017	0.05	10.3	5.6	0.92	6390	3.41
G003611		0.71	45.4	2.99	4.38	0.06	0.04	0.04	0.016	0.05	10.1	5.7	0.93	3230	1.85
G003612		0.87	25.8	3.19	5.06	0.07	0.06	0.05	0.021	0.07	14.8	7.1	0.96	455	1.19
G003613		0.79	41.6	2.44	4.65	0.16	0.04	0.09	0.021	0.07	91.2	5.4	0.47	356	1.59
G003614		1.05	37.4	3.89	5.68	0.08	0.02	0.02	0.020	0.12	19.7	7.5	0.64	354	1.47
G003615		0.49	10.9	1.47	4.24	<0.05	<0.02	0.04	0.009	0.04	5.2	2.0	0.13	86	1.03
G003616		0.91	26.5	3.94	6.91	0.07	0.03	0.04	0.028	0.06	20.0	11.1	0.64	411	1.63
G003617		0.65	11.2	1.40	4.30	<0.05	<0.02	0.02	0.009	0.03	3.9	1.7	0.11	88	0.94
G003618		0.28	11.3	0.81	1.51	<0.05	<0.02	0.11	0.010	0.03	24.2	0.5	0.08	47	1.41
G003619		1.17	12.8	2.74	5.68	<0.05	0.02	0.07	0.019	0.05	6.5	4.9	0.41	190	1.29
G003620		<0.05	0.5	0.02	0.06	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	0.05
G003621		0.57	29.3	1.51	3.05	0.11	0.05	0.11	0.016	0.04	55.2	3.7	0.28	340	1.60
G003622		0.96	19.1	2.15	5.33	0.07	0.03	0.10	0.020	0.07	29.7	6.4	0.53	153	1.20
G003623		0.66	32.5	2.09	3.91	0.12	0.03	0.13	0.024	0.05	59.8	5.4	0.37	1670	1.87
G003624		0.98	13.9	2.08	5.55	0.05	0.03	0.04	0.018	0.06	12.6	7.7	0.50	373	1.63
G003625		0.34	24.8	0.73	1.14	0.09	0.02	0.10	0.009	0.02	52.0	0.5	0.11	87	0.76
G003626		0.89	19.1	2.25	5.10	0.07	0.03	0.05	0.017	0.06	22.9	6.9	0.45	178	0.75
G003627		0.83	17.3	1.90	5.25	0.08	0.02	0.05	0.017	0.05	31.5	7.6	0.43	338	0.88
G003628		0.69	12.7	1.98	5.20	0.05	0.02	0.04	0.015	0.05	9.4	5.7	0.41	157	0.92
G003629		0.16	25.6	0.61	1.29	0.18	0.06	0.24	0.009	0.03	117.0	0.4	0.13	510	0.59
G003630		4.90	18.9	3.54	8.56	0.11	0.07	0.11	0.034	0.18	40.6	10.3	0.56	677	1.85
G003631		4.68	22.6	4.16	11.30	0.11	0.10	0.09	0.042	0.20	34.1	10.9	0.57	462	2.40
G003632		4.82	21.8	3.93	9.17	0.12	0.09	0.24	0.041	0.19	42.8	11.6	0.56	582	2.08
G003633		1.43	20.6	1.34	3.18	0.14	0.06	0.28	0.019	0.05	97.9	2.6	0.21	120	1.41
G003634		4.24	27.5	2.72	7.49	0.16	0.09	0.30	0.034	0.14	121.5	7.1	0.39	319	2.36
G003635		6.38	15.1	3.94	9.01	0.10	0.18	0.06	0.040	0.19	23.2	17.2	0.60	539	1.45
G003636		3.35	11.0	2.56	7.09	0.08	0.08	0.06	0.025	0.10	29.9	9.1	0.45	431	1.04
G003637		5.07	21.3	3.73	9.19	0.13	0.14	0.07	0.039	0.14	48.6	13.5	0.59	528	1.38
G003638		4.59	12.5	1.99	5.36	<0.05	0.03	0.03	0.018	0.05	9.5	4.5	0.19	989	1.37
G003639		8.13	15.2	4.26	9.42	0.12	0.36	0.06	0.045	0.26	29.4	17.7	0.62	534	1.59
G003640		9.54	19.1	4.00	8.28	0.15	0.17	0.09	0.044	0.36	52.1	18.2	0.70	733	1.02

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - C

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003601		0.89	19.1	560	13.2	35.5	<0.001	0.08	0.23	8.1	1.1	0.3	33.1	<0.01	0.09
G003602		0.80	24.5	590	6.2	20.9	<0.001	0.08	0.26	7.4	1.2	0.3	35.9	<0.01	0.07
G003603		0.54	26.6	710	8.4	9.9	<0.001	0.14	0.30	5.3	0.9	0.2	42.3	<0.01	0.08
G003604		0.76	33.1	460	7.6	7.7	<0.001	0.06	0.24	6.0	1.0	0.4	29.1	<0.01	0.12
G003605		0.80	24.1	650	6.9	6.4	<0.001	0.08	0.25	4.4	1.0	0.3	39.4	<0.01	0.07
G003606		0.57	20.8	860	6.1	5.4	<0.001	0.15	0.32	2.4	1.5	0.2	61.5	<0.01	0.07
G003607		0.92	32.8	700	10.0	7.0	<0.001	0.06	0.30	5.3	1.3	0.4	36.6	<0.01	0.08
G003608		0.72	22.2	1080	6.9	6.4	<0.001	0.16	0.54	3.8	1.8	0.3	60.8	<0.01	0.18
G003609		0.47	22.7	1370	4.8	4.0	<0.001	0.21	0.45	2.0	1.5	0.2	83.6	<0.01	0.13
G003610		0.55	32.1	990	5.0	8.5	<0.001	0.11	0.30	3.2	1.7	0.2	58.9	<0.01	0.09
G003611		0.62	27.6	1010	5.2	8.4	<0.001	0.12	0.29	3.2	1.5	0.2	63.3	<0.01	0.07
G003612		1.00	27.9	750	10.2	11.0	<0.001	0.07	0.27	4.4	1.2	0.3	41.4	0.01	0.06
G003613		0.91	25.7	930	12.3	10.4	<0.001	0.13	0.34	2.9	2.1	0.3	71.5	0.01	0.06
G003614		1.53	45.1	660	16.2	17.6	<0.001	0.03	0.26	3.1	1.2	0.4	20.0	<0.01	0.09
G003615		0.64	8.5	290	5.7	6.8	<0.001	0.03	0.23	1.3	0.5	0.4	10.6	<0.01	0.04
G003616		1.38	34.3	680	13.0	10.6	<0.001	0.02	0.29	4.1	1.0	0.5	24.5	<0.01	0.08
G003617		0.58	6.8	290	4.5	4.9	<0.001	0.03	0.21	1.1	0.5	0.4	7.2	<0.01	0.03
G003618		0.30	6.2	890	2.9	2.4	<0.001	0.18	0.22	0.8	0.7	<0.2	40.4	<0.01	0.03
G003619		1.15	15.8	490	11.7	9.6	<0.001	0.04	0.30	2.7	0.7	0.5	17.3	<0.01	0.06
G003620		<0.05	0.3	10	0.5	0.1	<0.001	0.01	<0.05	<0.1	<0.2	<0.2	0.6	<0.01	<0.01
G003621		0.67	17.8	950	6.3	5.9	<0.001	0.18	0.37	2.2	2.0	0.2	68.6	0.01	0.05
G003622		0.96	22.6	860	7.0	13.7	<0.001	0.10	0.25	3.3	1.0	0.4	45.7	<0.01	0.05
G003623		0.70	22.2	1200	7.2	8.4	<0.001	0.16	0.49	3.1	1.8	0.3	55.6	<0.01	0.05
G003624		0.96	21.4	820	9.2	10.6	<0.001	0.08	0.24	3.2	0.7	0.4	34.2	<0.01	0.03
G003625		0.27	18.5	910	2.7	2.1	<0.001	0.19	0.27	1.0	1.0	<0.2	68.4	<0.01	0.02
G003626		1.04	28.6	660	7.5	9.1	<0.001	0.06	0.22	2.9	0.8	0.4	23.2	<0.01	0.04
G003627		0.99	24.5	810	9.0	7.4	<0.001	0.08	0.23	2.7	0.9	0.4	29.9	<0.01	0.04
G003628		1.17	18.2	580	7.0	8.9	<0.001	0.06	0.20	2.3	0.7	0.4	18.6	<0.01	0.04
G003629		0.18	11.9	880	2.2	1.2	<0.001	0.17	0.97	3.2	1.4	<0.2	106.0	0.01	0.03
G003630		3.22	16.7	610	19.0	43.1	<0.001	0.04	0.67	5.8	0.9	1.1	31.7	<0.01	0.05
G003631		3.88	18.5	460	21.1	40.7	<0.001	0.03	0.71	6.3	1.1	1.3	31.9	<0.01	0.06
G003632		3.36	17.0	640	17.7	38.7	<0.001	0.04	0.71	7.0	1.1	1.1	36.8	<0.01	0.06
G003633		1.04	11.1	1100	6.1	7.9	<0.001	0.17	0.64	3.6	1.2	0.3	96.8	0.01	0.03
G003634		3.09	14.1	620	18.6	32.2	<0.001	0.07	0.68	6.2	1.4	1.0	58.7	0.01	0.05
G003635		4.20	13.9	340	18.1	39.3	<0.001	0.01	0.59	5.6	0.5	1.0	19.1	0.01	0.03
G003636		2.45	10.4	260	9.2	18.4	<0.001	0.02	0.26	4.5	0.4	0.7	22.8	0.01	0.02
G003637		3.81	16.4	400	12.7	28.6	<0.001	0.02	0.44	6.3	0.9	0.9	26.6	0.01	0.04
G003638		1.26	7.6	350	8.0	17.4	<0.001	0.02	0.38	1.8	0.3	0.5	24.9	<0.01	0.03
G003639		5.44	11.8	510	11.1	46.2	<0.001	0.01	0.97	5.7	0.6	1.3	19.3	0.01	0.02
G003640		5.39	12.9	860	9.9	63.3	<0.001	0.01	0.71	7.2	0.9	1.2	18.4	0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
LOR									
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
G003601		0.147	0.20	0.38	100	0.11	11.05	90	1.8
G003602		0.106	0.13	0.56	94	0.08	11.95	78	2.1
G003603		0.063	0.08	0.33	64	0.11	6.96	64	1.5
G003604		0.070	0.07	0.54	61	0.14	8.24	60	1.7
G003605		0.064	0.07	0.68	60	0.14	5.60	71	1.7
G003606		0.036	0.05	2.21	32	0.06	9.08	46	2.1
G003607		0.076	0.07	1.05	62	0.14	11.30	79	1.8
G003608		0.047	0.08	1.08	44	0.08	17.30	60	2.2
G003609		0.026	0.07	0.63	27	0.07	13.30	40	2.0
G003610		0.052	0.16	0.77	53	0.10	9.52	73	1.5
G003611		0.054	0.13	0.82	47	0.08	9.86	67	1.6
G003612		0.078	0.10	1.01	51	0.10	7.87	74	2.3
G003613		0.044	0.09	2.41	39	0.10	35.10	51	0.9
G003614		0.099	0.13	1.28	53	0.13	9.20	89	0.9
G003615		0.060	0.06	0.36	40	0.08	2.14	24	<0.5
G003616		0.094	0.10	0.94	67	0.14	7.10	80	1.4
G003617		0.055	0.07	0.36	37	0.08	1.56	23	<0.5
G003618		0.023	0.04	0.55	13	0.05	6.70	11	<0.5
G003619		0.100	0.12	0.83	67	0.16	3.08	51	1.1
G003620		<0.005	<0.02	0.08	<1	<0.05	0.59	4	0.5
G003621		0.035	0.07	2.26	30	0.10	31.10	40	1.7
G003622		0.054	0.10	1.14	44	0.13	15.20	55	1.0
G003623		0.043	0.12	2.66	42	0.11	33.60	51	0.7
G003624		0.069	0.10	0.93	50	0.13	5.63	59	1.1
G003625		0.019	0.03	1.31	11	<0.05	21.20	22	0.6
G003626		0.080	0.08	0.86	48	0.15	9.88	57	1.1
G003627		0.071	0.09	0.92	42	0.17	13.10	51	0.8
G003628		0.081	0.08	0.59	48	0.40	3.85	44	0.8
G003629		0.012	0.05	9.70	7	0.07	62.40	23	1.5
G003630		0.144	0.51	3.46	72	0.25	13.45	82	2.7
G003631		0.164	0.44	3.23	86	0.24	12.80	83	4.1
G003632		0.147	0.45	4.81	74	0.22	15.25	76	3.8
G003633		0.035	0.12	10.30	19	0.13	44.50	34	1.9
G003634		0.095	0.38	14.05	48	0.22	38.70	68	3.2
G003635		0.162	0.62	1.87	73	0.28	9.27	72	5.4
G003636		0.115	0.25	1.62	52	0.14	6.91	44	2.5
G003637		0.146	0.36	2.18	71	0.18	16.70	62	4.7
G003638		0.077	0.21	0.45	48	0.11	2.84	40	0.9
G003639		0.218	0.65	1.83	78	0.20	13.15	64	12.0
G003640		0.214	0.80	3.59	69	0.24	17.75	72	5.8

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - A

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003641		0.30	<0.005	0.16	1.31	6.7	<0.2	<10	390	0.44	0.11	0.84	0.22	104.50	5.4	14
G003642		0.38	0.006	0.07	1.32	7.0	<0.2	<10	120	0.21	0.17	0.22	0.14	24.10	5.9	16
G003643		0.28	0.007	0.32	2.42	12.1	<0.2	<10	460	1.14	0.42	0.65	0.57	180.00	14.7	31
G003644		0.44	0.011	0.29	2.73	16.1	<0.2	<10	360	0.75	0.60	0.46	0.42	98.50	14.1	37
G003645		0.26	<0.005	0.43	1.25	5.1	<0.2	<10	470	0.54	0.17	0.89	0.60	169.00	5.1	15
G003646		0.48	0.007	0.05	1.57	7.1	<0.2	<10	210	0.36	0.24	0.34	0.22	39.60	7.0	24
G003647		0.46	<0.005	0.18	2.05	10.0	<0.2	<10	300	0.41	0.34	0.46	0.27	60.60	12.0	35
G003648		0.36	0.006	0.38	2.25	12.7	<0.2	<10	340	0.58	0.31	0.60	0.38	105.00	11.6	34
G003649		0.18	0.026	0.27	1.01	18.1	<0.2	<10	630	0.27	0.10	0.89	0.52	22.90	8.9	20
G003650		0.18	0.005	0.20	0.87	13.8	<0.2	<10	530	0.18	0.09	0.81	0.43	19.85	5.6	18
G003651		0.16	<0.005	0.14	2.09	5.5	<0.2	<10	170	0.32	0.15	0.70	0.16	22.70	14.9	45
G003652		0.24	0.007	0.13	2.44	5.4	<0.2	<10	200	0.48	0.12	1.45	0.24	22.60	13.1	51
G003653		0.36	<0.005	0.12	2.16	10.5	<0.2	<10	170	0.36	0.16	0.64	0.17	30.00	15.2	46
G003654		0.22	<0.005	0.11	1.64	3.1	<0.2	<10	130	0.18	0.13	0.49	0.15	18.00	7.3	39
G003655		0.62	0.014	0.09	2.03	5.0	<0.2	<10	160	0.32	0.12	0.53	0.10	30.90	14.7	44
G003656		0.34	<0.005	0.11	1.46	3.3	<0.2	<10	100	0.16	0.13	0.34	0.11	18.80	7.3	30
G003657		0.42	<0.005	0.14	1.74	4.8	<0.2	<10	130	0.21	0.16	0.35	0.12	24.50	11.5	37
G003658		0.40	0.008	0.21	0.56	1.8	<0.2	<10	90	0.21	0.08	0.31	0.33	23.10	5.8	17
G003659		0.26	0.024	0.18	0.42	1.9	<0.2	<10	100	0.23	0.05	0.32	0.30	37.00	2.8	12
G003660		0.32	0.015	0.22	0.52	1.7	<0.2	<10	130	0.16	0.05	0.54	0.16	85.40	3.6	10
G003661		0.26	0.005	0.71	1.56	5.0	<0.2	<10	120	0.41	0.19	0.56	0.40	101.50	11.5	30
G003662		0.30	<0.005	0.25	0.61	2.3	<0.2	<10	80	0.15	0.09	0.80	0.09	54.80	3.7	14
G003663		0.32	0.005	0.29	1.38	6.4	<0.2	<10	130	0.28	0.14	0.55	0.24	53.50	10.3	32
G003664		0.30	<0.005	0.23	0.49	2.4	<0.2	<10	60	0.09	0.11	0.09	0.12	5.75	2.0	9
G003665		0.28	0.006	0.34	0.51	1.7	<0.2	<10	80	0.15	0.10	0.11	0.18	24.00	1.9	10
G003666		0.32	0.005	0.18	1.58	7.4	<0.2	<10	90	0.29	0.20	0.10	0.27	17.75	9.0	25
G003667		0.30	<0.005	0.22	1.58	9.2	<0.2	<10	70	0.22	0.18	0.15	0.21	15.40	6.3	25
G003668		0.36	<0.005	0.38	0.53	2.6	<0.2	<10	80	0.10	0.14	0.10	0.17	6.10	2.4	9
G003669		0.36	0.006	0.09	1.65	8.4	<0.2	<10	90	0.19	0.17	0.18	0.18	13.85	7.1	28
G003670		0.42	0.005	0.08	2.06	9.2	<0.2	<10	110	0.29	0.16	0.24	0.24	16.80	10.4	33
G003671		0.42	0.005	0.10	1.48	8.4	<0.2	<10	140	0.30	0.14	0.41	0.32	28.20	10.6	33
G003672		0.32	<0.005	0.09	0.71	9.3	<0.2	<10	110	0.17	0.05	2.05	0.20	14.55	7.7	16
G003673		0.36	<0.005	0.06	2.16	3.0	<0.2	<10	180	0.32	0.09	1.26	0.12	17.90	18.8	104
G003674		0.38	0.005	0.09	2.11	3.7	<0.2	<10	170	0.36	0.07	0.92	0.10	22.80	14.1	51
G003675		0.34	<0.005	0.09	2.48	3.6	<0.2	<10	190	0.52	0.07	1.54	0.19	27.30	15.1	51
G003676		0.36	0.023	0.05	1.64	3.8	<0.2	<10	100	0.21	0.07	0.41	0.16	16.55	12.1	34
G003677		0.30	0.006	0.07	1.72	3.3	<0.2	<10	140	0.31	0.08	0.76	0.20	26.00	15.6	34
G003678		0.32	<0.005	0.08	1.21	2.9	<0.2	<10	110	0.22	0.09	0.46	0.20	26.80	9.5	24
G003679		0.36	0.008	0.09	1.31	2.8	<0.2	<10	90	0.17	0.07	0.26	0.10	18.15	9.7	26
G003680		0.30	<0.005	0.14	1.03	2.6	<0.2	<10	80	0.15	0.07	0.29	0.13	19.75	5.4	23

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - B

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003641		8.95	16.0	2.45	5.41	0.22	0.17	0.20	0.030	0.27	93.7	8.6	0.42	393	1.15
G003642		8.89	11.2	2.73	7.73	0.09	0.07	0.04	0.027	0.26	17.6	7.6	0.42	502	1.40
G003643		5.26	41.6	3.89	8.43	0.24	0.12	0.34	0.052	0.20	147.0	10.4	0.49	1450	2.46
G003644		4.84	31.7	4.38	9.87	0.19	0.10	0.44	0.053	0.19	85.8	10.1	0.49	1010	2.68
G003645		1.41	22.4	1.86	4.13	0.22	0.07	0.18	0.022	0.07	121.5	3.3	0.24	198	1.12
G003646		3.18	19.5	2.55	6.01	0.09	0.04	0.06	0.025	0.14	30.0	7.5	0.40	350	0.90
G003647		3.95	24.2	3.26	7.52	0.12	0.05	0.13	0.031	0.16	43.6	8.7	0.51	683	1.63
G003648		2.65	29.5	3.50	6.66	0.16	0.08	0.27	0.035	0.10	62.8	6.5	0.36	723	2.14
G003649		0.76	23.9	1.80	3.16	0.06	0.03	0.21	0.017	0.05	10.9	4.6	0.39	282	1.97
G003650		0.62	21.6	1.64	3.00	0.07	0.02	0.15	0.013	0.05	9.0	4.2	0.35	167	1.55
G003651		1.96	22.8	2.96	6.92	0.07	0.03	0.06	0.020	0.14	11.2	14.0	0.87	459	0.80
G003652		2.37	24.9	2.83	7.35	0.09	0.05	0.04	0.023	0.25	11.2	16.5	1.17	432	0.58
G003653		2.27	27.4	3.23	7.54	0.09	0.04	0.05	0.023	0.31	15.9	14.2	0.88	427	0.67
G003654		1.29	16.4	2.26	6.61	0.06	0.02	0.05	0.017	0.07	8.9	9.3	0.63	181	0.74
G003655		1.33	21.0	3.14	5.95	0.10	0.06	0.01	0.022	0.17	15.1	14.9	0.84	501	0.51
G003656		0.80	13.3	2.16	5.29	0.05	0.03	0.04	0.018	0.05	9.1	9.0	0.59	189	0.56
G003657		0.92	18.3	2.68	5.80	0.07	0.03	0.04	0.021	0.06	11.7	12.0	0.66	394	0.68
G003658		0.65	44.9	1.11	2.42	<0.05	<0.02	0.04	0.011	0.04	11.2	2.2	0.17	133	0.64
G003659		0.39	24.5	0.77	1.10	0.05	<0.02	0.07	0.011	0.04	18.4	0.8	0.07	50	1.05
G003660		0.27	19.7	0.86	1.43	0.12	0.04	0.09	0.010	0.02	49.6	0.7	0.08	64	0.83
G003661		0.97	40.6	2.36	5.61	0.14	0.05	0.09	0.020	0.05	50.2	11.0	0.46	221	0.93
G003662		0.57	22.4	1.16	1.99	0.10	0.03	0.08	0.011	0.04	37.9	2.6	0.23	72	0.60
G003663		0.85	32.4	2.48	5.40	0.09	0.04	0.05	0.018	0.06	28.9	9.7	0.52	301	0.93
G003664		0.36	13.1	1.09	3.53	<0.05	<0.02	0.02	0.010	0.02	2.9	1.5	0.05	95	0.67
G003665		0.31	18.9	0.75	2.57	0.06	<0.02	0.09	0.012	0.03	25.7	1.0	0.05	35	0.73
G003666		0.88	20.6	2.89	7.69	<0.05	0.03	0.05	0.022	0.04	7.4	9.5	0.29	403	1.37
G003667		0.83	19.1	3.11	7.70	0.05	0.03	0.06	0.022	0.04	6.5	9.1	0.29	189	1.74
G003668		0.38	11.8	1.11	3.97	<0.05	<0.02	0.04	0.009	0.02	3.0	1.9	0.06	100	0.75
G003669		0.86	18.9	3.21	8.07	0.05	0.04	0.02	0.024	0.05	6.5	9.1	0.46	242	1.32
G003670		0.94	24.4	3.53	7.78	0.06	0.05	0.02	0.029	0.06	7.7	14.2	0.59	308	1.21
G003671		2.11	12.9	2.22	5.33	0.07	0.04	0.05	0.012	0.12	16.1	13.4	0.50	639	3.96
G003672		0.66	14.1	1.40	2.52	<0.05	0.05	0.05	<0.005	0.03	6.5	6.7	0.73	376	0.55
G003673		2.54	25.7	2.74	7.51	0.08	0.05	0.03	0.008	0.25	8.7	25.8	1.14	408	0.47
G003674		2.07	19.4	2.58	7.80	0.08	0.06	0.04	0.015	0.19	11.8	24.8	0.89	258	0.51
G003675		2.52	25.1	2.77	8.13	0.10	0.07	0.04	0.015	0.24	15.7	30.3	1.26	357	0.56
G003676		0.88	11.9	2.38	5.15	0.06	0.03	0.02	0.007	0.08	8.6	13.7	0.89	419	0.54
G003677		1.60	18.5	2.54	6.15	0.06	0.04	0.05	0.008	0.08	14.5	19.1	0.64	568	0.58
G003678		0.99	16.8	1.80	5.12	0.05	0.03	0.07	0.006	0.05	14.6	11.8	0.40	228	0.57
G003679		0.81	13.0	1.98	4.86	<0.05	0.02	0.04	0.005	0.06	9.6	10.4	0.47	310	0.64
G003680		0.71	12.8	1.49	4.35	<0.05	0.02	0.06	<0.005	0.04	11.0	8.3	0.34	126	0.45

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - C

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003641		5.16	8.8	1020	7.5	41.7	<0.001	0.11	0.83	5.8	1.6	0.8	59.2	0.02	0.03
G003642		4.88	7.3	360	8.9	50.7	<0.001	0.02	0.54	3.7	0.4	1.0	17.0	<0.01	0.02
G003643		3.01	19.2	940	18.9	33.4	<0.001	0.08	0.92	7.6	1.9	0.9	50.4	0.01	0.05
G003644		2.92	18.3	910	34.8	31.9	<0.001	0.07	1.35	9.0	1.4	1.1	36.8	0.01	0.06
G003645		1.13	11.5	1160	9.7	8.0	<0.001	0.12	0.73	3.8	1.9	0.4	71.2	0.01	0.03
G003646		1.80	11.5	490	9.1	22.4	<0.001	0.03	0.57	3.6	0.5	0.7	24.9	<0.01	0.02
G003647		2.08	15.9	880	12.6	27.2	<0.001	0.06	0.61	5.2	1.0	0.8	34.7	0.01	0.04
G003648		1.82	16.3	1520	10.6	16.4	<0.001	0.17	0.75	5.9	1.7	0.5	48.8	0.01	0.09
G003649		0.84	13.7	1090	4.2	8.0	<0.001	0.11	0.52	2.4	1.8	0.3	29.4	<0.01	0.03
G003650		0.84	12.6	890	3.5	6.4	<0.001	0.09	0.57	2.3	1.5	0.3	28.0	<0.01	0.03
G003651		1.95	26.6	830	7.3	21.0	<0.001	0.08	0.25	4.1	0.8	0.5	37.8	<0.01	0.03
G003652		2.02	30.9	1080	7.0	34.8	<0.001	0.06	0.26	5.0	1.0	0.6	61.3	<0.01	0.03
G003653		2.09	29.0	630	7.6	31.7	<0.001	0.05	0.25	4.9	0.9	0.6	37.9	<0.01	0.03
G003654		1.48	20.4	600	6.6	16.1	<0.001	0.06	0.16	3.2	0.7	0.5	27.8	<0.01	0.03
G003655		1.78	27.6	730	6.7	22.7	<0.001	0.03	0.17	4.9	0.6	0.5	28.1	<0.01	0.03
G003656		1.11	18.7	540	6.1	8.7	<0.001	0.03	0.16	3.2	0.5	0.4	19.8	<0.01	0.03
G003657		1.18	23.6	610	7.6	10.9	<0.001	0.04	0.20	3.6	0.7	0.4	20.1	<0.01	0.03
G003658		0.28	16.0	730	3.7	7.2	<0.001	0.07	0.13	0.4	0.8	0.2	18.4	<0.01	0.03
G003659		0.31	11.4	1160	2.6	3.5	<0.001	0.12	0.17	0.6	0.9	0.2	20.5	<0.01	0.03
G003660		0.32	11.7	1140	2.3	2.1	<0.001	0.16	0.23	1.3	1.6	0.2	27.9	0.01	0.02
G003661		1.13	40.5	720	9.3	9.9	<0.001	0.08	0.24	3.2	1.6	0.4	30.1	0.01	0.04
G003662		0.57	16.1	970	4.8	4.6	<0.001	0.16	0.17	1.7	1.4	0.2	35.7	0.01	0.03
G003663		1.26	33.5	660	8.1	12.2	<0.001	0.07	0.23	3.0	1.1	0.4	26.3	0.01	0.03
G003664		0.50	4.8	240	4.4	1.9	<0.001	0.03	0.18	0.8	0.4	0.3	9.9	<0.01	0.02
G003665		0.21	6.0	700	4.7	2.2	<0.001	0.06	0.15	0.4	0.8	0.3	12.2	<0.01	0.03
G003666		1.57	15.5	370	10.4	7.4	<0.001	0.03	0.39	2.8	0.5	0.6	9.6	<0.01	0.04
G003667		1.60	14.0	410	8.9	6.4	<0.001	0.03	0.44	2.8	0.7	0.6	13.1	<0.01	0.05
G003668		0.53	5.5	220	4.9	3.4	<0.001	0.02	0.19	0.9	0.3	0.4	9.8	<0.01	0.02
G003669		1.64	16.0	330	9.0	8.9	<0.001	0.02	0.33	3.4	0.5	0.6	14.4	<0.01	0.04
G003670		1.80	23.1	410	9.3	9.2	<0.001	0.02	0.36	4.1	0.6	0.6	16.7	<0.01	0.04
G003671		1.81	18.0	590	7.6	26.3	<0.001	0.02	0.40	4.2	0.6	0.5	28.7	<0.01	0.03
G003672		0.83	11.4	890	4.6	5.6	<0.001	0.11	0.21	1.6	0.9	0.2	36.2	0.02	0.03
G003673		2.31	58.3	700	5.3	38.5	<0.001	0.05	0.17	4.1	0.7	0.4	54.1	0.01	0.03
G003674		2.40	35.5	700	6.5	33.9	<0.001	0.07	0.23	4.9	0.8	0.5	41.5	0.01	0.03
G003675		2.65	40.2	550	8.3	39.1	<0.001	0.08	0.22	5.9	1.0	0.6	48.9	0.01	0.02
G003676		0.99	21.4	460	5.4	13.8	<0.001	0.03	0.18	3.8	0.5	0.3	21.6	<0.01	0.03
G003677		1.78	28.5	550	6.7	18.4	<0.001	0.06	0.20	3.7	0.8	0.5	43.6	0.01	0.03
G003678		1.23	20.2	420	7.3	9.9	<0.001	0.05	0.17	2.7	0.8	0.4	32.4	0.01	0.03
G003679		0.94	17.5	510	5.9	10.2	<0.001	0.04	0.17	2.5	0.6	0.4	19.0	<0.01	0.03
G003680		0.92	17.0	500	6.3	8.0	<0.001	0.06	0.17	2.3	0.9	0.3	22.4	0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 3 - D

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm
LOR		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003641		0.107	0.59	5.76	38	0.18	30.50	52
G003642		0.169	0.65	1.38	58	0.19	5.74	53
G003643		0.101	0.46	12.75	65	0.22	38.50	79
G003644		0.105	0.53	7.78	81	0.32	22.20	90
G003645		0.037	0.18	7.11	28	0.17	34.80	41
G003646		0.097	0.30	2.08	53	0.19	9.99	55
G003647		0.101	0.35	3.79	71	0.29	14.00	64
G003648		0.066	0.25	6.86	64	0.30	20.90	48
G003649		0.054	0.26	1.33	37	0.13	6.00	37
G003650		0.057	0.19	1.00	36	0.16	5.32	32
G003651		0.103	0.19	0.80	64	0.26	6.51	65
G003652		0.105	0.24	0.90	68	0.24	7.55	82
G003653		0.128	0.24	0.89	59	0.22	9.77	62
G003654		0.094	0.13	0.66	44	0.14	4.16	55
G003655		0.127	0.17	0.92	62	0.17	8.71	69
G003656		0.092	0.09	0.62	45	0.14	4.53	50
G003657		0.098	0.10	0.80	57	0.16	5.53	59
G003658		0.018	0.05	0.93	21	0.07	5.44	24
G003659		0.015	0.04	1.06	13	0.06	9.11	14
G003660		0.020	0.04	1.26	12	0.06	20.60	12
G003661		0.058	0.10	1.90	45	0.17	22.20	57
G003662		0.025	0.05	0.98	15	0.09	16.00	25
G003663		0.087	0.09	0.98	54	0.23	11.90	56
G003664		0.044	0.06	0.26	31	0.09	0.95	19
G003665		0.017	0.09	0.94	17	0.08	10.50	12
G003666		0.091	0.12	0.62	75	0.15	3.14	49
G003667		0.086	0.11	0.51	74	0.21	2.89	37
G003668		0.047	0.06	0.31	32	0.10	1.00	15
G003669		0.127	0.10	0.42	83	0.14	2.63	47
G003670		0.126	0.10	0.48	79	0.16	3.75	55
G003671		0.091	0.19	1.81	51	0.50	7.90	56
G003672		0.039	0.07	0.74	35	0.12	4.72	25
G003673		0.124	0.21	0.78	61	0.14	5.21	57
G003674		0.106	0.19	0.97	55	0.14	7.75	58
G003675		0.115	0.24	0.98	58	0.14	10.60	66
G003676		0.078	0.08	0.58	52	0.12	4.55	59
G003677		0.089	0.13	0.83	51	0.19	8.19	66
G003678		0.067	0.09	0.83	35	0.12	6.93	42
G003679		0.071	0.09	0.73	41	0.17	4.38	48
G003680		0.057	0.07	0.77	25	0.11	5.15	36

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - A

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003681		0.36	<0.005	0.19	1.52	5.7	<0.2	<10	120	0.24	0.12	0.32	0.23	30.60	16.2	34
G003682		0.38	<0.005	0.19	1.98	4.3	<0.2	<10	170	0.33	0.07	0.71	0.19	39.50	19.0	53
G003683		0.32	<0.005	0.39	1.27	3.6	<0.2	<10	120	0.42	0.06	0.47	0.31	61.70	16.8	32
G003684		0.34	0.006	0.04	0.57	3.7	<0.2	<10	30	0.14	0.08	0.09	0.13	16.20	4.7	19
G003685		0.30	<0.005	0.54	0.30	1.4	<0.2	<10	50	0.07	0.01	0.15	0.47	4.53	1.8	6
G003686		0.34	<0.005	0.28	0.84	3.3	<0.2	<10	140	0.28	0.03	1.97	0.44	91.70	8.2	15
G003687		0.22	<0.005	0.19	0.52	2.7	<0.2	<10	100	0.16	0.02	1.18	0.39	25.20	2.7	11
G003688		0.36	<0.005	0.40	0.86	3.3	<0.2	<10	100	0.22	0.07	0.79	0.24	28.00	5.3	22
G003689		0.34	0.005	0.49	1.46	4.3	<0.2	<10	120	0.21	0.10	0.98	0.13	26.50	8.8	29
G003690		0.30	0.005	0.47	1.31	4.1	<0.2	<10	120	0.23	0.09	1.20	0.17	27.10	9.0	26
G003691		0.24	<0.005	0.08	0.34	1.5	<0.2	<10	80	0.10	0.03	1.05	0.20	11.40	1.5	5
G003692		0.32	<0.005	0.43	0.57	2.1	<0.2	<10	110	0.30	0.03	1.54	0.47	41.80	2.1	9
G003693		0.30	0.008	0.67	0.98	3.2	<0.2	<10	90	0.28	0.07	0.92	0.47	38.00	4.4	16
G003694		0.34	0.005	0.44	1.48	4.6	<0.2	<10	140	0.33	0.12	1.25	0.23	87.00	12.7	28
G003695		0.30	<0.005	0.44	1.75	4.4	<0.2	<10	140	0.37	0.13	0.86	0.27	76.80	13.6	30
G003696		0.40	<0.005	0.33	1.78	3.9	<0.2	<10	140	0.31	0.12	0.78	0.16	51.60	9.7	32
G003697		0.46	<0.005	0.27	1.54	4.3	<0.2	<10	170	0.28	0.13	0.94	0.16	48.30	12.7	34
G003698		0.38	<0.005	0.33	1.55	5.3	<0.2	<10	160	0.37	0.11	0.52	0.15	57.80	11.0	28
G003699		0.38	0.006	0.30	1.27	4.2	<0.2	<10	100	0.20	0.09	0.36	0.09	22.30	7.3	27
G003700		0.06	<0.005	0.01	0.02	0.4	<0.2	<10	10	<0.05	<0.01	0.01	0.02	1.27	0.1	1
G003701		0.26	0.015	0.31	0.93	3.9	<0.2	<10	120	0.25	0.06	0.87	0.31	53.00	11.8	18
G003702		0.26	0.005	0.14	0.34	1.4	<0.2	<10	40	0.16	0.03	0.34	0.17	20.80	3.3	9
G003703		0.22	0.006	0.33	0.33	1.7	<0.2	<10	50	0.22	0.03	0.29	0.17	22.60	2.7	10
G003704		0.22	0.006	0.21	1.10	2.4	<0.2	<10	90	0.21	0.07	0.32	0.18	42.10	11.7	24
G003705		0.28	<0.005	0.27	1.22	3.3	<0.2	<10	140	0.28	0.07	0.49	0.23	58.10	18.0	25
G003706		0.40	<0.005	0.15	1.13	3.6	<0.2	<10	90	0.16	0.08	0.32	0.10	20.10	5.9	25
G003707		0.32	0.024	0.19	1.86	5.3	<0.2	<10	190	0.26	0.08	0.94	0.23	30.10	17.4	48
G003708		0.28	0.008	0.42	1.53	9.4	<0.2	<10	160	0.30	0.17	1.43	0.54	43.30	17.9	41
G003709		0.36	0.006	0.35	1.88	8.3	<0.2	<10	90	0.36	0.14	1.32	0.63	31.90	15.3	34
G003710		0.26	0.005	0.37	1.25	4.0	<0.2	<10	110	0.28	0.14	1.61	0.39	19.60	9.5	19
G003711		0.36	0.005	0.41	1.33	4.1	<0.2	<10	110	0.28	0.13	1.42	0.37	20.10	10.4	19
G003712		0.38	0.023	1.81	2.42	10.9	<0.2	<10	150	0.48	0.58	0.52	0.55	22.60	22.3	39
G003713		0.44	0.008	0.55	2.07	9.1	<0.2	<10	210	0.34	0.19	0.37	0.55	28.40	19.6	49
G003714		0.32	<0.005	0.12	0.68	4.4	<0.2	<10	40	0.09	0.07	0.09	0.11	12.15	3.2	13
G003715		0.60	0.006	0.34	2.16	7.9	<0.2	<10	160	0.40	0.15	0.39	0.27	19.55	19.2	50
G003716		0.66	0.008	0.34	3.00	4.7	<0.2	<10	180	0.32	0.11	0.38	0.86	20.30	22.0	37
G003717		0.66	0.006	0.16	2.80	4.2	<0.2	<10	160	0.36	0.08	0.42	0.20	18.75	23.2	41
G003718		0.66	0.013	0.36	3.10	4.5	<0.2	<10	310	0.31	0.25	0.42	1.62	10.50	30.9	66
G003719		0.66	0.005	0.10	2.85	3.8	<0.2	<10	200	0.32	0.03	0.41	0.13	11.85	22.2	68
G003720		0.58	<0.005	0.08	2.89	4.1	<0.2	<10	250	0.39	0.03	0.35	0.08	13.70	22.0	59

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - B

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05
G003681		1.06	18.4	2.77	6.07	0.06	0.03	0.05	0.011	0.06	16.5	14.6	0.57	700	1.11
G003682		1.53	28.5	3.12	6.97	0.09	0.05	0.06	0.014	0.08	21.6	22.0	0.89	576	0.86
G003683		0.91	36.5	2.34	4.69	0.09	0.03	0.09	0.013	0.04	31.2	10.2	0.45	502	0.91
G003684		0.86	16.7	1.56	3.83	<0.05	<0.02	0.04	<0.005	0.05	9.6	4.4	0.19	94	0.86
G003685		0.29	10.1	0.46	0.97	<0.05	<0.02	0.12	<0.005	0.04	2.3	0.5	0.04	33	0.75
G003686		0.57	45.4	1.07	2.69	0.15	0.07	0.09	<0.005	0.04	86.6	6.4	0.25	159	0.72
G003687		0.56	15.6	0.79	1.60	0.05	0.04	0.10	<0.005	0.03	20.4	2.7	0.16	66	0.92
G003688		0.91	25.0	1.51	3.99	0.06	0.03	0.08	<0.005	0.04	20.7	6.4	0.29	129	0.97
G003689		0.93	20.0	1.96	5.54	0.06	0.05	0.08	0.012	0.05	19.8	13.2	0.53	276	1.52
G003690		0.88	20.6	1.78	4.82	0.06	0.05	0.09	0.009	0.05	21.5	11.6	0.47	420	1.67
G003691		0.36	10.5	0.44	1.01	<0.05	0.03	0.08	<0.005	0.02	6.7	0.6	0.06	36	1.19
G003692		0.39	26.8	0.74	1.68	0.09	0.04	0.10	<0.005	0.03	45.8	1.6	0.12	40	1.09
G003693		0.62	21.9	1.41	3.40	0.07	0.04	0.09	0.005	0.04	36.1	6.5	0.22	96	0.96
G003694		1.02	36.1	2.21	5.38	0.10	0.07	0.07	0.014	0.06	46.4	10.8	0.46	608	1.57
G003695		1.08	29.9	2.61	5.93	0.10	0.05	0.07	0.016	0.06	48.7	15.2	0.56	599	1.35
G003696		1.31	28.3	2.46	6.08	0.09	0.07	0.08	0.014	0.08	35.9	15.1	0.59	268	1.30
G003697		1.03	27.3	2.39	5.28	0.08	0.07	0.09	0.011	0.05	29.2	12.3	0.59	496	1.05
G003698		0.94	29.3	2.14	5.37	0.08	0.06	0.09	0.014	0.04	36.4	12.6	0.41	404	1.06
G003699		1.07	16.7	1.92	5.42	<0.05	0.02	0.05	0.007	0.05	12.2	10.0	0.46	228	1.06
G003700		<0.05	0.6	0.02	0.08	<0.05	<0.02	<0.01	<0.005	<0.01	0.6	0.2	<0.01	<5	0.06
G003701		0.74	24.8	1.55	3.47	0.08	0.03	0.12	0.006	0.04	27.6	6.8	0.29	559	1.50
G003702		0.70	14.2	0.59	1.59	<0.05	<0.02	0.04	<0.005	0.03	13.9	1.6	0.07	51	0.73
G003703		0.34	24.0	0.81	1.58	<0.05	<0.02	0.06	<0.005	0.02	14.4	0.9	0.06	67	0.59
G003704		1.02	15.6	1.59	5.09	0.07	0.02	0.06	0.006	0.05	22.6	10.0	0.37	303	0.58
G003705		0.88	26.3	1.93	4.35	0.08	0.03	0.09	0.009	0.05	27.8	9.8	0.40	591	0.84
G003706		0.96	14.8	1.74	4.94	0.05	0.02	0.06	0.005	0.06	11.3	9.5	0.40	144	0.82
G003707		1.40	24.8	3.01	6.43	0.07	0.05	0.05	0.023	0.11	15.8	19.7	0.88	668	0.78
G003708		0.87	46.5	2.87	5.39	0.08	0.06	0.06	0.027	0.05	21.1	10.7	0.76	1020	2.23
G003709		1.33	56.8	2.50	5.83	0.08	0.08	0.06	0.025	0.06	19.8	14.7	1.13	260	1.51
G003710		0.44	36.8	1.73	3.89	0.05	0.05	0.07	0.018	0.03	13.8	7.7	0.49	408	0.92
G003711		0.49	39.3	1.85	4.15	0.05	0.05	0.07	0.018	0.03	14.2	8.3	0.52	418	0.90
G003712		0.96	117.0	3.73	6.92	0.07	0.05	0.11	0.040	0.05	13.9	16.4	0.92	1150	4.57
G003713		1.43	35.0	3.99	7.46	0.06	0.03	0.06	0.037	0.05	16.5	17.2	0.69	1175	3.42
G003714		0.56	8.7	1.35	4.89	<0.05	<0.02	0.02	0.010	0.02	6.3	4.6	0.20	104	1.50
G003715		0.89	31.3	3.79	6.81	0.06	0.04	0.07	0.033	0.05	9.7	17.9	0.88	853	1.92
G003716		1.03	81.1	4.28	8.51	0.08	0.07	0.10	0.024	0.28	10.1	22.1	1.81	548	0.55
G003717		0.80	54.4	4.20	8.48	0.08	0.09	0.03	0.023	0.20	9.4	19.1	1.94	737	0.36
G003718		0.86	236.0	6.44	8.69	0.12	0.13	0.04	0.025	0.40	5.7	16.7	2.42	1160	0.68
G003719		0.98	26.2	3.71	8.37	0.10	0.06	0.02	0.015	0.41	5.6	18.0	2.12	470	0.52
G003720		0.99	26.8	3.70	8.14	0.08	0.05	0.03	0.014	0.42	6.4	16.6	2.03	766	0.48

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - C

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01
G003681		1.15	27.4	800	10.0	13.0	<0.001	0.06	0.24	3.5	0.9	0.4	23.8	<0.01	0.04
G003682		1.53	41.8	730	7.7	17.6	<0.001	0.05	0.19	5.3	1.0	0.4	31.3	<0.01	0.03
G003683		0.89	29.5	850	7.1	8.0	0.001	0.10	0.22	3.2	1.4	0.3	25.6	0.01	0.04
G003684		0.83	17.9	370	6.9	5.7	<0.001	0.04	0.22	1.6	0.6	0.4	13.1	0.01	0.04
G003685		0.24	6.9	1000	2.7	2.3	<0.001	0.09	0.15	0.7	0.7	<0.2	18.0	0.03	0.01
G003686		0.64	42.7	720	3.9	5.9	0.001	0.15	0.28	2.5	2.2	0.2	72.5	0.04	0.03
G003687		0.46	10.6	720	3.5	4.0	<0.001	0.15	0.24	2.1	1.3	0.2	45.5	0.03	0.02
G003688		0.89	17.5	560	8.2	8.9	<0.001	0.08	0.23	2.7	1.2	0.3	38.6	0.01	0.04
G003689		1.01	25.7	860	10.1	7.4	<0.001	0.07	0.26	3.9	1.6	0.4	41.4	0.01	0.03
G003690		0.97	23.3	890	8.5	7.0	<0.001	0.09	0.28	3.5	1.6	0.4	47.2	0.01	0.03
G003691		0.25	6.0	640	2.6	1.6	<0.001	0.14	0.24	1.3	0.8	<0.2	52.8	0.04	0.01
G003692		0.42	12.2	810	3.8	2.6	0.002	0.14	0.30	1.8	1.3	0.2	65.2	0.03	0.03
G003693		0.81	15.4	730	7.5	5.8	0.001	0.11	0.27	2.8	1.2	0.3	45.6	0.02	0.05
G003694		1.15	28.6	1050	14.6	13.0	<0.001	0.10	0.32	3.2	2.0	0.4	57.0	0.01	0.05
G003695		1.03	33.2	870	15.5	12.7	<0.001	0.07	0.29	4.2	1.5	0.4	42.8	0.01	0.05
G003696		1.25	29.9	730	14.8	14.0	<0.001	0.06	0.23	4.9	1.5	0.5	38.4	0.01	0.04
G003697		1.08	25.7	660	11.0	10.6	<0.001	0.06	0.24	4.9	1.4	0.4	41.9	0.01	0.04
G003698		1.06	24.0	610	9.6	8.1	<0.001	0.06	0.23	4.0	1.4	0.4	30.4	0.01	0.04
G003699		0.85	18.7	550	9.9	9.5	<0.001	0.04	0.17	2.9	0.8	0.4	22.6	<0.01	0.02
G003700		0.05	0.5	10	0.5	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.8	<0.01	<0.01
G003701		0.74	17.4	920	7.2	7.0	<0.001	0.15	0.34	2.7	1.6	0.3	41.4	0.01	0.04
G003702		0.32	7.6	540	4.3	4.7	<0.001	0.07	0.16	0.8	0.6	0.2	21.8	0.01	0.03
G003703		0.35	10.3	520	4.8	1.9	<0.001	0.06	0.18	0.5	0.7	0.2	20.8	0.01	0.04
G003704		0.96	20.9	500	6.9	9.5	<0.001	0.04	0.20	2.7	0.9	0.4	25.1	0.01	0.02
G003705		0.93	26.4	980	6.9	10.2	<0.001	0.10	0.29	2.9	1.2	0.3	31.1	0.01	0.03
G003706		1.05	19.8	640	7.1	11.8	<0.001	0.06	0.22	2.6	0.7	0.4	23.5	0.01	0.04
G003707		1.46	35.8	760	7.7	25.8	<0.001	0.06	0.25	4.8	1.0	0.4	36.2	0.01	0.03
G003708		0.78	42.2	950	12.0	11.2	<0.001	0.10	0.30	4.0	1.8	0.3	55.4	0.01	0.07
G003709		0.79	30.7	750	11.3	11.2	<0.001	0.15	0.30	5.9	3.2	0.3	49.2	0.01	0.07
G003710		0.67	14.5	850	7.6	4.9	<0.001	0.10	0.30	2.6	1.3	0.3	46.9	0.02	0.09
G003711		0.69	15.6	770	7.8	5.6	<0.001	0.08	0.29	3.0	1.3	0.3	43.0	0.01	0.08
G003712		0.80	31.7	820	26.0	9.0	<0.001	0.05	0.48	8.7	1.6	0.4	25.7	0.01	0.79
G003713		0.90	52.1	810	21.7	13.0	<0.001	0.03	0.42	4.9	1.1	0.5	28.0	<0.01	0.12
G003714		0.64	8.6	240	8.0	4.3	<0.001	0.01	0.23	1.6	0.4	0.3	9.4	<0.01	0.03
G003715		0.95	42.3	570	13.0	7.9	<0.001	0.03	0.36	6.1	0.7	0.4	23.8	<0.01	0.23
G003716		0.85	29.8	520	21.3	26.6	<0.001	0.02	0.31	9.2	0.7	0.4	17.3	<0.01	0.04
G003717		0.77	29.6	550	8.9	23.1	<0.001	0.02	0.28	9.4	0.6	0.4	18.0	<0.01	0.03
G003718		0.55	26.5	520	7.7	28.0	<0.001	0.03	0.40	8.2	1.9	0.3	15.9	<0.01	0.19
G003719		1.06	37.0	440	4.8	36.0	<0.001	0.02	0.27	5.7	0.5	0.3	16.2	<0.01	0.03
G003720		0.95	32.1	480	6.3	34.0	<0.001	0.02	0.23	5.4	0.5	0.3	14.4	<0.01	0.03

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 4 - D

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	Ti	U	V	W	Y	Zn
	Units LOR	%	ppm	ppm	ppm	ppm	ppm	ppm
		0.005	0.02	0.05	1	0.05	0.05	2
								0.5
G003681		0.077	0.10	0.92	63	0.15	8.64	60
G003682		0.104	0.12	0.97	72	0.15	12.90	65
G003683		0.054	0.09	1.75	47	0.12	15.55	44
G003684		0.045	0.05	0.68	35	0.12	4.05	30
G003685		0.017	<0.02	0.29	9	0.08	1.40	11
G003686								
G003687		0.033	0.06	1.35	19	0.12	38.20	24
G003688		0.025	0.07	0.87	14	0.13	10.95	21
G003689		0.052	0.07	1.37	33	0.16	11.05	28
G003690		0.058	0.12	2.39	44	0.18	9.87	54
G003691		0.054	0.12	2.32	41	0.14	10.80	52
G003692								
G003693		0.017	0.02	0.62	7	0.10	3.83	10
G003694		0.023	0.03	0.83	12	0.11	22.60	20
G003695		0.037	0.06	1.48	24	0.13	12.35	34
G003696		0.048	0.11	3.10	38	0.15	19.75	60
G003697		0.054	0.11	2.15	44	0.15	20.80	76
G003698								
G003699		0.070	0.14	2.20	47	0.14	15.55	64
G003700		0.064	0.12	3.06	52	0.16	16.50	47
G003701		0.062	0.13	2.62	54	0.13	19.60	37
G003702		0.062	0.10	0.95	42	0.12	5.92	42
G003703		<0.005	<0.02	0.09	<1	<0.05	0.67	4
G003704								
G003705		0.041	0.09	1.70	32	0.14	13.95	36
G003706		0.020	0.04	0.68	14	0.06	5.93	14
G003707		0.022	0.02	0.99	16	0.06	6.18	13
G003708		0.057	0.08	0.84	28	0.11	9.70	37
G003709		0.052	0.09	1.38	39	0.12	14.85	43
G003710								
G003711		0.057	0.08	0.81	32	0.14	5.37	43
G003712		0.104	0.14	1.00	69	0.19	8.98	76
G003713		0.053	0.09	2.01	51	0.12	11.05	82
G003714		0.062	0.12	3.69	50	0.13	17.35	80
G003715		0.035	0.06	0.62	30	0.11	16.90	37
G003716								
G003717		0.039	0.07	0.68	32	0.10	16.60	38
G003718		0.055	0.12	0.85	61	0.24	20.60	79
G003719		0.073	0.14	1.07	70	0.20	7.94	115
G003720		0.061	0.05	0.36	38	0.14	2.25	22
		0.076	0.10	0.71	69	0.15	7.20	89
		0.164	0.17	0.49	100	0.12	13.30	167
		0.135	0.15	0.29	89	0.11	12.00	79
		0.161	0.16	0.24	120	0.11	13.60	415
		0.168	0.21	0.27	91	0.51	4.84	74
		0.176	0.21	0.32	93	0.20	5.28	49

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - A

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-AA23 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.005	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
G003721		0.52	<0.005	0.08	2.49	4.4	<0.2	<10	100	0.29	0.05	0.20	0.09	9.46	15.9	46
G003722		0.36	0.006	0.33	1.43	3.8	<0.2	<10	300	0.34	0.05	1.24	0.87	20.00	10.1	24
G003723		0.48	<0.005	0.36	2.05	5.1	<0.2	<10	270	0.35	0.06	0.79	0.62	19.70	16.2	34
G003724		0.50	0.010	0.31	2.10	4.7	<0.2	<10	290	0.32	0.05	0.99	0.69	16.95	16.5	48
G003725		0.44	0.007	0.21	1.67	3.3	<0.2	<10	290	0.36	0.05	1.35	1.29	19.60	15.2	37
G003726		0.32	0.005	0.39	1.02	3.2	<0.2	<10	150	0.22	0.03	1.89	1.15	19.25	9.1	18
G003727		0.44	0.006	0.14	1.47	5.9	<0.2	<10	180	0.26	0.05	0.84	0.27	18.95	13.0	32
G003728		0.64	0.005	0.07	2.62	5.2	<0.2	<10	170	0.46	0.09	0.31	0.14	30.60	10.8	46
G003729		0.18	0.006	0.17	1.57	4.0	<0.2	<10	240	0.37	0.32	1.35	0.23	43.50	7.7	68
G003730		0.18	<0.005	0.14	1.98	4.5	<0.2	<10	230	0.47	0.39	1.04	0.27	58.80	14.2	84
G003731		0.46	<0.005	0.17	1.10	2.8	<0.2	<10	100	0.16	0.05	0.23	1.06	10.25	7.2	25
G003732		0.26	0.011	0.20	0.37	1.6	<0.2	<10	200	0.10	0.02	0.55	1.63	7.95	1.8	11
G003733		0.68	0.011	0.21	2.47	4.9	<0.2	<10	240	0.24	0.06	0.46	0.34	13.95	19.6	63
G003734		0.48	0.009	0.27	2.99	5.5	<0.2	<10	230	0.24	0.08	0.42	0.19	12.30	23.4	51
G003735		0.68	0.011	0.12	3.16	4.4	<0.2	<10	230	0.23	0.02	0.45	0.31	9.96	25.0	69
G003736		0.58	0.006	0.20	2.80	4.4	<0.2	<10	180	0.37	0.08	0.34	0.15	17.05	19.4	42
G003737		0.58	<0.005	0.22	2.69	5.5	<0.2	<10	230	0.40	0.06	0.52	0.12	16.80	20.7	52
G003738		0.56	<0.005	0.11	2.94	7.4	<0.2	<10	300	0.40	0.04	0.45	0.20	15.30	26.9	63
G003739		0.34	0.007	0.20	0.43	2.8	<0.2	<10	40	0.06	0.03	0.08	0.29	5.06	2.1	10
G002626		0.44	0.015	0.20	3.04	52.0	<0.2	<10	310	0.67	0.12	0.43	0.14	23.80	16.4	57
G003820		0.06	<0.005	<0.01	0.01	1.0	<0.2	<10	10	<0.05	0.04	<0.01	0.01	1.17	0.1	1
G003860		0.06	<0.005	<0.01	0.01	0.6	<0.2	<10	10	<0.05	0.04	<0.01	0.01	1.35	0.1	<1
G003900		0.04	<0.005	<0.01	0.01	0.2	<0.2	<10	10	<0.05	<0.01	0.01	0.01	1.13	0.1	<1

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - B

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: Eiangx

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
Sample Description															
G003721	0.73	26.6	3.25	7.82	0.06	0.05	0.02	0.015	0.17	4.7	16.2	1.62	367	0.52	0.01
G003722	0.69	63.4	1.81	4.35	0.06	0.05	0.08	0.016	0.13	11.1	7.5	0.66	427	0.88	0.02
G003723	0.80	52.2	2.85	6.40	0.08	0.06	0.06	0.021	0.20	10.0	13.1	1.09	766	0.89	0.02
G003724	0.83	64.0	2.91	6.54	0.08	0.05	0.05	0.022	0.21	8.1	13.0	1.20	898	0.90	0.02
G003725	0.69	69.2	2.38	5.34	0.07	0.04	0.08	0.022	0.14	10.0	9.3	1.05	939	1.20	0.02
G003726	0.42	46.4	1.32	2.80	0.05	0.04	0.13	0.014	0.08	10.5	4.2	0.37	848	1.20	0.02
G003727	0.96	35.7	2.63	5.63	0.07	0.04	0.05	0.022	0.12	11.8	11.2	0.79	510	0.76	0.02
G003728	1.72	19.4	2.78	8.74	0.09	0.10	0.04	0.030	0.24	16.5	25.2	0.93	271	0.25	0.02
G003729	1.03	27.1	2.01	5.91	0.08	0.08	0.06	0.017	0.17	24.0	9.4	1.12	338	0.98	0.02
G003730	1.13	25.6	2.47	6.99	0.11	0.10	0.04	0.021	0.31	30.9	11.9	1.48	602	0.91	0.02
G003731	0.58	19.5	1.71	4.74	<0.05	0.02	0.08	0.015	0.06	5.0	7.3	0.60	324	0.95	0.02
G003732	0.41	13.8	0.72	1.44	<0.05	<0.02	0.11	0.010	0.04	4.2	1.1	0.11	148	1.36	0.02
G003733	0.90	42.4	3.54	8.13	0.08	0.03	0.04	0.026	0.23	6.3	16.4	1.64	1280	0.89	0.02
G003734	1.03	35.9	4.39	9.33	0.10	0.05	0.03	0.025	0.35	5.6	20.2	1.90	1355	0.76	0.02
G003735	1.06	44.4	4.46	9.58	0.12	0.05	0.01	0.025	0.50	4.4	18.0	2.40	1090	0.55	0.01
G003736	0.86	44.0	3.69	8.37	0.09	0.04	0.04	0.023	0.21	7.9	18.6	1.73	555	0.60	0.01
G003737	1.00	68.6	3.68	8.35	0.10	0.11	0.03	0.021	0.33	9.1	17.1	1.64	429	0.49	0.02
G003738	1.11	60.2	4.22	8.81	0.12	0.09	0.03	0.016	0.54	7.5	17.2	2.17	686	0.52	0.02
G003739	0.31	10.9	0.71	2.85	<0.05	<0.02	0.08	0.009	0.04	2.6	1.2	0.10	60	0.73	0.01
G002626	2.08	30.0	3.52	10.35	0.09	0.05	0.03	0.035	0.33	12.2	19.6	0.95	285	0.99	0.02
G003820	<0.05	0.6	0.01	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.1	<0.01	<5	<0.05	<0.01
G003860	<0.05	0.6	<0.01	<0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.6	0.1	<0.01	<5	<0.05	<0.01
G003900	<0.05	0.8	0.02	0.05	<0.05	0.02	<0.01	<0.005	<0.01	0.5	0.2	<0.01	<5	<0.05	<0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - C

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
G003721		1.19	26.4	330	6.0	18.9	<0.001	0.01	0.26	4.5	0.3	0.4	11.4	<0.01	0.03	1.1
G003722		0.74	20.6	1090	4.5	17.2	<0.001	0.14	0.34	2.9	1.2	0.3	40.8	0.01	0.04	0.2
G003723		0.88	23.2	750	6.1	22.0	<0.001	0.07	0.33	5.6	0.9	0.4	28.7	0.01	0.04	0.5
G003724		0.80	23.6	830	5.9	22.5	<0.001	0.08	0.30	6.0	0.9	0.4	29.9	<0.01	0.04	0.4
G003725		0.59	23.1	1080	6.2	16.2	<0.001	0.13	0.33	4.4	1.1	0.4	43.1	0.01	0.03	0.2
G003726		0.46	16.3	1430	4.0	6.3	<0.001	0.18	0.53	1.6	1.3	0.4	50.3	0.02	0.04	<0.2
G003727		0.86	20.2	480	7.3	19.2	<0.001	0.06	0.35	6.3	0.8	0.3	29.0	<0.01	0.03	1.3
G003728		2.27	23.2	620	11.1	33.1	<0.001	0.02	0.38	6.4	0.5	0.7	21.0	<0.01	0.02	6.7
G003729		1.80	33.7	710	12.1	24.9	<0.001	0.13	0.32	3.5	1.1	0.6	54.6	0.01	0.13	2.6
G003730		1.97	41.0	680	16.1	31.9	<0.001	0.08	0.23	4.3	1.2	0.7	45.6	<0.01	0.14	5.1
G003731		0.58	13.5	530	5.9	10.1	<0.001	0.05	0.21	2.7	0.6	0.3	16.1	<0.01	0.03	0.2
G003732		0.27	8.8	910	3.5	2.7	<0.001	0.12	0.18	1.5	0.8	0.5	26.6	0.02	0.02	<0.2
G003733		0.73	29.4	600	9.2	19.2	<0.001	0.04	0.24	8.8	0.7	0.4	21.7	<0.01	0.04	0.8
G003734		0.90	29.4	510	9.5	31.2	<0.001	0.03	0.21	9.4	0.5	0.4	18.5	<0.01	0.03	1.2
G003735		0.72	34.4	530	10.2	35.4	<0.001	0.01	0.23	11.4	0.4	0.3	17.9	<0.01	0.04	1.4
G003736		0.89	27.0	550	6.4	21.4	<0.001	0.02	0.28	8.3	0.6	0.5	17.0	<0.01	0.05	1.6
G003737		1.15	33.2	580	5.4	34.2	<0.001	0.02	0.34	8.6	0.7	0.5	20.5	<0.01	0.05	2.2
G003738		0.89	32.6	550	5.4	43.8	<0.001	0.01	0.34	7.5	0.6	0.4	19.0	<0.01	0.04	2.0
G003739		0.19	4.4	610	3.0	1.7	<0.001	0.05	0.19	0.7	0.5	0.4	8.1	0.01	0.03	<0.2
G002626		1.67	37.9	870	9.2	34.6	<0.001	0.02	2.26	8.5	0.8	0.8	25.1	<0.01	0.05	2.7
G003820		<0.05	0.4	10	0.5	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01	0.3
G003860		<0.05	0.3	10	0.6	0.1	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01	0.3
G003900		<0.05	0.4	10	0.6	0.2	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	0.7	<0.01	<0.01	0.3

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 5 - D

Total # Pages: 5 (A - D)

Finalized Date: 12-AUG-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07079989

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
G003721		0.157	0.11	0.24	79	0.14	2.80	62	1.4
G003722		0.052	0.09	0.47	40	0.11	13.60	54	1.3
G003723		0.091	0.14	0.57	69	0.12	14.05	61	1.7
G003724		0.091	0.13	0.53	75	0.11	12.30	71	1.4
G003725		0.061	0.10	0.74	61	0.12	13.70	57	1.0
G003726		0.026	0.06	0.58	28	0.12	12.60	43	0.7
G003727		0.076	0.09	0.76	68	0.11	9.98	56	1.3
G003728		0.179	0.26	1.60	72	0.16	6.87	62	3.3
G003729		0.091	0.18	1.45	42	0.15	11.85	60	2.8
G003730		0.113	0.23	1.75	50	0.15	13.45	76	3.5
G003731		0.055	0.05	0.78	45	0.10	3.40	43	0.5
G003732		0.023	0.03	0.59	12	0.17	3.18	47	<0.5
G003733		0.122	0.11	0.61	105	0.12	6.80	91	1.1
G003734		0.171	0.18	0.34	124	0.12	4.55	95	1.3
G003735		0.182	0.18	0.22	132	0.16	4.21	117	1.7
G003736		0.141	0.13	0.41	87	0.14	7.21	69	1.3
G003737		0.167	0.18	0.49	88	0.15	10.35	63	3.6
G003738		0.196	0.25	0.30	102	0.23	8.11	82	3.3
G003739		0.022	0.03	0.30	19	0.09	1.05	13	<0.5
G002626		0.142	0.20	0.99	97	0.22	8.61	70	1.6
G003820		<0.005	<0.02	0.08	<1	<0.05	0.68	2	0.5
G003860		<0.005	<0.02	0.09	<1	<0.05	0.67	3	0.5
G003900		<0.005	<0.02	0.08	<1	<0.05	0.57	3	0.6

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g). NSS is non-sufficient sample.



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 1

Finalized Date: 1-SEP-2007

Account: Eiangx

CERTIFICATE VA07094428

Project: North Dawson

P.O. No.: NGX07-02

This report is for 3 Rock samples submitted to our lab in Vancouver, BC, Canada on 27-AUG-2007.

The following have access to data associated with this certificate:

HENRY AWMACK
WES HODSON

ROBIN BLACK
MIKE ROBERTS

QUITY ENGINEERING GENERAL

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
CRU-31	Fine crushing - 70% <2mm
SPL-21	Split sample - riffle splitter
PUL-31	Pulverize split to 85% <75 um

ANALYTICAL PROCEDURES

ALS CODE	DESCRIPTION	INSTRUMENT
Au-AA23	Au 30g FA-AA finish	AAS
ME-MS41	51 anal. aqua regia ICPMS	

To: EQUITY ENGINEERING LTD.
ATTN: EQUITY ENGINEERING GENERAL
700 - 700 PENDER ST.
VANCOUVER BC V6C 1G8

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

Signature:

Lawrence Ng, Laboratory Manager - Vancouver



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - A

Total # Pages: 2 (A - D)

Finalized Date: 1-SEP-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07094428

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-AA23 Au ppm 0.005	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
C274921		1.32	0.073	1.34	0.09	0.7	<0.2	<10	150	0.07	1.35	0.23	1.01	15.50	0.7	51
C274922		0.98	0.007	1.07	0.18	0.5	<0.2	<10	920	0.15	1.64	0.31	0.46	40.90	2.7	22
C274923		1.16	0.005	1.45	0.18	0.5	<0.2	<10	40	0.13	2.10	0.23	0.62	20.10	1.7	37

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - B

Total # Pages: 2 (A - D)

Finalized Date: 1-SEP-2007

Account: EIANXG

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07094428

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
C274921		0.10	30.7	0.42	0.36	<0.05	0.10	0.01	0.008	0.05	6.8	0.4	0.02	81	24.30	0.01
C274922		0.17	18.2	0.75	0.80	0.05	0.47	<0.01	0.005	0.10	23.0	0.9	0.05	102	16.75	0.01
C274923		0.20	13.3	0.73	0.64	<0.05	0.18	<0.01	0.005	0.12	10.9	0.9	0.04	84	7.94	0.01

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07094428[illegible]

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).



ALS Chemex

EXCELLENCE IN ANALYTICAL CHEMISTRY

ALS Canada Ltd.

212 Brooksbank Avenue

North Vancouver BC V7J 2C1

Phone: 604 984 0221 Fax: 604 984 0218 www.alschemex.com

To: EQUITY ENGINEERING LTD.

700 - 700 PENDER ST.

VANCOUVER BC V6C 1G8

Page: 2 - D

Total # Pages: 2 (A - D)

Finalized Date: 1-SEP-2007

Account: EIANGX

Project: North Dawson

CERTIFICATE OF ANALYSIS VA07094428

Sample Description	Method	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
	Analyte	Ti	TI	U	V	W	Y	Zn	Zr
	Units	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm
	LOR	0.005	0.02	0.05	1	0.05	0.05	2	0.5
C274921		<0.005	0.04	0.68	1	0.13	2.02	170	2.8
C274922		0.007	0.08	1.55	3	0.13	5.20	70	12.2
C274923		0.006	0.07	1.00	2	0.06	3.02	95	5.0

Comments: Gold determinations by ME-MS41 are semi-quantitative due to the small sample weight used (0.5g).

Appendix D: Compact Disc

COMPACT DISC

The attached compact disk contains a digital copy of the soil sampling data and rock prospecting data in Microsoft Office Access format. The compact disc also contains digital version of the report text, figures and assay certificates.

Appendix E: Geologist's Certificate

GEOLOGIST'S CERTIFICATE

I, Michael Roberts, of 1100 Jervis Street, Vancouver, in the province of British Columbia, DO HEREBY CERTIFY:

THAT I am a Geoscientist employed by Rimfire Minerals Corporation, with offices at #700-700 West Pender Street in the City of Vancouver, in the Province of British Columbia.


THAT I am a graduate of the University of Victoria (1998) with an Honours Bachelor of Science degree in Geology, and a Doctorate of Geology from James Cook University, Australia (2003), and I have practiced my profession continuously since 1998.

THAT I am presently Senior Geologist with Rimfire Minerals Corporation and have been so since October 2005.

THAT this report is based on fieldwork carried out by me or under my direction from June and July, 2007 and from publicly available reports and historical data. I have examined the property in the field.

Date at Vancouver, British Columbia, this ____ day of _____,
2008

Michael D. Roberts

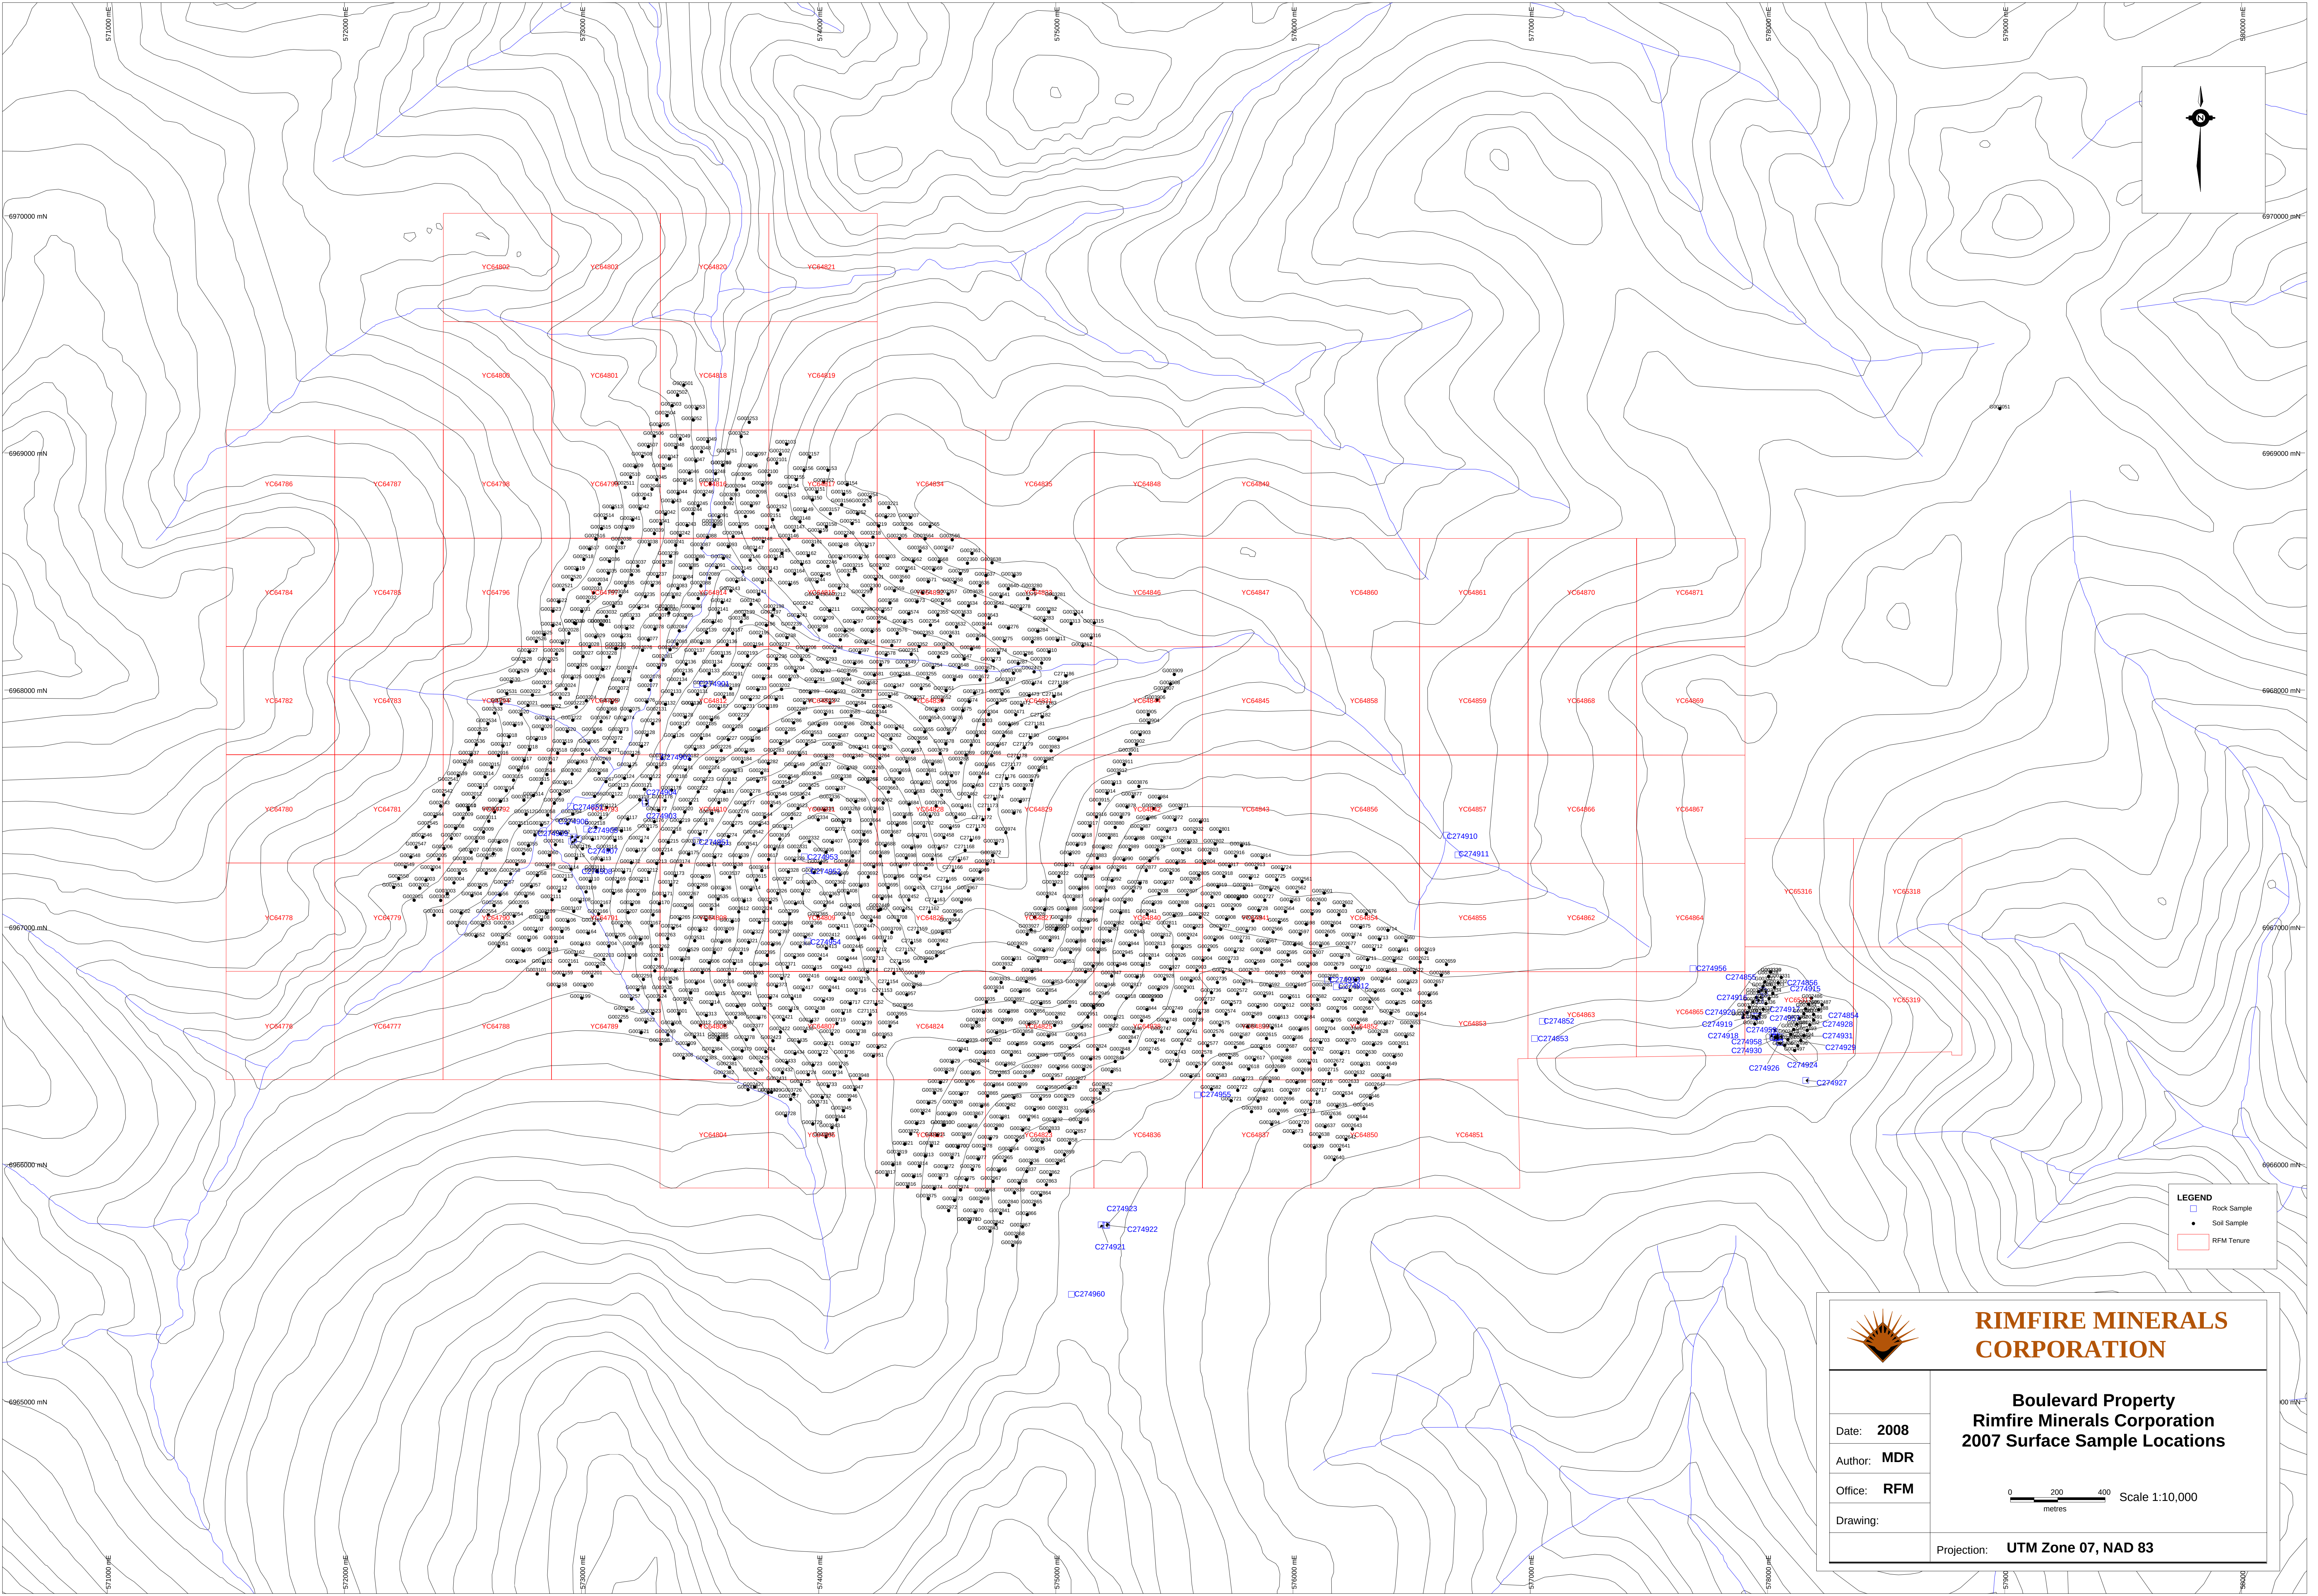



RIMFIRE MINERALS CORPORATION

Boulevard Property
Rimfire Minerals Corporation
2007 Surface Sample Locations

Date:	2008
Author:	MDR
Office:	RFM
Drawing:	

Projection: **UTM Zone 07, NAD 83**