

**GEOPHYSICAL – GEOCHEMICAL**

**REPORT**

**BLACK FOX 1- 52 CLAIMS**

**YC30519 - YC30528**

**YC35176 - YC35203**

**YC36525 – YC36538**

**NTS # 115 O \ 3**

**LAT: 63° 03 N**

**LONG: 139° 05 W**

**DAWSON MINING DISTRICT**

**AUTHOR OF REPORT SHAWN RYAN**

**WORK PERFORMED JUNE 22 to JUNE 28, 2008**

**DATE OF REPORT APRIL 02, 2009**

## TABLE OF CONTENT

<b>1.0</b>	<b>Summary</b>	<b>p.3</b>
<b>2.0</b>	<b>INTRODUCTION</b>	<b>p.3</b>
<b>3.0</b>	<b>PROJECT LOCATION</b>	<b>p.3</b>
<b>4.0</b>	<b>ACCESS</b>	<b>p.3</b>
	<b>LOCATION MAP Figure 1</b>	<b>p.4</b>
	<b>GEOLOGY MAP Figure 2</b>	<b>p.5</b>
<b>5.0</b>	<b>GEOLOGY</b>	<b>p.6</b>
<b>5.1</b>	<b>REGIONAL GEOLOGY</b>	<b>p.6</b>
<b>6.0</b>	<b>WORK PERFORMED / METHODS</b>	<b>p.7</b>
<b>6.1</b>	<b>Magnetic Survey</b>	<b>p.7</b>
<b>6.2</b>	<b>Soil Survey</b>	<b>p.7</b>
<b>7.0</b>	<b>INTERPRETATION</b>	<b>p.8</b>
<b>7.1</b>	<b>Magnetic Survey</b>	<b>p.8</b>
<b>7.2</b>	<b>Soil Survey</b>	<b>p.8</b>
<b>8.0</b>	<b>RECOMMENDATION</b>	<b>p.8</b>
<b>9.0</b>	<b>REFERENCES CITED</b>	<b>p.8</b>
<b>10.0</b>	<b>Cost</b>	<b>p.9</b>
<b>11.0</b>	<b>Qualification</b>	<b>p.9</b>
	<b>Soil Location Map</b>	<b>Figure 3</b>
	<b>Gold Soil geochemistry map</b>	<b>Figure 4</b>
	<b>Copper Soil geochemistry map</b>	<b>Figure 5</b>
	<b>Mercury Soil geochemistry map</b>	<b>Figure 6</b>
	<b>Magnetic Survey Line Location Map</b>	<b>Figure 7</b>
	<b>Magnetic Survey Map</b>	<b>Figure 8</b>
	<b>Assay / GPS Data</b>	<b>Appendix</b>

## **1.0 SUMMARY**

The Black Fox project had a contract crew of four men all employees of Ryanwood Exploration mobilize to the Black Fox claims and conducted a small magnetic and soil sampling survey for Underworld Resources.

The crew consists of Joe McCann (crew chief) and soil samplers Ben McGraft, Chris Arsenault and Jeremy Duplisea,

The soil sampling program was successful in extending the gold anomaly found in 2004-2005 soil survey by another 350 meters to the south-west.

## **2.0 INTRODUCTION**


The 2008 Black Fox field program consist of 25 Km of magnetic survey and 318 soils collected on 25 meter station spacing over 8 kilometer of soil lines.

## **3.0 LOCATION**


The Black Fox project is located at the headwaters of Thistle Creek; it's in Dawson Mining Division, on NTS # 115 0/3. The latitude 63°03'N and longitude 139°05'W.

## **4.0 ACCESS**

The Black Fox claim group can be reached via helicopter from Dawson City or one can boat 100 miles up the Yukon River then take a four wheeler 25 kilometers up the Kirkman Creek road system to the headwaters of Kirkman and Thistle Creek.

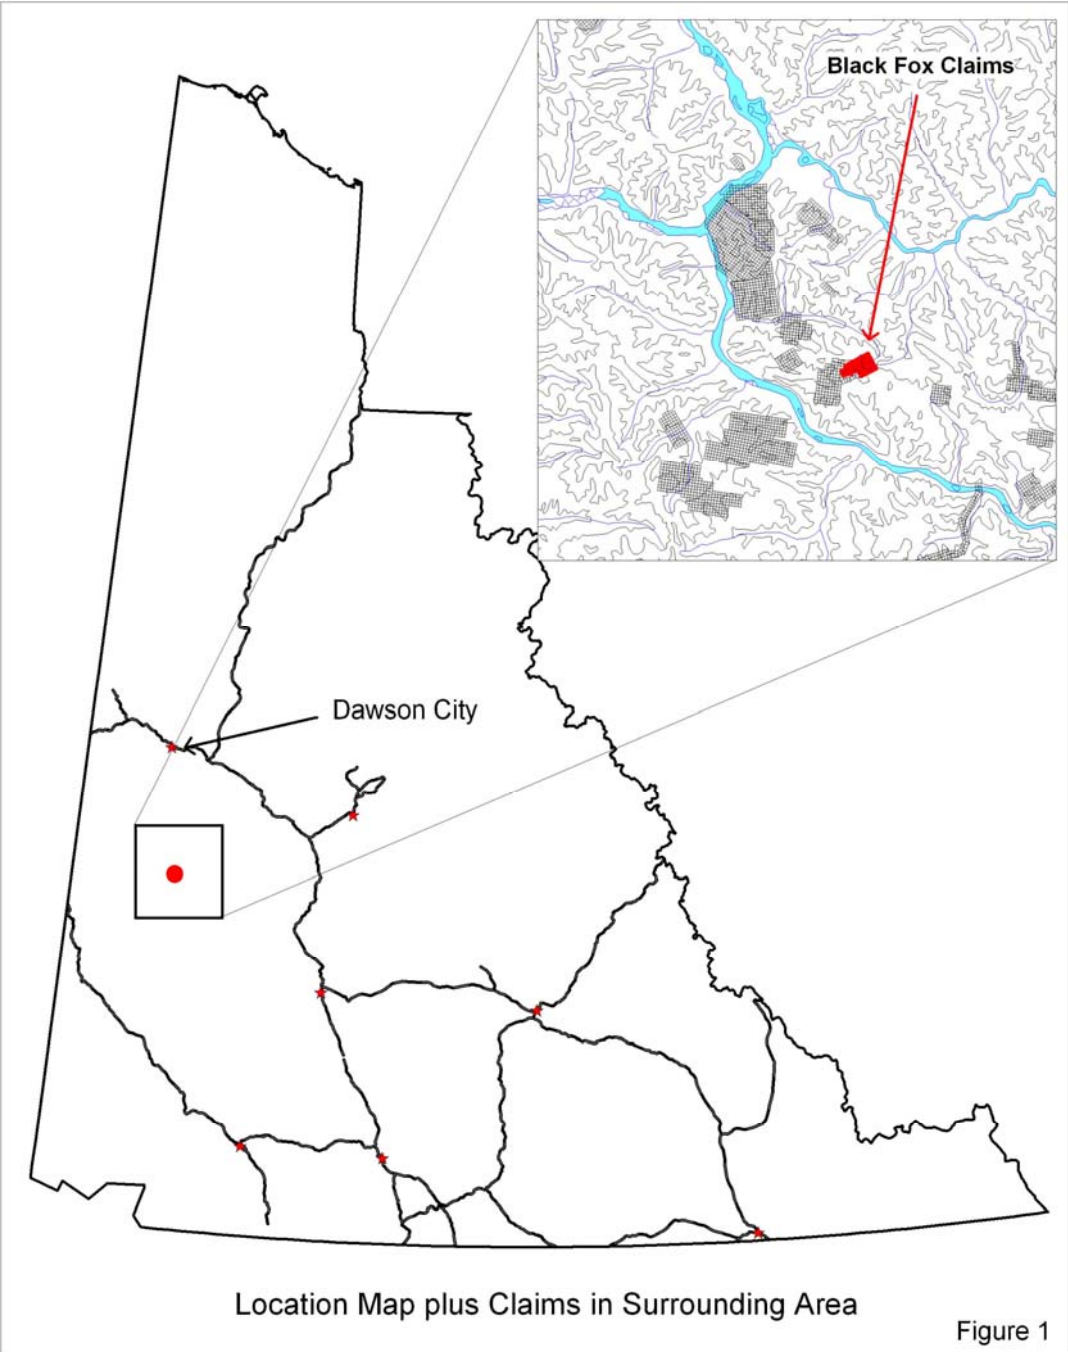

**5.0 REGIONAL GEOLOGY**

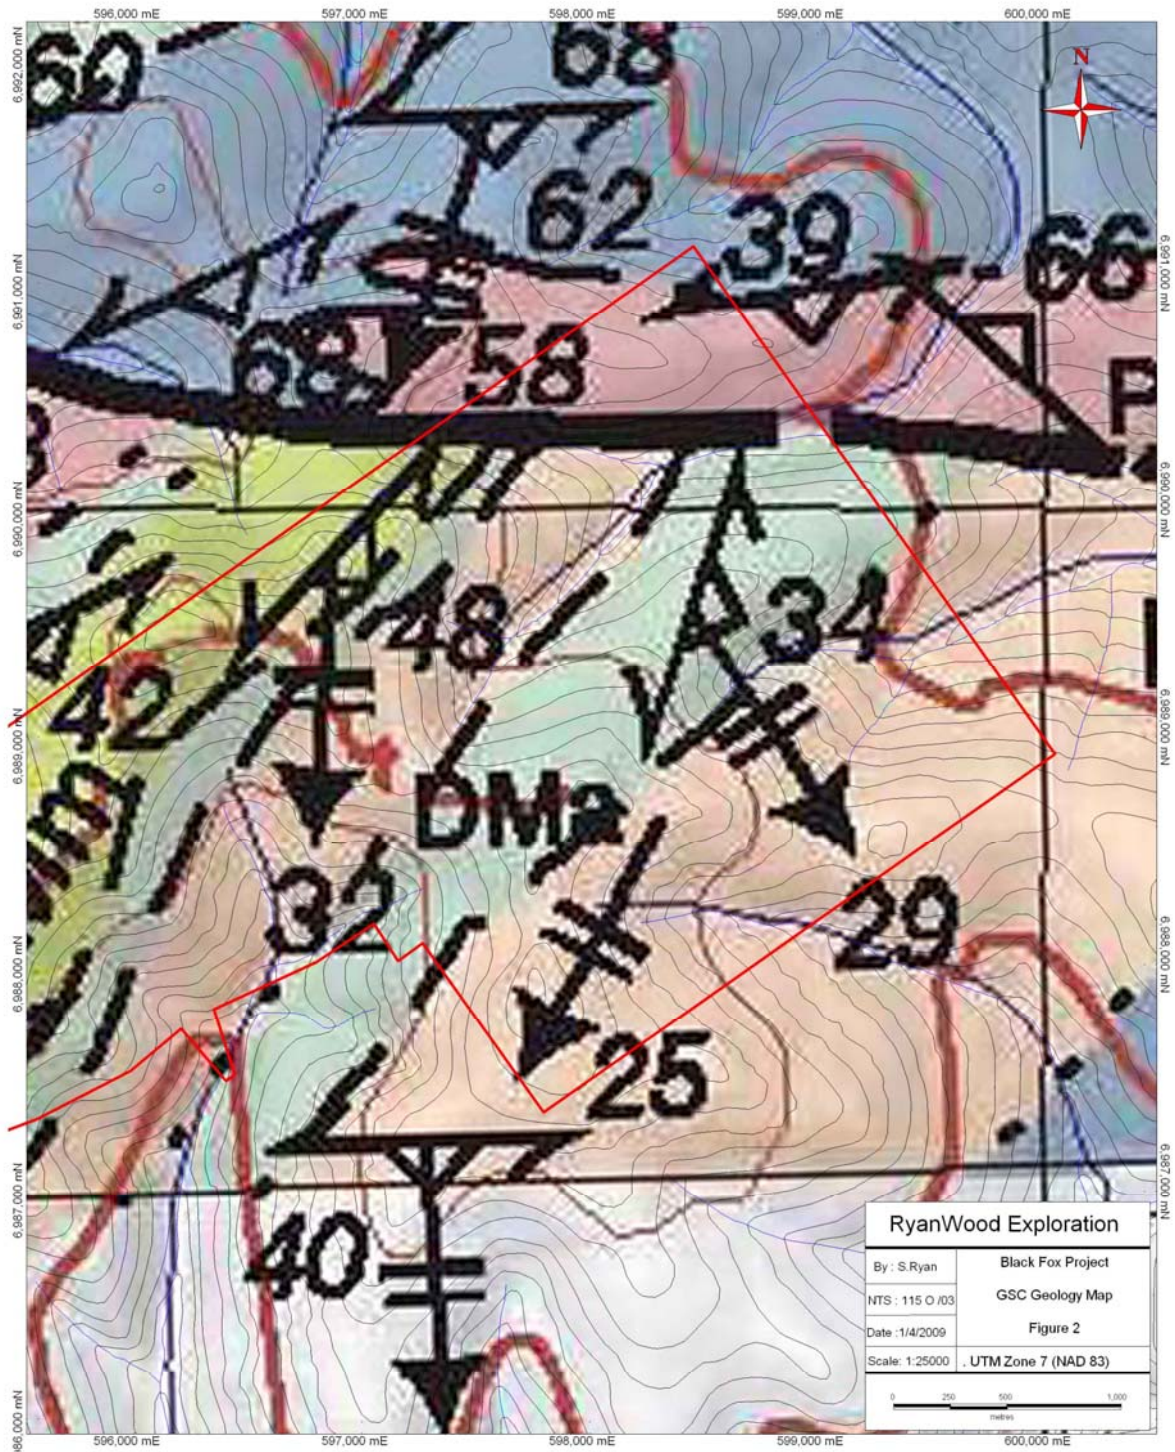

## 5.1 REGIONAL GEOLOGY

## Description (from Open File 4970)

Pogg	Poga
Pogq	
Pogt	

**ORTHOgneiss (YOUNGER, 264-259 Ma):** Pog, undivided orthogneiss; Pogg, pink to orange K-feldspar rich, granitic orthogneiss, commonly includes or associated with Poga; Poga, mainly K-feldspar augen orthogneiss, exhibits various states of strain including porphyroclastic straight gneiss, commonly includes or associated with Pogg; Pogt, rare, mainly tonalitic orthogneiss; Pogq, orthogneiss derived from quartz monzonite; refers to highly strained, mafic poor, Sulphur Creek orthogneiss; ?-age assignment probable, ??-age assignment assumed (alternatively could be part of DMog).

DMogg	DMoga
DMogt	

**ORTHOgneiss (OLDER, 363-343 Ma):** DMog, undivided orthogneiss; DMogg, pink to orange K-feldspar rich, granitic orthogneiss, commonly with biotite, banded to layered, commonly includes or associated with DMoga; DMoga, mainly K-feldspar augen orthogneiss, commonly includes or associated with DMogg; DMogt, mainly tonalitic or intermediate to mafic orthogneiss, generally grey, banded to layered, commonly veined; commonly interlayered with amphibolite schist and gneiss, biotite and/or hornblende bearing; ?-age assignment probable, ??-age assignment assumed (alternatively could be part of Pog)

DMa
-----

**AMPHIBOLITE:** amphibolite schist and gneiss; metabasite; probably derived from mafic to intermediate volcanic or volcanoclastic rocks; locally associated with psammite or interlayered with orthogneiss

DMm
-----

**MAFIC SCHIST:** biotite-hornblende+/-plagioclase+/-quartz metabasite?; generally associated with amphibolite; main locality on Thistle Mountain

DMps
------

**QUARTZ-MICA SCHIST:** undivided metasedimentary rocks dominated by metapsammite, semipelite and metapelite; commonly quartz-garnet-biotite-muscovite schist possibly derived from siliceous siltstone; commonly finely interlayered with garnet metapelite; commonly contains members of micaceous quartzite; rare conglomerate; grades locally to paragneiss

## **6.0 WORK PERFORMED / METHODS**

### **6.1 Magnetic Survey**

The magnetic survey was conducted across the entire grid. The survey uses two GEM proton precessions GSM – 19 T magnetometers. One is the portable field unit and the second is a base station magnetometer that records reading every 15 seconds at a stationary position for the entire survey. The base station monitors the earth daily magnetic drift. At the end of each day's survey both the field and base station magnetometers are plugged in together and the daily drift is corrected out of the field magnetometer.

Only the corrected data is used to plot the survey results.

The field magnetic instrument used a built in GPS that acts as a guiding system as the operator walks through the bush to specified end of line points. The field magnetometer takes continuous reading every 1.5 seconds and adds a GPS point to every reading while the operator walks the line. The average sample density comes out to about one reading every 2 meters.

The survey covered an area of 1.1 kilometer by 1.5 kilometer running north-east south-west and another inner grid going the opposite direction to see if we could pick out any structural pattern running parallel to north-east grid. The inner grid was run across 1200 meters by 600 meters. The total survey covered 25.2 kilometers.

The magnetic range for the entire survey was a low of 56,227 gammas to a high of 60,701 gammas. A total of 53,364 readings were taken over the course of the survey.

### **6.2 Soil Survey**

The Black Fox Project had 11 man days of soil work collecting 318 soils.

All soil samples were collected with one meter soil probes and sometime with a prospector pick. We carried both instruments on rocky talus slope. Soil sample location was marked on the ground with orange flagging and recorded in Garmin GPS. About 400-500 grams of soil was collected and placed in pre marked kraft soil bags.

All samples were brought out to Dawson and air dried repacked in rice bags and sent to Acme Labs in Vancouver. Samples were processed with Aqua Regia ICP-MS for 36 elements (Acme Labs 1DX-15 gram Assay).

The GPS data were downloaded every night and stored in a personal computer.

## **7.0 INTERPRETATION**

### **7.1 Magnetic Survey**

The 2008 magnetic survey mimics the 2005 survey but came out a lot smoother a factor of having a higher sampling density. The survey outlined the north-west trending magnetic low crossing the low lying saddle area. The magnetic survey also extended the 2005 survey to the south-east and pick up another magnetic low area paralleling the main north-east trending magnetic high zone.

The magnetic high seems to be sitting in the DMA known as the amphibolite and the magnetic low is sitting in the DMps also known as quartz-mica schist.

### **7.2 Soil Survey**

The soil survey expanded the soil grid to the north –west and to the south. The north-west grid picked up a couple of spot high gold anomalies. This grid also indicted a nice copper anomaly moving in a north-east direction across three lines. This copper anomaly seem to be sitting in the GSC mapped mafic schist unit (DMm)

The next soil anomaly that appears right next to the copper anomaly but in a narrow band of mapped amphibolites (DMA) is antimony and mercury.

The southern grid help expand the existing gold soil anomaly by another 350 meters to the south-west. This trend also had anomalous lead values associated with it.

So as it stands with 1604 soil sample covering an area measuring 2600 meters by 3000 meters at the longest point we now have a gold anomaly measuring 2000 meters by 600 meters at it widest point.

## **8.0 RECOMMENDATION**

I would recommend extending the soil grid to the south west part of the claim block where we have very little soil coverage. I would think about a small trenching program over the known gold in soil anomalies not look at yet.

## **9.0 REFERENCES CITED**

Ryan,J.J. and Gordey,S.P. 2004: Geology, Stewart River Area, Yukon Territory; Geological Survey of Canada, Open File 4641

## **10.0 COST**

Magnetic Survey 18 KL @ \$250.00 per KL	\$4,500.00
Wage 11 man days @ \$330.00 per day	\$3,630.00
Mode /Demode 6 man days @ \$250.00	\$1,500.00
Food/ Camp Allowance 21 man days @ \$70.00	\$1,470.00
Assay Cost 318 soil @ \$24.00 per sample	\$7,632.00
Boat plus gas - 2 trips @ \$1,400 per trip	\$2,800.00
Four wheeler plus trailer Rental 7 days @\$100. per day	\$700.00
Report writing	\$500.00
Total	\$22,732.00

## **11.0 QUALIFICATION**

I Shawn Ryan located in Dawson City, Yukon work as a professional prospector. I run a small exploration company located in Dawson City.

I have worked in the exploration business for the last 25 years. I worked the first 12 years as a contractor working on numerous projects in the NWT, Ontario, Quebec and the Yukon. I have worked the last 12 years as a local prospector for myself.

I have been trained to run various geophysical instruments and surveys such as magnetic surveys, max-min surveys, induce polarity surveys and VLF surveys.


I have overseen the entire Black Fox Project.

I own 100% of the Black Fox claims and have option the claims to Underworld Resources.

Dated this 02 of April 2009 in Dawson City, Yukon.


Respectfully submitted

Shawn Ryan

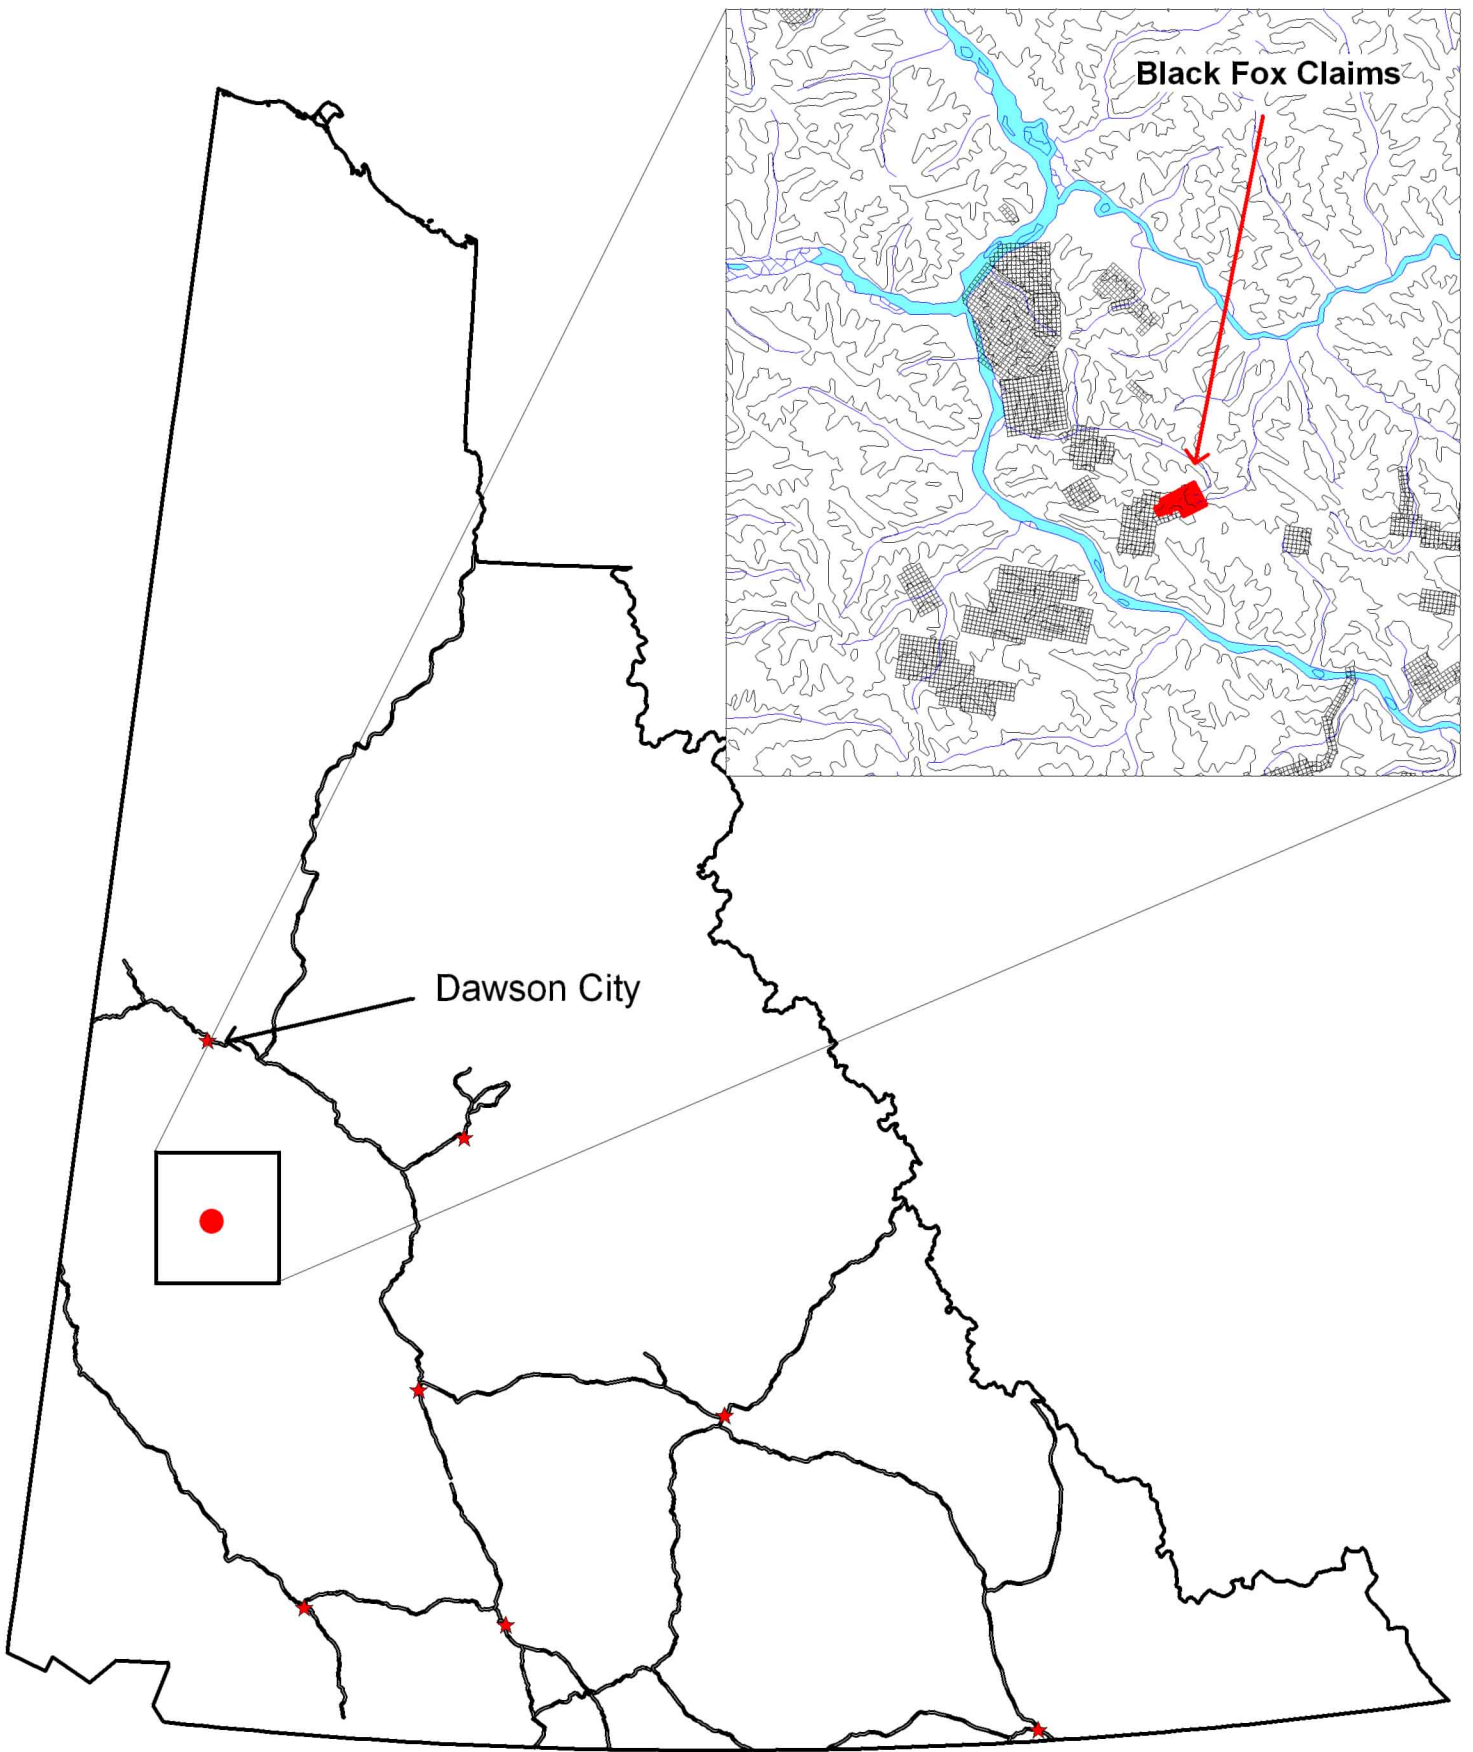



Location Map plus Claims in Surrounding Area

Figure 1

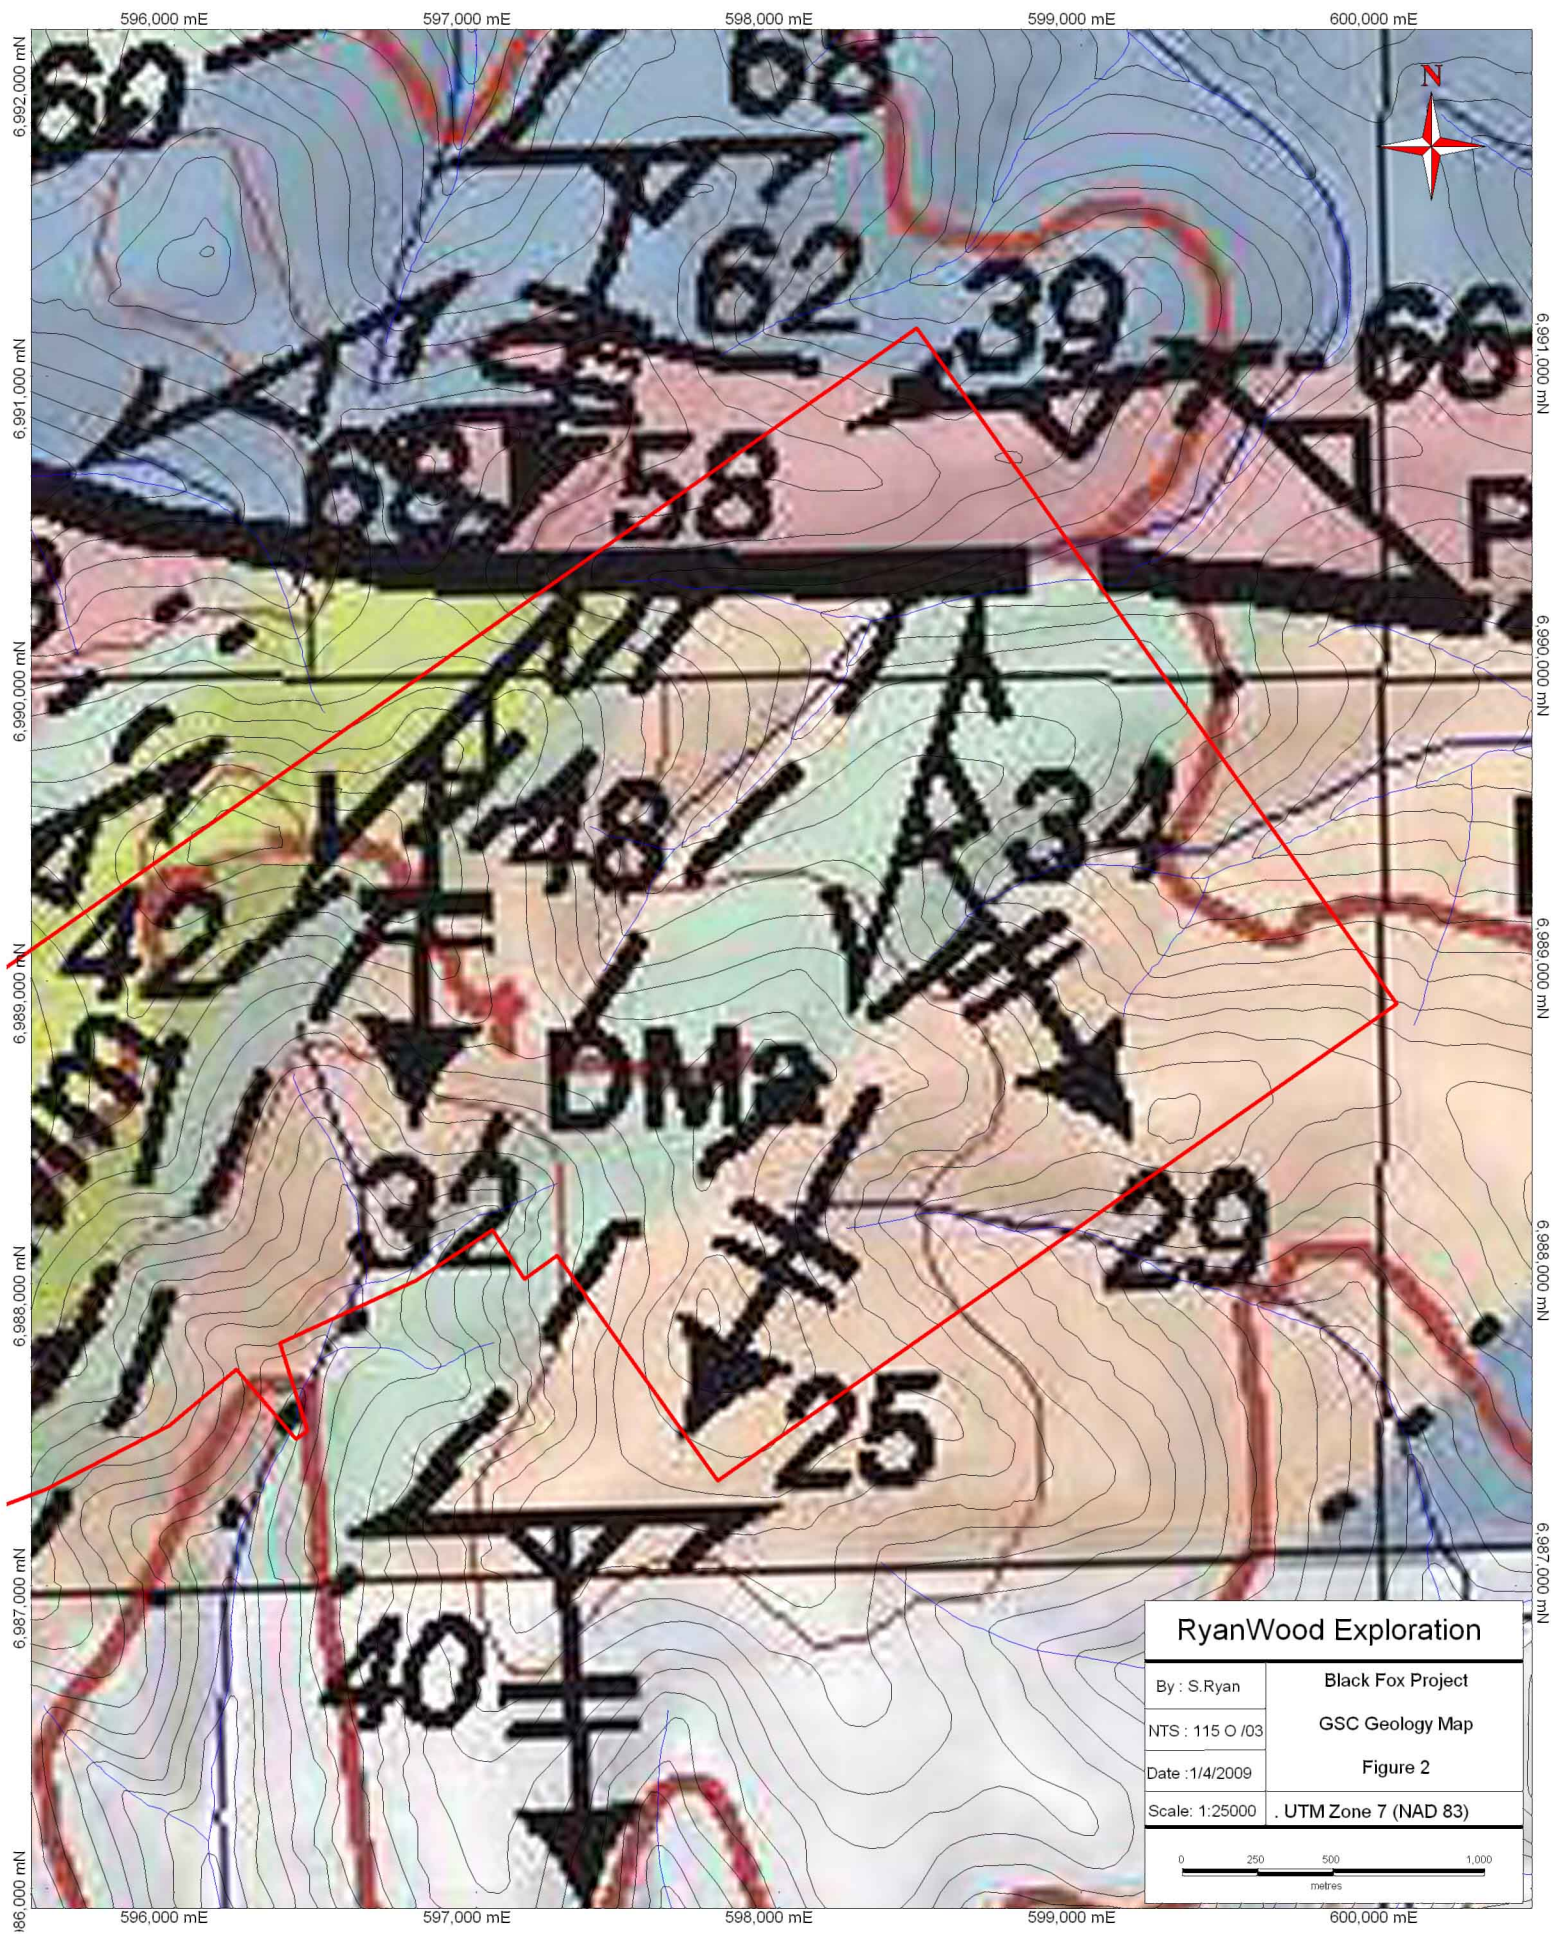

<b>RyanWood Exploration</b>	
By : S.Ryan	Black Fox Project
NTS : 115 O /03	GSC Geology Map
Date :1/4/2009	Figure 2
Scale: 1:25000	. UTM Zone 7 (NAD 83)

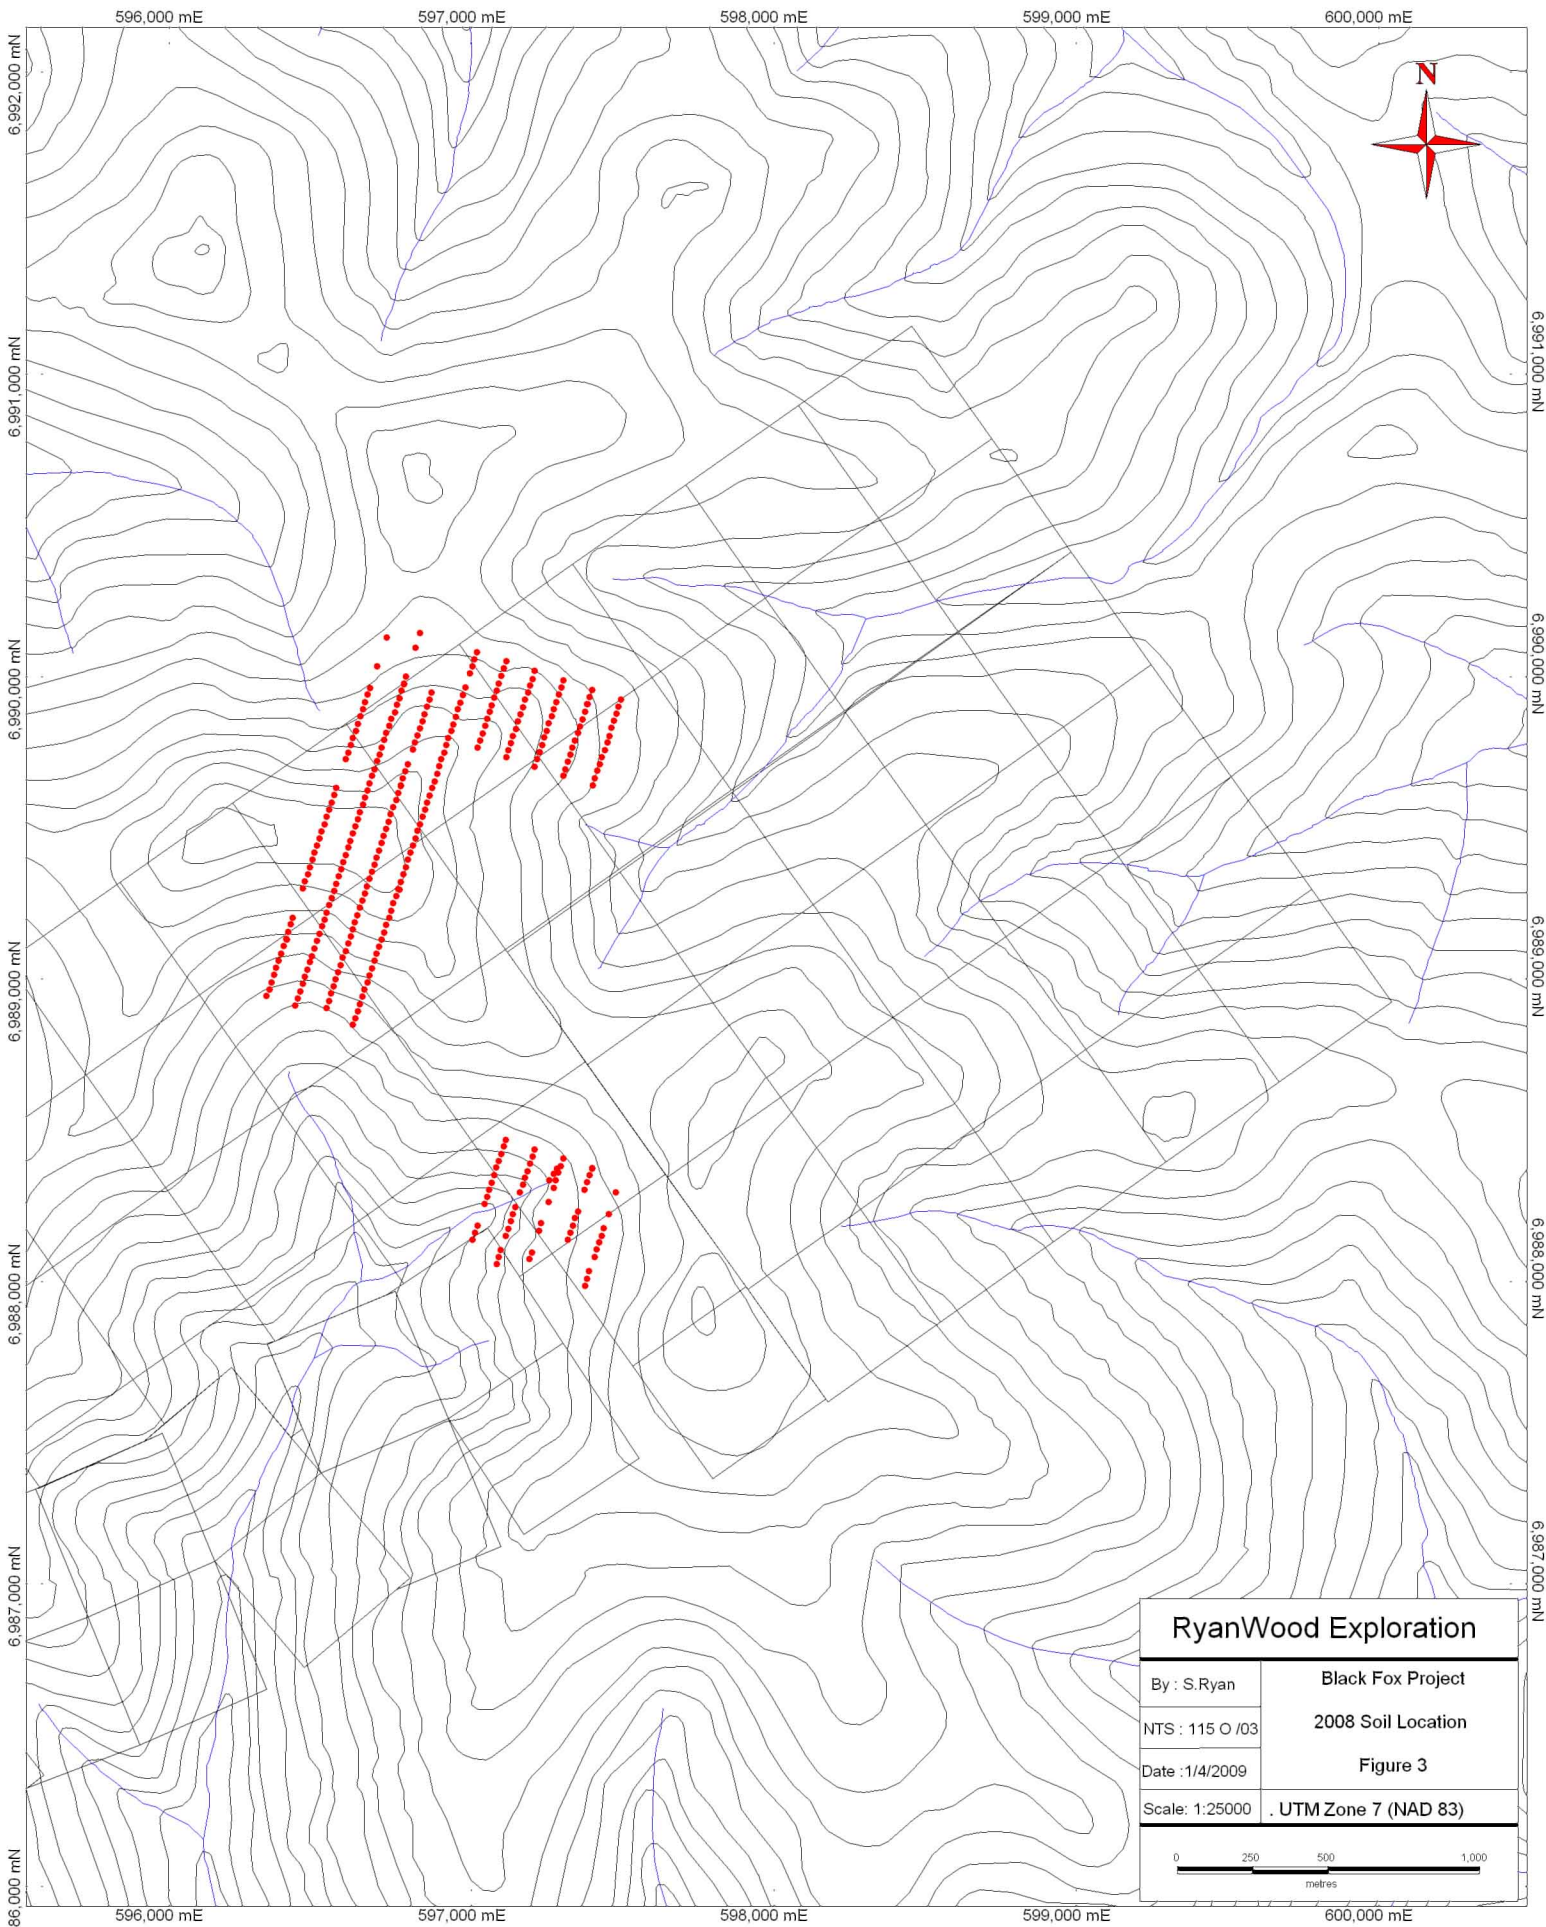

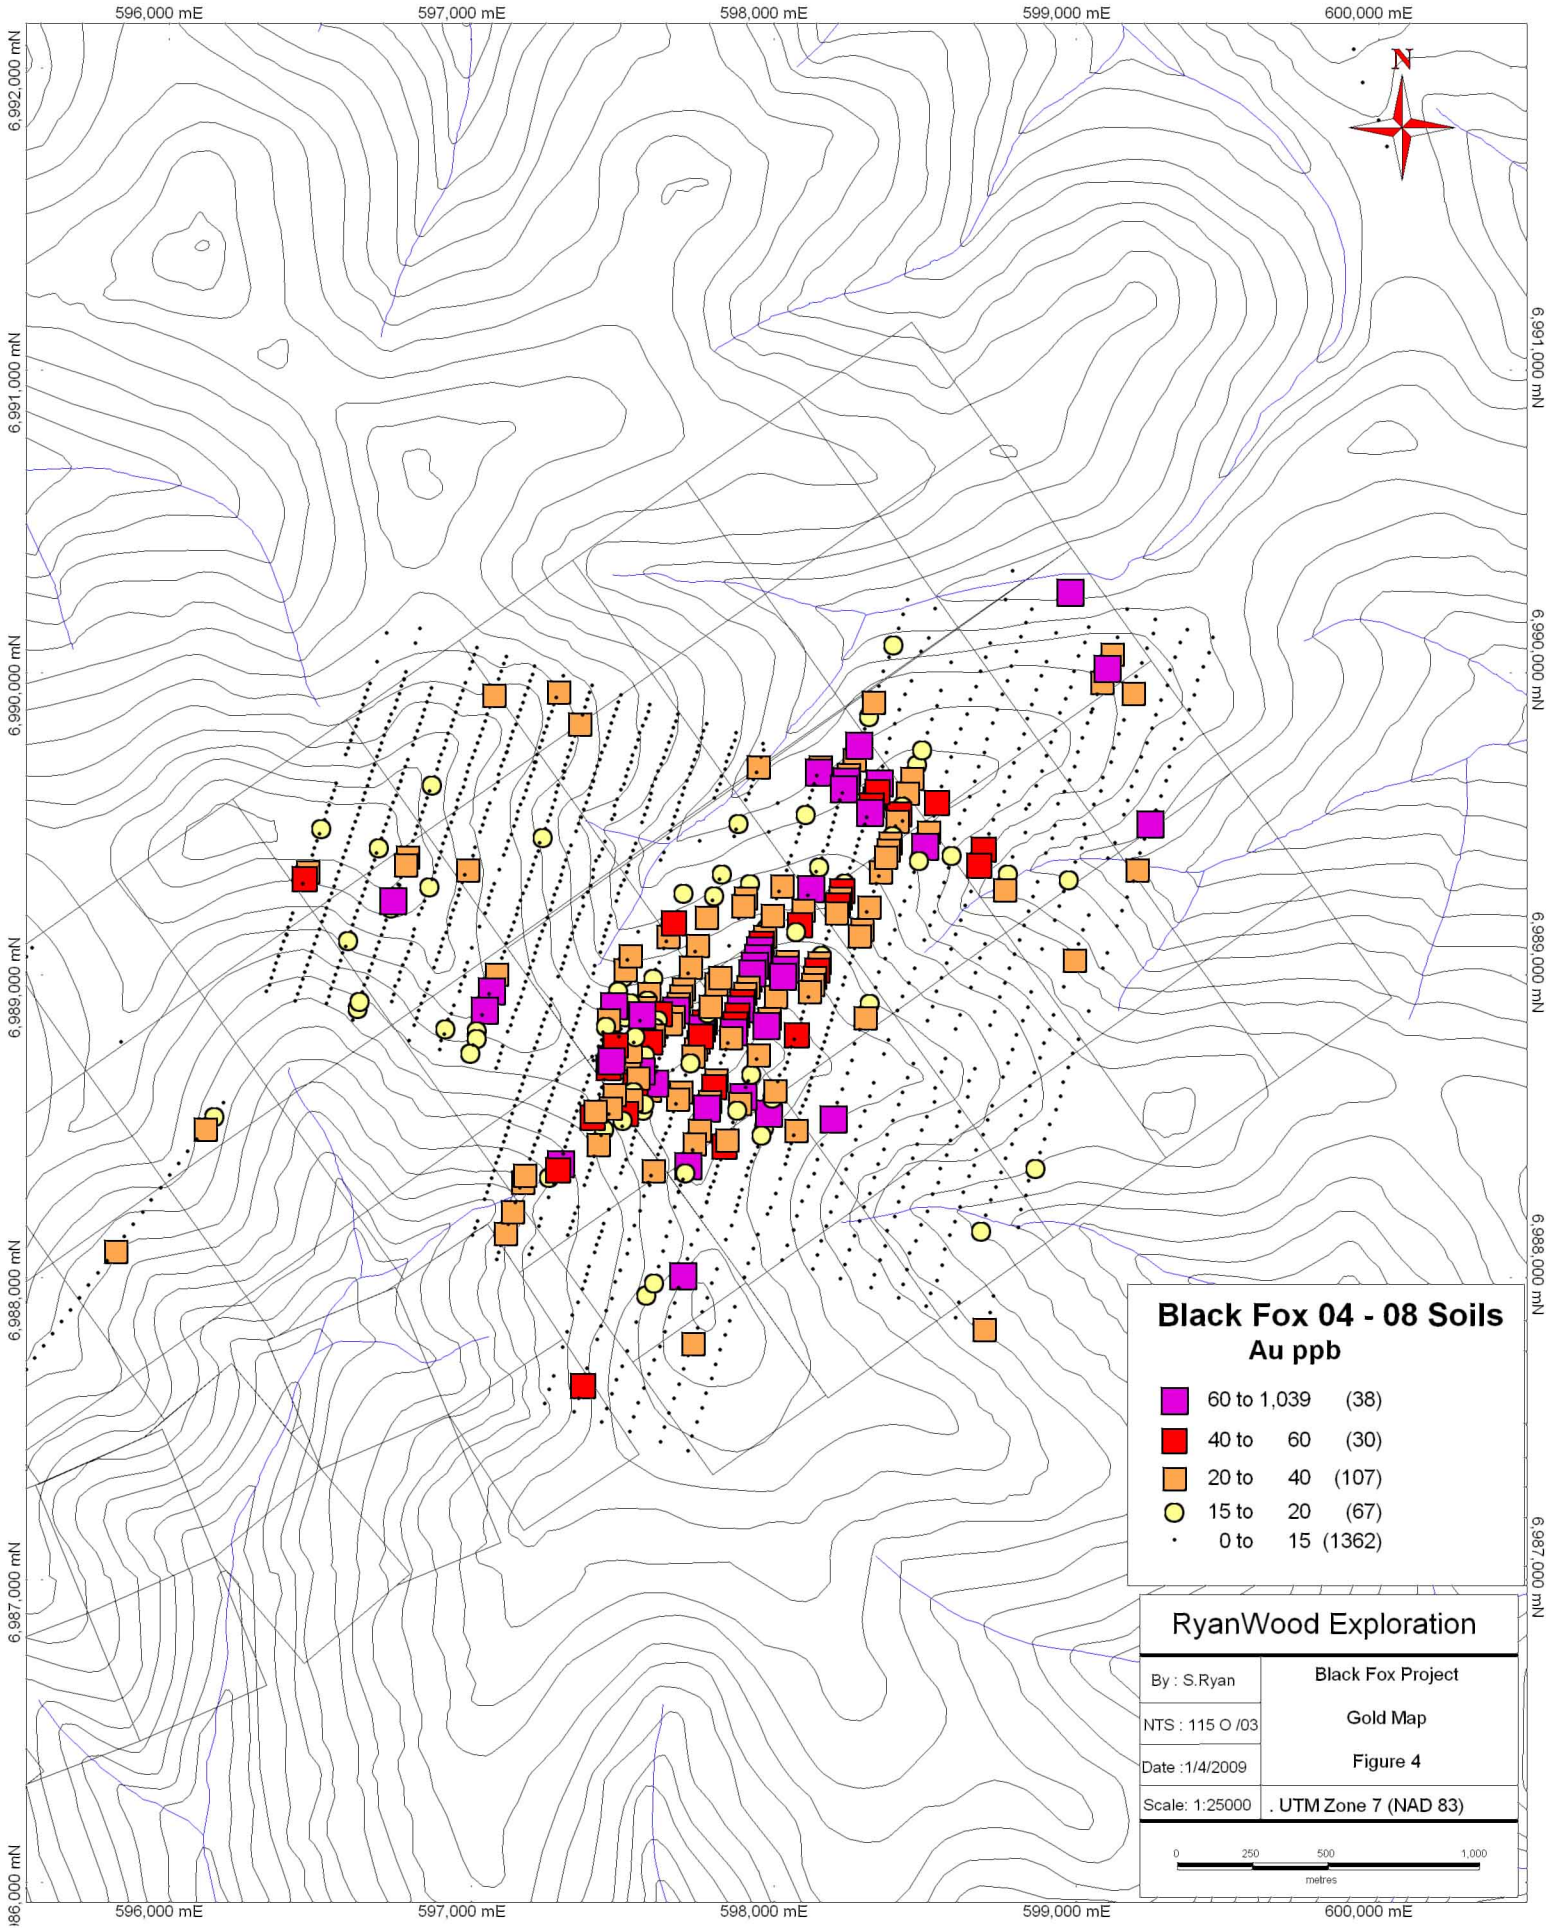


**Black Fox 04 - 08 Soils**  
**Au ppb**


■	60 to 1,039	(38)
■	40 to 60	(30)
■	20 to 40	(107)
●	15 to 20	(67)
·	0 to 15	(1362)

**RyanWood Exploration**

By : S.Ryan	Black Fox Project
NTS : 115 O /03	Gold Map
Date :14/2009	Figure 4
Scale: 1:25000	. UTM Zone 7 (NAD 83)

0 250 500 1,000 metres

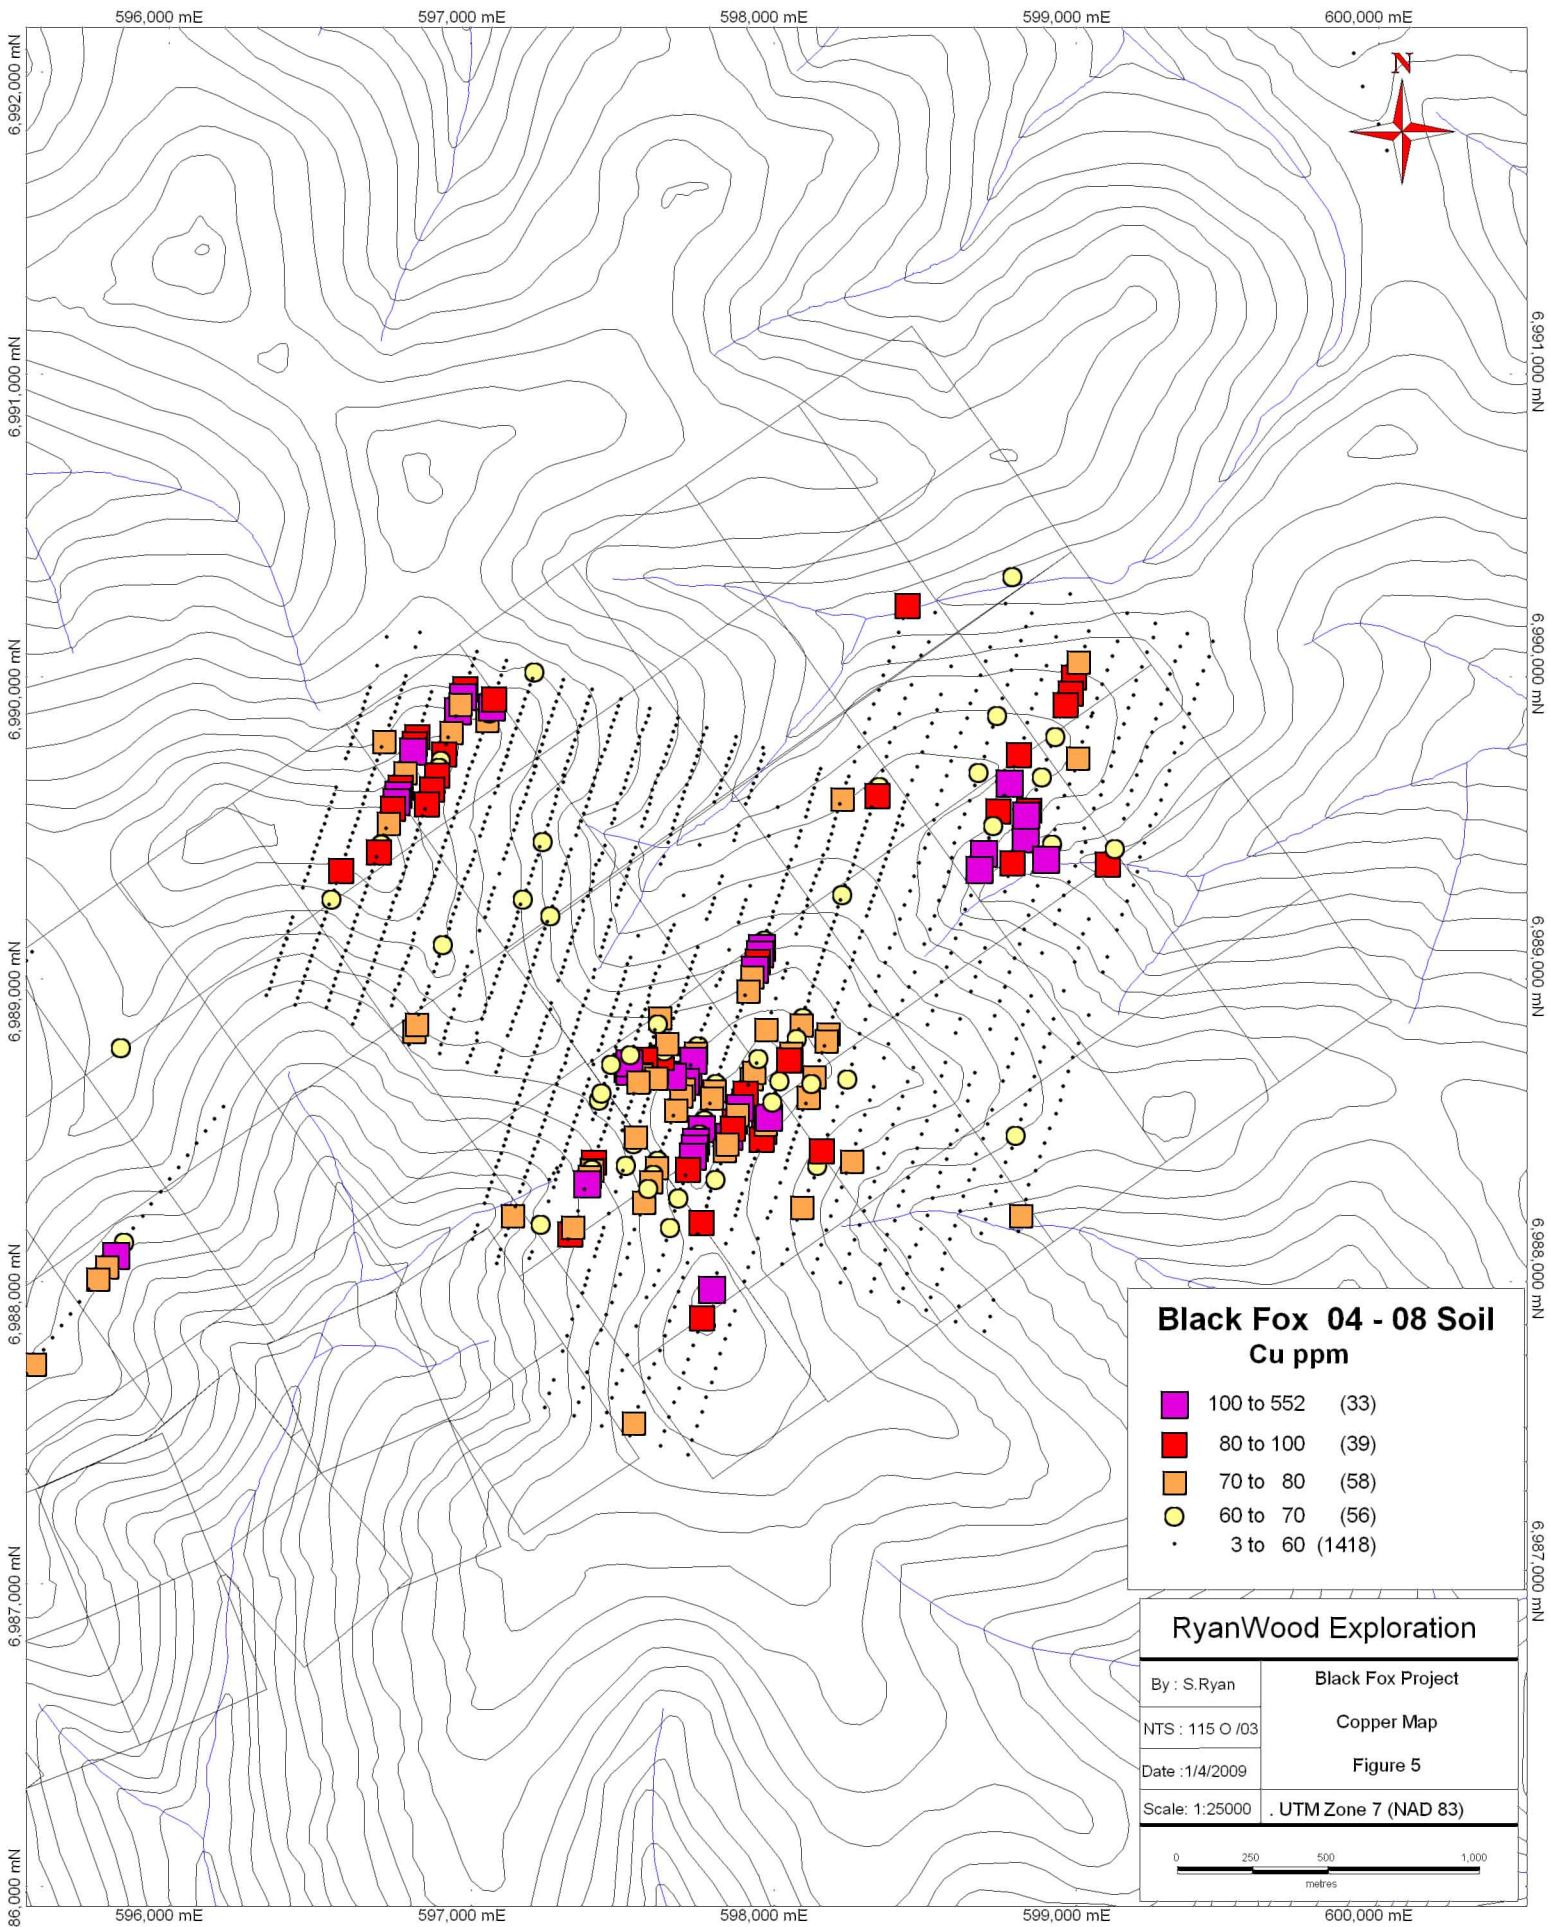

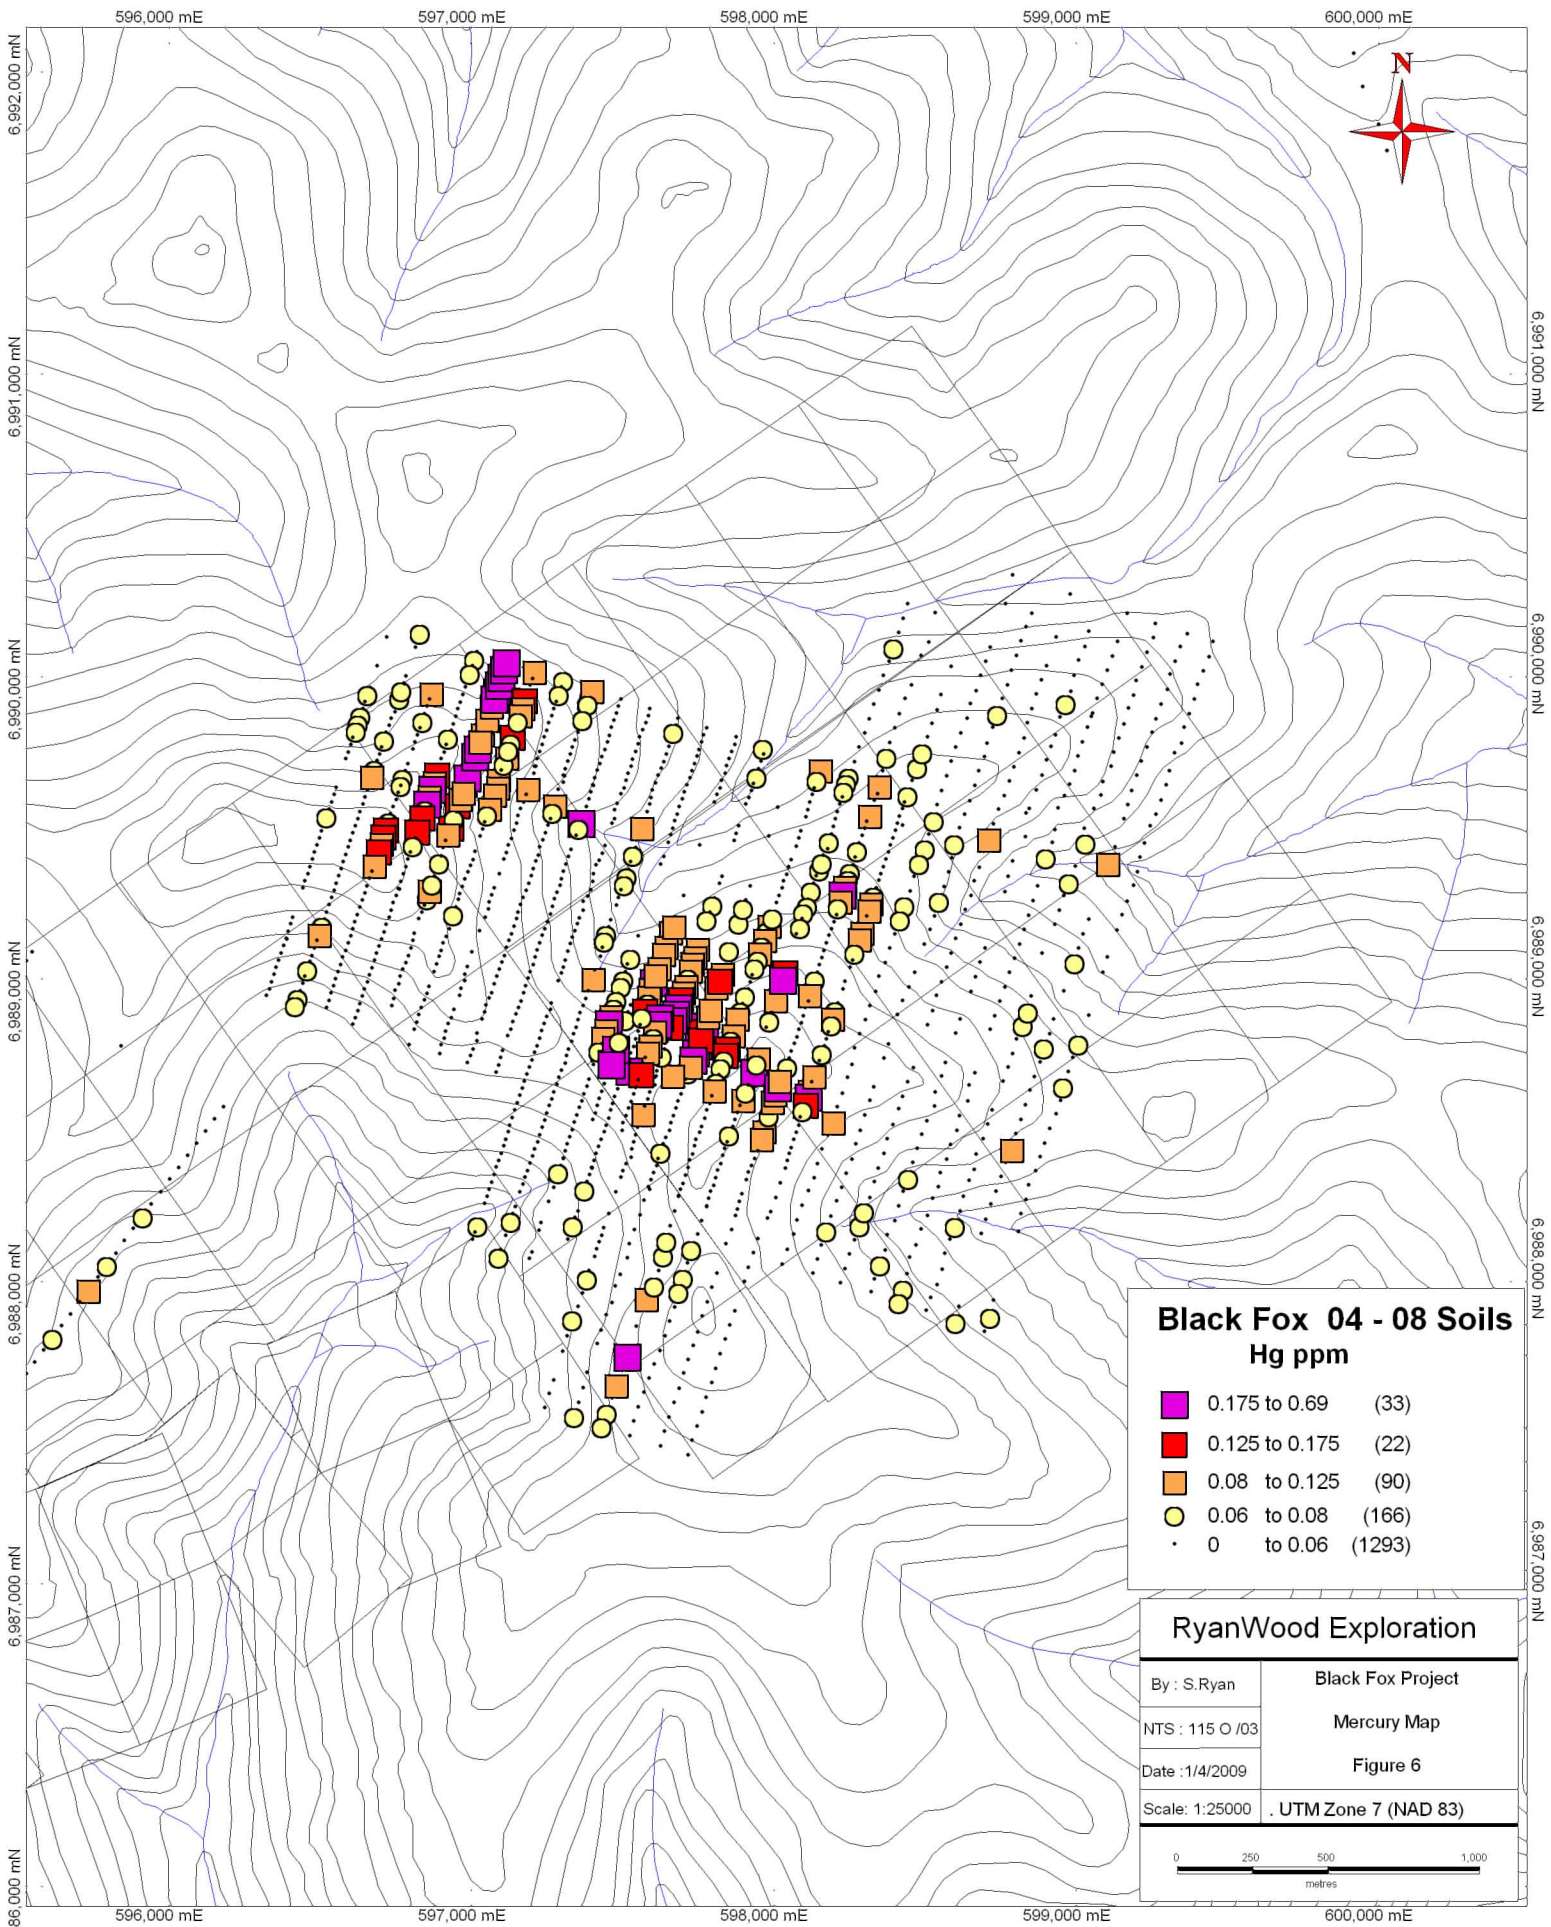


**Black Fox 04 - 08 Soils  
Hg ppm**

- 0.175 to 0.69 (33)
- 0.125 to 0.175 (22)
- 0.08 to 0.125 (90)
- 0.06 to 0.08 (166)
- 0 to 0.06 (1293)

**RyanWood Exploration**


By : S.Ryan	Black Fox Project
NTS : 115 O /03	Mercury Map
Date :1/4/2009	Figure 6
Scale: 1:25000	. UTM Zone 7 (NAD 83)


0 250 500 1,000 metres

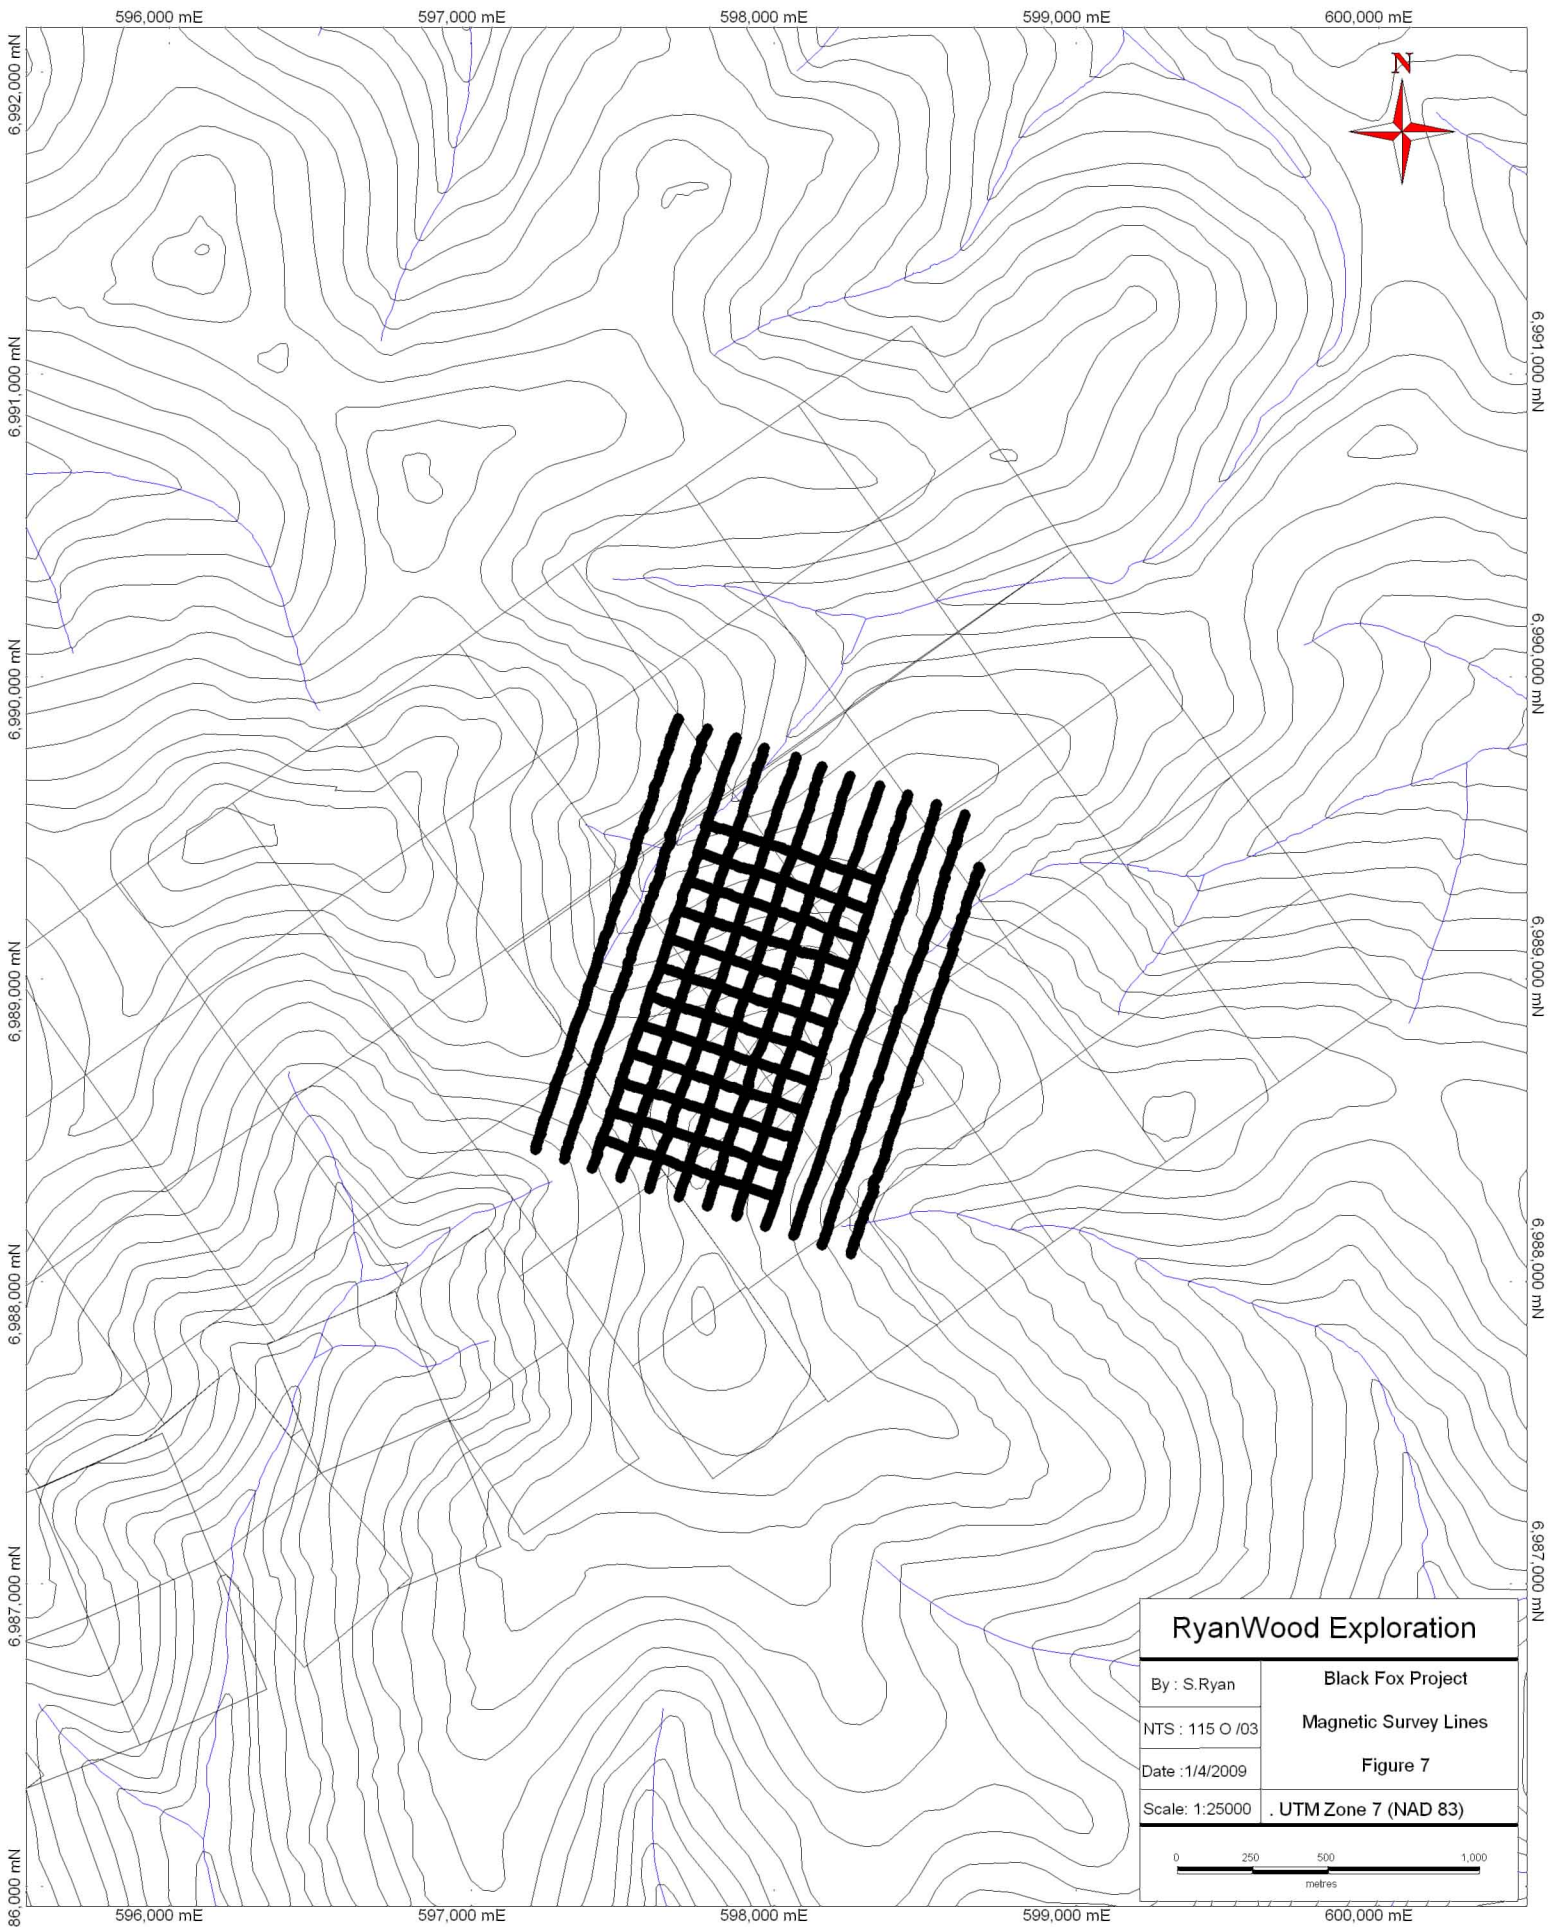


### RyanWood Exploration

By : S.Ryan	Black Fox Project
NTS : 115 O /03	Magnetic Survey Lines
Date :14/2009	Figure 7
Scale: 1:25000	. UTM Zone 7 (NAD 83)

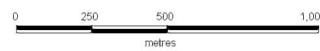

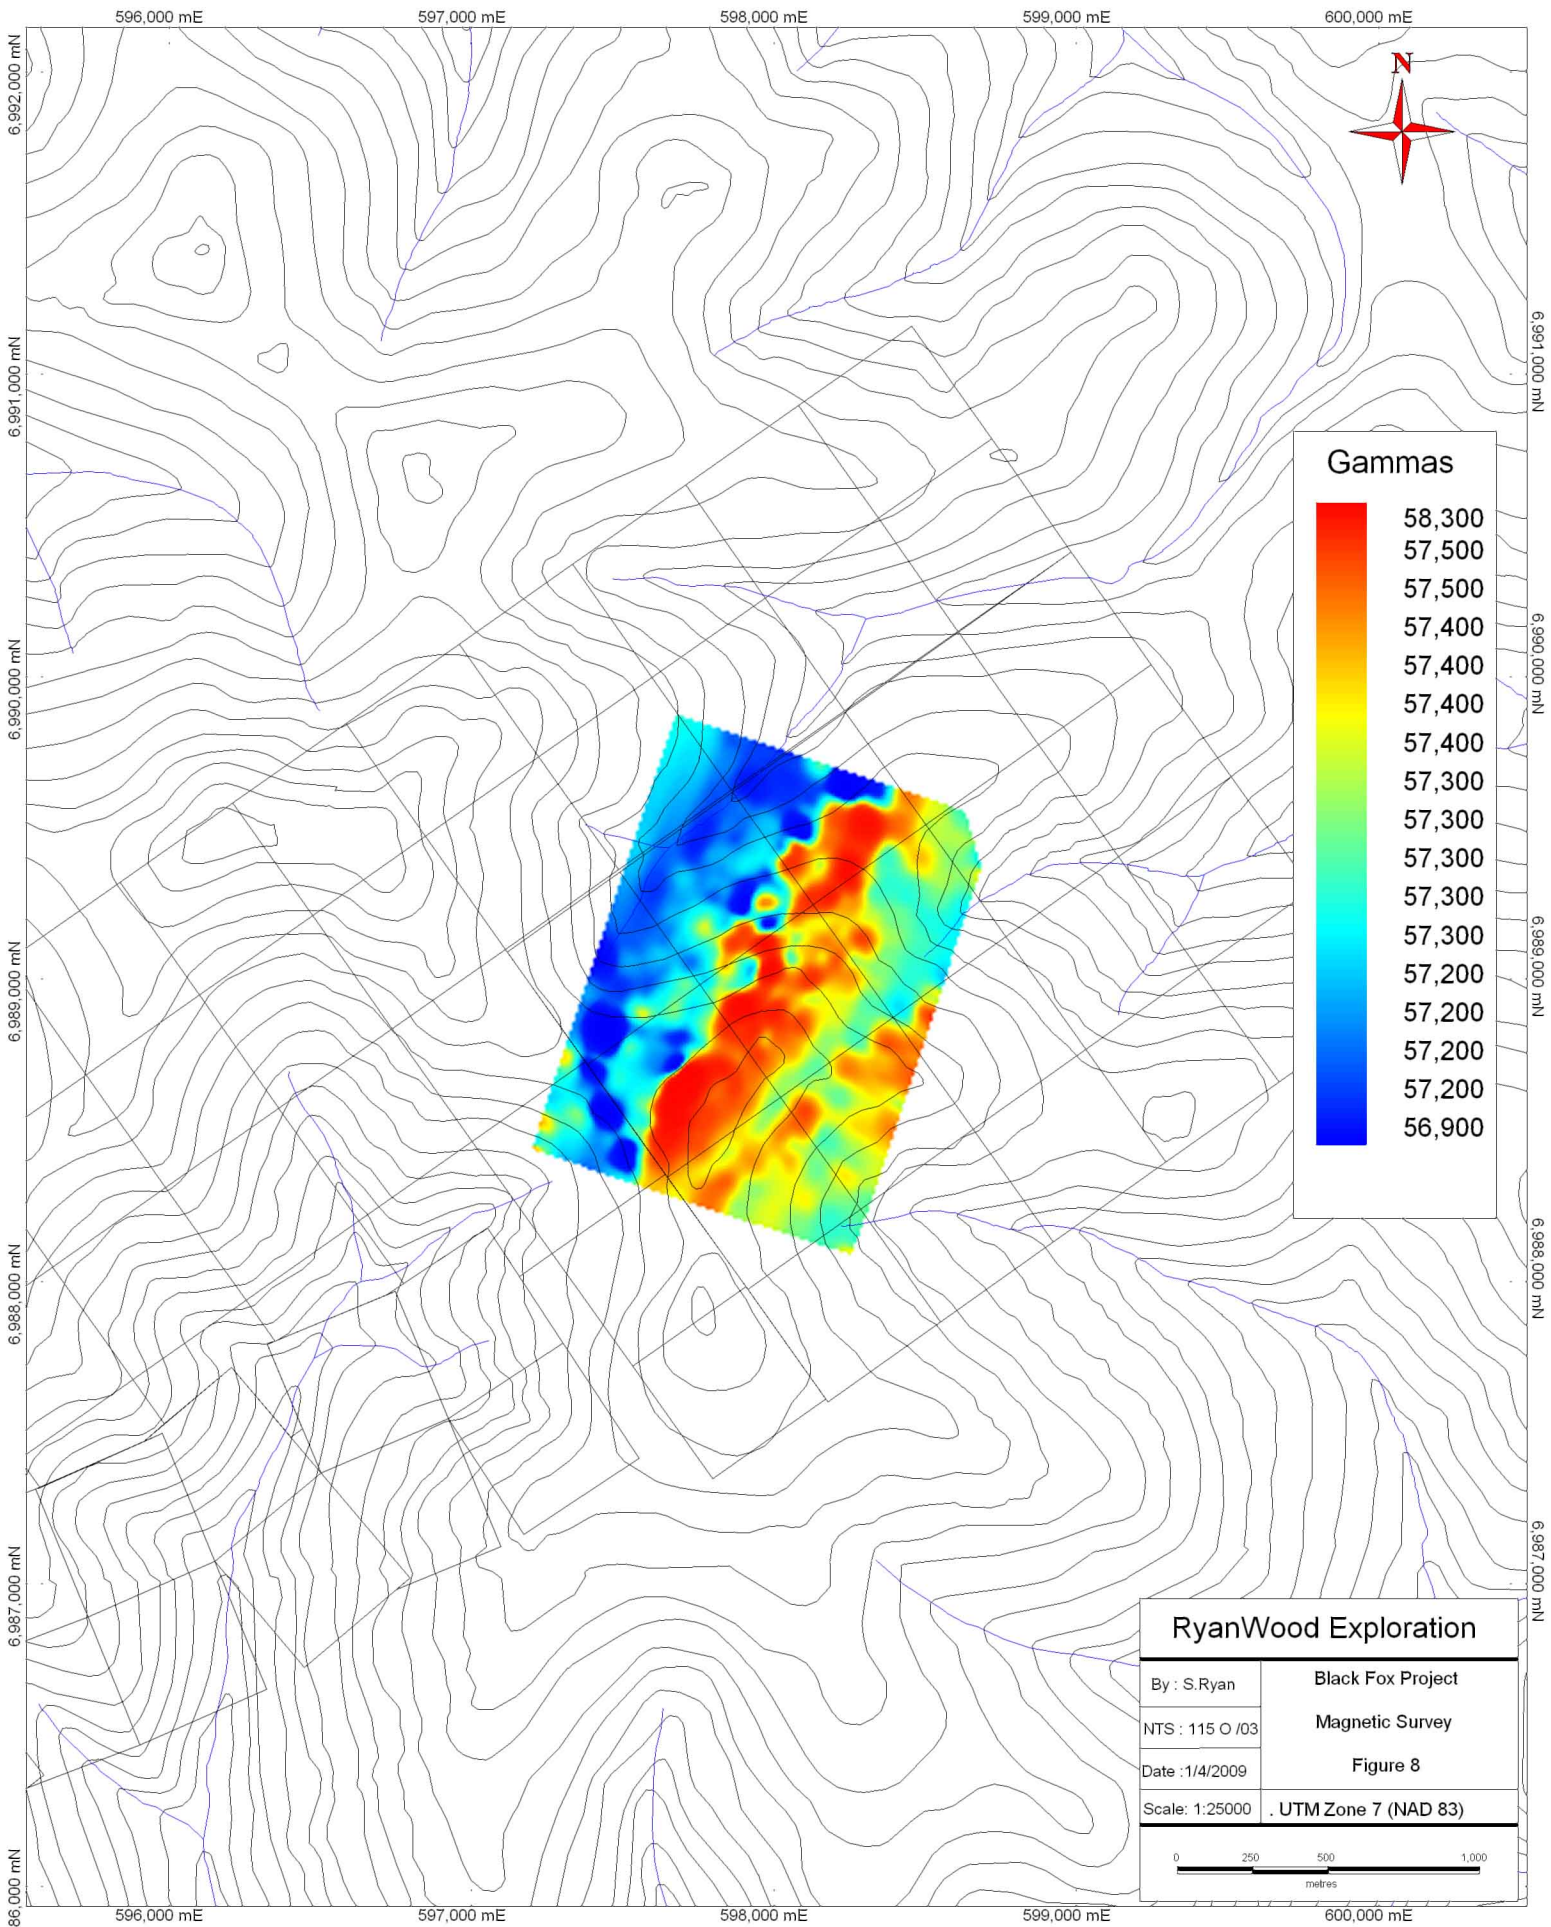


**Gammas**

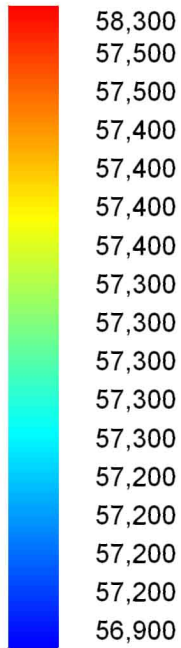

**RyanWood Exploration**

By : S.Ryan	Black Fox Project
NTS : 115 O /03	Magnetic Survey
Date :14/2009	Figure 8
Scale: 1:25000	. UTM Zone 7 (NAD 83)

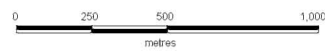

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33001	NAD 83-7V	596728	6989840	0.6	23.7	20.4	70	0.05	26.6	13.9	601	2.7	8
BFX-33002	NAD 83-7V	596719	6989815	2	30.7	19.1	60	0.1	27.3	18.6	964	2.77	9.2
BFX-33003	NAD 83-7V	596712	6989792	1.1	73.5	13.6	52	0.2	23.5	14.2	811	3.71	12.4
BFX-33004	NAD 83-7V	596704	6989768	0.9	48.9	14.2	66	0.1	27.8	13.8	741	2.61	8.4
BFX-33005	NAD 83-7V	596696	6989744	0.6	34.8	17.7	86	0.05	32.6	13.8	636	2.96	8.7
BFX-33006	NAD 83-7V	596688	6989722	1.3	42	10.2	56	0.1	23.6	12.5	639	2.32	6.3
BFX-33007	NAD 83-7V	596680	6989696	1.1	35.1	16.7	62	0.05	28.3	13.6	571	2.69	11.1
BFX-33008	NAD 83-7V	596672	6989674	1	56.2	15.9	63	0.2	29.8	14.8	754	2.91	14.8
BFX-33009	NAD 83-7V	596664	6989649	1.1	45.8	12.2	61	0.1	26.7	11.9	465	2.55	8.9
BFX-33010	NAD 83-7V	596656	6989625	1	37.7	10.7	58	0.1	25.3	11.1	429	2.66	7.4
BFX-33011	NAD 83-7V	596648	6989601	1.3	39.1	24.2	65	0.05	27.9	11.5	465	2.93	7.4
BFX-33012	NAD 83-7V	596641	6989579	0.9	19.6	6	47	0.05	18.2	6.1	219	2.24	5.5
BFX-33013	NAD 83-7V	596632	6989553	1.3	37.9	8.1	60	0.05	31.1	16.8	676	3.54	8
BFX-33014	NAD 83-7V	596624	6989531	1.1	29.6	5.6	59	0.05	38.4	16	593	3.2	9.5
BFX-33015	NAD 83-7V	596617	6989507	1	46	5.7	64	0.05	54.3	13.1	191	2.43	6.8
BFX-33016	NAD 83-7V	596609	6989483	1.3	47.4	6.4	64	0.05	107	15.9	350	3.12	6.4
BFX-33017	NAD 83-7V	596600	6989458	1.1	59.9	5.8	57	0.05	24.1	14	565	3.14	4.6
BFX-33018	NAD 83-7V	596593	6989436	0.8	41	8.3	57	0.05	32.9	15.3	378	3.04	9.3
BFX-33019	NAD 83-7V	596585	6989412	0.9	56.7	7.4	54	0.05	29.3	12.6	343	3.06	7.8
BFX-33020	NAD 83-7V	596577	6989388	1.1	16.3	7.8	22	0.05	7.6	2.9	91	1.58	4.7
BFX-33021	NAD 83-7V	596569	6989364	2.1	86.3	7.4	92	0.05	42.4	11	340	3.86	6.3
BFX-33022	NAD 83-7V	596561	6989341	1.3	44.6	8.3	66	0.1	32.5	13	362	3.18	8.5
BFX-33023	NAD 83-7V	596554	6989317	2	55.4	8.9	71	0.2	25.5	7.6	264	2.98	6.8
BFX-33024	NAD 83-7V	596546	6989293	1.8	33.5	10.7	51	0.05	22.3	7.6	291	3.13	9.2
BFX-33025	NAD 83-7V	596538	6989269	2.3	67.4	10.3	114	0.3	43	16.1	594	3.97	13.7
BFX-33026	NAD 83-7V	596529	6989246	2	42.4	7.6	67	0.3	20.8	5.5	228	2.17	8.4
BFX-33027	NAD 83-7V	596522	6989222	2.3	45.4	9.3	71	0.2	20.4	8	405	2.54	14.1
BFX-33028	NAD 83-7V	596514	6989198	1.4	46.3	6.6	56	0.2	36.2	8.3	251	2.12	6.7
BFX-33029	NAD 83-7V	596506	6989176	1.8	37.1	7.6	45	0.4	14.6	4	163	1.55	6.1
BFX-33030	NAD 83-7V	596497	6989151	2.3	52.9	10	73	0.7	34.1	9.2	401	2.78	14.1
BFX-33031	NAD 83-7V	596490	6989127	1.1	28.8	6.3	29	0.2	14.1	5.5	184	1.37	5.6
BFX-33032	NAD 83-7V	596482	6989102	1.6	49.5	9.2	72	0.3	43.8	13.9	586	2.84	18.2
BFX-33033	NAD 83-7V	596473	6989078	1.4	44.4	9.3	69	0.2	40	11.2	506	2.68	12.9
BFX-33034	NAD 83-7V	596467	6989057	1.2	37.7	8.2	65	0.2	39.5	9.3	298	2.05	13.5
BFX-33035	NAD 83-7V	596458	6989032	1.3	37.8	9.9	62	0.3	33.7	8.1	312	2.31	10.9
BFX-33036	NAD 83-7V	596450	6989009	1	33.9	11.3	64	0.2	51.2	10.5	398	2.58	10.4
BFX-33037	NAD 83-7V	596443	6988986	1.2	41.7	12.7	74	0.3	65.6	13.6	521	2.85	13
BFX-33038	NAD 83-7V	596435	6988961	1.3	44.1	13.7	74	0.2	51.6	13.5	549	2.86	13
BFX-33039	NAD 83-7V	596426	6988937	1.2	42.5	13.1	71	0.3	43.7	9.1	336	2.71	13.2
BFX-33040	NAD 83-7V	596348	6989015	0.7	36	9.3	56	0.2	25.4	11.3	377	2.52	4.5
BFX-33041	NAD 83-7V	596340	6988991	0.8	57.3	8	63	0.3	32.2	13.7	536	2.82	4.9
BFX-33042	NAD 83-7V	596332	6988968	0.7	48.8	9.5	63	0.2	30	12.7	467	2.77	5.2
BFX-33043	NAD 83-7V	596323	6988945	0.7	24.7	8.1	55	0.1	23.6	11.6	430	2.43	4.3
BFX-33047	NAD 83-7V	596759	6989299	0.8	26.2	10.1	60	0.05	27.1	11.7	363	3.05	8.3
BFX-33050	NAD 83-7V	596388	6989134	0.6	23.7	17.4	59	0.05	23.4	10.1	424	2.51	5.5

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33001	1.8	3.3	7.1	23	0.1	0.4	0.4	59	0.45	0.067	18	46	0.92	309	0.109
BFX-33002	2.2	1.6	8.4	24	0.05	0.4	0.3	55	0.57	0.128	22	43	1.01	330	0.081
BFX-33003	4	3	3.6	36	0.3	0.4	0.2	93	1.04	0.112	44	42	0.69	457	0.058
BFX-33004	3.1	2.9	5.1	36	0.2	0.4	0.2	61	0.8	0.086	31	44	0.93	416	0.077
BFX-33005	3.8	1.9	9.2	34	0.3	0.4	0.3	62	0.72	0.111	25	47	1.05	413	0.109
BFX-33006	3.6	2.8	3.4	33	0.1	0.4	0.2	55	0.75	0.091	33	41	0.77	464	0.074
BFX-33007	3.8	2.8	5	28	0.2	0.4	0.3	58	0.63	0.076	28	43	0.83	359	0.067
BFX-33008	3.9	1.8	4	33	0.2	0.7	0.3	65	0.73	0.099	51	42	0.74	499	0.067
BFX-33009	2.3	2	3.3	31	0.1	0.4	0.3	62	0.49	0.085	29	42	0.73	322	0.075
BFX-33010	1.4	3.1	3.1	25	0.2	0.3	0.3	64	0.38	0.083	16	44	0.81	293	0.086
BFX-33011	2.3	8.6	5.5	16	0.05	0.4	0.4	56	0.25	0.072	24	40	0.89	310	0.088
BFX-33012	0.6	14.3	0.6	8	0.1	0.4	0.2	59	0.08	0.044	4	35	0.4	103	0.074
BFX-33013	0.7	4.8	2.3	12	0.1	0.4	0.1	99	0.16	0.04	6	53	0.75	179	0.142
BFX-33014	0.4	2.3	1.2	10	0.05	0.4	0.1	82	0.16	0.044	6	66	0.92	103	0.065
BFX-33015	0.6	3.1	2	12	0.1	0.4	0.1	73	0.23	0.059	8	71	0.98	108	0.076
BFX-33016	1.2	2.6	3.5	14	0.05	0.3	0.1	84	0.25	0.061	15	125	1.33	274	0.125
BFX-33017	0.7	2.4	1.8	8	0.1	0.3	0.1	93	0.12	0.065	8	39	0.7	218	0.158
BFX-33018	0.6	4.2	2.4	12	0.1	0.6	0.2	71	0.15	0.034	9	40	0.68	109	0.098
BFX-33019	0.6	5.4	1.8	12	0.2	0.5	0.1	75	0.15	0.052	9	38	0.63	163	0.098
BFX-33020	0.4	2.4	0.7	7	0.2	0.4	0.2	55	0.05	0.026	6	16	0.12	73	0.063
BFX-33021	1.6	4.5	7.6	20	0.1	0.5	0.1	95	0.09	0.055	27	76	0.97	348	0.165
BFX-33022	1	3.1	3.5	17	0.2	0.5	0.1	75	0.16	0.042	13	48	0.73	215	0.104
BFX-33023	1	1.2	3	13	0.2	0.5	0.2	110	0.1	0.054	15	51	0.88	272	0.141
BFX-33024	0.7	3.3	2	16	0.2	0.7	0.2	92	0.14	0.049	11	41	0.52	158	0.099
BFX-33025	1.8	4	4	21	0.5	0.8	0.2	91	0.17	0.092	20	61	0.87	428	0.113
BFX-33026	1.1	4.1	1	18	0.4	0.5	0.2	65	0.13	0.052	12	31	0.53	284	0.084
BFX-33027	1.2	1.1	0.9	14	0.4	0.6	0.2	64	0.11	0.075	13	30	0.46	195	0.07
BFX-33028	1.2	6.7	0.4	12	0.3	0.4	0.2	57	0.1	0.073	13	50	0.51	232	0.06
BFX-33029	1.3	5.1	0.2	13	0.5	0.3	0.2	33	0.1	0.079	11	20	0.2	189	0.025
BFX-33030	2	5.7	0.8	20	0.7	0.6	0.2	65	0.19	0.104	15	46	0.54	354	0.056
BFX-33031	0.8	2.8	0.4	11	0.6	0.3	0.1	41	0.1	0.041	9	24	0.22	182	0.053
BFX-33032	1.3	5.7	1.2	17	0.3	0.7	0.2	71	0.19	0.07	13	56	0.73	266	0.079
BFX-33033	1	3.2	1	18	0.2	0.5	0.2	72	0.26	0.068	10	53	0.72	258	0.071
BFX-33034	0.9	1.8	1.4	14	0.3	0.5	0.1	55	0.22	0.069	11	46	0.66	248	0.083
BFX-33035	1.3	5.4	1.3	21	0.3	0.5	0.2	61	0.28	0.069	13	43	0.68	358	0.077
BFX-33036	1.6	4.4	2.2	22	0.2	0.3	0.2	65	0.33	0.067	15	61	0.89	357	0.088
BFX-33037	2	5.1	2.9	25	0.2	0.4	0.2	69	0.4	0.072	21	71	1.11	393	0.098
BFX-33038	2	5.8	2.5	23	0.2	0.5	0.2	66	0.35	0.076	20	56	0.96	382	0.083
BFX-33039	2.4	6	2.3	22	0.1	0.5	0.2	63	0.31	0.072	22	48	0.82	335	0.084
BFX-33040	3.9	3.2	2.1	24	0.05	0.2	0.2	63	0.46	0.086	30	43	0.95	441	0.084
BFX-33041	6	3.4	2.3	26	0.1	0.3	0.1	71	0.5	0.088	38	54	1	519	0.096
BFX-33042	3.2	2.7	2.9	24	0.1	0.3	0.1	72	0.48	0.076	22	48	1.01	452	0.104
BFX-33043	2.3	2.8	2	21	0.1	0.3	0.1	63	0.35	0.076	17	45	0.88	452	0.096
BFX-33047	0.9	4.2	4.2	14	0.1	0.5	0.1	60	0.17	0.045	14	37	0.61	88	0.104
BFX-33050	3.5	6.1	6.1	20	0.05	0.4	0.3	50	0.36	0.074	28	33	0.88	259	0.091

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33001	3	1.53	0.014	0.16	0.1	0.03	3.7	0.2	0.07	7	0.7	1DX15	VAN08007918
BFX-33002	2	1.42	0.015	0.26	0.1	0.03	3.9	0.2	0.07	6	0.6	1DX15	VAN08007918
BFX-33003	3	1.42	0.023	0.09	0.05	0.07	5.3	0.2	0.23	5	1.1	1DX15	VAN08007918
BFX-33004	3	1.53	0.022	0.12	0.05	0.04	4.7	0.2	0.09	6	0.7	1DX15	VAN08007918
BFX-33005	3	1.6	0.021	0.24	0.1	0.04	5.4	0.2	0.06	6	0.6	1DX15	VAN08007918
BFX-33006	3	1.33	0.029	0.14	0.1	0.04	4.2	0.2	0.09	5	0.25	1DX15	VAN08007918
BFX-33007	2	1.37	0.019	0.12	0.05	0.06	4.3	0.2	0.07	6	0.7	1DX15	VAN08007918
BFX-33008	4	1.43	0.029	0.17	0.05	0.11	5.8	0.2	0.12	6	1	1DX15	VAN08007918
BFX-33009	2	1.39	0.031	0.11	0.05	0.04	4.2	0.2	0.1	6	0.8	1DX15	VAN08007918
BFX-33010	2	1.56	0.028	0.09	0.05	0.05	3.7	0.2	0.08	6	0.6	1DX15	VAN08007918
BFX-33011	2	1.51	0.011	0.17	0.05	0.04	3.4	0.3	0.05	6	0.25	1DX15	VAN08007918
BFX-33012	0.5	1.03	0.012	0.07	0.1	0.05	1.8	0.05	0.06	5	0.25	1DX15	VAN08007918
BFX-33013	0.5	1.47	0.009	0.14	0.1	0.03	3.1	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33014	0.5	1.43	0.01	0.07	0.05	0.04	2.9	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33015	1	1.59	0.011	0.07	0.1	0.04	3.3	0.1	0.025	5	0.6	1DX15	VAN08007918
BFX-33016	1	1.92	0.01	0.24	0.1	0.02	4	0.2	0.025	7	0.7	1DX15	VAN08007918
BFX-33017	0.5	1.43	0.013	0.28	0.05	0.02	3.8	0.1	0.05	8	0.6	1DX15	VAN08007918
BFX-33018	1	2.06	0.011	0.08	0.1	0.03	3.4	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33019	0.5	1.54	0.011	0.09	0.1	0.03	2.9	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33020	0.5	0.76	0.01	0.03	0.05	0.03	1	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33021	0.5	1.76	0.019	0.51	0.05	0.01	5.3	0.4	0.25	7	0.9	1DX15	VAN08007918
BFX-33022	2	2.07	0.013	0.16	0.2	0.02	3.3	0.2	0.08	5	0.6	1DX15	VAN08007918
BFX-33023	1	1.52	0.012	0.3	0.1	0.02	3.7	0.2	0.11	8	0.8	1DX15	VAN08007918
BFX-33024	1	1.2	0.009	0.1	0.2	0.02	2.4	0.1	0.07	7	0.25	1DX15	VAN08007918
BFX-33025	1	2.11	0.013	0.33	0.2	0.03	3.6	0.2	0.12	7	1.4	1DX15	VAN08007918
BFX-33026	0.5	1.15	0.018	0.21	0.1	0.04	1.8	0.1	0.1	5	0.6	1DX15	VAN08007918
BFX-33027	1	1.13	0.013	0.17	0.05	0.04	1.8	0.1	0.09	5	1	1DX15	VAN08007918
BFX-33028	2	1.26	0.014	0.12	0.05	0.05	2	0.1	0.09	5	0.25	1DX15	VAN08007918
BFX-33029	1	0.73	0.012	0.09	0.05	0.06	0.8	0.1	0.1	3	0.6	1DX15	VAN08007918
BFX-33030	1	1.57	0.013	0.12	0.1	0.1	2.5	0.2	0.12	6	1	1DX15	VAN08007918
BFX-33031	2	0.72	0.012	0.05	0.1	0.03	1.2	0.1	0.025	4	0.25	1DX15	VAN08007918
BFX-33032	1	1.68	0.012	0.09	0.2	0.05	2.9	0.2	0.05	6	0.25	1DX15	VAN08007918
BFX-33033	1	1.4	0.011	0.09	0.1	0.04	2.7	0.2	0.06	6	0.25	1DX15	VAN08007918
BFX-33034	0.5	1.4	0.011	0.1	0.1	0.05	2.9	0.2	0.05	5	1	1DX15	VAN08007918
BFX-33035	1	1.39	0.014	0.1	0.1	0.06	2.7	0.2	0.06	6	0.25	1DX15	VAN08007918
BFX-33036	2	1.58	0.013	0.11	0.1	0.04	3.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33037	1	1.71	0.016	0.14	0.1	0.05	3.9	0.3	0.05	7	0.25	1DX15	VAN08007918
BFX-33038	1	1.64	0.013	0.13	0.1	0.05	3.6	0.2	0.07	6	0.25	1DX15	VAN08007918
BFX-33039	0.5	1.56	0.013	0.11	0.1	0.06	3.6	0.2	0.05	6	0.25	1DX15	VAN08007918
BFX-33040	1	1.68	0.015	0.1	0.1	0.02	3	0.2	0.06	5	0.25	1DX15	VAN08007918
BFX-33041	1	1.71	0.014	0.15	0.1	0.04	4.4	0.2	0.07	5	0.25	1DX15	VAN08007918
BFX-33042	0.5	1.66	0.013	0.19	0.1	0.03	3.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33043	2	1.55	0.015	0.14	0.2	0.03	2.8	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33047	0.5	1.95	0.013	0.13	0.1	0.03	3	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33050	2	1.73	0.018	0.09	0.1	0.02	3.1	0.3	0.025	5	0.25	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33052	NAD 83-7V	596410	6989205	0.8	16.6	18.3	55	0.1	22.3	9.7	453	2.42	4.8
BFX-33053	NAD 83-7V	596403	6989182	0.7	22.3	19.3	60	0.05	27	10.2	395	2.64	5.8
BFX-33054	NAD 83-7V	596395	6989158	0.6	17.6	19.9	56	0.1	23.6	8.9	502	2.36	4.8
BFX-33055	NAD 83-7V	596390	6989133	0.6	20.6	18.6	61	0.05	24.3	10	430	2.53	5.6
BFX-33056	NAD 83-7V	596379	6989111	0.6	20.7	16.1	49	0.1	20.8	8.9	474	2.18	4.5
BFX-33057	NAD 83-7V	596372	6989086	0.8	21.2	15.2	58	0.1	21.2	11.4	741	2.52	4.9
BFX-33058	NAD 83-7V	596363	6989063	0.6	21	11.6	58	0.05	23.9	11.1	399	2.53	5.5
BFX-33059	NAD 83-7V	596355	6989040	0.8	21.7	10.8	53	0.05	22.4	10.8	504	2.38	4.4
BFX-33060	NAD 83-7V	596821	6989807	0.8	99.7	4.7	59	0.05	36.6	18.5	463	3.23	8.2
BFX-33061	NAD 83-7V	596814	6989784	0.7	94.7	5.5	72	0.1	38.4	18.2	598	3.21	7.8
BFX-33062	NAD 83-7V	596806	6989760	0.9	112	6.1	79	0.1	46.4	21.3	897	4.06	9.1
BFX-33063	NAD 83-7V	596790	6989713	1.9	32.9	7.5	44	0.05	17	7.6	195	2.44	8.3
BFX-33064	NAD 83-7V	596782	6989689	1.3	75.3	6.4	50	0.05	30.8	15	306	3.32	16
BFX-33065	NAD 83-7V	596774	6989665	1.5	49.6	5.9	65	0.05	24.2	18	477	3.44	8.7
BFX-33066	NAD 83-7V	596766	6989642	1.7	74.3	6	104	0.05	23.2	16.8	412	3.95	8.3
BFX-33067	NAD 83-7V	596766	6989641	1.1	95	5.2	128	0.05	31.1	27	427	4.48	9.8
BFX-33068	NAD 83-7V	596759	6989616	1.1	107.8	7.6	58	0.05	30	22.6	436	3.2	8.3
BFX-33069	NAD 83-7V	596751	6989594	1.5	113.1	5.4	73	0.05	70.3	39.5	506	4.48	9.4
BFX-33070	NAD 83-7V	596742	6989570	1.1	97	6.3	64	0.1	97.6	22.5	327	3.43	12.7
BFX-33071	NAD 83-7V	596734	6989546	1.6	25.5	16.2	62	0.1	24.7	9.1	365	3.64	17.2
BFX-33072	NAD 83-7V	596726	6989522	2.5	73.7	19.7	136	0.4	64.3	18.7	852	4.41	109.7
BFX-33073	NAD 83-7V	596719	6989499	3.4	52.2	23.8	131	0.4	43.3	17.8	656	4.12	237.8
BFX-33074	NAD 83-7V	596710	6989475	2.2	27.8	17.4	83	0.1	27.3	6.9	273	2.99	39.2
BFX-33075	NAD 83-7V	596703	6989451	2.1	62.4	34.6	141	0.3	35	14.9	420	3.99	30.9
BFX-33076	NAD 83-7V	596695	6989427	9.2	93.1	64.5	226	0.8	81.1	15.9	450	3.81	87.3
BFX-33077	NAD 83-7V	596686	6989403	2.1	44	14.2	107	0.2	45.2	14.2	558	3.9	38.7
BFX-33078	NAD 83-7V	596679	6989379	2.6	29.2	43.5	101	0.2	47	13.5	643	3.64	47.6
BFX-33079	NAD 83-7V	596672	6989356	1.1	33.2	12.2	71	0.05	25.1	10.8	371	3.47	8.3
BFX-33080	NAD 83-7V	596663	6989333	1.5	36.3	24.2	74	0.05	33.9	12	436	3.39	16.8
BFX-33081	NAD 83-7V	596655	6989308	1.1	27.4	17.8	59	0.05	34.4	14.5	448	3.07	10.4
BFX-33082	NAD 83-7V	596648	6989284	1.5	23.1	18.1	44	0.05	18.5	7.1	209	3.12	8.6
BFX-33083	NAD 83-7V	596640	6989261	0.9	28.4	14.9	68	0.05	38.3	17.6	537	3.22	10.6
BFX-33084	NAD 83-7V	596632	6989238	1.1	27.9	18.9	76	0.05	33	15.3	487	3.5	12.9
BFX-33085	NAD 83-7V	596623	6989213	1.4	29.7	19.6	71	0.2	32.4	13.1	471	3.27	29.9
BFX-33086	NAD 83-7V	596615	6989190	1.1	22.1	10.5	53	0.05	24	8.1	271	2.6	9.3
BFX-33087	NAD 83-7V	596608	6989167	1	32.3	15.3	68	0.05	35.9	14.6	461	3.2	7.8
BFX-33088	NAD 83-7V	596601	6989143	1.3	18.9	12.9	54	0.05	34.5	9.4	268	3.21	8.4
BFX-33089	NAD 83-7V	596594	6989119	1.4	23.9	14	60	0.05	29.4	10.1	321	3.08	7.2
BFX-33090	NAD 83-7V	596585	6989095	2.2	31.9	15.7	71	0.2	28.9	10.9	372	2.63	6.8
BFX-33091	NAD 83-7V	596575	6989072	1.5	28.2	14.6	63	0.1	28	11	373	3.06	9.3
BFX-33092	NAD 83-7V	596567	6989047	1.4	26.5	12.6	61	0.05	27.1	11.2	364	2.97	8.4
BFX-33093	NAD 83-7V	596559	6989024	1.6	26.4	13.2	67	0.05	23.7	9.6	327	3.02	9.9
BFX-33094	NAD 83-7V	596552	6989000	1.5	30.5	13.1	73	0.05	29.2	13.5	429	3.21	11.5
BFX-33095	NAD 83-7V	596544	6988977	1.4	24.1	11.3	57	0.05	23.7	9	289	2.7	8.7
BFX-33096	NAD 83-7V	596537	6988954	1.4	27.6	11.6	64	0.1	27.5	10	312	3	9.7

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33052	2.8	2.6	5.7	28	0.05	0.3	0.3	54	0.47	0.073	27	34	0.89	336	0.091
BFX-33053	3.4	3.1	7.6	26	0.1	0.3	0.3	54	0.42	0.06	31	35	0.99	282	0.094
BFX-33054	3.7	4.3	8	27	0.05	0.4	0.4	45	0.58	0.06	37	30	0.97	279	0.077
BFX-33055	3.3	3.3	8.1	24	0.05	0.4	0.4	53	0.43	0.068	27	34	0.95	251	0.097
BFX-33056	3.9	2.6	4.8	26	0.05	0.3	0.3	47	0.46	0.081	34	29	0.76	312	0.066
BFX-33057	3.3	2.4	6.2	27	0.1	0.3	0.2	55	0.5	0.073	29	33	0.77	317	0.072
BFX-33058	2.1	2.4	5.2	26	0.05	0.3	0.2	60	0.46	0.061	24	38	0.83	357	0.097
BFX-33059	3	2.4	3.8	27	0.05	0.3	0.2	55	0.51	0.078	34	37	0.81	426	0.083
BFX-33060	0.5	1.8	1.7	20	0.1	0.4	0.05	89	0.39	0.05	8	62	1.09	199	0.094
BFX-33061	1.6	2.4	4	29	0.1	0.4	0.1	88	0.62	0.06	19	57	1.14	296	0.108
BFX-33062	0.9	2.2	2.5	29	0.2	0.4	0.05	117	0.57	0.074	14	69	1.54	375	0.081
BFX-33063	0.5	4.3	1	15	0.2	0.7	0.2	84	0.2	0.051	7	32	0.31	87	0.067
BFX-33064	0.6	2.6	1	13	0.1	0.5	0.1	76	0.16	0.05	7	44	0.52	57	0.06
BFX-33065	0.4	1.4	0.6	12	0.1	0.4	0.1	90	0.19	0.06	6	42	0.75	60	0.062
BFX-33066	0.5	1.6	0.5	12	0.2	0.5	0.1	107	0.2	0.065	6	43	0.75	74	0.079
BFX-33067	0.4	2.6	1.1	12	0.3	0.4	0.1	87	0.22	0.06	6	43	0.87	60	0.087
BFX-33068	0.7	3.1	2.1	14	0.1	0.6	0.1	66	0.19	0.048	10	36	0.61	68	0.067
BFX-33069	0.5	1.6	1.7	11	0.2	0.4	0.05	95	0.3	0.063	7	80	1.29	87	0.124
BFX-33070	0.7	1.9	2.3	16	0.2	0.3	0.05	98	0.31	0.053	8	124	1.42	335	0.139
BFX-33071	1	4.3	3.6	17	0.2	0.8	0.2	75	0.15	0.043	14	41	0.54	106	0.12
BFX-33072	1.7	7	8.3	20	0.4	2.4	0.3	52	0.16	0.043	29	34	0.43	178	0.051
BFX-33073	1.7	10.2	4.6	24	0.4	4.5	0.3	63	0.25	0.081	19	36	0.39	277	0.037
BFX-33074	1	3.2	1.4	18	0.3	1.8	0.2	68	0.11	0.039	14	26	0.21	129	0.046
BFX-33075	1.9	3	8.2	28	0.4	1	0.3	88	0.84	0.179	35	53	1.99	329	0.101
BFX-33076	2.6	19.5	2.5	52	2.2	4.4	0.4	45	0.11	0.085	23	22	0.19	320	0.018
BFX-33077	1.4	9	3.2	19	0.2	5.7	0.2	60	0.16	0.058	23	37	0.41	175	0.047
BFX-33078	1.4	7	3.8	27	0.2	1.3	0.4	60	0.26	0.08	21	37	0.45	193	0.057
BFX-33079	1.5	2.9	7.2	31	0.1	0.4	0.2	56	0.16	0.047	34	36	0.69	124	0.094
BFX-33080	1.7	5.7	2.4	24	0.2	0.7	0.2	69	0.19	0.056	31	41	0.52	141	0.081
BFX-33081	1	7.6	5.1	22	0.2	0.5	0.2	62	0.24	0.046	18	38	0.57	144	0.102
BFX-33082	1	7.6	4.1	15	0.1	0.5	0.2	75	0.12	0.038	13	32	0.35	79	0.107
BFX-33083	1.2	8.1	8.4	26	0.1	0.5	0.2	59	0.34	0.062	22	40	0.7	163	0.12
BFX-33084	1.3	5.2	8.5	26	0.2	0.4	0.2	60	0.28	0.055	26	42	0.7	168	0.116
BFX-33085	1.8	4.6	6.6	24	0.2	0.5	0.2	60	0.23	0.057	38	38	0.5	148	0.094
BFX-33086	1.1	4.7	4.5	17	0.05	0.3	0.2	51	0.18	0.044	24	35	0.57	114	0.114
BFX-33087	1.4	3.6	8.7	21	0.1	0.4	0.2	59	0.27	0.043	29	40	0.67	137	0.115
BFX-33088	0.8	2.4	4.3	14	0.1	0.3	0.2	72	0.15	0.033	17	54	0.68	100	0.128
BFX-33089	1	15.6	5.4	16	0.1	0.3	0.2	62	0.17	0.038	17	44	0.66	104	0.113
BFX-33090	1.8	6.8	5	16	0.05	0.3	0.2	50	0.17	0.05	44	36	0.59	163	0.063
BFX-33091	1.4	4.2	5.1	15	0.05	0.4	0.2	59	0.16	0.043	28	39	0.6	145	0.076
BFX-33092	1.3	5.1	4.9	17	0.05	0.4	0.2	57	0.18	0.044	24	39	0.59	135	0.082
BFX-33093	1.3	3.1	6.9	18	0.1	0.3	0.2	57	0.16	0.037	26	38	0.65	132	0.11
BFX-33094	1.5	4.4	7.7	18	0.2	0.3	0.2	54	0.18	0.052	26	39	0.69	136	0.104
BFX-33095	1.3	3.7	4.6	16	0.1	0.3	0.2	52	0.16	0.044	20	35	0.52	114	0.087
BFX-33096	1.6	8.5	5.7	17	0.1	0.3	0.2	62	0.18	0.04	23	38	0.6	140	0.092

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33052	2	1.58	0.017	0.12	0.2	0.03	3.5	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33053	1	1.75	0.014	0.12	0.1	0.02	3.4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33054	2	1.58	0.012	0.11	0.05	0.02	3.1	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33055	2	1.79	0.013	0.11	0.2	0.02	3.4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33056	2	1.54	0.016	0.09	0.1	0.03	3	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33057	1	1.54	0.014	0.11	0.1	0.03	3.3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33058	1	1.61	0.012	0.11	0.1	0.02	3.2	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33059	1	1.58	0.018	0.12	0.1	0.03	2.9	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33060	2	1.84	0.021	0.08	0.1	0.04	4.1	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33061	2	1.78	0.025	0.16	0.1	0.03	6.4	0.1	0.025	5	0.7	1DX15	VAN08007918
BFX-33062	2	2.12	0.023	0.13	0.1	0.03	9.5	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33063	1	1.01	0.015	0.04	0.1	0.05	2.3	0.05	0.025	6	0.5	1DX15	VAN08007918
BFX-33064	1	1.53	0.015	0.05	0.05	0.05	2.8	0.05	0.025	6	0.5	1DX15	VAN08007918
BFX-33065	2	1.56	0.022	0.05	0.05	0.06	3	0.05	0.025	6	0.5	1DX15	VAN08007918
BFX-33066	1	1.52	0.02	0.06	0.05	0.06	3.1	0.05	0.025	7	0.7	1DX15	VAN08007918
BFX-33067	2	1.68	0.019	0.06	0.05	0.05	3.2	0.05	0.025	6	1.4	1DX15	VAN08007918
BFX-33068	2	1.87	0.017	0.05	0.2	0.04	3.6	0.05	0.025	5	0.6	1DX15	VAN08007918
BFX-33069	1	1.85	0.026	0.12	0.05	0.03	4.3	0.1	0.025	6	1.4	1DX15	VAN08007918
BFX-33070	1	1.97	0.019	0.29	0.05	0.04	4.8	0.2	0.06	7	0.7	1DX15	VAN08007918
BFX-33071	2	1.58	0.011	0.12	0.1	0.05	3.3	0.2	0.025	7	0.5	1DX15	VAN08007918
BFX-33072	3	1.24	0.01	0.12	0.1	0.06	4.4	0.3	0.025	3	1	1DX15	VAN08007918
BFX-33073	2	1.52	0.009	0.07	0.2	0.15	4	0.4	0.025	4	1.7	1DX15	VAN08007918
BFX-33074	2	1.15	0.009	0.07	0.1	0.13	2.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33075	4	2.06	0.01	0.18	0.05	0.12	6.1	0.4	0.025	8	0.9	1DX15	VAN08007918
BFX-33076	2	0.94	0.008	0.1	0.05	0.14	2.7	0.2	0.025	3	2.4	1DX15	VAN08007918
BFX-33077	4	1.69	0.009	0.1	0.05	0.05	3.4	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33078	2	1.66	0.016	0.1	0.1	0.08	3.4	0.2	0.08	4	0.25	1DX15	VAN08007918
BFX-33079	1	2.04	0.024	0.23	0.1	0.03	3.1	0.2	0.17	5	0.25	1DX15	VAN08007918
BFX-33080	2	1.79	0.013	0.17	0.05	0.04	3	0.1	0.07	6	0.25	1DX15	VAN08007918
BFX-33081	2	1.86	0.015	0.12	0.1	0.03	3.4	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33082	1	1.51	0.009	0.08	0.2	0.03	2.5	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33083	2	1.93	0.016	0.19	0.1	0.02	3.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33084	2	1.87	0.012	0.25	0.1	0.02	3.5	0.3	0.025	6	0.25	1DX15	VAN08007918
BFX-33085	1	1.64	0.012	0.18	0.05	0.03	3.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33086	0.5	1.42	0.017	0.25	0.1	0.02	2.5	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33087	2	1.8	0.013	0.2	0.2	0.01	3.1	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33088	1	1.38	0.008	0.15	0.2	0.03	2.6	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33089	1	1.39	0.008	0.19	0.2	0.02	2.6	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33090	0.5	1.47	0.01	0.14	0.05	0.04	2.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33091	1	1.7	0.007	0.11	0.05	0.03	2.9	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33092	0.5	1.7	0.009	0.14	0.1	0.03	2.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33093	0.5	1.64	0.009	0.23	0.1	0.03	2.8	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33094	0.5	1.68	0.009	0.23	0.1	0.02	2.9	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33095	1	1.47	0.01	0.17	0.05	0.03	2.5	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33096	1	1.65	0.008	0.14	0.1	0.02	3.2	0.2	0.025	6	0.25	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33097	NAD 83-7V	596530	6988929	1.5	27	12.9	69	0.05	25.3	9.8	291	3.06	8.5
BFX-33098	NAD 83-7V	596521	6988905	1.4	28.4	12.4	66	0.2	27.2	10.9	367	2.83	8.4
BFX-33101	NAD 83-7V	597376	6987988	1.2	40.9	8.9	68	0.1	20.7	16	546	2.98	5.7
BFX-33102	NAD 83-7V	597382	6988011	1.9	36.6	9.8	68	0.2	19.2	13.7	535	2.9	6.9
BFX-33103	NAD 83-7V	597390	6988035	1.2	33.6	10.1	70	0.2	18.7	11.1	336	2.6	7.7
BFX-33104	NAD 83-7V	597407	6988083	0.9	58.7	8.5	71	0.2	20.7	23.3	540	3.29	6.7
BFX-33105	NAD 83-7V	597415	6988107	1.2	33.2	9.4	74	0.2	20.6	12.9	247	3.35	7.4
BFX-33106	NAD 83-7V	597422	6988131	1.5	39.8	12	93	0.2	23.5	21.4	742	3.56	8.5
BFX-33107	NAD 83-7V	597431	6988153	1.6	35.3	9.8	68	0.2	18.4	14.7	625	3.24	8
BFX-33108	NAD 83-7V	597438	6988178	1.5	47.7	14.7	85	0.1	18.7	15.6	485	3.46	7.1
BFX-33109	NAD 83-7V	597455	6988225	1.4	35.2	14.4	76	0.05	21.2	14.1	398	3.23	7.9
BFX-33110	NAD 83-7V	597478	6988296	0.8	42.6	8.5	62	0.1	18	7.8	164	2.51	5.6
BFX-33111	NAD 83-7V	597399	6988375	0.8	74.6	5.4	87	0.2	24.4	20.7	584	4.93	3.1
BFX-33112	NAD 83-7V	597400	6988376	0.8	65.6	3.9	87	0.05	34.7	26	709	5.78	2.6
BFX-33114	NAD 83-7V	597391	6988353	1	77.4	8.5	116	0.1	25.2	21.6	663	4.72	4.6
BFX-33115	NAD 83-7V	597383	6988329	1	209.9	6.7	199	0.2	45	40.3	1008	7.58	3.1
BFX-33116	NAD 83-7V	597375	6988305	1.2	42.5	10	81	0.3	16.1	13.9	354	2.56	4.5
BFX-33117	NAD 83-7V	597352	6988233	1.1	46.5	12.4	60	0.2	18.9	10.5	171	2.47	5.4
BFX-33118	NAD 83-7V	597343	6988211	0.7	38.6	16.4	60	0.1	21.4	10.9	194	2.34	4.1
BFX-33119	NAD 83-7V	597336	6988187	0.5	74.6	13.2	62	0.2	21.2	25.7	206	2.3	4.2
BFX-33120	NAD 83-7V	597328	6988162	0.8	88	9.9	60	0.2	14.7	12.1	179	3.66	4.1
BFX-33121	NAD 83-7V	597319	6988140	1.3	42.8	8.9	75	0.2	19.2	18.8	748	3.2	6.9
BFX-33122	NAD 83-7V	597193	6988076	0.8	24.2	9.2	58	0.1	14.1	8.2	147	2.32	4.1
BFX-33123	NAD 83-7V	597200	6988098	1.2	25.9	8	60	0.1	14.5	8.6	185	2.51	5
BFX-33124	NAD 83-7V	597223	6988170	0.8	47.2	8	58	0.1	16.8	16.4	205	2.9	3.4
BFX-33125	NAD 83-7V	597231	6988194	1	65.9	15.4	86	0.2	21.4	24.9	337	3.55	5.3
BFX-33126	NAD 83-7V	597256	6988264	1.1	37.7	11.8	90	0.05	23.4	12.3	284	3.52	6.6
BFX-33127	NAD 83-7V	597280	6988337	0.6	54.1	10	85	0.05	20.3	20.5	809	3.28	4.1
BFX-33128	NAD 83-7V	597296	6988383	1.2	27.6	30.7	71	0.05	22.5	11.5	469	3.01	6.4
BFX-33141	NAD 83-7V	596514	6989514	0.9	13.5	12.4	56	0.05	29.9	15.2	987	2.62	3.3
BFX-33142	NAD 83-7V	596505	6989490	0.7	20.1	30.6	61	0.05	26.9	14.6	630	2.75	3.8
BFX-33143	NAD 83-7V	596498	6989467	0.8	26.7	11.5	49	0.05	26.5	11.2	328	2.84	6.4
BFX-33144	NAD 83-7V	596490	6989443	0.9	19.5	10.7	54	0.05	27.8	11.6	388	2.86	8.7
BFX-33145	NAD 83-7V	596482	6989419	0.8	19.5	16.4	54	0.05	30.8	16.4	524	3.28	7.9
BFX-33146	NAD 83-7V	596474	6989396	0.6	19.3	18.2	56	0.05	31.8	12.5	466	3	6.3
BFX-33147	NAD 83-7V	596467	6989371	1.2	15.1	17.4	40	0.1	18.7	6.6	287	2.53	4.2
BFX-33148	NAD 83-7V	596459	6989348	0.6	22.7	17.5	58	0.05	32	15.2	791	3.05	4.4
BFX-33149	NAD 83-7V	596450	6989325	0.8	19.4	21.6	50	0.05	26.5	10.8	446	2.66	6.6
BFX-33150	NAD 83-7V	596443	6989301	0.8	19.4	15.3	51	0.05	26.6	11.6	419	2.59	5.1
BFX-33162	NAD 83-7V	597114	6988470	0.9	33.7	11.1	72	0.05	22	15.1	630	3.42	7
BFX-33163	NAD 83-7V	597107	6988449	0.9	31.1	10.3	68	0.05	22.6	13	496	3.34	8
BFX-33164	NAD 83-7V	597099	6988424	1.1	32.3	10.2	64	0.1	21.3	14.5	681	3.05	7.3
BFX-33165	NAD 83-7V	597091	6988400	0.9	30.7	9.5	66	0.1	20.7	12.3	486	3.19	6.7
BFX-33166	NAD 83-7V	597083	6988378	0.9	30.2	9	67	0.05	21.3	14.2	591	3.29	7.6
BFX-33167	NAD 83-7V	597075	6988353	0.9	31.9	8.7	72	0.05	22.7	14.1	637	3.36	7.1

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33097	1.5	3.8	6	16	0.1	0.3	0.2	60	0.16	0.038	21	38	0.62	111	0.103
BFX-33098	1.9	7.4	5.4	18	0.05	0.3	0.2	56	0.16	0.047	31	40	0.59	137	0.089
BFX-33101	1	3.5	2.2	24	0.2	0.2	0.1	74	0.44	0.083	12	44	0.74	297	0.086
BFX-33102	1.1	4	1.9	26	0.1	0.3	0.2	70	0.45	0.078	13	39	0.65	323	0.068
BFX-33103	0.7	4.8	1.7	25	0.1	0.3	0.2	63	0.42	0.069	10	33	0.65	282	0.063
BFX-33104	0.9	2.1	1.9	26	0.1	0.2	0.1	88	0.51	0.101	12	32	0.83	324	0.1
BFX-33105	0.7	9.9	2	22	0.1	0.3	0.2	84	0.39	0.073	10	38	0.88	250	0.087
BFX-33106	1.3	6.9	2.3	22	0.2	0.4	0.2	80	0.37	0.063	13	41	0.77	410	0.075
BFX-33107	0.8	6.3	1.6	18	0.1	0.3	0.1	80	0.26	0.07	9	36	0.74	243	0.084
BFX-33108	0.9	5.6	1.8	21	0.2	0.3	0.2	91	0.29	0.059	11	36	0.9	360	0.115
BFX-33109	0.7	3.3	2.3	20	0.1	0.3	0.1	78	0.3	0.065	10	38	0.75	288	0.117
BFX-33110	0.7	1.9	1.6	18	0.2	0.3	0.1	63	0.23	0.054	9	32	0.64	152	0.08
BFX-33111	0.8	2.9	1.8	20	0.1	0.2	0.05	96	0.42	0.136	9	64	1.48	382	0.15
BFX-33112	0.4	0.5	1.6	21	0.05	0.2	0.05	111	0.52	0.163	8	90	1.82	430	0.179
BFX-33114	0.7	10	3	18	0.1	0.2	0.1	97	0.3	0.078	11	49	1.43	322	0.131
BFX-33115	0.7	7.4	3.1	22	0.2	0.2	0.1	153	0.41	0.079	13	96	2.74	768	0.249
BFX-33116	0.8	7.8	1.2	19	0.2	0.2	0.1	59	0.25	0.065	12	29	0.55	259	0.064
BFX-33117	0.7	3.6	1.1	18	0.05	0.2	0.1	77	0.27	0.053	8	40	0.75	244	0.096
BFX-33118	0.7	2.3	1.1	22	0.1	0.1	0.1	67	0.32	0.07	8	44	0.71	275	0.092
BFX-33119	0.8	3.2	1	23	0.2	0.2	0.1	63	0.33	0.072	10	43	0.6	281	0.093
BFX-33120	0.7	3.5	1.1	34	0.1	0.2	0.1	114	0.55	0.149	9	31	0.78	318	0.118
BFX-33121	1	2.6	1.2	26	0.1	0.3	0.1	79	0.43	0.08	11	35	0.76	390	0.07
BFX-33122	0.5	3.1	0.8	20	0.05	0.2	0.1	61	0.32	0.078	7	29	0.6	150	0.076
BFX-33123	0.5	4.9	0.9	20	0.1	0.2	0.1	81	0.38	0.089	7	30	0.67	154	0.084
BFX-33124	0.5	2.6	1	28	0.1	0.2	0.05	91	0.65	0.169	8	31	0.76	207	0.09
BFX-33125	0.7	9	2	21	0.2	0.2	0.1	98	0.41	0.124	9	46	0.86	235	0.109
BFX-33126	0.4	1.1	1.8	18	0.05	0.2	0.1	89	0.36	0.09	8	58	1.09	220	0.118
BFX-33127	1	5.4	2.5	19	0.05	0.2	0.1	91	0.29	0.081	16	42	0.97	392	0.114
BFX-33128	0.5	71.9	1.7	14	0.2	0.5	0.2	82	0.21	0.058	8	44	0.79	204	0.094
BFX-33141	2.5	6	7.1	24	0.1	0.1	0.4	64	0.58	0.109	22	65	1.38	505	0.158
BFX-33142	3.3	17.1	6.8	23	0.1	0.3	0.4	52	0.48	0.065	16	39	0.95	298	0.099
BFX-33143	1.3	10.7	2.9	20	0.2	0.4	0.2	71	0.29	0.046	13	45	0.79	272	0.11
BFX-33144	1	2.7	5.3	13	0.05	0.5	0.2	62	0.15	0.037	14	44	0.74	125	0.094
BFX-33145	1.3	5.9	5.7	18	0.1	0.4	0.2	69	0.23	0.042	13	44	0.98	242	0.117
BFX-33146	1.8	11	6.8	22	0.05	0.3	0.4	66	0.34	0.044	18	46	0.95	274	0.122
BFX-33147	0.9	14.2	3.3	14	0.5	0.4	0.5	86	0.18	0.034	6	41	0.55	172	0.187
BFX-33148	3.7	23.4	7.3	26	0.2	0.2	0.3	69	0.6	0.066	19	58	1.38	441	0.14
BFX-33149	2.5	56.8	6.1	20	0.05	0.3	0.4	54	0.37	0.06	20	38	0.98	324	0.092
BFX-33150	2.7	2.1	6.1	19	0.05	0.3	0.4	56	0.28	0.043	26	40	1.03	252	0.108
BFX-33162	0.8	3.1	2	19	0.1	0.4	0.2	79	0.25	0.071	12	45	0.85	282	0.114
BFX-33163	0.7	3.6	2.7	16	0.1	0.4	0.2	78	0.23	0.059	10	42	0.79	202	0.117
BFX-33164	0.8	2.2	1.2	19	0.1	0.4	0.2	79	0.22	0.063	11	39	0.68	266	0.094
BFX-33165	0.7	4.2	2.1	20	0.05	0.3	0.1	78	0.25	0.058	11	39	0.78	268	0.109
BFX-33166	0.7	2.1	1.9	19	0.1	0.3	0.2	79	0.26	0.061	11	40	0.74	253	0.106
BFX-33167	0.6	1.9	2.2	23	0.1	0.3	0.2	82	0.31	0.061	10	41	0.8	300	0.112

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33097	1	1.63	0.008	0.15	0.05	0.02	3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33098	1	1.59	0.009	0.16	0.1	0.03	3.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33101	2	1.54	0.015	0.13	0.05	0.04	4.6	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33102	1	1.51	0.014	0.1	0.1	0.06	4.7	0.1	0.025	5	0.5	1DX15	VAN08007918
BFX-33103	1	1.48	0.014	0.08	0.1	0.04	4.4	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33104	1	1.75	0.018	0.15	0.1	0.04	6.7	0.05	0.025	6	0.7	1DX15	VAN08007918
BFX-33105	0.5	1.87	0.015	0.09	0.1	0.04	5.4	0.05	0.025	6	0.5	1DX15	VAN08007918
BFX-33106	1	1.87	0.016	0.1	0.1	0.04	6.8	0.05	0.025	6	0.9	1DX15	VAN08007918
BFX-33107	1	1.68	0.012	0.11	0.1	0.04	4.9	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33108	0.5	1.76	0.013	0.17	0.1	0.03	5.6	0.1	0.025	6	0.8	1DX15	VAN08007918
BFX-33109	1	1.69	0.012	0.15	0.1	0.03	4.1	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33110	1	1.58	0.011	0.1	0.1	0.05	3.6	0.05	0.025	6	0.7	1DX15	VAN08007918
BFX-33111	0.5	2.55	0.021	0.63	0.05	0.04	6.5	0.3	0.025	9	0.6	1DX15	VAN08007918
BFX-33112	0.5	2.83	0.03	0.85	0.05	0.02	6.7	0.3	0.025	9	0.5	1DX15	VAN08007918
BFX-33114	0.5	2.27	0.016	0.36	0.1	0.03	7.3	0.2	0.025	8	0.9	1DX15	VAN08007918
BFX-33115	0.5	3.65	0.016	1.11	0.05	0.04	9.5	0.5	0.025	11	2	1DX15	VAN08007918
BFX-33116	1	1.49	0.016	0.08	0.05	0.06	4.2	0.05	0.025	6	0.5	1DX15	VAN08007918
BFX-33117	0.5	1.51	0.016	0.07	0.1	0.05	4.1	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33118	0.5	1.42	0.019	0.08	0.1	0.05	4.2	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33119	2	1.53	0.021	0.07	0.05	0.06	4.7	0.1	0.025	6	0.6	1DX15	VAN08007918
BFX-33120	0.5	1.57	0.044	0.1	0.05	0.04	5.1	0.05	0.08	6	1.1	1DX15	VAN08007918
BFX-33121	1	1.76	0.015	0.07	0.05	0.05	5.9	0.05	0.06	6	0.5	1DX15	VAN08007918
BFX-33122	0.5	1.33	0.018	0.06	0.05	0.05	3.2	0.05	0.06	6	0.6	1DX15	VAN08007918
BFX-33123	0.5	1.37	0.025	0.08	0.05	0.04	3.4	0.05	0.025	6	0.6	1DX15	VAN08007918
BFX-33124	1	1.49	0.049	0.09	0.05	0.04	4.7	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33125	1	1.72	0.022	0.16	0.05	0.04	4.6	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33126	2	1.87	0.02	0.23	0.05	0.03	5.4	0.1	0.025	8	0.25	1DX15	VAN08007918
BFX-33127	2	1.8	0.014	0.19	0.1	0.04	5.8	0.1	0.025	8	0.25	1DX15	VAN08007918
BFX-33128	1	1.51	0.011	0.11	0.1	0.03	4.2	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33141	1	1.59	0.009	0.56	0.2	0.03	3.2	0.4	0.025	7	0.25	1DX15	VAN08007918
BFX-33142	1	1.34	0.012	0.19	0.05	0.02	2.2	0.2	0.08	5	0.25	1DX15	VAN08007918
BFX-33143	2	1.51	0.008	0.13	0.1	0.02	2.5	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33144	2	1.79	0.008	0.11	0.2	0.03	2.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33145	1	1.8	0.009	0.1	0.1	0.02	2.8	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33146	2	1.63	0.01	0.12	0.2	0.02	3.3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33147	0.5	0.94	0.008	0.16	0.2	0.02	1.8	0.2	0.025	11	0.25	1DX15	VAN08007918
BFX-33148	1	1.82	0.01	0.32	0.1	0.02	3.8	0.3	0.05	7	0.5	1DX15	VAN08007918
BFX-33149	1	1.46	0.009	0.19	0.2	0.02	2.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33150	1	1.54	0.009	0.15	0.1	0.03	2.6	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33162	1	1.85	0.013	0.14	0.05	0.03	3.9	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33163	1	1.91	0.011	0.12	0.1	0.03	3.7	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33164	2	1.72	0.014	0.11	0.1	0.03	3.5	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33165	0.5	1.77	0.013	0.12	0.1	0.02	3.8	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33166	1	1.77	0.013	0.11	0.1	0.01	3.6	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33167	2	1.76	0.014	0.13	0.1	0.02	3.8	0.05	0.025	6	0.25	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33168	NAD 83-7V	597067	6988327	0.7	39	7	73	0.05	18.2	12.7	494	3.08	4.8
BFX-33169	NAD 83-7V	597059	6988305	1.1	35.2	10.5	62	0.2	20.3	11.2	413	3.43	7.4
BFX-33170	NAD 83-7V	597052	6988281	1	32.5	8.5	69	0.05	21.1	12.3	415	3.19	6.1
BFX-33171	NAD 83-7V	597043	6988258	1.1	25.7	14.3	57	0.05	15.4	11.1	467	2.97	5
BFX-33172	NAD 83-7V	597020	6988187	1.2	43.8	9	87	0.1	19.9	26.6	853	3.27	5.9
BFX-33173	NAD 83-7V	597012	6988162	0.9	37.8	7.2	82	0.05	17.3	19.8	648	2.99	4.5
BFX-33174	NAD 83-7V	597004	6988139	0.9	28.6	10.7	67	0.05	16.8	14	406	3.03	5.4
BFX-33175	NAD 83-7V	597084	6988059	0.4	17.5	7.9	32	0.05	12.3	4.9	106	1.58	3.5
BFX-33176	NAD 83-7V	597091	6988083	0.6	24.1	8.6	24	0.1	13	6.4	88	1.72	3.3
BFX-33177	NAD 83-7V	597098	6988105	0.8	27.4	10.4	48	0.1	14.6	7.9	151	2.05	3.5
BFX-33178	NAD 83-7V	597114	6988153	1.4	40	10.2	55	0.2	24	16.9	500	2.93	4.8
BFX-33179	NAD 83-7V	597122	6988176	1.3	36.7	12.6	69	0.2	17.4	17.2	478	3.04	4.7
BFX-33180	NAD 83-7V	597130	6988201	0.7	46.2	13	72	0.2	18.6	17.6	308	2.65	3.6
BFX-33181	NAD 83-7V	597137	6988225	1.6	74.4	14.9	115	0.1	26.3	37.3	1192	4.1	7.4
BFX-33182	NAD 83-7V	597146	6988247	0.9	34.2	12.9	63	0.1	18.4	9.1	204	2.55	3.9
BFX-33183	NAD 83-7V	597161	6988296	1.1	50.6	14.8	81	0.1	21.6	13.1	486	3.47	4.6
BFX-33184	NAD 83-7V	597170	6988321	1.1	49.1	17.8	77	0.05	20.7	17.7	854	3.58	4.7
BFX-33185	NAD 83-7V	597178	6988345	0.9	35.6	25.5	78	0.05	20.6	14.5	559	3.4	5.2
BFX-33186	NAD 83-7V	597185	6988367	0.7	42.2	8.3	104	0.05	20.1	16.2	529	3.73	3.6
BFX-33187	NAD 83-7V	597194	6988391	0.4	42.6	7.7	88	0.05	40.9	18.4	616	3.7	3.7
BFX-33188	NAD 83-7V	597202	6988414	0.9	29	8.4	76	0.05	25.9	15.2	616	3.31	6.8
BFX-33189	NAD 83-7V	597210	6988439	1	26	8.6	72	0.05	20.6	13.2	527	3.45	7.6
BFX-33190	NAD 83-7V	597304	6988408	1	38.7	19.2	74	0.05	25.1	17.3	785	3.45	5.3
BFX-33191	NAD 83-7V	597283	6988375	1.2	31.7	21.5	72	0.05	22.4	14.3	595	3.35	5.9
BFX-33192	NAD 83-7V	597272	6988358	1.1	40.9	18.1	73	0.05	27.8	14.3	597	3.6	6.3
BFX-33193	NAD 83-7V	597258	6988337	1.3	30.8	25.9	69	0.05	23.9	14.3	596	3.72	9.1
BFX-33194	NAD 83-7V	597273	6988311	0.6	58.3	8.9	103	0.05	26	22.1	487	4.04	3.4
BFX-33195	NAD 83-7V	597287	6988362	1.2	33.2	39.7	66	0.05	20.1	10.8	411	2.94	5.1
BFX-33201	NAD 83-7V	596608	6988850	2.4	47.4	11	85	0.2	41.5	14.3	561	3.53	7.4
BFX-33202	NAD 83-7V	596616	6988871	1.8	42	11.9	73	0.2	39.9	13.5	533	3.18	7.6
BFX-33203	NAD 83-7V	596624	6988895	1.7	36.4	12.8	63	0.2	34.5	14.4	647	3.09	7.6
BFX-33204	NAD 83-7V	596631	6988919	1.4	23.3	10.2	51	0.1	34.1	8.6	259	2.28	6.6
BFX-33205	NAD 83-7V	596639	6988943	1.2	32.1	12.1	60	0.1	40	13.4	430	3.07	16.2
BFX-33206	NAD 83-7V	596647	6988967	1.2	25.2	12.3	57	0.05	30.5	11.1	362	2.89	8.1
BFX-33207	NAD 83-7V	596656	6988990	1.4	26.1	12.6	58	0.1	27.7	11.5	401	3.06	11.3
BFX-33208	NAD 83-7V	596663	6989013	1.2	26.5	11.8	57	0.1	27.7	10.6	335	2.92	10.2
BFX-33209	NAD 83-7V	596672	6989037	1.4	28.9	12.7	65	0.05	40.1	14.8	466	3.34	8.2
BFX-33210	NAD 83-7V	596679	6989062	1.1	35.2	13.1	71	0.05	46.1	17.2	553	3.66	8.2
BFX-33211	NAD 83-7V	596687	6989085	1.2	40.5	15.4	69	0.1	83.4	19.7	459	4.03	6.3
BFX-33212	NAD 83-7V	596695	6989109	1.4	45.7	12.8	71	0.05	77.4	20.5	453	4.1	7.2
BFX-33213	NAD 83-7V	596704	6989133	1.4	34.5	11.8	71	0.05	45.3	13.5	388	3.46	8.4
BFX-33214	NAD 83-7V	596711	6989156	1.2	22.5	10.6	51	0.05	27.6	8.9	267	2.6	7.8
BFX-33215	NAD 83-7V	596719	6989180	1	31.4	13.3	70	0.1	38	14.1	457	3.43	9.7
BFX-33216	NAD 83-7V	596728	6989205	1	23.3	11.9	61	0.05	29.6	11.8	362	3.32	9.8
BFX-33217	NAD 83-7V	596735	6989227	1.5	38.2	14.8	82	0.1	39.4	14.1	433	4.2	16.1

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33168	0.7	2.4	2.2	21	0.2	0.3	0.05	79	0.32	0.063	10	36	0.9	331	0.123
BFX-33169	1.1	2.9	2.6	20	0.05	0.3	0.2	85	0.18	0.041	15	44	0.67	343	0.115
BFX-33170	0.4	3	1.9	17	0.1	0.3	0.1	86	0.26	0.054	6	42	0.8	206	0.127
BFX-33171	0.4	3.4	1.5	13	0.1	0.3	0.2	88	0.15	0.039	6	34	0.66	211	0.127
BFX-33172	0.7	9.9	1.1	16	0.3	0.4	0.2	86	0.25	0.075	9	39	0.7	260	0.079
BFX-33173	0.6	5.7	1.3	16	0.2	0.4	0.1	78	0.23	0.062	8	37	0.74	230	0.1
BFX-33174	0.5	5.5	1.1	15	0.1	0.3	0.1	85	0.21	0.06	7	37	0.67	130	0.087
BFX-33175	0.5	2.8	0.5	16	0.1	0.1	0.05	34	0.23	0.055	7	25	0.37	112	0.056
BFX-33176	0.6	6.2	0.5	17	0.1	0.2	0.05	35	0.2	0.059	7	25	0.31	161	0.048
BFX-33177	0.6	13.8	0.7	17	0.1	0.2	0.1	48	0.24	0.055	8	29	0.53	153	0.066
BFX-33178	0.7	22.4	1	15	0.1	0.2	0.1	75	0.23	0.076	9	53	0.72	144	0.082
BFX-33179	0.7	7	0.9	24	0.1	0.2	0.1	82	0.38	0.082	10	33	0.72	277	0.072
BFX-33180	0.7	4.1	0.9	20	0.2	0.2	0.1	62	0.3	0.092	9	37	0.7	224	0.078
BFX-33181	1	24.8	3	19	0.4	0.3	0.1	91	0.27	0.085	15	48	0.9	297	0.106
BFX-33182	0.6	4.9	1.2	18	0.1	0.2	0.05	62	0.26	0.081	10	37	0.72	197	0.082
BFX-33183	0.7	6.9	1.8	22	0.2	0.3	0.05	87	0.35	0.066	10	43	1.04	381	0.118
BFX-33184	0.7	20.7	1.8	25	0.05	0.3	0.05	85	0.39	0.077	10	42	0.98	389	0.112
BFX-33185	0.7	21.3	1.9	17	0.1	0.3	0.1	84	0.26	0.059	9	37	0.82	324	0.119
BFX-33186	0.5	3.5	1.8	17	0.1	0.2	0.05	106	0.38	0.091	7	43	1.13	413	0.148
BFX-33187	0.5	8.7	2.2	19	0.2	0.2	0.05	109	0.38	0.084	8	95	1.52	434	0.139
BFX-33188	0.6	2.3	2.5	16	0.1	0.4	0.2	83	0.22	0.05	9	47	0.76	228	0.1
BFX-33189	0.5	2.5	2.6	16	0.1	0.5	0.1	84	0.21	0.052	8	37	0.71	170	0.106
BFX-33190	0.5	8.9	1.8	17	0.1	0.3	0.1	94	0.27	0.064	8	46	0.96	252	0.103
BFX-33191	0.5	4.3	1.8	14	0.3	0.3	0.2	101	0.18	0.065	7	47	0.76	258	0.116
BFX-33192	0.5	5.7	1.7	17	0.2	0.3	0.2	101	0.22	0.041	8	58	0.92	235	0.108
BFX-33193	0.5	16	2.1	13	0.2	0.4	0.2	94	0.15	0.044	8	46	0.7	210	0.086
BFX-33194	0.8	2.9	3	25	0.05	0.2	0.05	115	0.55	0.14	14	55	1.32	467	0.128
BFX-33195	0.8	42.3	2.1	17	0.1	0.3	0.1	76	0.29	0.083	12	38	0.74	258	0.086
BFX-33201	1.9	4.4	5.5	28	0.2	0.4	0.2	75	0.31	0.087	29	61	0.97	228	0.12
BFX-33202	1.8	10.9	4.1	25	0.1	0.4	0.2	71	0.27	0.071	26	55	0.77	213	0.096
BFX-33203	1.5	15.4	3.2	21	0.1	0.3	0.2	68	0.25	0.067	23	49	0.62	191	0.091
BFX-33204	0.7	16	3	14	0.2	0.3	0.2	62	0.15	0.042	14	54	0.56	92	0.095
BFX-33205	1.1	6.6	4.9	20	0.2	0.4	0.2	67	0.26	0.069	21	52	0.71	141	0.104
BFX-33206	1	9.8	5.5	17	0.1	0.3	0.2	63	0.2	0.047	19	44	0.61	121	0.107
BFX-33207	1	4.9	5.1	17	0.2	0.4	0.2	67	0.19	0.053	21	42	0.57	123	0.101
BFX-33208	1.1	8.4	3.3	17	0.1	0.4	0.2	63	0.2	0.057	23	39	0.54	144	0.085
BFX-33209	1.1	8	5	20	0.1	0.4	0.2	74	0.24	0.062	22	55	0.76	166	0.124
BFX-33210	1.3	4.1	6.8	21	0.2	0.3	0.2	74	0.27	0.059	24	57	0.83	166	0.136
BFX-33211	1.1	7.9	5.1	37	0.05	0.3	0.2	82	0.49	0.16	22	88	1.11	233	0.152
BFX-33212	1.1	6.1	4.5	43	0.1	0.3	0.1	89	0.59	0.194	20	90	1.1	218	0.154
BFX-33213	1.3	10.5	5.8	20	0.2	0.3	0.2	74	0.25	0.072	22	58	0.88	183	0.137
BFX-33214	1.1	6.3	4.2	17	0.1	0.3	0.2	60	0.2	0.046	18	41	0.6	142	0.101
BFX-33215	1.6	5.9	6.6	19	0.2	0.3	0.2	69	0.25	0.064	24	48	0.78	160	0.115
BFX-33216	0.8	6.9	4.7	16	0.2	0.5	0.2	70	0.18	0.037	14	40	0.6	117	0.103
BFX-33217	1.9	17.3	7.7	17	0.2	0.5	0.2	62	0.15	0.044	27	42	0.59	158	0.093

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33168	1	1.69	0.015	0.22	0.1	0.02	4.4	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33169	1	2.08	0.014	0.1	0.1	0.04	5	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33170	0.5	1.59	0.014	0.16	0.1	0.02	3.4	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33171	0.5	1.54	0.015	0.15	0.1	0.02	3.4	0.05	0.025	8	0.25	1DX15	VAN08007918
BFX-33172	0.5	1.64	0.015	0.15	0.05	0.07	4.4	0.05	0.025	8	0.25	1DX15	VAN08007918
BFX-33173	1	1.54	0.015	0.2	0.1	0.03	3.8	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33174	1	1.54	0.014	0.12	0.05	0.05	3.3	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33175	0.5	0.98	0.02	0.04	0.1	0.04	2	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33176	1	0.96	0.017	0.04	0.05	0.06	2	0.05	0.06	4	0.25	1DX15	VAN08007918
BFX-33177	1	1.24	0.018	0.06	0.05	0.05	2.8	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33178	1	1.51	0.022	0.08	0.1	0.04	3.8	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33179	2	1.56	0.023	0.06	0.1	0.05	4.5	0.05	0.06	6	0.25	1DX15	VAN08007918
BFX-33180	1	1.55	0.026	0.07	0.1	0.06	4.5	0.1	0.025	6	0.7	1DX15	VAN08007918
BFX-33181	1	1.88	0.021	0.17	0.1	0.04	6	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33182	1	1.47	0.019	0.11	0.05	0.05	3.8	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33183	1	1.89	0.024	0.23	0.05	0.03	6	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33184	2	1.88	0.024	0.22	0.1	0.04	6	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33185	2	1.78	0.02	0.18	0.1	0.02	4.9	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33186	1	1.94	0.017	0.38	0.1	0.02	5.6	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33187	2	2.05	0.013	0.45	0.05	0.01	8.7	0.3	0.025	8	0.25	1DX15	VAN08007918
BFX-33188	2	1.87	0.012	0.1	0.1	0.03	4.3	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33189	2	1.95	0.011	0.08	0.1	0.02	3.7	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33190	2	1.86	0.013	0.15	0.05	0.02	5.7	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33191	1	1.7	0.011	0.13	0.1	0.03	4.5	0.1	0.025	8	0.25	1DX15	VAN08007918
BFX-33192	2	2.05	0.013	0.1	0.05	0.02	5	0.1	0.025	8	0.25	1DX15	VAN08007918
BFX-33193	1	2.05	0.012	0.07	0.1	0.04	4.3	0.05	0.025	7	0.25	1DX15	VAN08007918
BFX-33194	1	2.1	0.025	0.33	0.1	0.04	7.2	0.2	0.025	9	0.25	1DX15	VAN08007918
BFX-33195	1	1.73	0.013	0.11	0.1	0.06	4.9	0.05	0.025	6	0.25	1DX15	VAN08007918
BFX-33201	2	1.92	0.012	0.36	0.1	0.04	4.1	0.3	0.08	7	0.5	1DX15	VAN08007918
BFX-33202	2	1.75	0.011	0.19	0.1	0.04	3.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33203	2	1.62	0.012	0.15	0.1	0.04	3.3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33204	1	1.14	0.01	0.13	0.1	0.03	2.6	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33205	2	1.67	0.009	0.16	0.1	0.03	3.2	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33206	1	1.58	0.01	0.16	0.1	0.02	3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33207	1	1.53	0.01	0.13	0.2	0.04	2.8	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33208	2	1.44	0.01	0.12	0.1	0.03	2.8	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33209	2	1.69	0.011	0.18	0.2	0.03	3.2	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33210	2	1.82	0.01	0.22	0.1	0.02	3.6	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33211	2	1.99	0.012	0.29	0.05	0.02	3.8	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33212	1	1.98	0.014	0.38	0.1	0.02	3.2	0.2	0.025	8	0.25	1DX15	VAN08007918
BFX-33213	2	1.73	0.01	0.29	0.1	0.03	3.2	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33214	2	1.33	0.016	0.16	0.1	0.03	2.8	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33215	2	1.81	0.01	0.24	0.1	0.03	3.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33216	2	1.96	0.01	0.09	0.1	0.04	3.3	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33217	2	1.53	0.009	0.15	0.1	0.03	3.8	0.2	0.025	6	0.6	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33218	NAD 83-7V	596742	6989252	1.4	22.4	13.3	64	0.05	27.5	12.2	428	3.7	11.1
BFX-33219	NAD 83-7V	596752	6989276	1.6	27.9	12.7	64	0.05	27.2	11.1	339	3.37	8
BFX-33220	NAD 83-7V	596762	6989298	1	27.2	11.8	61	0.05	29	12.2	384	3.29	7.7
BFX-33221	NAD 83-7V	596766	6989323	1.1	24.4	13.2	69	0.05	30.9	12	449	3.59	9.7
BFX-33222	NAD 83-7V	596775	6989347	1.3	26.8	16.4	62	0.05	29.1	10.3	341	3.1	6.5
BFX-33223	NAD 83-7V	596917	6989776	1.7	29	11.3	57	0.05	64.3	12.7	447	3.31	17.1
BFX-33224	NAD 83-7V	596910	6989751	0.7	89.3	5.1	88	0.05	694.8	57.3	1010	5.28	25.5
BFX-33225	NAD 83-7V	596901	6989728	0.7	69.7	4.1	69	0.1	225.2	28.8	611	3.38	10
BFX-33226	NAD 83-7V	596894	6989705	3	67.1	15.6	131	0.05	86.8	19.6	749	4.23	88.4
BFX-33227	NAD 83-7V	596887	6989681	4.6	94.4	15.9	188	0.6	115.6	25.5	876	5.45	187.3
BFX-33228	NAD 83-7V	596879	6989655	2.9	57.1	9	60	0.2	33.7	7	180	2.54	107.9
BFX-33229	NAD 83-7V	596870	6989634	5.6	82.5	18.8	136	0.8	59.7	13.2	504	3.85	208.5
BFX-33230	NAD 83-7V	596863	6989609	6	58.8	19	120	0.5	39.9	10.5	352	3.13	233.3
BFX-33231	NAD 83-7V	596854	6989585	4.8	87.4	17.8	161	0.6	60.4	15.1	697	4.12	259.2
BFX-33232	NAD 83-7V	596847	6989562	3.3	36.3	16.2	115	0.2	36.9	11.7	465	3.49	98.3
BFX-33233	NAD 83-7V	596839	6989538	3	54	19.4	110	0.4	40.8	11.6	447	3.68	148.8
BFX-33234	NAD 83-7V	596831	6989514	2.4	41.8	19.6	124	0.1	42.8	12.1	455	3.59	89.1
BFX-33235	NAD 83-7V	596822	6989491	7.1	45.8	45.8	172	0.4	41.4	18	1339	4.32	103.7
BFX-33236	NAD 83-7V	596815	6989467	4.3	59.9	20.7	151	0.2	53.8	15.9	826	3.67	68.6
BFX-33237	NAD 83-7V	596806	6989443	2.9	37.6	19.8	121	0.4	47.4	16.2	596	3.93	75.8
BFX-33238	NAD 83-7V	596799	6989420	1.2	21.9	15.2	58	0.05	28.8	12.4	385	3.41	21.4
BFX-33239	NAD 83-7V	596791	6989396	1.8	31.7	21.7	68	0.1	30.6	13.3	372	3.3	19.7
BFX-33240	NAD 83-7V	596783	6989372	1.5	32.4	21.8	83	0.1	40.3	16.2	484	3.94	11.3
BFX-33251	NAD 83-7V	597178	6988344	1.1	36.7	28.2	80	0.05	19.7	14.2	560	3.35	5.4
BFX-33252	NAD 83-7V	596648	6989601	1.4	41.6	27.4	68	0.1	33	12.3	513	3.24	8
BFX-33253	NAD 83-7V	597383	6989910	1.2	28.2	22.9	81	0.2	34.4	12.6	428	3.17	128.1
BFX-33254	NAD 83-7V	597391	6989934	1.9	31	32.2	89	0.3	40.5	16.6	684	3.94	154.1
BFX-33255	NAD 83-7V	597400	6989957	1.7	27.8	24.1	79	0.3	32.3	13.4	560	3.36	95.4
BFX-33256	NAD 83-7V	597495	6989926	1.3	17.3	11.6	49	0.05	20.5	7.5	273	2.52	10.6
BFX-33257	NAD 83-7V	597486	6989903	1.3	26.3	13.1	65	0.05	36.6	13.1	380	3.2	16.9
BFX-33258	NAD 83-7V	597479	6989879	1.3	25	13.7	70	0.1	32.4	11.6	392	3.36	15.9
BFX-33259	NAD 83-7V	597472	6989855	1.2	20.5	11.5	52	0.05	24.3	10	325	2.99	12
BFX-33260	NAD 83-7V	597464	6989832	1.1	24.3	13.4	59	0.05	28.5	13.1	436	3.16	41
BFX-33261	NAD 83-7V	597457	6989806	1.2	20.8	12.8	53	0.1	22.6	9.1	298	2.61	23.5
BFX-33262	NAD 83-7V	597450	6989784	1.7	27.6	13.5	65	0.05	31.8	12.8	453	3.55	40.1
BFX-33263	NAD 83-7V	597441	6989759	1.6	25.7	11.8	54	0.1	26.7	10.1	301	2.98	14.8
BFX-33264	NAD 83-7V	597432	6989736	1.3	28.4	11.1	62	0.1	29.6	10.9	376	3.01	13.2
BFX-33265	NAD 83-7V	597424	6989712	1.2	27.6	11.9	65	0.05	30.9	12.1	375	3.14	13.8
BFX-33266	NAD 83-7V	597416	6989690	1.2	25.4	11.2	61	0.05	29.6	10.1	317	3.05	13.8
BFX-33267	NAD 83-7V	597408	6989665	1.3	27.1	12.1	65	0.1	30.3	11	341	3.1	14.1
BFX-33268	NAD 83-7V	597401	6989642	1.2	30.6	13.2	69	0.1	33.6	11.2	372	3.18	12
BFX-33269	NAD 83-7V	597304	6989990	2.6	36.9	21.6	116	0.3	43.3	12.6	632	3.44	64.9
BFX-33270	NAD 83-7V	597297	6989966	3.1	23.6	27.3	89	0.2	24.4	7.5	406	3.18	60.7
BFX-33271	NAD 83-7V	597289	6989942	3.5	43.1	26.2	113	0.3	48.8	14.1	715	3.63	66.9
BFX-33272	NAD 83-7V	597272	6989894	3	37.1	49.7	88	0.2	36.7	12.4	509	3.4	160.1

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33218	1	174.1	5	18	0.2	0.6	0.2	69	0.18	0.049	13	44	0.6	145	0.095
BFX-33219	1.3	4.4	4.7	19	0.2	0.5	0.2	71	0.16	0.046	18	42	0.57	123	0.115
BFX-33220	1.2	4.9	4.7	17	0.2	0.4	0.2	67	0.19	0.044	16	42	0.64	92	0.112
BFX-33221	1.1	3.6	5.5	20	0.1	0.5	0.2	71	0.21	0.041	15	46	0.62	122	0.126
BFX-33222	1.1	2.5	3.6	17	0.2	0.4	0.2	65	0.19	0.049	17	43	0.55	106	0.103
BFX-33223	0.7	2.5	1.1	15	0.1	0.8	0.2	91	0.16	0.051	9	95	0.61	150	0.084
BFX-33224	0.5	1.4	1.5	20	0.2	0.4	0.05	114	0.38	0.043	8	568	2.44	443	0.114
BFX-33225	0.3	2.9	1	22	0.1	0.2	0.05	103	0.61	0.052	5	303	2.29	291	0.119
BFX-33226	1.1	6.5	4.4	17	0.2	2.8	0.3	70	0.27	0.05	18	62	0.53	225	0.066
BFX-33227	1.9	8.4	5.2	20	0.9	4.1	0.2	104	0.34	0.078	22	86	0.85	949	0.074
BFX-33228	1	2.6	0.4	19	0.2	4.6	0.2	68	0.27	0.072	9	39	0.18	285	0.038
BFX-33229	2	15.4	3	24	0.7	7.3	0.2	66	0.15	0.062	19	50	0.47	509	0.046
BFX-33230	1.3	7.7	3.5	30	0.3	10.4	0.2	49	0.13	0.053	18	39	0.3	309	0.039
BFX-33231	1.8	12.3	5	22	0.4	7.8	0.3	59	0.12	0.054	23	40	0.4	291	0.047
BFX-33232	1	5.9	3.1	18	0.4	2.8	0.2	73	0.17	0.043	14	46	0.54	225	0.071
BFX-33233	1.4	6.7	3.2	18	0.4	2.9	0.3	65	0.12	0.054	18	35	0.36	209	0.033
BFX-33234	1.3	7.4	3.9	20	0.6	2.3	0.3	63	0.32	0.055	17	41	0.5	347	0.07
BFX-33235	2.3	12.1	2.8	37	0.7	3.8	0.3	53	0.76	0.12	22	30	0.35	567	0.017
BFX-33236	1.7	8.9	3.8	27	0.5	1.5	0.3	45	0.25	0.103	22	35	0.25	195	0.028
BFX-33237	2.2	12.8	7.7	26	0.2	0.9	0.2	53	0.25	0.063	27	39	0.65	314	0.073
BFX-33238	1	3.1	4.7	16	0.2	0.6	0.2	68	0.15	0.046	15	39	0.53	98	0.085
BFX-33239	1.9	23.7	4.5	26	0.2	0.5	0.3	56	0.22	0.064	29	39	0.5	117	0.076
BFX-33240	1.7	31.8	7.7	20	0.05	0.7	0.3	60	0.22	0.069	34	48	0.68	148	0.112
BFX-33251	0.7	25.5	2.2	17	0.2	0.3	0.1	87	0.25	0.057	9	39	0.8	333	0.109
BFX-33252	2.7	8.2	7.7	21	0.1	0.3	0.5	60	0.3	0.077	29	45	0.94	356	0.098
BFX-33253	1.3	10.9	5.4	23	0.4	1.4	0.2	59	0.29	0.057	21	35	0.52	138	0.081
BFX-33254	1.5	14.3	8.4	30	0.3	1.4	0.3	59	0.34	0.047	27	40	0.49	284	0.063
BFX-33255	1.7	8.5	4.9	19	0.4	1.1	0.2	53	0.21	0.064	29	38	0.46	181	0.056
BFX-33256	0.8	3.1	2	15	0.1	0.4	0.2	51	0.14	0.05	12	32	0.39	89	0.06
BFX-33257	1.1	4.4	5.3	21	0.1	0.6	0.2	61	0.26	0.066	25	40	0.63	160	0.085
BFX-33258	1.1	6	3.5	19	0.1	0.6	0.2	64	0.23	0.061	18	44	0.61	147	0.076
BFX-33259	0.8	4.1	4.5	16	0.1	0.5	0.2	61	0.19	0.035	15	36	0.57	102	0.105
BFX-33260	1	6.3	4.4	20	0.05	0.6	0.2	61	0.21	0.045	19	35	0.57	147	0.081
BFX-33261	1	3.4	1.6	19	0.05	0.6	0.2	59	0.18	0.051	19	32	0.45	143	0.066
BFX-33262	1.2	4.3	4.2	21	0.1	0.6	0.2	72	0.22	0.056	27	46	0.61	159	0.1
BFX-33263	1.1	6.1	2.3	18	0.05	0.4	0.2	59	0.19	0.053	21	39	0.52	145	0.08
BFX-33264	1.1	6.8	4.4	17	0.1	0.5	0.2	62	0.19	0.047	19	40	0.58	132	0.082
BFX-33265	1.2	4	5.2	19	0.1	0.5	0.2	63	0.22	0.058	20	43	0.63	168	0.084
BFX-33266	1	4.8	4.5	20	0.1	0.5	0.2	62	0.24	0.06	19	39	0.62	154	0.09
BFX-33267	1.1	7.9	4.3	21	0.1	0.5	0.2	65	0.25	0.057	20	40	0.63	192	0.09
BFX-33268	1.3	9.1	3.9	24	0.05	0.5	0.2	65	0.27	0.066	21	44	0.64	205	0.09
BFX-33269	1.4	6.6	3.6	18	0.4	1.6	0.3	61	0.19	0.071	21	31	0.4	231	0.035
BFX-33270	0.7	6.8	2.1	15	0.4	1.2	0.3	74	0.12	0.041	12	28	0.35	168	0.044
BFX-33271	1.4	25.1	6.3	24	0.5	2	0.2	67	0.24	0.077	22	33	0.43	250	0.063
BFX-33272	1.6	8.7	7.3	19	0.2	2.3	0.4	41	0.15	0.036	30	25	0.35	152	0.046

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33218	2	2.37	0.009	0.09	0.1	0.05	3.3	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33219	2	1.64	0.011	0.18	0.1	0.04	2.9	0.2	0.07	8	0.25	1DX15	VAN08007918
BFX-33220	2	1.91	0.01	0.14	0.2	0.03	3.2	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33221	2	1.85	0.01	0.15	0.2	0.04	3.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33222	2	1.48	0.008	0.18	0.1	0.04	2.4	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33223	2	1.57	0.01	0.06	0.1	0.03	2.7	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33224	4	2.19	0.012	0.14	0.05	0.04	10.2	0.5	0.025	8	0.25	1DX15	VAN08007918
BFX-33225	3	2.01	0.016	0.21	0.05	0.03	6.7	0.4	0.07	7	0.25	1DX15	VAN08007918
BFX-33226	3	1.1	0.009	0.1	0.1	0.03	4.8	0.3	0.025	4	1	1DX15	VAN08007918
BFX-33227	3	1.56	0.009	0.26	0.1	0.14	6.8	0.4	0.025	5	2.4	1DX15	VAN08007918
BFX-33228	2	0.65	0.008	0.05	0.1	0.11	2	0.2	0.08	4	1.1	1DX15	VAN08007918
BFX-33229	3	1.35	0.008	0.08	0.2	0.23	5	0.3	0.025	4	1.9	1DX15	VAN08007918
BFX-33230	1	0.64	0.006	0.09	0.2	0.09	2.6	0.3	0.025	3	2	1DX15	VAN08007918
BFX-33231	2	0.96	0.007	0.12	0.2	0.19	4.1	0.5	0.025	3	2.2	1DX15	VAN08007918
BFX-33232	2	1.29	0.008	0.12	0.2	0.07	2.7	0.2	0.025	5	1.2	1DX15	VAN08007918
BFX-33233	2	1.34	0.006	0.08	0.1	0.16	3	0.5	0.025	5	1.5	1DX15	VAN08007918
BFX-33234	2	1.24	0.009	0.11	0.1	0.07	3.3	0.4	0.06	5	1.2	1DX15	VAN08007918
BFX-33235	2	0.91	0.011	0.08	0.1	0.15	3.8	0.2	0.15	3	2.4	1DX15	VAN08007918
BFX-33236	2	0.69	0.009	0.15	0.1	0.05	2.5	0.2	0.08	3	1.9	1DX15	VAN08007918
BFX-33237	2	1.48	0.011	0.26	0.1	0.07	3.5	0.3	0.08	5	1.2	1DX15	VAN08007918
BFX-33238	1	2.14	0.01	0.07	0.2	0.03	3.1	0.2	0.025	6	0.7	1DX15	VAN08007918
BFX-33239	2	1.56	0.013	0.18	0.1	0.03	2.6	0.3	0.09	6	0.7	1DX15	VAN08007918
BFX-33240	2	1.57	0.01	0.35	0.1	0.03	3.3	0.3	0.06	6	0.6	1DX15	VAN08007918
BFX-33251	0.5	1.8	0.017	0.17	0.1	0.02	4.9	0.1	0.025	7	0.25	1DX15	VAN08007918
BFX-33252	1	1.61	0.013	0.22	0.1	0.04	4.3	0.3	0.025	6	0.8	1DX15	VAN08007918
BFX-33253	3	1.35	0.013	0.1	0.2	0.06	3.1	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33254	3	1.49	0.011	0.1	0.2	0.06	3.5	0.2	0.025	5	0.8	1DX15	VAN08007918
BFX-33255	2	1.44	0.011	0.09	0.1	0.08	3.4	0.2	0.025	5	0.9	1DX15	VAN08007918
BFX-33256	2	1.28	0.01	0.06	0.1	0.04	2.1	0.05	0.025	5	0.5	1DX15	VAN08007918
BFX-33257	2	1.82	0.012	0.09	0.1	0.04	3.6	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33258	3	1.75	0.01	0.09	0.1	0.05	3.4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33259	2	1.61	0.01	0.09	0.05	0.02	2.7	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33260	1	1.71	0.011	0.09	0.1	0.04	3.3	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33261	2	1.35	0.012	0.08	0.05	0.04	2.2	0.1	0.025	6	0.5	1DX15	VAN08007918
BFX-33262	2	1.75	0.011	0.14	0.05	0.02	3.2	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33263	2	1.52	0.012	0.15	0.05	0.04	2.9	0.2	0.025	6	0.6	1DX15	VAN08007918
BFX-33264	1	1.67	0.01	0.12	0.1	0.03	3.2	0.1	0.025	6	0.7	1DX15	VAN08007918
BFX-33265	2	1.84	0.009	0.13	0.1	0.04	3.8	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33266	2	1.71	0.009	0.14	0.1	0.03	3.4	0.2	0.025	6	0.5	1DX15	VAN08007918
BFX-33267	1	1.82	0.01	0.11	0.1	0.04	3.9	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33268	2	1.85	0.011	0.13	0.05	0.03	4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33269	2	1.4	0.009	0.08	0.1	0.06	3.2	0.1	0.025	5	0.9	1DX15	VAN08007918
BFX-33270	2	1.4	0.009	0.06	0.05	0.03	2.4	0.2	0.025	7	0.7	1DX15	VAN08007918
BFX-33271	2	1.65	0.012	0.07	0.2	0.07	4	0.1	0.025	5	0.7	1DX15	VAN08007918
BFX-33272	2	1.07	0.01	0.11	0.05	0.05	3.2	0.2	0.025	3	0.25	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33273	NAD 83-7V	597266	6989871	2.3	34.7	20.4	90	0.05	32.3	13.5	541	3.58	45.4
BFX-33274	NAD 83-7V	597281	6989918	0.7	7.6	4.3	22	0.05	8.2	3.1	98	1.06	4.4
BFX-33275	NAD 83-7V	597256	6989847	2	33	18.9	75	0.1	32.4	12.5	416	3.44	39.6
BFX-33276	NAD 83-7V	597250	6989822	2.4	35.9	18.3	74	0.1	34.5	14.3	466	3.35	27.8
BFX-33277	NAD 83-7V	597241	6989800	2.3	28.6	17.4	54	0.1	18.3	7.3	362	3.13	20.2
BFX-33278	NAD 83-7V	597234	6989776	2	29.7	16.1	81	0.1	29.7	12	535	3.07	33
BFX-33279	NAD 83-7V	597226	6989752	1.1	11.8	9.4	31	0.05	8.8	4	185	1.94	7.2
BFX-33280	NAD 83-7V	597218	6989729	1.9	13.9	15.3	36	0.05	11.1	4.1	153	2.57	12.8
BFX-33281	NAD 83-7V	597210	6989704	2	29.4	14.4	69	0.1	25.2	8.7	329	2.81	25.3
BFX-33282	NAD 83-7V	597304	6989673	1.5	28.1	14.4	68	0.05	30.9	11.1	364	3.08	18.2
BFX-33283	NAD 83-7V	597311	6989696	1.2	30	13.5	62	0.1	31.2	11.1	359	2.84	12.5
BFX-33284	NAD 83-7V	597320	6989720	1.4	33.4	12	71	0.05	36	13.3	416	3.06	18
BFX-33285	NAD 83-7V	597327	6989743	1.2	29.7	12.7	64	0.1	28.8	10.2	298	2.94	13.6
BFX-33286	NAD 83-7V	597335	6989767	1.3	28.2	13.1	59	0.05	24.7	8	230	2.77	12.3
BFX-33287	NAD 83-7V	597342	6989791	1.1	24.5	11.4	55	0.05	23.2	9.3	279	2.73	11.4
BFX-33288	NAD 83-7V	597352	6989815	1.3	31.7	13.4	65	0.1	30.6	11.4	341	3.22	19.5
BFX-33289	NAD 83-7V	597360	6989837	1.5	46.8	14.3	89	0.1	76	29.4	887	4.77	22.3
BFX-33290	NAD 83-7V	597367	6989861	3.7	36.3	18.3	90	0.2	39.2	15.5	617	4.06	63.8
BFX-33291	NAD 83-7V	597376	6989886	1.5	29.5	13.7	66	0.2	30.9	11.1	476	3.08	29.5
BFX-33292	NAD 83-7V	597384	6989910	1.2	25.1	23.8	80	0.2	31.7	11.7	380	3.1	141.9
BFX-33298	NAD 83-7V	596418	6988914	1.5	40	14.5	68	0.4	39.6	11.7	510	2.49	17.5
BFX-33301	NAD 83-7V	597131	6989782	3.3	41.9	15.6	81	0.3	25.6	6.4	165	2.6	40.1
BFX-33302	NAD 83-7V	597138	6989806	4.6	53	19.2	117	0.7	47.7	15.4	704	3.69	57.9
BFX-33303	NAD 83-7V	597147	6989829	3.6	35.6	18.9	119	0.2	39	11.3	352	3.57	66.5
BFX-33304	NAD 83-7V	596633	6989870	1.6	34.7	22.5	66	0.2	23.9	39.6	2915	4.1	16.9
BFX-33305	NAD 83-7V	596625	6989846	1.1	41.6	16.1	83	0.2	28.1	20.7	3445	2.8	9.5
BFX-33306	NAD 83-7V	596618	6989822	1.6	40.4	17.3	75	0.2	26.4	43.7	6817	3.5	15.7
BFX-33307	NAD 83-7V	596609	6989799	0.8	19.2	17.9	79	0.05	21.6	11	546	2.37	6.1
BFX-33308	NAD 83-7V	596601	6989775	0.8	24.4	15.4	67	0.05	28	14.7	659	2.53	5.3
BFX-33309	NAD 83-7V	596593	6989751	0.6	20.8	14.7	77	0.05	21.5	10.6	901	2.02	3.7
BFX-33310	NAD 83-7V	596585	6989728	0.4	21.3	17.7	72	0.1	25.4	9.8	274	2.04	3.9
BFX-33312	NAD 83-7V	596554	6989633	0.6	25.2	15.9	65	0.1	24.4	10	740	1.88	4.5
BFX-33313	NAD 83-7V	596546	6989610	0.6	29.2	20.4	69	0.05	27.8	11.9	505	2.4	4.4
BFX-33314	NAD 83-7V	596538	6989585	0.5	24.9	16.8	65	0.05	27.4	11.4	554	2.3	4.1
BFX-33315	NAD 83-7V	596529	6989561	0.5	17.5	17.6	68	0.05	24.3	11	452	2.43	4.4
BFX-33316	NAD 83-7V	596522	6989538	0.8	15.9	18.5	62	0.05	23.7	10.1	584	2.3	3.9
BFX-33317	NAD 83-7V	597019	6990083	0.9	37.7	8.4	72	0.1	62.8	15.3	377	2.53	26.8
BFX-33318	NAD 83-7V	597011	6990058	1.3	53.1	6.1	58	0.1	122.4	22.8	438	3.5	49.9
BFX-33319	NAD 83-7V	597003	6990035	1.4	39.2	4.7	51	0.05	96.5	14.6	257	2.66	37.3
BFX-33320	NAD 83-7V	596995	6990012	0.7	44.7	3.4	44	0.05	61.7	11.8	219	2.69	20.4
BFX-33321	NAD 83-7V	596980	6989965	1.2	96.5	5.3	57	0.1	150.1	29.8	586	3.06	24.2
BFX-33322	NAD 83-7V	596972	6989941	0.7	139.5	5.1	68	0.05	50.5	23	868	4.35	17.2
BFX-33323	NAD 83-7V	596964	6989916	1.1	76.3	5.7	54	0.1	84	27.8	541	2.89	10.9
BFX-33324	NAD 83-7V	596956	6989893	0.9	118.2	3.8	48	0.1	81.2	30.2	343	2.69	10.3
BFX-33325	NAD 83-7V	596949	6989869	1.4	45.8	4.5	62	0.05	179.1	24.6	366	3.18	34.4

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33273	1.2	12.7	5.7	14	0.2	1.1	0.3	61	0.13	0.049	21	35	0.55	123	0.082
BFX-33274	0.3	2	0.4	6	0.05	0.3	0.1	31	0.04	0.022	3	14	0.14	31	0.048
BFX-33275	1.4	6.7	5.1	16	0.2	1.1	0.2	55	0.14	0.054	25	34	0.5	177	0.056
BFX-33276	1.4	8.9	4.3	17	0.2	1	0.2	54	0.17	0.052	29	36	0.5	202	0.054
BFX-33277	1.2	3.9	1.4	16	0.3	0.8	0.2	76	0.12	0.074	15	34	0.32	120	0.047
BFX-33278	1.1	14.1	4.7	16	0.2	1.1	0.2	64	0.16	0.048	24	33	0.47	223	0.066
BFX-33279	0.5	1.4	1.2	10	0.05	0.4	0.2	47	0.08	0.033	7	18	0.2	54	0.057
BFX-33280	0.6	3.6	2.3	11	0.05	0.6	0.3	87	0.08	0.024	10	24	0.26	52	0.099
BFX-33281	1	10.2	2.4	16	0.3	1.2	0.2	61	0.17	0.05	19	30	0.45	190	0.057
BFX-33282	1.1	7.4	4.7	18	0.2	0.6	0.2	65	0.22	0.053	22	39	0.59	166	0.082
BFX-33283	1.3	8.2	5.3	19	0.1	0.6	0.2	62	0.24	0.052	24	38	0.6	190	0.088
BFX-33284	1.1	10.3	6	19	0.2	0.7	0.2	62	0.24	0.057	22	40	0.62	192	0.095
BFX-33285	1.3	5.4	4.8	17	0.2	0.6	0.2	62	0.2	0.049	22	39	0.6	166	0.08
BFX-33286	1.3	3.8	2.8	16	0.1	0.5	0.2	64	0.16	0.039	22	35	0.49	192	0.075
BFX-33287	1.1	5	2.9	17	0.2	0.5	0.2	61	0.19	0.042	19	36	0.51	168	0.077
BFX-33288	1.6	6	5.3	17	0.05	0.6	0.2	64	0.19	0.046	28	40	0.61	169	0.082
BFX-33289	1.2	23.6	6.9	25	0.1	0.9	0.2	84	0.46	0.159	31	84	1.13	319	0.125
BFX-33290	1.8	10.4	6.1	20	0.2	1.4	0.3	61	0.2	0.053	38	43	0.54	227	0.063
BFX-33291	1.4	7.2	3.6	20	0.2	0.7	0.2	57	0.24	0.052	33	36	0.48	207	0.059
BFX-33292	1.2	5.3	5.7	23	0.4	1.4	0.2	60	0.31	0.053	20	33	0.55	138	0.087
BFX-33298	2.7	5.7	3	26	0.2	0.5	0.3	57	0.38	0.07	25	45	0.72	398	0.07
BFX-33301	1.4	5.1	1.2	11	0.2	1.9	0.3	55	0.07	0.071	17	23	0.14	89	0.03
BFX-33302	2.5	10.1	2.4	22	0.9	2	0.3	61	0.22	0.09	24	34	0.31	325	0.032
BFX-33303	1.1	4.5	3.2	22	0.5	1.8	0.2	66	0.19	0.044	15	34	0.48	155	0.061
BFX-33304	4.4	2.4	8.1	35	0.2	0.4	0.4	74	0.7	0.151	38	45	0.83	538	0.064
BFX-33305	5.7	2.1	5.1	34	0.4	0.4	0.3	52	0.75	0.14	45	42	0.79	524	0.051
BFX-33306	6.2	4	8	27	0.5	0.5	0.3	56	0.5	0.159	35	48	0.71	534	0.046
BFX-33307	2.5	8.3	5.5	33	0.2	0.3	0.4	48	0.69	0.086	24	34	0.65	334	0.066
BFX-33308	2.4	2.2	5.9	35	0.2	0.3	0.3	60	0.64	0.091	22	52	0.95	418	0.088
BFX-33309	2.8	2.3	4.9	32	0.3	0.3	0.3	41	0.68	0.096	26	34	0.61	316	0.059
BFX-33310	3.1	3.2	7	27	0.1	0.3	0.6	51	0.54	0.079	22	46	0.89	306	0.08
BFX-33312	4.2	1.8	6	33	0.2	0.3	0.3	37	0.73	0.125	35	34	0.82	515	0.077
BFX-33313	4.2	4.5	9	30	0.2	0.3	0.4	52	0.6	0.063	31	37	0.91	312	0.09
BFX-33314	4.2	1.6	8	24	0.1	0.2	0.3	42	0.47	0.071	38	36	1.02	313	0.082
BFX-33315	2.2	1.7	8.9	23	0.2	0.2	0.3	50	0.39	0.056	18	35	1.11	251	0.109
BFX-33316	2.7	9.4	5.8	26	0.1	0.2	0.3	46	0.47	0.094	18	33	0.93	296	0.081
BFX-33317	1	2.8	2	20	0.2	1.7	0.2	59	0.33	0.063	11	82	0.82	280	0.063
BFX-33318	0.6	2.6	1.5	12	0.05	3.2	0.1	65	0.24	0.047	6	167	1.22	145	0.055
BFX-33319	0.4	1.7	1.1	12	0.05	1.4	0.05	61	0.28	0.043	5	150	0.98	158	0.052
BFX-33320	0.4	3.6	0.9	11	0.1	0.9	0.05	68	0.24	0.03	5	84	0.89	193	0.046
BFX-33321	0.6	2.9	0.6	19	0.2	0.6	0.1	75	0.44	0.065	7	148	1.15	261	0.046
BFX-33322	0.7	3.4	1.5	17	0.2	0.4	0.05	134	0.38	0.08	9	69	1.35	478	0.098
BFX-33323	0.5	1.6	0.8	15	0.1	0.4	0.1	71	0.29	0.091	6	125	1.03	150	0.056
BFX-33324	0.4	2.5	1	14	0.1	0.4	0.05	55	0.35	0.087	5	88	0.73	107	0.051
BFX-33325	0.6	3.2	1.5	16	0.2	0.3	0.05	85	0.34	0.053	6	247	1.64	168	0.073

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33273	2	1.42	0.01	0.15	0.1	0.03	3.1	0.2	0.07	6	0.6	1DX15	VAN08007918
BFX-33274	0.5	0.45	0.012	0.06	0.05	0.02	0.8	0.05	0.07	4	0.25	1DX15	VAN08007918
BFX-33275	2	1.49	0.008	0.12	0.1	0.05	2.9	0.3	0.06	5	0.25	1DX15	VAN08007918
BFX-33276	3	1.62	0.008	0.12	0.1	0.05	3.5	0.2	0.05	5	0.5	1DX15	VAN08007918
BFX-33277	1	1.55	0.007	0.06	0.05	0.03	2.5	0.2	0.025	7	0.25	1DX15	VAN08007918
BFX-33278	2	1.56	0.008	0.1	0.1	0.03	3.4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33279	0.5	0.95	0.013	0.03	0.05	0.02	1.7	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33280	0.5	1.07	0.01	0.04	0.05	0.02	2	0.1	0.025	9	0.25	1DX15	VAN08007918
BFX-33281	1	1.43	0.009	0.08	0.1	0.03	2.7	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33282	2	1.56	0.009	0.11	0.05	0.03	3.3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33283	2	1.61	0.011	0.12	0.1	0.03	3.6	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33284	2	1.67	0.012	0.14	0.1	0.03	4	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33285	2	1.78	0.009	0.11	0.2	0.03	3.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33286	1	1.37	0.008	0.09	0.1	0.04	3	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33287	2	1.56	0.01	0.1	0.1	0.03	3.1	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33288	2	1.83	0.01	0.11	0.1	0.05	3.8	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33289	2	1.9	0.011	0.45	0.3	0.05	5.4	0.5	0.025	7	0.7	1DX15	VAN08007918
BFX-33290	2	1.49	0.009	0.14	0.1	0.06	4	0.2	0.025	6	0.25	1DX15	VAN08007918
BFX-33291	3	1.48	0.012	0.11	0.05	0.04	3.6	0.2	0.05	6	0.25	1DX15	VAN08007918
BFX-33292	2	1.25	0.011	0.1	0.2	0.06	3.3	0.2	0.025	4	0.25	1DX15	VAN08007918
BFX-33298	1	1.43	0.013	0.11	0.1	0.07	3.9	0.2	0.07	6	0.25	1DX15	VAN08007918
BFX-33301	1	0.82	0.005	0.06	0.1	0.06	2.2	0.2	0.05	4	0.8	1DX15	VAN08007918
BFX-33302	2	1.41	0.009	0.06	0.2	0.13	4	0.2	0.08	4	1.1	1DX15	VAN08007918
BFX-33303	2	1.51	0.009	0.07	0.1	0.04	3	0.2	0.06	5	0.5	1DX15	VAN08007918
BFX-33304	3	1.48	0.013	0.22	0.05	0.06	5.4	0.4	0.13	6	0.25	1DX15	VAN08007918
BFX-33305	2	1.48	0.016	0.12	0.05	0.07	4.9	0.4	0.13	6	0.25	1DX15	VAN08007918
BFX-33306	1	1.49	0.013	0.13	0.05	0.07	5.8	0.5	0.13	5	0.25	1DX15	VAN08007918
BFX-33307	2	1.19	0.013	0.13	0.1	0.03	3	0.2	0.12	5	0.25	1DX15	VAN08007918
BFX-33308	2	1.5	0.016	0.21	0.05	0.03	3.7	0.2	0.09	6	0.25	1DX15	VAN08007918
BFX-33309	2	1.16	0.015	0.15	0.05	0.05	3	0.2	0.09	5	0.25	1DX15	VAN08007918
BFX-33310	1	1.5	0.014	0.16	0.1	0.05	3.9	0.2	0.09	6	0.25	1DX15	VAN08007918
BFX-33312	3	1.2	0.017	0.33	0.1	0.04	2.9	0.3	0.14	4	0.25	1DX15	VAN08007918
BFX-33313	2	1.4	0.018	0.14	0.1	0.03	4.3	0.3	0.07	5	0.25	1DX15	VAN08007918
BFX-33314	2	1.44	0.013	0.22	0.05	0.03	3.1	0.3	0.05	5	0.25	1DX15	VAN08007918
BFX-33315	2	1.52	0.013	0.21	0.05	0.02	3	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33316	2	1.4	0.012	0.15	0.1	0.07	2.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33317	2	1.48	0.012	0.07	0.2	0.04	4	0.1	0.025	5	0.7	1DX15	VAN08007918
BFX-33318	2	1.3	0.011	0.05	0.05	0.06	3.7	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33319	1	1.05	0.013	0.06	0.05	0.04	2.8	0.1	0.025	4	0.25	1DX15	VAN08007918
BFX-33320	1	1.19	0.015	0.08	0.05	0.07	4.1	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33321	2	1.43	0.019	0.05	0.05	0.05	4.3	0.1	0.07	5	0.8	1DX15	VAN08007918
BFX-33322	2	2.04	0.014	0.36	0.05	0.03	9.6	0.1	0.025	7	0.5	1DX15	VAN08007918
BFX-33323	0.5	1.36	0.014	0.06	0.1	0.03	3.1	0.05	0.025	5	0.25	1DX15	VAN08007918
BFX-33324	0.5	0.99	0.017	0.05	0.1	0.03	2.7	0.05	0.025	4	0.7	1DX15	VAN08007918
BFX-33325	2	1.45	0.014	0.05	0.05	0.02	4.1	0.1	0.025	5	0.8	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33326	NAD 83-7V	596940	6989844	0.5	47.9	4.5	84	0.1	554.1	43.8	639	4.07	31.4
BFX-33327	NAD 83-7V	596933	6989822	1.3	74.5	6	120	0.1	490.9	40.1	1007	4.72	134.7
BFX-33328	NAD 83-7V	596924	6989798	1.8	45.4	29.4	94	0.1	54.2	15.6	1140	3.48	103.2
BFX-33329	NAD 83-7V	597020	6989767	4	39.4	17.2	88	0.6	27.9	7.8	187	2.54	219.9
BFX-33330	NAD 83-7V	597030	6989791	2.4	33.3	13.1	79	0.2	28.8	10.4	434	3.11	97.1
BFX-33331	NAD 83-7V	597037	6989814	2.2	43.3	13.3	88	0.4	38.8	14	538	3.24	102.9
BFX-33332	NAD 83-7V	597046	6989840	2.8	36	18.9	92	0.2	26.4	8.7	354	3.19	64.2
BFX-33333	NAD 83-7V	597053	6989862	4.9	78.5	22.5	158	0.8	46	12.1	913	3.74	469.7
BFX-33334	NAD 83-7V	597061	6989886	4.5	61.7	18.1	142	0.3	33.7	7.2	221	3.08	479.8
BFX-33335	NAD 83-7V	597067	6989907	8.8	151.6	29	245	1	46.2	8.1	239	3.66	360.7
BFX-33336	NAD 83-7V	597076	6989932	6.3	94.5	26.9	174	1.6	47.4	15.6	806	3.75	526
BFX-33337	NAD 83-7V	597084	6989956	2.8	57.7	16	118	0.7	30.7	10.6	342	2.98	138.7
BFX-33338	NAD 83-7V	597091	6989978	2.8	46.8	15.5	118	0.4	38.9	11.6	683	3.11	379.5
BFX-33339	NAD 83-7V	597099	6990004	3.5	48.1	17.2	122	0.8	33.3	15.5	1051	3.36	383.8
BFX-33340	NAD 83-7V	597107	6990030	3.3	57.9	16.6	117	1	38.5	12.7	843	3.36	274.9
BFX-33341	NAD 83-7V	597115	6990052	4	55.2	18.6	138	0.8	40	17	1589	3.41	311.6
BFX-33342	NAD 83-7V	597210	6990020	3.4	60.8	15.9	153	0.7	55.5	14.3	639	3.37	485.3
BFX-33343	NAD 83-7V	597202	6989994	1.5	18.3	9.7	41	0.1	11.4	4.2	202	1.89	21.1
BFX-33345	NAD 83-7V	597195	6989973	2.7	36.9	18.4	129	0.2	50.5	14.2	693	3.43	65.7
BFX-33346	NAD 83-7V	597187	6989950	3.4	28.5	18	130	0.2	47.1	14.2	786	3.16	71.7
BFX-33347	NAD 83-7V	597178	6989925	3	48	20.6	148	0.6	49.8	15.6	679	3.72	132.2
BFX-33348	NAD 83-7V	597170	6989900	2.6	28.5	19.1	114	0.4	34.1	11.9	381	2.98	71.5
BFX-33349	NAD 83-7V	597163	6989878	2.7	36.8	18.2	115	0.2	36.8	11.4	310	3.17	62.6
BFX-33350	NAD 83-7V	597155	6989853	3.5	38.1	19	99	0.3	30.8	9.3	356	3.17	59.2
BFX-33377	NAD 83-7V	596721	6990131	0.6	12.7	13.3	61	0.05	24.8	10.5	221	2.32	7.6
BFX-33378	NAD 83-7V	596689	6990035	0.8	29.6	10.7	77	0.05	32.1	17.8	576	3.18	5.3
BFX-33379	NAD 83-7V	596665	6989964	0.7	34.5	14.6	67	0.05	18.4	10.9	745	2.19	4
BFX-33380	NAD 83-7V	596657	6989942	0.7	25.9	12.5	82	0.05	25.8	15.4	670	2.83	3.4
BFX-33381	NAD 83-7V	596648	6989917	0.6	19.8	15.2	74	0.05	24.2	15.1	723	2.5	5.2
BFX-33382	NAD 83-7V	596641	6989893	0.4	17.2	6.9	54	0.05	21.6	11.1	415	1.96	6.4
BFX-33383	NAD 83-7V	596735	6989862	0.7	34.6	17.5	72	0.1	37.3	17.3	611	3.36	6.7
BFX-33384	NAD 83-7V	596748	6989883	0.8	17.5	14.4	74	0.05	24	14.3	586	2.26	4
BFX-33385	NAD 83-7V	596754	6989908	1.1	19.7	20.6	73	0.05	26	13.5	502	2.8	7
BFX-33386	NAD 83-7V	596762	6989930	0.5	24.6	18.3	71	0.1	26.8	12	444	2.51	6
BFX-33387	NAD 83-7V	596769	6989955	0.6	21.7	19.6	82	0.1	26.7	13	526	2.6	5.4
BFX-33388	NAD 83-7V	596778	6989979	0.5	17	15.3	60	0.05	25.3	11.2	364	2.37	6
BFX-33389	NAD 83-7V	596784	6990002	0.4	22.3	15.7	57	0.05	26.9	12.8	409	2.48	6.8
BFX-33390	NAD 83-7V	596816	6990098	1.1	16.2	21.3	62	0.05	17.6	10.3	878	2.92	12.6
BFX-33391	NAD 83-7V	596830	6990146	0.5	15.6	13.3	55	0.05	22.3	8.3	234	1.87	2.7
BFX-33392	NAD 83-7V	596869	6989949	0.7	47.6	12.5	64	0.1	22.3	10.5	318	2.57	9.5
BFX-33393	NAD 83-7V	596861	6989926	0.7	46.5	17	90	0.1	31.7	16.4	778	3.05	10
BFX-33394	NAD 83-7V	596853	6989902	0.8	38.4	19.5	77	0.1	29.9	14.7	554	3.02	9.1
BFX-33395	NAD 83-7V	596845	6989877	0.9	45.8	19.2	80	0.1	33.5	15.7	802	3.14	11.3
BFX-33396	NAD 83-7V	596838	6989853	0.7	59.7	5.3	67	0.1	32.9	13.5	317	2.67	6.8
BFX-33397	NAD 83-7V	596830	6989830	1.1	29.9	12.7	70	0.05	27.5	18.6	889	3.32	8.9

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33326	0.5	2.9	2	20	0.3	0.5	0.1	106	0.46	0.031	7	577	3.94	427	0.199
BFX-33327	0.9	2.9	3.5	18	0.4	1	0.2	104	0.39	0.056	13	378	2.87	557	0.152
BFX-33328	1.5	4.2	3.3	13	0.4	3.8	0.8	53	0.11	0.045	19	41	0.42	152	0.043
BFX-33329	1.4	7.6	2.4	32	0.4	27.2	0.2	51	0.13	0.049	15	30	0.37	271	0.043
BFX-33330	1.1	3.6	2.3	15	0.5	5.5	0.2	57	0.12	0.045	13	29	0.43	150	0.052
BFX-33331	1.2	5	2.1	15	0.4	3.3	0.2	62	0.13	0.049	12	33	0.51	164	0.052
BFX-33332	1.2	3.9	1.4	12	0.3	2.4	0.2	74	0.09	0.045	12	28	0.28	135	0.046
BFX-33333	2.4	7.7	1.4	38	1.2	10	0.3	56	0.09	0.091	22	24	0.19	257	0.023
BFX-33334	1.5	3.9	2.1	18	0.4	11.5	0.3	69	0.05	0.039	20	17	0.07	140	0.041
BFX-33335	5.1	3.6	0.6	32	0.8	22.1	0.3	62	0.08	0.106	26	21	0.07	240	0.019
BFX-33336	4.7	20.5	2.7	32	1.3	13.5	0.3	55	0.14	0.095	25	27	0.25	535	0.027
BFX-33337	2.4	8.4	3.4	24	0.8	6	0.2	55	0.22	0.073	18	29	0.45	303	0.054
BFX-33338	1.4	9.1	2	25	0.9	10.2	0.2	50	0.18	0.061	15	24	0.3	225	0.039
BFX-33339	2.3	9.9	2.2	21	0.7	9.3	0.3	57	0.16	0.068	16	31	0.39	249	0.046
BFX-33340	2.2	8.5	2.5	23	0.8	9.1	0.3	54	0.19	0.072	21	31	0.37	412	0.042
BFX-33341	2	9.2	2.1	26	1.2	8.2	0.3	58	0.15	0.067	20	29	0.31	444	0.037
BFX-33342	2	7.4	5.7	27	0.9	8.9	0.3	50	0.2	0.074	28	28	0.3	334	0.037
BFX-33343	0.5	2.3	0.8	9	0.2	0.8	0.2	55	0.07	0.032	8	16	0.14	45	0.054
BFX-33345	1.3	3.4	4.9	17	0.7	2.2	0.3	64	0.21	0.055	20	81	0.57	125	0.074
BFX-33346	0.9	5.4	2.3	16	0.4	2.6	0.2	66	0.16	0.055	15	79	0.44	92	0.064
BFX-33347	1.9	8.2	3.4	18	0.8	4.5	0.3	57	0.19	0.072	28	34	0.39	277	0.043
BFX-33348	1.2	13	4.1	15	0.7	2.8	0.2	48	0.14	0.051	20	27	0.39	167	0.044
BFX-33349	1.5	6.2	5.4	18	0.4	2.2	0.2	52	0.18	0.046	23	32	0.49	181	0.061
BFX-33350	1.4	3.5	1.2	17	0.6	1.4	0.3	69	0.14	0.08	16	32	0.31	156	0.044
BFX-33377	1	1.8	4.8	25	0.1	0.4	0.2	59	0.48	0.067	10	41	0.82	227	0.108
BFX-33378	1.7	0.8	4.4	34	0.1	0.4	0.2	84	0.65	0.055	15	58	1.17	352	0.102
BFX-33379	3.8	1.3	5.1	35	0.3	0.3	0.3	43	0.81	0.09	34	28	0.6	442	0.06
BFX-33380	2.3	8.1	5.3	30	0.3	0.3	0.2	75	0.72	0.091	20	51	1.08	485	0.096
BFX-33381	1.4	1.1	4.4	26	0.05	0.3	0.3	61	0.54	0.073	11	50	0.93	406	0.076
BFX-33382	0.9	4.2	3.4	19	0.05	0.3	0.1	48	0.46	0.113	10	40	0.79	253	0.07
BFX-33383	3	1.7	8.6	26	0.1	0.3	0.2	68	0.48	0.066	30	56	1.17	471	0.081
BFX-33384	1.4	0.7	4.5	29	0.2	0.3	0.3	48	0.66	0.092	10	40	0.82	446	0.081
BFX-33385	2.4	1.9	7.9	25	0.1	0.3	0.4	54	0.52	0.07	20	39	0.96	355	0.088
BFX-33386	4.3	1.5	7.6	31	0.1	0.3	0.3	52	0.67	0.079	32	40	0.94	395	0.073
BFX-33387	3.8	2.3	6.9	32	0.2	0.3	0.3	55	0.67	0.08	27	42	0.92	363	0.071
BFX-33388	2	3.4	5.9	24	0.05	0.3	0.2	50	0.47	0.042	17	38	0.9	260	0.095
BFX-33389	2.5	1.8	7.3	23	0.1	0.4	0.2	58	0.42	0.057	24	42	0.92	300	0.099
BFX-33390	1.6	0.7	5.1	23	0.05	0.3	0.4	59	0.4	0.083	20	32	0.51	327	0.049
BFX-33391	1.1	2.4	3.7	22	0.05	0.4	0.2	45	0.39	0.053	12	38	0.8	211	0.09
BFX-33392	2.6	3.4	5	29	0.1	0.4	0.2	58	0.58	0.072	35	45	0.8	274	0.069
BFX-33393	4.4	3.9	8	37	0.2	0.4	0.3	60	0.81	0.094	57	52	1.09	532	0.091
BFX-33394	2.5	2.4	7.9	29	0.1	0.4	0.3	65	0.51	0.088	25	54	1.05	355	0.085
BFX-33395	2.4	2.5	7.2	28	0.1	0.4	0.3	67	0.65	0.086	19	53	1.07	384	0.097
BFX-33396	1.1	3.8	2.4	25	0.1	0.3	0.1	76	0.6	0.064	13	62	1.1	298	0.087
BFX-33397	1.5	1.9	4.9	20	0.2	0.3	0.3	72	0.27	0.074	14	55	0.86	316	0.115

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33326	2	2.7	0.013	0.56	0.05	0.03	6.6	0.6	0.025	9	0.6	1DX15	VAN08007918
BFX-33327	1	2.22	0.014	0.75	0.05	0.05	12.1	0.8	0.025	7	0.7	1DX15	VAN08007918
BFX-33328	1	1.41	0.008	0.07	0.05	0.06	2.8	0.3	0.025	4	0.6	1DX15	VAN08007918
BFX-33329	2	1.02	0.006	0.07	0.2	0.3	2.4	0.3	0.025	3	2.1	1DX15	VAN08007918
BFX-33330	2	1.57	0.009	0.05	0.2	0.08	2.8	0.2	0.025	4	0.8	1DX15	VAN08007918
BFX-33331	1	2.13	0.01	0.06	0.1	0.08	3.4	0.1	0.025	5	0.7	1DX15	VAN08007918
BFX-33332	1	1.43	0.007	0.05	0.1	0.06	2.3	0.2	0.025	6	0.9	1DX15	VAN08007918
BFX-33333	1	0.91	0.008	0.07	0.1	0.1	2.2	0.3	0.08	4	1.8	1DX15	VAN08007918
BFX-33334	0.5	0.62	0.006	0.05	0.1	0.05	1.9	0.3	0.05	5	1.4	1DX15	VAN08007918
BFX-33335	2	0.82	0.01	0.07	0.2	0.12	1.7	0.4	0.13	4	3.3	1DX15	VAN08007918
BFX-33336	1	1.17	0.008	0.07	0.2	0.59	4.5	0.5	0.06	4	2.2	1DX15	VAN08007918
BFX-33337	2	1.32	0.012	0.07	0.2	0.29	3.9	0.4	0.025	4	1.1	1DX15	VAN08007918
BFX-33338	0.5	1.04	0.009	0.07	0.2	0.23	2.8	0.6	0.06	3	1.1	1DX15	VAN08007918
BFX-33339	1	1.53	0.011	0.07	0.2	0.42	3.3	0.7	0.025	5	1.2	1DX15	VAN08007918
BFX-33340	1	1.5	0.009	0.08	0.2	0.36	3.9	0.4	0.025	4	1.3	1DX15	VAN08007918
BFX-33341	2	1.22	0.009	0.08	0.2	0.27	3.6	0.4	0.05	5	1.4	1DX15	VAN08007918
BFX-33342	1	0.95	0.009	0.08	0.2	0.11	3.4	0.3	0.07	3	1.1	1DX15	VAN08007918
BFX-33343	0.5	0.78	0.013	0.04	0.05	0.03	1.7	0.1	0.025	5	0.25	1DX15	VAN08007918
BFX-33345	1	1.34	0.01	0.12	0.1	0.04	3.3	0.2	0.025	5	0.7	1DX15	VAN08007918
BFX-33346	2	1.12	0.009	0.08	0.1	0.04	2.4	0.2	0.025	5	0.7	1DX15	VAN08007918
BFX-33347	0.5	1.3	0.008	0.1	0.1	0.14	3.8	0.3	0.05	4	0.9	1DX15	VAN08007918
BFX-33348	2	1.22	0.008	0.07	0.1	0.1	2.7	0.3	0.025	4	0.6	1DX15	VAN08007918
BFX-33349	2	1.35	0.009	0.09	0.2	0.09	3.1	0.2	0.025	4	0.8	1DX15	VAN08007918
BFX-33350	1	1.42	0.008	0.06	0.1	0.07	2.2	0.1	0.07	6	1.2	1DX15	VAN08007918
BFX-33377	1	1.67	0.013	0.08	0.1	0.04	3.2	0.1	0.025	6	0.6	1DX15	VAN08007918
BFX-33378	2	1.6	0.018	0.2	0.1	0.03	4.8	0.2	0.06	5	0.25	1DX15	VAN08007918
BFX-33379	2	1.11	0.018	0.14	0.1	0.04	3.4	0.2	0.1	4	0.25	1DX15	VAN08007918
BFX-33380	3	1.52	0.016	0.29	0.05	0.06	5.3	0.2	0.09	6	0.7	1DX15	VAN08007918
BFX-33381	1	1.46	0.011	0.17	0.05	0.04	3.4	0.2	0.06	5	0.6	1DX15	VAN08007918
BFX-33382	0.5	1.13	0.009	0.14	0.1	0.02	2.6	0.1	0.025	4	0.25	1DX15	VAN08007918
BFX-33383	1	1.65	0.012	0.24	0.05	0.05	5.9	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33384	2	1.13	0.013	0.23	0.05	0.04	2.6	0.2	0.09	5	0.8	1DX15	VAN08007918
BFX-33385	2	1.44	0.011	0.25	0.05	0.03	3.2	0.3	0.025	6	0.25	1DX15	VAN08007918
BFX-33386	2	1.49	0.012	0.21	0.05	0.06	4.3	0.3	0.05	5	0.7	1DX15	VAN08007918
BFX-33387	2	1.46	0.013	0.16	0.05	0.06	3.8	0.2	0.06	5	0.25	1DX15	VAN08007918
BFX-33388	1	1.31	0.014	0.15	0.1	0.03	3.4	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33389	1	1.41	0.015	0.21	0.1	0.03	4.4	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33390	2	1.06	0.01	0.14	0.05	0.03	2.6	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33391	0.5	1.54	0.011	0.07	0.1	0.06	2.7	0.1	0.025	6	0.25	1DX15	VAN08007918
BFX-33392	1	1.51	0.014	0.1	0.1	0.08	4.6	0.1	0.07	6	0.7	1DX15	VAN08007918
BFX-33393	2	1.63	0.014	0.19	0.1	0.05	5.5	0.3	0.06	7	0.6	1DX15	VAN08007918
BFX-33394	1	1.7	0.013	0.19	0.05	0.05	5.2	0.2	0.025	7	0.6	1DX15	VAN08007918
BFX-33395	2	1.72	0.015	0.19	0.1	0.04	4.7	0.2	0.025	6	0.5	1DX15	VAN08007918
BFX-33396	1	1.57	0.015	0.14	0.05	0.06	4.6	0.05	0.06	6	0.25	1DX15	VAN08007918
BFX-33397	0.5	1.52	0.01	0.29	0.1	0.05	3.5	0.2	0.025	8	0.25	1DX15	VAN08007918

Sample	Datum	Easting	Northing	Mo	Cu	Pb	Zn	Ag	Ni	Co	Mn	Fe	As
BFX-33398	NAD 83-7V	596777	6989977	0.5	16.6	15.9	62	0.05	24.9	11.2	375	2.41	6.3
BFX-33399	NAD 83-7V	597115	6989736	2.1	29.1	14.8	51	0.2	31.6	5.8	176	1.61	25.9
BFX-33400	NAD 83-7V	597123	6989758	4.7	44.8	15.8	109	0.5	42.1	11.1	336	3.32	52

Sample	U	Au	Th	Sr	Cd	Sb	Bi	V	Ca	P	La	Cr	Mg	Ba	Ti
BFX-33398	2	2.5	6.3	25	0.05	0.3	0.2	50	0.45	0.041	17	37	0.9	255	0.099
BFX-33399	0.8	6.8	0.4	14	0.3	1.7	0.2	45	0.11	0.043	14	34	0.24	298	0.028
BFX-33400	1.3	7.5	3.4	17	0.5	2.8	0.3	61	0.16	0.062	18	25	0.25	224	0.035

Sample	B	Al	Na	K	W	Hg	Sc	Tl	S	Ga	Se	Method	Acme File
BFX-33398	2	1.32	0.014	0.15	0.1	0.03	3.1	0.2	0.025	5	0.25	1DX15	VAN08007918
BFX-33399	1	0.74	0.008	0.04	0.05	0.05	1.4	0.1	0.025	5	0.8	1DX15	VAN08007918
BFX-33400	0.5	1	0.009	0.06	0.2	0.07	2.7	0.2	0.025	4	1.3	1DX15	VAN08007918