

**1st Year Assessment Report on soil sampling on the ISTOK property,
Yukon Territory**

**Claim Numbers YF39062-YF39093
(NTS Map Sheet 105I04)**

Submitted by

Aleksandar Miskovic, PhD, P.Geo.

for

0926764 BC Ltd.

on

28th of October, 2013

Work year: 1

Total claims: 39

Total expenditures: \$27,654.11

Table of Contents

	Page
Introduction	3
Location and Access	3
Geology and Mineralization	3
Current Work Program	7
Results	8
Conclusion and Recommendations	8
References	8

List of Figures

Figure 1. Property Location – Yukon Territory NTS	5
Figure 2. Claims Location Map	6
Figure 3. Grid and Soil Sample Locations	7

List of Appendices

Appendix 1. Tabulated soil geochemistry data with sample locations and ID numbers
Appendix 2. Assay Certificates
Appendix 3. Personnel and Contractors
Appendix 4. Statement of Expenditures

Introduction

The ISTOK property consists of 39 claim blocks within a single claim license, located in the southern Selwyn Basin of the south central Yukon Territory (Figure 1 and 2). The property was staked in March of 2012 for its gold potential, and covers previously identified anomaly shown in the Federal Government surveys. This report describes exploration work carried out on the property during 2012.

Location and Access

The ISTOK property is located in the 105I04 1:50,000 NTS map area, about 143 kilometers ENE of the town of Ross River and 24.3 km east of Traffic Mountain in southeastern Yukon Territory. The Robert Campbell Highway passes about 71 kilometres from the southern boundary of the property (Figure 1). Further access to the property may be obtained by quad trails or by helicopter.

Geology and Mineralization

Much of the regional geology is underlain by uppermost Proterozoic and Lower Paleozoic basinal strata (Selwyn Basin) that formed in a re-entrant within shallow-water carbonate and elastic strata (Mackenzie Platform) along the outer margin of ancestral North America (Gordey, 2013).

The oldest exposed strata consist of latest Proterozoic to Cambrian turbiditic quartz sandstone and maroon slate succeeded by local Cambrian shale and capped by a widespread, 300 m thick Cambro-Ordovician basinal limestone and siltstone. A starved sequence of shale, chert, and siltstone with local volcanic rocks was deposited during the Ordovician to Middle Devonian (Gordey, 2013). Regional sub-Upper Cambrian (and other local unconformities suggest intermittent extension and syndepositional faulting.

In the Late Devonian, turbiditic quartz-chert sandstone, and chert-pebble conglomerate were deposited in submarine fan complexes as shale deposition transgressed far northeastward onto the ancestral margin (Gordey, 2013). The coarse elastic units, perhaps 1200 m in aggregate thickness, were derived from elevated fault blocks of Selwyn Basin strata to the north and west, including latest Proterozoic gritty quartzite and Ordovician-Silurian chert. A transtensional event is indicated by an absence of compressional deformation, local felsic volcanism, and widespread stratiform barite ($\pm$ lead-zinc) occurrences (e.g. Tom, Jason).

A regional unconformity occurs beneath upper Devonian strata. Succeeding Lower Mississippian and Triassic carbonate and siliciclastic sedimentary rocks separated by Carboniferous to Permian chert and shale (total 1700 m) were likely deposited on a silty to muddy shallow marine shelf (Gordey, 2013). A regional unconformity occurs beneath Middle to Upper Triassic and possibly beneath Upper Mississippian strata. Rare Lower Cretaceous chert-

bearing rocks unconformably overlie Upper Triassic strata and herald the Jura-Cretaceous orogenic uplift to the west. In the Early Cretaceous, northeast southwest compression led to northwest-trending, regional scale folds, and extensive, shallow-dipping thrust faults. Incompetent Ordovician to Devonian shale and chert are complexly deformed above a regional, flat-lying, buried detachment. Shortening in Cambro-Ordovician to Devonian strata is at least 50% (Gordey, 2013). Folds and faults seem to ultimately root in a basal detachment that extends beneath the region and across the entire deformed belt. Upper Paleozoic oceanic rocks of the Slide Mountain terrane and meta-sedimentary rocks of the Yukon-Tanana terrane were emplaced as thrust sheets during this deformation.

Large stratiform zinc-lead deposits are known in Early Cambrian (Faro) and Early Silurian (Howards Pass) strata. Furthermore, the intrusives of the mid-Cretaceous Selwyn Plutonic Suite are regionally associated with tungsten-copper skarn (e.g. Mactung) and base-metal vein occurrences. Pull-apart basins formed along the dextral Tintina Fault zone since Cretaceous have accumulated fluvial elastic rocks and bimodal volcanic rocks that host epithermal precious-metal veins (e.g. Grew Creek).

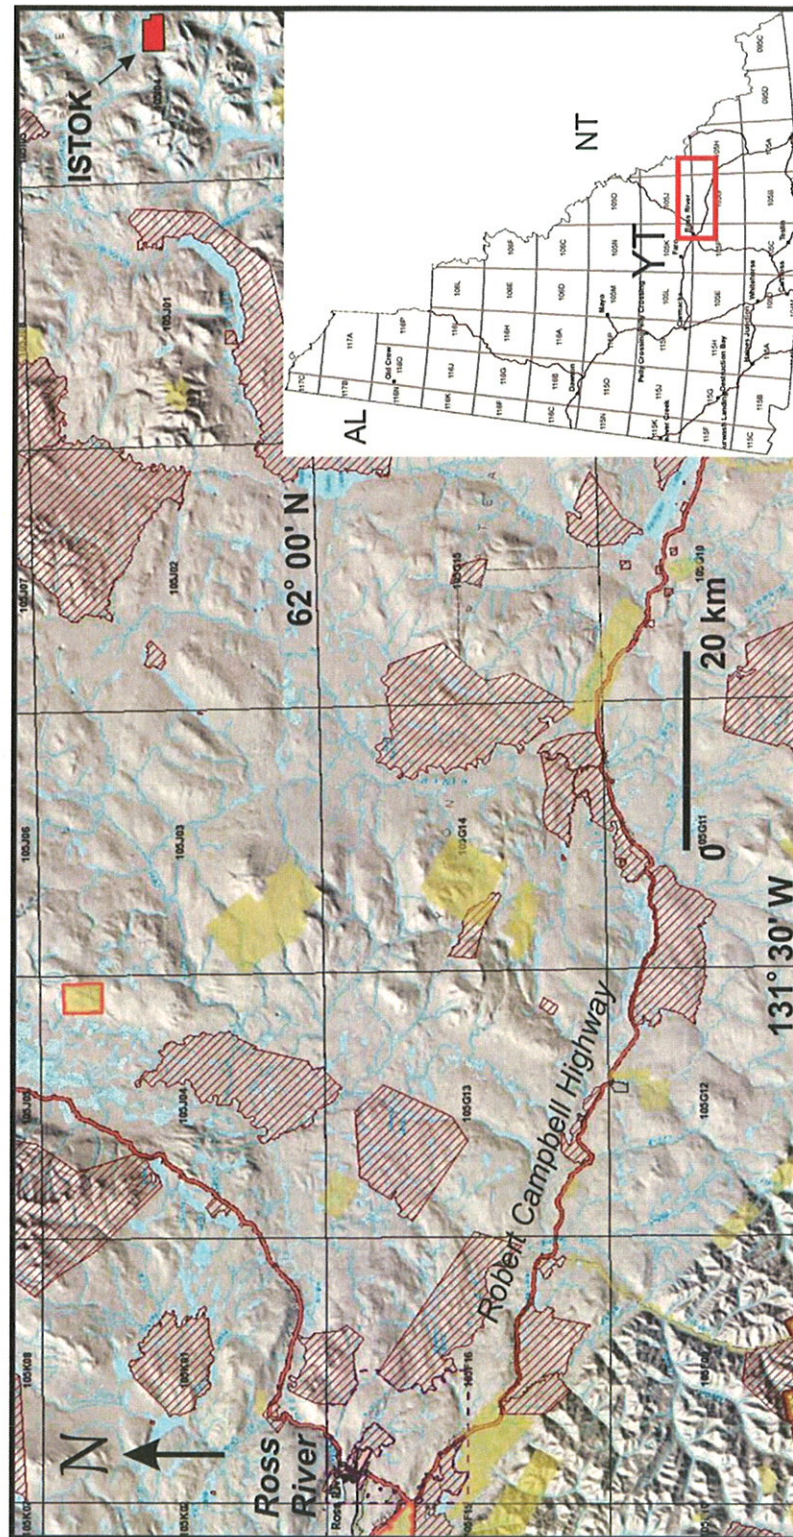
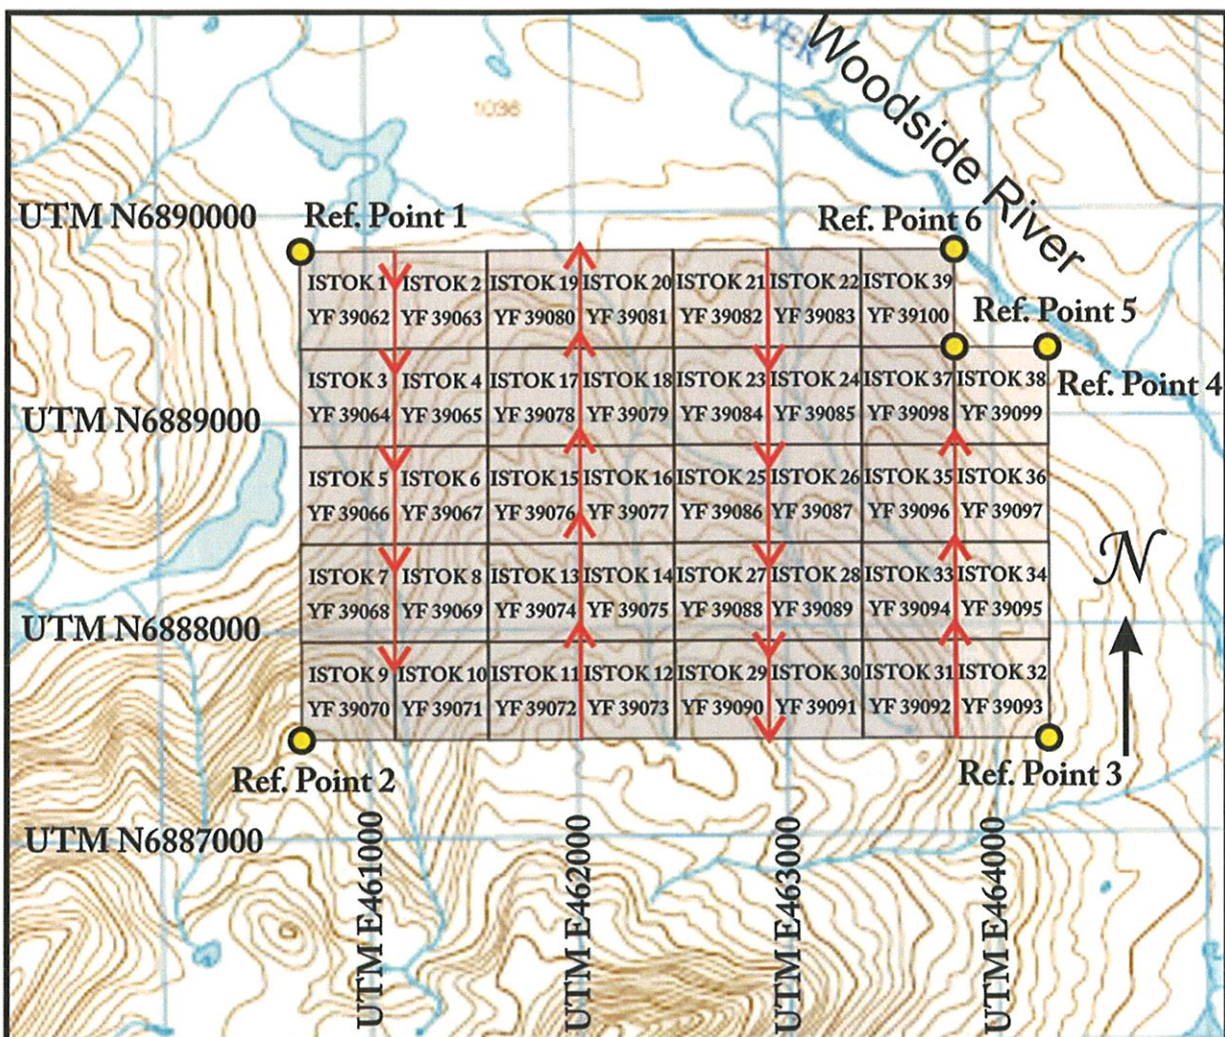


Figure 1. The ISTOK property claims east-northeast of Ross River within the context of the neighboring claims and the Yukon Territory NTS map grid.

NTS Map Sheet: 105I04 (Mt. Pike)



Reference Point 1: N6889713 E460700 (62.138° N; 129.753° W)

Reference Point 2: N6887427 E460700 (62.117° N; 129.753° W)

Reference Point 3: N6887427 E464357 (62.117° N; 129.683° W)

Reference Point 4: N6889256 E464357 (62.134° N; 129.683° W)

Reference Point 5: N6889256 E463900 (62.134° N; 129.692° W)

Reference Point 6: N6889713 E463900 (62.138° N; 129.692° W)

Note: Claim blocks 1500 ft.x1500 ft.; UTM datum: NAD 83; zone 9

Figure 2. Geographical extent of the ISTOK property claims east of Ross River, YT.

Current Work Program

Prospecting on the ISTOK property was conducted in August of 2012. 385 soil samples were collected on 50-metre spacing grid along topographic highs (ridges and spurs) over most of the property by sampling B horizon at approximately 60 cm depth using augers. A hand-held GPS was used for location control and a total of 280 soil samples were collected. Sample locations are shown on Figures 3 and 4a-e. Samples were sent to ALS Laboratories in North Vancouver, BC where they were screened to 180 microns and analyzed for 50 elements by *aqua regia* digestion with ICP MS finish using the Super Trace element package. A list of sample locations, sample IDs and geochemical results is found in Appendix 1 and assay certificates are in Appendix 2. Personnel and expenditures for the work are listed in appendices 3 and 4.

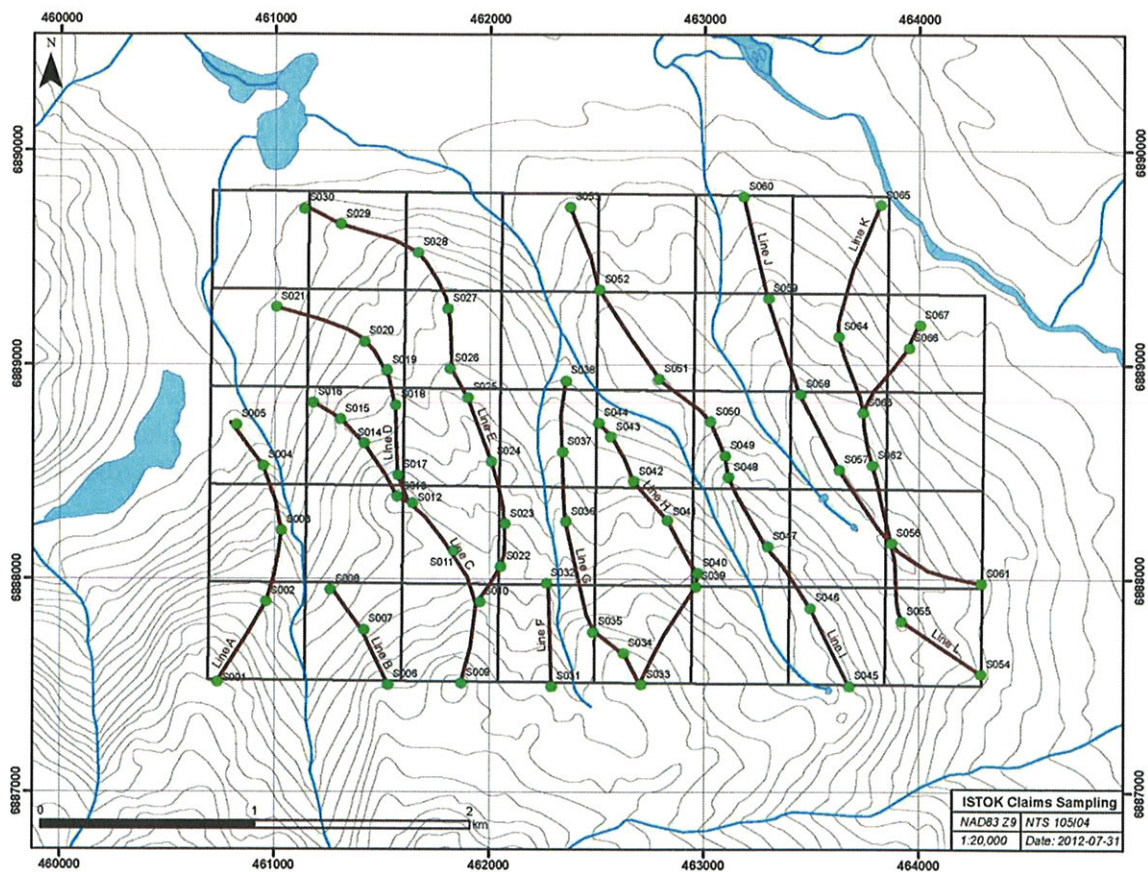


Figure 3. Map of the traverses along which the “ridge and spur”-type of soil sampling was conducted on the ISTOK property in 2012.


Results

Although the results of the 2012 soil sampling point to the presence of somewhat elevated values of gold and arsenic (43.5 **ppb Au** and **40 ppm As**; see data tables in the Appendix 1), no spatially systematic geochemical trends exist on the property.

Conclusions and Recommendations

The soil sampling to date does not confirm previous geochemical anomalies identified by the Governmental surveys near the ISTOK property to date. However, considering the favorable host lithologies, the locality remains potentially prospective for the Carlin-style, sediment-hosted gold mineralization. Further soil and stream sampling, limited in scope, is indeed recommended together with a reconnaissance geological mapping south of the claim area. Trenching and/or diamond drilling may be required, depending on results.

Respectfully,

A handwritten signature in black ink, appearing to read 'Aleksandar Miskovic', written in a cursive style.

Aleksandar Miskovic, PhD (APEGBC P.Geo. 36026)

References

Gordey, S.P., 2013. Geology, Selwyn Basin (Sheldon Lake and Tay River), Yukon; Geological Survey of Canada, Map 2149A, 2 map sheets, scale 1 :250 000 and 1 sheet of cross-sections, scale 1 :100000. doi: 10.4095/288980

Appendix 1 (List of Sample Locations, sample IDs and Soil Geochemical Data)

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401001	ISTOK	62.11773	129.75247	1389	0.4	0.03	2.0	20	0.13	0.08	0.02	9.91	2.1	4	1.00	8.9	2.69	5.0
M401002	ISTOK	62.11822	129.75148	1390	0.8	0.14	7.5	30	0.34	0.40	0.05	28.20	11.0	23	3.99	15.6	7.33	12.2
M401003	ISTOK	62.11877	129.75155	1381	1.1	0.10	6.4	60	0.53	0.21	0.05	17.20	4.5	13	3.43	21.8	4.61	8.6
M401004	ISTOK	62.11925	129.75065	1361	0.8	0.03	2.4	20	0.11	0.15	0.03	9.82	2.1	8	1.78	8.6	3.44	5.0
M401005	ISTOK	62.11957	129.75047	1339	1.2	0.02	10.9	40	0.18	0.32	0.03	30.30	4.3	12	2.61	13.3	5.82	15.7
M401006	ISTOK	62.11997	129.74982	1320	0.3	0.02	2.3	20	0.06	0.09	0.02	7.89	1.2	6	2.13	4.7	2.60	4.2
M401007	ISTOK	62.12043	129.74930	1311	3.5	0.03	18.1	40	0.17	0.39	0.06	20.30	5.7	15	3.14	15.8	9.29	10.4
M401008	ISTOK	62.12070	129.74893	1301	0.2	0.01	0.9	20	0.08	0.16	0.02	5.02	0.8	8	1.89	7.4	1.53	2.6
M401009	ISTOK	62.12175	129.74788		3.5	0.03	17.4	50	0.22	0.36	0.03	22.30	2.8	11	1.96	14.0	4.64	11.1
M401010	ISTOK	62.12205	129.74847	1253	0.7	0.03	1.7	30	0.14	0.06	0.01	5.66	1.2	5	3.86	8.9	2.20	2.9
M401011	ISTOK	62.12237	129.74823	1248	4.2	0.06	18.6	40	0.20	0.26	0.04	31.60	6.5	17	1.28	15.2	4.88	16.2
M401012	ISTOK	62.12288	129.74812	1245	0.6	0.02	2.9	60	0.14	0.11	0.02	21.20	1.8	8	1.67	14.6	4.06	10.8
M401013	ISTOK	62.12323	129.74758	1245	1.8	0.01	19.9	60	0.25	0.36	0.05	33.10	7.9	20	1.08	17.3	9.31	17.1
M401014	ISTOK	62.12362	129.74725	1234	3.0	0.02	11.9	50	0.22	0.21	0.02	22.40	3.1	14	0.69	12.4	5.08	11.4
M401015	ISTOK	62.12460	129.74788	1202	4.8	0.09	13.8	150	0.62	0.28	0.14	29.30	12.8	19	1.47	33.3	4.54	14.8
M401016	ISTOK	62.12508	129.74793	1185	4.7	0.07	18.7	110	0.45	0.28	0.21	31.30	14.3	20	0.81	25.9	4.05	15.8
M401017	ISTOK	62.12548	129.74840	1181	12.1	0.02	16.0	70	0.35	0.28	0.08	39.40	8.0	20	1.07	26.9	5.06	20.2
M401018	ISTOK	62.12590	129.74823	1166	2.3	0.04	9.6	100	0.54	0.30	0.17	45.90	12.8	20	0.93	48.9	4.19	23.7
M401019	ISTOK	62.12627	129.74875		0.4	0.05	4.3	40	0.17	0.11	0.04	7.84	2.2	7	0.68	10.2	2.98	4.0
M401020	ISTOK	62.12677	129.74887	1134	6.5	0.04	15.4	80	0.47	0.27	0.10	38.00	12.0	19	1.02	27.5	3.85	19.2
M401021	ISTOK	62.12707	129.74928	1123	3.7	0.14	17.4	130	1.05	0.35	0.10	29.20	14.6	24	3.04	40.0	5.04	15.2
M401022	ISTOK	62.12728	129.74995	1109	18.2	0.04	16.2	120	0.66	0.32	0.08	36.70	13.1	23	1.39	33.3	4.54	18.7
M401023	ISTOK	62.12803	129.75080	1101	3.1	0.08	12.4	140	0.60	0.30	0.22	26.80	13.9	20	1.30	23.3	4.12	13.2
M401024	ISTOK	62.11763	129.73738	1399	0.8	0.06	16.3	50	0.24	0.38	0.06	28.20	6.6	13	3.68	17.2	5.35	13.7
M401025	ISTOK	62.11787	129.73820	1390	2.6	0.04	7.7	50	0.11	0.15	0.02	40.30	1.7	6	1.13	6.4	4.05	20.2
M401026	ISTOK	62.11830	129.73812	1374	1.1	0.10	11.9	40	0.28	0.20	0.03	24.20	4.4	11	2.01	17.7	3.48	11.6
M401027	ISTOK	62.11873	129.73847	1360	2.7	0.07	20.6	70	0.23	0.30	0.10	24.80	7.4	21	1.05	16.4	3.95	11.8
M401028	ISTOK	62.11920	129.73862	1340	3.5	0.03	9.5	50	0.08	0.18	0.03	28.90	2.0	7	0.65	6.5	4.78	14.7
M401029	ISTOK	62.11965	129.73895	1323	2.1	0.03	9.9	30	0.11	0.19	0.02	22.80	1.6	5	2.01	8.6	3.20	11.8
M401030	ISTOK	62.11998	129.73955	1305	5.5	0.07	17.8	80	0.47	0.29	0.10	39.50	11.7	24	1.14	28.7	4.38	19.4
M401031	ISTOK	62.12028	129.73998	1297	5.5	0.06	19.2	70	0.42	0.30	0.07	42.70	11.8	23	0.67	24.7	4.27	20.5
M401032	ISTOK	62.12053	129.74100	1283	17.3	0.29	13.9	160	0.39	0.22	0.13	24.60	8.2	17	0.81	25.9	3.56	11.4

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401033	ISTOK	62.12083	129.74163	1273	3.7	0.10	14.0	160	0.47	0.24	0.31	29.00	10.6	18	0.79	29.2	3.51	14.4
M401034	ISTOK	62.12122	129.74218	1260	4.4	0.17	13.0	140	0.43	0.21	0.10	21.10	7.8	16	0.87	23.1	3.55	10.4
M401035	ISTOK	62.12162	129.74248	1253	2.6	0.19	16.7	160	0.53	0.29	0.27	43.00	13.8	23	0.95	37.3	4.36	21.8
M401036	ISTOK	62.11773	129.72303	1385	1.8	0.05	12.3	40	0.09	0.19	0.05	20.70	2.8	6	1.05	9.8	3.14	9.1
M401037	ISTOK	62.11842	129.72335	1380	1.4	0.11	6.4	80	0.37	0.15	0.28	29.90	8.1	8	0.67	18.6	1.91	13.4
M401038	ISTOK	62.11887	129.72350	1375	0.3	0.05	4.4	20	0.10	0.15	0.06	11.95	4.7	7	0.61	7.2	2.23	5.8
M401039	ISTOK	62.11972	129.72312	1354	2.6	0.17	18.5	100	0.33	0.18	0.25	17.95	7.0	12	0.60	24.2	2.69	8.3
M401040	ISTOK	62.12015	129.72297		1.0	0.17	19.6	70	0.43	0.37	0.36	47.50	15.2	19	0.34	53.3	3.45	24.5
M401041	ISTOK	62.12155	129.72323	1319	1.4	0.13	17.2	110	0.22	0.32	0.26	24.70	9.0	12	0.52	21.4	3.26	12.3
M401042	ISTOK	62.12193	129.72335	1303	3.4	0.12	22.0	130	0.44	0.33	0.21	41.90	14.0	19	0.37	33.5	3.67	21.1
M401043	ISTOK	62.11778	129.69678	1325	1.3	0.09	16.4	50	0.18	0.24	0.05	36.50	7.5	21	1.21	13.0	6.21	17.0
M401044	ISTOK	62.11822	129.69693	1324	2.6	0.11	16.0	70	0.33	0.26	0.09	38.60	7.1	20	2.26	18.4	5.85	19.2
M401045	ISTOK	62.11857	129.69772	1322	3.1	0.09	29.1	80	0.41	0.34	0.12	42.00	11.7	24	1.27	30.3	5.21	21.3
M401046	ISTOK	62.11902	129.69793	1315	3.6	0.15	27.3	120	0.57	0.38	0.26	28.40	12.2	19	3.61	35.8	4.01	14.4
M401047	ISTOK	62.11982	129.69905	1324	0.8	0.04	14.6	120	0.34	0.22	0.16	32.50	7.9	17	0.88	14.5	4.54	15.2
M401048	ISTOK	62.12028	129.69923	1319	2.1	0.11	16.5	90	0.63	0.18	0.25	45.70	8.5	13	0.58	19.5	2.44	16.9
M401049	ISTOK	62.12060	129.70062		2.8	0.15	37.5	130	1.55	0.28	0.29	46.00	14.5	30	1.02	15.8	4.55	18.9
M401050	ISTOK	62.12128	129.70115	1313	6.0	0.04	25.4	70	0.27	0.27	0.04	35.30	7.1	19	0.80	11.8	5.32	16.6
M401051	ISTOK	62.12175	129.70110	1311	1.8	0.06	22.7	130	0.61	0.31	0.28	31.20	8.9	17	0.98	14.5	3.92	13.8
M401052	ISTOK	62.12217	129.70185	1314	0.7	0.05	31.5	140	0.67	0.36	0.23	69.60	12.4	10	0.73	20.3	2.21	30.4
M401053	ISTOK	62.12248	129.70232	1305	0.6	0.06	23.7	290	0.65	0.39	0.55	44.90	19.2	18	0.85	24.0	4.64	17.9
M401054	ISTOK	62.12292	129.70262	1302	0.4	0.02	2.6	40	0.11	0.05	0.07	8.67	2.1	2	0.20	6.4	1.85	4.0
M401055	ISTOK	62.12322	129.70333	1286	0.8	0.13	11.3	210	0.52	0.28	0.14	35.90	9.2	20	1.13	20.7	5.11	15.0
M401056	ISTOK	62.12360	129.70375	1284	1.3	0.05	11.4	180	0.39	0.22	0.16	27.50	9.5	20	0.95	13.4	4.91	12.7
M401057	ISTOK	62.12407	129.70455	1277	1.0	0.03	12.2	160	0.38	0.22	0.13	32.80	9.3	18	0.81	14.2	4.38	15.1
M401058	ISTOK	62.12455	129.70493	1271	1.7	0.05	14.5	100	0.32	0.23	0.15	26.00	10.2	13	0.59	15.3	2.92	9.7
M401059	ISTOK	62.12498	129.70557	1264	1.4	0.04	16.8	200	0.59	0.32	0.17	39.60	13.6	20	1.36	17.6	5.17	19.3
M401060	ISTOK	62.12617	129.70725	1238	0.7	0.03	6.9	60	0.48	0.21	0.17	30.60	9.6	14	0.60	19.6	2.27	12.0
M401061	ISTOK	62.12670	129.70767	1228	2.0	0.11	17.3	70	0.46	0.47	0.47	40.80	17.7	21	1.18	37.5	4.68	21.2
M401062	ISTOK	62.12740	129.70757	1213	0.6	0.07	1.1	30	0.07	0.07	0.04	28.80	0.9	6	0.91	9.1	4.80	14.5
M401063	ISTOK	62.12797	129.70802	1196	1.0	0.12	22.4	70	0.32	0.31	0.44	26.80	9.4	17	0.51	14.0	5.11	12.2
M401064	ISTOK	62.12845	129.70825	1183	2.5	0.25	12.7	140	0.64	0.22	0.77	22.70	10.2	15	1.01	43.7	4.01	12.2

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401065	ISTOK	62.12890	129.70895	1175	11.8	0.18	14.1	160	0.60	0.23	0.57	25.70	11.5	17	0.93	33.7	4.42	12.4
M401066	ISTOK	62.12962	129.71040	1165	4.4	0.08	16.9	100	0.58	0.31	0.15	44.90	14.8	25	0.87	30.9	5.11	22.9
M401067	ISTOK	62.12982	129.71127	1164	7.1	0.12	13.8	140	0.60	0.27	0.08	32.30	11.6	23	0.81	25.6	4.87	16.4
M401068	ISTOK	62.12990	129.71232	1178	0.4	0.04	9.5	150	0.34	0.20	0.06	36.20	8.3	18	0.68	8.5	5.16	17.9
M401069	ISTOK	62.13020	129.71325	1183	0.7	0.03	34.1	100	0.36	0.16	0.06	32.10	7.7	15	0.63	11.1	4.09	16.1
M401070	ISTOK	62.12265	129.70197	1307	2.1	0.08	12.1	110	0.48	0.27	0.10	30.40	13.2	20	1.33	18.6	4.20	14.8
M401071	ISTOK	62.12310	129.70203	1290	0.9	0.11	14.9	30	0.46	0.33	0.26	48.20	15.8	17	1.11	36.8	3.00	24.1
M401072	ISTOK	62.12347	129.70250	1283	1.8	0.07	16.2	90	0.38	0.28	0.23	38.20	8.5	21	1.62	28.7	4.87	19.6
M401073	ISTOK	62.12437	129.70253	1260	2.6	0.04	6.2	30	0.09	0.17	0.04	36.20	4.1	10	1.03	7.8	4.54	18.4
M401074	ISTOK	62.12480	129.70265	1251	1.2	0.04	13.0	60	0.21	0.31	0.04	41.60	7.5	19	1.27	11.9	6.63	20.0
M401075	ISTOK	62.12523	129.70307	1248	1.7	0.02	9.0	110	0.22	0.23	0.12	41.30	6.7	16	0.79	9.3	5.21	20.3
M401076	ISTOK	62.12565	129.70320	1230	2.1	0.11	13.4	130	0.49	0.27	0.41	37.40	13.7	23	1.29	19.9	5.33	18.6
M401077	ISTOK	62.12650	129.70385	1220	0.5	0.35	8.6	170	0.87	0.28	1.14	31.00	10.7	16	1.11	31.6	3.29	12.5
M401078	ISTOK	62.12695	129.70405	1213	1.2	0.10	11.6	130	0.29	0.21	0.81	29.30	10.6	12	0.69	19.4	3.34	13.8
M401079	ISTOK	62.12853	129.70488	1186	1.6	0.11	14.0	100	0.42	0.28	0.48	39.90	10.5	25	1.05	16.4	5.16	18.9
M401080	ISTOK	62.12905	129.70683	1183	2.8	0.25	11.5	140	2.90	0.24	1.72	36.90	23.0	23	1.93	43.8	4.01	19.0
M401081	ISTOK	62.12955	129.70732	1189	0.4	0.06	9.8	40	0.17	0.14	0.17	23.50	3.6	9	0.49	11.3	3.27	11.9
M401082	ISTOK	62.12968	129.70813	1180	1.7	0.19	9.0	120	0.54	0.24	0.29	39.60	7.8	20	1.21	21.9	5.30	19.1
M401083	ISTOK	62.13033	129.70822	1175	1.5	0.29	32.7	70	0.12	0.25	0.13	29.80	2.8	9	1.59	18.3	6.40	16.0
M401084	ISTOK	62.13097	129.70913	1169	6.4	0.06	11.6	50	0.09	0.26	0.13	34.30	5.0	18	0.69	8.0	5.78	17.2
M401085	ISTOK	62.13143	129.70982	1163	2.9	0.32	26.1	210	0.82	0.31	1.57	25.80	14.4	23	1.70	28.4	4.28	12.2
M401086	ISTOK	62.13200	129.71122	1153	3.2	0.15	13.6	170	0.45	0.27	0.42	36.00	12.3	21	0.73	24.8	4.27	17.8
M401087	ISTOK	62.13248	129.71132	1152	2.6	0.10	14.5	80	0.34	0.15	0.52	34.30	7.5	12	0.50	12.9	3.15	16.2
M401088	ISTOK	62.13283	129.71195	1147	1.0	0.05	12.7	140	0.17	0.24	0.42	32.30	6.0	12	0.43	10.6	4.00	16.1
M401089	ISTOK	62.13348	129.71317	1147	1.2	0.20	14.7	150	0.39	0.22	0.54	31.60	10.7	25	0.86	19.3	4.14	16.2
M401090	ISTOK	62.13393	129.71350	1141	0.7	0.34	11.9	60	0.17	0.11	0.51	16.85	10.3	16	0.85	41.8	2.63	8.5
M401091	ISTOK	62.13452	129.71337	1126	2.6	0.30	10.0	150	0.46	0.21	1.13	24.60	10.0	17	0.99	36.0	3.54	13.5
M401092	ISTOK	62.13483	129.71318	1122	1.7	0.27	16.3	190	0.55	0.28	1.73	25.30	16.2	18	1.23	38.9	3.57	13.0
M401093	ISTOK	62.13572	129.71402	1111	3.3	0.08	12.6	90	0.48	0.27	0.29	41.60	14.6	22	0.65	27.9	3.89	20.1
M401094	ISTOK	62.13627	129.71383	1122	1.4	0.25	8.5	200	0.57	0.24	0.41	24.00	13.9	18	1.75	36.2	4.79	12.7
M401095	ISTOK	62.13662	129.71392	1110	1.3	0.11	10.1	100	0.50	0.32	0.39	30.00	12.0	19	1.25	25.5	3.71	14.2
M401096	ISTOK	62.13710	129.71392	1112	0.9	0.09	15.0	40	0.26	0.27	0.09	34.80	7.3	12	0.83	14.0	5.74	16.3

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401097	ISTOK	62.13745	129.71457	1107	n/a	0.71	9.0	60	0.22	0.20	0.10	31.20	5.5	13	1.34	13.1	4.84	15.6
M401098	ISTOK	62.13807	129.71415	1107	2.4	0.09	20.9	90	0.31	0.31	0.08	51.60	6.4	12	0.71	15.7	5.63	25.9
M401099	ISTOK	62.13845	129.71423	1090	7.5	0.24	12.5	120	0.68	0.28	0.59	29.20	18.3	16	1.43	47.6	3.21	12.5
M401100	ISTOK	62.13923	129.71455	1079	3.4	0.04	14.1	60	0.52	0.30	0.04	57.30	12.2	20	0.67	17.7	4.13	26.3
M401101	ISTOK	62.11772	129.73117	1444	1.3	0.04	13.4	100	0.19	0.33	0.06	41.10	5.2	14	1.42	17.0	5.43	20.0
M401102	ISTOK	62.11810	129.73065	1427	1.0	0.05	19.4	90	0.19	0.35	0.10	37.30	7.6	13	1.35	16.3	4.98	18.8
M401103	ISTOK	62.11897	129.72967	1401	1.5	0.05	6.1	80	0.25	0.18	0.03	27.70	2.4	7	1.53	10.1	3.55	13.1
M401104	ISTOK	62.11943	129.72962	1388	0.5	0.08	3.4	40	0.39	0.22	0.07	19.85	4.2	9	1.32	17.3	4.47	9.0
M401105	ISTOK	62.11985	129.73008	1379	1.0	0.05	12.7	40	0.14	0.29	0.04	37.50	2.7	9	1.21	11.7	6.72	18.5
M401106	ISTOK	62.12027	129.72985	1372	2.6	0.16	21.2	40	0.17	0.39	0.06	38.20	5.6	11	0.94	17.4	7.20	18.2
M401107	ISTOK	62.12072	129.72977	1363	1.8	0.06	10.1	40	0.09	0.28	0.02	44.50	2.1	8	0.67	6.4	6.62	21.7
M401108	ISTOK	62.12115	129.72940	1351	1.2	0.08	22.8	60	0.17	0.38	0.08	27.70	5.3	18	2.00	17.8	5.98	13.2
M401109	ISTOK	62.12213	129.73015	1317	2.4	0.06	6.8	30	0.13	0.16	0.06	18.00	1.4	8	3.14	10.5	4.26	8.5
M401110	ISTOK	62.12263	129.73018	1315	0.6	0.06	24.2	40	0.14	0.45	0.03	13.00	3.9	11	2.46	9.2	10.70	5.6
M401111	ISTOK	62.12308	129.73040	1312	0.9	0.04	4.8	80	0.17	0.22	0.05	28.70	3.3	12	1.60	7.8	6.34	12.9
M401112	ISTOK	62.12333	129.73145	1319	3.7	0.04	19.4	190	0.63	0.35	0.11	38.20	10.6	26	2.37	27.5	5.54	19.2
M401113	ISTOK	62.12357	129.73228	1308	1.0	0.05	8.5	120	0.50	0.60	0.08	11.30	6.4	17	2.79	25.1	8.44	5.4
M401114	ISTOK	62.12382	129.73318	1303	1.6	0.04	16.6	90	0.23	0.35	0.08	28.50	8.8	24	1.24	17.8	6.64	13.1
M401115	ISTOK	62.12405	129.73400	1306	2.9	0.10	11.8	120	0.41	0.28	0.09	26.90	10.6	23	1.86	14.1	5.57	12.8
M401116	ISTOK	62.12440	129.73462	1309	1.3	0.43	16.8	110	0.39	0.31	0.10	46.20	9.0	22	1.95	18.7	5.78	21.4
M401117	ISTOK	62.12475	129.73528	1297	0.7	0.30	40.4	90	0.52	0.63	0.09	10.25	13.1	26	1.92	30.9	7.45	4.8
M401118	ISTOK	62.12515	129.73562	1308	1.0	0.11	14.7	120	0.29	0.32	0.06	45.20	5.9	18	1.10	13.1	5.58	20.9
M401119	ISTOK	62.12533	129.73643	1304	1.3	0.07	11.3	100	0.19	0.22	0.05	39.10	4.4	15	1.22	9.4	5.31	17.9
M401120	ISTOK	62.12562	129.73727	1296	1.2	0.07	18.0	130	0.68	0.31	0.09	30.80	9.7	18	2.04	38.7	5.58	14.1
M401121	ISTOK	62.12595	129.73803	1283	2.1	0.08	3.7	40	0.27	0.15	0.04	9.97	1.1	7	1.63	26.9	3.82	4.8
M401122	ISTOK	62.12678	129.73870	1252	2.1	0.05	3.0	80	0.23	0.54	0.03	27.10	1.8	9	1.67	16.9	7.30	13.1
M401123	ISTOK	62.12723	129.73908	1235	1.2	0.10	3.3	180	1.28	0.29	0.07	28.40	8.3	14	2.85	56.2	3.67	13.6
M401124	ISTOK	62.12773	129.73922	1220	3.7	0.07	12.6	100	0.65	0.32	0.08	34.00	11.2	21	1.43	30.1	4.10	16.5
M401125	ISTOK	62.12817	129.73973	1212	1.2	0.04	17.0	140	0.51	0.32	0.10	41.60	10.6	24	2.27	24.9	5.15	19.3
M401126	ISTOK	62.12832	129.74063	1207	0.3	0.07	6.3	60	0.29	0.79	0.05	16.15	3.5	12	1.97	15.6	8.83	7.6
M401127	ISTOK	62.12867	129.74137	1197	0.8	0.12	3.4	80	0.24	0.29	0.08	17.25	1.9	11	1.47	26.1	6.42	8.1
M401128	ISTOK	62.12907	129.74165	1190	2.3	0.26	7.1	150	1.26	0.37	0.07	22.50	3.1	24	2.81	141.0	6.41	10.4

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401129	ISTOK	62.12995	129.74317	1151	2.5	0.08	8.7	310	1.17	0.37	0.19	40.10	14.1	21	1.40	44.8	3.76	17.7
M401130	ISTOK	62.13313	129.74710	1072	2.0	0.19	7.8	200	0.81	0.28	0.19	18.65	9.1	15	1.51	37.2	3.70	8.7
M401131	ISTOK	62.13293	129.74610	1082	4.4	0.13	7.5	160	0.59	0.26	0.08	18.35	9.1	15	1.16	26.8	3.42	9.4
M401132	ISTOK	62.13277	129.74518	1094	2.7	0.08	14.5	190	0.52	0.31	0.10	29.40	10.1	17	0.89	27.3	3.80	15.8
M401133	ISTOK	62.13272	129.74422	1107	2.1	0.08	8.6	100	0.38	0.25	0.18	23.70	11.1	18	0.82	18.6	3.50	12.3
M401134	ISTOK	62.13187	129.74072	1149	3.3	0.11	8.6	170	0.80	0.37	0.14	35.90	17.7	22	1.06	39.9	4.00	18.8
M401135	ISTOK	62.13137	129.73895	1168	1.5	0.06	8.4	130	0.35	0.31	0.07	34.90	9.3	19	0.88	15.8	4.14	19.2
M401136	ISTOK	62.13090	129.73848	1155	3.5	0.05	12.0	110	0.50	0.34	0.07	35.30	10.7	21	1.20	20.6	6.26	18.3
M401137	ISTOK	62.12995	129.73775	1194	9.1	0.01	16.9	100	0.59	0.42	0.06	30.10	12.4	25	1.69	30.2	5.36	15.7
M401138	ISTOK	62.12953	129.73707	1201	0.6	0.01	10.9	150	0.19	0.21	0.03	33.70	3.9	12	0.93	12.4	5.22	17.7
M401139	ISTOK	62.12910	129.73625	1216	3.4	0.15	4.1	120	0.57	0.28	0.04	19.95	4.8	22	1.45	37.7	4.52	9.9
M401140	ISTOK	62.12868	129.73592	1224	1.9	0.05	13.3	120	0.74	0.34	0.08	32.40	8.5	21	1.64	17.4	7.51	17.5
M401141	ISTOK	62.12770	129.73570	1239	0.5	0.04	10.2	40	0.12	0.20	0.08	16.90	2.8	7	1.05	10.0	4.22	8.8
M401142	ISTOK	62.12700	129.73577	1263	0.8	0.02	10.6	80	0.15	0.29	0.03	37.70	4.2	12	1.45	13.1	7.20	20.3
M401143	ISTOK	62.12065	129.68493	1168	5.6	0.09	9.6	90	0.44	0.21	0.13	21.20	8.3	15	0.69	22.7	3.48	10.9
M401144	ISTOK	62.12080	129.68595	1178	7.5	0.19	9.4	200	0.54	0.25	0.91	23.40	12.2	17	0.83	22.0	3.31	11.5
M401145	ISTOK	62.12090	129.68688	1189	0.4	0.02	9.9	50	0.12	0.25	0.11	37.80	4.3	12	0.47	8.6	6.28	19.5
M401146	ISTOK	62.12125	129.68742	1191	1.0	0.29	7.4	680	1.11	0.22	1.17	43.40	14.2	19	0.58	49.6	3.44	33.3
M401147	ISTOK	62.12153	129.68817	1197	1.0	0.03	15.4	140	0.32	0.26	0.41	36.50	9.1	20	0.97	17.3	4.94	19.8
M401148	ISTOK	62.12182	129.68890	1201	1.3	0.04	13.3	90	0.34	0.30	0.22	38.80	10.0	21	0.85	14.3	5.65	19.7
M401149	ISTOK	62.12222	129.68947	1206	1.4	0.10	4.8	350	0.40	0.21	0.46	28.70	9.7	20	1.22	13.8	5.61	15.1
M401150	ISTOK	62.12248	129.69020	1211	1.2	0.07	4.6	260	0.26	0.19	0.14	44.30	4.6	12	0.61	10.0	6.03	22.9
M401151	ISTOK	62.12275	129.69085	1220	0.3	0.03	9.8	290	0.44	0.22	0.20	33.20	14.3	26	1.14	14.9	7.09	17.0
M401152	ISTOK	62.12308	129.69163	1219	3.6	0.15	15.8	180	0.41	0.26	0.23	37.90	9.6	27	1.24	20.8	7.03	19.1
M401153	ISTOK	62.12335	129.69235	1220	1.3	0.04	11.4	200	0.48	0.25	0.18	42.50	10.0	23	0.96	12.7	6.51	22.5
M401154	ISTOK	62.12410	129.69363	1219	1.8	0.02	6.7	90	0.26	0.23	0.03	43.80	8.4	20	0.79	13.4	4.33	21.5
M401155	ISTOK	62.12443	129.69443	1215	3.3	0.04	8.5	110	0.23	0.21	0.17	36.70	6.3	16	0.76	10.7	6.50	18.6
M401156	ISTOK	62.12487	129.69485	1217	16.2	0.03	7.4	130	0.25	0.23	0.07	36.90	5.4	16	0.72	8.7	6.63	19.2
M401157	ISTOK	62.12523	129.69547	1215	1.4	0.02	10.4	100	0.19	0.24	0.13	41.30	5.3	16	0.70	8.6	5.86	21.4
M401158	ISTOK	62.12550	129.69623	1220	0.1	0.08	9.9	350	0.60	0.12	0.31	30.60	20.5	22	1.02	27.5	6.00	12.2
M401159	ISTOK	62.12588	129.69678	1221	0.6	0.21	14.2	90	0.22	0.27	0.15	42.90	6.2	17	0.71	12.4	6.55	22.4
M401160	ISTOK	62.12625	129.69728	1223	0.4	0.03	5.6	70	0.11	0.20	0.08	45.90	2.7	9	0.46	5.8	5.64	23.7

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401161	ISTOK	62.12655	129.69777	1226	0.2	0.17	9.4	190	0.77	0.17	0.58	38.90	14.9	35	0.84	13.8	4.50	17.9
M401162	ISTOK	62.12703	129.69812	1223	7.1	0.06	17.1	40	0.18	0.33	0.13	43.50	5.1	16	0.62	9.5	6.63	23.4
M401163	ISTOK	62.12752	129.69830	1223	2.8	0.05	17.8	100	0.24	0.29	0.15	41.30	7.9	19	1.00	11.3	6.32	20.4
M401164	ISTOK	62.12792	129.69873	1221	2.2	0.07	11.2	80	0.26	0.26	0.14	49.00	7.1	21	0.77	11.6	5.94	24.0
M401165	ISTOK	62.12815	129.69970	1217	0.4	0.07	8.3	50	0.11	0.18	0.22	37.30	3.2	7	0.56	9.0	4.81	19.2
M401166	ISTOK	62.12858	129.70003	1212	1.8	0.04	13.7	70	0.24	0.27	0.24	41.10	5.3	15	0.55	12.6	5.34	21.7
M401167	ISTOK	62.12910	129.70003	1214	1.3	0.40	13.9	90	0.38	0.22	0.21	41.30	8.4	23	0.93	11.2	5.18	20.2
M401168	ISTOK	62.12958	129.70027	1212	0.8	0.10	11.2	70	0.30	0.24	0.15	44.10	6.5	14	0.64	11.9	5.49	22.1
M401169	ISTOK	62.12997	129.70082	1206	1.2	0.05	12.8	110	0.27	0.24	0.20	31.80	6.9	18	0.93	8.5	4.66	15.8
M401170	ISTOK	62.13032	129.70142	1204	1.3	0.04	13.1	210	0.25	0.22	0.77	29.60	7.9	17	0.88	9.6	5.43	14.2
M401171	ISTOK	62.13065	129.70207	1190	1.8	0.14	18.6	70	0.20	0.33	0.12	35.50	6.1	15	0.83	13.7	6.58	17.6
M401172	ISTOK	62.13110	129.70227	1183	0.3	0.23	16.4	130	0.13	0.20	0.35	23.40	8.3	21	1.40	24.1	6.43	11.7
M401173	ISTOK	62.13147	129.70283	1177	1.8	0.16	14.6	130	0.22	0.19	0.22	27.30	10.9	21	1.01	25.2	7.21	13.4
M401174	ISTOK	62.13185	129.70338	1170	0.6	0.08	14.8	220	0.17	0.16	0.17	27.80	13.8	21	1.04	35.0	6.99	13.8
M401175	ISTOK	62.13203	129.70427	1162	0.2	0.05	14.6	250	0.28	0.16	0.42	29.40	16.2	19	1.09	41.0	5.92	13.6
M401176	ISTOK	62.13265	129.70402	1152	0.1	0.13	10.5	190	0.21	0.15	2.53	24.80	20.7	17	1.08	42.3	3.51	12.0
M401177	ISTOK	62.13310	129.70368	1149	0.4	0.04	14.9	140	0.18	0.23	0.98	34.50	12.0	14	1.29	23.5	4.60	16.9
M401178	ISTOK	62.13353	129.70328	1153	2.4	0.09	11.3	70	0.16	0.22	0.11	43.70	5.1	13	0.73	8.6	5.72	22.4
M401179	ISTOK	62.13385	129.70423	1143	0.4	0.14	6.4	40	0.10	0.17	0.07	40.10	2.6	9	0.56	4.5	5.56	20.3
M401180	ISTOK	62.12962	129.69555	1173	4.1	0.02	12.4	60	0.25	0.30	0.05	45.30	6.8	18	0.85	9.0	6.05	22.3
M401181	ISTOK	62.13003	129.69588	1168	2.2	0.02	10.3	50	0.26	0.23	0.04	48.10	6.8	15	0.77	9.0	5.36	24.3
M401182	ISTOK	62.13040	129.69652	1160	2.5	0.07	10.6	80	0.49	0.26	0.14	34.60	10.9	18	0.85	22.0	3.52	17.2
M401183	ISTOK	62.13083	129.69685	1151	1.9	0.08	10.7	90	0.29	0.23	0.19	25.90	10.4	16	0.94	14.6	3.37	12.4
M401184	ISTOK	62.13177	129.69667	1137	23.9	0.06	18.0	50	0.39	0.36	0.16	37.70	11.4	22	0.88	17.2	6.58	16.8
M401185	ISTOK	62.13222	129.69667	1136	7.3	0.07	12.3	90	0.65	0.25	0.07	38.10	8.0	19	0.99	14.4	5.45	18.2
M401186	ISTOK	62.13253	129.69747	1133	2.8	0.26	11.1	140	1.16	0.24	0.12	36.60	16.6	28	1.28	22.7	5.03	16.8
M401187	ISTOK	62.13287	129.69818	1130	3.4	0.10	20.2	50	0.92	0.52	0.13	43.00	9.0	31	0.67	33.4	7.65	18.5
M401188	ISTOK	62.13330	129.69792	1124	3.3	0.08	11.2	80	0.26	0.28	0.05	44.40	6.5	17	0.72	11.0	6.93	21.6
M401189	ISTOK	62.13365	129.69735	1118	26.2	0.01	4.5	20	0.03	0.10	0.03	47.90	0.9	4	0.24	1.8	3.48	23.4
M401190	ISTOK	62.13410	129.69732	1113	11.8	0.03	13.4	110	0.41	0.24	0.06	41.60	9.6	17	0.99	9.8	5.69	19.4
M401191	ISTOK	62.13457	129.69748	1105	8.6	0.02	18.8	40	0.37	0.25	0.03	56.20	10.8	19	0.60	19.5	4.26	27.5
M401192	ISTOK	62.13435	129.70393	1133	2.1	0.09	6.9	20	0.05	0.12	0.06	26.90	1.4	4	0.15	3.1	4.37	13.3

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401193	ISTOK	62.13468	129.70460	1128	40.7	0.06	13.2	60	0.23	0.25	0.12	39.60	6.2	14	0.64	6.8	5.52	19.8
M401194	ISTOK	62.13515	129.70475	1118	10.2	0.18	12.1	170	0.54	0.24	0.28	26.90	9.9	17	0.86	16.4	3.78	13.8
M401195	ISTOK	62.13555	129.70483	1113	3.4	0.08	17.0	30	0.16	0.25	0.19	30.00	4.0	10	0.44	16.5	5.19	15.1
M401196	ISTOK	62.13603	129.70482	1108	1.5	0.06	11.6	60	0.27	0.29	0.25	44.00	6.4	15	0.93	8.6	7.05	21.3
M401197	ISTOK	62.13643	129.70522	1106	1.8	0.04	11.4	40	0.11	0.24	0.04	54.20	3.3	11	0.59	7.3	5.75	27.2
M401198	ISTOK	62.13665	129.70603	1102	2.2	0.10	13.5	70	0.22	0.24	0.21	30.60	5.0	10	0.60	13.9	5.32	16.0
M401199	ISTOK	62.13715	129.70578	1100	1.7	0.06	9.0	60	0.16	0.18	0.32	32.90	4.1	10	0.63	15.4	3.24	16.3
M401200	ISTOK	62.13757	129.70545	1094	0.3	0.03	8.5	90	0.37	0.16	0.39	25.00	6.2	8	0.36	8.7	3.60	10.2
M401201	ISTOK	62.12152	129.72902	1322	3.3	0.73	22.4	110	11.75	0.22	0.12	36.50	171.0	24	7.17	260.0	4.63	13.1
M401202	ISTOK	62.12188	129.72853	1313	0.7	0.06	8.6	40	0.21	0.17	0.05	15.60	2.7	8	2.91	17.4	3.39	7.9
M401203	ISTOK	62.12232	129.72810	1304	2.6	0.30	17.4	120	1.16	0.33	0.12	30.30	11.3	26	2.40	54.5	4.67	15.1
M401204	ISTOK	62.12265	129.72745	1304	5.1	1.21	16.9	290	1.37	0.33	0.13	18.60	11.7	20	3.25	46.6	4.80	9.1
M401205	ISTOK	62.12312	129.72730	1303	1.9	0.13	12.4	130	0.39	0.25	0.10	39.40	6.3	21	1.62	21.5	5.40	19.1
M401206	ISTOK	62.12352	129.72730	1309	1.2	0.04	12.9	50	0.09	0.18	0.05	33.10	3.4	10	0.56	10.4	5.41	16.4
M401207	ISTOK	62.12402	129.72725	1299	0.7	0.03	0.3	20	0.07	0.03	0.04	2.97	0.7	1	0.08	2.0	1.11	1.4
M401208	ISTOK	62.12445	129.72717	1283	3.1	0.34	21.4	190	0.54	0.28	0.49	33.60	12.6	17	0.53	38.0	3.06	17.1
M401209	ISTOK	62.12492	129.72732	1271	3.7	0.27	14.6	190	0.40	0.25	0.55	30.90	10.3	19	0.66	30.6	3.44	15.3
M401210	ISTOK	62.12530	129.72765	1268	2.0	0.21	6.0	250	0.33	0.16	0.14	18.60	5.5	10	0.70	17.2	2.66	8.7
M401211	ISTOK	62.12575	129.72813	1265	1.8	0.08	8.4	170	0.25	0.19	0.14	29.40	4.6	11	0.81	16.9	3.63	15.1
M401212	ISTOK	62.12627	129.72837	1263	6.1	0.04	10.8	70	0.20	0.26	0.07	36.40	4.9	17	1.16	14.7	5.11	19.1
M401213	ISTOK	62.12660	129.72868	1262	1.8	0.05	14.6	110	0.36	0.31	0.06	39.90	8.0	20	1.77	14.8	6.10	20.5
M401214	ISTOK	62.12700	129.72872	1257	2.6	0.12	11.0	310	3.16	0.28	0.11	34.40	7.8	16	2.60	33.3	4.90	17.0
M401215	ISTOK	62.12760	129.72917	1253	0.8	0.03	12.4	40	0.15	0.35	0.07	37.60	4.7	13	0.64	9.9	7.63	19.9
M401216	ISTOK	62.12798	129.72948	1248	0.5	0.02	0.3	20	0.05	0.06	0.01	5.37	0.6	3	1.14	3.9	1.51	2.7
M401217	ISTOK	62.12847	129.72968	1244	43.5	0.04	14.8	80	0.22	0.27	0.07	30.00	6.6	16	1.75	15.6	4.82	15.2
M401218	ISTOK	62.12890	129.73015	1237	3.4	0.03	12.9	70	0.38	0.38	0.05	35.90	9.5	21	2.24	18.0	6.57	17.4
M401219	ISTOK	62.12937	129.73040	1227	0.4	0.02	1.2	20	0.03	0.05	0.01	3.15	0.9	3	0.67	2.2	1.38	1.6
M401220	ISTOK	62.12975	129.73073	1221	1.4	0.05	0.7	20	0.06	0.06	0.01	3.35	0.7	2	0.50	4.6	1.90	1.8
M401221	ISTOK	62.13010	129.73137	1214	2.3	0.02	5.1	40	0.12	0.18	0.02	48.50	4.2	12	0.83	6.9	4.39	24.0
M401222	ISTOK	62.13058	129.73172	1205	0.5	0.02	1.2	50	0.11	0.10	0.02	28.70	1.8	6	1.32	3.3	2.97	14.3
M401223	ISTOK	62.13093	129.73225	1200	0.8	0.03	6.2	40	0.19	0.30	0.08	24.10	6.9	17	1.13	14.9	4.87	11.2
M401224	ISTOK	62.13157	129.73240	1194	0.9	0.02	11.1	100	0.33	0.33	0.05	37.70	7.7	21	1.85	14.7	6.22	18.7

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401225	ISTOK	62.13210	129.73248	1187	0.1	0.03	0.2	20	0.05	0.03	0.01	1.57	0.6	2	0.23	1.5	1.60	0.9
M401226	ISTOK	62.13250	129.73237	1186	1.6	0.02	7.0	100	0.51	0.34	0.08	27.60	13.8	26	2.29	25.8	4.52	14.0
M401227	ISTOK	62.13298	129.73245	1191	0.6	0.06	2.2	120	0.39	0.41	0.06	11.65	5.3	18	3.51	25.6	5.49	5.7
M401228	ISTOK	62.13338	129.73273	1187	2.7	0.02	2.5	50	0.20	0.26	0.05	25.80	8.0	18	2.77	5.5	5.24	13.2
M401229	ISTOK	62.13378	129.73302	1182	0.5	0.02	0.4	40	0.09	0.10	0.02	8.55	1.3	6	4.21	1.8	1.10	4.0
M401230	ISTOK	62.13418	129.73348	1176	2.6	0.02	2.1	60	0.18	0.13	0.02	13.15	2.4	7	1.16	3.2	2.56	6.0
M401231	ISTOK	62.13463	129.73395	1162	1.7	0.04	5.2	40	0.10	0.20	0.03	38.50	3.5	11	1.12	4.8	3.92	17.8
M401232	ISTOK	62.13495	129.73438	1154	2.9	0.05	10.8	120	0.43	0.34	0.11	37.80	10.0	19	2.10	24.7	4.70	19.0
M401233	ISTOK	62.13547	129.73472	1145	5.0	0.02	0.7	20	0.08	0.06	0.02	6.97	0.7	3	1.49	2.5	1.14	3.5
M401234	ISTOK	62.13582	129.73538	1133	0.8	0.03	3.7	50	0.23	0.15	0.04	23.40	3.9	10	2.44	6.3	2.88	12.4
M401235	ISTOK	62.13592	129.73635	1125	0.6	0.02	4.5	60	0.14	0.18	0.03	37.40	3.1	9	2.38	7.0	3.65	17.5
M401236	ISTOK	62.13615	129.73728	1112	1.6	0.06	10.5	110	0.57	0.34	0.46	54.80	18.0	20	1.20	34.6	3.62	27.4
M401237	ISTOK	62.13633	129.73843	1100	2.7	0.10	6.8	150	0.51	0.30	0.16	40.90	13.2	20	1.27	24.0	3.49	19.9
M401238	ISTOK	62.13647	129.73942	1093	1.9	0.18	7.5	200	0.53	0.25	0.28	20.70	9.2	15	1.06	29.3	3.37	10.8
M401239	ISTOK	62.13677	129.74100	1081	2.6	0.09	12.2	150	0.61	0.27	0.18	31.20	11.6	18	1.00	27.1	3.96	15.6
M401240	ISTOK	62.13700	129.74212	1079	3.8	0.07	13.0	120	0.61	0.29	0.11	32.90	11.8	21	1.47	29.9	4.30	17.4
M401241	ISTOK	62.12042	129.69185	1239	1.7	0.03	17.5	60	0.14	0.25	0.10	34.10	4.8	14	0.67	10.7	6.76	17.7
M401242	ISTOK	62.12095	129.69210	1234	4.4	0.07	14.0	120	0.56	0.30	0.25	32.30	12.8	23	0.82	27.2	4.78	15.9
M401243	ISTOK	62.12147	129.69222	1228	0.9	0.04	7.3	390	0.70	0.21	0.79	61.70	17.1	27	0.82	21.1	4.84	23.9
M401244	ISTOK	62.12202	129.69243	1219	0.7	0.04	8.9	90	0.22	0.15	0.09	22.50	8.0	15	1.18	26.9	5.98	11.7
M401245	ISTOK	62.12243	129.69260	1213	1.2	0.06	12.1	100	0.48	0.22	0.60	36.50	32.2	19	1.08	32.5	4.21	14.8
M401246	ISTOK	62.12305	129.69227	1213	2.0	0.03	9.6	110	0.27	0.21	0.27	41.20	7.1	16	0.69	10.6	5.11	20.7
M401247	ISTOK	62.12347	129.69243	1221	0.3	0.03	5.7	330	0.42	0.24	0.15	39.40	5.6	18	0.56	10.3	6.70	20.2
M401248	ISTOK	62.12372	129.69290	1222	0.1	0.08	4.8	90	0.17	0.09	0.10	12.55	4.3	12	0.56	13.9	3.99	6.3
M401249	ISTOK	62.12430	129.69343	1216	0.1	0.02	2.3	70	0.09	0.09	0.45	14.50	4.9	7	0.51	4.8	2.59	6.3
M401250	ISTOK	62.12485	129.69382	1210	1.5	0.05	11.5	90	0.21	0.24	0.12	34.00	8.9	16	0.66	10.0	4.50	17.7
M401251	ISTOK	62.12507	129.69463	1214	1.0	0.06	4.8	440	0.65	0.16	0.44	57.20	21.8	25	1.44	30.3	5.49	23.2
M401252	ISTOK	62.12577	129.69505	1216	1.2	0.05	12.2	80	0.25	0.30	0.17	45.00	7.9	16	0.84	9.8	6.47	22.9
M401253	ISTOK	62.12630	129.69515	1206	2.8	0.32	18.2	100	0.41	0.30	0.18	51.50	12.3	25	1.58	24.7	5.74	26.3
M401254	ISTOK	62.12675	129.69498	1202	3.2	0.10	13.0	110	0.70	0.28	0.19	44.30	13.0	20	1.27	19.9	5.38	22.2
M401255	ISTOK	62.12702	129.69468	1200	0.8	0.11	38.2	80	0.96	0.31	0.22	63.20	10.4	21	0.98	20.7	6.55	26.7
M401256	ISTOK	62.12743	129.69487	1204	1.5	0.05	12.1	70	0.23	0.25	0.06	47.90	5.1	15	1.28	8.6	7.26	24.2

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401257	ISTOK	62.12795	129.69533	1199	1.0	0.16	27.5	70	0.65	0.31	0.16	55.80	13.7	13	0.86	37.8	5.14	26.9
M401258	ISTOK	62.12845	129.69575	1190	1.6	0.04	9.6	70	0.25	0.16	0.06	27.50	5.7	12	0.59	8.0	4.16	13.6
M401259	ISTOK	62.12888	129.69585	1183	0.9	0.14	36.6	100	0.77	0.50	0.34	79.20	23.8	17	1.00	55.9	3.25	34.3
M401260	ISTOK	62.12928	129.69510	1173	1.6	0.05	15.3	130	0.46	0.31	0.08	42.00	11.9	20	0.89	17.4	4.65	19.1
M401261	ISTOK	62.12980	129.69445	1162	1.1	0.04	18.0	50	0.13	0.25	0.09	27.90	8.9	14	0.61	7.0	3.60	12.3
M401262	ISTOK	62.13013	129.69392	1145	0.6	0.05	8.0	80	0.27	0.16	0.10	22.40	6.9	11	0.51	11.9	2.67	10.2
M401263	ISTOK	62.13060	129.69373	1135	0.1	0.07	4.4	60	0.24	0.11	0.07	12.20	3.1	6	0.27	9.1	1.54	6.8
M401264	ISTOK	62.13092	129.69285	1119	0.4	0.07	3.4	40	0.15	0.09	0.10	11.10	3.2	4	0.28	6.4	1.75	5.3
M401265	ISTOK	62.13120	129.69263	1113	0.7	0.12	15.1	120	0.65	0.23	0.19	19.80	9.1	15	1.06	31.1	2.81	11.8
M401266	ISTOK	62.13170	129.69202	1098	1.4	0.05	7.7	40	0.27	0.23	0.03	35.40	9.4	17	0.50	13.3	3.22	16.0
M401267	ISTOK	62.13258	129.69078	1072	1.7	0.10	13.6	120	0.77	0.28	0.08	28.40	10.8	19	1.20	37.4	4.32	13.3
M401268	ISTOK	62.13295	129.69030	1068	7.2	0.07	12.1	60	0.41	0.22	0.04	26.20	8.2	16	0.63	19.6	3.86	11.9
M401269	ISTOK	62.13357	129.68977	1058	1.7	0.08	10.3	100	0.43	0.19	0.06	18.35	6.6	12	0.68	19.3	3.65	9.0
M401270	ISTOK	62.13390	129.68955	1052	2.6	0.18	15.7	130	0.51	0.24	0.04	15.75	8.4	14	1.20	28.1	4.12	7.8
M401271	ISTOK	62.12422	129.72808	1295	1.1	0.12	12.8	110	0.28	0.17	0.28	19.55	8.3	12	0.50	20.3	2.58	8.8
M401272	ISTOK	62.12457	129.72848	1287	0.6	0.05	13.9	160	0.29	0.25	0.15	40.10	6.5	17	1.19	18.4	5.77	19.6
M401273	ISTOK	62.12498	129.72862	1284	0.1	0.07	0.5	30	0.06	0.03	0.03	2.83	0.6	2	0.13	4.1	1.82	1.4
M401274	ISTOK	62.12540	129.72895	1278	0.2	0.06	1.9	140	0.24	0.13	0.07	17.15	1.1	9	1.18	14.0	3.19	8.5
M401275	ISTOK	62.12623	129.72985	1271	0.1	0.05	1.6	30	0.13	0.16	0.02	8.72	1.2	7	1.18	4.8	4.14	4.3
M401276	ISTOK	62.12644	129.73010	1264	11.6	0.07	10.9	80	0.24	0.21	0.07	25.70	5.4	16	1.34	12.0	5.14	11.7
M401277	ISTOK	62.12665	129.73035	1257	2.4	0.04	7.9	50	0.22	0.17	0.05	25.30	5.7	12	0.59	14.2	2.84	11.2
M401278	ISTOK	62.12698	129.73090	1257	1.6	0.06	10.0	90	0.17	0.37	0.05	28.80	3.3	11	1.45	27.5	6.98	13.5
M401279	ISTOK	62.12745	129.73128	1251	0.1	0.04	1.0	40	0.17	0.14	0.03	4.45	1.1	6	0.60	4.5	2.98	2.2
M401280	ISTOK	62.12780	129.73168	1240	0.3	0.03	1.8	20	0.06	0.10	0.01	14.20	0.9	3	0.58	2.7	1.85	7.0
M401281	ISTOK	62.12853	129.72967	1245	2.2	0.04	12.5	130	0.43	0.35	0.09	31.20	14.8	25	1.92	22.3	5.27	13.4
M401282	ISTOK	62.12935	129.73103	1235	0.1	0.06	0.5	40	0.17	0.06	0.02	4.41	0.7	3	0.37	9.6	2.44	2.2
M401283	ISTOK	62.12973	129.73158	1222	2.0	0.10	0.3	130	0.16	0.08	0.05	13.85	0.4	5	1.03	9.2	1.92	6.8
M401284	ISTOK	62.13015	129.73208	1216	0.1	0.07	1.2	30	0.15	0.10	0.02	5.79	0.8	4	0.44	10.6	2.83	2.9
M401285	ISTOK	62.13063	129.73228	1204	2.5	0.04	9.1	80	0.42	0.32	0.06	42.60	11.5	24	1.03	24.2	4.52	20.4
M401286	ISTOK	62.13085	129.73313	1196	2.1	0.09	8.6	180	0.63	0.22	0.07	13.95	9.0	13	1.79	29.8	4.10	6.3
M401287	ISTOK	62.13120	129.73365	1192	3.2	0.08	11.7	90	0.53	0.36	0.09	42.20	14.2	23	0.88	28.4	4.48	20.7
M401288	ISTOK	62.13162	129.73407	1191	0.4	0.07	5.3	60	0.20	0.24	0.05	32.00	3.4	12	0.83	10.2	5.03	14.3

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401289	ISTOK	62.13210	129.73473	1190	0.5	0.05	6.2	110	0.52	0.24	0.05	39.90	7.7	18	1.49	12.0	5.03	19.1
M401290	ISTOK	62.13255	129.73530	1180	0.9	0.05	2.5	150	0.14	0.22	0.04	25.90	2.2	10	0.51	6.5	5.34	11.3
M401291	ISTOK	62.13295	129.73580	1170	2.4	0.12	7.8	190	0.81	0.31	0.10	34.40	13.5	23	1.42	42.8	3.87	14.6
M401292	ISTOK	62.13338	129.73643	1161	2.1	0.07	8.3	170	0.53	0.29	0.18	43.30	11.4	20	1.04	43.2	4.16	20.3
M401293	ISTOK	62.13367	129.73692	1148	1.2	0.04	4.1	90	0.21	0.20	0.04	30.70	6.5	15	1.10	12.4	4.12	13.3
M401294	ISTOK	62.13405	129.73735	1143	1.4	0.04	6.1	80	0.29	0.35	0.08	29.40	7.7	20	1.63	14.3	5.97	13.1
M401295	ISTOK	62.13443	129.73790	1134	3.1	0.01	5.0	40	0.09	0.17	0.04	30.40	1.7	6	0.33	4.9	3.75	14.2
M401296	ISTOK	62.13693	129.74350	1074	2.4	0.04	13.9	110	0.57	0.34	0.22	56.70	17.0	20	0.68	34.6	4.51	26.8
M401297	ISTOK	62.13735	129.74440	1065	3.0	0.06	9.5	130	0.43	0.29	0.18	37.00	9.6	18	0.75	24.3	3.89	16.8
M401298	ISTOK	62.13760	129.74520	1059	4.0	0.13	14.5	130	0.62	0.39	0.22	52.90	14.2	22	1.17	40.4	4.95	26.1
M401299	ISTOK	62.12023	129.69108	1228	0.8	0.10	1.3	40	0.09	0.08	0.15	12.90	1.2	4	0.45	4.4	2.66	6.3
M401300	ISTOK	62.11988	129.69040	1228	0.8	0.40	11.7	110	0.23	0.33	0.50	30.50	5.7	13	0.73	25.9	4.87	14.9
M401301	ISTOK	62.11802	129.71437	1421	3.1	0.27	23.3	170	0.30	0.27	0.18	32.10	7.5	23	0.93	34.8	4.58	15.8
M401302	ISTOK	62.11825	129.71353	1404	0.6	0.28	23.7	190	0.23	0.23	0.32	30.90	14.7	15	1.71	46.2	6.54	14.7
M401303	ISTOK	62.11865	129.71303	1390	0.3	0.18	6.1	110	0.12	0.16	1.25	16.00	6.3	9	0.76	22.8	2.91	8.0
M401304	ISTOK	62.11905	129.71247	1374	0.4	0.07	9.1	150	0.15	0.14	0.64	28.20	10.3	11	0.66	26.6	1.50	12.8
M401305	ISTOK	62.11948	129.71220	1379	1.2	0.29	13.4	290	0.85	0.23	0.91	42.60	15.6	28	0.92	30.0	4.37	17.3
M401306	ISTOK	62.11988	129.71267	1379	0.9	0.20	19.1	220	0.17	0.30	0.11	33.10	3.6	17	1.30	23.0	6.50	16.1
M401307	ISTOK	62.12033	129.71258	1366	0.3	0.04	13.9	120	0.18	0.12	0.38	19.85	19.1	15	0.86	23.2	3.07	8.8
M401308	ISTOK	62.12080	129.71247	1341	1.2	0.34	15.4	170	0.21	0.23	0.22	27.80	5.2	16	1.17	36.7	3.79	12.9
M401309	ISTOK	62.12192	129.71087	1308	0.5	0.29	2.7	40	0.03	0.10	0.06	18.10	1.7	6	2.01	7.3	3.05	9.2
M401310	ISTOK	62.12220	129.71010	1301	1.9	0.10	14.4	90	0.35	0.30	0.22	30.40	8.5	18	0.80	17.7	3.83	13.8
M401311	ISTOK	62.12263	129.71013	1296	0.8	0.01	17.7	60	0.14	0.33	0.06	35.50	5.5	14	0.75	11.9	6.24	18.0
M401312	ISTOK	62.12298	129.71102	1288	2.5	0.01	18.4	60	0.15	0.31	0.03	33.30	4.5	15	0.92	10.7	7.72	15.5
M401313	ISTOK	62.12342	129.71108	1284	0.7	0.01	22.6	50	0.25	0.47	0.21	47.00	9.0	16	0.93	34.8	5.78	23.7
M401314	ISTOK	62.12387	129.71133	1274	3.0	0.01	11.5	90	0.13	0.36	0.05	32.00	2.7	16	1.28	9.0	8.39	15.3
M401315	ISTOK	62.12422	129.71203	1273	0.7	0.03	19.4	50	0.26	0.33	0.07	29.90	4.6	16	0.97	13.2	7.09	13.8
M401316	ISTOK	62.12463	129.71252	1267	0.6	0.01	8.9	70	0.16	0.19	0.03	33.80	2.7	10	0.70	8.2	4.58	16.1
M401317	ISTOK	62.12498	129.71318	1264	1.6	0.01	13.8	70	0.24	0.24	0.05	28.40	4.5	16	1.28	13.8	6.46	13.7
M401318	ISTOK	62.12505	129.71412	1258	0.9	0.04	11.1	330	0.50	0.33	0.18	22.00	10.9	16	1.14	15.1	5.80	10.0
M401319	ISTOK	62.12528	129.71497	1251	10.5	0.04	16.6	200	0.58	0.32	0.06	32.60	11.2	22	0.67	30.1	4.45	15.2
M401320	ISTOK	62.12570	129.71518	1239	3.2	0.06	16.1	480	0.92	0.39	0.11	16.90	9.3	21	1.72	52.0	5.33	8.7

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401321	ISTOK	62.12613	129.71543	1232	2.4	0.02	15.3	80	0.37	0.26	0.07	28.50	11.3	25	2.62	15.2	4.84	13.0
M401322	ISTOK	62.12655	129.71585	1223	8.4	0.07	13.5	80	0.37	0.31	0.06	37.60	11.3	21	0.91	22.6	4.75	17.7
M401323	ISTOK	62.12700	129.71575	1213	3.2	0.02	13.4	60	0.46	0.33	0.06	44.50	12.7	22	1.54	30.5	4.65	21.8
M401324	ISTOK	62.12743	129.71612	1209	6.2	0.03	11.2	80	0.41	0.28	0.05	29.30	10.0	19	1.24	19.6	4.56	13.6
M401325	ISTOK	62.12788	129.71638	1187	3.0	0.10	10.9	100	0.47	0.30	0.20	35.60	11.2	21	1.34	28.9	3.86	16.0
M401326	ISTOK	62.12832	129.71673	1184	2.6	0.11	10.4	110	0.61	0.33	0.21	30.20	13.0	21	1.23	31.5	4.17	14.4
M401327	ISTOK	62.13040	129.72167	1161	2.0	0.14	8.8	140	0.46	0.31	0.27	39.40	13.2	22	0.82	29.0	4.38	19.3
M401328	ISTOK	62.13002	129.72218	1168	1.9	0.10	7.8	120	0.38	0.27	0.19	31.90	10.6	19	0.69	23.3	3.48	14.8
M401329	ISTOK	62.12958	129.72260	1181	2.1	0.08	9.5	110	0.46	0.27	0.17	39.20	11.0	21	0.74	25.1	3.86	18.7
M401330	ISTOK	62.12917	129.72285	1191	2.2	0.05	10.0	80	0.46	0.35	0.19	50.40	13.5	21	0.69	26.6	4.13	24.9
M401331	ISTOK	62.12865	129.72282	1203	2.3	0.04	11.0	110	0.46	0.24	0.06	20.00	8.3	17	1.11	22.2	3.50	9.7
M401332	ISTOK	62.12818	129.72265	1210	4.1	0.03	17.3	70	0.45	0.37	0.08	43.90	15.6	24	0.75	30.1	4.34	22.8
M401333	ISTOK	62.12773	129.72233	1211	2.7	0.03	18.3	90	0.46	0.38	0.07	32.10	14.0	24	1.12	26.1	5.06	16.1
M401334	ISTOK	62.12732	129.72180	1223	1.2	0.05	17.1	80	0.40	0.39	0.06	27.60	10.9	27	1.89	18.7	4.96	13.6
M401335	ISTOK	62.12690	129.72152	1226	3.5	0.06	18.7	60	0.40	0.37	0.07	34.30	15.7	27	1.16	24.1	4.65	17.4
M401336	ISTOK	62.11828	129.71507	1423	0.9	0.28	20.9	150	0.23	0.29	0.17	27.40	5.6	20	0.87	26.6	4.78	15.0
M401337	ISTOK	62.11852	129.71585	1421	0.5	1.21	7.2	250	0.74	0.09	0.74	41.00	9.9	16	0.31	14.8	1.68	19.4
M401338	ISTOK	62.11880	129.71660	1416	0.3	0.30	7.3	90	0.07	0.18	0.06	23.50	2.4	7	1.04	11.5	3.68	12.8
M401339	ISTOK	62.11898	129.71752	1395	0.6	0.22	23.8	190	0.93	0.38	0.64	34.10	34.5	14	0.99	43.7	3.23	15.8
M401340	ISTOK	62.11917	129.71838	1376	0.4	1.12	12.2	250	0.59	0.23	1.00	19.65	9.8	11	1.02	47.3	2.71	9.6
M401341	ISTOK	62.11953	129.71897	1376	1.6	0.24	18.7	150	0.15	0.28	0.11	30.70	2.7	17	0.86	25.4	4.86	17.5
M401342	ISTOK	62.12022	129.72015	1357	0.7	0.13	19.2	80	0.17	0.50	0.11	25.00	4.2	14	1.52	26.5	4.98	13.4
M401343	ISTOK	62.12067	129.72027	1329	1.3	0.28	14.6	180	0.49	0.37	0.21	34.80	11.3	19	1.60	33.4	4.13	18.0
M401344	ISTOK	62.12163	129.72050	1296	3.5	0.38	28.1	190	0.62	0.40	0.47	29.10	13.0	22	0.96	42.1	4.11	15.2
M401345	ISTOK	62.12253	129.72123	1283	1.9	0.04	23.4	90	0.25	0.35	0.11	33.00	9.4	24	0.77	21.3	4.51	16.8
M401346	ISTOK	62.12300	129.72155	1281	3.9	0.15	18.8	100	0.32	0.27	0.76	40.20	16.0	17	0.43	37.6	2.94	19.4
M401347	ISTOK	62.12345	129.72178	1275	2.4	0.06	17.4	80	0.24	0.32	0.19	29.30	7.2	20	0.75	21.5	3.91	15.2
M401348	ISTOK	62.12393	129.72185	1272	0.4	0.14	22.7	90	0.49	0.27	0.22	31.70	7.1	7	0.22	22.5	1.57	19.0
M401349	ISTOK	62.12437	129.72175	1264	5.4	0.04	18.6	90	0.44	0.33	0.14	47.40	13.3	21	0.54	27.7	4.03	24.7
M401350	ISTOK	62.12483	129.72180	1264	1.2	0.10	14.7	90	0.31	0.30	0.11	27.30	7.0	20	1.24	19.8	4.81	14.1
M401351	ISTOK	62.12528	129.72158	1254	4.4	0.10	12.5	130	0.35	0.28	0.11	39.70	7.6	19	0.68	20.2	3.79	20.4
M401352	ISTOK	62.12570	129.72145	1250	3.4	0.05	11.0	100	0.40	0.50	0.10	17.65	10.5	16	1.61	8.9	4.27	8.9

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401353	ISTOK	62.12617	129.72150	1239	3.9	0.03	14.9	130	0.66	0.30	0.05	36.50	11.1	21	0.97	25.0	4.36	18.4
M401354	ISTOK	62.12662	129.72138	1230	4.1	0.07	17.8	100	0.69	0.43	0.09	33.00	16.8	25	2.29	37.0	4.07	15.9
M401355	ISTOK	62.12023	129.71343	1375	0.7	0.17	20.9	200	0.28	0.27	0.22	28.00	5.6	19	1.11	32.3	5.16	14.9
M401356	ISTOK	62.12060	129.71410	1364	0.1	0.20	12.4	290	0.33	0.24	0.37	25.20	9.7	13	1.03	27.4	3.48	12.8
M401357	ISTOK	62.12102	129.71457	1350	3.8	0.13	20.9	180	0.22	0.30	0.29	29.40	8.1	20	0.90	29.3	4.12	15.5
M401358	ISTOK	62.12148	129.71482	1337	0.7	0.06	13.2	100	0.13	0.31	0.20	24.90	7.9	13	1.14	24.4	3.82	12.4
M401359	ISTOK	62.12188	129.71525	1326	14.5	0.15	16.1	360	0.78	0.25	0.62	35.40	17.9	19	0.98	20.4	3.87	16.4
M401360	ISTOK	62.12237	129.71532	1309	1.9	0.49	11.3	290	0.46	0.22	2.39	23.20	16.4	19	0.83	41.6	3.24	11.2
M401361	ISTOK	62.12282	129.71535	1295	1.0	0.06	11.9	140	0.24	0.25	0.28	25.80	7.5	18	0.68	12.6	3.86	12.7
M401362	ISTOK	62.12378	129.71550	1269	2.8	0.10	3.7	50	0.10	0.17	0.13	35.30	1.1	5	0.67	9.2	4.72	18.5
M401363	ISTOK	62.12422	129.71585	1266	3.3	0.52	16.2	220	0.66	0.29	0.77	39.50	17.0	22	0.97	17.0	4.34	18.2
M401364	ISTOK	62.12470	129.71602	1259	1.2	0.04	15.0	40	0.39	0.34	0.14	48.90	10.4	16	0.82	30.1	3.79	22.8
M401365	ISTOK	62.12513	129.71607	1243	2.1	0.04	10.5	140	0.24	0.25	0.06	20.70	5.7	13	0.77	12.2	3.25	9.8
M401401	ISTOK	62.11977	129.68937	1216	0.4	0.09	5.3	100	0.10	0.11	0.25	20.10	2.0	5	0.27	7.3	2.48	10.2
M401402	ISTOK	62.11948	129.68860	1208	0.7	0.03	4.8	40	0.10	0.07	0.10	17.20	2.4	8	0.56	3.1	2.70	8.0
M401403	ISTOK	62.11913	129.68760		0.9	0.11	20.9	150	0.54	0.29	0.65	29.50	11.9	18	0.87	22.6	4.43	14.5
M401404	ISTOK	62.11903	129.68655	1199	1.9	0.10	17.8	90	0.27	0.31	0.40	29.80	11.8	21	1.31	16.3	5.74	15.4
M401501	ISTOK	62.13058	129.71402	1174	0.4	0.01	2.4	30	0.03	0.08	0.01	35.90	1.1	5	0.25	2.1	5.05	18.2
M401502	ISTOK	62.13088	129.71462	1169	22.6	0.11	14.4	60	0.18	0.31	0.04	51.30	6.1	15	0.84	13.2	4.46	25.3
M401503	ISTOK	62.13133	129.71480	1170	0.7	0.05	18.7	140	0.35	0.28	0.07	34.00	8.7	18	0.79	11.5	5.11	15.9
M401504	ISTOK	62.13173	129.71537	1173	0.6	0.02	12.5	100	0.25	0.24	0.07	40.50	5.7	17	0.69	11.0	5.85	20.8
M401505	ISTOK	62.13198	129.71625	1171	1.4	0.02	9.0	80	0.21	0.22	0.04	39.00	4.4	13	0.92	9.6	6.17	19.4
M401506	ISTOK	62.13230	129.71693	1170	19.5	0.03	15.5	170	0.47	0.29	0.09	46.50	8.3	22	1.33	42.0	5.38	22.4
M401507	ISTOK	62.13265	129.71762	1165	1.5	0.02	8.9	80	0.25	0.23	0.04	33.90	3.3	13	1.20	16.4	5.14	16.4
M401508	ISTOK	62.13310	129.71818	1161	0.9	0.05	11.2	210	0.70	0.20	0.18	36.50	10.3	23	1.41	38.3	5.17	18.3
M401509	ISTOK	62.13353	129.71845	1154	0.4	0.02	14.0	120	0.20	0.26	0.11	44.50	5.6	17	2.08	14.3	6.05	22.1
M401510	ISTOK	62.13383	129.71915	1148	2.4	0.03	10.8	110	0.43	0.25	0.07	39.10	5.7	16	2.80	21.4	5.27	20.5
M401511	ISTOK	62.13433	129.71937	1139	9.0	0.05	17.9	50	0.10	0.24	0.09	31.50	3.7	7	0.47	15.2	5.90	16.6
M401512	ISTOK	62.13488	129.71942	1132	0.4	0.01	12.7	40	0.06	0.20	0.05	35.30	3.9	6	1.07	10.4	5.67	18.5
M401513	ISTOK	62.13553	129.71972	1122	1.0	0.23	9.1	220	0.43	0.24	0.24	35.50	10.6	15	0.91	22.4	4.21	18.1
M401514	ISTOK	62.13613	129.72025	1116	0.1	0.03	12.3	90	0.16	0.22	0.20	29.10	6.9	13	0.62	12.1	4.45	14.9
M401515	ISTOK	62.13662	129.72083	1108	2.3	0.02	9.9	110	0.45	0.28	0.06	56.20	12.2	17	0.38	24.9	3.35	28.2

Sample	Property	Lat	Long	Elevation	Au	Ag	As	Ba	Be	Bi	Cd	Ce	Co	Cr	Cs	Cu	Ga	La
		N	W	m	ppb	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
M401516	ISTOK	62.13723	129.72127	1101	0.9	0.01	13.3	40	0.09	0.18	0.05	24.50	3.1	8	0.38	9.0	4.61	12.5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401001	ISTOK	3.3	57	0.36	0.15	3.1	290	5.9	2.7	0.14	0.6	0.2	0.2	5.1	25	0.01	0.01	2.5	0.5	5
M401002	ISTOK	11.8	813	2.52	0.45	24.2	820	29.9	5.5	0.71	2.2	0.4	0.8	7.1	70	0.01	0.02	19	0.5	10
M401003	ISTOK	19.4	168	1.29	0.51	10.3	580	24.0	3.8	0.42	1.1	0.6	0.3	9.0	25	0.03	0.02	16	0.5	10
M401004	ISTOK	6.8	56	0.67	0.31	5.8	250	3.4	2.4	0.19	0.7	0.2	0.2	3.8	25	0.01	0.02	2.5	0.5	5
M401005	ISTOK	11.2	140	1.67	0.36	9.7	360	11.0	7.7	0.51	1.2	0.3	0.4	4.5	25	0.01	0.01	9	0.5	5
M401006	ISTOK	1.5	87	0.64	0.09	3.5	510	4.4	3.0	0.12	0.4	0.2	0.2	3.5	25	0.01	0.01	2.5	0.5	5
M401007	ISTOK	6.8	237	2.31	0.42	9.9	1040	12.4	3.9	0.82	1.1	0.4	0.4	4.9	50	0.01	0.01	14	0.5	5
M401008	ISTOK	0.6	28	0.35	0.24	2.7	210	4.5	2.0	0.17	0.5	0.2	0.3	5.2	25	0.01	0.01	2.5	0.5	5
M401009	ISTOK	10.6	114	2.53	0.19	7.7	360	13.5	3.7	0.63	1.2	0.3	0.2	5.8	25	0.01	0.01	10	0.5	5
M401010	ISTOK	1.8	39	0.52	0.10	2.6	620	4.5	3.4	0.09	0.4	0.2	0.2	5.3	25	0.01	0.01	2.5	0.5	5
M401011	ISTOK	27.3	245	1.13	0.36	16.5	400	14.8	4.8	0.45	1.4	0.4	0.2	4.4	25	0.02	0.01	11	0.5	5
M401012	ISTOK	12.1	46	0.38	0.33	5.4	170	5.1	3.2	0.11	1.1	0.3	0.2	4.1	25	0.03	0.01	6	0.5	5
M401013	ISTOK	31.7	303	1.11	0.67	17.4	210	11.4	4.8	0.55	2.1	0.4	0.4	4.8	60	0.04	0.01	16	0.5	5
M401014	ISTOK	8.0	185	0.98	0.52	6.8	440	11.1	2.3	0.35	1.5	0.8	0.3	5.3	25	0.04	0.03	13	0.5	5
M401015	ISTOK	41.6	657	1.16	0.17	26.1	600	17.4	7.0	0.46	2.3	0.5	0.2	13.7	50	0.04	0.03	16	0.5	5
M401016	ISTOK	44.2	719	1.60	0.12	28.4	680	18.6	4.3	0.68	1.9	0.4	0.2	20.7	60	0.02	0.02	16	0.5	5
M401017	ISTOK	40.5	247	1.38	0.15	22.7	380	14.1	6.3	0.54	1.9	0.4	0.2	5.8	60	0.03	0.01	13	0.5	5
M401018	ISTOK	42.1	404	2.11	0.19	25.4	710	18.6	5.0	0.83	1.8	0.4	0.2	13.9	60	0.04	0.01	16	0.5	5
M401019	ISTOK	5.6	103	0.72	0.37	4.9	250	8.8	2.6	0.18	0.7	0.3	0.2	5.2	25	0.01	0.02	6	0.5	5
M401020	ISTOK	40.5	474	0.83	0.09	25.1	530	18.0	3.7	0.49	1.9	0.3	0.1	12.0	60	0.03	0.01	12	0.5	5
M401021	ISTOK	54.4	603	1.02	0.13	31.5	520	20.8	7.1	0.45	2.7	0.4	0.2	14.4	50	0.04	0.03	18	0.5	5
M401022	ISTOK	51.1	496	0.85	0.12	28.6	380	16.2	5.2	0.47	2.2	0.3	0.2	11.1	60	0.03	0.01	14	0.5	5
M401023	ISTOK	37.7	694	1.14	0.14	25.1	700	22.5	6.0	0.48	1.9	0.1	0.2	28.0	25	0.07	0.05	19	1.0	5
M401024	ISTOK	12.7	187	1.39	0.39	13.0	560	21.5	8.0	0.73	0.8	0.2	0.3	4.6	25	0.02	0.05	15	0.5	5
M401025	ISTOK	1.8	33	0.84	0.11	4.8	220	5.3	4.8	0.33	0.4	0.1	0.4	3.7	25	0.01	0.02	6	0.5	5
M401026	ISTOK	12.0	103	1.13	0.21	10.0	420	18.9	5.8	0.47	0.8	0.2	0.2	4.2	25	0.03	0.04	12	1.0	5
M401027	ISTOK	20.4	322	2.09	0.49	16.9	750	23.3	7.8	0.83	1.2	0.7	0.2	7.2	25	0.05	0.03	19	0.5	5
M401028	ISTOK	3.6	85	1.29	0.18	4.7	390	6.6	3.8	0.38	0.5	0.1	0.4	3.3	25	0.01	0.03	8	0.5	5
M401029	ISTOK	1.9	54	1.31	0.18	3.6	370	6.8	5.1	0.4	0.3	0.1	0.2	3.9	25	0.01	0.03	5	1.0	5
M401030	ISTOK	47.7	413	0.79	0.09	28.2	500	18.3	4.5	0.57	1.8	0.3	0.2	36.2	50	0.03	0.03	15	0.5	5
M401031	ISTOK	48.0	508	0.74	0.09	26.9	580	17.8	3.7	0.55	1.6	0.1	0.2	46.8	60	0.03	0.04	13	1.0	5
M401032	ISTOK	28.5	336	1.13	0.21	21.5	520	13.1	5.2	0.62	1.5	0.3	0.2	220.0	25	0.06	0.04	14	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401033	ISTOK	30.9	452	1.25	0.21	25.7	580	15.4	4.8	0.72	1.8	0.6	0.2	65.2	25	0.07	0.04	14	0.5	5
M401034	ISTOK	27.1	338	0.80	0.21	19.5	430	12.6	5.4	0.49	1.4	0.1	0.2	68.4	25	0.04	0.04	14	1.0	5
M401035	ISTOK	38.7	459	2.57	0.11	30.7	730	19.3	5.4	1.16	2.2	0.6	0.2	51.4	50	0.03	0.04	19	1.0	5
M401036	ISTOK	1.6	54	1.78	0.12	6.1	620	7.8	6.1	0.62	0.3	0.1	0.2	4.4	25	0.01	0.02	9	0.5	5
M401037	ISTOK	11.1	870	0.71	0.16	14.9	510	11.7	3.0	0.47	2.6	0.4	0.2	53.8	25	0.05	0.05	26	0.5	5
M401038	ISTOK	7.1	155	0.54	0.16	5.8	580	9.5	2.8	0.2	0.3	0.1	0.2	5.3	25	0.01	0.03	7	0.5	5
M401039	ISTOK	21.0	248	2.25	0.25	16.5	720	13.3	4.1	1.05	1.0	0.7	0.2	90.9	25	0.05	0.04	15	1.0	5
M401040	ISTOK	43.4	191	4.82	0.05	41.4	450	24.3	1.6	1.33	3.5	0.7	0.2	57.7	70	0.11	0.09	36	1.0	5
M401041	ISTOK	14.8	196	2.84	0.16	17.2	540	18.9	4.6	1.16	1.5	0.5	0.2	49.1	25	0.05	0.05	18	1.0	5
M401042	ISTOK	40.8	318	2.43	0.11	29.9	610	20.5	3.1	0.87	2.5	0.8	0.2	73.6	50	0.07	0.06	26	0.5	5
M401043	ISTOK	35.0	189	0.59	0.48	18.7	250	13.5	4.4	0.42	1.5	0.2	0.4	4.3	50	0.06	0.04	18	1.0	5
M401044	ISTOK	43.7	200	0.75	0.46	18.5	310	21.6	6.6	0.4	1.6	0.3	0.4	4.7	50	0.08	0.06	25	1.0	5
M401045	ISTOK	50.5	299	0.61	0.22	31.0	300	27.9	5.8	0.65	1.9	0.3	0.3	5.1	50	0.08	0.05	30	1.0	5
M401046	ISTOK	34.7	490	0.73	0.31	26.3	970	22.5	5.5	0.46	1.8	0.3	0.2	97.2	50	0.07	0.05	28	0.5	5
M401047	ISTOK	37.1	206	1.07	0.22	17.4	170	14.9	5.7	0.4	1.7	0.1	0.3	11.5	25	0.09	0.03	18	0.5	5
M401048	ISTOK	25.3	321	1.62	0.19	18.2	830	17.6	3.4	0.56	2.4	0.6	0.1	77.9	50	0.13	0.05	26	1.0	5
M401049	ISTOK	41.8	2920	3.67	0.35	26.6	690	38.0	4.9	0.66	3.2	1.0	0.3	11.6	60	0.19	0.05	49	1.0	10
M401050	ISTOK	38.4	217	1.01	0.26	17.2	130	13.3	4.8	0.44	1.3	0.1	0.3	3.3	25	0.04	0.03	18	0.5	5
M401051	ISTOK	26.9	243	1.29	0.39	16.5	510	27.6	6.2	0.65	2.3	0.4	0.3	66.9	25	0.09	0.04	44	0.5	5
M401052	ISTOK	17.9	153	1.98	0.09	21.9	410	27.6	4.8	0.96	4.1	0.5	0.3	404.0	50	0.08	0.03	61	0.5	5
M401053	ISTOK	18.5	756	1.13	0.63	21.9	680	27.3	7.1	0.58	3.4	0.5	0.5	113.0	50	0.04	0.04	61	0.5	5
M401054	ISTOK	1.6	105	0.26	0.31	2.6	340	3.5	1.4	0.12	0.5	0.1	0.1	44.2	25	0.02	0.03	6	0.5	5
M401055	ISTOK	33.7	379	0.82	0.36	20.0	400	14.9	6.8	0.3	2.0	0.1	0.4	44.6	25	0.05	0.03	24	0.5	5
M401056	ISTOK	37.9	288	0.73	0.30	21.2	260	12.9	5.2	0.3	1.7	0.3	0.3	54.6	25	0.05	0.01	19	1.0	5
M401057	ISTOK	38.4	199	0.72	0.28	20.9	170	12.4	6.3	0.36	1.7	0.1	0.3	48.2	25	0.06	0.02	21	0.5	5
M401058	ISTOK	21.6	361	1.05	0.18	17.9	430	13.2	3.9	0.46	1.8	0.2	0.2	66.3	25	0.06	0.02	23	0.5	5
M401059	ISTOK	41.8	314	1.13	0.29	26.1	190	20.0	8.8	0.5	2.2	0.2	0.4	59.1	25	0.04	0.04	26	1.0	5
M401060	ISTOK	19.6	1100	0.76	0.09	17.0	390	18.9	2.1	0.4	2.2	0.5	0.1	38.0	50	0.04	0.05	29	0.5	5
M401061	ISTOK	42.2	379	2.23	0.25	31.0	850	28.9	4.1	0.84	2.1	0.8	0.2	108.0	60	0.07	0.07	32	1.0	5
M401062	ISTOK	2.0	20	0.63	0.14	2.0	250	6.4	3.2	0.11	0.6	0.1	0.3	5.9	25	0.01	0.04	8	0.5	5
M401063	ISTOK	9.4	454	2.47	0.36	10.4	490	24.1	3.0	0.68	1.3	0.5	0.4	30.0	25	0.03	0.04	22	0.5	10
M401064	ISTOK	31.6	413	1.22	0.24	27.7	630	12.8	6.2	0.54	1.5	1.3	0.2	112.0	25	0.08	0.07	16	2.0	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401065	ISTOK	39.5	994	1.03	0.30	27.3	610	16.5	6.0	0.46	1.6	2.0	0.2	116.5	25	0.11	0.05	15	3.0	5
M401066	ISTOK	53.5	595	0.62	0.06	31.7	470	19.2	5.1	0.48	2.2	0.3	0.2	36.3	50	0.06	0.04	15	1.0	5
M401067	ISTOK	53.0	391	0.49	0.10	29.0	330	14.2	5.9	0.45	2.0	0.5	0.2	87.8	25	0.08	0.04	14	1.0	5
M401068	ISTOK	41.8	186	0.58	0.28	18.4	180	13.6	5.9	0.23	1.6	0.1	0.3	49.7	25	0.06	0.03	17	1.0	5
M401069	ISTOK	32.2	202	1.19	0.19	16.9	140	13.4	4.3	0.31	1.1	0.1	0.3	5.2	25	0.03	0.02	15	0.5	5
M401070	ISTOK	39.2	526	1.22	0.20	26.0	490	19.6	5.9	0.43	2.2	0.4	0.2	57.7	25	0.08	0.05	19	1.0	5
M401071	ISTOK	35.1	317	0.72	0.06	35.0	1890	25.4	2.5	0.47	4.1	0.6	0.2	96.9	90	0.05	0.17	41	1.0	5
M401072	ISTOK	37.3	219	1.03	0.30	22.2	800	23.7	4.9	0.35	2.3	0.7	0.3	35.9	50	0.04	0.05	23	1.0	5
M401073	ISTOK	12.0	114	0.81	0.15	8.1	210	6.6	6.1	0.26	0.7	0.1	0.3	5.1	25	0.01	0.03	5	1.0	5
M401074	ISTOK	26.8	230	1.26	0.36	15.1	190	10.5	6.7	0.44	1.1	0.1	0.3	4.6	50	0.03	0.02	13	0.5	5
M401075	ISTOK	27.1	209	1.07	0.25	13.9	120	11.8	5.1	0.42	1.3	0.1	0.3	6.0	25	0.03	0.02	13	0.5	5
M401076	ISTOK	50.7	378	0.92	0.19	28.4	220	13.5	7.1	0.42	1.6	0.1	0.3	20.0	50	0.03	0.03	21	0.5	5
M401077	ISTOK	18.4	306	4.27	0.23	29.7	410	18.8	6.8	0.74	2.6	0.5	0.3	33.4	25	0.14	0.06	45	1.0	10
M401078	ISTOK	21.1	338	6.06	0.17	23.6	310	14.5	5.8	1.84	1.1	0.4	0.3	26.0	25	0.03	0.06	15	0.5	5
M401079	ISTOK	39.7	315	1.19	0.22	24.4	250	20.6	8.1	0.64	1.7	0.5	0.2	5.2	50	0.06	0.04	20	1.0	5
M401080	ISTOK	59.0	419	1.21	0.35	120.0	620	18.1	6.5	0.43	3.3	2.6	0.3	81.0	60	0.14	0.08	25	2.0	10
M401081	ISTOK	7.3	116	3.23	0.22	11.0	380	13.9	3.8	0.57	0.8	0.4	0.2	5.0	25	0.02	0.03	14	1.0	5
M401082	ISTOK	38.0	159	1.00	0.38	20.6	270	20.9	7.4	0.34	1.9	0.8	0.3	5.5	50	0.12	0.05	25	0.5	5
M401083	ISTOK	5.1	34	27.60	0.26	8.9	280	9.9	9.6	1.89	1.1	0.8	0.5	4.1	25	0.02	0.04	12	1.0	5
M401084	ISTOK	14.3	188	2.11	0.78	11.5	200	10.6	6.9	0.45	1.3	0.1	0.4	4.6	50	0.01	0.02	11	0.5	5
M401085	ISTOK	39.2	3130	5.21	0.22	35.6	2060	17.1	10.1	0.9	3.0	2.3	0.3	137.5	25	0.32	0.08	28	4.0	5
M401086	ISTOK	40.7	442	1.17	0.11	28.3	480	14.5	5.1	0.42	1.8	0.7	0.2	43.2	60	0.09	0.05	16	2.0	5
M401087	ISTOK	13.3	412	2.26	0.16	16.3	410	11.6	4.2	0.75	2.0	1.3	0.2	6.6	25	0.04	0.05	13	1.0	5
M401088	ISTOK	18.6	183	1.50	0.18	12.6	170	9.1	4.3	0.44	0.9	0.1	0.2	28.1	25	0.03	0.02	12	0.5	5
M401089	ISTOK	27.3	293	1.49	0.21	25.4	440	17.2	7.7	1.34	2.0	0.7	0.2	6.3	50	0.05	0.05	26	0.5	5
M401090	ISTOK	8.2	141	2.62	0.11	34.9	1230	12.3	5.5	2.94	1.5	1.9	0.2	7.0	25	0.01	0.04	22	1.0	5
M401091	ISTOK	30.0	398	1.18	0.16	29.4	730	13.4	5.8	0.63	2.6	1.3	0.2	72.7	50	0.06	0.07	15	2.0	5
M401092	ISTOK	26.8	910	2.07	0.16	34.6	1020	25.3	7.2	0.82	2.3	1.8	0.2	116.0	25	0.12	0.09	23	2.0	5
M401093	ISTOK	39.8	596	1.12	0.08	29.6	460	17.9	3.9	0.42	1.8	0.3	0.2	32.6	50	0.07	0.03	12	1.0	5
M401094	ISTOK	27.9	799	1.03	0.31	21.9	450	22.9	11.4	0.3	2.1	0.7	0.2	96.5	25	0.04	0.05	20	1.0	5
M401095	ISTOK	40.5	368	1.94	0.20	28.9	420	17.9	6.9	0.75	1.5	0.7	0.2	84.4	25	0.08	0.03	17	1.0	5
M401096	ISTOK	14.5	202	0.98	0.33	12.8	470	11.7	4.8	0.4	0.9	0.1	0.3	4.2	25	0.02	0.01	13	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401097	ISTOK	22.4	136	0.84	0.42	11.8	280	15.4	6.8	0.29	0.8	0.1	0.3	8.2	25	0.02	0.03	16	0.5	5
M401098	ISTOK	15.1	195	0.69	0.19	13.3	220	16.0	3.8	0.39	1.3	0.1	0.5	5.5	50	0.02	0.02	18	0.5	5
M401099	ISTOK	29.5	914	0.83	0.22	32.5	890	20.0	5.2	0.47	1.8	1.2	0.2	227.0	50	0.08	0.08	18	0.5	5
M401100	ISTOK	45.8	509	0.29	0.10	26.9	250	18.1	4.1	0.34	1.7	0.1	0.2	26.6	70	0.08	0.01	11	0.5	5
M401101	ISTOK	12.6	166	1.76	0.33	12.0	320	10.4	7.7	0.62	1.3	0.4	0.4	3.6	25	0.02	0.01	14	0.5	5
M401102	ISTOK	9.6	306	2.32	0.41	14.3	490	16.3	9.0	0.94	1.3	0.4	0.4	6.1	50	0.03	0.02	18	0.5	5
M401103	ISTOK	1.8	82	1.32	0.11	5.5	590	6.1	7.2	0.37	0.3	0.1	0.3	4.6	25	0.01	0.005	6	0.5	5
M401104	ISTOK	5.0	360	1.14	0.31	4.2	740	19.1	3.0	0.24	0.2	0.1	0.3	4.7	25	0.01	0.03	12	0.5	5
M401105	ISTOK	6.3	64	1.17	0.41	6.5	320	8.3	3.7	0.56	0.7	0.1	0.4	3.7	25	0.01	0.02	8	0.5	5
M401106	ISTOK	5.4	236	2.42	0.38	9.2	580	16.1	5.1	0.91	1.1	0.3	0.4	3.9	25	0.01	0.01	14	0.5	5
M401107	ISTOK	4.5	70	1.43	0.34	4.8	240	5.6	3.9	0.38	0.7	0.1	0.4	4.0	25	0.01	0.01	7	0.5	5
M401108	ISTOK	12.9	164	3.23	0.48	12.9	580	15.6	4.7	1.12	1.0	0.7	0.4	6.7	25	0.02	0.02	15	0.5	5
M401109	ISTOK	3.9	77	0.92	0.20	3.5	540	9.3	4.1	0.19	0.3	0.2	0.4	7.9	25	0.01	0.01	7	0.5	5
M401110	ISTOK	6.3	538	1.59	0.97	4.8	310	17.1	4.5	0.32	0.9	0.1	0.6	6.2	25	0.02	0.01	12	0.5	5
M401111	ISTOK	8.6	131	2.40	0.27	6.6	170	5.0	5.3	0.32	1.2	0.2	0.5	5.3	25	0.01	0.01	9	0.5	5
M401112	ISTOK	53.1	224	1.72	0.24	28.6	280	17.1	9.4	0.78	2.2	0.6	0.3	5.1	50	0.18	0.02	23	0.5	5
M401113	ISTOK	21.9	373	4.59	0.66	11.6	420	10.1	8.1	0.52	1.5	0.2	0.5	5.3	25	0.04	0.02	18	0.5	5
M401114	ISTOK	40.9	472	1.23	0.27	21.8	200	13.5	5.2	0.56	1.5	0.4	0.3	4.8	25	0.05	0.01	16	0.5	5
M401115	ISTOK	39.9	240	1.24	0.34	23.6	400	18.3	7.1	0.54	1.6	0.2	0.4	5.3	25	0.08	0.03	20	0.5	5
M401116	ISTOK	33.7	233	2.21	0.28	18.2	350	15.1	8.2	0.89	1.8	0.4	0.4	4.1	50	0.08	0.02	21	0.5	5
M401117	ISTOK	31.2	1360	2.01	0.31	17.6	1220	34.2	7.6	0.68	0.9	0.2	0.6	7.7	25	0.04	0.03	19	0.5	5
M401118	ISTOK	25.0	273	2.38	0.26	13.8	210	18.1	5.8	0.66	1.7	0.1	0.5	5.2	25	0.05	0.01	14	0.5	5
M401119	ISTOK	15.7	119	1.84	0.22	10.0	190	9.3	6.4	0.45	1.3	0.1	0.3	4.4	25	0.02	0.01	11	0.5	5
M401120	ISTOK	29.1	238	2.40	0.25	18.6	660	18.1	8.9	0.8	1.4	0.4	0.4	6.9	25	0.05	0.02	21	0.5	5
M401121	ISTOK	2.0	31	1.09	0.19	2.7	970	16.8	3.0	0.12	0.1	0.1	0.3	5.6	25	0.01	0.01	11	0.5	5
M401122	ISTOK	3.6	141	8.79	1.16	3.0	160	12.5	4.3	0.36	0.8	0.2	0.9	5.9	25	0.01	0.005	8	0.5	5
M401123	ISTOK	20.6	607	1.11	0.13	12.8	400	10.8	9.2	0.12	1.1	0.2	0.3	44.7	25	0.02	0.005	9	0.5	5
M401124	ISTOK	42.3	586	0.83	0.10	25.7	490	15.7	4.0	0.45	1.5	0.1	0.2	22.3	60	0.04	0.01	14	0.5	5
M401125	ISTOK	54.3	229	1.53	0.20	26.9	190	15.5	7.8	0.71	1.9	0.3	0.3	4.9	50	0.09	0.01	23	0.5	5
M401126	ISTOK	5.7	370	4.87	1.11	5.9	240	36.3	4.0	0.4	1.1	0.1	0.7	6.0	25	0.01	0.01	12	0.5	5
M401127	ISTOK	3.7	50	1.10	0.55	4.6	470	13.4	2.8	0.31	0.6	0.1	0.5	10.3	25	0.01	0.03	12	0.5	5
M401128	ISTOK	23.0	94	1.46	1.61	8.5	750	29.3	3.6	0.43	2.2	1.2	0.6	8.1	25	0.08	0.08	44	1.0	40

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401129	ISTOK	41.4	807	1.01	0.14	27.7	610	19.0	4.4	0.46	1.9	0.5	0.2	35.6	60	0.04	0.02	13	0.5	5
M401130	ISTOK	29.7	487	0.65	0.29	22.3	540	12.2	6.7	0.54	1.8	1.4	0.2	132.5	25	0.12	0.04	15	2.0	5
M401131	ISTOK	29.8	535	0.64	0.18	20.2	380	12.6	5.0	0.35	1.6	0.8	0.2	75.2	25	0.06	0.04	12	0.5	5
M401132	ISTOK	38.0	344	0.78	0.12	23.3	330	16.6	4.7	0.46	1.4	0.6	0.2	26.1	25	0.02	0.02	15	0.5	5
M401133	ISTOK	40.4	308	0.99	0.12	23.6	330	11.7	4.3	0.44	1.4	0.6	0.2	49.4	25	0.06	0.02	14	0.5	5
M401134	ISTOK	46.9	808	1.04	0.11	32.1	430	20.2	4.8	0.52	2.5	0.6	0.2	17.4	25	0.05	0.04	17	0.5	5
M401135	ISTOK	39.9	332	0.81	0.12	21.4	240	11.3	5.5	0.29	1.1	0.6	0.2	31.9	25	0.02	0.01	12	0.5	5
M401136	ISTOK	42.5	345	1.14	0.27	19.8	260	16.1	7.2	0.47	1.6	0.7	0.3	4.9	25	0.06	0.02	17	0.5	5
M401137	ISTOK	57.7	354	0.93	0.23	26.6	250	25.3	8.3	0.49	1.7	0.6	0.3	4.2	25	0.09	0.02	22	0.5	5
M401138	ISTOK	20.2	107	1.63	0.12	10.4	80	7.1	4.0	0.35	0.9	0.4	0.3	4.2	25	0.04	0.01	5	0.5	5
M401139	ISTOK	26.1	104	1.01	0.47	13.5	900	25.0	4.2	0.18	0.8	1.0	0.4	7.8	25	0.04	0.07	20	0.5	5
M401140	ISTOK	47.8	259	1.02	0.47	14.7	220	18.8	9.3	0.46	1.9	0.8	0.7	5.4	25	0.09	0.04	23	0.5	10
M401141	ISTOK	4.6	104	1.83	0.22	6.0	380	6.4	4.5	0.39	0.4	0.4	0.4	5.2	25	0.01	0.01	7	0.5	5
M401142	ISTOK	6.3	141	2.08	0.53	8.4	310	7.9	3.6	0.65	1.5	0.6	0.6	3.6	25	0.02	0.02	12	0.5	5
M401143	ISTOK	31.0	364	0.67	0.18	19.8	490	11.6	4.8	0.31	1.1	1.3	0.3	107.5	25	0.08	0.03	10	0.5	5
M401144	ISTOK	30.2	563	1.80	0.22	26.0	670	17.5	6.8	0.34	1.3	1.5	0.3	84.4	25	0.07	0.05	15	0.5	5
M401145	ISTOK	7.1	161	1.75	0.31	7.0	210	6.8	3.3	0.41	1.0	0.5	0.5	3.2	25	0.01	0.01	7	0.5	5
M401146	ISTOK	20.0	818	0.75	0.31	41.5	1150	15.3	5.4	0.51	6.3	2.1	0.3	139.5	70	0.09	0.15	35	0.5	5
M401147	ISTOK	32.2	240	2.74	0.17	22.7	160	20.0	7.9	0.78	1.9	1.1	0.3	4.0	25	0.05	0.02	15	0.5	5
M401148	ISTOK	43.6	369	0.70	0.22	22.4	150	15.3	6.2	0.3	1.3	0.4	0.3	12.6	25	0.04	0.01	14	0.5	5
M401149	ISTOK	43.4	515	1.47	0.27	14.3	230	9.6	9.0	0.18	2.4	0.8	0.5	32.3	25	0.04	0.01	16	0.5	5
M401150	ISTOK	19.1	90	2.06	0.23	7.1	170	8.2	6.2	0.29	2.0	0.4	0.5	8.3	25	0.03	0.02	11	0.5	5
M401151	ISTOK	59.0	232	2.00	0.30	25.7	220	14.0	7.8	0.41	3.9	0.8	0.5	6.9	25	0.13	0.03	28	0.5	5
M401152	ISTOK	42.2	246	2.35	0.28	19.8	220	16.5	7.2	0.69	2.7	1.1	0.4	3.5	25	0.11	0.05	25	0.5	5
M401153	ISTOK	46.0	275	1.33	0.22	19.7	150	13.1	7.4	0.48	2.4	0.5	0.4	3.5	25	0.11	0.02	20	0.5	5
M401154	ISTOK	41.3	200	0.45	0.13	21.8	280	10.6	5.9	0.21	1.2	0.6	0.2	14.8	25	0.02	0.01	7	0.5	5
M401155	ISTOK	33.6	204	0.98	0.27	14.7	220	8.6	5.1	0.32	1.5	0.4	0.4	7.6	25	0.03	0.01	13	0.5	5
M401156	ISTOK	26.9	158	1.42	0.37	10.3	170	9.1	5.8	0.33	1.9	0.5	0.5	4.0	25	0.04	0.01	12	0.5	5
M401157	ISTOK	24.2	191	1.17	0.25	12.6	140	7.5	5.4	0.29	1.0	0.3	0.3	9.4	25	0.02	0.005	9	0.5	5
M401158	ISTOK	24.0	529	3.99	0.24	27.4	510	9.5	5.6	0.75	5.7	1.1	0.5	26.2	25	0.07	0.04	36	0.5	10
M401159	ISTOK	24.9	195	0.97	0.27	13.8	150	10.5	4.9	0.5	1.3	0.5	0.4	3.6	25	0.04	0.01	13	0.5	5
M401160	ISTOK	11.0	108	0.89	0.21	5.9	100	6.7	3.6	0.23	0.9	0.4	0.4	3.3	25	0.02	0.005	7	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401161	ISTOK	27.8	557	2.47	0.27	28.0	490	10.8	6.3	0.56	5.9	1.3	0.4	15.3	25	0.1	0.05	36	0.5	5
M401162	ISTOK	18.1	202	1.25	0.35	11.6	290	10.2	4.0	0.45	0.9	0.5	0.4	3.5	25	0.02	0.01	10	0.5	5
M401163	ISTOK	41.5	277	0.62	0.27	17.1	160	11.1	7.2	0.35	1.3	0.4	0.4	6.7	25	0.05	0.01	16	0.5	5
M401164	ISTOK	43.7	242	0.46	0.22	19.1	140	14.3	6.4	0.29	1.4	0.6	0.3	4.2	25	0.06	0.01	14	0.5	5
M401165	ISTOK	4.2	72	2.12	0.13	8.3	250	7.8	4.9	0.8	0.7	0.7	0.4	4.7	25	0.01	0.01	7	0.5	5
M401166	ISTOK	22.6	155	1.04	0.18	13.5	180	11.8	4.7	0.43	1.1	0.6	0.4	4.8	25	0.04	0.02	14	0.5	5
M401167	ISTOK	50.7	241	0.54	0.23	22.6	240	16.1	7.5	0.34	1.7	0.4	0.2	4.4	80	0.08	0.04	20	0.5	5
M401168	ISTOK	26.4	230	0.50	0.24	15.7	180	12.8	5.7	0.37	1.2	0.3	0.3	4.5	70	0.04	0.01	13	0.5	5
M401169	ISTOK	33.6	258	1.67	0.46	19.2	510	16.6	7.6	0.39	1.3	0.3	0.3	6.9	60	0.03	0.02	18	0.5	5
M401170	ISTOK	15.1	506	3.37	0.40	14.5	290	16.1	5.5	1.02	1.8	0.5	0.5	5.8	60	0.06	0.01	20	0.5	5
M401171	ISTOK	17.0	258	1.18	0.45	13.2	370	13.7	6.7	0.58	1.2	0.3	0.4	3.9	80	0.03	0.02	15	0.5	5
M401172	ISTOK	11.3	274	2.89	0.29	17.6	750	13.5	7.9	1	2.5	0.8	0.3	2.9	90	0.05	0.03	37	0.5	5
M401173	ISTOK	18.7	310	2.73	0.34	23.6	590	14.4	7.1	0.83	2.8	0.5	0.5	3.9	100	0.07	0.03	26	0.5	5
M401174	ISTOK	16.0	369	6.28	0.26	29.7	710	11.8	6.6	1.06	2.9	0.5	1.0	4.1	100	0.06	0.04	25	0.5	5
M401175	ISTOK	18.9	429	4.03	0.24	33.9	670	16.0	8.4	1.04	2.9	0.6	0.3	5.9	100	0.06	0.03	28	0.5	5
M401176	ISTOK	28.1	780	4.73	0.12	45.8	710	9.7	5.5	1.29	3.0	1.2	0.2	70.9	90	0.09	0.06	36	1.0	10
M401177	ISTOK	17.8	451	2.69	0.26	18.3	260	13.3	7.7	0.77	1.2	0.5	0.4	18.8	70	0.03	0.02	17	0.5	5
M401178	ISTOK	15.9	170	1.03	0.32	10.1	220	10.1	5.9	0.46	1.2	0.3	0.4	3.7	70	0.03	0.02	14	0.5	5
M401179	ISTOK	8.4	93	0.89	0.23	6.2	170	6.0	4.7	0.25	0.8	0.2	0.4	2.7	50	0.01	0.01	6	0.5	5
M401180	ISTOK	32.4	227	0.35	0.27	14.7	160	12.0	7.6	0.36	1.4	0.2	0.3	3.2	90	0.05	0.01	14	0.5	5
M401181	ISTOK	33.2	206	0.34	0.24	15.7	180	10.6	5.8	0.28	1.2	0.2	0.3	4.8	90	0.03	0.01	11	0.5	5
M401182	ISTOK	39.5	434	0.40	0.15	29.5	460	15.1	4.2	0.35	2.0	0.6	0.2	65.5	90	0.07	0.03	11	0.5	5
M401183	ISTOK	30.4	393	0.55	0.29	20.5	330	16.2	5.6	0.32	1.3	0.5	0.3	107.0	60	0.04	0.02	13	0.5	5
M401184	ISTOK	32.4	367	0.60	0.33	20.0	540	26.4	5.8	0.45	1.9	0.5	0.3	34.3	90	0.08	0.02	22	0.5	5
M401185	ISTOK	32.8	155	0.66	0.47	18.8	300	19.5	5.7	0.28	2.6	0.6	0.4	6.9	100	0.13	0.05	28	0.5	10
M401186	ISTOK	45.9	230	0.54	0.43	38.6	330	18.6	7.3	0.35	3.8	0.7	0.3	8.9	90	0.2	0.06	31	0.5	10
M401187	ISTOK	15.9	619	0.97	0.85	12.8	980	84.3	2.7	0.71	4.9	1.3	0.5	18.2	120	0.2	0.06	47	0.5	20
M401188	ISTOK	31.9	196	0.44	0.40	14.0	120	9.9	5.2	0.34	1.4	0.2	0.4	6.4	90	0.07	0.02	14	0.5	5
M401189	ISTOK	2.2	46	0.28	0.13	1.6	80	2.9	2.1	0.13	0.5	0.1	0.2	2.3	50	0.01	0.005	2.5	0.5	5
M401190	ISTOK	41.5	379	0.42	0.51	17.3	190	15.3	7.3	0.25	1.7	0.2	0.4	12.5	80	0.05	0.01	18	0.5	5
M401191	ISTOK	45.5	485	0.25	0.09	24.5	340	16.1	3.6	0.41	1.6	0.2	0.1	9.7	100	0.04	0.01	10	0.5	5
M401192	ISTOK	1.8	64	0.66	0.12	2.7	210	4.2	1.8	0.2	0.5	0.1	0.3	2.6	25	0.01	0.01	2.5	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401193	ISTOK	26.0	247	0.49	0.26	12.8	140	9.7	4.1	0.26	1.1	0.2	0.2	3.7	80	0.03	0.01	10	0.5	5
M401194	ISTOK	33.0	627	0.73	0.18	23.8	470	15.0	5.5	0.41	1.9	0.5	0.2	45.6	70	0.07	0.03	15	0.5	5
M401195	ISTOK	9.0	183	1.09	0.32	7.8	300	13.2	2.9	0.48	0.8	0.3	0.3	6.0	70	0.03	0.02	12	0.5	5
M401196	ISTOK	23.1	240	0.72	0.36	11.6	200	12.5	6.1	0.32	1.1	0.2	0.3	7.5	90	0.04	0.01	19	0.5	5
M401197	ISTOK	13.1	106	0.62	0.25	7.1	120	7.1	3.1	0.41	1.0	0.2	0.3	3.8	80	0.03	0.01	9	0.5	5
M401198	ISTOK	23.4	229	1.01	0.27	9.0	380	11.7	4.4	0.28	0.9	0.3	0.3	27.9	60	0.03	0.01	12	0.5	5
M401199	ISTOK	19.6	125	0.64	0.22	11.4	210	8.2	5.5	0.2	0.9	0.4	0.2	80.0	60	0.03	0.01	7	0.5	5
M401200	ISTOK	10.7	560	0.77	0.39	6.2	360	46.9	3.7	0.27	1.3	0.3	0.3	40.6	60	0.03	0.02	23	0.5	10
M401201	ISTOK	33.9	3400	1.99	0.31	30.4	1870	106.5	2.1	0.85	4.7	4.6	0.1	258.0	220	0.24	0.18	39	2.0	30
M401202	ISTOK	4.2	83	1.40	0.26	4.8	630	11.5	3.4	0.43	0.4	0.5	0.2	9.4	25	0.02	0.02	7	0.5	5
M401203	ISTOK	63.9	345	1.19	0.08	33.6	710	17.0	6.0	0.45	2.5	0.8	0.2	71.0	25	0.07	0.07	23	1.0	5
M401204	ISTOK	34.5	319	1.69	0.22	23.0	1380	22.8	11.7	0.44	2.0	1.3	0.3	145.5	25	0.08	0.16	29	2.0	5
M401205	ISTOK	29.1	167	1.67	0.27	16.3	280	14.6	5.7	0.74	1.9	0.3	0.4	4.2	25	0.1	0.04	20	0.5	10
M401206	ISTOK	7.1	105	1.89	0.21	7.2	200	5.8	3.5	0.64	1.1	0.2	0.4	3.6	25	0.01	0.02	12	0.5	5
M401207	ISTOK	0.5	36	0.09	0.27	0.7	300	0.7	0.8	0.025	0.2	0.1	0.1	34.0	25	0.02	0.02	2.5	0.5	10
M401208	ISTOK	23.4	293	3.73	0.18	33.4	760	19.2	5.3	1.46	2.5	1.0	0.2	73.1	25	0.08	0.09	24	1.0	5
M401209	ISTOK	32.7	309	2.52	0.11	30.7	800	13.4	5.3	0.9	1.8	0.7	0.2	58.2	25	0.11	0.06	17	1.0	5
M401210	ISTOK	19.2	215	1.03	0.20	15.3	460	6.8	4.5	0.37	1.0	0.4	0.1	34.4	25	0.04	0.03	12	1.0	5
M401211	ISTOK	17.3	119	1.24	0.16	13.3	280	8.1	6.5	0.4	0.9	0.2	0.2	20.8	25	0.03	0.02	13	0.5	5
M401212	ISTOK	30.2	110	1.34	0.26	15.8	270	11.0	6.6	0.47	1.1	0.3	0.2	5.1	25	0.05	0.02	15	0.5	5
M401213	ISTOK	30.2	318	1.63	0.44	16.8	280	18.8	8.3	0.57	1.6	0.4	0.4	4.3	25	0.09	0.03	25	1.0	5
M401214	ISTOK	34.4	384	0.96	0.33	19.3	400	16.5	8.2	0.41	2.0	0.6	0.4	35.4	50	0.04	0.04	24	0.5	5
M401215	ISTOK	9.5	163	0.72	0.49	9.2	160	7.7	3.5	0.43	1.0	0.2	0.4	5.6	25	0.02	0.01	12	0.5	5
M401216	ISTOK	0.5	28	0.20	0.12	0.9	170	2.0	2.9	0.025	0.1	0.1	0.1	5.2	25	0.01	0.02	2.5	0.5	5
M401217	ISTOK	26.1	296	1.25	0.50	12.2	200	12.5	6.7	0.56	1.3	0.3	0.3	3.3	25	0.04	0.01	17	0.5	10
M401218	ISTOK	34.5	330	0.95	0.39	18.0	230	14.4	7.2	0.42	1.5	0.3	0.4	4.4	25	0.06	0.04	25	0.5	5
M401219	ISTOK	2.0	24	0.25	0.14	1.8	170	1.8	1.6	0.06	0.1	0.1	0.1	3.8	25	0.01	0.02	2.5	0.5	5
M401220	ISTOK	0.5	33	0.45	0.24	1.2	160	4.0	1.2	0.06	0.2	0.1	0.1	5.1	25	0.01	0.02	2.5	0.5	5
M401221	ISTOK	15.4	119	0.47	0.13	9.4	110	7.8	3.5	0.19	0.9	0.1	0.3	3.6	50	0.02	0.01	8	0.5	5
M401222	ISTOK	5.2	70	0.54	0.09	3.8	120	4.6	5.4	0.08	0.5	0.3	0.2	20.6	25	0.01	0.01	6	0.5	5
M401223	ISTOK	25.3	234	0.84	0.43	13.6	220	7.7	3.9	0.34	1.1	0.1	0.3	4.8	25	0.03	0.02	16	0.5	5
M401224	ISTOK	34.0	258	0.98	0.47	16.9	190	14.6	6.5	0.4	1.7	0.1	0.4	5.1	25	0.11	0.03	21	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401225	ISTOK	0.7	20	0.15	0.25	1.0	110	3.6	0.8	0.025	0.2	0.1	0.1	7.6	25	0.02	0.01	2.5	0.5	5
M401226	ISTOK	51.3	333	0.77	0.29	28.2	250	15.8	8.9	0.38	1.7	0.3	0.3	5.3	25	0.1	0.03	21	0.5	5
M401227	ISTOK	22.9	393	0.81	0.68	7.3	230	12.4	6.3	0.37	1.6	0.2	0.5	3.4	25	0.06	0.03	21	0.5	10
M401228	ISTOK	29.8	262	0.52	0.40	14.9	150	8.4	7.4	0.19	1.0	0.1	0.3	3.7	25	0.03	0.03	14	0.5	5
M401229	ISTOK	2.8	50	0.21	0.13	2.6	120	2.6	4.2	0.08	0.3	0.1	0.1	11.9	25	0.01	0.01	2.5	0.5	5
M401230	ISTOK	7.5	81	0.29	0.34	4.8	110	3.9	2.8	0.11	0.5	0.1	0.2	6.8	25	0.01	0.01	6	0.5	5
M401231	ISTOK	10.8	188	0.87	0.37	8.0	150	6.3	5.7	0.21	1.0	0.1	0.3	4.6	25	0.01	0.01	8	0.5	5
M401232	ISTOK	32.4	321	1.91	0.27	21.7	190	14.4	7.0	0.88	1.6	0.2	0.3	11.3	25	0.03	0.01	19	0.5	5
M401233	ISTOK	1.3	16	0.28	0.18	1.4	120	1.8	1.7	0.06	0.2	0.1	0.1	8.2	25	0.01	0.01	2.5	0.5	5
M401234	ISTOK	14.0	140	0.48	0.13	8.7	280	5.8	6.0	0.18	0.6	0.1	0.2	3.2	25	0.01	0.01	8	0.5	5
M401235	ISTOK	8.1	91	1.02	0.18	6.4	130	6.2	8.1	0.31	0.8	0.1	0.2	8.2	25	0.01	0.01	8	0.5	5
M401236	ISTOK	36.1	824	1.53	0.08	33.2	550	20.8	4.6	0.65	1.8	0.2	0.2	29.6	60	0.04	0.02	16	0.5	5
M401237	ISTOK	37.3	294	1.06	0.12	26.6	460	12.4	5.4	0.47	1.6	0.3	0.2	81.1	50	0.04	0.02	17	0.5	5
M401238	ISTOK	28.1	321	0.99	0.18	23.2	530	11.0	6.2	0.5	1.5	0.6	0.2	106.0	25	0.08	0.05	16	1.0	5
M401239	ISTOK	42.4	482	0.76	0.13	28.1	490	16.2	5.1	0.46	1.9	0.1	0.2	59.2	60	0.06	0.03	15	0.5	5
M401240	ISTOK	49.9	421	0.64	0.11	29.6	400	15.3	5.1	0.48	2.1	0.1	0.2	56.3	50	0.06	0.03	15	0.5	5
M401241	ISTOK	18.5	169	1.04	0.27	10.1	140	8.9	4.4	0.45	1.4	0.1	0.4	3.4	50	0.04	0.02	15	0.5	5
M401242	ISTOK	55.9	616	0.78	0.16	34.2	540	15.5	4.9	0.45	2.3	0.3	0.2	38.9	50	0.12	0.03	16	1.0	5
M401243	ISTOK	33.7	705	1.00	0.42	26.7	500	15.0	7.1	0.49	5.8	0.6	0.3	20.7	70	0.08	0.04	54	1.0	10
M401244	ISTOK	22.2	190	3.38	0.39	17.3	360	10.0	5.5	0.72	2.6	0.3	0.3	3.9	25	0.07	0.06	26	1.0	5
M401245	ISTOK	35.2	887	2.49	0.37	35.6	440	15.2	4.8	0.55	2.8	1.3	0.2	7.1	60	0.17	0.07	24	0.5	5
M401246	ISTOK	36.9	221	1.00	0.19	17.6	130	9.6	5.5	0.36	1.2	0.1	0.3	4.2	50	0.04	0.03	12	1.0	5
M401247	ISTOK	17.0	116	2.00	0.23	9.0	140	11.2	3.6	0.48	2.8	0.1	0.6	3.8	25	0.05	0.03	16	0.5	5
M401248	ISTOK	12.4	120	1.72	0.41	9.8	340	7.1	3.2	0.36	2.2	0.3	0.3	3.6	25	0.11	0.04	19	1.0	10
M401249	ISTOK	7.6	190	0.60	0.25	7.4	120	4.6	4.0	0.2	1.0	0.1	0.2	7.7	25	0.03	0.02	10	0.5	5
M401250	ISTOK	29.6	331	1.92	0.25	17.7	170	15.8	6.0	0.37	1.3	0.4	0.2	6.5	50	0.04	0.02	14	0.5	5
M401251	ISTOK	40.6	214	1.03	0.12	39.5	270	15.5	10.4	0.42	6.3	0.6	0.4	26.7	100	0.1	0.03	64	0.5	10
M401252	ISTOK	38.4	201	2.65	0.22	19.1	140	13.0	8.1	0.4	1.8	0.2	0.4	6.2	90	0.04	0.01	15	0.5	5
M401253	ISTOK	64.0	295	0.42	0.15	32.8	140	18.1	8.3	0.46	2.0	0.4	0.3	4.2	110	0.13	0.03	21	0.5	5
M401254	ISTOK	57.6	353	0.74	0.25	34.0	200	18.0	8.3	0.31	1.9	0.4	0.3	37.9	90	0.06	0.01	19	0.5	5
M401255	ISTOK	27.9	582	1.22	0.33	23.8	1450	29.6	6.3	0.64	3.7	1.0	0.5	42.4	140	0.07	0.03	39	0.5	10
M401256	ISTOK	25.0	190	0.51	0.37	12.7	150	10.7	7.4	0.28	1.6	0.3	0.5	5.2	90	0.04	0.01	17	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401257	ISTOK	20.6	351	0.95	0.31	33.4	1110	24.4	3.4	0.6	4.0	0.9	0.3	53.8	120	0.06	0.08	46	0.5	10
M401258	ISTOK	22.2	212	0.30	0.26	13.0	280	9.9	4.9	0.19	1.3	0.2	0.2	21.8	60	0.03	0.01	13	0.5	5
M401259	ISTOK	30.3	709	0.98	0.12	47.2	2190	35.9	3.8	0.73	7.0	1.6	0.2	93.6	100	0.06	0.09	54	0.5	5
M401260	ISTOK	44.5	467	0.51	0.19	26.2	150	18.1	7.9	0.32	1.8	0.1	0.2	19.0	50	0.06	0.02	15	0.5	5
M401261	ISTOK	29.0	332	0.51	0.28	14.8	160	15.3	5.2	0.29	0.9	0.6	0.2	56.8	25	0.03	0.03	11	0.5	5
M401262	ISTOK	20.1	345	0.33	0.17	14.1	340	9.9	3.9	0.22	1.2	0.2	0.1	88.2	25	0.04	0.03	9	0.5	5
M401263	ISTOK	7.9	126	0.28	0.16	7.4	440	7.3	2.8	0.14	0.9	0.3	0.1	116.5	25	0.04	0.04	7	0.5	5
M401264	ISTOK	6.2	110	0.36	0.25	4.8	280	5.8	2.5	0.12	0.5	0.1	0.1	80.9	25	0.03	0.02	6	0.5	5
M401265	ISTOK	27.7	734	0.58	0.15	25.9	580	16.2	4.7	0.37	2.1	1.0	0.1	149.5	25	0.06	0.06	12	0.5	5
M401266	ISTOK	32.6	417	0.33	0.08	19.6	360	13.0	3.3	0.24	1.1	0.4	0.1	21.6	25	0.02	0.02	7	0.5	5
M401267	ISTOK	42.3	442	0.52	0.15	25.5	480	16.4	7.2	0.27	1.9	0.4	0.2	99.4	25	0.08	0.04	14	0.5	5
M401268	ISTOK	33.2	315	0.38	0.17	19.6	350	12.5	4.5	0.26	1.4	0.5	0.1	47.8	50	0.07	0.03	10	0.5	5
M401269	ISTOK	28.3	274	0.42	0.30	16.0	510	11.0	6.1	0.25	1.0	0.7	0.2	144.5	25	0.09	0.03	11	0.5	5
M401270	ISTOK	25.9	390	0.46	0.25	18.8	530	14.9	8.9	0.41	1.7	0.4	0.2	112.5	25	0.12	0.04	15	0.5	5
M401271	ISTOK	20.5	238	1.97	0.23	19.3	630	11.8	4.4	0.92	1.2	0.6	0.1	44.8	25	0.04	0.03	14	0.5	5
M401272	ISTOK	22.2	189	4.00	0.24	15.9	270	14.1	9.9	1.08	1.8	0.4	0.3	4.9	50	0.06	0.03	21	0.5	5
M401273	ISTOK	0.3	12	0.28	0.32	1.0	220	1.7	0.9	0.05	0.1	0.1	0.1	4.9	25	0.02	0.02	2.5	0.5	5
M401274	ISTOK	6.6	23	0.70	0.24	3.6	290	13.4	5.0	0.11	0.7	0.3	0.2	6.6	25	0.03	0.03	10	0.5	5
M401275	ISTOK	2.4	64	0.71	0.42	2.9	150	4.0	3.1	0.21	0.4	0.1	0.3	4.0	25	0.01	0.03	5	0.5	5
M401276	ISTOK	27.1	156	1.60	0.34	14.3	240	10.8	6.7	0.52	1.1	0.3	0.2	3.1	25	0.05	0.05	11	0.5	5
M401277	ISTOK	21.7	238	0.80	0.13	13.0	310	10.9	3.4	0.29	0.6	0.3	0.2	5.4	25	0.02	0.02	6	0.5	5
M401278	ISTOK	4.3	108	1.68	0.40	6.9	290	10.4	5.1	0.51	1.0	0.3	0.4	4.5	25	0.02	0.03	11	0.5	5
M401279	ISTOK	2.1	43	0.45	0.32	2.4	160	4.6	1.9	0.11	0.3	0.1	0.2	5.1	25	0.01	0.04	2.5	0.5	5
M401280	ISTOK	0.6	39	0.39	0.18	1.4	150	2.9	2.4	0.09	0.2	0.2	0.1	4.8	25	0.01	0.03	2.5	0.5	5
M401281	ISTOK	53.1	454	0.69	0.20	26.0	180	16.9	7.1	0.34	1.7	0.2	0.3	4.5	25	0.07	0.02	17	0.5	5
M401282	ISTOK	0.8	16	0.32	0.26	1.3	230	2.4	1.4	0.07	0.2	0.2	0.2	6.4	25	0.02	0.03	2.5	0.5	5
M401283	ISTOK	0.8	17	0.28	0.08	1.3	200	3.0	3.5	0.06	0.2	0.1	0.2	23.4	25	0.01	0.02	2.5	0.5	5
M401284	ISTOK	0.8	23	0.38	0.32	1.7	160	4.0	1.4	0.14	0.3	0.2	0.2	5.8	25	0.01	0.04	5	0.5	5
M401285	ISTOK	54.1	339	0.61	0.12	27.5	150	12.9	6.0	0.32	1.5	0.4	0.2	4.1	50	0.06	0.03	11	0.5	5
M401286	ISTOK	28.2	406	0.73	0.20	18.0	350	13.5	8.8	0.29	1.5	0.1	0.2	53.8	25	0.03	0.04	11	0.5	5
M401287	ISTOK	49.5	552	0.79	0.09	30.3	360	17.3	4.4	0.43	1.7	0.7	0.2	21.3	25	0.03	0.03	13	0.5	5
M401288	ISTOK	13.1	137	0.68	0.38	6.6	170	7.4	3.9	0.29	1.0	0.2	0.3	3.3	25	0.03	0.04	9	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401289	ISTOK	34.6	325	0.78	0.30	16.4	160	10.4	6.8	0.28	1.2	0.6	0.3	4.1	25	0.03	0.03	14	0.5	5
M401290	ISTOK	8.0	92	0.59	0.33	4.2	110	6.3	3.3	0.17	0.9	0.1	0.4	3.0	25	0.02	0.02	7	0.5	5
M401291	ISTOK	49.4	472	0.82	0.18	26.9	270	18.0	6.5	0.36	1.7	0.2	0.2	5.2	25	0.04	0.02	15	0.5	5
M401292	ISTOK	38.9	426	1.25	0.16	25.8	350	15.9	5.6	0.54	1.6	0.7	0.2	5.9	50	0.03	0.04	13	0.5	5
M401293	ISTOK	23.7	201	0.84	0.21	12.9	180	8.4	5.2	0.29	0.9	0.3	0.2	3.1	25	0.01	0.01	9	0.5	5
M401294	ISTOK	34.8	299	0.89	0.49	14.7	210	13.2	7.3	0.36	1.3	0.6	0.3	4.3	25	0.08	0.03	12	0.5	5
M401295	ISTOK	4.5	74	0.81	0.31	3.8	130	4.1	2.1	0.17	0.6	0.2	0.2	3.5	25	0.01	0.01	6	0.5	5
M401296	ISTOK	47.6	743	1.13	0.03	34.9	510	20.0	3.9	0.62	2.2	0.4	0.2	19.7	70	0.07	0.03	14	0.5	5
M401297	ISTOK	37.5	332	0.84	0.11	25.3	450	12.6	4.8	0.42	1.6	0.3	0.2	18.7	50	0.02	0.03	13	0.5	5
M401298	ISTOK	55.2	463	1.00	0.05	37.5	520	18.1	6.2	0.57	2.7	0.6	0.2	31.2	70	0.13	0.03	14	0.5	5
M401299	ISTOK	5.1	23	0.28	0.14	3.0	160	3.6	3.9	0.07	0.5	0.2	0.2	5.1	25	0.01	0.03	5	0.5	5
M401300	ISTOK	11.7	102	3.41	0.15	19.5	450	15.4	6.2	1.29	1.8	0.7	0.3	5.5	25	0.05	0.07	25	0.5	5
M401301	ISTOK	31.2	229	7.04	0.23	25.1	1300	17.6	7.7	2.14	1.6	1.8	0.3	34.3	25	0.09	0.07	26	1.0	5
M401302	ISTOK	9.6	165	17.20	0.29	37.0	1060	13.0	12.0	2.03	2.0	1.5	0.4	40.1	50	0.05	0.06	28	1.0	5
M401303	ISTOK	3.7	301	3.74	0.15	12.3	930	8.5	6.7	0.89	0.8	0.5	0.2	7.5	25	0.03	0.03	16	0.5	5
M401304	ISTOK	9.3	229	3.01	0.06	24.7	970	10.9	4.7	1.21	2.2	1.2	0.1	24.1	25	0.02	0.03	18	1.0	5
M401305	ISTOK	34.3	833	3.33	0.23	33.9	750	18.6	7.6	1.29	3.5	1.3	0.3	16.0	50	0.09	0.05	33	0.5	5
M401306	ISTOK	12.2	90	6.21	0.29	12.4	1010	24.0	10.3	1.33	1.9	0.6	0.4	26.4	25	0.03	0.03	15	0.5	5
M401307	ISTOK	12.6	994	3.71	0.17	16.5	1870	8.2	6.6	0.83	1.6	0.6	0.1	20.7	25	0.05	0.04	17	0.5	5
M401308	ISTOK	22.7	118	6.47	0.17	18.9	1390	14.0	8.4	1.78	1.3	1.7	0.2	29.8	50	0.06	0.06	16	0.5	5
M401309	ISTOK	0.6	15	2.09	0.10	6.1	260	3.9	4.1	0.24	0.3	0.2	0.2	2.8	25	0.01	0.03	6	0.5	5
M401310	ISTOK	47.2	263	1.71	0.13	25.1	460	16.9	5.7	0.46	1.3	1.2	0.2	15.6	25	0.07	0.04	13	0.5	5
M401311	ISTOK	18.4	159	1.23	0.42	11.9	200	11.1	5.0	0.47	1.1	0.5	0.4	5.0	25	0.03	0.02	10	0.5	5
M401312	ISTOK	23.0	136	0.63	0.30	13.0	200	9.6	6.4	0.35	1.1	0.2	0.3	3.9	25	0.03	0.02	13	0.5	5
M401313	ISTOK	29.2	182	3.34	0.20	28.9	300	24.1	4.1	0.73	1.9	0.2	0.2	4.6	60	0.04	0.05	27	0.5	5
M401314	ISTOK	4.4	115	1.12	1.64	6.7	270	7.7	3.7	0.61	1.2	0.8	0.7	4.2	25	0.01	0.04	9	0.5	5
M401315	ISTOK	21.3	140	0.62	0.48	11.5	260	8.1	4.7	0.42	1.1	0.1	0.3	3.4	25	0.09	0.04	12	0.5	5
M401316	ISTOK	11.5	165	0.74	0.29	5.5	160	10.3	4.3	0.18	0.8	0.2	0.3	3.9	25	0.02	0.03	8	0.5	5
M401317	ISTOK	25.9	184	0.86	0.39	11.6	230	8.0	5.3	0.3	1.2	0.3	0.3	3.4	25	0.09	0.03	13	0.5	5
M401318	ISTOK	35.7	467	0.87	0.37	16.7	430	22.4	5.8	0.28	1.1	0.3	0.3	32.2	25	0.03	0.01	15	0.5	5
M401319	ISTOK	51.5	508	0.89	0.12	27.9	360	15.8	4.3	0.34	1.4	0.5	0.2	21.8	25	0.08	0.03	11	0.5	5
M401320	ISTOK	29.1	530	1.32	0.26	22.0	1040	14.1	10.7	0.4	2.5	1.3	0.3	61.4	25	0.17	0.04	20	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401321	ISTOK	50.0	560	0.40	0.24	25.3	390	16.5	6.1	0.34	1.5	0.3	0.2	5.2	25	0.13	0.04	18	0.5	5
M401322	ISTOK	46.8	445	0.53	0.08	26.2	340	15.2	5.3	0.35	1.3	0.1	0.2	5.4	50	0.05	0.03	12	0.5	5
M401323	ISTOK	46.8	532	0.58	0.07	27.5	350	15.2	4.7	0.31	1.5	0.3	0.2	9.5	60	0.03	0.03	13	0.5	5
M401324	ISTOK	41.7	387	0.50	0.12	23.6	340	10.8	5.1	0.3	1.3	0.1	0.2	19.4	50	0.03	0.03	12	0.5	5
M401325	ISTOK	39.8	705	0.68	0.16	26.9	570	15.1	4.2	0.46	2.0	0.6	0.2	54.3	60	0.06	0.03	12	0.5	5
M401326	ISTOK	43.0	837	0.68	0.13	28.8	530	15.4	5.3	0.4	1.9	0.4	0.2	67.1	60	0.07	0.05	13	1.0	5
M401327	ISTOK	44.3	543	0.88	0.17	30.1	510	17.9	5.0	0.48	2.1	0.9	0.2	30.6	50	0.06	0.05	12	1.0	5
M401328	ISTOK	35.2	638	0.81	0.12	23.6	550	12.9	4.2	0.39	1.6	0.4	0.1	29.2	25	0.05	0.04	10	0.5	5
M401329	ISTOK	41.3	477	0.72	0.11	26.3	470	14.5	4.3	0.41	1.6	0.3	0.2	21.7	25	0.02	0.03	14	0.5	5
M401330	ISTOK	44.5	623	0.95	0.09	27.9	510	17.0	4.1	0.48	1.6	0.1	0.2	11.1	70	0.02	0.04	14	0.5	5
M401331	ISTOK	31.9	320	0.53	0.17	20.3	250	10.5	4.8	0.36	1.3	0.1	0.1	9.4	25	0.05	0.03	11	0.5	5
M401332	ISTOK	49.0	768	0.52	0.05	32.2	480	19.7	3.4	0.43	1.9	0.1	0.1	12.3	60	0.03	0.01	14	0.5	5
M401333	ISTOK	48.7	651	0.79	0.14	28.5	340	17.3	5.5	0.42	1.5	0.1	0.2	12.4	50	0.05	0.02	17	0.5	5
M401334	ISTOK	46.6	333	0.72	0.36	26.3	290	19.5	5.1	0.49	1.6	0.1	0.2	3.9	25	0.11	0.04	21	1.0	5
M401335	ISTOK	55.2	466	0.61	0.16	31.0	180	20.6	4.7	0.45	1.5	0.2	0.2	3.4	50	0.12	0.04	17	1.0	5
M401336	ISTOK	18.7	194	5.24	0.28	17.2	1180	19.6	7.3	1.63	1.4	1.2	0.3	25.0	25	0.06	0.03	21	0.5	5
M401337	ISTOK	13.5	1070	2.28	0.06	26.5	640	7.2	2.4	0.64	3.6	0.7	0.1	25.4	70	0.08	0.11	17	1.0	5
M401338	ISTOK	1.7	27	4.62	0.12	7.8	770	10.8	7.0	0.75	0.4	0.2	0.3	9.8	25	0.02	0.02	5	0.5	5
M401339	ISTOK	41.0	262	4.11	0.06	86.2	580	25.6	6.3	1.88	2.3	2.2	0.2	31.4	60	0.07	0.02	25	1.0	5
M401340	ISTOK	10.3	256	5.03	0.26	22.5	1560	22.6	5.6	1.23	1.1	1.9	0.3	70.8	25	0.03	0.06	20	2.0	5
M401341	ISTOK	8.7	64	6.32	0.35	10.7	1080	17.1	5.6	1.87	1.3	1.5	0.3	28.6	25	0.04	0.03	20	1.0	5
M401342	ISTOK	3.8	116	4.55	0.44	10.6	1390	27.6	5.9	1.37	0.5	0.5	0.4	21.7	25	0.01	0.03	17	0.5	5
M401343	ISTOK	27.0	308	3.33	0.20	29.6	1630	20.5	7.7	1.18	1.8	0.8	0.3	69.9	50	0.05	0.07	22	0.5	5
M401344	ISTOK	43.2	340	1.88	0.13	33.9	920	28.2	6.1	0.8	2.7	1.4	0.2	69.1	25	0.13	0.11	20	1.0	5
M401345	ISTOK	41.5	328	1.49	0.28	25.6	450	22.1	5.9	0.82	1.5	0.2	0.2	7.1	25	0.07	0.01	16	0.5	5
M401346	ISTOK	32.7	553	3.10	0.06	33.0	1060	20.4	2.6	1.46	1.6	0.3	0.1	30.0	70	0.04	0.04	13	1.0	5
M401347	ISTOK	30.5	212	2.06	0.27	21.2	690	19.8	5.5	0.86	1.3	0.2	0.2	10.2	50	0.08	0.01	18	1.0	5
M401348	ISTOK	8.7	562	1.97	0.12	20.2	960	20.8	2.6	0.92	3.4	0.4	0.1	49.3	50	0.05	0.04	34	1.0	5
M401349	ISTOK	46.7	439	1.28	0.06	29.3	560	19.6	3.9	0.7	1.5	0.4	0.1	8.9	70	0.02	0.01	16	1.0	5
M401350	ISTOK	33.8	196	1.54	0.39	19.3	290	17.2	6.8	0.67	1.4	0.3	0.2	3.7	25	0.09	0.03	16	0.5	5
M401351	ISTOK	37.1	234	1.44	0.10	24.1	660	12.2	5.1	0.54	1.3	0.2	0.1	19.3	60	0.02	0.03	14	0.5	5
M401352	ISTOK	24.4	548	1.06	0.22	16.5	270	17.4	4.2	0.32	1.1	0.1	0.3	11.7	25	0.03	0.005	12	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401353	ISTOK	52.8	488	0.49	0.12	26.7	370	15.8	4.7	0.36	1.5	0.1	0.2	14.4	50	0.02	0.01	13	1.0	5
M401354	ISTOK	47.1	1140	0.74	0.10	32.4	530	24.1	3.7	0.51	2.2	0.1	0.1	69.5	60	0.05	0.01	15	1.0	5
M401355	ISTOK	18.2	117	6.75	0.34	19.8	2190	21.7	9.7	1.78	2.0	1.5	0.3	34.0	50	0.05	0.03	24	1.0	5
M401356	ISTOK	13.6	299	8.05	0.14	29.7	1180	16.8	8.1	1.7	1.3	0.3	0.2	24.4	25	0.09	0.02	21	0.5	5
M401357	ISTOK	23.8	269	4.53	0.24	21.4	1180	20.2	6.7	1.68	1.2	0.7	0.2	19.4	50	0.06	0.02	18	0.5	5
M401358	ISTOK	9.4	170	3.47	0.31	18.5	720	15.2	8.0	1.6	1.4	0.3	0.2	7.1	25	0.04	0.03	17	0.5	5
M401359	ISTOK	25.9	1000	7.24	0.44	32.3	1070	17.9	9.5	1.95	3.0	0.8	0.3	46.1	50	0.13	0.03	41	1.0	5
M401360	ISTOK	26.4	1000	3.88	0.40	42.8	1110	14.1	5.6	1.1	2.4	2.1	0.2	85.5	25	0.09	0.14	20	2.0	5
M401361	ISTOK	28.3	219	2.49	0.44	20.1	410	12.9	5.5	0.6	1.3	0.1	0.2	34.2	25	0.04	0.01	14	0.5	5
M401362	ISTOK	2.4	28	0.80	0.20	2.5	200	5.3	4.1	0.2	0.5	0.1	0.3	7.4	25	0.01	0.01	7	0.5	5
M401363	ISTOK	46.4	431	0.71	0.24	29.2	460	21.4	6.1	0.52	2.3	0.4	0.2	37.5	50	0.06	0.03	22	0.5	5
M401364	ISTOK	30.7	328	1.09	0.13	26.9	360	21.6	3.9	0.67	2.2	0.5	0.2	14.5	50	0.05	0.03	28	1.0	5
M401365	ISTOK	23.4	274	0.51	0.28	12.3	490	11.4	4.5	0.25	0.8	0.1	0.2	28.2	25	0.03	0.01	8	1.0	5
M401401	ISTOK	5.1	83	0.79	0.25	4.6	160	6.3	2.7	0.19	0.5	0.5	0.2	27.6	25	0.01	0.02	5	0.5	5
M401402	ISTOK	14.9	79	0.57	0.11	7.1	150	3.8	4.4	0.09	0.6	0.2	0.1	4.1	25	0.01	0.01	5	0.5	5
M401403	ISTOK	42.1	538	1.40	0.41	34.2	490	20.1	6.4	0.56	2.4	0.8	0.2	44.3	60	0.06	0.04	22	0.5	5
M401404	ISTOK	49.4	354	2.01	0.28	23.2	250	19.2	8.1	0.51	1.8	0.5	0.2	7.6	60	0.04	0.01	23	0.5	5
M401501	ISTOK	3.2	50	0.40	0.20	1.9	140	2.8	1.9	0.08	0.5	0.1	0.3	3.0	25	0.01	0.01	2.5	0.5	5
M401502	ISTOK	23.2	235	1.09	0.25	14.7	140	10.8	6.3	0.44	1.0	0.6	0.2	4.2	70	0.02	0.02	8	0.5	5
M401503	ISTOK	50.6	202	0.77	0.35	18.3	120	16.3	7.3	0.37	1.7	0.1	0.3	27.7	25	0.09	0.01	31	0.5	5
M401504	ISTOK	27.6	188	1.29	0.31	14.1	130	10.6	6.9	0.45	1.3	0.4	0.3	4.3	25	0.08	0.01	14	0.5	5
M401505	ISTOK	16.9	221	0.95	0.34	9.5	180	8.8	6.5	0.32	1.2	0.6	0.3	3.9	25	0.02	0.01	8	0.5	5
M401506	ISTOK	51.2	244	1.00	0.27	22.1	170	15.7	8.4	0.47	1.6	0.4	0.3	11.1	60	0.09	0.01	19	1.0	5
M401507	ISTOK	9.3	140	1.17	0.25	6.8	270	10.5	6.5	0.37	1.2	0.2	0.3	5.9	25	0.02	0.005	14	1.0	5
M401508	ISTOK	45.1	213	1.18	0.24	25.6	230	13.0	7.0	0.46	1.9	0.3	0.3	11.8	25	0.07	0.03	23	1.0	5
M401509	ISTOK	25.6	167	2.18	0.45	13.3	210	12.1	6.7	0.82	1.7	0.4	0.4	3.3	25	0.06	0.01	18	0.5	5
M401510	ISTOK	28.0	207	0.92	0.35	14.4	150	9.5	6.2	0.36	1.2	0.2	0.3	13.4	50	0.04	0.01	13	0.5	5
M401511	ISTOK	3.7	89	2.27	0.23	8.6	330	7.1	4.2	0.78	0.9	0.4	0.3	5.7	50	0.02	0.01	9	0.5	5
M401512	ISTOK	2.7	98	2.48	0.19	8.1	160	4.6	4.4	0.72	1.0	0.3	0.3	2.3	50	0.02	0.01	7	0.5	5
M401513	ISTOK	32.3	338	1.82	0.16	24.1	370	12.8	6.4	0.47	1.8	0.4	0.2	17.7	60	0.05	0.03	15	0.5	5
M401514	ISTOK	27.3	208	3.12	0.22	14.4	200	8.5	6.4	0.38	1.0	0.3	0.2	48.0	50	0.03	0.01	10	0.5	5
M401515	ISTOK	36.7	580	0.63	0.10	26.3	390	16.0	2.6	0.37	1.8	0.3	0.1	11.8	80	0.04	0.01	11	0.5	5

Sample	Property	Li	Mn	Mo	Nb	Ni	P	Pb	Rb	Sb	Sc	Se	Sn	Sr	Ge	Hf	Hg	In	Re	Ta
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppb	ppm	ppm	ppb	ppb	ppb
M401516	ISTOK	5.9	85	1.86	0.24	6.0	190	4.7	2.5	0.28	0.7	0.2	0.2	4.6	25	0.01	0.01	8	0.5	5

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401001	ISTOK	0.01	0.1	0.03	0.26	20	0.06	0.9	11	0.25	0.90	0.02	0.66	0.03	0.02	0.05	0.02	0.01
M401002	ISTOK	0.05	2.5	0.05	0.77	30	0.1	2.73	102	0.25	5.91	0.01	0.83	0.03	0.04	0.12	0.01	0.02
M401003	ISTOK	0.04	0.5	0.06	0.85	23	0.13	2.5	34	0.90	2.44	0.01	1.44	0.05	0.03	0.18	0.01	0.02
M401004	ISTOK	0.02	0.6	0.02	0.32	14	0.08	0.76	13	0.25	1.02	0.01	0.60	0.01	0.03	0.09	0.01	0.01
M401005	ISTOK	0.04	2.2	0.07	0.41	31	0.12	1.61	35	0.25	2.29	0.01	0.93	0.01	0.04	0.17	0.01	0.01
M401006	ISTOK	0.01	0.1	0.04	0.24	12	0.05	0.47	10	0.25	0.65	0.01	0.32	0.02	0.03	0.03	0.01	0.01
M401007	ISTOK	0.06	1	0.05	0.45	44	0.15	1.39	39	0.25	3.88	0.01	0.81	0.02	0.03	0.10	0.01	0.01
M401008	ISTOK	0.02	0.2	0.02	0.34	11	0.06	0.65	7	0.25	1.29	0.01	0.25	0.02	0.03	0.01	0.02	0.01
M401009	ISTOK	0.04	2.2	0.04	0.44	18	0.11	1.4	30	0.25	1.90	0.01	0.69	0.02	0.03	0.14	0.01	0.02
M401010	ISTOK	0.01	0.1	0.03	0.31	11	0.05	0.76	8	0.25	0.53	0.01	0.36	0.03	0.03	0.03	0.02	0.02
M401011	ISTOK	0.06	2.7	0.07	0.43	21	0.15	1.75	44	0.70	2.86	0.01	1.21	0.02	0.04	0.32	0.01	0.01
M401012	ISTOK	0.02	1.5	0.06	0.31	16	0.08	1.04	13	1.20	1.05	0.01	1.15	0.02	0.04	0.12	0.01	0.01
M401013	ISTOK	0.06	5.6	0.07	0.48	35	0.2	1.87	48	2.30	4.46	0.01	1.74	0.01	0.06	0.35	0.01	0.01
M401014	ISTOK	0.05	2.5	0.06	0.47	24	0.15	1.62	19	1.70	2.75	0.01	1.31	0.02	0.03	0.10	0.01	0.04
M401015	ISTOK	0.05	4	0.07	0.88	17	0.15	4.58	80	1.20	2.91	0.00	1.69	0.11	0.09	0.44	0.01	0.01
M401016	ISTOK	0.04	5	0.06	0.62	17	0.14	3.81	90	1.00	3.21	0.00	1.45	0.18	0.07	0.49	0.01	0.01
M401017	ISTOK	0.05	5.8	0.06	0.46	21	0.15	2.44	68	1.50	3.27	0.00	1.59	0.04	0.06	0.47	0.01	0.01
M401018	ISTOK	0.05	6.4	0.07	0.6	22	0.06	3.66	84	2.00	3.44	0.01	1.52	0.12	0.05	0.53	0.01	0.01
M401019	ISTOK	0.02	1.1	0.03	0.31	13	0.06	0.83	15	0.50	1.38	0.02	0.63	0.02	0.03	0.07	0.02	0.02
M401020	ISTOK	0.04	5.1	0.04	0.51	14	0.16	3.86	70	0.90	2.85	0.00	1.36	0.10	0.06	0.48	0.01	0.01
M401021	ISTOK	0.05	5.3	0.06	0.9	17	0.21	5.29	91	1.10	3.48	0.00	1.95	0.11	0.10	0.58	0.01	0.02
M401022	ISTOK	0.04	6	0.04	0.58	17	0.19	3.56	83	1.10	3.49	0.00	1.67	0.08	0.07	0.57	0.01	0.01
M401023	ISTOK	0.03	4.7	0.07	1.21	16	0.11	4.64	85	1.90	2.90	0.00	1.44	0.17	0.09	0.47	0.01	0.02
M401024	ISTOK	0.04	1.5	0.09	0.59	26	0.13	1.95	44	0.25	2.99	0.01	1.04	0.02	0.05	0.20	0.01	0.02
M401025	ISTOK	0.03	1.9	0.08	0.32	17	0.07	1.44	14	0.25	0.87	0.00	0.57	0.01	0.04	0.03	0.01	0.01
M401026	ISTOK	0.05	1.7	0.08	0.77	17	0.13	1.98	32	0.70	1.83	0.01	0.87	0.02	0.05	0.16	0.01	0.02
M401027	ISTOK	0.05	2.7	0.08	0.61	26	0.14	2.11	68	1.60	4.05	0.01	1.33	0.03	0.05	0.30	0.01	0.03
M401028	ISTOK	0.02	1.4	0.07	0.32	27	0.11	1.06	21	0.25	1.12	0.00	0.63	0.01	0.03	0.06	0.01	0.01
M401029	ISTOK	0.03	0.7	0.07	0.33	16	0.13	1.02	18	0.25	0.91	0.01	0.41	0.01	0.04	0.04	0.01	0.01
M401030	ISTOK	0.04	6.4	0.05	0.76	16	0.24	4.38	84	1.00	3.40	0.00	1.67	0.13	0.07	0.59	0.01	0.01
M401031	ISTOK	0.04	7.8	0.04	1.4	16	0.18	4.13	81	1.20	3.41	0.00	1.56	0.15	0.06	0.58	0.01	0.01
M401032	ISTOK	0.02	3.8	0.06	1.37	15	0.15	4.44	71	2.40	2.50	0.01	1.34	0.49	0.08	0.38	0.01	0.02

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401033	ISTOK	0.05	5.2	0.08	0.96	15	0.12	5.32	82	3.00	2.65	0.01	1.30	0.41	0.09	0.42	0.01	0.02
M401034	ISTOK	0.03	2.7	0.06	0.74	15	0.14	3.58	63	1.10	2.31	0.01	1.33	0.29	0.10	0.35	0.02	0.01
M401035	ISTOK	0.06	6.9	0.1	1.01	21	0.1	5.5	113	1.20	3.68	0.00	1.59	0.25	0.10	0.57	0.01	0.01
M401036	ISTOK	0.06	0.3	0.1	0.34	18	0.12	1.1	28	0.25	1.09	0.01	0.43	0.01	0.03	0.03	0.01	0.02
M401037	ISTOK	0.02	1.5	0.07	0.72	13	0.025	11.05	48	1.30	1.94	0.01	0.75	0.63	0.02	0.12	0.01	0.05
M401038	ISTOK	0.03	0.2	0.02	0.33	11	0.05	1.36	23	0.25	1.25	0.01	0.48	0.03	0.02	0.10	0.01	0.03
M401039	ISTOK	0.03	1.6	0.09	2.85	15	0.11	4.39	63	2.30	2.09	0.01	1.05	0.97	0.05	0.25	0.01	0.05
M401040	ISTOK	0.03	7.1	0.1	1.21	16	0.025	13.85	105	4.50	3.99	0.00	1.46	0.52	0.03	0.72	0.01	0.02
M401041	ISTOK	0.06	3.9	0.08	1.11	20	0.06	3.51	95	2.40	2.39	0.00	0.80	0.80	0.04	0.26	0.01	0.02
M401042	ISTOK	0.05	5.3	0.06	2.85	17	0.09	8.01	96	3.00	3.45	0.00	1.50	0.68	0.05	0.58	0.01	0.03
M401043	ISTOK	0.03	5.1	0.08	0.46	25	0.19	2.01	52	2.40	4.20	0.00	1.89	0.01	0.04	0.39	0.01	0.02
M401044	ISTOK	0.05	5.7	0.12	0.53	25	0.19	2.25	54	3.10	3.83	0.00	2.02	0.02	0.04	0.30	0.01	0.02
M401045	ISTOK	0.05	6.3	0.07	0.45	18	0.22	2.96	72	3.10	4.73	0.00	2.10	0.02	0.05	0.49	0.01	0.01
M401046	ISTOK	0.04	1.9	0.06	4.01	16	0.13	8.19	72	2.10	2.77	0.01	1.53	1.01	0.06	0.38	0.01	0.06
M401047	ISTOK	0.04	5.1	0.07	0.49	21	0.16	3.3	54	3.40	3.04	0.00	1.65	0.12	0.04	0.32	0.01	0.01
M401048	ISTOK	0.03	2.5	0.06	2.09	12	0.07	13.8	41	3.60	2.65	0.00	1.47	1.28	0.03	0.30	0.01	0.05
M401049	ISTOK	0.06	4.8	0.06	2.32	22	0.19	15.15	50	5.60	5.01	0.00	3.64	0.18	0.04	0.24	0.01	0.03
M401050	ISTOK	0.06	5.6	0.07	0.38	24	0.23	1.63	45	2.10	3.60	0.00	1.63	0.02	0.04	0.34	0.01	0.01
M401051	ISTOK	0.05	2.5	0.07	1.46	26	0.16	6.22	52	2.80	4.04	0.00	1.93	0.95	0.04	0.21	0.01	0.04
M401052	ISTOK	0.04	2.8	0.08	2.04	16	0.025	9.93	60	2.60	3.56	0.00	1.12	2.90	0.03	0.24	0.01	0.03
M401053	ISTOK	0.07	2.2	0.07	2.29	38	0.12	8.97	92	1.40	3.85	0.01	1.62	0.74	0.04	0.20	0.01	0.03
M401054	ISTOK	0.01	0.4	0.02	0.46	10	0.025	1.9	14	1.00	0.55	0.02	0.56	0.34	0.02	0.02	0.02	0.02
M401055	ISTOK	0.05	3.3	0.08	1.02	27	0.15	4.6	58	1.60	2.87	0.01	2.04	0.48	0.04	0.40	0.01	0.02
M401056	ISTOK	0.06	3.4	0.06	0.67	25	0.16	2.5	52	1.80	2.72	0.01	1.82	0.65	0.04	0.41	0.01	0.02
M401057	ISTOK	0.04	4.5	0.05	0.63	21	0.16	3.11	53	2.70	2.83	0.00	1.82	0.34	0.04	0.36	0.01	0.02
M401058	ISTOK	0.03	3.2	0.06	0.99	16	0.09	3.47	57	2.40	2.45	0.01	1.08	0.58	0.04	0.29	0.01	0.02
M401059	ISTOK	0.05	5.5	0.08	0.94	27	0.15	4.26	71	2.00	3.41	0.00	1.68	0.41	0.05	0.36	0.01	0.02
M401060	ISTOK	0.01	2.9	0.04	0.61	10	0.025	6.56	50	1.40	3.16	0.00	0.84	0.27	0.02	0.28	0.01	0.03
M401061	ISTOK	0.09	5.8	0.09	1.53	23	0.07	6.52	105	3.40	3.86	0.01	1.30	0.89	0.04	0.52	0.01	0.04
M401062	ISTOK	0.04	1.6	0.08	0.52	16	0.025	1.23	8	0.25	0.43	0.01	0.73	0.03	0.02	0.03	0.01	0.02
M401063	ISTOK	0.05	3.1	0.07	0.75	33	0.15	3.7	66	1.10	3.46	0.01	1.41	0.27	0.03	0.12	0.01	0.03
M401064	ISTOK	0.04	2.3	0.09	5.27	14	0.17	10.2	98	3.60	2.35	0.01	1.45	0.89	0.07	0.36	0.01	0.06

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401065	ISTOK	0.03	3	0.06	8.58	14	0.18	6.09	100	4.20	2.57	0.01	1.69	0.75	0.08	0.39	0.02	0.07
M401066	ISTOK	0.02	9.5	0.05	1.09	16	0.2	5.32	95	3.80	3.61	0.00	1.80	0.22	0.10	0.64	0.01	0.02
M401067	ISTOK	0.03	5.4	0.03	1.76	15	0.2	5.47	73	3.00	3.29	0.00	1.78	0.66	0.09	0.57	0.01	0.04
M401068	ISTOK	0.01	5.5	0.06	0.72	22	0.11	2.7	41	3.10	2.81	0.00	1.94	0.35	0.04	0.36	0.01	0.02
M401069	ISTOK	0.03	4.6	0.05	0.35	17	0.11	1.78	44	1.80	2.60	0.00	1.60	0.03	0.04	0.26	0.01	0.02
M401070	ISTOK	0.03	3.5	0.06	1.61	16	0.14	8.41	61	2.50	2.86	0.01	1.48	0.47	0.05	0.48	0.01	0.03
M401071	ISTOK	0.05	5.5	0.05	0.61	11	0.025	15	98	1.80	3.89	0.00	1.12	0.90	0.02	0.49	0.01	0.05
M401072	ISTOK	0.04	4.1	0.05	1.41	21	0.09	8.21	54	1.60	3.31	0.01	1.43	0.18	0.04	0.48	0.01	0.03
M401073	ISTOK	0.03	2.9	0.07	0.35	18	0.1	1.54	27	0.25	1.61	0.01	0.74	0.02	0.04	0.15	0.01	0.02
M401074	ISTOK	0.05	6.4	0.09	0.55	26	0.19	1.74	50	1.80	4.05	0.01	1.32	0.01	0.05	0.32	0.01	0.02
M401075	ISTOK	0.03	5.9	0.09	0.46	30	0.13	1.94	50	1.90	2.57	0.01	1.29	0.04	0.03	0.27	0.01	0.01
M401076	ISTOK	0.03	6.4	0.08	0.6	19	0.19	3.77	83	1.70	4.02	0.00	1.79	0.09	0.06	0.51	0.01	0.02
M401077	ISTOK	0.04	4.7	0.2	1.34	65	0.025	12.2	161	8.30	3.31	0.00	1.88	0.52	0.04	0.19	0.01	0.03
M401078	ISTOK	0.02	2.5	0.13	0.87	17	0.09	4.29	87	1.90	2.63	0.00	1.05	0.21	0.04	0.27	0.01	0.02
M401079	ISTOK	0.02	6.7	0.1	0.55	23	0.18	2.51	105	3.00	4.35	0.00	2.02	0.03	0.08	0.44	0.01	0.02
M401080	ISTOK	0.02	5	0.3	5.77	17	0.14	41.7	340	4.70	3.35	0.01	3.16	0.41	0.06	0.31	0.01	0.06
M401081	ISTOK	0.01	3.1	0.14	0.82	28	0.08	2.4	38	0.90	2.83	0.01	0.89	0.03	0.02	0.05	0.01	0.02
M401082	ISTOK	0.01	6.5	0.15	0.8	21	0.15	3.3	70	6.10	3.24	0.00	2.46	0.02	0.06	0.35	0.01	0.02
M401083	ISTOK	0.04	4.5	0.6	0.6	38	0.07	1.64	62	1.40	2.61	0.01	1.13	0.02	0.04	0.10	0.01	0.02
M401084	ISTOK	0.02	3.9	0.1	0.44	34	0.16	1.81	51	0.50	2.24	0.02	1.05	0.04	0.04	0.28	0.01	0.01
M401085	ISTOK	0.03	4	0.18	13.55	18	0.15	14.55	195	9.90	3.79	0.01	2.15	1.15	0.10	0.43	0.01	0.14
M401086	ISTOK	0.02	5.6	0.06	4.27	15	0.11	5.33	102	3.30	3.11	0.00	1.56	0.37	0.08	0.54	0.01	0.03
M401087	ISTOK	0.02	5	0.07	0.58	18	0.09	5.51	49	2.50	2.91	0.00	1.22	0.04	0.04	0.13	0.01	0.02
M401088	ISTOK	0.02	4.4	0.05	0.49	19	0.1	1.96	53	1.30	2.60	0.01	0.91	0.25	0.05	0.23	0.01	0.02
M401089	ISTOK	0.02	5.3	0.14	0.55	28	0.09	3.73	88	2.90	4.88	0.00	1.67	0.04	0.06	0.28	0.01	0.02
M401090	ISTOK	0.02	1.6	0.24	0.51	28	0.025	2.48	186	0.90	4.22	0.00	0.74	0.05	0.04	0.15	0.01	0.03
M401091	ISTOK	0.03	2.5	0.12	2.09	14	0.09	10.25	108	2.90	2.70	0.01	1.37	0.79	0.08	0.37	0.01	0.05
M401092	ISTOK	0.03	2.1	0.13	7.65	16	0.09	12.2	202	3.90	3.10	0.00	1.53	1.34	0.09	0.42	0.01	0.08
M401093	ISTOK	0.02	7.7	0.05	1.09	14	0.11	5.8	84	3.20	3.14	0.00	1.38	0.27	0.07	0.52	0.01	0.02
M401094	ISTOK	0.04	3.3	0.11	4.27	17	0.11	9.3	70	2.00	2.42	0.01	1.55	0.48	0.09	0.33	0.02	0.03
M401095	ISTOK	0.09	4.6	0.11	2.74	18	0.06	5.08	121	2.50	3.00	0.01	1.38	0.60	0.06	0.47	0.01	0.02
M401096	ISTOK	0.06	3.2	0.07	0.43	25	0.13	1.72	47	0.50	2.71	0.01	1.06	0.01	0.03	0.15	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401097	ISTOK	0.07	3.4	0.07	0.49	20	0.1	1.76	48	0.80	2.27	0.01	1.19	0.03	0.03	0.22	0.01	0.01
M401098	ISTOK	0.04	6.4	0.08	0.31	31	0.09	2.51	36	1.00	3.00	0.00	1.29	0.02	0.03	0.16	0.01	0.01
M401099	ISTOK	0.01	1.4	0.08	4.16	13	0.09	13	59	1.80	2.40	0.01	1.34	1.54	0.06	0.37	0.01	0.07
M401100	ISTOK	0.01	9.6	0.02	0.6	12	0.08	4.88	67	2.70	3.17	0.00	1.42	0.15	0.06	0.51	0.01	0.01
M401101	ISTOK	0.03	4.3	0.1	0.46	32	0.13	1.75	47	0.60	2.73	0.00	1.28	0.02	0.06	0.20	0.01	0.01
M401102	ISTOK	0.05	3.2	0.12	0.48	26	0.14	1.97	56	0.70	3.42	0.01	1.15	0.02	0.07	0.15	0.01	0.01
M401103	ISTOK	0.03	0.4	0.08	0.35	16	0.06	1.47	24	0.25	1.07	0.00	0.62	0.02	0.04	0.04	0.01	0.01
M401104	ISTOK	0.01	0.1	0.03	0.46	18	0.08	1.67	15	0.25	1.71	0.01	0.98	0.02	0.02	0.06	0.01	0.03
M401105	ISTOK	0.04	2.8	0.05	0.43	32	0.13	1.68	24	0.25	2.31	0.01	0.90	0.01	0.03	0.09	0.01	0.01
M401106	ISTOK	0.04	2.7	0.09	0.4	35	0.12	1.77	38	0.25	3.39	0.01	0.88	0.01	0.03	0.08	0.01	0.01
M401107	ISTOK	0.03	2.4	0.05	0.3	40	0.12	1.32	20	0.25	1.39	0.01	0.78	0.02	0.03	0.08	0.01	0.01
M401108	ISTOK	0.04	1.6	0.09	0.58	41	0.14	1.82	53	0.25	3.77	0.01	1.16	0.01	0.04	0.19	0.01	0.02
M401109	ISTOK	0.01	0.8	0.05	0.57	14	0.08	1.37	15	0.25	0.80	0.01	0.66	0.02	0.03	0.06	0.01	0.01
M401110	ISTOK	0.03	4.2	0.05	0.52	33	0.1	2.03	22	0.70	3.08	0.01	0.98	0.02	0.03	0.09	0.01	0.01
M401111	ISTOK	0.03	2.8	0.07	0.45	38	0.08	1.61	22	0.25	1.47	0.01	1.14	0.03	0.03	0.14	0.01	0.01
M401112	ISTOK	0.03	8.1	0.1	0.68	29	0.15	2.93	84	6.60	4.16	0.00	2.62	0.01	0.07	0.47	0.01	0.01
M401113	ISTOK	0.07	3.6	0.07	0.63	39	0.16	1.91	53	1.00	3.68	0.01	1.67	0.02	0.08	0.28	0.01	0.01
M401114	ISTOK	0.02	5.8	0.05	0.5	29	0.14	2.1	67	2.00	4.08	0.00	1.90	0.01	0.06	0.48	0.01	0.01
M401115	ISTOK	0.01	6	0.07	0.66	31	0.14	2.06	79	2.80	3.45	0.00	2.22	0.02	0.05	0.33	0.01	0.01
M401116	ISTOK	0.03	7.4	0.1	0.65	37	0.16	2.43	64	3.60	3.90	0.00	1.84	0.01	0.06	0.31	0.01	0.01
M401117	ISTOK	0.02	1.8	0.05	1.2	30	0.08	1.7	61	1.30	3.96	0.01	1.59	0.03	0.04	0.36	0.01	0.03
M401118	ISTOK	0.04	6.8	0.1	0.56	42	0.09	2.38	50	2.30	2.99	0.00	1.56	0.01	0.04	0.26	0.01	0.01
M401119	ISTOK	0.02	4.6	0.09	0.48	32	0.11	1.79	38	0.80	2.28	0.00	1.36	0.01	0.06	0.24	0.01	0.01
M401120	ISTOK	0.02	2.7	0.14	1.2	32	0.16	3	68	1.40	2.78	0.00	1.71	0.02	0.08	0.31	0.01	0.02
M401121	ISTOK	0.01	0.2	0.05	1.1	10	0.07	1.54	9	0.25	0.67	0.00	0.83	0.02	0.03	0.04	0.01	0.02
M401122	ISTOK	0.04	1.5	0.06	0.62	37	0.19	1.57	16	0.25	1.13	0.02	0.83	0.02	0.02	0.04	0.01	0.01
M401123	ISTOK	0.01	3	0.03	2.76	13	0.08	5.26	33	0.25	1.54	0.00	1.07	0.11	0.04	0.27	0.01	0.01
M401124	ISTOK	0.02	6.4	0.03	2.04	16	0.19	3.59	80	1.30	3.09	0.01	1.44	0.09	0.06	0.56	0.01	0.01
M401125	ISTOK	0.04	7.1	0.09	0.62	27	0.14	2.45	80	4.00	3.74	0.00	2.28	0.01	0.06	0.50	0.01	0.01
M401126	ISTOK	0.03	2.1	0.05	0.46	45	0.23	1.36	24	0.25	2.20	0.02	1.23	0.02	0.03	0.09	0.01	0.01
M401127	ISTOK	0.01	0.6	0.03	0.67	22	0.12	1.41	17	0.50	1.49	0.01	1.20	0.02	0.02	0.05	0.01	0.02
M401128	ISTOK	0.04	2.4	0.05	2.57	32	0.2	3.62	26	3.20	3.18	0.02	3.19	0.03	0.03	0.16	0.01	0.03

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401129	ISTOK	0.03	6.5	0.04	1.55	18	0.07	5.92	85	1.20	3.19	0.01	1.41	0.17	0.07	0.58	0.01	0.01
M401130	ISTOK	0.02	2.9	0.06	4.52	14	0.11	5.45	72	3.50	2.33	0.01	1.51	1.08	0.10	0.39	0.02	0.05
M401131	ISTOK	0.03	3.1	0.04	1.71	13	0.12	4.5	57	1.90	2.45	0.01	1.37	0.56	0.08	0.38	0.02	0.03
M401132	ISTOK	0.04	3.6	0.05	0.49	15	0.1	4.1	65	0.70	2.87	0.00	1.42	0.19	0.06	0.41	0.01	0.02
M401133	ISTOK	0.05	3.7	0.05	1	17	0.07	3.27	81	1.90	2.76	0.00	1.33	0.35	0.06	0.51	0.01	0.02
M401134	ISTOK	0.05	7.5	0.05	0.66	19	0.06	6.69	94	2.00	3.58	0.01	1.56	0.13	0.07	0.59	0.01	0.01
M401135	ISTOK	0.03	4.3	0.04	0.52	17	0.11	2.42	60	0.50	2.82	0.00	1.34	0.06	0.06	0.47	0.01	0.01
M401136	ISTOK	0.05	5.4	0.08	0.44	29	0.14	2.1	57	2.30	3.85	0.00	1.87	0.01	0.05	0.36	0.01	0.01
M401137	ISTOK	0.04	6.3	0.05	0.51	23	0.17	2.24	65	3.20	4.36	0.00	2.37	0.01	0.08	0.50	0.01	0.01
M401138	ISTOK	0.05	4.7	0.06	0.38	30	0.07	1.57	32	1.90	2.21	0.00	1.17	0.02	0.02	0.28	0.01	0.01
M401139	ISTOK	0.04	0.9	0.06	1.57	18	0.14	2.53	37	1.20	2.34	0.01	1.82	0.05	0.04	0.33	0.01	0.04
M401140	ISTOK	0.04	5	0.11	0.47	41	0.16	1.75	44	3.60	3.55	0.00	2.53	0.02	0.05	0.20	0.01	0.02
M401141	ISTOK	0.03	0.8	0.05	0.29	21	0.12	0.89	28	0.25	1.58	0.01	0.48	0.02	0.04	0.06	0.01	0.02
M401142	ISTOK	0.05	3.8	0.08	0.39	47	0.13	1.68	34	0.90	2.98	0.01	1.25	0.01	0.03	0.09	0.01	0.01
M401143	ISTOK	0.03	2	0.04	4.12	12	0.1	3.86	53	2.60	2.31	0.01	1.36	1.14	0.07	0.38	0.02	0.06
M401144	ISTOK	0.04	2	0.09	2.35	16	0.09	5.88	97	2.00	2.72	0.01	1.42	0.86	0.06	0.38	0.01	0.05
M401145	ISTOK	0.05	3.8	0.09	0.34	33	0.11	1.39	37	0.25	2.88	0.01	0.96	0.02	0.03	0.10	0.01	0.01
M401146	ISTOK	0.02	1.1	0.08	2.23	28	0.06	34.1	152	3.10	3.61	0.01	1.75	1.78	0.04	0.35	0.01	0.07
M401147	ISTOK	0.04	5	0.13	0.42	23	0.12	2.29	64	2.40	4.66	0.00	1.60	0.02	0.05	0.34	0.01	0.01
M401148	ISTOK	0.03	6.1	0.05	0.4	21	0.15	1.97	78	1.80	4.04	0.00	1.73	0.10	0.07	0.42	0.01	0.01
M401149	ISTOK	0.02	3.2	0.16	0.59	33	0.08	4.52	71	1.30	2.89	0.01	2.18	0.33	0.04	0.35	0.01	0.02
M401150	ISTOK	0.02	4.2	0.15	0.39	34	0.08	2.4	38	1.00	2.10	0.00	1.77	0.05	0.03	0.11	0.01	0.02
M401151	ISTOK	0.02	4.7	0.21	0.42	51	0.09	2.79	73	4.60	4.97	0.01	3.06	0.05	0.04	0.39	0.01	0.03
M401152	ISTOK	0.05	5.5	0.16	0.54	41	0.22	2.46	111	5.20	5.24	0.00	2.80	0.01	0.06	0.43	0.01	0.02
M401153	ISTOK	0.04	6.1	0.13	0.44	39	0.13	2.36	92	4.00	4.08	0.00	2.59	0.01	0.04	0.40	0.01	0.02
M401154	ISTOK	0.01	5.6	0.04	0.47	15	0.09	2.64	63	0.70	2.91	0.00	1.57	0.11	0.06	0.52	0.01	0.02
M401155	ISTOK	0.04	4.1	0.12	0.4	29	0.13	1.99	60	1.20	2.87	0.00	1.72	0.04	0.05	0.30	0.01	0.02
M401156	ISTOK	0.02	4.3	0.15	0.35	39	0.1	1.74	43	1.60	3.18	0.01	1.85	0.02	0.03	0.18	0.01	0.02
M401157	ISTOK	0.03	4.7	0.07	0.34	25	0.12	1.63	52	0.80	3.11	0.00	1.31	0.06	0.05	0.28	0.01	0.01
M401158	ISTOK	0.03	2.2	0.21	0.74	53	0.025	10.1	68	2.60	5.92	0.01	2.60	0.20	0.03	0.35	0.01	0.05
M401159	ISTOK	0.04	5.2	0.08	0.35	37	0.15	1.72	46	1.70	3.58	0.00	1.57	0.01	0.04	0.26	0.01	0.01
M401160	ISTOK	0.02	5.1	0.09	0.26	26	0.13	1.37	23	1.10	1.88	0.01	1.12	0.01	0.02	0.11	0.01	0.01

Sample	Property	Th	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401161	ISTOK	0.02	4.7	0.12	0.89	44	0.08	11	92	4.40	4.95	0.00	2.42	0.14	0.03	0.25	0.01	0.03
M401162	ISTOK	0.03	4.3	0.06	0.36	28	0.22	1.59	49	0.70	4.29	0.01	1.22	0.01	0.04	0.24	0.01	0.01
M401163	ISTOK	0.03	5	0.08	0.35	25	0.37	1.96	58	1.80	3.90	0.00	1.83	0.02	0.05	0.37	0.01	0.02
M401164	ISTOK	0.03	6.3	0.06	0.37	21	0.18	1.91	63	2.60	3.82	0.00	1.94	0.01	0.06	0.44	0.01	0.01
M401165	ISTOK	0.03	3	0.12	0.29	30	0.09	1.48	54	0.50	1.68	0.00	0.87	0.03	0.03	0.05	0.01	0.01
M401166	ISTOK	0.03	5.3	0.07	0.38	22	0.17	1.79	50	1.80	3.15	0.00	1.48	0.02	0.06	0.26	0.01	0.02
M401167	ISTOK	0.04	6.4	0.06	0.43	17	0.14	2.32	75	3.10	3.86	0.00	2.28	0.01	0.05	0.46	0.01	0.01
M401168	ISTOK	0.03	6.1	0.06	0.36	21	0.13	2.08	70	1.70	2.88	0.00	1.39	0.02	0.06	0.27	0.01	0.01
M401169	ISTOK	0.03	3.4	0.13	0.49	24	0.15	2.29	78	1.10	3.64	0.01	1.54	0.04	0.05	0.35	0.01	0.02
M401170	ISTOK	0.03	3.7	0.14	0.48	63	0.1	2.27	162	2.70	3.84	0.01	1.49	0.04	0.03	0.21	0.01	0.01
M401171	ISTOK	0.05	4.8	0.09	0.39	25	0.16	1.78	56	1.00	4.18	0.01	1.22	0.01	0.06	0.23	0.01	0.01
M401172	ISTOK	0.03	3.2	0.25	0.34	57	0.05	2.06	196	1.90	6.50	0.00	1.75	0.01	0.04	0.34	0.01	0.02
M401173	ISTOK	0.03	4	0.26	0.4	51	0.06	2.47	73	3.50	5.55	0.01	1.91	0.02	0.05	0.36	0.01	0.02
M401174	ISTOK	0.03	3.9	0.3	0.47	41	0.025	2.66	71	2.70	6.22	0.01	1.76	0.01	0.04	0.36	0.01	0.02
M401175	ISTOK	0.03	3.4	0.31	0.44	41	0.025	4.06	92	3.10	6.25	0.00	1.75	0.03	0.05	0.49	0.01	0.02
M401176	ISTOK	0.03	2.4	0.35	2.18	36	0.025	11.35	376	2.80	4.51	0.00	1.56	0.63	0.05	0.73	0.01	0.03
M401177	ISTOK	0.04	4.2	0.14	0.59	23	0.11	2.56	108	1.30	3.35	0.01	0.92	0.11	0.06	0.25	0.01	0.02
M401178	ISTOK	0.03	4.9	0.1	0.34	26	0.12	1.81	40	1.40	3.38	0.00	1.25	0.01	0.04	0.17	0.01	0.01
M401179	ISTOK	0.02	3.6	0.07	0.27	19	0.09	1.32	23	0.25	1.52	0.01	0.90	0.01	0.03	0.12	0.01	0.01
M401180	ISTOK	0.04	7.1	0.06	0.38	22	0.13	1.85	49	2.40	4.02	0.00	1.69	0.01	0.06	0.32	0.01	0.01
M401181	ISTOK	0.03	5.5	0.04	0.35	16	0.11	1.87	47	1.20	2.99	0.00	1.41	0.02	0.04	0.32	0.01	0.01
M401182	ISTOK	0.03	5.1	0.04	1.16	12	0.1	8.24	64	2.10	2.96	0.01	1.32	0.48	0.06	0.49	0.01	0.02
M401183	ISTOK	0.03	3.2	0.05	0.98	13	0.11	4.41	52	1.50	2.40	0.01	1.11	0.81	0.06	0.38	0.01	0.04
M401184	ISTOK	0.05	7.2	0.07	0.7	22	0.15	5.49	63	2.90	4.71	0.00	1.92	0.19	0.06	0.40	0.01	0.02
M401185	ISTOK	0.05	6.7	0.08	0.62	20	0.11	4.31	41	4.60	4.17	0.00	2.76	0.03	0.04	0.26	0.01	0.02
M401186	ISTOK	0.06	8.2	0.09	0.8	18	0.12	7.19	57	8.00	3.86	0.00	4.00	0.03	0.06	0.36	0.01	0.03
M401187	ISTOK	1.06	6.9	0.06	1.15	43	0.13	8.86	24	10.10	6.42	0.01	3.98	0.10	0.03	0.18	0.01	0.04
M401188	ISTOK	0.04	6.5	0.06	0.38	27	0.11	1.98	40	3.40	3.90	0.00	1.69	0.02	0.04	0.28	0.01	0.01
M401189	ISTOK	0.01	4.1	0.04	0.23	11	0.07	1.2	4	0.25	0.69	0.00	0.44	0.01	0.02	0.03	0.01	0.01
M401190	ISTOK	0.03	5.1	0.06	0.59	18	0.11	3.49	52	1.70	2.75	0.01	1.73	0.06	0.05	0.33	0.01	0.01
M401191	ISTOK	0.03	8.8	0.02	0.48	11	0.14	4.01	62	2.00	3.08	0.00	1.39	0.07	0.06	0.51	0.01	0.01
M401192	ISTOK	0.02	1.6	0.04	0.23	17	0.11	0.74	13	0.25	0.81	0.01	0.50	0.01	0.02	0.03	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401193	ISTOK	0.03	5.4	0.04	0.32	17	0.11	1.68	40	1.20	3.16	0.00	1.23	0.01	0.04	0.28	0.01	0.01
M401194	ISTOK	0.04	3.4	0.05	1.16	12	0.11	5.58	59	2.20	2.83	0.01	1.37	0.59	0.06	0.40	0.01	0.03
M401195	ISTOK	0.05	3.3	0.03	0.35	24	0.11	1.75	30	0.90	2.54	0.01	0.78	0.03	0.02	0.11	0.01	0.02
M401196	ISTOK	0.05	5.8	0.06	0.36	25	0.11	2.24	55	1.90	3.75	0.00	1.35	0.03	0.04	0.21	0.01	0.02
M401197	ISTOK	0.05	6.3	0.08	0.34	28	0.11	1.7	39	1.10	2.65	0.00	1.06	0.02	0.02	0.14	0.01	0.01
M401198	ISTOK	0.04	3.2	0.05	2.2	19	0.09	2.24	44	0.90	2.13	0.01	1.02	0.14	0.03	0.16	0.01	0.02
M401199	ISTOK	0.03	3.3	0.03	1.11	11	0.08	1.82	33	0.80	1.59	0.01	0.72	0.59	0.04	0.18	0.01	0.03
M401200	ISTOK	0.04	2.5	0.06	1.07	19	0.06	3.32	181	1.20	3.04	0.01	1.20	0.38	0.03	0.08	0.01	0.02
M401201	ISTOK	0.07	3	0.13	25.9	12	0.16	98.5	73	3.10	4.38	0.01	2.80	0.77	0.03	0.25	0.02	0.11
M401202	ISTOK	0.03	0.4	0.06	0.64	13	0.06	1.7	18	0.50	1.34	0.01	0.64	0.03	0.03	0.06	0.01	0.03
M401203	ISTOK	0.01	6.1	0.07	4.13	18	0.16	10.9	101	2.10	3.29	0.00	1.86	0.26	0.07	0.63	0.01	0.01
M401204	ISTOK	0.04	2.2	0.17	3.37	23	0.26	7.55	67	1.90	2.64	0.00	1.87	0.25	0.14	0.30	0.02	0.08
M401205	ISTOK	0.02	6	0.09	0.57	43	0.17	2.19	57	3.80	3.02	0.00	2.31	0.01	0.05	0.27	0.01	0.01
M401206	ISTOK	0.03	3.2	0.08	0.28	44	0.13	1.32	32	0.60	1.71	0.01	0.92	0.01	0.03	0.09	0.01	0.01
M401207	ISTOK	0.005	0.1	0.02	0.14	7	0.025	0.6	4	0.80	0.24	0.02	0.39	0.29	0.02	0.02	0.04	0.01
M401208	ISTOK	0.06	4	0.12	1.54	23	0.11	8.96	139	2.90	3.30	0.00	1.22	0.62	0.06	0.38	0.01	0.02
M401209	ISTOK	0.04	4.2	0.09	3	18	0.11	6.14	139	3.40	3.11	0.00	1.43	0.52	0.08	0.48	0.01	0.02
M401210	ISTOK	0.02	1.8	0.06	1.62	12	0.1	2.94	64	1.10	1.67	0.01	0.89	0.20	0.05	0.25	0.02	0.02
M401211	ISTOK	0.02	2.2	0.08	0.87	17	0.14	2.1	54	0.80	1.76	0.00	1.05	0.07	0.06	0.22	0.01	0.01
M401212	ISTOK	0.04	4.4	0.09	0.45	26	0.11	1.91	48	1.80	3.21	0.00	1.59	0.02	0.05	0.37	0.01	0.01
M401213	ISTOK	0.03	6.8	0.11	0.53	34	0.16	2.11	56	3.50	3.89	0.00	1.83	0.01	0.06	0.27	0.01	0.01
M401214	ISTOK	0.03	3.3	0.11	2.13	24	0.14	8.33	41	1.10	2.38	0.00	1.90	0.13	0.07	0.18	0.02	0.01
M401215	ISTOK	0.04	5.8	0.06	0.36	30	0.16	1.5	33	1.10	3.20	0.01	1.04	0.01	0.03	0.12	0.01	0.01
M401216	ISTOK	0.005	0.3	0.03	0.23	8	0.025	0.39	4	0.25	0.37	0.01	0.23	0.02	0.02	0.01	0.02	0.01
M401217	ISTOK	0.04	4.7	0.07	0.42	28	0.15	1.58	47	1.90	2.87	0.01	1.41	0.01	0.03	0.19	0.01	0.01
M401218	ISTOK	0.04	6.3	0.06	0.5	30	0.21	2.04	54	2.70	3.95	0.00	1.97	0.01	0.05	0.32	0.01	0.01
M401219	ISTOK	0.005	0.1	0.02	0.17	11	0.025	0.26	7	0.25	0.45	0.01	0.28	0.02	0.02	0.03	0.03	0.01
M401220	ISTOK	0.005	0.2	0.02	0.19	8	0.05	0.36	5	0.25	0.39	0.01	0.31	0.02	0.02	0.01	0.03	0.01
M401221	ISTOK	0.005	5.5	0.05	0.35	17	0.11	1.59	24	0.25	1.95	0.00	1.00	0.01	0.03	0.20	0.01	0.01
M401222	ISTOK	0.005	2.6	0.05	0.28	11	0.025	1.09	11	0.25	0.67	0.00	0.52	0.02	0.04	0.09	0.01	0.01
M401223	ISTOK	0.01	4.1	0.04	0.34	27	0.12	1.37	45	1.00	2.96	0.01	1.36	0.01	0.03	0.26	0.01	0.01
M401224	ISTOK	0.03	6.6	0.07	0.53	30	0.15	2.02	46	4.20	4.06	0.01	2.09	0.01	0.05	0.34	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401225	ISTOK	0.005	0.1	0.02	0.11	9	0.025	0.27	4	0.50	0.37	0.02	0.35	0.03	0.02	0.02	0.03	0.01
M401226	ISTOK	0.02	6.7	0.05	0.61	21	0.14	2.09	78	3.40	3.60	0.00	2.40	0.01	0.06	0.50	0.01	0.01
M401227	ISTOK	0.01	4.3	0.07	0.73	29	0.11	1.21	33	2.80	2.79	0.01	2.16	0.01	0.03	0.11	0.02	0.01
M401228	ISTOK	0.01	4.9	0.05	0.41	24	0.1	1.27	43	1.50	3.22	0.01	1.34	0.01	0.03	0.29	0.01	0.01
M401229	ISTOK	0.005	1.5	0.03	0.25	8	0.025	0.55	8	0.25	0.98	0.01	0.21	0.02	0.03	0.05	0.02	0.01
M401230	ISTOK	0.005	1.4	0.03	0.26	15	0.07	0.72	15	0.25	1.16	0.01	0.58	0.03	0.02	0.10	0.02	0.01
M401231	ISTOK	0.005	3.9	0.05	0.36	21	0.18	1.51	26	0.25	1.46	0.01	0.75	0.02	0.03	0.16	0.01	0.01
M401232	ISTOK	0.03	5.3	0.09	0.64	27	0.09	2.7	64	1.20	3.11	0.01	1.36	0.03	0.06	0.40	0.01	0.01
M401233	ISTOK	0.005	0.5	0.03	0.25	7	0.025	0.5	5	0.25	0.50	0.01	0.20	0.02	0.02	0.02	0.02	0.01
M401234	ISTOK	0.02	1.8	0.04	0.27	13	0.06	1.14	29	0.25	1.66	0.01	0.72	0.01	0.04	0.19	0.01	0.01
M401235	ISTOK	0.005	3.5	0.07	0.36	20	0.08	1.33	19	0.25	1.64	0.01	0.68	0.01	0.04	0.11	0.01	0.01
M401236	ISTOK	0.02	8.9	0.07	0.82	17	0.06	5.61	101	2.10	3.17	0.01	1.25	0.15	0.07	0.52	0.01	0.01
M401237	ISTOK	0.02	6.9	0.06	0.94	17	0.07	4.01	85	1.60	3.16	0.00	1.32	0.26	0.06	0.52	0.01	0.01
M401238	ISTOK	0.02	3.1	0.07	1.32	14	0.09	4.61	76	2.40	2.35	0.01	1.31	0.75	0.09	0.35	0.02	0.03
M401239	ISTOK	0.005	5.6	0.06	1.1	14	0.12	5.12	83	2.10	2.86	0.00	1.36	0.32	0.09	0.48	0.01	0.01
M401240	ISTOK	0.02	7.3	0.04	0.96	14	0.18	4.93	83	2.50	2.99	0.00	1.49	0.24	0.09	0.52	0.01	0.01
M401241	ISTOK	0.02	5.1	0.07	0.36	30	0.2	1.67	34	1.50	3.01	0.00	1.26	0.01	0.04	0.17	0.01	0.01
M401242	ISTOK	0.03	6.5	0.05	1.45	15	0.19	5.27	87	3.70	3.16	0.00	1.68	0.43	0.08	0.57	0.01	0.01
M401243	ISTOK	0.02	3.3	0.16	0.89	51	0.06	13.55	99	3.40	5.44	0.01	2.44	0.29	0.03	0.48	0.01	0.02
M401244	ISTOK	0.005	2.6	0.23	0.45	30	0.08	2.07	52	2.10	4.28	0.01	1.81	0.01	0.03	0.28	0.01	0.02
M401245	ISTOK	0.02	4.3	0.13	1.81	18	0.13	9.72	105	4.90	4.27	0.01	2.59	0.03	0.05	0.30	0.01	0.05
M401246	ISTOK	0.03	6.1	0.06	0.46	20	0.15	2.02	67	1.30	2.92	0.00	1.40	0.02	0.04	0.33	0.01	0.01
M401247	ISTOK	0.02	5.1	0.13	0.44	58	0.07	2.49	50	1.40	2.72	0.01	2.06	0.02	0.02	0.17	0.01	0.01
M401248	ISTOK	0.01	2	0.15	0.47	25	0.05	2.22	30	3.30	3.08	0.01	1.80	0.02	0.02	0.19	0.01	0.03
M401249	ISTOK	0.01	1.4	0.04	0.2	18	0.025	1.74	31	0.90	1.46	0.01	0.65	0.06	0.03	0.13	0.02	0.01
M401250	ISTOK	0.005	5.3	0.05	0.43	18	0.1	2.6	47	1.50	4.46	0.01	1.17	0.03	0.04	0.32	0.01	0.01
M401251	ISTOK	0.02	4.7	0.22	0.48	38	0.025	11.7	115	4.20	4.43	0.00	2.49	0.32	0.05	0.59	0.01	0.01
M401252	ISTOK	0.04	7	0.15	0.54	41	0.13	1.99	66	1.90	3.14	0.00	1.53	0.05	0.05	0.28	0.01	0.01
M401253	ISTOK	0.05	9.1	0.08	0.48	18	0.27	2.45	81	5.00	4.12	0.00	2.28	0.01	0.07	0.59	0.01	0.01
M401254	ISTOK	0.04	6.5	0.07	0.91	18	0.23	3.81	65	1.80	3.33	0.00	1.97	0.28	0.07	0.41	0.01	0.01
M401255	ISTOK	0.06	6.6	0.1	0.94	29	0.18	14.65	59	2.00	5.87	0.00	2.36	0.24	0.05	0.20	0.01	0.01
M401256	ISTOK	0.04	5.5	0.08	0.38	25	0.19	1.95	34	1.70	3.02	0.00	1.65	0.02	0.06	0.25	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401257	ISTOK	0.07	5.4	0.07	0.59	19	0.11	13.35	70	1.70	4.16	0.01	1.36	0.39	0.03	0.26	0.01	0.03
M401258	ISTOK	0.02	2.9	0.04	0.33	15	0.15	2.32	33	1.10	2.22	0.01	1.09	0.16	0.05	0.21	0.01	0.01
M401259	ISTOK	0.05	6.4	0.06	0.77	12	0.025	29.5	136	2.20	5.83	0.00	1.21	0.58	0.03	0.42	0.01	0.04
M401260	ISTOK	0.02	6.5	0.04	0.72	15	0.13	3.92	59	2.50	3.23	0.00	1.63	0.07	0.08	0.49	0.01	0.01
M401261	ISTOK	0.005	3.9	0.03	0.34	14	0.1	1.52	46	1.00	2.38	0.01	0.91	0.39	0.04	0.30	0.01	0.01
M401262	ISTOK	0.005	2	0.03	1.29	11	0.07	4.12	34	1.60	1.81	0.01	0.96	0.69	0.05	0.26	0.02	0.03
M401263	ISTOK	0.01	0.9	0.02	0.8	9	0.025	3.86	20	0.90	1.13	0.01	0.68	0.74	0.04	0.12	0.02	0.03
M401264	ISTOK	0.005	0.9	0.02	0.59	8	0.05	2.07	25	0.80	0.85	0.01	0.58	0.50	0.03	0.07	0.02	0.02
M401265	ISTOK	0.02	2.3	0.03	1.14	11	0.08	9.71	65	2.10	2.49	0.01	1.26	1.12	0.07	0.35	0.01	0.05
M401266	ISTOK	0.005	6.1	0.02	0.42	11	0.06	2.5	54	1.20	2.69	0.00	1.10	0.16	0.05	0.42	0.01	0.01
M401267	ISTOK	0.005	4.1	0.03	3.79	12	0.1	6	77	3.00	2.93	0.00	1.59	0.52	0.10	0.44	0.01	0.03
M401268	ISTOK	0.005	4	0.02	1.21	11	0.09	4.09	56	2.30	2.52	0.01	1.33	0.30	0.07	0.40	0.01	0.02
M401269	ISTOK	0.005	2.2	0.02	0.93	9	0.08	3.79	41	3.20	1.92	0.01	1.28	0.90	0.07	0.27	0.01	0.05
M401270	ISTOK	0.01	2.8	0.05	1.1	12	0.13	5.82	46	4.40	2.36	0.00	1.51	0.86	0.14	0.26	0.01	0.04
M401271	ISTOK	0.02	2.6	0.06	1.29	14	0.09	3.38	97	1.90	2.11	0.01	0.84	0.65	0.04	0.27	0.01	0.02
M401272	ISTOK	0.03	4.7	0.16	0.63	48	0.08	2.21	81	3.10	3.71	0.00	1.59	0.01	0.05	0.19	0.01	0.01
M401273	ISTOK	0.005	0.5	0.02	0.18	8	0.025	0.44	4	0.70	0.34	0.02	0.59	0.04	0.02	0.02	0.02	0.01
M401274	ISTOK	0.005	1.7	0.06	0.69	14	0.025	1.38	12	0.90	0.88	0.01	1.14	0.02	0.04	0.08	0.01	0.01
M401275	ISTOK	0.01	0.9	0.03	0.27	20	0.08	0.76	10	0.25	1.28	0.02	0.48	0.01	0.02	0.04	0.01	0.01
M401276	ISTOK	0.02	3.4	0.08	0.37	31	0.1	1.43	57	1.90	3.21	0.01	1.66	0.01	0.05	0.27	0.01	0.01
M401277	ISTOK	0.005	2.5	0.04	0.32	14	0.06	1.45	42	0.50	1.96	0.01	0.87	0.03	0.03	0.29	0.01	0.01
M401278	ISTOK	0.05	2.9	0.06	0.44	47	0.12	1.31	28	0.70	2.61	0.01	1.10	0.01	0.04	0.07	0.01	0.01
M401279	ISTOK	0.01	0.6	0.02	0.26	13	0.06	0.62	8	0.25	0.83	0.02	0.64	0.02	0.02	0.04	0.01	0.01
M401280	ISTOK	0.005	0.8	0.02	0.18	12	0.025	0.53	5	0.25	0.42	0.01	0.30	0.02	0.02	0.01	0.01	0.01
M401281	ISTOK	0.01	6.1	0.05	0.46	22	0.13	1.93	78	3.40	3.98	0.00	2.32	0.01	0.06	0.52	0.01	0.01
M401282	ISTOK	0.005	0.5	0.02	0.21	9	0.025	0.58	6	0.70	0.50	0.02	0.68	0.03	0.02	0.02	0.02	0.01
M401283	ISTOK	0.005	0.7	0.02	0.31	6	0.025	1.04	5	0.25	0.40	0.01	0.35	0.05	0.02	0.03	0.01	0.01
M401284	ISTOK	0.005	0.7	0.02	0.3	12	0.06	0.51	6	0.50	0.67	0.02	0.52	0.02	0.02	0.01	0.01	0.01
M401285	ISTOK	0.01	7.2	0.03	0.56	17	0.14	2.38	72	2.70	3.68	0.00	1.71	0.01	0.05	0.61	0.01	0.01
M401286	ISTOK	0.005	2.1	0.05	0.59	14	0.13	3.02	59	0.90	2.13	0.01	1.37	0.05	0.11	0.29	0.02	0.01
M401287	ISTOK	0.02	6.9	0.03	0.58	17	0.12	3.86	85	1.20	3.66	0.01	1.50	0.05	0.06	0.61	0.01	0.01
M401288	ISTOK	0.02	3.5	0.04	0.34	28	0.1	1.24	24	1.30	2.57	0.01	1.26	0.01	0.03	0.12	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401289	ISTOK	0.005	5.2	0.05	0.37	23	0.08	1.8	49	1.70	3.12	0.01	1.52	0.01	0.04	0.31	0.01	0.01
M401290	ISTOK	0.01	3.9	0.06	0.31	25	0.07	1.17	15	0.90	1.93	0.01	1.32	0.01	0.02	0.09	0.01	0.01
M401291	ISTOK	0.02	5.6	0.05	0.66	19	0.07	2.8	73	1.70	3.54	0.00	2.08	0.03	0.06	0.50	0.01	0.01
M401292	ISTOK	0.02	6.1	0.04	0.72	20	0.07	4.47	87	1.30	3.54	0.01	1.45	0.04	0.05	0.50	0.01	0.01
M401293	ISTOK	0.005	3.3	0.04	0.35	21	0.06	1.4	45	0.50	2.63	0.01	1.07	0.01	0.04	0.31	0.01	0.01
M401294	ISTOK	0.02	5	0.05	0.45	28	0.11	1.87	48	3.00	4.01	0.01	1.83	0.01	0.04	0.31	0.01	0.01
M401295	ISTOK	0.04	2.2	0.04	0.27	20	0.21	1.08	13	0.25	0.90	0.01	0.54	0.02	0.02	0.07	0.01	0.01
M401296	ISTOK	0.02	9.7	0.05	0.7	15	0.11	5.91	84	4.90	3.37	0.00	1.32	0.15	0.06	0.53	0.01	0.01
M401297	ISTOK	0.02	5.4	0.04	0.86	15	0.1	4.1	81	1.20	2.95	0.01	1.33	0.16	0.08	0.45	0.01	0.01
M401298	ISTOK	0.04	10.6	0.06	0.74	17	0.11	5.94	103	6.40	3.62	0.00	1.59	0.22	0.11	0.60	0.01	0.01
M401299	ISTOK	0.03	1.1	0.05	0.3	10	0.05	0.76	15	0.25	0.46	0.01	0.44	0.02	0.03	0.04	0.01	0.01
M401300	ISTOK	0.03	4.7	0.24	0.46	53	0.05	2.51	128	2.30	2.92	0.00	1.47	0.03	0.03	0.11	0.01	0.01
M401301	ISTOK	0.05	3.5	0.21	1.36	41	0.15	2.55	110	3.10	4.23	0.00	1.69	0.08	0.10	0.36	0.01	0.05
M401302	ISTOK	0.05	1.4	0.85	1.15	49	0.07	4.9	158	1.70	4.38	0.01	1.50	0.11	0.05	0.19	0.01	0.04
M401303	ISTOK	0.01	0.6	0.17	0.77	29	0.06	2.16	169	1.00	1.72	0.01	0.69	0.03	0.05	0.09	0.01	0.03
M401304	ISTOK	0.01	2.2	0.15	0.69	12	0.025	4.34	123	0.60	3.42	0.00	0.59	0.25	0.04	0.19	0.01	0.01
M401305	ISTOK	0.03	3.9	0.15	1.29	43	0.07	11.05	127	3.80	5.67	0.00	2.39	0.12	0.06	0.48	0.01	0.06
M401306	ISTOK	0.03	3.3	0.33	0.76	69	0.1	1.94	66	1.40	3.85	0.01	1.46	0.01	0.09	0.20	0.01	0.04
M401307	ISTOK	0.02	1	0.31	0.88	31	0.025	4.21	75	1.90	4.60	0.01	1.19	0.05	0.03	0.20	0.01	0.04
M401308	ISTOK	0.05	1.8	0.38	1.32	30	0.11	2.89	94	1.70	2.91	0.00	1.18	0.05	0.08	0.23	0.01	0.06
M401309	ISTOK	0.03	0.4	0.14	0.27	12	0.025	0.9	23	0.25	0.51	0.01	0.43	0.01	0.04	0.02	0.01	0.01
M401310	ISTOK	0.04	3	0.08	2.42	17	0.12	2.97	89	1.80	3.17	0.00	1.36	0.13	0.05	0.43	0.01	0.02
M401311	ISTOK	0.09	4.1	0.06	0.45	37	0.11	1.53	39	1.30	3.16	0.01	1.21	0.03	0.04	0.21	0.01	0.01
M401312	ISTOK	0.06	4.5	0.05	0.35	24	0.21	1.44	39	1.50	3.63	0.01	1.28	0.01	0.05	0.26	0.01	0.01
M401313	ISTOK	0.04	6	0.11	0.42	25	0.025	3.13	91	1.70	5.20	0.00	1.21	0.02	0.03	0.37	0.01	0.01
M401314	ISTOK	0.03	2.3	0.07	0.44	64	0.23	1.5	28	0.60	3.26	0.05	1.28	0.02	0.03	0.10	0.01	0.01
M401315	ISTOK	0.06	4.6	0.04	0.41	30	0.21	1.44	39	3.40	4.89	0.01	1.72	0.01	0.04	0.23	0.01	0.01
M401316	ISTOK	0.03	3.3	0.04	0.3	21	0.12	1.3	15	1.00	1.57	0.01	1.23	0.02	0.03	0.10	0.01	0.01
M401317	ISTOK	0.03	4.5	0.07	0.34	25	0.24	1.36	37	3.50	3.69	0.00	1.84	0.01	0.04	0.24	0.01	0.01
M401318	ISTOK	0.06	2.4	0.03	0.6	21	0.18	2.02	109	1.10	3.63	0.01	1.61	0.36	0.05	0.32	0.01	0.02
M401319	ISTOK	0.04	4.4	0.03	1.78	15	0.16	3.72	70	2.70	3.37	0.00	1.58	0.25	0.05	0.61	0.01	0.01
M401320	ISTOK	0.04	3.5	0.06	1.61	18	0.3	4.4	55	5.00	2.55	0.00	1.79	0.64	0.15	0.38	0.01	0.06

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401321	ISTOK	0.03	5.3	0.04	0.39	15	0.22	1.59	68	4.10	4.05	0.00	2.38	0.02	0.06	0.49	0.01	0.01
M401322	ISTOK	0.04	5.4	0.04	0.43	15	0.19	2.85	67	1.60	3.38	0.00	1.51	0.03	0.06	0.52	0.01	0.01
M401323	ISTOK	0.03	5.8	0.03	0.54	16	0.22	2.83	75	1.00	3.62	0.00	1.49	0.05	0.06	0.56	0.01	0.01
M401324	ISTOK	0.02	4	0.03	0.45	15	0.19	2.22	65	1.10	3.02	0.01	1.38	0.10	0.07	0.46	0.01	0.01
M401325	ISTOK	0.04	6.7	0.04	3.16	17	0.14	5.04	89	2.70	3.23	0.01	1.42	0.33	0.07	0.54	0.01	0.01
M401326	ISTOK	0.04	5.4	0.06	1.6	17	0.16	5.07	87	2.40	3.34	0.00	1.55	0.41	0.10	0.58	0.01	0.01
M401327	ISTOK	0.05	7	0.06	0.98	18	0.09	4.91	95	2.80	3.42	0.01	1.60	0.28	0.09	0.58	0.01	0.01
M401328	ISTOK	0.03	5.6	0.05	0.61	17	0.07	3.71	86	2.40	3.12	0.01	1.38	0.31	0.08	0.51	0.01	0.01
M401329	ISTOK	0.05	5.5	0.04	0.62	17	0.1	4.15	87	0.70	3.33	0.01	1.42	0.21	0.07	0.54	0.01	0.01
M401330	ISTOK	0.05	7.5	0.05	0.55	18	0.1	3.87	87	1.20	3.57	0.01	1.36	0.09	0.07	0.58	0.01	0.01
M401331	ISTOK	0.03	3.2	0.06	0.41	17	0.16	2.09	62	1.30	2.71	0.01	1.40	0.05	0.08	0.40	0.02	0.01
M401332	ISTOK	0.03	8.4	0.03	0.57	16	0.16	3.91	86	2.40	3.77	0.01	1.58	0.10	0.07	0.63	0.01	0.01
M401333	ISTOK	0.04	5.2	0.05	0.53	19	0.22	2.42	81	1.70	3.71	0.00	1.70	0.05	0.08	0.59	0.01	0.01
M401334	ISTOK	0.04	6	0.05	0.51	23	0.19	1.8	69	3.90	4.31	0.00	2.20	0.01	0.05	0.51	0.01	0.02
M401335	ISTOK	0.03	7.3	0.04	0.47	18	0.17	1.93	73	4.80	3.94	0.00	2.08	0.01	0.05	0.61	0.01	0.01
M401336	ISTOK	0.05	2.8	0.19	0.92	54	0.14	2.05	94	2.00	3.86	0.01	1.57	0.04	0.09	0.28	0.01	0.04
M401337	ISTOK	0.02	2.4	0.07	1.81	11	0.025	18.75	42	3.20	2.95	0.00	1.36	0.26	0.02	0.28	0.01	0.03
M401338	ISTOK	0.04	0.6	0.21	0.41	29	0.06	1.21	45	0.90	1.01	0.00	0.70	0.03	0.05	0.04	0.01	0.02
M401339	ISTOK	0.04	4.5	0.18	2.48	25	0.05	10	235	2.40	3.87	0.00	2.06	0.16	0.06	0.44	0.01	0.03
M401340	ISTOK	0.04	0.6	0.22	2.94	21	0.06	7.07	97	0.80	2.04	0.01	0.91	0.67	0.05	0.11	0.01	0.06
M401341	ISTOK	0.05	2.9	0.19	1.13	75	0.11	2.08	72	1.60	2.81	0.01	1.32	0.03	0.06	0.14	0.01	0.05
M401342	ISTOK	0.14	0.7	0.16	0.72	45	0.2	2.15	61	0.25	3.02	0.01	0.73	0.03	0.05	0.07	0.01	0.06
M401343	ISTOK	0.07	2.8	0.19	1.49	25	0.08	8.63	106	1.70	3.09	0.01	1.36	0.54	0.06	0.28	0.01	0.03
M401344	ISTOK	0.06	5	0.1	3.2	20	0.22	9.83	123	4.20	3.62	0.00	1.80	0.63	0.10	0.52	0.01	0.04
M401345	ISTOK	0.03	5	0.08	0.59	22	0.23	2.09	85	2.80	4.53	0.00	1.85	0.02	0.08	0.50	0.01	0.02
M401346	ISTOK	0.02	6.2	0.1	1.04	16	0.11	5.92	125	2.00	3.05	0.00	1.12	0.22	0.05	0.43	0.01	0.02
M401347	ISTOK	0.04	4.2	0.09	0.61	23	0.13	2.22	91	2.40	3.97	0.00	1.53	0.06	0.07	0.41	0.01	0.02
M401348	ISTOK	0.02	1.9	0.05	1.33	10	0.025	14.3	58	1.80	2.78	0.00	0.81	0.99	0.02	0.13	0.01	0.04
M401349	ISTOK	0.05	6.7	0.06	0.69	18	0.11	4.24	95	1.40	3.36	0.00	1.57	0.08	0.05	0.54	0.01	0.01
M401350	ISTOK	0.06	4.4	0.1	0.6	26	0.16	1.96	68	3.30	3.29	0.01	1.98	0.01	0.06	0.36	0.01	0.02
M401351	ISTOK	0.06	3.8	0.07	0.75	18	0.12	3.34	79	0.80	2.77	0.00	1.36	0.18	0.06	0.47	0.01	0.01
M401352	ISTOK	0.04	3.8	0.03	0.72	25	0.12	1.9	60	0.60	2.91	0.01	1.22	0.09	0.04	0.39	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401353	ISTOK	0.03	5.3	0.04	1.4	15	0.14	3.33	68	1.00	3.17	0.00	1.58	0.12	0.05	0.54	0.01	0.01
M401354	ISTOK	0.05	7.7	0.03	3.02	16	0.24	4.46	92	2.50	3.71	0.00	1.68	0.22	0.08	0.68	0.01	0.01
M401355	ISTOK	0.03	3.4	0.29	1.11	59	0.1	2.77	126	2.50	4.18	0.01	1.81	0.09	0.08	0.31	0.01	0.05
M401356	ISTOK	0.03	1.5	0.27	1.01	27	0.05	3.39	104	3.20	3.20	0.00	1.47	0.11	0.06	0.31	0.01	0.03
M401357	ISTOK	0.06	3.2	0.15	0.99	32	0.15	2.52	113	2.10	3.93	0.00	1.41	0.07	0.09	0.34	0.01	0.04
M401358	ISTOK	0.02	1.9	0.28	0.44	34	0.025	2.14	101	1.50	3.38	0.01	1.05	0.03	0.05	0.23	0.01	0.03
M401359	ISTOK	0.01	2	0.21	1.18	24	0.06	10.2	116	3.00	5.96	0.01	2.02	0.35	0.04	0.25	0.01	0.04
M401360	ISTOK	0.04	1.4	0.37	4.26	23	0.1	12.35	167	2.80	3.08	0.01	1.54	0.95	0.07	0.40	0.01	0.08
M401361	ISTOK	0.03	2.4	0.11	0.62	27	0.17	2.37	108	1.00	2.81	0.01	1.27	0.32	0.06	0.42	0.01	0.02
M401362	ISTOK	0.04	2.1	0.08	0.47	14	0.07	1.24	11	0.25	0.56	0.01	0.59	0.02	0.04	0.03	0.01	0.01
M401363	ISTOK	0.08	4.1	0.07	1.66	25	0.15	8.92	108	2.40	3.77	0.00	2.12	0.40	0.05	0.47	0.01	0.03
M401364	ISTOK	0.04	4.7	0.07	0.34	16	0.05	5.26	63	1.40	3.62	0.00	1.32	0.14	0.03	0.35	0.01	0.03
M401365	ISTOK	0.03	2.3	0.05	0.58	14	0.16	1.86	44	0.90	1.91	0.01	1.15	0.28	0.05	0.28	0.01	0.02
M401401	ISTOK	0.005	2	0.04	0.32	13	0.11	1.32	20	0.25	0.95	0.01	0.47	0.23	0.02	0.06	0.01	0.01
M401402	ISTOK	0.005	1.6	0.06	0.22	10	0.06	0.74	29	0.25	1.01	0.00	0.60	0.02	0.03	0.15	0.01	0.01
M401403	ISTOK	0.05	2.6	0.12	1.13	17	0.18	10.1	74	1.80	3.33	0.01	1.59	0.47	0.05	0.38	0.01	0.04
M401404	ISTOK	0.04	5.1	0.15	0.54	24	0.18	2.97	114	1.80	4.58	0.00	1.70	0.04	0.05	0.41	0.01	0.03
M401501	ISTOK	0.005	2.6	0.05	0.21	17	0.07	0.98	8	0.25	0.80	0.01	0.62	0.02	0.02	0.04	0.01	0.01
M401502	ISTOK	0.05	5.6	0.04	0.41	21	0.17	1.99	44	0.80	2.77	0.01	1.04	0.02	0.05	0.29	0.01	0.01
M401503	ISTOK	0.04	4.9	0.08	0.57	26	0.11	2.33	48	4.30	3.45	0.00	1.94	0.24	0.04	0.43	0.01	0.01
M401504	ISTOK	0.05	5.3	0.09	0.38	42	0.13	1.72	49	3.30	3.37	0.00	1.55	0.01	0.05	0.27	0.01	0.01
M401505	ISTOK	0.04	4.2	0.09	0.36	30	0.13	1.59	30	1.00	2.31	0.01	1.26	0.01	0.04	0.20	0.01	0.01
M401506	ISTOK	0.05	6.7	0.09	0.53	24	0.15	2.29	67	3.90	3.85	0.00	1.92	0.02	0.07	0.44	0.01	0.01
M401507	ISTOK	0.04	2.8	0.09	0.42	32	0.15	1.52	27	0.60	1.91	0.01	1.13	0.02	0.06	0.13	0.01	0.01
M401508	ISTOK	0.02	5	0.09	0.61	31	0.12	2.79	76	2.70	3.32	0.00	2.15	0.03	0.06	0.36	0.01	0.01
M401509	ISTOK	0.01	5.1	0.15	0.41	51	0.13	1.82	65	2.80	3.20	0.01	1.58	0.01	0.04	0.20	0.01	0.01
M401510	ISTOK	0.04	4.7	0.07	0.48	27	0.14	1.91	53	1.20	2.69	0.01	1.32	0.02	0.05	0.31	0.01	0.01
M401511	ISTOK	0.04	3.6	0.07	0.37	33	0.25	1.48	37	0.90	2.42	0.01	0.61	0.02	0.03	0.06	0.01	0.01
M401512	ISTOK	0.03	3.9	0.1	0.31	35	0.1	1.24	29	0.60	1.59	0.01	0.61	0.01	0.03	0.04	0.01	0.01
M401513	ISTOK	0.03	4.7	0.1	0.9	20	0.08	4.87	85	1.40	2.61	0.00	1.44	0.14	0.06	0.33	0.01	0.02
M401514	ISTOK	0.03	3.5	0.05	1.99	17	0.12	1.67	59	1.00	2.35	0.01	0.89	0.40	0.04	0.27	0.01	0.02
M401515	ISTOK	0.03	9.1	0.03	0.62	13	0.08	5.8	62	1.70	3.14	0.01	1.16	0.10	0.04	0.48	0.01	0.01

Sample	Property	Te	Th	Tl	U	V	W	Y	Zn	Zr	Fe	Ti	Al	Ca	K	Mg	Na	S
		ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm	%	%	%	%	%	%	%	%
M401516	ISTOK	0.05	2.8	0.04	0.27	19	0.12	0.95	25	0.25	2.18	0.01	0.54	0.02	0.03	0.07	0.01	0.01

Appendix 2 (Assay Certificates)



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 1
Finalized Date: 21-SEP-2012
This copy reported on
17-OCT-2012
Account: 092BCL

CERTIFICATE WH12195691

Project:
P.O. No.:
This report is for 250 Soil samples submitted to our lab in Whitehorse, YT, Canada
on 21-AUG-2012.

The following have access to data associated with this certificate:

MICKI GORDIC

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES


ALS CODE	DESCRIPTION	INSTRUMENT
Au-ST43	Super Trace Au - 25g AR	ICP-MS
ME-MS41	51 anal. aqua regia ICPMS	

To: 0926764 B.C. LTD.
ATTN: MICKI GORDIC
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

***** See Appendix Page for comments regarding this certificate *****

Signature:


Colin Ramshaw, Vancouver Laboratory Manager



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401001		0.45	0.0004	0.03	0.66	2.0	<0.2	<10	20	0.13	0.08	0.03	0.02	9.91	2.1	4
M401002		0.42	0.0008	0.14	0.83	7.5	<0.2	<10	30	0.34	0.40	0.03	0.05	28.2	11.0	23
M401003		0.47	0.0011	0.10	1.44	6.4	<0.2	<10	60	0.53	0.21	0.05	0.05	17.20	4.5	13
M401004		0.36	0.0008	0.03	0.60	2.4	<0.2	<10	20	0.11	0.15	0.01	0.03	9.82	2.1	8
M401005		0.58	0.0012	0.02	0.93	10.9	<0.2	<10	40	0.18	0.32	0.01	0.03	30.3	4.3	12
M401006		0.48	0.0003	0.02	0.32	2.3	<0.2	<10	20	0.06	0.09	0.02	0.02	7.89	1.2	6
M401007		0.44	0.0035	0.03	0.81	18.1	<0.2	<10	40	0.17	0.39	0.02	0.06	20.3	5.7	15
M401008		0.42	0.0002	0.01	0.25	0.9	<0.2	<10	20	0.08	0.16	0.02	0.02	5.02	0.8	8
M401009		0.44	0.0035	0.03	0.69	17.4	<0.2	<10	50	0.22	0.36	0.02	0.03	22.3	2.8	11
M401010		0.35	0.0007	0.03	0.36	1.7	<0.2	<10	30	0.14	0.06	0.03	0.01	5.66	1.2	5
M401011		0.45	0.0042	0.06	1.21	18.6	<0.2	<10	40	0.20	0.26	0.02	0.04	31.6	6.5	17
M401012		0.47	0.0006	0.02	1.15	2.9	<0.2	<10	60	0.14	0.11	0.02	0.02	21.2	1.8	8
M401013		0.49	0.0018	0.01	1.74	19.9	<0.2	<10	60	0.25	0.36	0.01	0.05	33.1	7.9	20
M401014		0.47	0.0030	0.02	1.31	11.9	<0.2	<10	50	0.22	0.21	0.02	0.02	22.4	3.1	14
M401015		0.57	0.0048	0.09	1.69	13.8	<0.2	<10	150	0.62	0.28	0.11	0.14	29.3	12.8	19
M401016		0.52	0.0047	0.07	1.45	18.7	<0.2	<10	110	0.45	0.28	0.18	0.21	31.3	14.3	20
M401017		0.54	0.0121	0.02	1.59	16.0	<0.2	<10	70	0.35	0.28	0.04	0.08	39.4	8.0	20
M401018		0.63	0.0023	0.04	1.52	9.6	<0.2	<10	100	0.54	0.30	0.12	0.17	45.9	12.8	20
M401019		0.42	0.0004	0.05	0.63	4.3	<0.2	<10	40	0.17	0.11	0.02	0.04	7.84	2.2	7
M401020		0.50	0.0065	0.04	1.36	15.4	<0.2	<10	80	0.47	0.27	0.10	0.10	38.0	12.0	19
M401021		0.50	0.0037	0.14	1.95	17.4	<0.2	<10	130	1.05	0.35	0.11	0.10	29.2	14.6	24
M401022		0.54	0.0182	0.04	1.67	16.2	<0.2	<10	120	0.66	0.32	0.08	0.08	36.7	13.1	23
M401023		0.46	0.0031	0.08	1.44	12.4	<0.2	<10	140	0.60	0.30	0.17	0.22	26.8	13.9	20
M401024		0.55	0.0008	0.06	1.04	16.3	<0.2	<10	50	0.24	0.38	0.02	0.06	28.2	6.6	13
M401025		0.52	0.0026	0.04	0.57	7.7	<0.2	<10	50	0.11	0.15	0.01	0.02	40.3	1.7	6
M401026		0.49	0.0011	0.10	0.87	11.9	<0.2	<10	40	0.28	0.20	0.02	0.03	24.2	4.4	11
M401027		0.57	0.0027	0.07	1.33	20.6	<0.2	<10	70	0.23	0.30	0.03	0.10	24.8	7.4	21
M401028		0.56	0.0035	0.03	0.63	9.5	<0.2	<10	50	0.08	0.18	0.01	0.03	28.9	2.0	7
M401029		0.50	0.0021	0.03	0.41	9.9	<0.2	<10	30	0.11	0.19	0.01	0.02	22.8	1.6	5
M401030		0.53	0.0055	0.07	1.67	17.8	<0.2	<10	80	0.47	0.29	0.13	0.10	39.5	11.7	24
M401031		0.59	0.0055	0.06	1.56	19.2	<0.2	<10	70	0.42	0.30	0.15	0.07	42.7	11.8	23
M401032		0.49	0.0173	0.29	1.34	13.9	<0.2	<10	160	0.39	0.22	0.49	0.13	24.6	8.2	17
M401033		0.51	0.0037	0.10	1.30	14.0	<0.2	<10	160	0.47	0.24	0.41	0.31	29.0	10.6	18
M401034		0.47	0.0044	0.17	1.33	13.0	<0.2	<10	140	0.43	0.21	0.29	0.10	21.1	7.8	16
M401035		0.59	0.0026	0.19	1.59	16.7	<0.2	<10	160	0.53	0.29	0.25	0.27	43.0	13.8	23
M401036		0.43	0.0018	0.05	0.43	12.3	<0.2	<10	40	0.09	0.19	0.01	0.05	20.7	2.8	6
M401037		0.41	0.0014	0.11	0.75	6.4	<0.2	<10	80	0.37	0.15	0.63	0.28	29.9	8.1	8
M401038		0.44	0.0003	0.05	0.48	4.4	<0.2	<10	20	0.10	0.15	0.03	0.06	11.95	4.7	7
M401039		0.46	0.0026	0.17	1.05	18.5	<0.2	<10	100	0.33	0.18	0.97	0.25	17.95	7.0	12
M401040		0.61	0.0010	0.17	1.46	19.6	<0.2	<10	70	0.43	0.37	0.52	0.36	47.5	15.2	19



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401001		1.00	8.9	0.90	2.69	<0.05	<0.02	0.01	<0.005	0.02	5.0	3.3	0.05	57	0.36	0.02
M401002		3.99	15.6	5.91	7.33	0.07	<0.02	0.02	0.019	0.04	12.2	11.8	0.12	813	2.52	<0.01
M401003		3.43	21.8	2.44	4.61	<0.05	0.03	0.02	0.016	0.03	8.6	19.4	0.18	168	1.29	0.01
M401004		1.78	8.6	1.02	3.44	<0.05	<0.02	0.02	<0.005	0.03	5.0	6.8	0.09	56	0.67	0.01
M401005		2.61	13.3	2.29	5.82	<0.05	<0.02	0.01	0.009	0.04	15.7	11.2	0.17	140	1.67	<0.01
M401006		2.13	4.7	0.65	2.60	<0.05	<0.02	0.01	<0.005	0.03	4.2	1.5	0.03	87	0.64	0.01
M401007		3.14	15.8	3.88	9.29	0.05	<0.02	0.01	0.014	0.03	10.4	6.8	0.10	237	2.31	0.01
M401008		1.89	7.4	1.29	1.53	<0.05	<0.02	0.01	<0.005	0.03	2.6	0.6	0.01	28	0.35	0.02
M401009		1.96	14.0	1.90	4.64	<0.05	<0.02	0.01	0.010	0.03	11.1	10.6	0.14	114	2.53	0.01
M401010		3.86	8.9	0.53	2.20	<0.05	<0.02	0.01	<0.005	0.03	2.9	1.8	0.03	39	0.52	0.02
M401011		1.28	15.2	2.86	4.88	<0.05	0.02	0.01	0.011	0.04	16.2	27.3	0.32	245	1.13	0.01
M401012		1.67	14.6	1.05	4.06	<0.05	0.03	0.01	0.006	0.04	10.8	12.1	0.12	46	0.38	0.01
M401013		1.08	17.3	4.46	9.31	0.06	0.04	0.01	0.016	0.06	17.1	31.7	0.35	303	1.11	0.01
M401014		0.69	12.4	2.75	5.08	<0.05	0.04	0.03	0.013	0.03	11.4	8.0	0.10	185	0.98	0.01
M401015		1.47	33.3	2.91	4.54	0.05	0.04	0.03	0.016	0.09	14.8	41.6	0.44	657	1.16	0.01
M401016		0.81	25.9	3.21	4.05	0.06	0.02	0.02	0.016	0.07	15.8	44.2	0.49	719	1.60	0.01
M401017		1.07	26.9	3.27	5.06	0.06	0.03	0.01	0.013	0.06	20.2	40.5	0.47	247	1.38	<0.01
M401018		0.93	48.9	3.44	4.19	0.06	0.04	0.01	0.016	0.05	23.7	42.1	0.53	404	2.11	<0.01
M401019		0.68	10.2	1.38	2.98	<0.05	<0.02	0.02	0.006	0.03	4.0	5.6	0.07	103	0.72	0.02
M401020		1.02	27.5	2.85	3.85	0.06	0.03	0.01	0.012	0.06	19.2	40.5	0.48	474	0.83	0.01
M401021		3.04	40.0	3.48	5.04	0.05	0.04	0.03	0.018	0.10	15.2	54.4	0.58	603	1.02	0.01
M401022		1.39	33.3	3.49	4.54	0.06	0.03	0.01	0.014	0.07	18.7	51.1	0.57	496	0.85	0.01
M401023		1.30	23.3	2.90	4.12	<0.05	0.07	0.05	0.019	0.09	13.2	37.7	0.47	694	1.14	0.01
M401024		3.68	17.2	2.99	5.35	<0.05	0.02	0.05	0.015	0.05	13.7	12.7	0.20	187	1.39	<0.01
M401025		1.13	6.4	0.87	4.05	<0.05	<0.02	0.02	0.006	0.04	20.2	1.8	0.03	33	0.84	<0.01
M401026		2.01	17.7	1.83	3.48	<0.05	0.03	0.04	0.012	0.05	11.6	12.0	0.16	103	1.13	0.01
M401027		1.05	16.4	4.05	3.95	<0.05	0.05	0.03	0.019	0.05	11.8	20.4	0.30	322	2.09	0.01
M401028		0.65	6.5	1.12	4.78	<0.05	<0.02	0.03	0.008	0.03	14.7	3.6	0.06	85	1.29	<0.01
M401029		2.01	8.6	0.91	3.20	<0.05	<0.02	0.03	0.005	0.04	11.8	1.9	0.04	54	1.31	<0.01
M401030		1.14	28.7	3.40	4.38	0.05	0.03	0.03	0.015	0.07	19.4	47.7	0.59	413	0.79	0.01
M401031		0.67	24.7	3.41	4.27	0.06	0.03	0.04	0.013	0.06	20.5	48.0	0.58	508	0.74	0.01
M401032		0.81	25.9	2.50	3.56	<0.05	0.06	0.04	0.014	0.08	11.4	28.5	0.38	336	1.13	0.01
M401033		0.79	29.2	2.65	3.51	<0.05	0.07	0.04	0.014	0.09	14.4	30.9	0.42	452	1.25	0.01
M401034		0.87	23.1	2.31	3.55	<0.05	0.04	0.04	0.014	0.10	10.4	27.1	0.35	338	0.80	0.02
M401035		0.95	37.3	3.68	4.36	0.05	0.03	0.04	0.019	0.10	21.8	38.7	0.57	459	2.57	0.01
M401036		1.05	9.8	1.09	3.14	<0.05	<0.02	0.02	0.009	0.03	9.1	1.6	0.03	54	1.78	0.01
M401037		0.67	18.6	1.94	1.91	<0.05	0.05	0.05	0.026	0.02	13.4	11.1	0.12	870	0.71	0.01
M401038		0.61	7.2	1.25	2.23	<0.05	<0.02	0.03	0.007	0.02	5.8	7.1	0.10	155	0.54	0.01
M401039		0.60	24.2	2.09	2.69	<0.05	0.05	0.04	0.015	0.05	8.3	21.0	0.25	248	2.25	0.01
M401040		0.34	53.3	3.99	3.45	0.07	0.11	0.09	0.036	0.03	24.5	43.4	0.72	191	4.82	0.01



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401001		0.15	3.1	290	5.9	2.7	<0.001	0.01	0.14	0.6	0.2	0.2	5.1	<0.01	0.01	<0.2
M401002		0.45	24.2	820	29.9	5.5	<0.001	0.02	0.71	2.2	0.4	0.8	7.1	0.01	0.05	2.5
M401003		0.51	10.3	580	24.0	3.8	<0.001	0.02	0.42	1.1	0.6	0.3	9.0	0.01	0.04	0.5
M401004		0.31	5.8	250	3.4	2.4	<0.001	0.01	0.19	0.7	0.2	0.2	3.8	<0.01	0.02	0.6
M401005		0.36	9.7	360	11.0	7.7	<0.001	0.01	0.51	1.2	0.3	0.4	4.5	<0.01	0.04	2.2
M401006		0.09	3.5	510	4.4	3.0	<0.001	0.01	0.12	0.4	0.2	0.2	3.5	<0.01	0.01	<0.2
M401007		0.42	9.9	1040	12.4	3.9	<0.001	0.01	0.82	1.1	0.4	0.4	4.9	<0.01	0.06	1.0
M401008		0.24	2.7	210	4.5	2.0	<0.001	0.01	0.17	0.5	0.2	0.3	5.2	<0.01	0.02	0.2
M401009		0.19	7.7	360	13.5	3.7	<0.001	0.02	0.63	1.2	0.3	0.2	5.8	<0.01	0.04	2.2
M401010		0.10	2.6	620	4.5	3.4	<0.001	0.02	0.09	0.4	0.2	0.2	5.3	<0.01	0.01	<0.2
M401011		0.36	16.5	400	14.8	4.8	<0.001	0.01	0.45	1.4	0.4	0.2	4.4	<0.01	0.06	2.7
M401012		0.33	5.4	170	5.1	3.2	<0.001	0.01	0.11	1.1	0.3	0.2	4.1	<0.01	0.02	1.5
M401013		0.67	17.4	210	11.4	4.8	<0.001	0.01	0.55	2.1	0.4	0.4	4.8	<0.01	0.06	5.6
M401014		0.52	6.8	440	11.1	2.3	<0.001	0.04	0.35	1.5	0.8	0.3	5.3	<0.01	0.05	2.5
M401015		0.17	26.1	600	17.4	7.0	<0.001	0.01	0.46	2.3	0.5	0.2	13.7	<0.01	0.05	4.0
M401016		0.12	28.4	680	18.6	4.3	<0.001	0.01	0.68	1.9	0.4	0.2	20.7	<0.01	0.04	5.0
M401017		0.15	22.7	380	14.1	6.3	<0.001	0.01	0.54	1.9	0.4	0.2	5.8	<0.01	0.05	5.8
M401018		0.19	25.4	710	18.6	5.0	<0.001	0.01	0.83	1.8	0.4	0.2	13.9	<0.01	0.05	6.4
M401019		0.37	4.9	250	8.8	2.6	<0.001	0.02	0.18	0.7	0.3	0.2	5.2	<0.01	0.02	1.1
M401020		0.09	25.1	530	18.0	3.7	<0.001	0.01	0.49	1.9	0.3	<0.2	12.0	<0.01	0.04	5.1
M401021		0.13	31.5	520	20.8	7.1	<0.001	0.02	0.45	2.7	0.4	0.2	14.4	<0.01	0.05	5.3
M401022		0.12	28.6	380	16.2	5.2	<0.001	0.01	0.47	2.2	0.3	0.2	11.1	<0.01	0.04	6.0
M401023		0.14	25.1	700	22.5	6.0	0.001	0.02	0.48	1.9	<0.2	0.2	28.0	<0.01	0.03	4.7
M401024		0.39	13.0	560	21.5	8.0	<0.001	0.02	0.73	0.8	0.2	0.3	4.6	<0.01	0.04	1.5
M401025		0.11	4.8	220	5.3	4.8	<0.001	0.01	0.33	0.4	<0.2	0.4	3.7	<0.01	0.03	1.9
M401026		0.21	10.0	420	18.9	5.8	0.001	0.02	0.47	0.8	0.2	0.2	4.2	<0.01	0.05	1.7
M401027		0.49	16.9	750	23.3	7.8	<0.001	0.03	0.83	1.2	0.7	0.2	7.2	<0.01	0.05	2.7
M401028		0.18	4.7	390	6.6	3.8	<0.001	0.01	0.38	0.5	<0.2	0.4	3.3	<0.01	0.02	1.4
M401029		0.18	3.6	370	6.8	5.1	0.001	0.01	0.40	0.3	<0.2	0.2	3.9	<0.01	0.03	0.7
M401030		0.09	28.2	500	18.3	4.5	<0.001	0.01	0.57	1.8	0.3	0.2	36.2	<0.01	0.04	6.4
M401031		0.09	26.9	580	17.8	3.7	0.001	0.01	0.55	1.6	<0.2	0.2	46.8	<0.01	0.04	7.8
M401032		0.21	21.5	520	13.1	5.2	<0.001	0.02	0.62	1.5	0.3	0.2	220	<0.01	0.02	3.8
M401033		0.21	25.7	580	15.4	4.8	<0.001	0.02	0.72	1.8	0.6	0.2	65.2	<0.01	0.05	5.2
M401034		0.21	19.5	430	12.6	5.4	0.001	0.01	0.49	1.4	<0.2	0.2	68.4	<0.01	0.03	2.7
M401035		0.11	30.7	730	19.3	5.4	0.001	0.01	1.16	2.2	0.6	0.2	51.4	<0.01	0.06	6.9
M401036		0.12	6.1	620	7.8	6.1	<0.001	0.02	0.62	0.3	<0.2	0.2	4.4	<0.01	0.06	0.3
M401037		0.16	14.9	510	11.7	3.0	<0.001	0.05	0.47	2.6	0.4	0.2	53.8	<0.01	0.02	1.5
M401038		0.16	5.8	580	9.5	2.8	<0.001	0.03	0.20	0.3	<0.2	0.2	5.3	<0.01	0.03	0.2
M401039		0.25	16.5	720	13.3	4.1	0.001	0.05	1.05	1.0	0.7	0.2	90.9	<0.01	0.03	1.6
M401040		0.05	41.4	450	24.3	1.6	0.001	0.02	1.33	3.5	0.7	0.2	57.7	<0.01	0.03	7.1



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 2 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401001		0.021	0.03	0.26	20	0.06	0.90	11	<0.5
M401002		0.009	0.05	0.77	30	0.10	2.73	102	<0.5
M401003		0.014	0.06	0.85	23	0.13	2.50	34	0.9
M401004		0.014	0.02	0.32	14	0.08	0.76	13	<0.5
M401005		0.008	0.07	0.41	31	0.12	1.61	35	<0.5
M401006		0.008	0.04	0.24	12	0.05	0.47	10	<0.5
M401007		0.014	0.05	0.45	44	0.15	1.39	39	<0.5
M401008		0.014	0.02	0.34	11	0.06	0.65	7	<0.5
M401009		0.005	0.04	0.44	18	0.11	1.40	30	<0.5
M401010		0.007	0.03	0.31	11	0.05	0.76	8	<0.5
M401011		0.008	0.07	0.43	21	0.15	1.75	44	0.7
M401012		0.008	0.06	0.31	16	0.08	1.04	13	1.2
M401013		0.008	0.07	0.48	35	0.20	1.87	48	2.3
M401014		0.006	0.06	0.47	24	0.15	1.62	19	1.7
M401015		<0.005	0.07	0.88	17	0.15	4.58	80	1.2
M401016		<0.005	0.06	0.62	17	0.14	3.81	90	1.0
M401017		<0.005	0.06	0.46	21	0.15	2.44	68	1.5
M401018		0.006	0.07	0.60	22	0.06	3.66	84	2.0
M401019		0.015	0.03	0.31	13	0.06	0.83	15	0.5
M401020		<0.005	0.04	0.51	14	0.16	3.86	70	0.9
M401021		<0.005	0.06	0.90	17	0.21	5.29	91	1.1
M401022		<0.005	0.04	0.58	17	0.19	3.56	83	1.1
M401023		<0.005	0.07	1.21	16	0.11	4.64	85	1.9
M401024		0.008	0.09	0.59	26	0.13	1.95	44	<0.5
M401025		<0.005	0.08	0.32	17	0.07	1.44	14	<0.5
M401026		0.005	0.08	0.77	17	0.13	1.98	32	0.7
M401027		0.006	0.08	0.61	26	0.14	2.11	68	1.6
M401028		<0.005	0.07	0.32	27	0.11	1.06	21	<0.5
M401029		0.006	0.07	0.33	16	0.13	1.02	18	<0.5
M401030		<0.005	0.05	0.76	16	0.24	4.38	84	1.0
M401031		<0.005	0.04	1.40	16	0.18	4.13	81	1.2
M401032		0.005	0.06	1.37	15	0.15	4.44	71	2.4
M401033		0.006	0.08	0.96	15	0.12	5.32	82	3.0
M401034		0.006	0.06	0.74	15	0.14	3.58	63	1.1
M401035		<0.005	0.10	1.01	21	0.10	5.50	113	1.2
M401036		0.006	0.10	0.34	18	0.12	1.10	28	<0.5
M401037		0.008	0.07	0.72	13	<0.05	11.05	48	1.3
M401038		0.007	0.02	0.33	11	0.05	1.36	23	<0.5
M401039		0.006	0.09	2.85	15	0.11	4.39	63	2.3
M401040		<0.005	0.10	1.21	16	<0.05	13.85	105	4.5



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401041		0.50	0.0014	0.13	0.80	17.2	<0.2	<10	110	0.22	0.32	0.80	0.26	24.7	9.0	12
M401042		0.57	0.0034	0.12	1.50	22.0	<0.2	<10	130	0.44	0.33	0.68	0.21	41.9	14.0	19
M401043		0.55	0.0013	0.09	1.89	16.4	<0.2	<10	50	0.18	0.24	0.01	0.05	36.5	7.5	21
M401044		0.49	0.0026	0.11	2.02	16.0	<0.2	<10	70	0.33	0.26	0.02	0.09	38.6	7.1	20
M401045		0.53	0.0031	0.09	2.10	29.1	<0.2	<10	80	0.41	0.34	0.02	0.12	42.0	11.7	24
M401046		0.45	0.0036	0.15	1.53	27.3	<0.2	<10	120	0.57	0.38	1.01	0.26	28.4	12.2	19
M401047		0.56	0.0008	0.04	1.65	14.6	<0.2	<10	120	0.34	0.22	0.12	0.16	32.5	7.9	17
M401048		0.44	0.0021	0.11	1.47	16.5	<0.2	<10	90	0.63	0.18	1.28	0.25	45.7	8.5	13
M401049		0.49	0.0028	0.15	3.64	37.5	<0.2	<10	130	1.55	0.28	0.18	0.29	46.0	14.5	30
M401050		0.49	0.0060	0.04	1.63	25.4	<0.2	<10	70	0.27	0.27	0.02	0.04	35.3	7.1	19
M401051		0.37	0.0018	0.06	1.93	22.7	<0.2	<10	130	0.61	0.31	0.95	0.28	31.2	8.9	17
M401052		0.42	0.0007	0.05	1.12	31.5	<0.2	<10	140	0.67	0.36	2.90	0.23	69.6	12.4	10
M401053		0.35	0.0006	0.06	1.62	23.7	<0.2	<10	290	0.65	0.39	0.74	0.55	44.9	19.2	18
M401054		0.37	0.0004	0.02	0.56	2.6	<0.2	<10	40	0.11	0.05	0.34	0.07	8.67	2.1	2
M401055		0.58	0.0008	0.13	2.04	11.3	<0.2	<10	210	0.52	0.28	0.48	0.14	35.9	9.2	20
M401056		0.33	0.0013	0.05	1.82	11.4	<0.2	<10	180	0.39	0.22	0.65	0.16	27.5	9.5	20
M401057		0.44	0.0010	0.03	1.82	12.2	<0.2	<10	160	0.38	0.22	0.34	0.13	32.8	9.3	18
M401058		0.40	0.0017	0.05	1.08	14.5	<0.2	<10	100	0.32	0.23	0.58	0.15	26.0	10.2	13
M401059		0.49	0.0014	0.04	1.68	16.8	<0.2	<10	200	0.59	0.32	0.41	0.17	39.6	13.6	20
M401060		0.47	0.0007	0.03	0.84	6.9	<0.2	<10	60	0.48	0.21	0.27	0.17	30.6	9.6	14
M401061		0.47	0.0020	0.11	1.30	17.3	<0.2	<10	70	0.46	0.47	0.89	0.47	40.8	17.7	21
M401062		0.44	0.0006	0.07	0.73	1.1	<0.2	<10	30	0.07	0.07	0.03	0.04	28.8	0.9	6
M401063		0.60	0.0010	0.12	1.41	22.4	<0.2	<10	70	0.32	0.31	0.27	0.44	26.8	9.4	17
M401064		0.49	0.0025	0.25	1.45	12.7	<0.2	<10	140	0.64	0.22	0.89	0.77	22.7	10.2	15
M401065		0.44	0.0118	0.18	1.69	14.1	<0.2	<10	160	0.60	0.23	0.75	0.57	25.7	11.5	17
M401066		0.55	0.0044	0.08	1.80	16.9	<0.2	<10	100	0.58	0.31	0.22	0.15	44.9	14.8	25
M401067		0.55	0.0071	0.12	1.78	13.8	<0.2	<10	140	0.60	0.27	0.66	0.08	32.3	11.6	23
M401068		0.57	0.0004	0.04	1.94	9.5	<0.2	<10	150	0.34	0.20	0.35	0.06	36.2	8.3	18
M401069		0.54	0.0007	0.03	1.60	34.1	<0.2	<10	100	0.36	0.16	0.03	0.06	32.1	7.7	15
M401070		0.47	0.0021	0.08	1.48	12.1	<0.2	<10	110	0.48	0.27	0.47	0.10	30.4	13.2	20
M401071		0.45	0.0009	0.11	1.12	14.9	<0.2	<10	30	0.46	0.33	0.90	0.26	48.2	15.8	17
M401072		0.39	0.0018	0.07	1.43	16.2	<0.2	<10	90	0.38	0.28	0.18	0.23	38.2	8.5	21
M401073		0.50	0.0026	0.04	0.74	6.2	<0.2	<10	30	0.09	0.17	0.02	0.04	36.2	4.1	10
M401074		0.49	0.0012	0.04	1.32	13.0	<0.2	<10	60	0.21	0.31	0.01	0.04	41.6	7.5	19
M401075		0.59	0.0017	0.02	1.29	9.0	<0.2	<10	110	0.22	0.23	0.04	0.12	41.3	6.7	16
M401076		0.48	0.0021	0.11	1.79	13.4	<0.2	<10	130	0.49	0.27	0.09	0.41	37.4	13.7	23
M401077		0.38	0.0005	0.35	1.88	8.6	<0.2	<10	170	0.87	0.28	0.52	1.14	31.0	10.7	16
M401078		0.44	0.0012	0.10	1.05	11.6	<0.2	<10	130	0.29	0.21	0.21	0.81	29.3	10.6	12
M401079		0.45	0.0016	0.11	2.02	14.0	<0.2	<10	100	0.42	0.28	0.03	0.48	39.9	10.5	25
M401080		0.42	0.0028	0.25	3.16	11.5	<0.2	<10	140	2.90	0.24	0.41	1.72	36.9	23.0	23



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401041		0.52	21.4	2.39	3.26	<0.05	0.05	0.05	0.018	0.04	12.3	14.8	0.26	196	2.84	<0.01
M401042		0.37	33.5	3.45	3.67	0.05	0.07	0.06	0.026	0.05	21.1	40.8	0.58	318	2.43	0.01
M401043		1.21	13.0	4.20	6.21	0.05	0.06	0.04	0.018	0.04	17.0	35.0	0.39	189	0.59	<0.01
M401044		2.26	18.4	3.83	5.85	0.05	0.08	0.06	0.025	0.04	19.2	43.7	0.30	200	0.75	0.01
M401045		1.27	30.3	4.73	5.21	0.05	0.08	0.05	0.030	0.05	21.3	50.5	0.49	299	0.61	<0.01
M401046		3.61	35.8	2.77	4.01	0.05	0.07	0.05	0.028	0.06	14.4	34.7	0.38	490	0.73	0.01
M401047		0.88	14.5	3.04	4.54	<0.05	0.09	0.03	0.018	0.04	15.2	37.1	0.32	206	1.07	0.01
M401048		0.58	19.5	2.65	2.44	0.05	0.13	0.05	0.026	0.03	16.9	25.3	0.30	321	1.62	0.01
M401049		1.02	15.8	5.01	4.55	0.06	0.19	0.05	0.049	0.04	18.9	41.8	0.24	2920	3.67	0.01
M401050		0.80	11.8	3.60	5.32	<0.05	0.04	0.03	0.018	0.04	16.6	38.4	0.34	217	1.01	<0.01
M401051		0.98	14.5	4.04	3.92	<0.05	0.09	0.04	0.044	0.04	13.8	26.9	0.21	243	1.29	0.01
M401052		0.73	20.3	3.56	2.21	0.05	0.08	0.03	0.061	0.03	30.4	17.9	0.24	153	1.98	<0.01
M401053		0.85	24.0	3.85	4.64	0.05	0.04	0.04	0.061	0.04	17.9	18.5	0.20	756	1.13	0.01
M401054		0.20	6.4	0.55	1.85	<0.05	0.02	0.03	0.006	0.02	4.0	1.6	0.02	105	0.26	0.02
M401055		1.13	20.7	2.87	5.11	<0.05	0.05	0.03	0.024	0.04	15.0	33.7	0.40	379	0.82	<0.01
M401056		0.95	13.4	2.72	4.91	<0.05	0.05	0.01	0.019	0.04	12.7	37.9	0.41	288	0.73	0.01
M401057		0.81	14.2	2.83	4.38	<0.05	0.06	0.02	0.021	0.04	15.1	38.4	0.36	199	0.72	0.01
M401058		0.59	15.3	2.45	2.92	<0.05	0.06	0.02	0.023	0.04	9.7	21.6	0.29	361	1.05	0.01
M401059		1.36	17.6	3.41	5.17	<0.05	0.04	0.04	0.026	0.05	19.3	41.8	0.36	314	1.13	0.01
M401060		0.60	19.6	3.16	2.27	0.05	0.04	0.05	0.029	0.02	12.0	19.6	0.28	1100	0.76	0.01
M401061		1.18	37.5	3.86	4.68	0.06	0.07	0.07	0.032	0.04	21.2	42.2	0.52	379	2.23	0.01
M401062		0.91	9.1	0.43	4.80	<0.05	<0.02	0.04	0.008	0.02	14.5	2.0	0.03	20	0.63	0.01
M401063		0.51	14.0	3.46	5.11	<0.05	0.03	0.04	0.022	0.03	12.2	9.4	0.12	454	2.47	0.01
M401064		1.01	43.7	2.35	4.01	<0.05	0.08	0.07	0.016	0.07	12.2	31.6	0.36	413	1.22	0.01
M401065		0.93	33.7	2.57	4.42	<0.05	0.11	0.05	0.015	0.08	12.4	39.5	0.39	994	1.03	0.02
M401066		0.87	30.9	3.61	5.11	0.05	0.06	0.04	0.015	0.10	22.9	53.5	0.64	595	0.62	0.01
M401067		0.81	25.6	3.29	4.87	<0.05	0.08	0.04	0.014	0.09	16.4	53.0	0.57	391	0.49	0.01
M401068		0.68	8.5	2.81	5.16	<0.05	0.06	0.03	0.017	0.04	17.9	41.8	0.36	186	0.58	0.01
M401069		0.63	11.1	2.60	4.09	<0.05	0.03	0.02	0.015	0.04	16.1	32.2	0.26	202	1.19	0.01
M401070		1.33	18.6	2.86	4.20	<0.05	0.08	0.05	0.019	0.05	14.8	39.2	0.48	526	1.22	<0.01
M401071		1.11	36.8	3.89	3.00	0.09	0.05	0.17	0.041	0.02	24.1	35.1	0.49	317	0.72	0.01
M401072		1.62	28.7	3.31	4.87	0.05	0.04	0.05	0.023	0.04	19.6	37.3	0.48	219	1.03	0.01
M401073		1.03	7.8	1.61	4.54	<0.05	<0.02	0.03	0.005	0.04	18.4	12.0	0.15	114	0.81	0.01
M401074		1.27	11.9	4.05	6.63	0.05	0.03	0.02	0.013	0.05	20.0	26.8	0.32	230	1.26	0.01
M401075		0.79	9.3	2.57	5.21	<0.05	0.03	0.02	0.013	0.03	20.3	27.1	0.27	209	1.07	0.01
M401076		1.29	19.9	4.02	5.33	0.05	0.03	0.03	0.021	0.06	18.6	50.7	0.51	378	0.92	0.01
M401077		1.11	31.6	3.31	3.29	<0.05	0.14	0.06	0.045	0.04	12.5	18.4	0.19	306	4.27	0.01
M401078		0.69	19.4	2.63	3.34	<0.05	0.03	0.06	0.015	0.04	13.8	21.1	0.27	338	6.06	0.01
M401079		1.05	16.4	4.35	5.16	0.05	0.06	0.04	0.020	0.08	18.9	39.7	0.44	315	1.19	0.01
M401080		1.93	43.8	3.35	4.01	0.06	0.14	0.08	0.025	0.06	19.0	59.0	0.31	419	1.21	0.01



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401041		0.16	17.2	540	18.9	4.6	0.001	0.02	1.16	1.5	0.5	0.2	49.1	<0.01	0.06	3.9
M401042		0.11	29.9	610	20.5	3.1	<0.001	0.03	0.87	2.5	0.8	0.2	73.6	<0.01	0.05	5.3
M401043		0.48	18.7	250	13.5	4.4	0.001	0.02	0.42	1.5	0.2	0.4	4.3	<0.01	0.03	5.1
M401044		0.46	18.5	310	21.6	6.6	0.001	0.02	0.40	1.6	0.3	0.4	4.7	<0.01	0.05	5.7
M401045		0.22	31.0	300	27.9	5.8	0.001	0.01	0.65	1.9	0.3	0.3	5.1	<0.01	0.05	6.3
M401046		0.31	26.3	970	22.5	5.5	<0.001	0.06	0.46	1.8	0.3	0.2	97.2	<0.01	0.04	1.9
M401047		0.22	17.4	170	14.9	5.7	<0.001	0.01	0.40	1.7	<0.2	0.3	11.5	<0.01	0.04	5.1
M401048		0.19	18.2	830	17.6	3.4	0.001	0.05	0.56	2.4	0.6	<0.2	77.9	<0.01	0.03	2.5
M401049		0.35	26.6	690	38.0	4.9	0.001	0.03	0.66	3.2	1.0	0.3	11.6	0.01	0.06	4.8
M401050		0.26	17.2	130	13.3	4.8	<0.001	0.01	0.44	1.3	<0.2	0.3	3.3	<0.01	0.06	5.6
M401051		0.39	16.5	510	27.6	6.2	<0.001	0.04	0.65	2.3	0.4	0.3	66.9	<0.01	0.05	2.5
M401052		0.09	21.9	410	27.6	4.8	<0.001	0.03	0.96	4.1	0.5	0.3	404	<0.01	0.04	2.8
M401053		0.63	21.9	680	27.3	7.1	<0.001	0.03	0.58	3.4	0.5	0.5	113.0	<0.01	0.07	2.2
M401054		0.31	2.6	340	3.5	1.4	<0.001	0.02	0.12	0.5	<0.2	<0.2	44.2	<0.01	0.01	0.4
M401055		0.36	20.0	400	14.9	6.8	<0.001	0.02	0.30	2.0	<0.2	0.4	44.6	<0.01	0.05	3.3
M401056		0.30	21.2	260	12.9	5.2	0.001	0.02	0.30	1.7	0.3	0.3	54.6	<0.01	0.06	3.4
M401057		0.28	20.9	170	12.4	6.3	<0.001	0.02	0.36	1.7	<0.2	0.3	48.2	<0.01	0.04	4.5
M401058		0.18	17.9	430	13.2	3.9	<0.001	0.02	0.46	1.8	0.2	0.2	66.3	<0.01	0.03	3.2
M401059		0.29	26.1	190	20.0	8.8	0.001	0.02	0.50	2.2	0.2	0.4	59.1	<0.01	0.05	5.5
M401060		0.09	17.0	390	18.9	2.1	<0.001	0.03	0.40	2.2	0.5	<0.2	38.0	<0.01	0.01	2.9
M401061		0.25	31.0	850	28.9	4.1	0.001	0.04	0.84	2.1	0.8	0.2	108.0	<0.01	0.09	5.8
M401062		0.14	2.0	250	6.4	3.2	<0.001	0.02	0.11	0.6	<0.2	0.3	5.9	<0.01	0.04	1.6
M401063		0.36	10.4	480	24.1	3.0	<0.001	0.03	0.68	1.3	0.5	0.4	30.0	0.01	0.05	3.1
M401064		0.24	27.7	630	12.8	6.2	0.002	0.06	0.54	1.5	1.3	0.2	112.0	<0.01	0.04	2.3
M401065		0.30	27.3	610	16.5	6.0	0.003	0.07	0.46	1.6	2.0	0.2	116.5	<0.01	0.03	3.0
M401066		0.06	31.7	470	19.2	5.1	0.001	0.02	0.48	2.2	0.3	0.2	36.3	<0.01	0.02	9.5
M401067		0.10	29.0	330	14.2	5.9	0.001	0.04	0.45	2.0	0.5	0.2	87.8	<0.01	0.03	5.4
M401068		0.28	18.4	180	13.6	5.9	0.001	0.02	0.23	1.6	<0.2	0.3	49.7	<0.01	0.01	5.5
M401069		0.19	16.9	140	13.4	4.3	<0.001	0.02	0.31	1.1	<0.2	0.3	5.2	<0.01	0.03	4.6
M401070		0.20	26.0	490	19.6	5.9	0.001	0.03	0.43	2.2	0.4	0.2	57.7	<0.01	0.03	3.5
M401071		0.06	35.0	1890	25.4	2.5	0.001	0.05	0.47	4.1	0.6	0.2	96.9	<0.01	0.05	5.5
M401072		0.30	22.2	800	23.7	4.9	0.001	0.03	0.35	2.3	0.7	0.3	35.9	<0.01	0.04	4.1
M401073		0.15	8.1	210	6.6	6.1	0.001	0.02	0.26	0.7	<0.2	0.3	5.1	<0.01	0.03	2.9
M401074		0.36	15.1	190	10.5	6.7	<0.001	0.02	0.44	1.1	<0.2	0.3	4.6	<0.01	0.05	6.4
M401075		0.25	13.9	120	11.8	5.1	<0.001	0.01	0.42	1.3	<0.2	0.3	6.0	<0.01	0.03	5.9
M401076		0.19	28.4	220	13.5	7.1	<0.001	0.02	0.42	1.6	<0.2	0.3	20.0	<0.01	0.03	6.4
M401077		0.23	29.7	410	18.8	6.8	0.001	0.03	0.74	2.6	0.5	0.3	33.4	0.01	0.04	4.7
M401078		0.17	23.6	310	14.5	5.8	<0.001	0.02	1.84	1.1	0.4	0.3	26.0	<0.01	0.02	2.5
M401079		0.22	24.4	250	20.6	8.1	0.001	0.02	0.64	1.7	0.5	0.2	5.2	<0.01	0.02	6.7
M401080		0.35	120.0	620	18.1	6.5	0.002	0.06	0.43	3.3	2.6	0.3	81.0	0.01	0.02	5.0



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - D
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401041		<0.005	0.08	1.11	20	0.06	3.51	95	2.4
M401042		<0.005	0.06	2.85	17	0.09	8.01	96	3.0
M401043		<0.005	0.08	0.46	25	0.19	2.01	52	2.4
M401044		<0.005	0.12	0.53	25	0.19	2.25	54	3.1
M401045		<0.005	0.07	0.45	18	0.22	2.96	72	3.1
M401046		0.007	0.06	4.01	16	0.13	8.19	72	2.1
M401047		<0.005	0.07	0.49	21	0.16	3.30	54	3.4
M401048		<0.005	0.06	2.09	12	0.07	13.80	41	3.6
M401049		<0.005	0.06	2.32	22	0.19	15.15	50	5.6
M401050		<0.005	0.07	0.38	24	0.23	1.63	45	2.1
M401051		<0.005	0.07	1.46	26	0.16	6.22	52	2.8
M401052		<0.005	0.08	2.04	16	<0.05	9.93	60	2.6
M401053		0.009	0.07	2.29	38	0.12	8.97	92	1.4
M401054		0.015	0.02	0.46	10	<0.05	1.90	14	1.0
M401055		0.005	0.08	1.02	27	0.15	4.60	58	1.6
M401056		0.005	0.06	0.67	25	0.16	2.50	52	1.8
M401057		<0.005	0.05	0.63	21	0.16	3.11	53	2.7
M401058		0.005	0.06	0.99	16	0.09	3.47	57	2.4
M401059		<0.005	0.08	0.94	27	0.15	4.26	71	2.0
M401060		<0.005	0.04	0.61	10	<0.05	6.56	50	1.4
M401061		0.007	0.09	1.53	23	0.07	6.52	105	3.4
M401062		0.006	0.08	0.52	16	<0.05	1.23	8	<0.5
M401063		0.007	0.07	0.75	33	0.15	3.70	66	1.1
M401064		0.005	0.09	5.27	14	0.17	10.20	98	3.6
M401065		0.008	0.06	8.58	14	0.18	6.09	100	4.2
M401066		<0.005	0.05	1.09	16	0.20	5.32	95	3.8
M401067		<0.005	0.03	1.76	15	0.20	5.47	73	3.0
M401068		<0.005	0.06	0.72	22	0.11	2.70	41	3.1
M401069		<0.005	0.05	0.35	17	0.11	1.78	44	1.8
M401070		0.005	0.06	1.61	16	0.14	8.41	61	2.5
M401071		<0.005	0.05	0.61	11	<0.05	15.00	98	1.5
M401072		0.007	0.05	1.41	21	0.09	8.21	54	1.6
M401073		0.005	0.07	0.35	18	0.10	1.54	27	<0.5
M401074		0.005	0.09	0.55	26	0.19	1.74	50	1.8
M401075		0.005	0.09	0.46	30	0.13	1.94	50	1.9
M401076		<0.005	0.08	0.60	19	0.19	3.77	83	1.7
M401077		<0.005	0.20	1.34	65	<0.05	12.20	161	8.3
M401078		<0.005	0.13	0.87	17	0.09	4.29	87	1.9
M401079		<0.005	0.10	0.55	23	0.18	2.51	105	3.0
M401080		0.005	0.30	5.77	17	0.14	41.7	340	4.7

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401081		0.44	0.0004	0.06	0.89	9.8	<0.2	<10	40	0.17	0.14	0.03	0.17	23.5	3.6	9
M401082		0.51	0.0017	0.19	2.46	9.0	<0.2	<10	120	0.54	0.24	0.02	0.29	39.6	7.8	20
M401083		0.46	0.0015	0.29	1.13	32.7	<0.2	<10	70	0.12	0.25	0.02	0.13	29.8	2.8	9
M401084		0.66	0.0064	0.06	1.05	11.6	<0.2	<10	50	0.09	0.26	0.04	0.13	34.3	5.0	18
M401085		0.34	0.0029	0.32	2.15	26.1	<0.2	<10	210	0.82	0.31	1.15	1.57	25.8	14.4	23
M401086		0.57	0.0032	0.15	1.56	13.6	<0.2	<10	170	0.45	0.27	0.37	0.42	36.0	12.3	21
M401087		0.54	0.0026	0.10	1.22	14.5	<0.2	<10	80	0.34	0.15	0.04	0.52	34.3	7.5	12
M401088		0.32	0.0010	0.05	0.91	12.7	<0.2	<10	140	0.17	0.24	0.25	0.42	32.3	6.0	12
M401089		0.41	0.0012	0.20	1.67	14.7	<0.2	<10	150	0.39	0.22	0.04	0.54	31.6	10.7	25
M401090		0.44	0.0007	0.34	0.74	11.9	<0.2	<10	60	0.17	0.11	0.05	0.51	16.85	10.3	16
M401091		0.56	0.0026	0.30	1.37	10.0	<0.2	<10	150	0.46	0.21	0.79	1.13	24.6	10.0	17
M401092		0.55	0.0017	0.27	1.53	16.3	<0.2	<10	190	0.55	0.28	1.34	1.73	25.3	16.2	18
M401093		0.64	0.0033	0.08	1.38	12.6	<0.2	<10	90	0.48	0.27	0.27	0.29	41.6	14.6	22
M401094		0.45	0.0014	0.25	1.55	8.5	<0.2	<10	200	0.57	0.24	0.48	0.41	24.0	13.9	18
M401095		0.44	0.0013	0.11	1.38	10.1	<0.2	<10	100	0.50	0.32	0.60	0.39	30.0	12.0	19
M401096		0.47	0.0009	0.09	1.06	15.0	<0.2	<10	40	0.26	0.27	0.01	0.09	34.8	7.3	12
M401097		0.49	NSS	0.71	1.19	9.0	<0.2	<10	60	0.22	0.20	0.03	0.10	31.2	5.5	13
M401098		0.44	0.0024	0.09	1.29	20.9	<0.2	<10	90	0.31	0.31	0.02	0.08	51.6	6.4	12
M401099		0.51	0.0075	0.24	1.34	12.5	<0.2	<10	120	0.68	0.28	1.54	0.59	29.2	18.3	16
M401100		0.56	0.0034	0.04	1.42	14.1	<0.2	<10	60	0.52	0.30	0.15	0.04	57.3	12.2	20
M401101		0.80	0.0013	0.04	1.28	13.4	<0.2	<10	100	0.19	0.33	0.02	0.06	41.1	5.2	14
M401102		0.68	0.0010	0.05	1.15	19.4	<0.2	<10	90	0.19	0.35	0.02	0.10	37.3	7.6	13
M401103		0.69	0.0015	0.05	0.62	6.1	<0.2	<10	80	0.25	0.18	0.02	0.03	27.7	2.4	7
M401104		0.63	0.0005	0.08	0.98	3.4	<0.2	<10	40	0.39	0.22	0.02	0.07	19.85	4.2	9
M401105		0.68	0.0010	0.05	0.90	12.7	<0.2	<10	40	0.14	0.29	0.01	0.04	37.5	2.7	9
M401106		0.72	0.0026	0.16	0.88	21.2	<0.2	<10	40	0.17	0.39	0.01	0.06	38.2	5.6	11
M401107		0.60	0.0018	0.06	0.78	10.1	<0.2	<10	40	0.09	0.28	0.02	0.02	44.5	2.1	8
M401108		0.63	0.0012	0.08	1.16	22.8	<0.2	<10	60	0.17	0.38	0.01	0.08	27.7	5.3	18
M401109		0.67	0.0024	0.06	0.66	6.8	<0.2	<10	30	0.13	0.16	0.02	0.06	18.00	1.4	8
M401110		0.61	0.0006	0.06	0.98	24.2	<0.2	<10	40	0.14	0.45	0.02	0.03	13.00	3.9	11
M401111		0.62	0.0009	0.04	1.14	4.8	<0.2	<10	80	0.17	0.22	0.03	0.05	28.7	3.3	12
M401112		0.76	0.0037	0.04	2.62	19.4	<0.2	<10	190	0.63	0.35	0.01	0.11	38.2	10.6	26
M401113		0.72	0.0010	0.05	1.67	8.5	<0.2	<10	120	0.50	0.60	0.02	0.08	11.30	6.4	17
M401114		0.64	0.0016	0.04	1.90	16.6	<0.2	<10	90	0.23	0.35	0.01	0.08	28.5	8.8	24
M401115		0.69	0.0029	0.10	2.22	11.8	<0.2	<10	120	0.41	0.28	0.02	0.09	26.9	10.6	23
M401116		0.71	0.0013	0.43	1.84	16.8	<0.2	<10	110	0.39	0.31	0.01	0.10	46.2	9.0	22
M401117		0.61	0.0007	0.30	1.59	40.4	<0.2	<10	90	0.52	0.63	0.03	0.09	10.25	13.1	26
M401118		0.79	0.0010	0.11	1.56	14.7	<0.2	<10	120	0.29	0.32	0.01	0.06	45.2	5.9	18
M401119		0.67	0.0013	0.07	1.36	11.3	<0.2	<10	100	0.19	0.22	0.01	0.05	39.1	4.4	15
M401120		0.62	0.0012	0.07	1.71	18.0	<0.2	<10	130	0.68	0.31	0.02	0.09	30.8	9.7	18



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401081		0.49	11.3	2.83	3.27	<0.05	0.02	0.03	0.014	0.02	11.9	7.3	0.05	116	3.23	0.01
M401082		1.21	21.9	3.24	5.30	0.05	0.12	0.05	0.025	0.06	19.1	38.0	0.35	159	1.00	0.01
M401083		1.59	18.3	2.61	6.40	<0.05	0.02	0.04	0.012	0.04	16.0	5.1	0.10	34	27.6	0.01
M401084		0.69	8.0	2.24	5.78	0.05	<0.02	0.02	0.011	0.04	17.2	14.3	0.28	188	2.11	0.01
M401085		1.70	28.4	3.79	4.28	<0.05	0.32	0.08	0.028	0.10	12.2	39.2	0.43	3130	5.21	0.01
M401086		0.73	24.8	3.11	4.27	0.06	0.09	0.05	0.016	0.08	17.8	40.7	0.54	442	1.17	0.01
M401087		0.50	12.9	2.91	3.15	<0.05	0.04	0.05	0.013	0.04	16.2	13.3	0.13	412	2.26	<0.01
M401088		0.43	10.6	2.60	4.00	<0.05	0.03	0.02	0.012	0.05	16.1	18.6	0.23	183	1.50	0.01
M401089		0.86	19.3	4.88	4.14	0.05	0.05	0.05	0.026	0.06	16.2	27.3	0.28	293	1.49	0.01
M401090		0.85	41.8	4.22	2.63	<0.05	<0.02	0.04	0.022	0.04	8.5	8.2	0.15	141	2.62	0.01
M401091		0.99	36.0	2.70	3.54	0.05	0.06	0.07	0.015	0.08	13.5	30.0	0.37	398	1.18	0.01
M401092		1.23	38.9	3.10	3.57	<0.05	0.12	0.09	0.023	0.09	13.0	26.8	0.42	910	2.07	0.01
M401093		0.65	27.9	3.14	3.89	0.05	0.07	0.03	0.012	0.07	20.1	39.8	0.52	596	1.12	0.01
M401094		1.75	36.2	2.42	4.79	<0.05	0.04	0.05	0.020	0.09	12.7	27.9	0.33	799	1.03	0.02
M401095		1.25	25.5	3.00	3.71	<0.05	0.08	0.03	0.017	0.06	14.2	40.5	0.47	368	1.94	0.01
M401096		0.83	14.0	2.71	5.74	<0.05	0.02	0.01	0.013	0.03	16.3	14.5	0.15	202	0.98	0.01
M401097		1.34	13.1	2.27	4.84	<0.05	0.02	0.03	0.016	0.03	15.6	22.4	0.22	136	0.84	<0.01
M401098		0.71	15.7	3.00	5.63	0.05	0.02	0.02	0.018	0.03	25.9	15.1	0.16	195	0.69	<0.01
M401099		1.43	47.6	2.40	3.21	0.05	0.08	0.08	0.018	0.06	12.5	29.5	0.37	914	0.83	0.01
M401100		0.67	17.7	3.17	4.13	0.07	0.08	0.01	0.011	0.06	26.3	45.8	0.51	509	0.29	<0.01
M401101		1.42	17.0	2.73	5.43	<0.05	0.02	0.01	0.014	0.06	20.0	12.6	0.20	166	1.76	<0.01
M401102		1.35	16.3	3.42	4.98	0.05	0.03	0.02	0.018	0.07	18.8	9.6	0.15	306	2.32	<0.01
M401103		1.53	10.1	1.07	3.55	<0.05	<0.02	<0.01	0.006	0.04	13.1	1.8	0.04	82	1.32	<0.01
M401104		1.32	17.3	1.71	4.47	<0.05	<0.02	0.03	0.012	0.02	9.0	5.0	0.06	360	1.14	0.01
M401105		1.21	11.7	2.31	6.72	<0.05	<0.02	0.02	0.008	0.03	18.5	6.3	0.09	64	1.17	<0.01
M401106		0.94	17.4	3.39	7.20	<0.05	<0.02	0.01	0.014	0.03	18.2	5.4	0.08	236	2.42	<0.01
M401107		0.67	6.4	1.39	6.62	<0.05	<0.02	0.01	0.007	0.03	21.7	4.5	0.08	70	1.43	<0.01
M401108		2.00	17.8	3.77	5.98	<0.05	0.02	0.02	0.015	0.04	13.2	12.9	0.19	164	3.23	<0.01
M401109		3.14	10.5	0.80	4.26	<0.05	<0.02	0.01	0.007	0.03	8.5	3.9	0.06	77	0.92	<0.01
M401110		2.46	9.2	3.08	10.70	<0.05	0.02	0.01	0.012	0.03	5.6	6.3	0.09	538	1.59	<0.01
M401111		1.60	7.8	1.47	6.34	<0.05	<0.02	0.01	0.009	0.03	12.9	8.6	0.14	131	2.40	<0.01
M401112		2.37	27.5	4.16	5.54	0.05	0.18	0.02	0.023	0.07	19.2	53.1	0.47	224	1.72	<0.01
M401113		2.79	25.1	3.68	8.44	<0.05	0.04	0.02	0.018	0.08	5.4	21.9	0.28	373	4.59	0.01
M401114		1.24	17.8	4.08	6.64	<0.05	0.05	0.01	0.016	0.06	13.1	40.9	0.48	472	1.23	<0.01
M401115		1.86	14.1	3.45	5.57	<0.05	0.08	0.03	0.020	0.05	12.8	39.9	0.33	240	1.24	<0.01
M401116		1.95	18.7	3.90	5.78	0.05	0.08	0.02	0.021	0.06	21.4	33.7	0.31	233	2.21	<0.01
M401117		1.92	30.9	3.96	7.45	<0.05	0.04	0.03	0.019	0.04	4.8	31.2	0.36	1360	2.01	0.01
M401118		1.10	13.1	2.99	5.58	<0.05	0.05	0.01	0.014	0.04	20.9	25.0	0.26	273	2.38	<0.01
M401119		1.22	9.4	2.28	5.31	<0.05	0.02	0.01	0.011	0.06	17.9	15.7	0.24	119	1.84	<0.01
M401120		2.04	38.7	2.78	5.58	<0.05	0.05	0.02	0.021	0.08	14.1	29.1	0.31	238	2.40	0.01



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401081		0.22	11.0	380	13.9	3.8	0.001	0.02	0.57	0.8	0.4	0.2	5.0	<0.01	0.01	3.1
M401082		0.38	20.6	270	20.9	7.4	<0.001	0.02	0.34	1.9	0.8	0.3	5.5	<0.01	0.01	6.5
M401083		0.26	8.9	280	9.9	9.6	0.001	0.02	1.89	1.1	0.8	0.5	4.1	<0.01	0.04	4.5
M401084		0.78	11.5	200	10.6	6.9	<0.001	0.01	0.45	1.3	<0.2	0.4	4.6	<0.01	0.02	3.9
M401085		0.22	35.6	2060	17.1	10.1	0.004	0.14	0.90	3.0	2.3	0.3	137.5	<0.01	0.03	4.0
M401086		0.11	28.3	480	14.5	5.1	0.002	0.03	0.42	1.8	0.7	0.2	43.2	<0.01	0.02	5.6
M401087		0.16	16.3	410	11.6	4.2	0.001	0.02	0.75	2.0	1.3	0.2	6.6	<0.01	0.02	5.0
M401088		0.18	12.6	170	9.1	4.3	<0.001	0.02	0.44	0.9	<0.2	0.2	28.1	<0.01	0.02	4.4
M401089		0.21	25.4	440	17.2	7.7	<0.001	0.02	1.34	2.0	0.7	0.2	6.3	<0.01	0.02	5.3
M401090		0.11	34.9	1230	12.3	5.5	0.001	0.03	2.94	1.5	1.9	0.2	7.0	<0.01	0.02	1.6
M401091		0.16	29.4	730	13.4	5.8	0.002	0.05	0.63	2.6	1.3	0.2	72.7	<0.01	0.03	2.5
M401092		0.16	34.6	1020	25.3	7.2	0.002	0.08	0.82	2.3	1.8	0.2	116.0	<0.01	0.03	2.1
M401093		0.08	29.6	460	17.9	3.9	0.001	0.02	0.42	1.8	0.3	0.2	32.6	<0.01	0.02	7.7
M401094		0.31	21.9	450	22.9	11.4	0.001	0.03	0.30	2.1	0.7	0.2	96.5	<0.01	0.04	3.3
M401095		0.20	28.9	420	17.9	6.9	0.001	0.02	0.75	1.5	0.7	0.2	84.4	<0.01	0.09	4.6
M401096		0.33	12.8	470	11.7	4.8	<0.001	0.01	0.40	0.9	<0.2	0.3	4.2	<0.01	0.06	3.2
M401097		0.42	11.8	280	15.4	6.8	<0.001	0.01	0.29	0.8	<0.2	0.3	8.2	<0.01	0.07	3.4
M401098		0.19	13.3	220	16.0	3.8	<0.001	<0.01	0.39	1.3	<0.2	0.5	5.5	<0.01	0.04	6.4
M401099		0.22	32.5	890	20.0	5.2	<0.001	0.07	0.47	1.8	1.2	0.2	227	<0.01	0.01	1.4
M401100		0.10	26.9	250	18.1	4.1	<0.001	<0.01	0.34	1.7	<0.2	0.2	26.6	<0.01	0.01	9.6
M401101		0.33	12.0	320	10.4	7.7	<0.001	0.01	0.62	1.3	0.4	0.4	3.6	<0.01	0.03	4.3
M401102		0.41	14.3	490	16.3	9.0	<0.001	<0.01	0.94	1.3	0.4	0.4	6.1	<0.01	0.05	3.2
M401103		0.11	5.5	590	6.1	7.2	<0.001	0.01	0.37	0.3	<0.2	0.3	4.6	<0.01	0.03	0.4
M401104		0.31	4.2	740	19.1	3.0	<0.001	0.03	0.24	0.2	<0.2	0.3	4.7	<0.01	0.01	<0.2
M401105		0.41	6.5	320	8.3	3.7	<0.001	0.01	0.56	0.7	<0.2	0.4	3.7	<0.01	0.04	2.8
M401106		0.38	9.2	580	16.1	5.1	<0.001	0.01	0.91	1.1	0.3	0.4	3.9	<0.01	0.04	2.7
M401107		0.34	4.8	240	5.6	3.9	<0.001	<0.01	0.38	0.7	<0.2	0.4	4.0	<0.01	0.03	2.4
M401108		0.48	12.9	580	15.6	4.7	<0.001	0.02	1.12	1.0	0.7	0.4	6.7	<0.01	0.04	1.6
M401109		0.20	3.5	540	9.3	4.1	<0.001	0.01	0.19	0.3	0.2	0.4	7.9	<0.01	0.01	0.8
M401110		0.97	4.8	310	17.1	4.5	<0.001	0.01	0.32	0.9	<0.2	0.6	6.2	<0.01	0.03	4.2
M401111		0.27	6.6	170	5.0	5.3	<0.001	<0.01	0.32	1.2	0.2	0.5	5.3	<0.01	0.03	2.8
M401112		0.24	28.6	280	17.1	9.4	<0.001	0.01	0.78	2.2	0.6	0.3	5.1	<0.01	0.03	8.1
M401113		0.66	11.6	420	10.1	8.1	<0.001	0.01	0.52	1.5	0.2	0.5	5.3	<0.01	0.07	3.6
M401114		0.27	21.8	200	13.5	5.2	<0.001	<0.01	0.56	1.5	0.4	0.3	4.8	<0.01	0.02	5.8
M401115		0.34	23.6	400	18.3	7.1	<0.001	0.01	0.54	1.6	0.2	0.4	5.3	<0.01	0.01	6.0
M401116		0.28	18.2	350	15.1	8.2	<0.001	0.01	0.89	1.8	0.4	0.4	4.1	<0.01	0.03	7.4
M401117		0.31	17.6	1220	34.2	7.6	<0.001	0.03	0.68	0.9	0.2	0.6	7.7	<0.01	0.02	1.8
M401118		0.26	13.8	210	18.1	5.8	<0.001	<0.01	0.66	1.7	<0.2	0.5	5.2	<0.01	0.04	6.8
M401119		0.22	10.0	190	9.3	6.4	<0.001	<0.01	0.45	1.3	<0.2	0.3	4.4	<0.01	0.02	4.6
M401120		0.25	18.6	660	18.1	8.9	<0.001	0.02	0.80	1.4	0.4	0.4	6.9	<0.01	0.02	2.7



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401081		0.005	0.14	0.82	28	0.08	2.40	38	0.9
M401082		<0.005	0.15	0.80	21	0.15	3.30	70	6.1
M401083		0.005	0.60	0.60	38	0.07	1.64	62	1.4
M401084		0.020	0.10	0.44	34	0.16	1.81	51	0.5
M401085		0.005	0.18	13.55	18	0.15	14.55	195	9.9
M401086		<0.005	0.06	4.27	15	0.11	5.33	102	3.3
M401087		<0.005	0.07	0.58	18	0.09	5.51	49	2.5
M401088		0.005	0.05	0.49	19	0.10	1.96	53	1.3
M401089		<0.005	0.14	0.55	28	0.09	3.73	88	2.9
M401090		<0.005	0.24	0.51	28	<0.05	2.48	186	0.9
M401091		0.005	0.12	2.09	14	0.09	10.25	108	2.9
M401092		<0.005	0.13	7.65	16	0.09	12.20	202	3.9
M401093		<0.005	0.05	1.09	14	0.11	5.80	84	3.2
M401094		0.007	0.11	4.27	17	0.11	9.30	70	2.0
M401095		0.006	0.11	2.74	18	0.06	5.08	121	2.5
M401096		0.007	0.07	0.43	25	0.13	1.72	47	0.5
M401097		0.008	0.07	0.49	20	0.10	1.76	48	0.8
M401098		<0.005	0.08	0.31	31	0.09	2.51	36	1.0
M401099		0.006	0.08	4.16	13	0.09	13.00	59	1.8
M401100		<0.005	0.02	0.60	12	0.08	4.88	67	2.7
M401101		<0.005	0.10	0.46	32	0.13	1.75	47	0.6
M401102		0.005	0.12	0.48	26	0.14	1.97	56	0.7
M401103		<0.005	0.08	0.35	16	0.06	1.47	24	<0.5
M401104		0.010	0.03	0.46	18	0.08	1.67	15	<0.5
M401105		0.010	0.05	0.43	32	0.13	1.68	24	<0.5
M401106		0.008	0.09	0.40	35	0.12	1.77	38	<0.5
M401107		0.008	0.05	0.30	40	0.12	1.32	20	<0.5
M401108		0.007	0.09	0.58	41	0.14	1.82	53	<0.5
M401109		0.005	0.05	0.57	14	0.08	1.37	15	<0.5
M401110		0.010	0.05	0.52	33	0.10	2.03	22	0.7
M401111		0.005	0.07	0.45	38	0.08	1.61	22	<0.5
M401112		<0.005	0.10	0.68	29	0.15	2.93	84	6.6
M401113		0.006	0.07	0.63	39	0.16	1.91	53	1.0
M401114		<0.005	0.05	0.50	29	0.14	2.10	67	2.0
M401115		<0.005	0.07	0.66	31	0.14	2.06	79	2.8
M401116		<0.005	0.10	0.65	37	0.16	2.43	64	3.6
M401117		0.006	0.05	1.20	30	0.08	1.70	61	1.3
M401118		<0.005	0.10	0.56	42	0.09	2.38	50	2.3
M401119		<0.005	0.09	0.48	32	0.11	1.79	38	0.8
M401120		<0.005	0.14	1.20	32	0.16	3.00	68	1.4



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401121		1.32	0.0021	0.08	0.83	3.7	<0.2	<10	40	0.27	0.15	0.02	0.04	9.97	1.1	7
M401122		0.72	0.0021	0.05	0.83	3.0	<0.2	<10	80	0.23	0.54	0.02	0.03	27.1	1.8	9
M401123		0.69	0.0012	0.10	1.07	3.3	<0.2	<10	180	1.28	0.29	0.11	0.07	28.4	8.3	14
M401124		0.72	0.0037	0.07	1.44	12.6	<0.2	<10	100	0.65	0.32	0.09	0.08	34.0	11.2	21
M401125		0.65	0.0012	0.04	2.28	17.0	<0.2	<10	140	0.51	0.32	0.01	0.10	41.6	10.6	24
M401126		0.58	0.0003	0.07	1.23	6.3	<0.2	<10	60	0.29	0.79	0.02	0.05	16.15	3.5	12
M401127		0.56	0.0008	0.12	1.20	3.4	<0.2	<10	80	0.24	0.29	0.02	0.08	17.25	1.9	11
M401128		0.50	0.0023	0.26	3.19	7.1	<0.2	<10	150	1.26	0.37	0.03	0.07	22.5	3.1	24
M401129		0.61	0.0025	0.08	1.41	8.7	<0.2	<10	310	1.17	0.37	0.17	0.19	40.1	14.1	21
M401130		0.62	0.0020	0.19	1.51	7.8	<0.2	<10	200	0.81	0.28	1.08	0.19	18.65	9.1	15
M401131		0.60	0.0044	0.13	1.37	7.5	<0.2	<10	160	0.59	0.26	0.56	0.08	18.35	9.1	15
M401132		0.55	0.0027	0.08	1.42	14.5	<0.2	<10	190	0.52	0.31	0.19	0.10	29.4	10.1	17
M401133		0.72	0.0021	0.08	1.33	8.6	<0.2	<10	100	0.38	0.25	0.35	0.18	23.7	11.1	18
M401134		0.68	0.0033	0.11	1.56	8.6	<0.2	<10	170	0.80	0.37	0.13	0.14	35.9	17.7	22
M401135		0.69	0.0015	0.06	1.34	8.4	<0.2	<10	130	0.35	0.31	0.06	0.07	34.9	9.3	19
M401136		0.59	0.0035	0.05	1.87	12.0	<0.2	<10	110	0.50	0.34	0.01	0.07	35.3	10.7	21
M401137		0.66	0.0091	0.01	2.37	16.9	<0.2	<10	100	0.59	0.42	0.01	0.06	30.1	12.4	25
M401138		0.76	0.0006	0.01	1.17	10.9	<0.2	<10	150	0.19	0.21	0.02	0.03	33.7	3.9	12
M401139		0.65	0.0034	0.15	1.82	4.1	<0.2	<10	120	0.57	0.28	0.05	0.04	19.95	4.8	22
M401140		0.66	0.0019	0.05	2.53	13.3	<0.2	<10	120	0.74	0.34	0.02	0.08	32.4	8.5	21
M401141		0.70	0.0005	0.04	0.48	10.2	<0.2	<10	40	0.12	0.20	0.02	0.08	16.90	2.8	7
M401142		0.47	0.0008	0.02	1.25	10.6	<0.2	<10	80	0.15	0.29	0.01	0.03	37.7	4.2	12
M401143		0.47	0.0056	0.09	1.36	9.6	<0.2	<10	90	0.44	0.21	1.14	0.13	21.2	8.3	15
M401144		0.57	0.0075	0.19	1.42	9.4	<0.2	<10	200	0.54	0.25	0.86	0.91	23.4	12.2	17
M401145		0.62	0.0004	0.02	0.96	9.9	<0.2	<10	50	0.12	0.25	0.02	0.11	37.8	4.3	12
M401146		0.55	0.0010	0.29	1.75	7.4	<0.2	<10	680	1.11	0.22	1.78	1.17	43.4	14.2	19
M401147		0.73	0.0010	0.03	1.60	15.4	<0.2	<10	140	0.32	0.26	0.02	0.41	36.5	9.1	20
M401148		0.61	0.0013	0.04	1.73	13.3	<0.2	<10	90	0.34	0.30	0.10	0.22	38.8	10.0	21
M401149		0.56	0.0014	0.10	2.18	4.8	<0.2	<10	350	0.40	0.21	0.33	0.46	28.7	9.7	20
M401150		0.66	0.0012	0.07	1.77	4.6	<0.2	<10	260	0.26	0.19	0.05	0.14	44.3	4.6	12
M401151		0.60	0.0003	0.03	3.06	9.8	<0.2	<10	290	0.44	0.22	0.05	0.20	33.2	14.3	26
M401152		0.68	0.0036	0.15	2.80	15.8	<0.2	<10	180	0.41	0.26	0.01	0.23	37.9	9.6	27
M401153		0.62	0.0013	0.04	2.59	11.4	<0.2	<10	200	0.48	0.25	0.01	0.18	42.5	10.0	23
M401154		0.60	0.0018	0.02	1.57	6.7	<0.2	<10	90	0.26	0.23	0.11	0.03	43.8	8.4	20
M401155		0.66	0.0033	0.04	1.72	8.5	<0.2	<10	110	0.23	0.21	0.04	0.17	36.7	6.3	16
M401156		0.71	0.0162	0.03	1.85	7.4	<0.2	<10	130	0.25	0.23	0.02	0.07	36.9	5.4	16
M401157		0.63	0.0014	0.02	1.31	10.4	<0.2	<10	100	0.19	0.24	0.06	0.13	41.3	5.3	16
M401158		0.63	0.0001	0.08	2.60	9.9	<0.2	<10	350	0.60	0.12	0.20	0.31	30.6	20.5	22
M401159		0.56	0.0006	0.21	1.57	14.2	<0.2	<10	90	0.22	0.27	0.01	0.15	42.9	6.2	17
M401160		0.71	0.0004	0.03	1.12	5.6	<0.2	<10	70	0.11	0.20	0.01	0.08	45.9	2.7	9



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401121		1.63	26.9	0.67	3.82	<0.05	<0.02	0.01	0.011	0.03	4.8	2.0	0.04	31	1.09	0.01
M401122		1.67	16.9	1.13	7.30	<0.05	<0.02	<0.01	0.008	0.02	13.1	3.6	0.04	141	8.79	<0.01
M401123		2.85	56.2	1.54	3.67	<0.05	0.02	<0.01	0.009	0.04	13.6	20.6	0.27	607	1.11	<0.01
M401124		1.43	30.1	3.09	4.10	0.06	0.04	0.01	0.014	0.06	16.5	42.3	0.56	586	0.83	<0.01
M401125		2.27	24.9	3.74	5.15	0.05	0.09	0.01	0.023	0.06	19.3	54.3	0.50	229	1.53	<0.01
M401126		1.97	15.6	2.20	8.83	<0.05	<0.02	0.01	0.012	0.03	7.6	5.7	0.09	370	4.87	0.01
M401127		1.47	26.1	1.49	6.42	<0.05	<0.02	0.03	0.012	0.02	8.1	3.7	0.05	50	1.10	0.01
M401128		2.81	141.0	3.18	6.41	<0.05	0.08	0.08	0.044	0.03	10.4	23.0	0.16	94	1.46	0.01
M401129		1.40	44.8	3.19	3.76	0.06	0.04	0.02	0.013	0.07	17.7	41.4	0.58	807	1.01	0.01
M401130		1.51	37.2	2.33	3.70	<0.05	0.12	0.04	0.015	0.10	8.7	29.7	0.39	487	0.65	0.02
M401131		1.16	26.8	2.45	3.42	<0.05	0.06	0.04	0.012	0.08	9.4	29.8	0.38	535	0.64	0.02
M401132		0.89	27.3	2.87	3.80	<0.05	0.02	0.02	0.015	0.06	15.8	38.0	0.41	344	0.78	0.01
M401133		0.82	18.6	2.76	3.50	<0.05	0.06	0.02	0.014	0.06	12.3	40.4	0.51	308	0.99	0.01
M401134		1.06	39.9	3.58	4.00	<0.05	0.05	0.04	0.017	0.07	18.8	46.9	0.59	808	1.04	0.01
M401135		0.88	15.8	2.82	4.14	<0.05	0.02	0.01	0.012	0.06	19.2	39.9	0.47	332	0.81	0.01
M401136		1.20	20.6	3.85	6.26	<0.05	0.06	0.02	0.017	0.05	18.3	42.5	0.36	345	1.14	0.01
M401137		1.69	30.2	4.36	5.36	<0.05	0.09	0.02	0.022	0.08	15.7	57.7	0.50	354	0.93	0.01
M401138		0.93	12.4	2.21	5.22	<0.05	0.04	0.01	0.005	0.02	17.7	20.2	0.28	107	1.63	0.01
M401139		1.45	37.7	2.34	4.52	<0.05	0.04	0.07	0.020	0.04	9.9	26.1	0.33	104	1.01	0.01
M401140		1.64	17.4	3.55	7.51	<0.05	0.09	0.04	0.023	0.05	17.5	47.8	0.20	259	1.02	0.01
M401141		1.05	10.0	1.58	4.22	<0.05	<0.02	0.01	0.007	0.04	8.8	4.6	0.06	104	1.83	0.01
M401142		1.45	13.1	2.98	7.20	<0.05	0.02	0.02	0.012	0.03	20.3	6.3	0.09	141	2.08	0.01
M401143		0.69	22.7	2.31	3.48	<0.05	0.08	0.03	0.010	0.07	10.9	31.0	0.38	364	0.67	0.02
M401144		0.83	22.0	2.72	3.31	<0.05	0.07	0.05	0.015	0.06	11.5	30.2	0.38	563	1.80	0.01
M401145		0.47	8.6	2.88	6.28	<0.05	<0.02	0.01	0.007	0.03	19.5	7.1	0.10	161	1.75	0.01
M401146		0.58	49.6	3.61	3.44	0.07	0.09	0.15	0.035	0.04	33.3	20.0	0.35	818	0.75	0.01
M401147		0.97	17.3	4.66	4.94	<0.05	0.05	0.02	0.015	0.05	19.8	32.2	0.34	240	2.74	0.01
M401148		0.85	14.3	4.04	5.65	<0.05	0.04	0.01	0.014	0.07	19.7	43.6	0.42	369	0.70	0.01
M401149		1.22	13.8	2.89	5.61	<0.05	0.04	0.01	0.016	0.04	15.1	43.4	0.35	515	1.47	0.01
M401150		0.61	10.0	2.10	6.03	<0.05	0.03	0.02	0.011	0.03	22.9	19.1	0.11	90	2.06	0.01
M401151		1.14	14.9	4.97	7.09	<0.05	0.13	0.03	0.028	0.04	17.0	59.0	0.39	232	2.00	0.01
M401152		1.24	20.8	5.24	7.03	<0.05	0.11	0.05	0.025	0.06	19.1	42.2	0.43	246	2.35	0.01
M401153		0.96	12.7	4.08	6.51	<0.05	0.11	0.02	0.020	0.04	22.5	46.0	0.40	275	1.33	0.01
M401154		0.79	13.4	2.91	4.33	<0.05	0.02	0.01	0.007	0.06	21.5	41.3	0.52	200	0.45	0.01
M401155		0.76	10.7	2.87	6.50	<0.05	0.03	0.01	0.013	0.05	18.6	33.6	0.30	204	0.98	0.01
M401156		0.72	8.7	3.18	6.63	<0.05	0.04	0.01	0.012	0.03	19.2	26.9	0.18	158	1.42	0.01
M401157		0.70	8.6	3.11	5.86	<0.05	0.02	<0.01	0.009	0.05	21.4	24.2	0.28	191	1.17	0.01
M401158		1.02	27.5	5.92	6.00	<0.05	0.07	0.04	0.036	0.03	12.2	24.0	0.35	529	3.99	0.01
M401159		0.71	12.4	3.58	6.55	<0.05	0.04	0.01	0.013	0.04	22.4	24.9	0.26	195	0.97	0.01
M401160		0.46	5.8	1.88	5.64	<0.05	0.02	<0.01	0.007	0.02	23.7	11.0	0.11	108	0.89	0.01



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401121		0.19	2.7	970	16.8	3.0	<0.001	0.02	0.12	0.1	<0.2	0.3	5.6	<0.01	0.01	0.2
M401122		1.16	3.0	160	12.5	4.3	<0.001	<0.01	0.36	0.8	0.2	0.9	5.9	<0.01	0.04	1.5
M401123		0.13	12.8	400	10.8	9.2	<0.001	<0.01	0.12	1.1	0.2	0.3	44.7	<0.01	<0.01	3.0
M401124		0.10	25.7	490	15.7	4.0	<0.001	<0.01	0.45	1.5	<0.2	0.2	22.3	<0.01	0.02	6.4
M401125		0.20	26.9	190	15.5	7.8	<0.001	<0.01	0.71	1.9	0.3	0.3	4.9	<0.01	0.04	7.1
M401126		1.11	5.9	240	36.3	4.0	<0.001	0.01	0.40	1.1	<0.2	0.7	6.0	<0.01	0.03	2.1
M401127		0.55	4.6	470	13.4	2.8	<0.001	0.02	0.31	0.6	<0.2	0.5	10.3	<0.01	0.01	0.6
M401128		1.61	8.5	750	29.3	3.6	0.001	0.03	0.43	2.2	1.2	0.6	8.1	0.04	0.04	2.4
M401129		0.14	27.7	610	19.0	4.4	<0.001	0.01	0.46	1.9	0.5	0.2	35.6	<0.01	0.03	6.5
M401130		0.29	22.3	540	12.2	6.7	0.002	0.05	0.54	1.8	1.4	0.2	132.5	<0.01	0.02	2.9
M401131		0.18	20.2	380	12.6	5.0	<0.001	0.03	0.35	1.6	0.8	0.2	75.2	<0.01	0.03	3.1
M401132		0.12	23.3	330	16.6	4.7	<0.001	0.02	0.46	1.4	0.6	0.2	26.1	<0.01	0.04	3.6
M401133		0.12	23.6	330	11.7	4.3	<0.001	0.02	0.44	1.4	0.6	0.2	49.4	<0.01	0.05	3.7
M401134		0.11	32.1	430	20.2	4.8	<0.001	0.01	0.52	2.5	0.6	0.2	17.4	<0.01	0.05	7.5
M401135		0.12	21.4	240	11.3	5.5	<0.001	0.01	0.29	1.1	0.6	0.2	31.9	<0.01	0.03	4.3
M401136		0.27	19.8	260	16.1	7.2	<0.001	0.01	0.47	1.6	0.7	0.3	4.9	<0.01	0.05	5.4
M401137		0.23	26.6	250	25.3	8.3	<0.001	0.01	0.49	1.7	0.6	0.3	4.2	<0.01	0.04	6.3
M401138		0.12	10.4	80	7.1	4.0	<0.001	0.01	0.35	0.9	0.4	0.3	4.2	<0.01	0.05	4.7
M401139		0.47	13.5	900	25.0	4.2	<0.001	0.04	0.18	0.8	1.0	0.4	7.8	<0.01	0.04	0.9
M401140		0.47	14.7	220	18.8	9.3	<0.001	0.02	0.46	1.9	0.8	0.7	5.4	0.01	0.04	5.0
M401141		0.22	6.0	380	6.4	4.5	<0.001	0.02	0.39	0.4	0.4	0.4	5.2	<0.01	0.03	0.8
M401142		0.53	8.4	310	7.9	3.6	<0.001	0.01	0.65	1.5	0.6	0.6	3.6	<0.01	0.05	3.8
M401143		0.18	19.8	490	11.6	4.8	<0.001	0.06	0.31	1.1	1.3	0.3	107.5	<0.01	0.03	2.0
M401144		0.22	26.0	670	17.5	6.8	<0.001	0.05	0.34	1.3	1.5	0.3	84.4	<0.01	0.04	2.0
M401145		0.31	7.0	210	6.8	3.3	<0.001	0.01	0.41	1.0	0.5	0.5	3.2	<0.01	0.05	3.8
M401146		0.31	41.5	1150	15.3	5.4	<0.001	0.07	0.51	6.3	2.1	0.3	139.5	<0.01	0.02	1.1
M401147		0.17	22.7	160	20.0	7.9	<0.001	0.01	0.78	1.9	1.1	0.3	4.0	<0.01	0.04	5.0
M401148		0.22	22.4	150	15.3	6.2	<0.001	0.01	0.30	1.3	0.4	0.3	12.6	<0.01	0.03	6.1
M401149		0.27	14.3	230	9.6	9.0	<0.001	0.02	0.18	2.4	0.8	0.5	32.3	<0.01	0.02	3.2
M401150		0.23	7.1	170	8.2	6.2	<0.001	0.02	0.29	2.0	0.4	0.5	8.3	<0.01	0.02	4.2
M401151		0.30	25.7	220	14.0	7.8	<0.001	0.03	0.41	3.9	0.8	0.5	6.9	<0.01	0.02	4.7
M401152		0.28	19.8	220	16.5	7.2	<0.001	0.02	0.69	2.7	1.1	0.4	3.5	<0.01	0.05	5.5
M401153		0.22	19.7	150	13.1	7.4	<0.001	0.02	0.48	2.4	0.5	0.4	3.5	<0.01	0.04	6.1
M401154		0.13	21.8	280	10.6	5.9	<0.001	0.02	0.21	1.2	0.6	0.2	14.8	<0.01	0.01	5.6
M401155		0.27	14.7	220	8.6	5.1	<0.001	0.02	0.32	1.5	0.4	0.4	7.6	<0.01	0.04	4.1
M401156		0.37	10.3	170	9.1	5.8	<0.001	0.02	0.33	1.9	0.5	0.5	4.0	<0.01	0.02	4.3
M401157		0.25	12.6	140	7.5	5.4	<0.001	0.01	0.29	1.0	0.3	0.3	9.4	<0.01	0.03	4.7
M401158		0.24	27.4	510	9.5	5.6	<0.001	0.05	0.75	5.7	1.1	0.5	26.2	0.01	0.03	2.2
M401159		0.27	13.8	150	10.5	4.9	<0.001	0.01	0.50	1.3	0.5	0.4	3.6	<0.01	0.04	5.2
M401160		0.21	5.9	100	6.7	3.6	<0.001	0.01	0.23	0.9	0.4	0.4	3.3	<0.01	0.02	5.1



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 5 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401121		<0.005	0.05	1.10	10	0.07	1.54	9	<0.5
M401122		0.023	0.06	0.62	37	0.19	1.57	16	<0.5
M401123		<0.005	0.03	2.76	13	0.08	5.26	33	<0.5
M401124		0.005	0.03	2.04	16	0.19	3.59	80	1.3
M401125		<0.005	0.09	0.62	27	0.14	2.45	80	4.0
M401126		0.017	0.05	0.46	45	0.23	1.36	24	<0.5
M401127		0.013	0.03	0.67	22	0.12	1.41	17	0.5
M401128		0.018	0.05	2.57	32	0.20	3.62	26	3.2
M401129		0.005	0.04	1.55	18	0.07	5.92	85	1.2
M401130		0.005	0.06	4.52	14	0.11	5.45	72	3.5
M401131		0.006	0.04	1.71	13	0.12	4.50	57	1.9
M401132		<0.005	0.05	0.49	15	0.10	4.10	65	0.7
M401133		<0.005	0.05	1.00	17	0.07	3.27	81	1.9
M401134		0.005	0.05	0.66	19	0.06	6.69	94	2.0
M401135		<0.005	0.04	0.52	17	0.11	2.42	60	0.5
M401136		<0.005	0.08	0.44	29	0.14	2.10	57	2.3
M401137		<0.005	0.05	0.51	23	0.17	2.24	65	3.2
M401138		<0.005	0.06	0.38	30	0.07	1.57	32	1.9
M401139		0.008	0.06	1.57	18	0.14	2.53	37	1.2
M401140		<0.005	0.11	0.47	41	0.16	1.75	44	3.6
M401141		0.008	0.05	0.29	21	0.12	0.89	28	<0.5
M401142		0.011	0.08	0.39	47	0.13	1.68	34	0.9
M401143		0.005	0.04	4.12	12	0.10	3.86	53	2.6
M401144		0.006	0.09	2.35	16	0.09	5.88	97	2.0
M401145		0.006	0.09	0.34	33	0.11	1.39	37	<0.5
M401146		0.005	0.08	2.23	28	0.06	34.1	152	3.1
M401147		<0.005	0.13	0.42	23	0.12	2.29	64	2.4
M401148		<0.005	0.05	0.40	21	0.15	1.97	78	1.8
M401149		0.005	0.16	0.59	33	0.08	4.52	71	1.3
M401150		<0.005	0.15	0.39	34	0.08	2.40	38	1.0
M401151		0.005	0.21	0.42	51	0.09	2.79	73	4.6
M401152		<0.005	0.16	0.54	41	0.22	2.46	111	5.2
M401153		<0.005	0.13	0.44	39	0.13	2.36	92	4.0
M401154		<0.005	0.04	0.47	15	0.09	2.64	63	0.7
M401155		<0.005	0.12	0.40	29	0.13	1.99	60	1.2
M401156		0.006	0.15	0.35	39	0.10	1.74	43	1.6
M401157		<0.005	0.07	0.34	25	0.12	1.63	52	0.8
M401158		0.006	0.21	0.74	53	<0.05	10.10	68	2.6
M401159		<0.005	0.08	0.35	37	0.15	1.72	46	1.7
M401160		0.005	0.09	0.26	26	0.13	1.37	23	1.1

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401161		0.68	0.0002	0.17	2.42	9.4	<0.2	<10	190	0.77	0.17	0.14	0.58	38.9	14.9	35
M401162		0.61	0.0071	0.06	1.22	17.1	<0.2	<10	40	0.18	0.33	0.01	0.13	43.5	5.1	16
M401163		0.74	0.0028	0.05	1.83	17.8	<0.2	<10	100	0.24	0.29	0.02	0.15	41.3	7.9	19
M401164		0.76	0.0022	0.07	1.94	11.2	<0.2	<10	80	0.26	0.26	0.01	0.14	49.0	7.1	21
M401165		0.64	0.0004	0.07	0.87	8.3	<0.2	<10	50	0.11	0.18	0.03	0.22	37.3	3.2	7
M401166		0.66	0.0018	0.04	1.48	13.7	<0.2	<10	70	0.24	0.27	0.02	0.24	41.1	5.3	15
M401167		0.71	0.0013	0.40	2.28	13.9	<0.2	<10	90	0.38	0.22	0.01	0.21	41.3	8.4	23
M401168		0.73	0.0008	0.10	1.39	11.2	<0.2	<10	70	0.30	0.24	0.02	0.15	44.1	6.5	14
M401169		0.77	0.0012	0.05	1.54	12.8	<0.2	<10	110	0.27	0.24	0.04	0.20	31.8	6.9	18
M401170		0.61	0.0013	0.04	1.49	13.1	<0.2	<10	210	0.25	0.22	0.04	0.77	29.6	7.9	17
M401171		0.75	0.0018	0.14	1.22	18.6	<0.2	<10	70	0.20	0.33	0.01	0.12	35.5	6.1	15
M401172		0.53	0.0003	0.23	1.75	16.4	<0.2	<10	130	0.13	0.20	0.01	0.35	23.4	8.3	21
M401173		0.56	0.0018	0.16	1.91	14.6	<0.2	<10	130	0.22	0.19	0.02	0.22	27.3	10.9	21
M401174		0.65	0.0006	0.08	1.76	14.8	<0.2	<10	220	0.17	0.16	0.01	0.17	27.8	13.8	21
M401175		0.59	0.0002	0.05	1.75	14.6	<0.2	<10	250	0.28	0.16	0.03	0.42	29.4	16.2	19
M401176		0.56	0.0001	0.13	1.56	10.5	<0.2	<10	190	0.21	0.15	0.63	2.53	24.8	20.7	17
M401177		0.67	0.0004	0.04	0.92	14.9	<0.2	<10	140	0.18	0.23	0.11	0.98	34.5	12.0	14
M401178		0.61	0.0024	0.09	1.25	11.3	<0.2	<10	70	0.16	0.22	0.01	0.11	43.7	5.1	13
M401179		0.70	0.0004	0.14	0.90	6.4	<0.2	<10	40	0.10	0.17	0.01	0.07	40.1	2.6	9
M401180		0.73	0.0041	0.02	1.69	12.4	<0.2	<10	60	0.25	0.30	0.01	0.05	45.3	6.8	18
M401181		0.64	0.0022	0.02	1.41	10.3	<0.2	<10	50	0.26	0.23	0.02	0.04	48.1	6.8	15
M401182		0.65	0.0025	0.07	1.32	10.6	<0.2	<10	80	0.49	0.26	0.48	0.14	34.6	10.9	18
M401183		0.67	0.0019	0.08	1.11	10.7	<0.2	<10	90	0.29	0.23	0.81	0.19	25.9	10.4	16
M401184		0.63	0.0239	0.06	1.92	18.0	<0.2	<10	50	0.39	0.36	0.19	0.16	37.7	11.4	22
M401185		0.62	0.0073	0.07	2.76	12.3	<0.2	<10	90	0.65	0.25	0.03	0.07	38.1	8.0	19
M401186		0.63	0.0028	0.26	4.00	11.1	<0.2	<10	140	1.16	0.24	0.03	0.12	36.6	16.6	28
M401187		0.56	0.0034	0.10	3.98	20.2	<0.2	<10	50	0.92	0.52	0.10	0.13	43.0	9.0	31
M401188		0.69	0.0033	0.08	1.69	11.2	<0.2	<10	80	0.26	0.28	0.02	0.05	44.4	6.5	17
M401189		0.77	0.0262	0.01	0.44	4.5	<0.2	<10	20	<0.05	0.10	0.01	0.03	47.9	0.9	4
M401190		0.79	0.0118	0.03	1.73	13.4	<0.2	<10	110	0.41	0.24	0.06	0.06	41.6	9.6	17
M401191		0.63	0.0086	0.02	1.39	18.8	<0.2	<10	40	0.37	0.25	0.07	0.03	56.2	10.8	19
M401192		0.74	0.0021	0.09	0.50	6.9	<0.2	<10	20	0.05	0.12	0.01	0.06	26.9	1.4	4
M401193		0.77	0.0407	0.06	1.23	13.2	<0.2	<10	60	0.23	0.25	0.01	0.12	39.6	6.2	14
M401194		0.71	0.0102	0.18	1.37	12.1	<0.2	<10	170	0.54	0.24	0.59	0.28	26.9	9.9	17
M401195		0.73	0.0034	0.08	0.78	17.0	<0.2	<10	30	0.16	0.25	0.03	0.19	30.0	4.0	10
M401196		0.66	0.0015	0.06	1.35	11.6	<0.2	<10	60	0.27	0.29	0.03	0.25	44.0	6.4	15
M401197		0.69	0.0018	0.04	1.06	11.4	<0.2	<10	40	0.11	0.24	0.02	0.04	54.2	3.3	11
M401198		0.67	0.0022	0.10	1.02	13.5	<0.2	<10	70	0.22	0.24	0.14	0.21	30.6	5.0	10
M401199		0.73	0.0017	0.06	0.72	9.0	<0.2	<10	60	0.16	0.18	0.59	0.32	32.9	4.1	10
M401200		0.67	0.0003	0.03	1.20	8.5	<0.2	<10	90	0.37	0.16	0.38	0.39	25.0	6.2	8



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401161		0.84	13.8	4.95	4.50	<0.05	0.10	0.05	0.036	0.03	17.9	27.8	0.25	557	2.47	0.01
M401162		0.62	9.5	4.29	6.63	<0.05	0.02	0.01	0.010	0.04	23.4	18.1	0.24	202	1.25	0.01
M401163		1.00	11.3	3.90	6.32	<0.05	0.05	0.01	0.016	0.05	20.4	41.5	0.37	277	0.62	0.01
M401164		0.77	11.6	3.82	5.94	<0.05	0.06	0.01	0.014	0.06	24.0	43.7	0.44	242	0.46	0.01
M401165		0.56	9.0	1.68	4.81	<0.05	<0.02	0.01	0.007	0.03	19.2	4.2	0.05	72	2.12	0.01
M401166		0.55	12.6	3.15	5.34	<0.05	0.04	0.02	0.014	0.06	21.7	22.6	0.26	155	1.04	0.01
M401167		0.93	11.2	3.86	5.18	0.08	0.08	0.04	0.020	0.05	20.2	50.7	0.46	241	0.54	<0.01
M401168		0.64	11.9	2.88	5.49	0.07	0.04	0.01	0.013	0.06	22.1	26.4	0.27	230	0.50	<0.01
M401169		0.93	8.5	3.64	4.66	0.06	0.03	0.02	0.018	0.05	15.8	33.6	0.35	258	1.67	0.01
M401170		0.88	9.6	3.84	5.43	0.06	0.06	0.01	0.020	0.03	14.2	15.1	0.21	506	3.37	<0.01
M401171		0.83	13.7	4.18	6.58	0.08	0.03	0.02	0.015	0.06	17.6	17.0	0.23	258	1.18	<0.01
M401172		1.40	24.1	6.50	6.43	0.09	0.05	0.03	0.037	0.04	11.7	11.3	0.34	274	2.89	<0.01
M401173		1.01	25.2	5.55	7.21	0.10	0.07	0.03	0.026	0.05	13.4	18.7	0.36	310	2.73	<0.01
M401174		1.04	35.0	6.22	6.99	0.10	0.06	0.04	0.025	0.04	13.8	16.0	0.36	369	6.28	0.01
M401175		1.09	41.0	6.25	5.92	0.10	0.06	0.03	0.028	0.05	13.6	18.9	0.49	429	4.03	<0.01
M401176		1.08	42.3	4.51	3.51	0.09	0.09	0.06	0.036	0.05	12.0	28.1	0.73	780	4.73	0.01
M401177		1.29	23.5	3.35	4.60	0.07	0.03	0.02	0.017	0.06	16.9	17.8	0.25	451	2.69	0.01
M401178		0.73	8.6	3.38	5.72	0.07	0.03	0.02	0.014	0.04	22.4	15.9	0.17	170	1.03	<0.01
M401179		0.56	4.5	1.52	5.56	0.05	<0.02	0.01	0.006	0.03	20.3	8.4	0.12	93	0.89	0.01
M401180		0.85	9.0	4.02	6.05	0.09	0.05	0.01	0.014	0.06	22.3	32.4	0.32	227	0.35	0.01
M401181		0.77	9.0	2.99	5.36	0.09	0.03	0.01	0.011	0.04	24.3	33.2	0.32	206	0.34	<0.01
M401182		0.85	22.0	2.96	3.52	0.09	0.07	0.03	0.011	0.06	17.2	39.5	0.49	434	0.40	<0.01
M401183		0.94	14.6	2.40	3.37	0.06	0.04	0.02	0.013	0.06	12.4	30.4	0.38	393	0.55	0.01
M401184		0.88	17.2	4.71	6.58	0.09	0.08	0.02	0.022	0.06	16.8	32.4	0.40	367	0.60	0.01
M401185		0.99	14.4	4.17	5.45	0.10	0.13	0.05	0.028	0.04	18.2	32.8	0.26	155	0.66	<0.01
M401186		1.28	22.7	3.86	5.03	0.09	0.20	0.06	0.031	0.06	16.8	45.9	0.36	230	0.54	0.01
M401187		0.67	33.4	6.42	7.65	0.12	0.20	0.06	0.047	0.03	18.5	15.9	0.18	619	0.97	0.01
M401188		0.72	11.0	3.90	6.93	0.09	0.07	0.02	0.014	0.04	21.6	31.9	0.28	196	0.44	<0.01
M401189		0.24	1.8	0.69	3.48	0.05	<0.02	<0.01	<0.005	0.02	23.4	2.2	0.03	46	0.28	<0.01
M401190		0.99	9.8	2.75	5.69	0.08	0.05	0.01	0.018	0.05	19.4	41.5	0.33	379	0.42	<0.01
M401191		0.60	19.5	3.08	4.26	0.10	0.04	0.01	0.010	0.06	27.5	45.5	0.51	485	0.25	<0.01
M401192		0.15	3.1	0.81	4.37	<0.05	<0.02	0.01	<0.005	0.02	13.3	1.8	0.03	64	0.66	<0.01
M401193		0.64	6.8	3.16	5.52	0.08	0.03	0.01	0.010	0.04	19.8	26.0	0.28	247	0.49	<0.01
M401194		0.86	16.4	2.83	3.78	0.07	0.07	0.03	0.015	0.06	13.8	33.0	0.40	627	0.73	0.01
M401195		0.44	16.5	2.54	5.19	0.07	0.03	0.02	0.012	0.02	15.1	9.0	0.11	183	1.09	<0.01
M401196		0.93	8.6	3.75	7.05	0.09	0.04	0.01	0.019	0.04	21.3	23.1	0.21	240	0.72	<0.01
M401197		0.59	7.3	2.65	5.75	0.08	0.03	0.01	0.009	0.02	27.2	13.1	0.14	106	0.62	<0.01
M401198		0.60	13.9	2.13	5.32	0.06	0.03	0.01	0.012	0.03	16.0	23.4	0.16	229	1.01	0.01
M401199		0.63	15.4	1.59	3.24	0.06	0.03	0.01	0.007	0.04	16.3	19.6	0.18	125	0.64	0.01
M401200		0.36	8.7	3.04	3.60	0.06	0.03	0.02	0.023	0.03	10.2	10.7	0.08	560	0.77	0.01

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401161		0.27	28.0	490	10.8	6.3	<0.001	0.03	0.56	5.9	1.3	0.4	15.3	<0.01	0.02	4.7
M401162		0.35	11.6	290	10.2	4.0	<0.001	0.01	0.45	0.9	0.5	0.4	3.5	<0.01	0.03	4.3
M401163		0.27	17.1	160	11.1	7.2	<0.001	0.02	0.35	1.3	0.4	0.4	6.7	<0.01	0.03	5.0
M401164		0.22	19.1	140	14.3	6.4	<0.001	0.01	0.29	1.4	0.6	0.3	4.2	<0.01	0.03	6.3
M401165		0.13	8.3	250	7.8	4.9	<0.001	0.01	0.80	0.7	0.7	0.4	4.7	<0.01	0.03	3.0
M401166		0.18	13.5	180	11.8	4.7	<0.001	0.02	0.43	1.1	0.6	0.4	4.8	<0.01	0.03	5.3
M401167		0.23	22.6	240	16.1	7.5	<0.001	0.01	0.34	1.7	0.4	0.2	4.4	<0.01	0.04	6.4
M401168		0.24	15.7	180	12.8	5.7	<0.001	0.01	0.37	1.2	0.3	0.3	4.5	<0.01	0.03	6.1
M401169		0.46	19.2	510	16.6	7.6	<0.001	0.02	0.39	1.3	0.3	0.3	6.9	<0.01	0.03	3.4
M401170		0.40	14.5	290	16.1	5.5	<0.001	0.01	1.02	1.8	0.5	0.5	5.8	<0.01	0.03	3.7
M401171		0.45	13.2	370	13.7	6.7	<0.001	0.01	0.58	1.2	0.3	0.4	3.9	<0.01	0.05	4.8
M401172		0.29	17.6	750	13.5	7.9	<0.001	0.02	1.00	2.5	0.8	0.3	2.9	<0.01	0.03	3.2
M401173		0.34	23.6	590	14.4	7.1	<0.001	0.02	0.83	2.8	0.5	0.5	3.9	<0.01	0.03	4.0
M401174		0.26	29.7	710	11.8	6.6	<0.001	0.02	1.06	2.9	0.5	1.0	4.1	<0.01	0.03	3.9
M401175		0.24	33.9	670	16.0	8.4	<0.001	0.02	1.04	2.9	0.6	0.3	5.9	<0.01	0.03	3.4
M401176		0.12	45.8	710	9.7	5.5	0.001	0.03	1.29	3.0	1.2	0.2	70.9	0.01	0.03	2.4
M401177		0.26	18.3	260	13.3	7.7	<0.001	0.02	0.77	1.2	0.5	0.4	18.8	<0.01	0.04	4.2
M401178		0.32	10.1	220	10.1	5.9	<0.001	0.01	0.46	1.2	0.3	0.4	3.7	<0.01	0.03	4.9
M401179		0.23	6.2	170	6.0	4.7	<0.001	0.01	0.25	0.8	0.2	0.4	2.7	<0.01	0.02	3.6
M401180		0.27	14.7	160	12.0	7.6	<0.001	0.01	0.36	1.4	0.2	0.3	3.2	<0.01	0.04	7.1
M401181		0.24	15.7	180	10.6	5.8	<0.001	0.01	0.28	1.2	0.2	0.3	4.8	<0.01	0.03	5.5
M401182		0.15	29.5	460	15.1	4.2	<0.001	0.02	0.35	2.0	0.6	0.2	65.5	<0.01	0.03	5.1
M401183		0.29	20.5	330	16.2	5.6	<0.001	0.04	0.32	1.3	0.5	0.3	107.0	<0.01	0.03	3.2
M401184		0.33	20.0	540	26.4	5.8	<0.001	0.02	0.45	1.9	0.5	0.3	34.3	<0.01	0.05	7.2
M401185		0.47	18.8	300	19.5	5.7	<0.001	0.02	0.28	2.6	0.6	0.4	6.9	0.01	0.05	6.7
M401186		0.43	38.6	330	18.6	7.3	<0.001	0.03	0.35	3.8	0.7	0.3	8.9	0.01	0.06	8.2
M401187		0.85	12.8	980	84.3	2.7	<0.001	0.04	0.71	4.9	1.3	0.5	18.2	0.02	1.06	6.9
M401188		0.40	14.0	120	9.9	5.2	<0.001	0.01	0.34	1.4	0.2	0.4	6.4	<0.01	0.04	6.5
M401189		0.13	1.6	80	2.9	2.1	<0.001	0.01	0.13	0.5	<0.2	0.2	2.3	<0.01	0.01	4.1
M401190		0.51	17.3	190	15.3	7.3	<0.001	0.01	0.25	1.7	0.2	0.4	12.5	<0.01	0.03	5.1
M401191		0.09	24.5	340	16.1	3.6	<0.001	0.01	0.41	1.6	0.2	<0.2	9.7	<0.01	0.03	8.8
M401192		0.12	2.7	210	4.2	1.8	<0.001	0.01	0.20	0.5	<0.2	0.3	2.6	<0.01	0.02	1.6
M401193		0.26	12.8	140	9.7	4.1	<0.001	0.01	0.26	1.1	0.2	0.2	3.7	<0.01	0.03	5.4
M401194		0.18	23.8	470	15.0	5.5	<0.001	0.03	0.41	1.9	0.5	0.2	45.6	<0.01	0.04	3.4
M401195		0.32	7.8	300	13.2	2.9	<0.001	0.02	0.48	0.8	0.3	0.3	6.0	<0.01	0.05	3.3
M401196		0.36	11.6	200	12.5	6.1	<0.001	0.02	0.32	1.1	0.2	0.3	7.5	<0.01	0.05	5.8
M401197		0.25	7.1	120	7.1	3.1	<0.001	0.01	0.41	1.0	0.2	0.3	3.8	<0.01	0.05	6.3
M401198		0.27	9.0	380	11.7	4.4	<0.001	0.02	0.28	0.9	0.3	0.3	27.9	<0.01	0.04	3.2
M401199		0.22	11.4	210	8.2	5.5	<0.001	0.03	0.20	0.9	0.4	0.2	80.0	<0.01	0.03	3.3
M401200		0.39	6.2	360	46.9	3.7	<0.001	0.02	0.27	1.3	0.3	0.3	40.6	0.01	0.04	2.5



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 6 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401161		<0.005	0.12	0.89	44	0.08	11.00	92	4.4
M401162		0.005	0.06	0.36	28	0.22	1.59	49	0.7
M401163		<0.005	0.08	0.35	25	0.37	1.96	58	1.8
M401164		<0.005	0.06	0.37	21	0.18	1.91	63	2.6
M401165		<0.005	0.12	0.29	30	0.09	1.48	54	0.5
M401166		<0.005	0.07	0.38	22	0.17	1.79	50	1.8
M401167		<0.005	0.06	0.43	17	0.14	2.32	75	3.1
M401168		<0.005	0.06	0.36	21	0.13	2.08	70	1.7
M401169		0.006	0.13	0.49	24	0.15	2.29	78	1.1
M401170		0.007	0.14	0.48	63	0.10	2.27	162	2.7
M401171		0.006	0.09	0.39	25	0.16	1.78	56	1.0
M401172		<0.005	0.25	0.34	57	0.05	2.06	196	1.9
M401173		0.008	0.26	0.40	51	0.06	2.47	73	3.5
M401174		0.005	0.30	0.47	41	<0.05	2.66	71	2.7
M401175		<0.005	0.31	0.44	41	<0.05	4.06	92	3.1
M401176		<0.005	0.35	2.18	36	<0.05	11.35	376	2.8
M401177		0.006	0.14	0.59	23	0.11	2.56	108	1.3
M401178		<0.005	0.10	0.34	26	0.12	1.81	40	1.4
M401179		0.005	0.07	0.27	19	0.09	1.32	23	<0.5
M401180		<0.005	0.06	0.38	22	0.13	1.85	49	2.4
M401181		<0.005	0.04	0.35	16	0.11	1.87	47	1.2
M401182		0.005	0.04	1.16	12	0.10	8.24	64	2.1
M401183		0.007	0.05	0.98	13	0.11	4.41	52	1.5
M401184		<0.005	0.07	0.70	22	0.15	5.49	63	2.9
M401185		<0.005	0.08	0.62	20	0.11	4.31	41	4.6
M401186		<0.005	0.09	0.80	18	0.12	7.19	57	8.0
M401187		0.006	0.06	1.15	43	0.13	8.86	24	10.1
M401188		<0.005	0.06	0.38	27	0.11	1.98	40	3.4
M401189		<0.005	0.04	0.23	11	0.07	1.20	4	<0.5
M401190		0.005	0.06	0.59	18	0.11	3.49	52	1.7
M401191		<0.005	0.02	0.48	11	0.14	4.01	62	2.0
M401192		0.005	0.04	0.23	17	0.11	0.74	13	<0.5
M401193		<0.005	0.04	0.32	17	0.11	1.68	40	1.2
M401194		0.005	0.05	1.16	12	0.11	5.58	59	2.2
M401195		0.008	0.03	0.35	24	0.11	1.75	30	0.9
M401196		<0.005	0.06	0.36	25	0.11	2.24	55	1.9
M401197		<0.005	0.08	0.34	28	0.11	1.70	39	1.1
M401198		0.005	0.05	2.20	19	0.09	2.24	44	0.9
M401199		0.006	0.03	1.11	11	0.08	1.82	33	0.8
M401200		0.007	0.06	1.07	19	0.06	3.32	181	1.2



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401201		0.60	0.0033	0.73	2.80	22.4	<0.2	<10	110	11.75	0.22	0.77	0.12	36.5	171.0	24
M401202		0.59	0.0007	0.06	0.64	8.6	<0.2	<10	40	0.21	0.17	0.03	0.05	15.60	2.7	8
M401203		0.58	0.0026	0.30	1.86	17.4	<0.2	<10	120	1.16	0.33	0.26	0.12	30.3	11.3	26
M401204		0.42	0.0051	1.21	1.87	16.9	<0.2	<10	290	1.37	0.33	0.25	0.13	18.60	11.7	20
M401205		0.52	0.0019	0.13	2.31	12.4	<0.2	<10	130	0.39	0.25	0.01	0.10	39.4	6.3	21
M401206		0.59	0.0012	0.04	0.92	12.9	<0.2	<10	50	0.09	0.18	0.01	0.05	33.1	3.4	10
M401207		0.48	0.0007	0.03	0.39	0.3	<0.2	<10	20	0.07	0.03	0.29	0.04	2.97	0.7	1
M401208		0.62	0.0031	0.34	1.22	21.4	<0.2	<10	190	0.54	0.28	0.62	0.49	33.6	12.6	17
M401209		0.74	0.0037	0.27	1.43	14.6	<0.2	<10	190	0.40	0.25	0.52	0.55	30.9	10.3	19
M401210		0.63	0.0020	0.21	0.89	6.0	<0.2	<10	250	0.33	0.16	0.20	0.14	18.60	5.5	10
M401211		0.66	0.0018	0.08	1.05	8.4	<0.2	<10	170	0.25	0.19	0.07	0.14	29.4	4.6	11
M401212		0.70	0.0061	0.04	1.59	10.8	<0.2	<10	70	0.20	0.26	0.02	0.07	36.4	4.9	17
M401213		0.67	0.0018	0.05	1.83	14.6	<0.2	<10	110	0.36	0.31	0.01	0.06	39.9	8.0	20
M401214		0.75	0.0026	0.12	1.90	11.0	<0.2	<10	310	3.16	0.28	0.13	0.11	34.4	7.8	16
M401215		0.58	0.0008	0.03	1.04	12.4	<0.2	<10	40	0.15	0.35	0.01	0.07	37.6	4.7	13
M401216		0.63	0.0005	0.02	0.23	0.3	<0.2	<10	20	0.05	0.06	0.02	0.01	5.37	0.6	3
M401217		0.76	0.0435	0.04	1.41	14.8	<0.2	<10	80	0.22	0.27	0.01	0.07	30.0	6.6	16
M401218		0.62	0.0034	0.03	1.97	12.9	<0.2	<10	70	0.38	0.38	0.01	0.05	35.9	9.5	21
M401219		0.53	0.0004	0.02	0.28	1.2	<0.2	<10	20	<0.05	0.05	0.02	0.01	3.15	0.9	3
M401220		0.56	0.0014	0.05	0.31	0.7	<0.2	<10	20	0.06	0.06	0.02	0.01	3.35	0.7	2
M401221		0.65	0.0023	0.02	1.00	5.1	<0.2	<10	40	0.12	0.18	0.01	0.02	48.5	4.2	12
M401222		0.67	0.0005	0.02	0.52	1.2	<0.2	<10	50	0.11	0.10	0.02	0.02	28.7	1.8	6
M401223		0.71	0.0008	0.03	1.36	6.2	<0.2	<10	40	0.19	0.30	0.01	0.08	24.1	6.9	17
M401224		0.55	0.0009	0.02	2.09	11.1	<0.2	<10	100	0.33	0.33	0.01	0.05	37.7	7.7	21
M401225		0.53	<0.0001	0.03	0.35	0.2	<0.2	<10	20	0.05	0.03	0.03	0.01	1.57	0.6	2
M401226		0.68	0.0016	0.02	2.40	7.0	<0.2	<10	100	0.51	0.34	0.01	0.08	27.6	13.8	26
M401227		0.56	0.0006	0.06	2.16	2.2	<0.2	<10	120	0.39	0.41	0.01	0.06	11.65	5.3	18
M401228		0.63	0.0027	0.02	1.34	2.5	<0.2	<10	50	0.20	0.26	0.01	0.05	25.8	8.0	18
M401229		0.71	0.0005	0.02	0.21	0.4	<0.2	<10	40	0.09	0.10	0.02	0.02	8.55	1.3	6
M401230		0.57	0.0026	0.02	0.58	2.1	<0.2	<10	60	0.18	0.13	0.03	0.02	13.15	2.4	7
M401231		0.67	0.0017	0.04	0.75	5.2	<0.2	<10	40	0.10	0.20	0.02	0.03	38.5	3.5	11
M401232		0.64	0.0029	0.05	1.36	10.8	<0.2	<10	120	0.43	0.34	0.03	0.11	37.8	10.0	19
M401233		0.98	0.0050	0.02	0.20	0.7	<0.2	<10	20	0.08	0.06	0.02	0.02	6.97	0.7	3
M401234		0.64	0.0008	0.03	0.72	3.7	<0.2	<10	50	0.23	0.15	0.01	0.04	23.4	3.9	10
M401235		0.70	0.0006	0.02	0.68	4.5	<0.2	<10	60	0.14	0.18	0.01	0.03	37.4	3.1	9
M401236		0.69	0.0016	0.06	1.25	10.5	<0.2	<10	110	0.57	0.34	0.15	0.46	54.8	18.0	20
M401237		0.65	0.0027	0.10	1.32	6.8	<0.2	<10	150	0.51	0.30	0.26	0.16	40.9	13.2	20
M401238		0.53	0.0019	0.18	1.31	7.5	<0.2	<10	200	0.53	0.25	0.75	0.28	20.7	9.2	15
M401239		0.91	0.0026	0.09	1.36	12.2	<0.2	<10	150	0.61	0.27	0.32	0.18	31.2	11.6	18
M401240		0.64	0.0038	0.07	1.49	13.0	<0.2	<10	120	0.61	0.29	0.24	0.11	32.9	11.8	21



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401201		7.17	260	4.38	4.63	0.22	0.24	0.18	0.039	0.03	13.1	33.9	0.25	3400	1.99	0.02
M401202		2.91	17.4	1.34	3.39	<0.05	0.02	0.02	0.007	0.03	7.9	4.2	0.06	83	1.40	0.01
M401203		2.40	54.5	3.29	4.67	<0.05	0.07	0.07	0.023	0.07	15.1	63.9	0.63	345	1.19	0.01
M401204		3.25	46.6	2.64	4.80	<0.05	0.08	0.16	0.029	0.14	9.1	34.5	0.30	319	1.69	0.02
M401205		1.62	21.5	3.02	5.40	<0.05	0.10	0.04	0.020	0.05	19.1	29.1	0.27	167	1.67	0.01
M401206		0.56	10.4	1.71	5.41	<0.05	<0.02	0.02	0.012	0.03	16.4	7.1	0.09	105	1.89	0.01
M401207		0.08	2.0	0.24	1.11	<0.05	0.02	0.02	<0.005	0.02	1.4	0.5	0.02	36	0.09	0.04
M401208		0.53	38.0	3.30	3.06	<0.05	0.08	0.09	0.024	0.06	17.1	23.4	0.38	293	3.73	0.01
M401209		0.66	30.6	3.11	3.44	<0.05	0.11	0.06	0.017	0.08	15.3	32.7	0.48	309	2.52	0.01
M401210		0.70	17.2	1.67	2.66	<0.05	0.04	0.03	0.012	0.05	8.7	19.2	0.25	215	1.03	0.02
M401211		0.81	16.9	1.76	3.63	<0.05	0.03	0.02	0.013	0.06	15.1	17.3	0.22	119	1.24	0.01
M401212		1.16	14.7	3.21	5.11	<0.05	0.05	0.02	0.015	0.05	19.1	30.2	0.37	110	1.34	0.01
M401213		1.77	14.8	3.89	6.10	<0.05	0.09	0.03	0.025	0.06	20.5	30.2	0.27	318	1.63	0.01
M401214		2.60	33.3	2.38	4.90	0.05	0.04	0.04	0.024	0.07	17.0	34.4	0.18	384	0.96	0.02
M401215		0.64	9.9	3.20	7.63	<0.05	0.02	0.01	0.012	0.03	19.9	9.5	0.12	163	0.72	0.01
M401216		1.14	3.9	0.37	1.51	<0.05	<0.02	0.02	<0.005	0.02	2.7	0.5	0.01	28	0.20	0.02
M401217		1.75	15.6	2.87	4.82	<0.05	0.04	0.01	0.017	0.03	15.2	26.1	0.19	296	1.25	0.01
M401218		2.24	18.0	3.95	6.57	<0.05	0.06	0.04	0.025	0.05	17.4	34.5	0.32	330	0.95	0.01
M401219		0.67	2.2	0.45	1.38	<0.05	<0.02	0.02	<0.005	0.02	1.6	2.0	0.03	24	0.25	0.03
M401220		0.50	4.6	0.39	1.90	<0.05	<0.02	0.02	<0.005	0.02	1.8	0.5	0.01	33	0.45	0.03
M401221		0.83	6.9	1.95	4.39	0.05	0.02	0.01	0.008	0.03	24.0	15.4	0.20	119	0.47	0.01
M401222		1.32	3.3	0.67	2.97	<0.05	<0.02	0.01	0.006	0.04	14.3	5.2	0.09	70	0.54	0.01
M401223		1.13	14.9	2.96	4.87	<0.05	0.03	0.02	0.016	0.03	11.2	25.3	0.26	234	0.84	0.01
M401224		1.85	14.7	4.06	6.22	<0.05	0.11	0.03	0.021	0.05	18.7	34.0	0.34	258	0.98	0.01
M401225		0.23	1.5	0.37	1.60	<0.05	0.02	0.01	<0.005	0.02	0.9	0.7	0.02	20	0.15	0.03
M401226		2.29	25.8	3.60	4.52	<0.05	0.10	0.03	0.021	0.06	14.0	51.3	0.50	333	0.77	0.01
M401227		3.51	25.6	2.79	5.49	<0.05	0.06	0.03	0.021	0.03	5.7	22.9	0.11	393	0.81	0.02
M401228		2.77	5.5	3.22	5.24	<0.05	0.03	0.03	0.014	0.03	13.2	29.8	0.29	262	0.52	0.01
M401229		4.21	1.8	0.98	1.10	<0.05	<0.02	0.01	<0.005	0.03	4.0	2.8	0.05	50	0.21	0.02
M401230		1.16	3.2	1.16	2.56	<0.05	<0.02	0.01	0.006	0.02	6.0	7.5	0.10	81	0.29	0.02
M401231		1.12	4.8	1.46	3.92	<0.05	<0.02	0.01	0.008	0.03	17.8	10.8	0.16	188	0.87	0.01
M401232		2.10	24.7	3.11	4.70	<0.05	0.03	0.01	0.019	0.06	19.0	32.4	0.40	321	1.91	0.01
M401233		1.49	2.5	0.50	1.14	<0.05	<0.02	0.01	<0.005	0.02	3.5	1.3	0.02	16	0.28	0.02
M401234		2.44	6.3	1.66	2.88	<0.05	<0.02	0.01	0.008	0.04	12.4	14.0	0.19	140	0.48	0.01
M401235		2.38	7.0	1.64	3.65	<0.05	<0.02	0.01	0.008	0.04	17.5	8.1	0.11	91	1.02	0.01
M401236		1.20	34.6	3.17	3.62	0.06	0.04	0.02	0.016	0.07	27.4	36.1	0.52	824	1.53	0.01
M401237		1.27	24.0	3.16	3.49	0.05	0.04	0.02	0.017	0.06	19.9	37.3	0.52	294	1.06	0.01
M401238		1.06	29.3	2.35	3.37	<0.05	0.08	0.05	0.016	0.09	10.8	28.1	0.35	321	0.99	0.02
M401239		1.00	27.1	2.86	3.96	0.06	0.06	0.03	0.015	0.09	15.6	42.4	0.48	482	0.76	0.01
M401240		1.47	29.9	2.99	4.30	0.05	0.06	0.03	0.015	0.09	17.4	49.9	0.52	421	0.64	0.01



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401201		0.31	30.4	1870	106.5	2.1	0.002	0.11	0.85	4.7	4.6	<0.2	258	0.03	0.07	3.0
M401202		0.26	4.8	630	11.5	3.4	<0.001	0.03	0.43	0.4	0.5	0.2	9.4	<0.01	0.03	0.4
M401203		0.08	33.6	710	17.0	6.0	0.001	0.01	0.45	2.5	0.8	0.2	71.0	<0.01	0.01	6.1
M401204		0.22	23.0	1380	22.8	11.7	0.002	0.08	0.44	2.0	1.3	0.3	145.5	<0.01	0.04	2.2
M401205		0.27	16.3	280	14.6	5.7	<0.001	0.01	0.74	1.9	0.3	0.4	4.2	0.01	0.02	6.0
M401206		0.21	7.2	200	5.8	3.5	<0.001	<0.01	0.64	1.1	0.2	0.4	3.6	<0.01	0.03	3.2
M401207		0.27	0.7	300	0.7	0.8	<0.001	0.01	<0.05	0.2	<0.2	<0.2	34.0	0.01	<0.01	<0.2
M401208		0.18	33.4	760	19.2	5.3	0.001	0.02	1.46	2.5	1.0	0.2	73.1	<0.01	0.06	4.0
M401209		0.11	30.7	800	13.4	5.3	0.001	0.02	0.90	1.8	0.7	0.2	58.2	<0.01	0.04	4.2
M401210		0.20	15.3	460	6.8	4.5	0.001	0.02	0.37	1.0	0.4	<0.2	34.4	<0.01	0.02	1.8
M401211		0.16	13.3	280	8.1	6.5	<0.001	0.01	0.40	0.9	0.2	0.2	20.8	<0.01	0.02	2.2
M401212		0.26	15.8	270	11.0	6.6	<0.001	<0.01	0.47	1.1	0.3	0.2	5.1	<0.01	0.04	4.4
M401213		0.44	16.8	280	18.8	8.3	0.001	<0.01	0.57	1.6	0.4	0.4	4.3	<0.01	0.03	6.8
M401214		0.33	19.3	400	16.5	8.2	<0.001	0.01	0.41	2.0	0.6	0.4	35.4	<0.01	0.03	3.3
M401215		0.49	9.2	160	7.7	3.5	<0.001	<0.01	0.43	1.0	0.2	0.4	5.6	<0.01	0.04	5.8
M401216		0.12	0.9	170	2.0	2.9	<0.001	<0.01	<0.05	0.1	<0.2	<0.2	5.2	<0.01	<0.01	0.3
M401217		0.50	12.2	200	12.5	6.7	<0.001	<0.01	0.56	1.3	0.3	0.3	3.3	0.01	0.04	4.7
M401218		0.39	18.0	230	14.4	7.2	<0.001	<0.01	0.42	1.5	0.3	0.4	4.4	<0.01	0.04	6.3
M401219		0.14	1.8	170	1.8	1.6	<0.001	<0.01	0.06	0.1	<0.2	<0.2	3.8	<0.01	<0.01	<0.2
M401220		0.24	1.2	160	4.0	1.2	<0.001	<0.01	0.06	0.2	<0.2	<0.2	5.1	<0.01	<0.01	0.2
M401221		0.13	9.4	110	7.8	3.5	<0.001	<0.01	0.19	0.9	<0.2	0.3	3.6	<0.01	<0.01	5.5
M401222		0.09	3.8	120	4.6	5.4	<0.001	<0.01	0.08	0.5	0.3	0.2	20.6	<0.01	<0.01	2.6
M401223		0.43	13.6	220	7.7	3.9	<0.001	<0.01	0.34	1.1	<0.2	0.3	4.8	<0.01	0.01	4.1
M401224		0.47	16.9	190	14.6	6.5	<0.001	<0.01	0.40	1.7	<0.2	0.4	5.1	<0.01	0.03	6.6
M401225		0.25	1.0	110	3.6	0.8	<0.001	<0.01	<0.05	0.2	<0.2	<0.2	7.6	<0.01	<0.01	<0.2
M401226		0.29	28.2	250	15.8	8.9	<0.001	0.01	0.38	1.7	0.3	0.3	5.3	<0.01	0.02	6.7
M401227		0.68	7.3	230	12.4	6.3	<0.001	0.01	0.37	1.6	0.2	0.5	3.4	0.01	0.01	4.3
M401228		0.40	14.9	150	8.4	7.4	<0.001	<0.01	0.19	1.0	<0.2	0.3	3.7	<0.01	0.01	4.9
M401229		0.13	2.6	120	2.6	4.2	<0.001	<0.01	0.08	0.3	<0.2	<0.2	11.9	<0.01	<0.01	1.5
M401230		0.34	4.8	110	3.9	2.8	<0.001	<0.01	0.11	0.5	<0.2	0.2	6.8	<0.01	<0.01	1.4
M401231		0.37	8.0	150	6.3	5.7	<0.001	<0.01	0.21	1.0	<0.2	0.3	4.6	<0.01	<0.01	3.9
M401232		0.27	21.7	190	14.4	7.0	<0.001	<0.01	0.88	1.6	0.2	0.3	11.3	<0.01	0.03	5.3
M401233		0.18	1.4	120	1.8	1.7	<0.001	<0.01	0.06	0.2	<0.2	<0.2	8.2	<0.01	<0.01	0.5
M401234		0.13	8.7	280	5.8	6.0	<0.001	<0.01	0.18	0.6	<0.2	0.2	3.2	<0.01	0.02	1.8
M401235		0.18	6.4	130	6.2	8.1	<0.001	<0.01	0.31	0.8	<0.2	0.2	8.2	<0.01	<0.01	3.5
M401236		0.08	33.2	550	20.8	4.6	<0.001	<0.01	0.65	1.8	0.2	0.2	29.6	<0.01	0.02	8.9
M401237		0.12	26.6	460	12.4	5.4	<0.001	<0.01	0.47	1.6	0.3	0.2	81.1	<0.01	0.02	6.9
M401238		0.18	23.2	530	11.0	6.2	0.001	0.03	0.50	1.5	0.6	0.2	106.0	<0.01	0.02	3.1
M401239		0.13	28.1	490	16.2	5.1	<0.001	0.01	0.46	1.9	<0.2	0.2	59.2	<0.01	<0.01	5.6
M401240		0.11	29.6	400	15.3	5.1	<0.001	<0.01	0.48	2.1	<0.2	0.2	56.3	<0.01	0.02	7.3



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - D
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401201		0.007	0.13	25.9	12	0.16	98.5	73	3.1
M401202		0.006	0.06	0.64	13	0.06	1.70	18	0.5
M401203		<0.005	0.07	4.13	18	0.16	10.90	101	2.1
M401204		<0.005	0.17	3.37	23	0.26	7.55	67	1.9
M401205		<0.005	0.09	0.57	43	0.17	2.19	57	3.8
M401206		0.005	0.08	0.28	44	0.13	1.32	32	0.6
M401207		0.017	0.02	0.14	7	<0.05	0.60	4	0.8
M401208		<0.005	0.12	1.54	23	0.11	8.96	139	2.9
M401209		<0.005	0.09	3.00	18	0.11	6.14	139	3.4
M401210		0.006	0.06	1.62	12	0.10	2.94	64	1.1
M401211		<0.005	0.08	0.87	17	0.14	2.10	54	0.8
M401212		<0.005	0.09	0.45	26	0.11	1.91	48	1.8
M401213		<0.005	0.11	0.53	34	0.16	2.11	56	3.5
M401214		<0.005	0.11	2.13	24	0.14	8.33	41	1.1
M401215		0.006	0.06	0.36	30	0.16	1.50	33	1.1
M401216		0.008	0.03	0.23	8	<0.05	0.39	4	<0.5
M401217		0.007	0.07	0.42	28	0.15	1.58	47	1.9
M401218		<0.005	0.06	0.50	30	0.21	2.04	54	2.7
M401219		0.011	0.02	0.17	11	<0.05	0.26	7	<0.5
M401220		0.013	0.02	0.19	8	0.05	0.36	5	<0.5
M401221		<0.005	0.05	0.35	17	0.11	1.59	24	<0.5
M401222		<0.005	0.05	0.28	11	<0.05	1.09	11	<0.5
M401223		0.007	0.04	0.34	27	0.12	1.37	45	1.0
M401224		0.005	0.07	0.53	30	0.15	2.02	46	4.2
M401225		0.019	0.02	0.11	9	<0.05	0.27	4	0.5
M401226		<0.005	0.05	0.61	21	0.14	2.09	78	3.4
M401227		0.008	0.07	0.73	29	0.11	1.21	33	2.8
M401228		0.007	0.05	0.41	24	0.10	1.27	43	1.5
M401229		0.006	0.03	0.25	8	<0.05	0.55	8	<0.5
M401230		0.011	0.03	0.26	15	0.07	0.72	15	<0.5
M401231		0.010	0.05	0.36	21	0.18	1.51	26	<0.5
M401232		0.006	0.09	0.64	27	0.09	2.70	64	1.2
M401233		0.007	0.03	0.25	7	<0.05	0.50	5	<0.5
M401234		0.005	0.04	0.27	13	0.06	1.14	29	<0.5
M401235		0.005	0.07	0.36	20	0.08	1.33	19	<0.5
M401236		0.006	0.07	0.82	17	0.06	5.61	101	2.1
M401237		<0.005	0.06	0.94	17	0.07	4.01	85	1.6
M401238		0.005	0.07	1.32	14	0.09	4.61	76	2.4
M401239		<0.005	0.06	1.10	14	0.12	5.12	83	2.1
M401240		<0.005	0.04	0.96	14	0.18	4.93	83	2.5



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 8 - A
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	AU-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401241		0.57	0.0017	0.03	1.26	17.5	<0.2	<10	60	0.14	0.25	0.01	0.10	34.1	4.8	14
M401242		0.65	0.0044	0.07	1.68	14.0	<0.2	<10	120	0.56	0.30	0.43	0.25	32.3	12.8	23
M401243		0.49	0.0009	0.04	2.44	7.3	<0.2	<10	390	0.70	0.21	0.29	0.79	61.7	17.1	27
M401244		0.52	0.0007	0.04	1.81	8.9	<0.2	<10	90	0.22	0.15	0.01	0.09	22.5	8.0	15
M401245		0.55	0.0012	0.06	2.59	12.1	<0.2	<10	100	0.48	0.22	0.03	0.60	36.5	32.2	19
M401246		0.65	0.0020	0.03	1.40	9.6	<0.2	<10	110	0.27	0.21	0.02	0.27	41.2	7.1	16
M401247		0.63	0.0003	0.03	2.06	5.7	<0.2	<10	330	0.42	0.24	0.02	0.15	39.4	5.6	18
M401248		0.54	<0.0001	0.08	1.80	4.8	<0.2	<10	90	0.17	0.09	0.02	0.10	12.55	4.3	12
M401249		0.52	<0.0001	0.02	0.65	2.3	<0.2	<10	70	0.09	0.09	0.06	0.45	14.50	4.9	7
M401250		0.62	0.0015	0.05	1.17	11.5	<0.2	<10	90	0.21	0.24	0.03	0.12	34.0	8.9	16



2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Fax: 604 984 0218 www.alsglobal.com

6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 8 - B

Total # Pages: 8 (A - D)

Plus Appendix Pages

Finalized Date: 21-SEP-2012

Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

[illegible]

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 8 - C
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401241		0.27	10.1	140	8.9	4.4	<0.001	<0.01	0.45	1.4	<0.2	0.4	3.4	<0.01	0.02	5.1
M401242		0.16	34.2	540	15.5	4.9	0.001	0.01	0.45	2.3	0.3	0.2	38.9	<0.01	0.03	6.5
M401243		0.42	26.7	500	15.0	7.1	0.001	0.02	0.49	5.8	0.6	0.3	20.7	0.01	0.02	3.3
M401244		0.39	17.3	360	10.0	5.5	0.001	0.02	0.72	2.6	0.3	0.3	3.9	<0.01	<0.01	2.6
M401245		0.37	35.6	440	15.2	4.8	<0.001	0.05	0.55	2.8	1.3	0.2	7.1	<0.01	0.02	4.3
M401246		0.19	17.6	130	9.6	5.5	0.001	<0.01	0.36	1.2	<0.2	0.3	4.2	<0.01	0.03	6.1
M401247		0.23	9.0	140	11.2	3.6	<0.001	<0.01	0.48	2.8	<0.2	0.6	3.8	<0.01	0.02	5.1
M401248		0.41	9.8	340	7.1	3.2	0.001	0.03	0.36	2.2	0.3	0.3	3.6	0.01	0.01	2.0
M401249		0.25	7.4	120	4.6	4.0	<0.001	<0.01	0.20	1.0	<0.2	0.2	7.7	<0.01	0.01	1.4
M401250		0.25	17.7	170	15.8	6.0	<0.001	0.01	0.37	1.3	0.4	0.2	6.5	<0.01	<0.01	5.3



2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsqglobal.com

**To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7**

Page: 8 - D
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

[illegible]

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: Appendix 1
Total # Appendix Pages: 1
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195691

Method	CERTIFICATE COMMENTS
ALL METHODS ME-MS41	NSS is non-sufficient sample. Gold determinations by this method are semi-quantitative due to the small sample weight used (0.5g).



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 1
Finalized Date: 21-SEP-2012
This copy reported on
17-OCT-2012
Account: 092BCL

CERTIFICATE WH12195692

Project:
P.O. No.:
This report is for 250 Soil samples submitted to our lab in Whitehorse, YT, Canada
on 21-AUG-2012.

The following have access to data associated with this certificate:

MICKI GORDIC

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES


ALS CODE	DESCRIPTION	INSTRUMENT
Au-OG43	Ore Grade Au - 25g AR	ICP-MS
Au-ST43	Super Trace Au - 25g AR	ICP-MS
ME-MS41	51 anal. aqua regia ICPMS	

To: 0926764 B.C. LTD.
ATTN: MICKI GORDIC
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

***** See Appendix Page for comments regarding this certificate *****

Signature:


Colin Ramshaw, Vancouver Laboratory Manager



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401251		0.55	0.0010	0.06	2.49	4.8	<0.2	<10	440	0.65	0.16	0.32	0.44	57.2	21.8	25
M401252		0.68	0.0012	0.05	1.53	12.2	<0.2	<10	80	0.25	0.30	0.05	0.17	45.0	7.9	16
M401253		0.62	0.0028	0.32	2.28	18.2	<0.2	<10	100	0.41	0.30	0.01	0.16	51.5	12.3	25
M401254		0.59	0.0032	0.10	1.97	13.0	<0.2	<10	110	0.70	0.28	0.28	0.19	44.3	13.0	20
M401255		0.56	0.0008	0.11	2.36	38.2	<0.2	<10	80	0.96	0.31	0.24	0.22	63.2	10.4	21
M401256		0.69	0.0015	0.05	1.65	12.1	<0.2	<10	70	0.23	0.25	0.02	0.06	47.9	5.1	15
M401257		0.57	0.0010	0.16	1.36	27.5	<0.2	<10	70	0.65	0.31	0.39	0.16	55.8	13.7	13
M401258		0.64	0.0016	0.04	1.09	9.6	<0.2	<10	70	0.25	0.16	0.16	0.06	27.5	5.7	12
M401259		0.62	0.0009	0.14	1.21	36.6	<0.2	<10	100	0.77	0.50	0.58	0.34	79.2	23.8	17
M401260		0.66	0.0016	0.05	1.63	15.3	<0.2	<10	130	0.46	0.31	0.07	0.08	42.0	11.9	20
M401261		0.61	0.0011	0.04	0.91	18.0	<0.2	<10	50	0.13	0.25	0.39	0.09	27.9	8.9	14
M401262		0.59	0.0006	0.05	0.96	8.0	<0.2	<10	80	0.27	0.16	0.69	0.10	22.4	6.9	11
M401263		0.52	<0.0001	0.07	0.68	4.4	<0.2	<10	60	0.24	0.11	0.74	0.07	12.20	3.1	6
M401264		0.61	0.0004	0.07	0.58	3.4	<0.2	<10	40	0.15	0.09	0.50	0.10	11.10	3.2	4
M401265		0.65	0.0007	0.12	1.26	15.1	<0.2	<10	120	0.65	0.23	1.12	0.19	19.80	9.1	15
M401266		0.67	0.0014	0.05	1.10	7.7	<0.2	<10	40	0.27	0.23	0.16	0.03	35.4	9.4	17
M401267		0.62	0.0017	0.10	1.59	13.6	<0.2	<10	120	0.77	0.28	0.52	0.08	28.4	10.8	19
M401268		0.60	0.0072	0.07	1.33	12.1	<0.2	<10	60	0.41	0.22	0.30	0.04	26.2	8.2	16
M401269		0.51	0.0017	0.08	1.28	10.3	<0.2	<10	100	0.43	0.19	0.90	0.06	18.35	6.6	12
M401270		0.49	0.0026	0.18	1.51	15.7	<0.2	<10	130	0.51	0.24	0.86	0.04	15.75	8.4	14
M401271		0.65	0.0011	0.12	0.84	12.8	<0.2	<10	110	0.28	0.17	0.65	0.28	19.55	8.3	12
M401272		0.59	0.0006	0.05	1.59	13.9	<0.2	<10	160	0.29	0.25	0.01	0.15	40.1	6.5	17
M401273		0.55	<0.0001	0.07	0.59	0.5	<0.2	<10	30	0.06	0.03	0.04	0.03	2.83	0.6	2
M401274		0.66	0.0002	0.06	1.14	1.9	<0.2	<10	140	0.24	0.13	0.02	0.07	17.15	1.1	9
M401275		0.56	<0.0001	0.05	0.48	1.6	<0.2	<10	30	0.13	0.16	0.01	0.02	8.72	1.2	7
M401276		0.61	0.0116	0.07	1.66	10.9	<0.2	<10	80	0.24	0.21	0.01	0.07	25.7	5.4	16
M401277		0.57	0.0024	0.04	0.87	7.9	<0.2	<10	50	0.22	0.17	0.03	0.05	25.3	5.7	12
M401278		0.60	0.0016	0.06	1.10	10.0	<0.2	<10	90	0.17	0.37	0.01	0.05	28.8	3.3	11
M401279		0.52	0.0001	0.04	0.64	1.0	<0.2	<10	40	0.17	0.14	0.02	0.03	4.45	1.1	6
M401280		0.59	0.0003	0.03	0.30	1.8	<0.2	<10	20	0.06	0.10	0.02	0.01	14.20	0.9	3
M401281		0.70	0.0022	0.04	2.32	12.5	<0.2	<10	130	0.43	0.35	0.01	0.09	31.2	14.8	25
M401282		0.60	<0.0001	0.06	0.68	0.5	<0.2	<10	40	0.17	0.06	0.03	0.02	4.41	0.7	3
M401283		0.51	0.0020	0.10	0.35	0.3	<0.2	<10	130	0.16	0.08	0.05	0.05	13.85	0.4	5
M401284		0.61	<0.0001	0.07	0.52	1.2	<0.2	<10	30	0.15	0.10	0.02	0.02	5.79	0.8	4
M401285		0.59	0.0025	0.04	1.71	9.1	<0.2	<10	80	0.42	0.32	<0.01	0.06	42.6	11.5	24
M401286		0.58	0.0021	0.09	1.37	8.6	<0.2	<10	180	0.63	0.22	0.05	0.07	13.95	9.0	13
M401287		0.59	0.0032	0.08	1.50	11.7	<0.2	<10	90	0.53	0.36	0.05	0.09	42.2	14.2	23
M401288		0.59	0.0004	0.07	1.26	5.3	<0.2	<10	60	0.20	0.24	0.01	0.05	32.0	3.4	12
M401289		0.66	0.0005	0.05	1.52	6.2	<0.2	<10	110	0.52	0.24	0.01	0.05	39.9	7.7	18
M401290		0.62	0.0009	0.05	1.32	2.5	<0.2	<10	150	0.14	0.22	0.01	0.04	25.9	2.2	10



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401251		1.44	30.3	4.43	5.49	0.10	0.10	0.03	0.064	0.05	23.2	40.6	0.59	214	1.03	<0.01
M401252		0.84	9.8	3.14	6.47	0.09	0.04	0.01	0.015	0.05	22.9	38.4	0.28	201	2.65	<0.01
M401253		1.58	24.7	4.12	5.74	0.11	0.13	0.03	0.021	0.07	26.3	64.0	0.59	295	0.42	<0.01
M401254		1.27	19.9	3.33	5.38	0.09	0.06	0.01	0.019	0.07	22.2	57.6	0.41	353	0.74	<0.01
M401255		0.98	20.7	5.87	6.55	0.14	0.07	0.03	0.039	0.05	26.7	27.9	0.20	582	1.22	<0.01
M401256		1.28	8.6	3.02	7.26	0.09	0.04	0.01	0.017	0.06	24.2	25.0	0.25	190	0.51	<0.01
M401257		0.86	37.8	4.16	5.14	0.12	0.06	0.08	0.046	0.03	26.9	20.6	0.26	351	0.95	0.01
M401258		0.59	8.0	2.22	4.16	0.06	0.03	0.01	0.013	0.05	13.6	22.2	0.21	212	0.30	0.01
M401259		1.00	55.9	5.83	3.25	0.10	0.06	0.09	0.054	0.03	34.3	30.3	0.42	709	0.98	<0.01
M401260		0.89	17.4	3.23	4.65	0.05	0.06	0.02	0.015	0.08	19.1	44.5	0.49	467	0.51	<0.01
M401261		0.61	7.0	2.38	3.60	<0.05	0.03	0.03	0.011	0.04	12.3	29.0	0.30	332	0.51	<0.01
M401262		0.51	11.9	1.81	2.67	<0.05	0.04	0.03	0.009	0.05	10.2	20.1	0.26	345	0.33	0.02
M401263		0.27	9.1	1.13	1.54	<0.05	0.04	0.04	0.007	0.04	6.8	7.9	0.12	126	0.28	0.02
M401264		0.28	6.4	0.85	1.75	<0.05	0.03	0.02	0.006	0.03	5.3	6.2	0.07	110	0.36	0.02
M401265		1.06	31.1	2.49	2.81	<0.05	0.06	0.06	0.012	0.07	11.8	27.7	0.35	734	0.58	<0.01
M401266		0.50	13.3	2.69	3.22	<0.05	0.02	0.02	0.007	0.05	16.0	32.6	0.42	417	0.33	<0.01
M401267		1.20	37.4	2.93	4.32	<0.05	0.08	0.04	0.014	0.10	13.3	42.3	0.44	442	0.52	0.01
M401268		0.63	19.6	2.52	3.86	0.05	0.07	0.03	0.010	0.07	11.9	33.2	0.40	315	0.38	0.01
M401269		0.68	19.3	1.92	3.65	<0.05	0.09	0.03	0.011	0.07	9.0	28.3	0.27	274	0.42	0.01
M401270		1.20	28.1	2.36	4.12	<0.05	0.12	0.04	0.015	0.14	7.8	25.9	0.26	390	0.46	0.01
M401271		0.50	20.3	2.11	2.58	<0.05	0.04	0.03	0.014	0.04	8.8	20.5	0.27	238	1.97	<0.01
M401272		1.19	18.4	3.71	5.77	0.05	0.06	0.03	0.021	0.05	19.6	22.2	0.19	189	4.00	<0.01
M401273		0.13	4.1	0.34	1.82	<0.05	0.02	0.02	<0.005	0.02	1.4	0.3	0.02	12	0.28	0.02
M401274		1.18	14.0	0.88	3.19	<0.05	0.03	0.03	0.010	0.04	8.5	6.6	0.08	23	0.70	<0.01
M401275		1.18	4.8	1.28	4.14	<0.05	<0.02	0.03	0.005	0.02	4.3	2.4	0.04	64	0.71	0.01
M401276		1.34	12.0	3.21	5.14	<0.05	0.05	0.05	0.011	0.05	11.7	27.1	0.27	156	1.60	<0.01
M401277		0.59	14.2	1.96	2.84	<0.05	0.02	0.02	0.006	0.03	11.2	21.7	0.29	238	0.80	0.01
M401278		1.45	27.5	2.61	6.98	<0.05	0.02	0.03	0.011	0.04	13.5	4.3	0.07	108	1.68	<0.01
M401279		0.60	4.5	0.83	2.98	<0.05	<0.02	0.04	<0.005	0.02	2.2	2.1	0.04	43	0.45	0.01
M401280		0.58	2.7	0.42	1.85	<0.05	<0.02	0.03	<0.005	0.02	7.0	0.6	0.01	39	0.39	0.01
M401281		1.92	22.3	3.98	5.27	<0.05	0.07	0.02	0.017	0.06	13.4	53.1	0.52	454	0.69	<0.01
M401282		0.37	9.6	0.50	2.44	<0.05	0.02	0.03	<0.005	0.02	2.2	0.8	0.02	16	0.32	0.02
M401283		1.03	9.2	0.40	1.92	<0.05	<0.02	0.02	<0.005	0.02	6.8	0.8	0.03	17	0.28	0.01
M401284		0.44	10.6	0.67	2.83	<0.05	<0.02	0.04	0.005	0.02	2.9	0.8	0.01	23	0.38	0.01
M401285		1.03	24.2	3.68	4.52	0.05	0.06	0.03	0.011	0.05	20.4	54.1	0.61	339	0.61	<0.01
M401286		1.79	29.8	2.13	4.10	<0.05	0.03	0.04	0.011	0.11	6.3	28.2	0.29	406	0.73	0.02
M401287		0.88	28.4	3.66	4.48	<0.05	0.03	0.03	0.013	0.06	20.7	49.5	0.61	552	0.79	<0.01
M401288		0.83	10.2	2.57	5.03	<0.05	0.03	0.04	0.009	0.03	14.3	13.1	0.12	137	0.68	<0.01
M401289		1.49	12.0	3.12	5.03	<0.05	0.03	0.03	0.014	0.04	19.1	34.6	0.31	325	0.78	<0.01
M401290		0.51	6.5	1.93	5.34	<0.05	0.02	0.02	0.007	0.02	11.3	8.0	0.09	92	0.59	<0.01



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
Sample Description															
M401251	0.12	39.5	270	15.5	10.4	<0.001	0.01	0.42	6.3	0.6	0.4	26.7	0.01	0.02	4.7
M401252	0.22	19.1	140	13.0	8.1	<0.001	<0.01	0.40	1.8	0.2	0.4	6.2	<0.01	0.04	7.0
M401253	0.15	32.8	140	18.1	8.3	<0.001	<0.01	0.46	2.0	0.4	0.3	4.2	<0.01	0.05	9.1
M401254	0.25	34.0	200	18.0	8.3	<0.001	<0.01	0.31	1.9	0.4	0.3	37.9	<0.01	0.04	6.5
M401255	0.33	23.8	1450	29.6	6.3	<0.001	0.01	0.64	3.7	1.0	0.5	42.4	0.01	0.06	6.6
M401256	0.37	12.7	150	10.7	7.4	<0.001	<0.01	0.28	1.6	0.3	0.5	5.2	<0.01	0.04	5.5
M401257	0.31	33.4	1110	24.4	3.4	<0.001	0.03	0.60	4.0	0.9	0.3	53.8	0.01	0.07	5.4
M401258	0.26	13.0	280	9.9	4.9	<0.001	<0.01	0.19	1.3	0.2	0.2	21.8	<0.01	0.02	2.9
M401259	0.12	47.2	2190	35.9	3.8	<0.001	0.04	0.73	7.0	1.6	0.2	93.6	<0.01	0.05	6.4
M401260	0.19	26.2	150	18.1	7.9	<0.001	0.01	0.32	1.8	<0.2	0.2	19.0	<0.01	0.02	6.5
M401261	0.28	14.8	160	15.3	5.2	<0.001	0.01	0.29	0.9	0.6	0.2	56.8	<0.01	<0.01	3.9
M401262	0.17	14.1	340	9.9	3.9	<0.001	0.03	0.22	1.2	0.2	<0.2	88.2	<0.01	<0.01	2.0
M401263	0.16	7.4	440	7.3	2.8	<0.001	0.03	0.14	0.9	0.3	<0.2	116.5	<0.01	0.01	0.9
M401264	0.25	4.8	280	5.8	2.5	<0.001	0.02	0.12	0.5	<0.2	<0.2	80.9	<0.01	<0.01	0.9
M401265	0.15	25.9	580	16.2	4.7	<0.001	0.05	0.37	2.1	1.0	<0.2	149.5	<0.01	0.02	2.3
M401266	0.08	19.6	360	13.0	3.3	<0.001	<0.01	0.24	1.1	0.4	<0.2	21.6	<0.01	<0.01	6.1
M401267	0.15	25.5	480	16.4	7.2	<0.001	0.03	0.27	1.9	0.4	0.2	99.4	<0.01	<0.01	4.1
M401268	0.17	19.6	350	12.5	4.5	<0.001	0.02	0.26	1.4	0.5	<0.2	47.8	<0.01	<0.01	4.0
M401269	0.30	16.0	510	11.0	6.1	<0.001	0.05	0.25	1.0	0.7	0.2	144.5	<0.01	<0.01	2.2
M401270	0.25	18.8	530	14.9	8.9	<0.001	0.04	0.41	1.7	0.4	0.2	112.5	<0.01	0.01	2.8
M401271	0.23	19.3	630	11.8	4.4	<0.001	0.02	0.92	1.2	0.6	<0.2	44.8	<0.01	0.02	2.6
M401272	0.24	15.9	270	14.1	9.9	<0.001	0.01	1.08	1.8	0.4	0.3	4.9	<0.01	0.03	4.7
M401273	0.32	1.0	220	1.7	0.9	<0.001	0.01	0.05	0.1	<0.2	<0.2	4.9	<0.01	<0.01	0.5
M401274	0.24	3.6	290	13.4	5.0	<0.001	0.01	0.11	0.7	0.3	0.2	6.6	<0.01	<0.01	1.7
M401275	0.42	2.9	150	4.0	3.1	<0.001	0.01	0.21	0.4	<0.2	0.3	4.0	<0.01	0.01	0.9
M401276	0.34	14.3	240	10.8	6.7	<0.001	0.01	0.52	1.1	0.3	0.2	3.1	<0.01	0.02	3.4
M401277	0.13	13.0	310	10.9	3.4	<0.001	<0.01	0.29	0.6	0.3	0.2	5.4	<0.01	<0.01	2.5
M401278	0.40	6.9	290	10.4	5.1	<0.001	0.01	0.51	1.0	0.3	0.4	4.5	<0.01	0.05	2.9
M401279	0.32	2.4	160	4.6	1.9	<0.001	0.01	0.11	0.3	<0.2	0.2	5.1	<0.01	0.01	0.6
M401280	0.18	1.4	150	2.9	2.4	<0.001	0.01	0.09	0.2	0.2	<0.2	4.8	<0.01	<0.01	0.8
M401281	0.20	26.0	180	16.9	7.1	<0.001	0.01	0.34	1.7	0.2	0.3	4.5	<0.01	0.01	6.1
M401282	0.26	1.3	230	2.4	1.4	<0.001	0.01	0.07	0.2	0.2	0.2	6.4	<0.01	<0.01	0.5
M401283	0.08	1.3	200	3.0	3.5	<0.001	0.01	0.06	0.2	<0.2	0.2	23.4	<0.01	<0.01	0.7
M401284	0.32	1.7	160	4.0	1.4	<0.001	0.01	0.14	0.3	0.2	0.2	5.8	<0.01	<0.01	0.7
M401285	0.12	27.5	150	12.9	6.0	<0.001	<0.01	0.32	1.5	0.4	0.2	4.1	<0.01	0.01	7.2
M401286	0.20	18.0	350	13.5	8.8	<0.001	0.01	0.29	1.5	<0.2	0.2	53.8	<0.01	<0.01	2.1
M401287	0.09	30.3	360	17.3	4.4	<0.001	<0.01	0.43	1.7	0.7	0.2	21.3	<0.01	0.02	6.9
M401288	0.38	6.6	170	7.4	3.9	<0.001	<0.01	0.29	1.0	0.2	0.3	3.3	<0.01	0.02	3.5
M401289	0.30	16.4	160	10.4	6.8	<0.001	<0.01	0.28	1.2	0.6	0.3	4.1	<0.01	<0.01	5.2
M401290	0.33	4.2	110	6.3	3.3	<0.001	<0.01	0.17	0.9	<0.2	0.4	3.0	<0.01	0.01	3.9

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 2 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401251		<0.005	0.22	0.48	38	<0.05	11.70	115	4.2	
M401252		<0.005	0.15	0.54	41	0.13	1.99	66	1.9	
M401253		<0.005	0.08	0.48	18	0.27	2.45	81	5.0	
M401254		<0.005	0.07	0.91	18	0.23	3.81	65	1.8	
M401255		<0.005	0.10	0.94	29	0.18	14.65	59	2.0	
M401256		<0.005	0.08	0.38	25	0.19	1.95	34	1.7	
M401257		0.007	0.07	0.59	19	0.11	13.35	70	1.7	
M401258		0.006	0.04	0.33	15	0.15	2.32	33	1.1	
M401259		<0.005	0.06	0.77	12	<0.05	29.5	136	2.2	
M401260		<0.005	0.04	0.72	15	0.13	3.92	59	2.5	
M401261		0.007	0.03	0.34	14	0.10	1.52	46	1.0	
M401262		0.008	0.03	1.29	11	0.07	4.12	34	1.6	
M401263		0.009	0.02	0.80	9	<0.05	3.86	20	0.9	
M401264		0.012	0.02	0.59	8	0.05	2.07	25	0.8	
M401265		0.005	0.03	1.14	11	0.08	9.71	65	2.1	
M401266		<0.005	0.02	0.42	11	0.06	2.50	54	1.2	
M401267		<0.005	0.03	3.79	12	0.10	6.00	77	3.0	
M401268		0.006	0.02	1.21	11	0.09	4.09	56	2.3	
M401269		0.006	0.02	0.93	9	0.08	3.79	41	3.2	
M401270		<0.005	0.05	1.10	12	0.13	5.82	46	4.4	
M401271		0.007	0.06	1.29	14	0.09	3.38	97	1.9	
M401272		<0.005	0.16	0.63	48	0.08	2.21	81	3.1	
M401273		0.020	0.02	0.18	8	<0.05	0.44	4	0.7	
M401274		0.005	0.06	0.69	14	<0.05	1.38	12	0.9	
M401275		0.018	0.03	0.27	20	0.08	0.76	10	<0.5	
M401276		0.005	0.08	0.37	31	0.10	1.43	57	1.9	
M401277		0.005	0.04	0.32	14	0.06	1.45	42	0.5	
M401278		0.007	0.06	0.44	47	0.12	1.31	28	0.7	
M401279		0.015	0.02	0.26	13	0.06	0.62	8	<0.5	
M401280		0.009	0.02	0.18	12	<0.05	0.53	5	<0.5	
M401281		<0.005	0.05	0.46	22	0.13	1.93	78	3.4	
M401282		0.018	0.02	0.21	9	<0.05	0.58	6	0.7	
M401283		0.008	0.02	0.31	6	<0.05	1.04	5	<0.5	
M401284		0.017	0.02	0.30	12	0.06	0.51	6	0.5	
M401285		<0.005	0.03	0.56	17	0.14	2.38	72	2.7	
M401286		0.005	0.05	0.59	14	0.13	3.02	59	0.9	
M401287		0.005	0.03	0.58	17	0.12	3.86	85	1.2	
M401288		0.007	0.04	0.34	28	0.10	1.24	24	1.3	
M401289		0.005	0.05	0.37	23	0.08	1.80	49	1.7	
M401290		0.006	0.06	0.31	25	0.07	1.17	15	0.9	



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.

6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - A

Total # Pages: 8 (A - D)

Plus Appendix Pages

Finalized Date: 21-SEP-2012

Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401291		0.70	0.0024	0.12	2.08	7.8	<0.2	<10	190	0.81	0.31	0.03	0.10	34.4	13.5	23
M401292		0.73	0.0021	0.07	1.45	8.3	<0.2	<10	170	0.53	0.29	0.04	0.18	43.3	11.4	20
M401293		0.59	0.0012	0.04	1.07	4.1	<0.2	<10	90	0.21	0.20	0.01	0.04	30.7	6.5	15
M401294		0.63	0.0014	0.04	1.83	6.1	<0.2	<10	80	0.29	0.35	0.01	0.08	29.4	7.7	20
M401295		0.68	0.0031	<0.01	0.54	5.0	<0.2	<10	40	0.09	0.17	0.02	0.04	30.4	1.7	6
M401296		0.71	0.0024	0.04	1.32	13.9	<0.2	<10	110	0.57	0.34	0.15	0.22	56.7	17.0	20
M401297		0.61	0.0030	0.06	1.33	9.5	<0.2	<10	130	0.43	0.29	0.16	0.18	37.0	9.6	18
M401298		0.72	0.0040	0.13	1.59	14.5	<0.2	<10	130	0.62	0.39	0.22	0.22	52.9	14.2	22
M401299		0.58	0.0008	0.10	0.44	1.3	<0.2	<10	40	0.09	0.08	0.02	0.15	12.90	1.2	4
M401300		0.60	0.0008	0.40	1.47	11.7	<0.2	<10	110	0.23	0.33	0.03	0.50	30.5	5.7	13
M401301		0.43	0.0031	0.27	1.69	23.3	<0.2	<10	170	0.30	0.27	0.08	0.18	32.1	7.5	23
M401302		0.50	0.0006	0.28	1.50	23.7	<0.2	<10	190	0.23	0.23	0.11	0.32	30.9	14.7	15
M401303		0.47	0.0003	0.18	0.69	6.1	<0.2	<10	110	0.12	0.16	0.03	1.25	16.00	6.3	9
M401304		0.49	0.0004	0.07	0.59	9.1	<0.2	<10	150	0.15	0.14	0.25	0.64	28.2	10.3	11
M401305		0.47	0.0012	0.29	2.39	13.4	<0.2	<10	290	0.85	0.23	0.12	0.91	42.6	15.6	28
M401306		0.50	0.0009	0.20	1.46	19.1	<0.2	<10	220	0.17	0.30	0.01	0.11	33.1	3.6	17
M401307		0.48	0.0003	0.04	1.19	13.9	<0.2	<10	120	0.18	0.12	0.05	0.38	19.85	19.1	15
M401308		0.49	0.0012	0.34	1.18	15.4	<0.2	<10	170	0.21	0.23	0.05	0.22	27.8	5.2	16
M401309		0.50	0.0005	0.29	0.43	2.7	<0.2	<10	40	<0.05	0.10	0.01	0.06	18.10	1.7	6
M401310		0.54	0.0019	0.10	1.36	14.4	<0.2	<10	90	0.35	0.30	0.13	0.22	30.4	8.5	18
M401311		0.49	0.0008	0.01	1.21	17.7	<0.2	<10	60	0.14	0.33	0.03	0.06	35.5	5.5	14
M401312		0.42	0.0025	<0.01	1.28	18.4	<0.2	<10	60	0.15	0.31	0.01	0.03	33.3	4.5	15
M401313		0.52	0.0007	0.01	1.21	22.6	<0.2	<10	50	0.25	0.47	0.02	0.21	47.0	9.0	16
M401314		0.44	0.0030	<0.01	1.28	11.5	<0.2	<10	90	0.13	0.36	0.02	0.05	32.0	2.7	16
M401315		0.48	0.0007	0.03	1.72	19.4	<0.2	<10	50	0.26	0.33	0.01	0.07	29.9	4.6	16
M401316		0.49	0.0006	0.01	1.23	8.9	<0.2	<10	70	0.16	0.19	0.02	0.03	33.8	2.7	10
M401317		0.51	0.0016	<0.01	1.84	13.8	<0.2	<10	70	0.24	0.24	0.01	0.05	28.4	4.5	16
M401318		0.56	0.0009	0.04	1.61	11.1	<0.2	<10	330	0.50	0.33	0.36	0.18	22.0	10.9	16
M401319		0.55	0.0105	0.04	1.58	16.6	<0.2	<10	200	0.58	0.32	0.25	0.06	32.6	11.2	22
M401320		0.40	0.0032	0.06	1.79	16.1	<0.2	<10	480	0.92	0.39	0.64	0.11	16.90	9.3	21
M401321		0.55	0.0024	0.02	2.38	15.3	<0.2	<10	80	0.37	0.26	0.02	0.07	28.5	11.3	25
M401322		0.44	0.0084	0.07	1.51	13.5	<0.2	<10	80	0.37	0.31	0.03	0.06	37.6	11.3	21
M401323		0.52	0.0032	0.02	1.49	13.4	<0.2	<10	60	0.46	0.33	0.05	0.06	44.5	12.7	22
M401324		0.50	0.0062	0.03	1.38	11.2	<0.2	<10	80	0.41	0.28	0.10	0.05	29.3	10.0	19
M401325		0.57	0.0030	0.10	1.42	10.9	<0.2	<10	100	0.47	0.30	0.33	0.20	35.6	11.2	21
M401326		0.48	0.0026	0.11	1.55	10.4	<0.2	<10	110	0.61	0.33	0.41	0.21	30.2	13.0	21
M401327		0.52	0.0020	0.14	1.60	8.8	<0.2	<10	140	0.46	0.31	0.28	0.27	39.4	13.2	22
M401328		0.52	0.0019	0.10	1.38	7.8	<0.2	<10	120	0.38	0.27	0.31	0.19	31.9	10.6	19
M401329		0.54	0.0021	0.08	1.42	9.5	<0.2	<10	110	0.46	0.27	0.21	0.17	39.2	11.0	21
M401330		0.55	0.0022	0.05	1.36	10.0	<0.2	<10	80	0.46	0.35	0.09	0.19	50.4	13.5	21



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401291		1.42	42.8	3.54	3.87	<0.05	0.04	0.02	0.015	0.06	14.6	49.4	0.50	472	0.82	<0.01
M401292		1.04	43.2	3.54	4.16	0.05	0.03	0.04	0.013	0.05	20.3	38.9	0.50	426	1.25	<0.01
M401293		1.10	12.4	2.63	4.12	<0.05	<0.02	0.01	0.009	0.04	13.3	23.7	0.31	201	0.84	<0.01
M401294		1.63	14.3	4.01	5.97	<0.05	0.08	0.03	0.012	0.04	13.1	34.8	0.31	299	0.89	<0.01
M401295		0.33	4.9	0.90	3.75	<0.05	<0.02	0.01	0.006	0.02	14.2	4.5	0.07	74	0.81	<0.01
M401296		0.68	34.6	3.37	4.51	0.07	0.07	0.03	0.014	0.06	26.8	47.6	0.53	743	1.13	<0.01
M401297		0.75	24.3	2.95	3.89	0.05	0.02	0.03	0.013	0.08	16.8	37.5	0.45	332	0.84	<0.01
M401298		1.17	40.4	3.62	4.95	0.07	0.13	0.03	0.014	0.11	26.1	55.2	0.60	463	1.00	<0.01
M401299		0.45	4.4	0.46	2.66	<0.05	<0.02	0.03	0.005	0.03	6.3	5.1	0.04	23	0.28	<0.01
M401300		0.73	25.9	2.92	4.87	<0.05	0.05	0.07	0.025	0.03	14.9	11.7	0.11	102	3.41	<0.01
M401301		0.93	34.8	4.23	4.58	<0.05	0.09	0.07	0.026	0.10	15.8	31.2	0.36	229	7.04	<0.01
M401302		1.71	46.2	4.38	6.54	0.05	0.05	0.06	0.028	0.05	14.7	9.6	0.19	165	17.20	<0.01
M401303		0.76	22.8	1.72	2.91	<0.05	0.03	0.03	0.016	0.05	8.0	3.7	0.09	301	3.74	<0.01
M401304		0.66	26.6	3.42	1.50	<0.05	0.02	0.03	0.018	0.04	12.8	9.3	0.19	229	3.01	<0.01
M401305		0.92	30.0	5.67	4.37	0.05	0.09	0.05	0.033	0.06	17.3	34.3	0.48	833	3.33	<0.01
M401306		1.30	23.0	3.85	6.50	<0.05	0.03	0.03	0.015	0.09	16.1	12.2	0.20	90	6.21	<0.01
M401307		0.86	23.2	4.60	3.07	<0.05	0.05	0.04	0.017	0.03	8.8	12.6	0.20	994	3.71	<0.01
M401308		1.17	36.7	2.91	3.79	0.05	0.06	0.06	0.016	0.08	12.9	22.7	0.23	118	6.47	<0.01
M401309		2.01	7.3	0.51	3.05	<0.05	<0.02	0.03	0.006	0.04	9.2	0.6	0.02	15	2.09	<0.01
M401310		0.80	17.7	3.17	3.83	<0.05	0.07	0.04	0.013	0.05	13.8	47.2	0.43	263	1.71	<0.01
M401311		0.75	11.9	3.16	6.24	<0.05	0.03	0.02	0.010	0.04	18.0	18.4	0.21	159	1.23	<0.01
M401312		0.92	10.7	3.63	7.72	<0.05	0.03	0.02	0.013	0.05	15.5	23.0	0.26	136	0.63	<0.01
M401313		0.93	34.8	5.20	5.78	0.06	0.04	0.05	0.027	0.03	23.7	29.2	0.37	182	3.34	<0.01
M401314		1.28	9.0	3.26	8.39	<0.05	<0.02	0.04	0.009	0.03	15.3	4.4	0.10	115	1.12	<0.01
M401315		0.97	13.2	4.89	7.09	<0.05	0.09	0.04	0.012	0.04	13.8	21.3	0.23	140	0.62	<0.01
M401316		0.70	8.2	1.57	4.58	<0.05	0.02	0.03	0.008	0.03	16.1	11.5	0.10	165	0.74	<0.01
M401317		1.28	13.8	3.69	6.46	<0.05	0.09	0.03	0.013	0.04	13.7	25.9	0.24	184	0.86	<0.01
M401318		1.14	15.1	3.63	5.80	<0.05	0.03	0.01	0.015	0.05	10.0	35.7	0.32	467	0.87	<0.01
M401319		0.67	30.1	3.37	4.45	<0.05	0.08	0.03	0.011	0.05	15.2	51.5	0.61	508	0.89	<0.01
M401320		1.72	52.0	2.55	5.33	<0.05	0.17	0.04	0.020	0.15	8.7	29.1	0.38	530	1.32	<0.01
M401321		2.62	15.2	4.05	4.84	<0.05	0.13	0.04	0.018	0.06	13.0	50.0	0.49	560	0.40	<0.01
M401322		0.91	22.6	3.38	4.75	0.05	0.05	0.03	0.012	0.06	17.7	46.8	0.52	445	0.53	<0.01
M401323		1.54	30.5	3.62	4.65	0.06	0.03	0.03	0.013	0.06	21.8	46.8	0.56	532	0.58	<0.01
M401324		1.24	19.6	3.02	4.56	0.05	0.03	0.03	0.012	0.07	13.6	41.7	0.46	387	0.50	<0.01
M401325		1.34	28.9	3.23	3.86	0.06	0.06	0.03	0.012	0.07	16.0	39.8	0.54	705	0.68	<0.01
M401326		1.23	31.5	3.34	4.17	0.06	0.07	0.05	0.013	0.10	14.4	43.0	0.58	837	0.68	<0.01
M401327		0.82	29.0	3.42	4.38	0.05	0.06	0.05	0.012	0.09	19.3	44.3	0.58	543	0.88	<0.01
M401328		0.69	23.3	3.12	3.48	<0.05	0.05	0.04	0.010	0.08	14.8	35.2	0.51	638	0.81	<0.01
M401329		0.74	25.1	3.33	3.86	<0.05	0.02	0.03	0.014	0.07	18.7	41.3	0.54	477	0.72	<0.01
M401330		0.69	26.6	3.57	4.13	0.07	0.02	0.04	0.014	0.07	24.9	44.5	0.58	623	0.95	<0.01

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401291		0.18	26.9	270	18.0	6.5	<0.001	0.01	0.36	1.7	0.2	0.2	5.2	<0.01	0.02	5.6
M401292		0.16	25.8	350	15.9	5.6	<0.001	<0.01	0.54	1.6	0.7	0.2	5.9	<0.01	0.02	6.1
M401293		0.21	12.9	180	8.4	5.2	<0.001	<0.01	0.29	0.9	0.3	0.2	3.1	<0.01	<0.01	3.3
M401294		0.49	14.7	210	13.2	7.3	<0.001	0.01	0.36	1.3	0.6	0.3	4.3	<0.01	0.02	5.0
M401295		0.31	3.8	130	4.1	2.1	<0.001	<0.01	0.17	0.6	0.2	0.2	3.5	<0.01	0.04	2.2
M401296		<0.05	34.9	510	20.0	3.9	<0.001	<0.01	0.62	2.2	0.4	0.2	19.7	<0.01	0.02	9.7
M401297		0.11	25.3	450	12.6	4.8	<0.001	<0.01	0.42	1.6	0.3	0.2	18.7	<0.01	0.02	5.4
M401298		0.05	37.5	520	18.1	6.2	<0.001	<0.01	0.57	2.7	0.6	0.2	31.2	<0.01	0.04	10.6
M401299		0.14	3.0	180	3.6	3.9	<0.001	<0.01	0.07	0.5	0.2	0.2	5.1	<0.01	0.03	1.1
M401300		0.15	19.5	450	15.4	6.2	<0.001	<0.01	1.29	1.8	0.7	0.3	5.5	<0.01	0.03	4.7
M401301		0.23	25.1	1300	17.6	7.7	0.001	0.05	2.14	1.6	1.8	0.3	34.3	<0.01	0.05	3.5
M401302		0.29	37.0	1060	13.0	12.0	0.001	0.04	2.03	2.0	1.5	0.4	40.1	<0.01	0.05	1.4
M401303		0.15	12.3	930	8.5	6.7	<0.001	0.03	0.89	0.8	0.5	0.2	7.5	<0.01	0.01	0.6
M401304		0.06	24.7	970	10.9	4.7	0.001	0.01	1.21	2.2	1.2	<0.2	24.1	<0.01	0.01	2.2
M401305		0.23	33.9	750	18.6	7.6	<0.001	0.06	1.29	3.5	1.3	0.3	16.0	<0.01	0.03	3.9
M401306		0.29	12.4	1010	24.0	10.3	<0.001	0.04	1.33	1.9	0.6	0.4	26.4	<0.01	0.03	3.3
M401307		0.17	16.5	1870	8.2	6.6	<0.001	0.04	0.83	1.6	0.6	<0.2	20.7	<0.01	0.02	1.0
M401308		0.17	18.9	1390	14.0	8.4	<0.001	0.06	1.78	1.3	1.7	0.2	29.8	<0.01	0.05	1.8
M401309		0.10	6.1	260	3.9	4.1	<0.001	<0.01	0.24	0.3	0.2	0.2	2.8	<0.01	0.03	0.4
M401310		0.13	25.1	460	16.9	5.7	<0.001	0.02	0.46	1.3	1.2	0.2	15.6	<0.01	0.04	3.0
M401311		0.42	11.9	200	11.1	5.0	<0.001	<0.01	0.47	1.1	0.5	0.4	5.0	<0.01	0.09	4.1
M401312		0.30	13.0	200	9.6	6.4	<0.001	<0.01	0.35	1.1	0.2	0.3	3.9	<0.01	0.06	4.5
M401313		0.20	28.9	300	24.1	4.1	<0.001	0.01	0.73	1.9	0.2	0.2	4.6	<0.01	0.04	6.0
M401314		1.64	6.7	270	7.7	3.7	<0.001	0.01	0.61	1.2	0.8	0.7	4.2	<0.01	0.03	2.3
M401315		0.48	11.5	260	8.1	4.7	<0.001	0.01	0.42	1.1	<0.2	0.3	3.4	<0.01	0.06	4.6
M401316		0.29	5.5	160	10.3	4.3	<0.001	<0.01	0.18	0.8	0.2	0.3	3.9	<0.01	0.03	3.3
M401317		0.39	11.6	230	8.0	5.3	<0.001	0.01	0.30	1.2	0.3	0.3	3.4	<0.01	0.03	4.5
M401318		0.37	16.7	430	22.4	5.8	<0.001	0.02	0.28	1.1	0.3	0.3	32.2	<0.01	0.06	2.4
M401319		0.12	27.9	360	15.8	4.3	<0.001	0.01	0.34	1.4	0.5	0.2	21.8	<0.01	0.04	4.4
M401320		0.26	22.0	1040	14.1	10.7	<0.001	0.06	0.40	2.5	1.3	0.3	61.4	<0.01	0.04	3.5
M401321		0.24	25.3	390	16.5	6.1	<0.001	0.01	0.34	1.5	0.3	0.2	5.2	<0.01	0.03	5.3
M401322		0.08	26.2	340	15.2	5.3	<0.001	<0.01	0.35	1.3	<0.2	0.2	5.4	<0.01	0.04	5.4
M401323		0.07	27.5	350	15.2	4.7	<0.001	<0.01	0.31	1.5	0.3	0.2	9.5	<0.01	0.03	5.8
M401324		0.12	23.6	340	10.8	5.1	<0.001	<0.01	0.30	1.3	<0.2	0.2	19.4	<0.01	0.02	4.0
M401325		0.16	26.9	570	15.1	4.2	<0.001	<0.01	0.46	2.0	0.6	0.2	54.3	<0.01	0.04	6.7
M401326		0.13	28.8	530	15.4	5.3	0.001	0.01	0.40	1.9	0.4	0.2	67.1	<0.01	0.04	5.4
M401327		0.17	30.1	510	17.9	5.0	0.001	<0.01	0.48	2.1	0.9	0.2	30.6	<0.01	0.05	7.0
M401328		0.12	23.6	550	12.9	4.2	<0.001	<0.01	0.39	1.6	0.4	<0.2	29.2	<0.01	0.03	5.6
M401329		0.11	26.3	470	14.5	4.3	<0.001	<0.01	0.41	1.6	0.3	0.2	21.7	<0.01	0.05	5.5
M401330		0.09	27.9	510	17.0	4.1	<0.001	<0.01	0.48	1.6	<0.2	0.2	11.1	<0.01	0.05	7.5



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - D
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401291		<0.005	0.05	0.66	19	0.07	2.80	73	1.7	
M401292		0.006	0.04	0.72	20	0.07	4.47	87	1.3	
M401293		0.006	0.04	0.35	21	0.06	1.40	45	0.5	
M401294		0.006	0.05	0.45	28	0.11	1.87	48	3.0	
M401295		0.010	0.04	0.27	20	0.21	1.08	13	<0.5	
M401296		<0.005	0.05	0.70	15	0.11	5.91	84	4.9	
M401297		0.005	0.04	0.86	15	0.10	4.10	81	1.2	
M401298		<0.005	0.06	0.74	17	0.11	5.94	103	6.4	
M401299		0.007	0.05	0.30	10	0.05	0.76	15	<0.5	
M401300		<0.005	0.24	0.46	53	0.05	2.51	128	2.3	
M401301		<0.005	0.21	1.36	41	0.15	2.55	110	3.1	
M401302		0.005	0.85	1.15	49	0.07	4.90	158	1.7	
M401303		0.006	0.17	0.77	29	0.06	2.16	169	1.0	
M401304		<0.005	0.15	0.69	12	<0.05	4.34	123	0.6	
M401305		<0.005	0.15	1.29	43	0.07	11.05	127	3.8	
M401306		0.005	0.33	0.76	69	0.10	1.94	66	1.4	
M401307		0.005	0.31	0.88	31	<0.05	4.21	75	1.9	
M401308		<0.005	0.38	1.32	30	0.11	2.89	94	1.7	
M401309		0.005	0.14	0.27	12	<0.05	0.90	23	<0.5	
M401310		<0.005	0.08	2.42	17	0.12	2.97	89	1.8	
M401311		0.006	0.06	0.45	37	0.11	1.53	39	1.3	
M401312		0.005	0.05	0.35	24	0.21	1.44	39	1.5	
M401313		<0.005	0.11	0.42	25	<0.05	3.13	91	1.7	
M401314		0.049	0.07	0.44	64	0.23	1.50	28	0.6	
M401315		0.007	0.04	0.41	30	0.21	1.44	39	3.4	
M401316		0.005	0.04	0.30	21	0.12	1.30	15	1.0	
M401317		<0.005	0.07	0.34	25	0.24	1.36	37	3.5	
M401318		0.009	0.03	0.60	21	0.18	2.02	109	1.1	
M401319		<0.005	0.03	1.78	15	0.16	3.72	70	2.7	
M401320		<0.005	0.06	1.61	18	0.30	4.40	55	5.0	
M401321		<0.005	0.04	0.39	15	0.22	1.59	68	4.1	
M401322		<0.005	0.04	0.43	15	0.19	2.85	67	1.6	
M401323		<0.005	0.03	0.54	16	0.22	2.83	75	1.0	
M401324		0.005	0.03	0.45	15	0.19	2.22	65	1.1	
M401325		0.007	0.04	3.16	17	0.14	5.04	89	2.7	
M401326		<0.005	0.06	1.60	17	0.16	5.07	87	2.4	
M401327		0.006	0.06	0.98	18	0.09	4.91	95	2.8	
M401328		0.006	0.05	0.61	17	0.07	3.71	86	2.4	
M401329		0.005	0.04	0.62	17	0.10	4.15	87	0.7	
M401330		0.006	0.05	0.55	18	0.10	3.87	87	1.2	



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 S ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401331		0.58	0.0023	0.04	1.40	11.0	<0.2	<10	110	0.46	0.24	0.05	0.08	20.0	8.3	17
M401332		0.57	0.0041	0.03	1.58	17.3	<0.2	<10	70	0.45	0.37	0.10	0.08	43.9	15.6	24
M401333		0.52	0.0027	0.03	1.70	18.3	<0.2	<10	90	0.46	0.38	0.05	0.07	32.1	14.0	24
M401334		0.58	0.0012	0.05	2.20	17.1	<0.2	<10	80	0.40	0.39	0.01	0.06	27.6	10.9	27
M401335		0.47	0.0035	0.06	2.08	18.7	<0.2	<10	60	0.40	0.37	0.01	0.07	34.3	15.7	27
M401336		0.54	0.0009	0.28	1.57	20.9	<0.2	<10	150	0.23	0.29	0.04	0.17	27.4	5.6	20
M401337		0.49	0.0005	1.21	1.36	7.2	<0.2	<10	250	0.74	0.09	0.26	0.74	41.0	9.9	16
M401338		0.54	0.0003	0.30	0.70	7.3	<0.2	<10	90	0.07	0.18	0.03	0.06	23.5	2.4	7
M401339		0.62	0.0006	0.22	2.06	23.8	<0.2	<10	190	0.93	0.38	0.16	0.64	34.1	34.5	14
M401340		0.56	0.0004	1.12	0.91	12.2	<0.2	<10	250	0.59	0.23	0.67	1.00	19.65	9.8	11
M401341		0.52	0.0016	0.24	1.32	18.7	<0.2	<10	150	0.15	0.28	0.03	0.11	30.7	2.7	17
M401342		0.51	0.0007	0.13	0.73	19.2	<0.2	<10	80	0.17	0.50	0.03	0.11	25.0	4.2	14
M401343		0.58	0.0013	0.28	1.36	14.6	<0.2	<10	180	0.49	0.37	0.54	0.21	34.8	11.3	19
M401344		0.67	0.0035	0.38	1.80	28.1	<0.2	<10	190	0.62	0.40	0.63	0.47	29.1	13.0	22
M401345		0.48	0.0019	0.04	1.85	23.4	<0.2	<10	90	0.25	0.35	0.02	0.11	33.0	9.4	24
M401346		0.62	0.0039	0.15	1.12	18.8	<0.2	<10	100	0.32	0.27	0.22	0.76	40.2	16.0	17
M401347		0.56	0.0024	0.06	1.53	17.4	<0.2	<10	80	0.24	0.32	0.06	0.19	29.3	7.2	20
M401348		0.46	0.0004	0.14	0.81	22.7	<0.2	<10	90	0.49	0.27	0.99	0.22	31.7	7.1	7
M401349		0.67	0.0054	0.04	1.57	18.6	<0.2	<10	90	0.44	0.33	0.08	0.14	47.4	13.3	21
M401350		0.51	0.0012	0.10	1.98	14.7	<0.2	<10	90	0.31	0.30	0.01	0.11	27.3	7.0	20
M401351		0.48	0.0044	0.10	1.36	12.5	<0.2	<10	130	0.35	0.28	0.18	0.11	39.7	7.6	19
M401352		0.62	0.0034	0.05	1.22	11.0	<0.2	<10	100	0.40	0.50	0.09	0.10	17.65	10.5	16
M401353		0.45	0.0039	0.03	1.58	14.9	<0.2	<10	130	0.66	0.30	0.12	0.05	36.5	11.1	21
M401354		0.54	0.0041	0.07	1.68	17.8	<0.2	<10	100	0.69	0.43	0.22	0.09	33.0	16.8	25
M401355		0.52	0.0007	0.17	1.81	20.9	<0.2	<10	200	0.28	0.27	0.09	0.22	28.0	5.6	19
M401356		0.44	0.0001	0.20	1.47	12.4	<0.2	<10	290	0.33	0.24	0.11	0.37	25.2	9.7	13
M401357		0.45	0.0038	0.13	1.41	20.9	<0.2	<10	180	0.22	0.30	0.07	0.29	29.4	8.1	20
M401358		0.44	0.0007	0.06	1.05	13.2	<0.2	<10	100	0.13	0.31	0.03	0.20	24.9	7.9	13
M401359		0.46	0.0145	0.15	2.02	16.1	<0.2	<10	360	0.78	0.25	0.35	0.62	35.4	17.9	19
M401360		0.31	0.0019	0.49	1.54	11.3	<0.2	<10	290	0.46	0.22	0.95	2.39	23.2	16.4	19
M401361		0.54	0.0010	0.06	1.27	11.9	<0.2	<10	140	0.24	0.25	0.32	0.28	25.8	7.5	18
M401362		0.56	0.0028	0.10	0.59	3.7	<0.2	<10	50	0.10	0.17	0.02	0.13	35.3	1.1	5
M401363		0.48	0.0033	0.52	2.12	16.2	<0.2	<10	220	0.66	0.29	0.40	0.77	39.5	17.0	22
M401364		0.44	0.0012	0.04	1.32	15.0	<0.2	<10	40	0.39	0.34	0.14	0.14	48.9	10.4	16
M401365		0.55	0.0021	0.04	1.15	10.5	<0.2	<10	140	0.24	0.25	0.28	0.06	20.7	5.7	13
M401366		0.64	0.0012	0.03	2.80	5.4	<0.2	<10	180	0.71	0.09	0.87	0.06	37.2	11.5	28
M401367		0.58	0.0016	0.03	2.49	5.6	<0.2	<10	180	0.85	0.12	0.77	0.10	36.5	8.7	26
M401368		0.52	0.0020	0.04	1.73	7.2	<0.2	<10	90	0.53	0.18	0.20	0.10	22.5	6.6	27
M401369		0.66	0.0014	0.04	2.10	5.4	<0.2	<10	140	0.61	0.11	0.28	0.07	30.7	10.1	25
M401370		0.57	0.0003	0.02	2.44	3.8	<0.2	<10	270	0.85	0.09	0.42	0.05	53.5	12.9	23



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401331		1.11	22.2	2.71	3.50	<0.05	0.05	0.03	0.011	0.08	9.7	31.9	0.40	320	0.53	0.02
M401332		0.75	30.1	3.77	4.34	0.06	0.03	0.01	0.014	0.07	22.8	49.0	0.63	768	0.52	0.01
M401333		1.12	26.1	3.71	5.06	0.05	0.05	0.02	0.017	0.08	16.1	48.7	0.59	651	0.79	0.01
M401334		1.89	18.7	4.31	4.96	<0.05	0.11	0.04	0.021	0.05	13.6	46.6	0.51	333	0.72	0.01
M401335		1.16	24.1	3.94	4.65	0.05	0.12	0.04	0.017	0.05	17.4	55.2	0.61	466	0.61	0.01
M401336		0.87	26.6	3.86	4.78	<0.05	0.06	0.03	0.021	0.09	15.0	18.7	0.28	194	5.24	0.01
M401337		0.31	14.8	2.95	1.68	0.07	0.08	0.11	0.017	0.02	19.4	13.5	0.28	1070	2.28	<0.01
M401338		1.04	11.5	1.01	3.68	<0.05	0.02	0.02	0.005	0.05	12.8	1.7	0.04	27	4.62	0.01
M401339		0.99	43.7	3.87	3.23	0.06	0.07	0.02	0.025	0.06	15.8	41.0	0.44	262	4.11	0.01
M401340		1.02	47.3	2.04	2.71	<0.05	0.03	0.06	0.020	0.05	9.6	10.3	0.11	256	5.03	0.01
M401341		0.86	25.4	2.81	4.86	<0.05	0.04	0.03	0.020	0.06	17.5	8.7	0.14	64	6.32	0.01
M401342		1.52	26.5	3.02	4.98	<0.05	<0.02	0.03	0.017	0.05	13.4	3.8	0.07	116	4.55	0.01
M401343		1.60	33.4	3.09	4.13	0.05	0.05	0.07	0.022	0.06	18.0	27.0	0.28	308	3.33	0.01
M401344		0.96	42.1	3.62	4.11	<0.05	0.13	0.11	0.020	0.10	15.2	43.2	0.52	340	1.88	0.01
M401345		0.77	21.3	4.53	4.51	<0.05	0.07	0.01	0.016	0.08	16.8	41.5	0.50	328	1.49	0.01
M401346		0.43	37.6	3.05	2.94	0.07	0.04	0.04	0.013	0.05	19.4	32.7	0.43	553	3.10	0.01
M401347		0.75	21.5	3.97	3.91	0.05	0.08	0.01	0.018	0.07	15.2	30.5	0.41	212	2.06	0.01
M401348		0.22	22.5	2.78	1.57	0.05	0.05	0.04	0.034	0.02	19.0	8.7	0.13	562	1.97	0.01
M401349		0.54	27.7	3.36	4.03	0.07	0.02	0.01	0.016	0.05	24.7	46.7	0.54	439	1.28	0.01
M401350		1.24	19.8	3.29	4.81	<0.05	0.09	0.03	0.016	0.06	14.1	33.8	0.36	196	1.54	0.01
M401351		0.68	20.2	2.77	3.79	0.06	0.02	0.03	0.014	0.06	20.4	37.1	0.47	234	1.44	0.01
M401352		1.61	8.9	2.91	4.27	<0.05	0.03	<0.01	0.012	0.04	8.9	24.4	0.39	548	1.06	0.01
M401353		0.97	25.0	3.17	4.36	0.05	0.02	0.01	0.013	0.05	18.4	52.8	0.54	488	0.49	0.01
M401354		2.29	37.0	3.71	4.07	0.06	0.05	0.01	0.015	0.08	15.9	47.1	0.68	1140	0.74	0.01
M401355		1.11	32.3	4.18	5.16	0.05	0.05	0.03	0.024	0.08	14.9	18.2	0.31	117	6.75	0.01
M401356		1.03	27.4	3.20	3.48	<0.05	0.09	0.02	0.021	0.06	12.8	13.6	0.31	299	8.05	0.01
M401357		0.90	29.3	3.93	4.12	0.05	0.06	0.02	0.018	0.09	15.5	23.8	0.34	269	4.53	0.01
M401358		1.14	24.4	3.38	3.82	<0.05	0.04	0.03	0.017	0.05	12.4	9.4	0.23	170	3.47	0.01
M401359		0.98	20.4	5.96	3.87	0.05	0.13	0.03	0.041	0.04	16.4	25.9	0.25	1000	7.24	0.01
M401360		0.83	41.6	3.08	3.24	<0.05	0.09	0.14	0.020	0.07	11.2	26.4	0.40	1000	3.88	0.01
M401361		0.68	12.6	2.81	3.86	<0.05	0.04	0.01	0.014	0.06	12.7	28.3	0.42	219	2.49	0.01
M401362		0.67	9.2	0.56	4.72	<0.05	<0.02	0.01	0.007	0.04	18.5	2.4	0.03	28	0.80	0.01
M401363		0.97	17.0	3.77	4.34	0.05	0.06	0.03	0.022	0.05	18.2	46.4	0.47	431	0.71	0.01
M401364		0.82	30.1	3.62	3.79	0.05	0.05	0.03	0.028	0.03	22.8	30.7	0.35	328	1.09	0.01
M401365		0.77	12.2	1.91	3.25	<0.05	0.03	0.01	0.008	0.05	9.8	23.4	0.28	274	0.51	0.01
M401366		1.30	13.4	3.32	9.28	0.08	0.07	0.01	0.026	0.13	15.2	21.7	0.94	625	0.73	0.02
M401367		1.03	15.8	2.74	8.28	0.06	0.03	0.03	0.021	0.08	19.8	16.6	0.65	484	0.46	0.02
M401368		1.29	16.4	3.00	9.00	<0.05	0.08	0.05	0.022	0.08	10.3	13.9	0.45	243	1.47	0.01
M401369		1.02	17.5	2.92	7.94	0.05	0.04	0.04	0.024	0.09	15.2	19.7	0.71	469	0.78	0.01
M401370		1.95	12.0	4.14	10.60	0.07	<0.02	0.04	0.050	0.29	19.3	24.5	1.04	930	0.81	0.01

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401331		0.17	20.3	250	10.5	4.8	<0.001	0.01	0.36	1.3	<0.2	<0.2	9.4	<0.01	0.03	3.2
M401332		0.05	32.2	480	19.7	3.4	<0.001	<0.01	0.43	1.9	<0.2	<0.2	12.3	<0.01	0.03	8.4
M401333		0.14	28.5	340	17.3	5.5	<0.001	0.01	0.42	1.5	<0.2	0.2	12.4	<0.01	0.04	5.2
M401334		0.36	26.3	290	19.5	5.1	0.001	0.02	0.49	1.6	<0.2	0.2	3.9	<0.01	0.04	6.0
M401335		0.16	31.0	180	20.6	4.7	0.001	0.01	0.45	1.5	0.2	0.2	3.4	<0.01	0.03	7.3
M401336		0.28	17.2	1180	19.6	7.3	<0.001	0.04	1.63	1.4	1.2	0.3	25.0	<0.01	0.05	2.8
M401337		0.06	26.5	640	7.2	2.4	0.001	0.03	0.64	3.6	0.7	<0.2	25.4	<0.01	0.02	2.4
M401338		0.12	7.8	770	10.8	7.0	<0.001	0.02	0.75	0.4	0.2	0.3	9.8	<0.01	0.04	0.6
M401339		0.06	86.2	580	25.6	6.3	0.001	0.03	1.88	2.3	2.2	0.2	31.4	<0.01	0.04	4.5
M401340		0.26	22.5	1560	22.6	5.6	0.002	0.06	1.23	1.1	1.9	0.3	70.8	<0.01	0.04	0.6
M401341		0.35	10.7	1080	17.1	5.6	0.001	0.05	1.87	1.3	1.5	0.3	28.6	<0.01	0.05	2.9
M401342		0.44	10.6	1390	27.6	5.9	<0.001	0.06	1.37	0.5	0.5	0.4	21.7	<0.01	0.14	0.7
M401343		0.20	29.6	1630	20.5	7.7	<0.001	0.03	1.18	1.8	0.8	0.3	69.9	<0.01	0.07	2.8
M401344		0.13	33.9	920	28.2	6.1	0.001	0.04	0.80	2.7	1.4	0.2	69.1	<0.01	0.06	5.0
M401345		0.28	25.6	450	22.1	5.9	<0.001	0.02	0.82	1.5	0.2	0.2	7.1	<0.01	0.03	5.0
M401346		0.06	33.0	1060	20.4	2.6	0.001	0.02	1.46	1.6	0.3	<0.2	30.0	<0.01	0.02	6.2
M401347		0.27	21.2	690	19.8	5.5	0.001	0.02	0.86	1.3	0.2	0.2	10.2	<0.01	0.04	4.2
M401348		0.12	20.2	960	20.8	2.6	0.001	0.04	0.92	3.4	0.4	<0.2	49.3	<0.01	0.02	1.9
M401349		0.06	29.3	560	19.6	3.9	0.001	0.01	0.70	1.5	0.4	<0.2	8.9	<0.01	0.05	6.7
M401350		0.39	19.3	290	17.2	6.8	<0.001	0.02	0.67	1.4	0.3	0.2	3.7	<0.01	0.06	4.4
M401351		0.10	24.1	660	12.2	5.1	<0.001	0.01	0.54	1.3	0.2	<0.2	19.3	<0.01	0.06	3.8
M401352		0.22	16.5	270	17.4	4.2	<0.001	0.01	0.32	1.1	<0.2	0.3	11.7	<0.01	0.04	3.8
M401353		0.12	26.7	370	15.8	4.7	0.001	0.01	0.36	1.5	<0.2	0.2	14.4	<0.01	0.03	5.3
M401354		0.10	32.4	530	24.1	3.7	0.001	0.01	0.51	2.2	<0.2	<0.2	69.5	<0.01	0.05	7.7
M401355		0.34	19.8	2190	21.7	9.7	0.001	0.05	1.78	2.0	1.5	0.3	34.0	<0.01	0.03	3.4
M401356		0.14	29.7	1180	16.8	8.1	<0.001	0.03	1.70	1.3	0.3	0.2	24.4	<0.01	0.03	1.5
M401357		0.24	21.4	1180	20.2	6.7	<0.001	0.04	1.68	1.2	0.7	0.2	19.4	<0.01	0.06	3.2
M401358		0.31	18.5	720	15.2	8.0	<0.001	0.03	1.60	1.4	0.3	0.2	7.1	<0.01	0.02	1.9
M401359		0.44	32.3	1070	17.9	9.5	0.001	0.04	1.95	3.0	0.8	0.3	46.1	<0.01	0.01	2.0
M401360		0.40	42.8	1110	14.1	5.6	0.002	0.08	1.10	2.4	2.1	0.2	85.5	<0.01	0.04	1.4
M401361		0.44	20.1	410	12.9	5.5	<0.001	0.02	0.60	1.3	<0.2	0.2	34.2	<0.01	0.03	2.4
M401362		0.20	2.5	200	5.3	4.1	<0.001	0.01	0.20	0.5	<0.2	0.3	7.4	<0.01	0.04	2.1
M401363		0.24	29.2	460	21.4	6.1	<0.001	0.03	0.52	2.3	0.4	0.2	37.5	<0.01	0.08	4.1
M401364		0.13	26.9	360	21.6	3.9	0.001	0.03	0.67	2.2	0.5	0.2	14.5	<0.01	0.04	4.7
M401365		0.28	12.3	490	11.4	4.5	0.001	0.02	0.25	0.8	<0.2	0.2	28.2	<0.01	0.03	2.3
M401366		1.24	15.2	1030	6.4	11.7	<0.001	0.01	0.19	6.2	0.4	0.5	85.9	0.01	0.01	3.3
M401367		1.21	15.6	950	8.6	10.2	<0.001	0.01	0.24	4.4	0.3	0.5	69.8	0.01	<0.01	2.5
M401368		2.19	14.2	230	8.8	16.1	<0.001	0.01	0.43	3.6	0.2	0.7	24.8	<0.01	0.01	3.0
M401369		1.51	14.7	420	6.8	10.7	<0.001	0.01	0.21	4.1	0.4	0.5	24.9	0.01	<0.01	3.5
M401370		0.69	11.9	1010	6.6	30.8	<0.001	0.01	0.15	8.6	0.4	0.9	42.8	<0.01	<0.01	3.8



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 4 - D
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401331		0.005	0.06	0.41	17	0.16	2.09	62	1.3	
M401332		0.005	0.03	0.57	16	0.16	3.91	86	2.4	
M401333		<0.005	0.05	0.53	19	0.22	2.42	81	1.7	
M401334		<0.005	0.05	0.51	23	0.19	1.80	69	3.9	
M401335		<0.005	0.04	0.47	18	0.17	1.93	73	4.8	
M401336		0.005	0.19	0.92	54	0.14	2.05	94	2.0	
M401337		<0.005	0.07	1.81	11	<0.05	18.75	42	3.2	
M401338		<0.005	0.21	0.41	29	0.06	1.21	45	0.9	
M401339		<0.005	0.18	2.48	25	0.05	10.00	235	2.4	
M401340		0.008	0.22	2.94	21	0.06	7.07	97	0.8	
M401341		0.005	0.19	1.13	75	0.11	2.08	72	1.6	
M401342		0.010	0.16	0.72	45	0.20	2.15	61	<0.5	
M401343		0.005	0.19	1.49	25	0.08	8.63	106	1.7	
M401344		<0.005	0.10	3.20	20	0.22	9.83	123	4.2	
M401345		<0.005	0.08	0.59	22	0.23	2.09	85	2.8	
M401346		<0.005	0.10	1.04	16	0.11	5.92	125	2.0	
M401347		<0.005	0.09	0.61	23	0.13	2.22	91	2.4	
M401348		<0.005	0.05	1.33	10	<0.05	14.30	58	1.8	
M401349		<0.005	0.06	0.69	18	0.11	4.24	95	1.4	
M401350		0.006	0.10	0.60	26	0.16	1.96	68	3.3	
M401351		<0.005	0.07	0.75	18	0.12	3.34	79	0.8	
M401352		0.005	0.03	0.72	25	0.12	1.90	60	0.6	
M401353		<0.005	0.04	1.40	15	0.14	3.33	68	1.0	
M401354		<0.005	0.03	3.02	16	0.24	4.46	92	2.5	
M401355		0.005	0.29	1.11	59	0.10	2.77	126	2.5	
M401356		<0.005	0.27	1.01	27	0.05	3.39	104	3.2	
M401357		<0.005	0.15	0.99	32	0.15	2.52	113	2.1	
M401358		0.005	0.28	0.44	34	<0.05	2.14	101	1.5	
M401359		0.005	0.21	1.18	24	0.06	10.20	116	3.0	
M401360		0.009	0.37	4.26	23	0.10	12.35	167	2.8	
M401361		0.010	0.11	0.62	27	0.17	2.37	108	1.0	
M401362		0.007	0.08	0.47	14	0.07	1.24	11	<0.5	
M401363		<0.005	0.07	1.66	25	0.15	8.92	108	2.4	
M401364		<0.005	0.07	0.34	16	0.05	5.26	63	1.4	
M401365		0.009	0.05	0.58	14	0.16	1.86	44	0.9	
M401366		0.161	0.09	0.60	85	0.12	6.00	72	1.9	
M401367		0.125	0.09	0.64	69	0.15	6.49	59	1.1	
M401368		0.147	0.11	0.53	86	0.24	3.71	51	2.4	
M401369		0.134	0.09	0.54	72	0.16	4.71	60	1.3	
M401370		0.110	0.17	0.52	92	0.09	7.58	107	0.5	

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401371		0.55	0.0007	0.04	1.91	6.4	<0.2	<10	200	0.55	0.15	0.31	0.11	22.5	8.5	31
M401372		0.56	0.0006	0.02	1.95	5.0	<0.2	<10	150	0.36	0.13	0.35	0.11	25.1	11.0	22
M401373		0.71	0.0042	0.09	2.56	5.5	<0.2	<10	300	0.75	0.16	0.48	0.09	32.6	12.2	30
M401374		0.77	0.0010	0.05	2.85	2.9	<0.2	<10	470	0.76	0.15	0.63	0.06	56.9	13.9	60
M401375		0.52	0.0011	0.01	0.97	3.4	<0.2	<10	70	0.18	0.12	0.14	0.07	12.05	4.1	16
M401376		0.67	0.0009	0.06	1.59	2.6	<0.2	<10	210	0.59	0.10	0.31	0.06	26.1	8.6	16
M401377		0.65	0.0026	0.03	2.03	4.8	<0.2	<10	300	0.60	0.12	0.33	0.14	30.6	9.6	22
M401378		0.66	0.0011	0.02	2.55	7.0	<0.2	<10	260	0.58	0.16	0.42	0.15	38.1	13.5	29
M401379		0.93	0.0008	0.03	2.22	4.7	<0.2	<10	430	0.54	0.12	0.43	0.08	29.7	11.5	29
M401380		0.80	0.0023	0.02	2.18	3.3	<0.2	<10	390	0.46	0.13	0.40	0.04	25.7	7.8	24
M401381		0.47	0.0001	0.01	0.23	0.2	<0.2	<10	30	<0.05	0.02	0.23	<0.01	7.66	3.2	4
M401382		0.72	0.0009	0.03	1.26	2.6	<0.2	<10	260	0.26	0.09	0.38	0.05	18.15	6.4	19
M401383		0.81	0.0014	0.05	1.91	3.4	<0.2	<10	190	0.45	0.09	0.54	0.08	22.3	7.1	26
M401384		0.77	0.0010	0.04	1.88	3.2	<0.2	<10	170	0.45	0.08	0.52	0.05	23.9	7.4	25
M401385		0.76	0.0034	0.06	1.99	5.0	<0.2	<10	260	0.53	0.13	0.43	0.10	26.0	7.3	28
M401386		0.63	0.0016	0.03	1.58	4.6	<0.2	<10	320	0.37	0.13	0.40	0.07	25.5	7.2	27
M401387		0.75	0.0026	0.08	2.07	3.7	<0.2	<10	320	0.51	0.08	0.55	0.06	23.1	8.1	22
M401388		0.65	0.0023	0.03	1.70	3.9	<0.2	<10	160	0.41	0.11	0.49	0.11	21.6	7.8	20
M401389		0.66	0.0014	0.05	1.70	4.0	<0.2	<10	360	0.49	0.09	0.51	0.07	22.5	8.1	21
M401390		0.65	0.0013	0.12	2.30	3.2	<0.2	<10	330	0.75	0.10	0.50	0.06	44.1	9.2	27
M401391		0.48	0.0012	0.02	1.70	5.0	<0.2	<10	210	0.39	0.11	0.42	0.10	17.35	7.5	24
M401392		0.68	0.0011	0.02	2.05	5.9	<0.2	<10	210	0.46	0.33	0.28	0.15	23.2	9.4	30
M401393		0.59	0.0011	0.04	1.84	4.2	<0.2	<10	410	0.49	0.11	0.39	0.09	23.9	8.5	25
M401394		0.80	0.0006	0.03	1.83	3.0	<0.2	<10	510	0.51	0.09	0.53	0.07	21.9	9.2	22
M401395		0.70	0.0011	0.07	2.14	2.2	<0.2	<10	510	0.65	0.08	0.51	0.08	28.3	6.3	16
M401396		0.59	0.0010	0.03	1.74	2.8	<0.2	<10	380	0.69	0.08	0.52	0.06	32.2	8.7	16
M401397		0.56	0.0016	0.08	2.79	5.3	<0.2	<10	800	1.11	0.13	0.38	0.13	59.2	13.5	30
M401398		0.55	0.0006	0.06	1.69	4.2	<0.2	<10	490	0.52	0.09	0.54	0.10	26.4	8.6	24
M401399		0.61	0.0006	0.03	2.01	5.2	<0.2	<10	300	0.73	0.11	0.35	0.11	38.9	9.7	26
M401400		0.60	0.0009	0.06	2.59	5.9	<0.2	<10	160	0.74	0.10	0.20	0.13	37.8	10.5	31
M401401		0.56	0.0004	0.09	0.47	5.3	<0.2	<10	100	0.10	0.11	0.23	0.25	20.1	2.0	5
M401402		0.60	0.0007	0.03	0.60	4.8	<0.2	<10	40	0.10	0.07	0.02	0.10	17.20	2.4	8
M401403		0.58	0.0009	0.11	1.59	20.9	<0.2	<10	150	0.54	0.29	0.47	0.65	29.5	11.9	18
M401404		0.50	0.0019	0.10	1.70	17.8	<0.2	<10	90	0.27	0.31	0.04	0.40	29.8	11.8	21
M401405		0.65	0.0040	0.03	1.31	9.8	<0.2	<10	200	0.55	0.16	0.17	0.29	19.35	6.1	20
M401406		0.68	0.0108	0.56	0.67	24.5	<0.2	<10	350	0.65	1.08	0.10	2.07	11.50	2.5	5
M401407		0.67	0.0050	0.06	1.25	7.1	<0.2	<10	350	0.52	0.12	0.25	0.46	15.80	5.4	16
M401408		0.51	0.0065	0.10	2.31	14.9	<0.2	<10	650	0.92	0.56	0.16	0.52	20.5	6.1	23
M401409		0.63	0.0066	0.07	0.87	6.1	<0.2	<10	100	0.27	0.34	0.13	0.22	11.90	5.2	15
M401410		0.61	0.0041	0.10	1.01	7.6	<0.2	<10	140	0.27	1.07	0.15	0.17	12.95	5.2	18



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401371		1.09	13.7	3.13	7.38	0.05	0.06	0.04	0.025	0.11	9.9	19.1	0.67	359	0.67	0.02
M401372		1.07	10.8	3.56	10.40	0.06	0.02	0.03	0.029	0.16	9.8	18.5	0.92	841	0.91	0.02
M401373		1.10	19.0	4.08	9.77	0.06	0.04	0.04	0.039	0.17	17.2	24.6	1.04	602	1.33	0.02
M401374		0.72	14.7	3.76	9.73	0.07	0.05	0.04	0.036	0.08	29.0	23.8	1.44	369	1.47	0.02
M401375		0.62	11.0	2.13	6.36	<0.05	0.02	0.03	0.013	0.04	6.1	7.5	0.26	154	0.69	0.01
M401376		0.74	12.7	3.04	5.90	0.05	0.02	0.06	0.026	0.07	13.3	13.3	0.48	593	1.43	0.01
M401377		1.10	14.9	3.11	7.62	<0.05	0.02	0.02	0.026	0.09	11.8	20.2	0.70	430	0.75	0.01
M401378		1.24	18.0	3.97	9.80	0.05	0.06	0.03	0.037	0.16	11.6	27.8	0.89	679	1.49	0.02
M401379		1.28	12.2	3.63	7.98	<0.05	0.03	0.01	0.030	0.12	11.7	21.6	0.81	644	1.03	0.02
M401380		1.26	11.8	3.51	9.23	0.05	0.03	0.02	0.031	0.09	14.4	19.3	0.85	505	0.90	0.02
M401381		0.05	10.7	1.33	2.08	<0.05	<0.02	0.01	<0.005	0.03	3.4	0.5	0.09	72	<0.05	0.02
M401382		0.86	11.6	2.07	5.67	<0.05	<0.02	0.02	0.017	0.07	9.6	12.8	0.53	304	0.45	0.02
M401383		1.16	14.8	2.75	7.70	0.06	0.03	0.03	0.021	0.20	12.9	21.5	0.78	319	0.28	0.02
M401384		1.09	10.8	2.63	8.14	0.09	0.02	0.03	0.020	0.16	14.8	26.2	0.77	345	0.29	0.02
M401385		1.18	15.6	2.80	8.75	0.05	0.02	0.05	0.027	0.14	13.4	20.9	0.68	378	0.63	0.02
M401386		0.99	12.3	2.57	7.03	<0.05	0.02	0.02	0.020	0.11	12.5	14.6	0.65	377	0.59	0.02
M401387		1.48	10.6	3.00	8.70	0.06	0.03	0.03	0.028	0.14	12.5	20.0	0.82	500	0.69	0.02
M401388		1.34	9.8	2.79	8.77	<0.05	0.02	0.02	0.024	0.19	9.6	19.8	0.70	380	1.18	0.01
M401389		1.15	10.6	2.83	7.91	<0.05	0.02	0.03	0.023	0.12	11.4	17.9	0.71	441	0.71	0.02
M401390		1.66	13.0	2.91	9.08	0.07	0.03	0.03	0.028	0.14	21.4	25.6	0.79	367	0.33	0.02
M401391		1.29	9.4	3.02	7.56	<0.05	0.04	0.03	0.024	0.15	8.1	22.4	0.67	331	0.85	0.01
M401392		1.12	9.3	2.94	7.40	<0.05	0.07	0.02	0.025	0.09	9.8	16.7	0.56	344	0.81	0.01
M401393		1.36	12.5	2.99	7.63	<0.05	0.02	0.02	0.026	0.12	11.8	20.5	0.75	458	0.50	0.02
M401394		1.33	7.7	3.16	7.34	<0.05	0.03	0.02	0.023	0.12	10.8	20.5	0.82	598	0.36	0.02
M401395		2.19	9.3	2.67	7.28	0.05	0.03	0.05	0.027	0.14	15.9	21.2	0.68	424	0.13	0.01
M401396		2.17	9.2	3.11	6.79	0.05	0.06	0.02	0.023	0.12	16.3	20.7	0.79	442	0.18	0.01
M401397		2.13	18.6	3.36	8.43	0.07	0.06	0.06	0.038	0.13	27.0	20.9	0.69	1690	0.45	0.01
M401398		1.44	14.6	2.81	6.97	0.05	0.02	0.03	0.023	0.11	12.9	17.8	0.70	560	0.35	0.02
M401399		1.63	15.5	2.91	6.48	0.06	0.05	0.03	0.029	0.13	15.8	18.5	0.68	592	0.35	0.01
M401400		1.52	18.0	3.43	7.49	0.05	0.08	0.04	0.034	0.11	14.8	22.4	0.74	488	0.48	0.01
M401401		0.27	7.3	0.95	2.48	<0.05	<0.02	0.02	0.005	0.02	10.2	5.1	0.06	83	0.79	0.01
M401402		0.56	3.1	1.01	2.70	<0.05	<0.02	0.01	0.005	0.03	8.0	14.9	0.15	79	0.57	0.01
M401403		0.87	22.6	3.33	4.43	0.06	0.06	0.04	0.022	0.05	14.5	42.1	0.36	538	1.40	<0.01
M401404		1.31	16.3	4.58	5.74	0.06	0.04	0.01	0.023	0.05	15.4	49.4	0.41	354	2.01	<0.01
M401405		2.14	14.1	2.09	4.02	<0.05	0.03	0.03	0.018	0.06	9.2	8.5	0.32	419	1.45	0.01
M401406		1.64	14.1	1.48	1.30	<0.05	0.02	0.05	0.182	0.13	3.2	2.2	0.07	1320	1.66	0.01
M401407		1.68	11.4	1.80	3.26	<0.05	0.03	0.06	0.030	0.06	7.9	5.8	0.29	558	1.43	0.01
M401408		3.82	25.6	2.97	6.60	0.06	0.07	0.09	0.061	0.11	15.2	8.8	0.31	643	3.35	0.01
M401409		1.09	12.4	1.96	3.23	<0.05	<0.02	0.03	0.019	0.06	5.8	4.9	0.24	375	8.24	0.02
M401410		1.31	12.2	2.19	3.73	<0.05	<0.02	0.02	0.028	0.07	6.3	6.3	0.29	343	9.45	0.01



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 5 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401371		1.82	18.4	430	7.6	13.9	<0.001	0.01	0.26	3.8	0.4	0.6	23.7	<0.01	<0.01	2.6
M401372		1.29	11.1	630	6.8	25.3	<0.001	0.02	0.20	4.7	0.6	0.7	30.3	<0.01	<0.01	2.0
M401373		1.09	15.4	1040	8.2	19.9	<0.001	0.02	0.18	7.2	0.8	0.6	40.6	<0.01	<0.01	3.3
M401374		0.76	16.7	1430	9.3	8.7	<0.001	0.02	0.20	6.9	0.9	0.7	67.3	<0.01	<0.01	3.8
M401375		1.59	6.6	350	5.7	5.8	<0.001	0.01	0.24	1.7	0.5	0.5	13.8	<0.01	<0.01	1.0
M401376		0.72	7.8	780	4.9	9.0	0.001	0.02	0.15	4.5	0.7	0.4	25.4	<0.01	<0.01	1.9
M401377		1.23	14.6	670	6.2	10.3	<0.001	0.02	0.23	4.4	0.7	0.6	33.3	<0.01	<0.01	2.0
M401378		1.43	20.1	830	9.6	16.6	<0.001	0.01	0.29	6.2	0.4	0.7	36.6	<0.01	0.01	3.2
M401379		1.09	16.2	660	6.7	13.8	<0.001	0.01	0.23	5.8	0.3	0.6	35.4	<0.01	0.01	2.5
M401380		0.89	11.4	760	6.4	10.4	<0.001	0.02	0.16	5.8	0.5	0.7	28.3	<0.01	<0.01	1.7
M401381		0.25	2.0	860	0.3	1.1	<0.001	<0.01	<0.05	0.3	0.3	<0.2	14.0	<0.01	<0.01	<0.2
M401382		0.81	9.7	760	4.3	8.5	<0.001	0.02	0.14	3.2	0.6	0.4	31.0	<0.01	<0.01	0.8
M401383		1.27	12.0	990	5.3	17.0	<0.001	0.02	0.13	4.4	0.3	0.5	44.6	<0.01	<0.01	2.1
M401384		1.25	12.0	830	5.6	15.7	0.001	0.01	0.14	4.4	0.3	0.5	40.3	<0.01	<0.01	2.5
M401385		1.40	15.0	490	6.9	15.4	<0.001	0.02	0.21	4.2	0.5	0.6	41.2	<0.01	<0.01	1.5
M401386		1.34	13.3	400	5.7	13.0	<0.001	0.01	0.21	4.0	0.5	0.5	34.4	<0.01	<0.01	2.0
M401387		1.08	11.0	440	5.9	13.6	<0.001	0.02	0.15	5.0	<0.2	0.5	48.2	<0.01	<0.01	2.0
M401388		1.42	11.0	750	6.1	20.4	<0.001	0.01	0.18	4.0	0.3	0.6	40.4	<0.01	0.02	2.2
M401389		1.00	11.4	380	6.5	12.5	<0.001	0.03	0.21	4.4	0.7	0.5	43.8	<0.01	<0.01	1.6
M401390		1.42	13.1	770	8.3	16.5	<0.001	0.01	0.18	6.6	0.6	0.7	45.3	0.01	<0.01	3.3
M401391		1.55	12.7	280	6.5	15.9	<0.001	0.02	0.25	3.9	0.5	0.6	35.5	<0.01	<0.01	2.1
M401392		1.64	15.4	460	8.0	10.3	<0.001	0.01	0.23	4.1	0.5	0.6	21.4	<0.01	0.02	2.9
M401393		1.13	13.5	440	6.7	11.8	<0.001	0.02	0.20	4.8	0.2	0.6	31.4	<0.01	<0.01	2.3
M401394		0.77	10.4	800	6.7	10.1	<0.001	0.02	0.17	4.7	0.5	0.5	36.0	<0.01	<0.01	2.9
M401395		0.63	7.7	830	7.2	12.0	<0.001	0.02	0.18	5.7	0.7	0.5	31.8	<0.01	<0.01	2.8
M401396		0.57	10.1	1010	7.9	9.8	<0.001	0.01	0.20	4.7	0.4	0.5	30.2	<0.01	<0.01	3.8
M401397		1.00	14.5	750	9.6	13.8	<0.001	0.02	0.22	9.3	1.1	0.6	29.6	<0.01	<0.01	4.3
M401398		0.95	12.6	470	6.0	13.1	<0.001	0.03	0.21	4.7	0.4	0.5	34.5	<0.01	<0.01	2.0
M401399		1.08	16.2	720	7.8	12.8	<0.001	0.01	0.24	5.1	0.6	0.5	24.8	<0.01	<0.01	3.9
M401400		1.58	18.0	490	9.4	11.8	<0.001	0.02	0.26	6.0	0.8	0.6	14.8	0.01	<0.01	4.6
M401401		0.25	4.6	160	6.3	2.7	<0.001	0.01	0.19	0.5	0.5	0.2	27.6	<0.01	<0.01	2.0
M401402		0.11	7.1	150	3.8	4.4	<0.001	0.01	0.09	0.6	0.2	<0.2	4.1	<0.01	<0.01	1.6
M401403		0.41	34.2	490	20.1	6.4	<0.001	0.04	0.56	2.4	0.8	0.2	44.3	<0.01	0.05	2.6
M401404		0.28	23.2	250	19.2	8.1	<0.001	0.03	0.51	1.8	0.5	0.2	7.6	<0.01	0.04	5.1
M401405		0.94	13.2	370	76.9	7.6	<0.001	0.03	0.66	2.6	0.4	0.3	13.6	<0.01	0.24	1.5
M401406		0.17	4.4	250	281	4.6	<0.001	0.06	4.29	1.0	0.3	<0.2	11.1	<0.01	1.02	0.9
M401407		0.58	11.0	370	70.8	6.6	<0.001	0.03	0.48	2.2	0.3	0.2	19.9	<0.01	0.29	1.4
M401408		0.86	13.1	1070	144.0	14.7	<0.001	0.09	1.17	3.5	0.7	0.4	17.2	<0.01	0.77	1.2
M401409		0.59	7.8	309	35.6	4.8	<0.001	0.04	0.55	1.5	0.3	0.2	11.9	<0.01	0.53	0.5
M401410		0.91	9.2	290	39.0	5.8	<0.001	0.04	0.57	1.7	0.3	0.2	13.0	<0.01	0.52	0.8

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 5 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401371		0.141	0.12	0.42	76	0.22	4.31	62	2.2	
M401372		0.154	0.10	0.40	93	0.17	3.57	88	0.8	
M401373		0.107	0.14	0.70	90	0.12	7.41	83	1.1	
M401374		0.055	0.08	0.90	93	0.07	11.30	69	1.3	
M401375		0.116	0.07	0.25	62	0.17	1.86	28	0.6	
M401376		0.051	0.06	0.38	61	0.10	6.53	49	0.6	
M401377		0.092	0.09	0.41	70	0.14	6.40	63	0.8	
M401378		0.113	0.11	0.43	85	0.18	5.66	89	2.1	
M401379		0.089	0.12	0.36	76	0.23	6.42	76	1.2	
M401380		0.091	0.10	0.36	85	0.10	7.41	77	0.7	
M401381		0.074	<0.02	0.08	45	<0.05	1.32	18	<0.5	
M401382		0.085	0.08	0.29	54	0.12	4.89	48	<0.5	
M401383		0.144	0.12	0.53	70	0.12	5.74	71	1.0	
M401384		0.150	0.10	0.45	69	0.20	5.15	67	0.9	
M401385		0.116	0.11	0.48	69	0.16	4.98	66	0.8	
M401386		0.112	0.09	0.39	66	0.28	4.65	60	0.9	
M401387		0.103	0.10	0.37	69	0.12	4.85	73	0.8	
M401388		0.141	0.10	0.36	74	0.13	3.88	61	1.0	
M401389		0.078	0.08	0.36	65	0.12	5.07	61	0.6	
M401390		0.107	0.11	0.54	75	0.17	11.95	77	1.2	
M401391		0.101	0.08	0.32	70	0.19	2.89	62	1.2	
M401392		0.107	0.09	0.44	72	0.22	4.20	48	2.0	
M401393		0.082	0.08	0.37	68	0.17	4.82	70	0.8	
M401394		0.053	0.08	0.33	63	0.11	4.94	81	0.8	
M401395		0.027	0.09	0.45	50	0.07	10.10	70	0.8	
M401396		0.041	0.08	0.39	55	0.11	6.64	75	1.5	
M401397		0.039	0.13	0.87	66	0.30	17.25	62	1.5	
M401398		0.081	0.09	0.35	66	0.20	7.10	71	0.6	
M401399		0.074	0.11	0.47	62	0.16	6.48	57	1.7	
M401400		0.093	0.11	0.63	72	0.19	6.75	58	2.4	
M401401		0.007	0.04	0.32	13	0.11	1.32	20	<0.5	
M401402		<0.005	0.06	0.22	10	0.06	0.74	29	<0.5	
M401403		0.007	0.12	1.13	17	0.18	10.10	74	1.8	
M401404		<0.005	0.15	0.54	24	0.18	2.97	114	1.8	
M401405		0.046	0.07	0.60	39	0.16	5.02	61	0.7	
M401406		<0.005	0.11	0.29	9	0.05	1.68	277	0.5	
M401407		0.025	0.08	0.45	32	0.09	3.72	91	0.6	
M401408		0.014	0.19	1.35	46	0.15	7.90	174	1.5	
M401409		0.054	0.06	0.40	40	0.19	2.57	48	<0.5	
M401410		0.052	0.06	0.44	37	0.11	2.52	56	<0.5	

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd WL kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401411		0.71	0.0057	0.09	1.28	6.6	<0.2	<10	130	0.36	0.45	0.18	0.28	16.00	6.8	23
M401412		0.64	0.0016	0.10	1.85	7.5	<0.2	<10	100	0.44	0.42	0.19	0.30	17.75	6.9	27
M401413		0.72	0.0022	0.16	1.55	6.4	<0.2	<10	170	0.39	0.71	0.17	0.22	20.8	7.3	23
M401414		0.76	0.0282	0.22	0.65	7.8	<0.2	<10	590	0.78	1.34	0.06	0.30	13.55	4.0	7
M401415		0.70	0.0382	0.07	1.51	5.3	<0.2	<10	110	0.41	0.52	0.16	0.15	19.55	8.3	20
M401416		0.77	>0.1000	0.23	1.11	4.0	<0.2	<10	380	0.42	1.11	0.13	0.17	17.65	3.3	11
M401417		0.70	0.0687	0.12	1.57	5.5	<0.2	<10	120	0.38	0.36	0.17	0.17	20.1	7.5	21
M401418		0.72	0.0079	0.06	1.26	6.6	<0.2	<10	130	0.27	0.25	0.15	0.17	16.45	5.1	22
M401419		0.66	0.0067	0.16	1.73	6.8	<0.2	<10	90	0.47	0.36	0.17	0.28	14.45	9.4	24
M401420		0.65	0.0051	0.18	1.03	4.2	<0.2	<10	110	0.32	0.37	0.16	0.18	10.65	5.2	21
M401421		0.67	0.0032	0.14	1.59	7.6	<0.2	<10	130	0.47	0.44	0.16	0.23	25.0	7.1	24
M401422		0.68	0.0047	0.73	1.74	7.4	<0.2	<10	210	0.60	0.58	0.18	0.50	24.3	7.5	24
M401423		0.74	0.0041	0.29	2.11	8.4	<0.2	<10	150	0.60	0.56	0.21	0.47	23.7	11.1	30
M401424		0.71	0.0346	0.15	1.16	5.4	<0.2	<10	110	0.41	0.75	0.17	0.22	14.05	6.2	20
M401425		0.68	0.0105	0.24	1.58	6.3	<0.2	<10	130	0.50	0.45	0.18	0.32	19.20	8.8	23
M401426		0.66	>0.1000	0.21	1.38	5.3	<0.2	<10	90	0.41	0.56	0.22	0.21	17.90	7.0	23
M401427		0.65	0.0775	0.08	1.20	5.3	<0.2	<10	90	0.26	0.41	0.25	0.30	16.50	6.0	24
M401428		0.68	0.0595	0.16	1.51	6.3	<0.2	<10	280	0.63	1.16	0.19	0.18	23.5	6.8	22
M401429		0.73	0.0059	0.08	1.31	5.3	<0.2	<10	120	0.33	0.28	0.26	0.19	18.40	6.9	23
M401430		0.50	0.0004	0.03	0.24	0.2	<0.2	<10	20	<0.05	0.02	0.09	0.02	3.23	2.9	3
M401431		0.73	0.0136	0.25	1.34	4.8	<0.2	<10	180	0.37	0.69	0.21	0.16	19.20	6.9	22
M401432		0.59	0.0007	0.02	0.19	0.1	<0.2	<10	20	<0.05	0.02	0.10	0.01	3.37	2.8	4
M401433		0.58	0.0003	0.03	0.15	<0.1	<0.2	<10	20	<0.05	0.01	0.12	0.02	3.70	2.5	3
M401434		0.55	0.0004	0.03	0.14	0.1	<0.2	<10	30	<0.05	0.02	0.05	0.03	1.79	2.4	3
M401435		0.62	0.0064	0.40	2.22	10.0	<0.2	<10	340	0.39	0.37	0.19	0.16	11.90	3.1	22
M401436		0.73	0.0832	0.09	1.34	4.4	<0.2	<10	200	0.41	0.24	0.23	0.16	16.30	12.1	17
M401437		0.71	0.0038	0.07	1.39	4.8	<0.2	<10	340	0.40	0.22	0.21	0.32	27.4	11.8	20
M401438		0.74	0.0025	0.05	1.60	3.8	<0.2	<10	230	0.58	0.17	0.24	0.17	23.8	6.9	22
M401439		0.79	0.0014	0.08	0.77	1.9	<0.2	<10	160	0.31	0.10	0.19	0.07	12.00	6.0	12
M401440		0.85	0.0020	0.05	1.39	3.5	<0.2	<10	220	0.59	0.14	0.32	0.17	30.7	7.5	22
M401441		0.69	0.0008	0.05	0.63	1.5	<0.2	<10	270	0.28	0.09	0.27	0.18	17.20	4.8	11
M401442		0.62	0.0242	0.06	0.76	2.2	<0.2	<10	440	0.27	0.17	0.23	0.17	18.95	3.0	14
M401443		0.63	0.0016	0.05	1.63	4.7	<0.2	<10	230	0.66	0.45	0.30	0.21	29.5	8.9	23
M401444		0.63	0.0005	0.07	1.67	4.3	<0.2	<10	450	0.94	0.19	0.62	0.25	51.6	11.1	36
M401445		0.56	0.0007	0.07	1.40	4.0	<0.2	<10	200	0.54	0.11	0.22	0.12	34.8	5.7	17
M401446		0.60	0.0011	0.23	1.89	6.0	<0.2	<10	160	0.39	0.40	0.18	0.16	21.2	6.8	28
M401447		0.58	0.0032	0.06	1.75	4.3	<0.2	<10	180	0.56	0.14	0.25	0.15	37.7	6.6	18
M401448		0.61	0.0019	0.04	1.91	6.4	<0.2	<10	160	0.52	0.29	0.20	0.21	27.1	8.0	28
M401449		0.59	0.0013	0.11	2.07	6.0	<0.2	<10	90	0.46	0.31	0.23	0.18	18.30	7.4	31
M401450		0.74	0.0026	0.07	1.48	4.7	<0.2	<10	190	0.41	0.28	0.35	0.23	26.0	8.5	28



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401411		0.96	15.8	2.17	4.06	0.05	0.03	0.03	0.024	0.06	7.9	9.4	0.41	370	3.71	0.01
M401412		1.12	14.3	2.48	6.56	0.05	0.02	0.05	0.025	0.06	8.9	9.9	0.37	234	2.22	0.01
M401413		1.04	14.0	2.25	4.42	0.05	0.02	0.03	0.025	0.06	7.7	9.2	0.38	310	2.56	0.01
M401414		1.22	6.8	1.67	1.51	<0.05	<0.02	0.04	0.022	0.06	5.3	2.1	0.09	1940	23.7	<0.01
M401415		1.14	11.1	2.10	3.75	<0.05	0.05	0.02	0.021	0.06	8.9	7.5	0.34	252	1.90	0.01
M401416		1.86	6.6	2.05	2.27	<0.05	0.02	0.02	0.021	0.09	9.6	3.3	0.16	125	6.19	0.01
M401417		1.15	12.0	2.19	3.91	<0.05	0.03	0.02	0.023	0.06	6.7	7.8	0.35	273	1.95	0.01
M401418		0.80	12.2	2.52	6.17	<0.05	<0.02	0.03	0.020	0.05	6.3	11.8	0.32	203	1.87	0.01
M401419		1.19	14.7	2.55	4.90	<0.05	0.04	0.04	0.023	0.06	7.5	12.0	0.40	467	4.20	0.01
M401420		1.42	11.3	2.07	4.14	<0.05	<0.02	0.03	0.018	0.08	5.7	6.2	0.31	260	6.64	0.01
M401421		1.33	18.2	2.57	6.02	0.05	0.03	0.05	0.026	0.08	12.1	12.3	0.38	318	3.92	0.01
M401422		1.62	17.5	2.66	5.49	0.05	0.03	0.05	0.031	0.09	9.6	11.2	0.41	314	5.61	0.01
M401423		1.31	22.2	2.71	5.79	0.06	0.05	0.05	0.037	0.12	9.2	13.9	0.55	468	1.54	0.01
M401424		1.83	15.1	2.61	3.71	<0.05	0.02	0.04	0.025	0.06	7.3	8.2	0.33	271	12.25	0.01
M401425		1.33	17.7	2.39	4.31	0.05	0.05	0.04	0.029	0.08	8.4	9.8	0.42	330	3.07	0.01
M401426		1.11	15.2	2.37	4.17	0.05	0.04	0.05	0.022	0.06	9.1	9.3	0.41	301	8.65	0.01
M401427		1.02	14.4	2.65	5.27	0.05	0.02	0.03	0.022	0.06	8.5	7.5	0.35	226	5.39	0.01
M401428		1.70	22.0	2.71	4.96	0.05	0.02	0.03	0.035	0.06	11.1	9.0	0.39	390	9.44	0.01
M401429		0.79	16.7	2.29	4.45	0.05	0.03	0.02	0.019	0.05	9.3	8.7	0.40	263	2.64	0.01
M401430		0.10	8.6	1.16	2.26	<0.05	<0.02	0.02	<0.005	0.01	1.5	0.7	0.06	59	0.23	0.02
M401431		1.11	18.8	2.52	4.82	0.05	0.02	0.03	0.024	0.07	9.3	8.5	0.37	808	7.73	0.01
M401432		0.05	3.3	1.18	2.46	<0.05	<0.02	0.01	<0.005	0.01	1.5	0.3	0.08	60	0.25	0.02
M401433		<0.05	4.7	0.93	1.60	<0.05	<0.02	0.01	<0.005	0.01	1.7	0.2	0.07	55	0.23	0.02
M401434		0.10	5.0	0.65	1.33	<0.05	<0.02	0.02	<0.005	0.01	0.7	0.2	0.05	275	0.42	0.02
M401435		1.68	20.2	2.15	8.34	<0.05	0.03	0.10	0.025	0.13	6.2	6.2	0.23	114	7.63	0.01
M401436		1.41	10.9	2.46	4.29	<0.05	0.02	0.03	0.024	0.10	7.7	8.2	0.29	1080	3.18	0.01
M401437		1.62	12.4	2.50	6.17	<0.05	<0.02	0.04	0.023	0.11	8.8	7.8	0.34	2690	5.29	0.01
M401438		1.71	16.3	2.29	5.05	0.05	0.05	0.02	0.021	0.10	12.3	13.0	0.42	224	1.73	0.01
M401439		1.21	14.0	1.81	3.49	<0.05	<0.02	0.03	0.015	0.08	5.8	4.4	0.21	355	1.78	0.01
M401440		1.86	21.0	2.53	5.56	0.05	0.02	0.03	0.026	0.13	12.9	13.5	0.50	503	2.39	0.02
M401441		0.98	12.5	2.10	3.20	<0.05	<0.02	0.04	0.010	0.08	7.8	3.7	0.17	339	1.52	0.01
M401442		0.93	12.5	1.37	3.88	<0.05	<0.02	0.04	0.021	0.07	9.5	4.6	0.23	144	1.31	0.02
M401443		1.75	12.9	3.37	4.55	0.05	0.02	0.03	0.035	0.09	12.1	9.1	0.37	565	2.82	0.01
M401444		1.54	11.9	3.77	4.75	0.08	0.05	0.02	0.040	0.15	24.8	5.7	0.30	598	1.39	0.01
M401445		1.24	10.0	2.93	5.22	0.05	<0.02	0.04	0.042	0.08	14.6	9.3	0.31	681	1.12	0.01
M401446		1.01	16.7	2.61	5.89	<0.05	0.02	0.02	0.022	0.07	7.9	11.4	0.43	365	4.34	0.01
M401447		0.84	16.3	3.08	5.29	0.05	<0.02	0.05	0.041	0.07	16.4	9.4	0.33	469	1.29	0.01
M401448		1.30	15.7	2.63	5.62	<0.05	0.04	0.03	0.026	0.08	10.0	13.3	0.45	406	1.63	0.01
M401449		1.01	15.3	2.70	5.45	<0.05	0.03	0.04	0.025	0.06	7.2	16.1	0.48	266	2.26	0.01
M401450		1.28	19.0	2.39	4.69	<0.05	0.03	0.02	0.022	0.07	12.1	10.2	0.45	608	3.44	0.02

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 6 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401411		1.11	15.2	290	30.2	6.2	<0.001	0.03	0.39	2.7	0.4	0.3	16.1	<0.01	0.20	1.3
M401412		1.35	13.7	520	22.0	7.7	<0.001	0.04	0.36	3.0	0.5	0.5	15.9	<0.01	0.14	1.0
M401413		1.06	17.0	290	24.9	7.0	<0.001	0.04	0.34	2.4	0.4	0.3	18.0	<0.01	0.19	1.3
M401414		0.32	4.5	210	63.3	5.2	<0.001	0.03	0.41	1.4	0.3	<0.2	8.0	<0.01	0.29	0.9
M401415		1.23	14.8	260	19.7	6.8	<0.001	0.04	0.23	2.6	0.4	0.3	15.9	<0.01	0.13	2.2
M401416		0.61	5.7	230	46.6	6.8	<0.001	0.06	0.15	1.4	0.8	0.2	23.9	<0.01	0.22	1.7
M401417		1.12	14.4	260	24.7	7.1	<0.001	0.04	0.38	2.6	0.4	0.3	16.2	<0.01	0.10	1.6
M401418		1.27	13.9	270	15.3	6.5	<0.001	0.04	0.38	2.1	0.4	0.5	16.1	<0.01	0.07	0.7
M401419		1.46	15.4	380	24.7	7.6	<0.001	0.03	0.28	2.9	0.5	0.4	15.3	<0.01	0.09	1.6
M401420		0.73	11.0	410	21.0	9.3	<0.001	0.05	0.27	1.8	0.4	0.3	18.0	<0.01	0.08	0.3
M401421		1.33	15.5	360	25.5	9.8	<0.001	0.04	0.35	3.1	0.6	0.5	15.1	<0.01	0.08	1.5
M401422		1.52	16.1	200	31.0	10.4	<0.001	0.03	0.45	3.3	0.5	0.5	17.3	<0.01	0.09	2.4
M401423		1.59	20.0	420	23.6	10.9	<0.001	0.05	0.35	3.8	0.6	0.5	17.4	<0.01	0.08	2.0
M401424		0.89	12.3	280	29.1	7.1	<0.001	0.04	0.40	2.1	0.6	0.3	14.7	<0.01	0.10	0.8
M401425		1.37	16.5	290	24.2	7.9	<0.001	0.03	0.30	3.1	0.5	0.4	15.4	<0.01	0.08	2.0
M401426		1.15	14.7	500	20.7	6.7	<0.001	0.04	0.27	2.8	0.6	0.3	16.6	<0.01	0.07	1.6
M401427		1.31	13.0	530	18.6	6.3	<0.001	0.04	0.32	2.6	0.5	0.4	18.8	<0.01	0.06	1.7
M401428		0.75	14.6	600	23.9	8.4	<0.001	0.05	0.37	2.6	0.8	0.4	17.8	<0.01	0.17	0.7
M401429		1.01	14.7	620	17.2	6.4	<0.001	0.03	0.25	2.7	0.4	0.3	18.3	<0.01	0.05	1.1
M401430		0.25	2.1	250	1.2	0.9	<0.001	0.02	<0.05	0.5	<0.2	<0.2	8.8	<0.01	0.01	<0.2
M401431		0.89	13.0	530	17.5	7.7	<0.001	0.03	0.22	2.8	0.4	0.4	17.2	<0.01	0.14	1.3
M401432		0.26	1.7	290	0.7	0.4	<0.001	0.02	<0.05	0.5	<0.2	<0.2	10.5	<0.01	0.01	<0.2
M401433		0.16	1.5	370	0.5	0.3	<0.001	0.02	<0.05	0.4	<0.2	<0.2	12.1	<0.01	0.01	<0.2
M401434		0.15	1.6	140	0.6	1.1	<0.001	0.03	<0.05	0.4	<0.2	<0.2	8.3	<0.01	0.01	<0.2
M401435		0.95	8.7	830	23.5	17.3	<0.001	0.08	0.29	2.7	0.7	0.5	20.6	<0.01	0.05	1.0
M401436		0.85	8.6	630	17.2	10.6	<0.001	0.04	0.22	2.3	0.4	0.3	17.7	<0.01	0.05	1.4
M401437		1.06	9.3	370	13.7	15.8	<0.001	0.04	0.25	3.0	0.3	0.5	22.3	<0.01	0.06	1.2
M401438		1.12	13.4	450	15.7	11.2	<0.001	0.03	0.18	3.7	0.4	0.4	19.2	<0.01	0.03	2.5
M401439		0.44	6.0	570	8.2	8.8	0.002	0.02	0.18	1.9	0.4	0.2	16.4	<0.01	<0.01	0.4
M401440		1.00	11.7	770	12.0	15.3	0.002	0.01	0.24	4.4	0.4	0.4	23.7	<0.01	0.03	2.5
M401441		0.39	4.9	710	6.7	7.5	0.002	0.02	0.15	1.8	<0.2	0.2	19.8	<0.01	<0.01	0.6
M401442		0.54	6.7	460	7.5	8.9	0.002	0.04	0.20	1.6	<0.2	0.3	26.1	<0.01	0.01	0.2
M401443		0.92	17.7	810	20.4	10.9	0.002	0.02	0.32	5.0	0.4	0.5	24.5	<0.01	0.03	2.0
M401444		0.73	15.5	1820	16.9	13.0	0.002	0.01	0.74	4.9	0.6	0.4	34.5	<0.01	0.04	2.7
M401445		0.67	8.9	740	8.8	13.9	0.002	0.03	0.22	3.5	0.8	0.5	19.2	<0.01	0.01	0.8
M401446		1.34	14.6	340	79.9	7.6	0.002	0.02	0.31	3.0	<0.2	0.5	15.6	<0.01	<0.01	1.1
M401447		0.76	11.8	840	18.5	8.6	0.002	0.03	0.28	3.3	0.7	0.6	20.6	<0.01	0.01	0.8
M401448		1.41	17.0	380	79.3	10.1	0.001	0.02	0.30	3.5	0.3	0.5	17.5	<0.01	0.02	2.2
M401449		1.65	16.2	460	129.5	7.2	0.002	0.03	0.29	3.3	0.5	0.4	17.0	0.01	<0.01	1.5
M401450		1.08	17.1	860	167.0	9.3	0.002	0.01	0.38	3.7	0.4	0.4	25.9	<0.01	0.02	2.2

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 6 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401411		0.073	0.07	0.59	45	0.13	3.97	49	0.8	
M401412		0.087	0.10	0.67	56	0.21	4.19	40	0.5	
M401413		0.064	0.08	0.51	44	0.14	3.23	47	0.6	
M401414		0.010	0.08	2.15	10	0.11	4.92	54	<0.5	
M401415		0.063	0.09	0.58	39	0.19	3.87	33	1.3	
M401416		0.015	0.08	0.91	19	0.09	3.41	24	0.5	0.13
M401417		0.060	0.09	0.47	39	0.15	3.17	38	0.8	
M401418		0.086	0.08	0.47	57	0.15	2.43	45	<0.5	
M401419		0.073	0.10	0.57	48	0.15	3.85	47	1.0	
M401420		0.057	0.08	0.65	44	0.14	2.86	43	<0.5	
M401421		0.079	0.10	0.80	54	0.19	6.13	47	0.7	
M401422		0.068	0.10	0.56	51	0.19	4.73	53	1.0	
M401423		0.094	0.10	0.66	54	0.22	4.41	55	1.3	
M401424		0.054	0.09	0.54	43	0.13	3.32	46	0.5	
M401425		0.074	0.10	0.57	46	0.19	4.30	46	1.3	
M401426		0.071	0.09	0.73	47	0.20	5.10	42	1.1	0.07
M401427		0.090	0.09	0.58	56	0.16	4.37	40	0.7	
M401428		0.054	0.11	1.02	45	0.24	6.53	52	<0.5	
M401429		0.078	0.08	0.61	52	0.14	4.94	40	0.6	
M401430		0.066	<0.02	0.06	37	<0.05	0.66	15	<0.5	
M401431		0.081	0.09	0.87	54	0.17	5.16	47	0.5	
M401432		0.078	<0.02	0.10	41	<0.05	0.78	15	<0.5	
M401433		0.051	<0.02	0.09	29	<0.05	0.84	12	<0.5	
M401434		0.037	<0.02	0.11	20	<0.05	0.39	10	<0.5	
M401435		0.012	0.18	0.92	55	0.16	3.38	37	0.7	
M401436		0.029	0.10	0.62	36	0.15	4.13	40	<0.5	
M401437		0.054	0.10	0.75	50	0.21	3.79	50	<0.5	
M401438		0.041	0.10	0.93	41	0.20	6.20	41	1.2	
M401439		0.051	0.05	0.51	51	0.11	3.31	36	<0.5	
M401440		0.081	0.09	0.79	57	0.25	6.76	67	0.8	
M401441		0.063	0.05	0.50	59	0.11	4.64	41	<0.5	
M401442		0.052	0.06	0.62	39	0.11	5.01	36	<0.5	
M401443		0.055	0.08	0.56	53	0.11	7.46	75	1.0	
M401444		0.034	0.09	0.47	57	0.14	15.70	68	2.5	
M401445		0.051	0.08	0.46	39	0.11	9.41	75	<0.5	
M401446		0.096	0.10	0.42	65	0.17	3.38	52	0.6	
M401447		0.046	0.07	0.43	45	0.11	8.74	71	<0.5	
M401448		0.086	0.09	0.50	58	0.20	4.21	53	1.0	
M401449		0.101	0.09	0.42	62	0.22	3.67	62	1.1	
M401450		0.091	0.10	0.62	57	0.21	6.78	60	1.5	



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - A
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401451		0.43	0.0013	0.11	1.67	5.8	<0.2	<10	190	0.44	0.20	0.16	0.80	18.35	5.5	26
M401452		0.45	0.0017	0.08	1.50	7.9	<0.2	<10	180	0.39	0.16	0.15	0.30	16.25	5.8	23
M401453		0.51	0.0018	0.07	1.69	10.1	<0.2	<10	190	0.51	0.13	0.18	0.29	20.7	7.8	26
M401454		0.54	0.0031	0.08	1.23	7.6	<0.2	<10	330	0.35	0.19	0.18	0.27	15.05	4.9	21
M401455		0.45	0.0022	0.10	1.38	10.5	<0.2	<10	180	0.50	0.21	0.16	0.36	18.30	6.5	24
M401456		0.57	0.0089	0.71	1.11	31.9	<0.2	<10	170	0.69	0.77	0.11	0.91	15.65	5.4	16
M401457		0.59	0.0135	1.55	0.82	35.2	<0.2	<10	630	0.59	3.77	0.16	1.31	23.7	3.4	13
M401458		0.44	0.0132	1.43	0.90	27.7	<0.2	<10	290	0.41	3.67	0.15	0.40	20.1	3.3	14
M401459		0.49	0.0318	8.70	0.69	74.0	<0.2	<10	500	0.37	11.75	0.20	0.46	20.5	2.2	9
M401460		0.73	0.0143	1.81	1.04	19.5	<0.2	<10	220	0.29	2.93	0.30	0.45	22.3	5.0	20
M401461		0.47	0.0234	3.72	1.03	22.4	<0.2	<10	530	0.42	3.79	0.12	0.28	22.2	2.3	12
M401462		0.41	0.0610	2.30	1.35	12.5	<0.2	<10	320	0.34	2.42	0.14	0.30	21.1	5.0	19
M401463		0.49	0.0179	0.47	0.50	8.4	<0.2	<10	460	0.23	0.78	0.17	0.62	19.45	2.2	12
M401464		0.58	0.0064	0.68	0.60	5.0	<0.2	<10	140	0.18	0.21	0.06	0.20	11.70	1.9	8
M401465		0.43	0.0022	0.23	2.10	6.8	<0.2	<10	150	0.44	0.22	0.20	0.37	19.90	7.5	34
M401466		0.41	0.0112	0.14	1.39	7.7	<0.2	<10	550	1.32	0.42	0.21	1.20	26.9	7.7	27
M401467		0.45	0.0418	0.21	0.95	7.2	<0.2	<10	510	0.89	1.05	0.20	0.83	19.95	7.4	16
M401468		0.57	0.0035	0.13	0.93	6.2	<0.2	<10	150	0.32	0.42	0.11	0.35	12.05	4.8	15
M401469		0.52	0.0057	0.07	1.76	7.1	<0.2	<10	260	0.44	0.26	0.18	0.32	22.1	8.4	27
M401470		0.62	0.0022	0.05	0.97	16.5	<0.2	<10	390	0.60	0.66	0.13	0.24	13.65	5.8	12
M401471		0.50	0.0019	0.18	1.38	5.0	<0.2	<10	180	0.37	0.66	0.19	0.12	15.10	4.0	22
M401472		0.62	0.0156	0.09	1.64	5.8	<0.2	<10	310	0.59	0.27	0.17	0.22	27.2	6.8	25
M401473		0.45	0.0092	0.21	1.34	4.5	<0.2	<10	120	0.42	0.89	0.14	0.21	16.40	4.9	21
M401474		0.61	0.0013	0.05	0.66	3.9	<0.2	<10	460	0.28	0.26	0.23	0.09	9.06	2.9	11
M401475		0.51	0.0035	0.06	1.28	6.2	<0.2	<10	200	0.36	0.45	0.14	0.24	20.9	9.3	25
M401476		0.58	0.0022	0.05	1.90	5.6	<0.2	<10	420	0.60	0.27	0.21	0.20	25.6	7.6	28
M401477		0.52	0.0009	0.08	1.25	5.0	<0.2	<10	630	0.43	0.29	0.33	0.14	15.65	4.2	22
M401478		0.56	0.0014	0.03	1.20	3.6	<0.2	<10	260	0.39	0.40	0.19	0.21	15.95	6.2	18
M401479		0.48	0.0009	0.06	2.11	7.5	<0.2	<10	210	0.52	0.18	0.23	0.16	18.25	8.2	34
M401480		0.70	0.0016	0.04	2.16	7.4	<0.2	<10	320	0.49	0.19	0.25	0.18	21.5	9.6	34
M401481		0.59	0.0025	0.04	1.67	4.9	<0.2	<10	370	0.49	0.16	0.17	0.21	20.4	10.3	24
M401482		0.57	0.0044	0.06	1.87	5.3	<0.2	<10	340	0.58	0.23	0.18	0.14	19.40	8.5	27
M401483		0.59	0.0016	0.04	3.00	8.0	<0.2	<10	220	0.56	0.15	0.31	0.19	18.85	12.3	46
M401484		0.59	0.0009	0.02	0.73	1.5	<0.2	<10	590	0.30	0.09	0.33	0.06	6.45	2.5	10
M401485		0.41	0.0067	0.12	2.23	5.1	<0.2	<10	330	0.49	0.46	0.22	0.19	15.85	5.8	32
M401486		0.45	0.0038	0.16	2.15	6.5	<0.2	<10	200	0.53	0.21	0.18	0.24	21.4	8.4	30
M401487		0.47	0.0010	0.06	2.90	3.7	<0.2	<10	660	0.61	0.12	1.11	0.17	31.8	15.4	53
M401488		0.62	0.0014	0.07	2.58	4.6	<0.2	<10	610	0.67	0.18	0.75	0.07	33.5	11.6	58
M401489		0.65	0.0014	0.08	2.67	8.1	<0.2	<10	340	0.76	0.24	0.27	0.11	31.3	11.7	40
M401490		0.49	0.0021	0.05	2.32	5.8	<0.2	<10	220	0.54	0.17	0.32	0.16	24.8	9.8	39

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - B
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm 0.05	Cu ppm 0.2	Fe % 0.01	Ga ppm 0.05	Ge ppm 0.05	Hf ppm 0.02	Hg ppm 0.01	In ppm 0.005	K % 0.01	La ppm 0.2	Li ppm 0.1	Mg % 0.01	Mn ppm 5	Mo ppm 0.05	Na % 0.01
M401451		0.99	24.9	2.25	7.19	<0.05	<0.02	0.04	0.022	0.06	9.1	6.3	0.22	701	1.25	0.01
M401452		0.98	15.9	2.44	5.56	<0.05	<0.02	0.07	0.023	0.07	6.8	9.0	0.31	556	1.39	0.01
M401453		1.11	17.2	2.43	4.57	<0.05	<0.02	0.05	0.021	0.09	7.5	12.0	0.42	558	1.09	0.01
M401454		1.19	13.6	2.10	4.03	<0.05	<0.02	0.05	0.016	0.08	5.7	7.7	0.29	440	1.15	0.01
M401455		1.24	15.9	2.21	4.89	<0.05	<0.02	0.06	0.019	0.08	7.1	9.3	0.33	755	1.16	0.01
M401456		2.73	17.4	2.24	2.49	<0.05	0.03	0.07	0.042	0.09	6.7	5.6	0.23	1360	1.68	0.02
M401457		1.75	20.5	2.27	2.24	<0.05	0.02	0.17	0.101	0.15	12.0	4.5	0.18	681	2.83	0.02
M401458		1.68	18.8	2.09	2.73	<0.05	<0.02	0.14	0.123	0.13	10.4	4.7	0.20	302	2.21	0.02
M401459		1.27	19.7	2.76	1.79	<0.05	<0.02	0.09	0.186	0.35	10.7	3.8	0.13	314	4.99	0.02
M401460		1.18	19.4	1.98	4.13	<0.05	0.03	0.08	0.124	0.07	11.4	8.0	0.33	209	1.51	0.01
M401461		1.02	23.1	3.20	2.92	<0.05	<0.02	0.16	0.689	0.13	10.8	3.6	0.13	401	4.45	0.01
M401462		0.94	23.7	2.84	4.06	<0.05	0.02	0.15	0.391	0.20	9.1	8.8	0.29	268	1.49	0.04
M401463		1.15	13.4	1.94	1.74	<0.05	0.04	0.08	0.128	0.12	9.2	2.9	0.17	101	15.60	0.05
M401464		1.00	8.6	1.38	1.97	<0.05	<0.02	0.05	0.054	0.11	5.8	3.3	0.11	180	1.04	0.03
M401465		1.06	16.0	2.69	5.41	<0.05	0.05	0.07	0.023	0.11	8.1	16.9	0.55	368	0.79	0.02
M401466		3.07	20.8	2.53	3.93	0.06	0.02	0.17	0.025	0.08	15.9	8.3	0.36	2060	2.64	0.02
M401467		2.09	12.4	2.08	2.59	<0.05	<0.02	0.06	0.029	0.08	7.8	5.5	0.28	1140	0.98	0.01
M401468		1.18	7.7	1.58	2.97	<0.05	<0.02	0.04	0.017	0.09	5.8	6.5	0.22	509	1.00	0.01
M401469		1.16	15.9	2.59	5.11	<0.05	0.02	0.06	0.022	0.09	8.0	13.3	0.40	424	1.20	0.02
M401470		1.44	7.9	1.67	2.43	<0.05	0.02	0.04	0.027	0.13	5.5	5.4	0.18	1220	3.37	0.01
M401471		1.39	6.9	1.83	4.29	<0.05	<0.02	0.05	0.018	0.11	8.1	9.4	0.40	191	0.84	0.01
M401472		1.14	13.8	2.19	3.98	<0.05	0.05	0.03	0.020	0.11	10.0	9.4	0.39	534	0.74	0.02
M401473		1.44	9.4	1.92	3.60	<0.05	0.02	0.06	0.017	0.09	7.4	9.3	0.32	260	0.84	0.01
M401474		1.14	4.3	1.09	2.17	<0.05	<0.02	0.03	0.007	0.12	4.7	3.5	0.18	246	0.69	0.01
M401475		1.13	10.0	2.16	4.15	<0.05	0.03	0.02	0.017	0.11	8.0	9.1	0.37	698	1.12	0.01
M401476		1.22	14.8	2.29	4.09	<0.05	0.05	0.02	0.022	0.10	9.4	10.7	0.44	443	0.84	0.02
M401477		1.17	11.4	1.98	4.83	<0.05	<0.02	0.03	0.017	0.11	7.8	7.7	0.32	310	1.48	0.02
M401478		1.05	9.3	1.85	2.94	<0.05	0.03	0.03	0.013	0.10	6.8	7.9	0.31	411	0.63	0.02
M401479		1.04	12.4	3.19	6.88	<0.05	0.03	0.03	0.024	0.11	8.2	20.9	0.52	285	1.04	0.02
M401480		1.12	13.4	3.12	6.64	<0.05	0.10	0.02	0.027	0.09	9.2	16.6	0.52	292	1.13	0.02
M401481		1.06	14.2	2.35	4.13	<0.05	0.04	0.03	0.019	0.12	8.0	12.5	0.44	608	0.74	0.02
M401482		1.41	16.8	2.26	3.77	<0.05	0.07	0.02	0.021	0.12	7.0	10.1	0.41	450	0.65	0.02
M401483		1.16	16.5	3.58	7.08	<0.05	0.07	0.04	0.032	0.10	8.9	21.2	0.72	346	0.93	0.02
M401484		0.59	5.1	0.93	1.82	<0.05	0.02	0.01	0.007	0.13	2.7	4.0	0.20	235	0.37	0.01
M401485		0.96	11.9	2.44	6.31	<0.05	0.04	0.06	0.018	0.11	7.8	11.3	0.46	233	1.00	0.01
M401486		0.87	14.5	2.68	4.94	<0.05	0.06	0.07	0.024	0.09	8.3	16.0	0.43	304	1.13	0.02
M401487		0.86	17.2	3.76	6.85	0.06	0.07	0.03	0.030	0.08	13.0	15.0	1.27	654	0.69	0.16
M401488		0.86	21.8	3.16	6.48	0.05	0.05	0.02	0.029	0.08	15.7	16.2	0.98	268	0.97	0.08
M401489		1.12	21.1	3.27	6.85	0.06	0.08	0.04	0.031	0.11	12.9	16.6	0.64	383	1.04	0.02
M401490		0.99	17.3	2.63	5.37	<0.05	0.04	0.04	0.020	0.11	9.0	14.4	0.62	398	0.62	0.02

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 7 - C
Total # Pages: 8 (A - D)
Plus Appendix Pages
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401451		0.95	14.9	410	12.0	9.1	0.002	0.03	0.45	1.6	0.3	0.7	17.5	<0.01	0.03	<0.2
M401452		0.62	13.8	510	19.8	10.8	0.002	0.04	0.53	1.3	<0.2	0.4	16.7	<0.01	0.13	0.2
M401453		0.92	17.9	490	24.1	9.4	0.002	0.04	0.49	2.2	<0.2	0.4	17.5	<0.01	0.21	0.8
M401454		0.53	11.9	540	19.7	8.5	0.002	0.05	0.54	1.2	<0.2	0.3	18.0	<0.01	0.16	0.2
M401455		0.82	13.5	440	29.1	9.4	0.001	0.03	0.61	1.7	<0.2	0.4	15.5	<0.01	0.07	0.5
M401456		0.62	9.1	380	89.0	5.6	0.002	0.10	2.08	1.6	0.4	0.2	24.6	<0.01	2.41	1.1
M401457		0.51	6.6	350	230	6.5	0.002	0.22	3.30	1.7	0.3	0.2	44.0	<0.01	4.78	1.7
M401458		0.60	7.0	440	223	7.0	0.002	0.18	4.25	1.5	0.4	0.2	31.1	<0.01	5.12	1.2
M401459		0.32	4.9	430	660	10.5	0.002	0.64	3.66	1.4	0.2	0.2	61.0	<0.01	5.22	2.2
M401460		1.31	13.8	800	194.0	9.0	<0.001	0.06	2.13	2.8	0.4	0.3	28.0	<0.01	1.09	2.1
M401461		0.40	4.5	730	1290	10.4	0.002	0.18	5.86	1.8	0.7	0.2	30.0	<0.01	1.14	1.3
M401462		0.75	10.3	480	448	9.1	0.001	0.40	2.03	1.6	0.2	0.3	29.8	<0.01	1.47	0.8
M401463		0.40	5.4	220	326	4.2	0.002	0.27	1.88	1.7	0.5	0.2	39.1	<0.01	0.94	2.3
M401464		0.36	4.0	330	319	5.5	0.001	0.19	0.68	0.6	<0.2	<0.2	27.5	<0.01	0.49	0.7
M401465		1.83	16.9	320	12.7	10.5	0.002	0.02	0.33	3.4	0.2	0.5	17.1	0.01	0.10	2.0
M401466		0.84	13.7	320	54.5	8.8	0.001	0.03	0.85	5.3	0.9	0.3	26.4	<0.01	0.62	1.7
M401467		0.59	10.4	270	58.3	5.3	0.001	0.03	0.84	2.2	0.3	0.2	23.8	<0.01	0.98	1.5
M401468		0.83	7.2	180	25.5	7.2	0.002	0.02	0.38	1.5	<0.2	0.2	11.3	<0.01	0.22	1.3
M401469		1.33	17.7	350	21.9	9.6	0.001	0.03	0.43	2.7	0.2	0.4	17.7	<0.01	0.06	1.8
M401470		0.49	6.7	170	29.8	7.1	0.001	0.01	0.38	1.4	0.3	0.2	16.6	<0.01	0.36	1.3
M401471		1.13	10.0	270	26.6	8.9	0.002	0.02	0.30	2.4	<0.2	0.3	15.1	<0.01	0.09	1.1
M401472		1.11	16.6	180	30.3	8.6	0.002	0.01	0.30	2.6	0.2	0.3	15.4	<0.01	0.03	2.5
M401473		1.05	10.4	260	75.8	7.7	0.002	0.02	0.25	2.0	0.5	0.3	12.6	<0.01	0.06	1.9
M401474		0.55	4.8	130	19.6	7.1	0.002	0.01	0.20	1.2	<0.2	0.2	17.5	<0.01	0.04	1.0
M401475		1.24	12.4	180	47.1	8.7	<0.001	0.01	0.29	2.5	0.2	0.4	12.8	<0.01	0.05	2.2
M401476		1.33	17.3	170	22.8	8.4	<0.001	0.01	0.30	3.0	0.6	0.4	17.4	<0.01	0.02	2.7
M401477		0.87	10.6	410	23.3	8.9	0.001	0.03	0.27	2.0	0.4	0.4	25.8	<0.01	0.03	0.6
M401478		0.94	10.0	230	28.0	6.2	0.001	0.01	0.20	2.0	0.6	0.2	15.3	<0.01	0.04	1.8
M401479		2.16	17.1	350	13.2	9.6	0.001	0.02	0.32	3.5	0.7	0.5	17.0	<0.01	0.02	2.3
M401480		1.94	19.0	320	15.6	10.3	<0.001	0.02	0.34	3.9	0.4	0.6	20.7	<0.01	0.05	2.7
M401481		1.08	14.7	240	22.7	8.7	<0.001	0.01	0.27	3.3	0.4	0.3	14.7	<0.01	0.05	2.6
M401482		1.01	19.9	260	19.9	9.2	<0.001	0.01	0.23	3.1	0.6	0.3	16.1	<0.01	0.08	2.4
M401483		2.38	22.6	390	9.6	9.6	0.001	0.01	0.32	5.4	0.7	0.6	22.1	0.01	0.05	2.6
M401484		0.38	5.1	140	23.9	5.4	<0.001	0.01	0.11	1.1	0.2	<0.2	17.5	<0.01	<0.01	0.9
M401485		1.47	12.0	270	35.1	6.9	<0.001	0.02	0.25	3.5	<0.2	0.5	16.6	<0.01	0.04	2.1
M401486		1.65	16.5	400	20.2	9.4	<0.001	0.03	0.29	3.3	0.9	0.4	16.1	<0.01	0.04	2.6
M401487		0.52	32.8	760	8.7	8.1	<0.001	0.01	0.18	7.1	0.5	0.5	99.9	<0.01	0.02	2.0
M401488		1.00	28.1	600	11.7	9.1	<0.001	0.02	0.22	7.4	0.5	0.5	63.8	<0.01	0.02	2.2
M401489		1.82	22.7	400	17.4	11.6	<0.001	0.01	0.32	5.6	0.3	0.6	20.0	<0.01	0.04	3.5
M401490		1.94	20.1	410	8.7	9.2	0.001	0.02	0.26	4.1	0.3	0.5	24.8	0.01	0.02	2.5



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 7 - D
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm	Au-OG43 Au ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5	0.01
M401451		0.084	0.07	0.58	64	0.15	3.48	81	<0.5	
M401452		0.048	0.11	0.45	59	0.17	2.96	72	<0.5	
M401453		0.058	0.08	0.52	51	0.17	3.67	64	<0.5	
M401454		0.030	0.09	0.39	45	0.14	2.72	53	<0.5	
M401455		0.056	0.08	0.45	53	0.17	2.79	67	<0.5	
M401456		0.024	0.08	0.53	29	0.09	4.11	141	0.6	
M401457		0.017	0.09	0.88	23	0.11	5.54	170	0.5	
M401458		0.021	0.11	0.57	28	0.29	4.11	84	0.5	
M401459		0.008	0.25	0.71	16	0.07	3.75	140	0.5	
M401460		0.048	0.13	0.65	42	0.11	8.00	87	1.4	
M401461		0.009	0.20	0.89	23	0.08	4.67	130	<0.5	
M401462		0.043	0.15	0.49	44	0.15	2.74	85	0.9	
M401463		0.046	0.06	0.62	26	0.07	5.06	97	1.7	
M401464		0.017	0.06	0.29	20	0.15	1.43	72	<0.5	
M401465		0.120	0.09	0.45	62	0.26	3.20	94	1.2	
M401466		0.057	0.09	2.07	45	0.15	26.2	244	0.9	
M401467		0.033	0.07	0.69	32	0.11	8.23	170	<0.5	
M401468		0.035	0.07	0.35	33	0.16	2.48	49	<0.5	
M401469		0.073	0.09	0.45	58	0.22	3.19	54	0.8	
M401470		0.016	0.11	0.27	23	0.12	3.37	35	0.6	
M401471		0.072	0.08	0.42	44	0.15	3.31	52	<0.5	
M401472		0.071	0.09	0.45	48	0.19	3.56	44	1.5	
M401473		0.052	0.08	0.37	42	0.47	2.81	39	0.6	
M401474		0.023	0.07	0.19	23	0.10	2.15	28	<0.5	
M401475		0.086	0.09	0.40	50	0.19	3.02	46	1.0	
M401476		0.074	0.10	0.49	50	0.24	4.18	44	1.9	
M401477		0.050	0.08	0.41	48	0.17	4.46	44	<0.5	
M401478		0.050	0.06	0.32	38	0.22	2.97	36	0.9	
M401479		0.117	0.08	0.39	74	0.26	3.43	48	1.4	
M401480		0.128	0.10	0.48	76	0.24	4.10	48	3.5	
M401481		0.063	0.08	0.43	50	0.17	3.78	46	1.6	
M401482		0.051	0.09	0.37	46	0.16	3.55	44	2.3	
M401483		0.157	0.10	0.53	83	0.25	4.90	58	2.4	
M401484		0.012	0.04	0.14	18	0.06	1.41	28	0.6	
M401485		0.059	0.10	0.48	62	0.16	3.39	43	1.2	
M401486		0.069	0.08	0.47	55	0.21	3.61	44	1.7	
M401487		0.071	0.06	0.39	81	0.08	10.95	66	2.0	
M401488		0.078	0.07	0.71	75	0.14	13.05	63	1.6	
M401489		0.122	0.11	0.77	76	0.26	7.25	58	3.3	
M401490		0.123	0.10	0.54	63	0.28	4.22	57	1.2	

***** See Appendix Page for comments regarding this certificate *****



2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Fax: 604 984 0218 www.alsglobal.com

6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 8 - A

Total # Pages: 8 (A - D)

Plus Appendix Pages

Finalized Date: 21-SEP-2012

Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

[illegible]

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 8 - B
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm 0.05	Cu ppm 0.2	Fe % 0.01	Ga ppm 0.05	Ge ppm 0.05	Hf ppm 0.02	Hg ppm 0.01	In ppm 0.005	K % 0.01	La ppm 0.2	Li ppm 0.1	Mg % 0.01	Mn ppm 5	Mo ppm 0.05	Na % 0.01
M401491		0.83	11.8	3.19	8.64	<0.05	0.08	0.04	0.027	0.06	8.0	13.7	0.32	182	1.33	0.01
M401492		1.04	26.0	3.07	6.65	<0.05	0.07	0.05	0.027	0.10	8.6	18.3	0.53	344	1.12	0.02
M401493		1.03	24.4	2.64	6.06	<0.05	0.06	0.03	0.025	0.10	16.6	14.2	0.60	350	0.65	0.02
M401494		1.03	17.3	2.74	5.79	<0.05	0.04	0.04	0.023	0.12	10.9	15.5	0.63	487	0.50	0.02
M401495		1.43	19.0	3.40	7.81	<0.05	0.02	0.04	0.028	0.12	9.6	21.7	0.69	370	0.77	0.01
M401496		1.19	17.8	3.04	6.59	<0.05	0.03	0.02	0.022	0.12	10.7	18.8	0.68	360	0.70	0.02
M401497		0.98	17.2	2.65	5.53	<0.05	0.04	0.05	0.020	0.10	10.5	16.7	0.56	344	0.60	0.02
M401498		1.06	17.6	2.71	5.77	<0.05	0.03	0.03	0.022	0.15	11.2	17.9	0.59	488	0.59	0.02
M401499		1.31	16.1	3.03	6.67	0.05	0.04	0.02	0.018	0.13	10.1	20.9	0.68	361	0.63	0.02
M401500		1.08	13.8	2.77	6.13	<0.05	0.05	0.02	0.018	0.11	10.3	17.1	0.64	344	0.52	0.02



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 8 - C
 Total # Pages: 8 (A - D)
 Plus Appendix Pages
 Finalized Date: 21-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401491		2.57	11.7	310	15.6	8.3	<0.001	0.01	0.45	3.2	<0.2	0.7	15.3	0.02	0.04	2.3
M401492		1.81	19.4	390	20.8	11.7	0.001	0.02	0.28	3.7	0.5	0.5	17.8	<0.01	0.03	2.5
M401493		1.44	17.3	760	18.4	10.7	<0.001	0.01	0.26	6.1	0.7	0.5	28.2	<0.01	0.02	2.6
M401494		1.36	16.4	590	6.6	12.7	<0.001	0.02	0.22	3.8	0.6	0.4	25.1	<0.01	0.02	2.6
M401495		1.70	19.1	460	8.1	11.7	0.001	0.03	0.29	4.1	0.3	0.6	22.0	<0.01	0.02	1.7
M401496		1.81	20.6	550	7.3	12.2	0.001	0.02	0.30	4.0	0.4	0.5	23.2	<0.01	0.02	2.0
M401497		1.58	15.7	550	7.1	10.3	<0.001	0.02	0.23	3.7	0.6	0.4	18.3	<0.01	0.02	2.5
M401498		1.33	16.4	630	6.8	14.4	0.001	0.03	0.26	2.9	0.5	0.4	26.4	<0.01	0.04	1.5
M401499		1.84	18.0	490	7.4	14.4	0.001	0.02	0.23	3.9	0.4	0.5	31.5	<0.01	0.03	2.3
M401500		1.70	18.7	510	6.6	12.3	<0.001	0.02	0.26	3.3	<0.2	0.4	37.0	0.01	0.01	2.2



2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Fax: 604 984 0218 www.alsglobal.com

6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 8 - D

Plus Appendix Pages

Finalized Date: 21-SEP-2012

Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

[illegible]

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: Appendix 1
Total # Appendix Pages: 1
Finalized Date: 21-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195692

Method	CERTIFICATE COMMENTS
ME-MS41	Gold determinations by this method are semi-quantitative due to the small sample weight used (0.5g).



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: **0926764 B.C. LTD.**
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 1
Finalized Date: **13-SEP-2012**
This copy reported on
17-OCT-2012
Account: **092BCL**

CERTIFICATE WH12195694

Project:
P.O. No.:
This report is for 81 Soil samples submitted to our lab in Whitehorse, YT, Canada on 21-AUG-2012.

The following have access to data associated with this certificate:

MICKI GORDIC

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES


ALS CODE	DESCRIPTION	INSTRUMENT
Au-ST43	Super Trace Au - 25g AR	ICP-MS
ME-MS41	51 anal. aqua regia ICPMS	

To: **0926764 B.C. LTD.**
ATTN: MICKI GORDIC
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

***** See Appendix Page for comments regarding this certificate *****

Signature:


Colin Ramshaw, Vancouver Laboratory Manager



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - A
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401501		0.70	0.0004	0.01	0.62	2.4	<0.2	<10	30	<0.05	0.08	0.02	0.01	35.9	1.1	5
M401502		0.67	0.0226	0.11	1.04	14.4	<0.2	<10	60	0.18	0.31	0.02	0.04	51.3	6.1	15
M401503		0.58	0.0007	0.05	1.94	18.7	<0.2	<10	140	0.35	0.28	0.24	0.07	34.0	8.7	18
M401504		0.66	0.0006	0.02	1.55	12.5	<0.2	<10	100	0.25	0.24	0.01	0.07	40.5	5.7	17
M401505		0.60	0.0014	0.02	1.26	9.0	<0.2	<10	80	0.21	0.22	0.01	0.04	39.0	4.4	13
M401506		0.78	0.0195	0.03	1.92	15.5	<0.2	<10	170	0.47	0.29	0.02	0.09	46.5	8.3	22
M401507		0.69	0.0015	0.02	1.13	8.9	<0.2	<10	80	0.25	0.23	0.02	0.04	33.9	3.3	13
M401508		0.66	0.0009	0.05	2.15	11.2	<0.2	<10	210	0.70	0.20	0.03	0.18	36.5	10.3	23
M401509		0.69	0.0004	0.02	1.58	14.0	<0.2	<10	120	0.20	0.26	0.01	0.11	44.5	5.6	17
M401510		0.79	0.0024	0.03	1.32	10.8	<0.2	<10	110	0.43	0.25	0.02	0.07	39.1	5.7	16
M401511		0.73	0.0090	0.05	0.61	17.9	<0.2	<10	50	0.10	0.24	0.02	0.09	31.5	3.7	7
M401512		0.61	0.0004	0.01	0.61	12.7	<0.2	<10	40	0.06	0.20	0.01	0.05	35.3	3.9	6
M401513		0.66	0.0010	0.23	1.44	9.1	<0.2	<10	220	0.43	0.24	0.14	0.24	35.5	10.6	15
M401514		0.67	0.0001	0.03	0.89	12.3	<0.2	<10	90	0.16	0.22	0.40	0.20	29.1	6.9	13
M401515		0.64	0.0023	0.02	1.16	9.9	<0.2	<10	110	0.45	0.28	0.10	0.06	56.2	12.2	17
M401516		0.55	0.0009	0.01	0.54	13.3	<0.2	<10	40	0.09	0.18	0.02	0.05	24.5	3.1	8
M401517		0.76	0.0014	0.03	1.72	6.4	<0.2	<10	130	0.44	0.12	0.17	0.17	18.90	8.5	25
M401518		0.74	0.0012	0.03	1.42	4.4	<0.2	<10	80	0.42	0.08	0.14	0.15	18.45	6.3	19
M401519		0.74	0.0032	0.04	1.37	4.6	<0.2	<10	80	0.44	0.95	0.18	0.13	19.15	7.2	20
M401520		0.87	0.0024	0.02	1.17	3.9	<0.2	<10	160	0.44	0.07	0.37	0.12	25.5	6.3	24
M401521		0.66	0.0023	0.04	1.29	4.3	<0.2	<10	140	0.47	0.09	0.20	0.14	17.80	6.0	18
M401522		0.61	0.0003	0.04	0.95	2.4	<0.2	<10	80	0.19	0.08	0.21	0.04	15.35	5.3	14
M401523		0.87	0.0009	0.04	0.85	2.7	<0.2	<10	310	1.00	0.06	0.35	0.14	19.20	4.7	10
M401524		0.77	0.0024	0.02	1.10	3.7	<0.2	<10	170	0.54	0.08	0.29	0.17	23.7	5.6	19
M401525		0.67	0.0002	0.03	1.25	4.7	<0.2	<10	90	0.42	0.10	0.14	0.15	19.20	7.1	17
M401526		0.70	0.0032	0.04	1.46	4.7	<0.2	<10	100	0.41	0.08	0.19	0.18	19.05	7.2	21
M401527		0.84	0.0015	0.03	1.16	4.4	<0.2	<10	270	0.51	0.08	0.31	0.10	29.2	6.9	23
M401528		0.69	0.0010	0.05	1.33	4.2	<0.2	<10	80	0.42	0.09	0.19	0.10	16.40	5.9	21
M401529		0.73	0.0007	0.04	1.34	4.6	<0.2	<10	100	0.36	0.08	0.23	0.16	17.75	6.8	22
M401530		0.66	0.0020	0.03	1.14	3.4	<0.2	<10	90	0.32	0.09	0.24	0.15	16.05	5.5	17
M401531		0.74	0.0029	0.04	1.01	3.3	<0.2	<10	100	0.29	0.10	0.19	0.11	15.05	4.7	18
M401532		0.59	0.0013	0.07	1.89	6.0	<0.2	<10	150	0.65	0.20	0.17	0.22	21.3	10.3	25
M401533		0.72	0.0014	0.03	2.12	7.7	<0.2	<10	120	0.44	0.17	0.26	0.21	18.55	7.8	33
M401534		0.76	0.0022	0.02	1.70	5.2	<0.2	<10	170	0.53	0.15	0.18	0.22	16.60	8.9	21
M401535		0.64	0.0010	0.03	1.37	6.5	<0.2	<10	350	0.33	0.30	0.26	0.12	17.50	6.0	24
M401536		0.72	0.0018	0.07	1.49	4.6	<0.2	<10	110	0.34	1.37	0.20	0.14	15.85	4.7	20
M401537		0.69	0.0011	0.08	1.53	5.0	<0.2	<10	100	0.39	0.36	0.15	0.19	17.75	7.0	19
M401538		0.84	0.0016	0.05	0.88	2.1	<0.2	<10	200	0.47	0.64	0.28	0.10	21.4	4.0	14
M401539		0.78	0.0034	0.16	1.40	2.7	<0.2	<10	220	0.45	0.70	0.23	0.09	16.60	4.6	19
M401540		0.78	0.0011	0.06	0.75	1.5	<0.2	<10	300	0.42	0.62	0.25	0.06	11.75	2.5	11



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - B
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm 0.05	Cu ppm 0.2	Fe % 0.01	Ga ppm 0.05	Ge ppm 0.05	Hf ppm 0.02	Hg ppm 0.01	In ppm 0.005	K % 0.01	La ppm 0.2	Li ppm 0.1	Mg % 0.01	Mn ppm 5	Mo ppm 0.05	Na % 0.01
M401501		0.25	2.1	0.80	5.05	<0.05	<0.02	0.01	<0.005	0.02	18.2	3.2	0.04	50	0.40	0.01
M401502		0.84	13.2	2.77	4.46	0.07	0.02	0.02	0.008	0.05	25.3	23.2	0.29	235	1.09	0.01
M401503		0.79	11.5	3.45	5.11	<0.05	0.09	0.01	0.031	0.04	15.9	50.6	0.43	202	0.77	0.01
M401504		0.69	11.0	3.37	5.85	<0.05	0.08	0.01	0.014	0.05	20.8	27.6	0.27	188	1.29	<0.01
M401505		0.92	9.6	2.31	6.17	<0.05	0.02	0.01	0.008	0.04	19.4	16.9	0.20	221	0.95	0.01
M401506		1.33	42.0	3.85	5.38	0.06	0.09	0.01	0.019	0.07	22.4	51.2	0.44	244	1.00	0.01
M401507		1.20	16.4	1.91	5.14	<0.05	0.02	<0.01	0.014	0.06	16.4	9.3	0.13	140	1.17	0.01
M401508		1.41	38.3	3.32	5.17	<0.05	0.07	0.03	0.023	0.06	18.3	45.1	0.36	213	1.18	0.01
M401509		2.08	14.3	3.20	6.05	<0.05	0.06	0.01	0.018	0.04	22.1	25.6	0.20	167	2.18	0.01
M401510		2.80	21.4	2.69	5.27	0.05	0.04	0.01	0.013	0.05	20.5	28.0	0.31	207	0.92	0.01
M401511		0.47	15.2	2.42	5.90	0.05	0.02	0.01	0.009	0.03	16.6	3.7	0.06	89	2.27	<0.01
M401512		1.07	10.4	1.59	5.67	0.05	0.02	0.01	0.007	0.03	18.5	2.7	0.04	98	2.48	<0.01
M401513		0.91	22.4	2.61	4.21	0.06	0.05	0.03	0.015	0.06	18.1	32.3	0.33	338	1.82	0.01
M401514		0.62	12.1	2.35	4.45	0.05	0.03	0.01	0.010	0.04	14.9	27.3	0.27	208	3.12	<0.01
M401515		0.38	24.9	3.14	3.35	0.08	0.04	0.01	0.011	0.04	28.2	36.7	0.48	580	0.63	<0.01
M401516		0.38	9.0	2.18	4.61	<0.05	<0.02	0.01	0.008	0.03	12.5	5.9	0.07	85	1.86	<0.01
M401517		1.45	19.1	2.63	6.05	0.05	<0.02	0.04	0.023	0.07	7.3	14.6	0.40	438	0.94	0.01
M401518		1.11	15.2	2.03	4.35	<0.05	0.02	0.03	0.017	0.07	7.3	9.6	0.33	430	0.63	0.01
M401519		0.85	16.0	2.10	4.27	0.05	0.03	0.03	0.017	0.07	7.9	10.8	0.36	473	0.58	0.01
M401520		0.76	18.7	2.12	3.89	0.07	0.06	0.02	0.016	0.07	13.4	9.4	0.42	349	0.47	0.01
M401521		1.28	25.4	2.08	4.59	0.05	<0.02	0.02	0.017	0.06	8.1	9.2	0.33	407	0.67	0.01
M401522		0.84	48.6	2.31	4.77	0.05	<0.02	0.03	0.012	0.04	8.0	4.9	0.22	140	0.60	0.02
M401523		2.61	15.1	2.22	2.55	0.05	0.03	0.01	0.024	0.14	11.1	3.7	0.18	355	0.54	0.01
M401524		1.36	14.3	1.81	3.57	0.05	0.03	0.03	0.015	0.08	12.1	8.1	0.34	310	0.47	0.01
M401525		1.68	16.7	2.25	4.76	0.05	<0.02	0.03	0.019	0.09	7.7	10.9	0.29	428	0.78	0.01
M401526		1.10	17.6	2.08	3.78	<0.05	0.06	0.02	0.016	0.07	8.0	9.1	0.37	390	0.48	0.01
M401527		1.20	29.0	2.13	3.78	0.07	0.05	0.02	0.017	0.09	15.6	8.3	0.38	618	0.71	0.01
M401528		1.03	16.1	2.03	4.37	0.05	0.02	0.04	0.018	0.08	8.7	10.2	0.36	280	0.70	0.01
M401529		0.84	14.7	2.06	4.28	0.05	0.03	0.02	0.016	0.08	8.3	9.8	0.38	310	0.55	0.01
M401530		1.37	12.1	2.01	4.08	<0.05	0.02	0.02	0.016	0.07	8.2	9.8	0.31	293	0.53	0.01
M401531		1.08	17.0	1.93	4.40	0.05	<0.02	0.03	0.014	0.07	7.9	8.9	0.28	210	0.65	0.01
M401532		1.59	18.6	2.52	5.41	<0.05	0.05	0.03	0.024	0.09	10.2	13.5	0.42	550	0.75	0.01
M401533		1.14	16.7	2.94	8.09	0.06	0.06	0.03	0.025	0.08	8.9	15.2	0.52	257	1.22	0.01
M401534		2.15	15.2	2.28	4.73	<0.05	0.04	0.02	0.019	0.09	6.7	11.3	0.34	419	0.59	0.01
M401535		1.11	14.7	2.44	7.57	<0.05	0.02	0.02	0.020	0.11	8.7	10.6	0.43	266	1.06	0.01
M401536		1.64	15.6	2.27	5.50	<0.05	0.02	0.03	0.018	0.07	7.9	13.9	0.33	172	1.22	0.01
M401537		1.33	18.1	2.25	5.54	<0.05	0.03	0.05	0.017	0.06	7.7	10.1	0.28	268	1.18	0.01
M401538		1.59	8.0	1.47	2.86	0.05	0.04	0.02	0.011	0.09	10.8	6.2	0.26	316	0.77	0.01
M401539		1.88	9.8	1.64	4.52	<0.05	0.02	0.04	0.015	0.11	8.9	9.3	0.35	209	1.21	0.01
M401540		1.55	6.0	1.12	2.38	<0.05	0.02	0.01	0.008	0.12	6.1	4.9	0.21	215	0.92	0.01

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - C
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401501		0.20	1.9	140	2.8	1.9	<0.001	<0.01	0.08	0.5	<0.2	0.3	3.0	<0.01	<0.01	2.6
M401502		0.25	14.7	140	10.8	6.3	<0.001	0.01	0.44	1.0	0.6	0.2	4.2	<0.01	0.05	5.6
M401503		0.35	18.3	120	16.3	7.3	<0.001	0.01	0.37	1.7	<0.2	0.3	27.7	<0.01	0.04	4.9
M401504		0.31	14.1	130	10.6	6.9	<0.001	<0.01	0.45	1.3	0.4	0.3	4.3	<0.01	0.05	5.3
M401505		0.34	9.5	180	8.8	6.5	<0.001	0.01	0.32	1.2	0.6	0.3	3.9	<0.01	0.04	4.2
M401506		0.27	22.1	170	15.7	8.4	0.001	0.01	0.47	1.6	0.4	0.3	11.1	<0.01	0.05	6.7
M401507		0.25	6.8	270	10.5	6.5	0.001	0.01	0.37	1.2	0.2	0.3	5.9	<0.01	0.04	2.8
M401508		0.24	25.6	230	13.0	7.0	0.001	0.01	0.46	1.9	0.3	0.3	11.8	<0.01	0.02	5.0
M401509		0.45	13.3	210	12.1	6.7	<0.001	0.01	0.82	1.7	0.4	0.4	3.3	<0.01	0.01	5.1
M401510		0.35	14.4	150	9.5	6.2	<0.001	0.01	0.36	1.2	0.2	0.3	13.4	<0.01	0.04	4.7
M401511		0.23	8.6	330	7.1	4.2	<0.001	0.01	0.78	0.9	0.4	0.3	5.7	<0.01	0.04	3.6
M401512		0.19	8.1	160	4.6	4.4	<0.001	0.01	0.72	1.0	0.3	0.3	2.3	<0.01	0.03	3.9
M401513		0.16	24.1	370	12.8	6.4	<0.001	0.02	0.47	1.8	0.4	0.2	17.7	<0.01	0.03	4.7
M401514		0.22	14.4	200	8.5	6.4	<0.001	0.02	0.38	1.0	0.3	0.2	48.0	<0.01	0.03	3.5
M401515		0.10	26.3	390	16.0	2.6	<0.001	0.01	0.37	1.8	0.3	<0.2	11.8	<0.01	0.03	9.1
M401516		0.24	6.0	190	4.7	2.5	<0.001	0.01	0.28	0.7	0.2	0.2	4.6	<0.01	0.05	2.8
M401517		1.16	20.0	420	9.0	10.4	<0.001	0.04	0.32	2.7	0.4	0.4	17.7	<0.01	0.05	1.0
M401518		0.79	13.4	330	7.7	8.2	<0.001	0.03	0.21	2.0	0.3	0.3	13.5	<0.01	0.04	0.7
M401519		0.96	15.6	390	127.0	7.8	<0.001	0.03	0.22	2.4	0.4	0.3	14.4	<0.01	0.07	1.2
M401520		1.00	15.3	790	5.5	6.7	<0.001	0.01	0.23	4.1	0.4	0.3	24.2	<0.01	0.02	2.7
M401521		0.61	12.8	690	7.4	7.9	<0.001	0.04	0.22	2.1	0.5	0.3	17.7	<0.01	0.04	0.4
M401522		0.39	8.2	930	4.4	4.7	<0.001	0.05	0.17	1.2	0.6	0.3	16.7	<0.01	0.03	<0.2
M401523		0.41	6.4	930	7.9	8.8	<0.001	0.02	0.54	4.7	0.3	0.3	26.4	<0.01	0.01	1.3
M401524		0.90	12.7	600	8.2	7.3	<0.001	0.01	0.28	2.7	0.3	0.3	19.0	<0.01	0.02	2.4
M401525		0.78	11.4	430	9.1	8.7	<0.001	0.03	0.21	1.9	0.4	0.4	12.9	<0.01	0.03	0.5
M401526		1.23	18.1	290	7.5	7.3	<0.001	0.02	0.25	2.7	0.3	0.3	15.5	<0.01	0.03	2.4
M401527		0.79	14.4	570	8.0	7.5	<0.001	0.01	0.23	4.9	0.4	0.3	24.0	<0.01	0.02	2.4
M401528		0.75	12.2	550	6.9	7.9	<0.001	0.04	0.21	1.9	0.4	0.3	16.1	<0.01	0.04	0.4
M401529		1.04	15.3	460	6.2	7.1	<0.001	0.03	0.23	2.4	0.3	0.3	16.8	<0.01	0.04	1.2
M401530		0.95	10.6	610	8.1	7.4	<0.001	0.02	0.19	2.3	0.2	0.3	16.4	<0.01	0.02	1.4
M401531		0.74	9.6	490	6.6	7.2	<0.001	0.03	0.20	1.9	0.3	0.3	16.2	<0.01	0.04	0.5
M401532		1.20	15.9	360	16.3	9.9	<0.001	0.01	0.28	3.6	0.4	0.4	13.9	<0.01	0.04	3.2
M401533		2.08	17.8	360	8.8	8.5	<0.001	0.02	0.37	4.2	0.5	0.6	21.5	0.01	0.05	2.4
M401534		1.00	14.5	300	13.7	10.5	<0.001	0.02	0.27	2.6	0.3	0.4	16.3	<0.01	0.04	2.4
M401535		1.76	13.2	220	21.7	11.2	<0.001	0.02	0.27	3.1	0.3	0.6	24.3	<0.01	0.04	1.9
M401536		1.18	10.5	390	72.9	7.2	<0.001	0.02	0.23	2.5	0.3	0.4	16.1	<0.01	0.09	1.4
M401537		1.37	12.7	370	39.3	8.1	<0.001	0.02	0.33	2.5	0.4	0.4	13.9	<0.01	0.06	2.1
M401538		0.72	8.0	590	73.7	6.4	<0.001	0.01	0.14	2.4	0.3	0.2	19.6	<0.01	0.03	2.2
M401539		0.93	10.0	400	66.8	9.9	<0.001	0.02	0.15	2.8	0.3	0.3	19.0	<0.01	0.03	1.8
M401540		0.45	5.6	390	52.3	6.5	<0.001	0.01	0.11	1.8	0.2	0.2	19.8	<0.01	0.04	1.8



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 2 - D
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Tl ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401501		0.007	0.05	0.21	17	0.07	0.98	8	<0.5
M401502		0.006	0.04	0.41	21	0.17	1.99	44	0.8
M401503		<0.005	0.08	0.57	26	0.11	2.33	48	4.3
M401504		<0.005	0.09	0.38	42	0.13	1.72	49	3.3
M401505		0.006	0.09	0.36	30	0.13	1.59	30	1.0
M401506		<0.005	0.09	0.53	24	0.15	2.29	67	3.9
M401507		0.006	0.09	0.42	32	0.15	1.52	27	0.6
M401508		<0.005	0.09	0.61	31	0.12	2.79	76	2.7
M401509		0.007	0.15	0.41	51	0.13	1.82	65	2.8
M401510		0.005	0.07	0.48	27	0.14	1.91	53	1.2
M401511		0.007	0.07	0.37	33	0.25	1.48	37	0.9
M401512		0.005	0.10	0.31	35	0.10	1.24	29	0.6
M401513		<0.005	0.10	0.90	20	0.08	4.87	85	1.4
M401514		0.006	0.05	1.99	17	0.12	1.67	59	1.0
M401515		0.006	0.03	0.62	13	0.08	5.80	62	1.7
M401516		0.007	0.04	0.27	19	0.12	0.95	25	<0.5
M401517		0.061	0.09	0.54	53	0.19	3.59	55	<0.5
M401518		0.048	0.07	0.57	42	0.25	4.10	40	<0.5
M401519		0.055	0.07	0.78	45	0.29	4.53	45	0.7
M401520		0.091	0.06	1.21	49	0.17	11.50	41	2.0
M401521		0.045	0.07	0.81	44	0.17	5.85	48	<0.5
M401522		0.067	0.06	0.59	61	0.12	4.76	38	<0.5
M401523		0.014	0.08	1.14	37	0.42	8.74	53	0.5
M401524		0.064	0.07	0.80	41	0.18	7.02	36	0.7
M401525		0.049	0.07	0.56	43	0.16	3.53	41	<0.5
M401526		0.069	0.07	0.53	44	0.19	3.95	39	1.7
M401527		0.072	0.07	1.12	44	0.15	13.40	49	1.5
M401528		0.057	0.07	0.68	44	0.16	4.11	39	<0.5
M401529		0.076	0.06	0.50	47	0.17	4.28	40	0.7
M401530		0.051	0.06	0.47	41	0.16	4.50	45	<0.5
M401531		0.063	0.06	0.67	46	0.16	3.85	35	<0.5
M401532		0.050	0.10	0.81	49	0.25	5.06	47	1.6
M401533		0.129	0.10	0.60	74	0.25	4.20	46	1.9
M401534		0.040	0.10	0.47	44	0.18	3.58	46	1.2
M401535		0.104	0.09	0.54	62	0.27	3.98	46	0.8
M401536		0.045	0.07	0.47	47	0.20	3.72	38	<0.5
M401537		0.048	0.09	0.50	51	0.20	3.49	40	0.9
M401538		0.051	0.05	0.67	30	0.12	6.47	32	1.2
M401539		0.043	0.08	0.65	34	0.14	4.86	45	<0.5
M401540		0.026	0.06	0.48	21	0.11	3.96	25	0.6

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - A
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401541		0.65	0.0011	0.12	0.69	2.5	<0.2	<10	120	0.16	0.47	0.11	0.09	8.42	4.5	9
M401542		0.71	0.0008	0.06	1.75	8.2	<0.2	<10	100	0.32	0.21	0.16	0.13	15.45	6.1	28
M401543		0.71	0.0011	0.04	0.80	1.8	<0.2	<10	1380	0.41	0.05	0.08	0.04	3.68	3.4	5
M401544		0.71	0.0003	0.04	1.74	6.2	<0.2	<10	180	0.38	0.14	0.15	0.15	12.30	6.7	19
M401545		0.76	0.0014	0.09	2.08	7.4	<0.2	<10	270	0.54	0.26	0.17	0.16	22.1	9.1	26
M401546		0.72	0.0035	0.08	2.14	6.7	<0.2	<10	180	0.50	0.67	0.20	0.17	19.45	10.2	27
M401547		0.69	0.0041	0.06	1.94	5.9	<0.2	<10	140	0.48	0.54	0.14	0.17	19.10	8.4	27
M401548		0.70	0.0013	0.08	1.73	6.4	<0.2	<10	100	0.36	0.40	0.17	0.13	20.4	6.5	26
M401549		0.80	0.0023	0.08	2.57	7.3	<0.2	<10	170	0.71	0.34	0.20	0.15	23.7	10.4	37
M401550		0.79	0.0015	0.11	2.07	6.4	<0.2	<10	140	0.51	0.42	0.15	0.12	16.60	5.7	27
M401551		0.83	0.0045	0.08	2.52	7.1	<0.2	<10	200	0.76	0.35	0.23	0.11	19.75	10.8	35
M401552		0.78	0.0040	0.07	2.31	6.9	<0.2	<10	260	0.68	0.56	0.16	0.14	23.1	8.8	34
M401553		0.67	0.0031	0.03	0.89	2.5	<0.2	<10	320	0.38	0.23	0.33	0.09	22.9	4.3	16
M401554		0.85	0.0019	0.03	1.59	4.7	<0.2	<10	170	0.48	0.40	0.23	0.12	18.15	5.8	22
M401555		0.85	0.0016	0.06	1.54	7.0	<0.2	<10	120	0.34	0.75	0.15	0.17	17.55	7.2	24
M401556		0.77	0.0014	0.05	1.59	6.3	<0.2	<10	120	0.29	0.40	0.17	0.11	16.90	5.1	22
M401557		0.79	0.0011	0.03	2.00	6.1	<0.2	<10	170	0.41	0.44	0.23	0.12	19.75	6.5	27
M401558		0.77	0.0010	0.05	1.77	6.6	<0.2	<10	280	0.39	0.51	0.22	0.13	20.8	6.8	28
M401559		0.64	<0.0001	0.01	0.20	0.2	<0.2	<10	30	<0.05	0.03	0.19	0.02	7.27	3.7	5
M401560		0.85	0.0016	0.04	1.56	3.6	<0.2	<10	300	0.26	0.34	0.22	0.09	18.80	6.1	26
M401561		0.83	0.0037	0.04	1.99	6.4	<0.2	<10	250	0.53	0.25	0.34	0.14	27.1	9.2	29
M401562		0.88	0.0015	0.03	1.80	6.1	<0.2	<10	140	0.42	0.16	0.26	0.12	18.80	6.5	26
M401563		0.67	0.0009	0.11	1.37	3.1	<0.2	<10	210	0.27	0.18	0.26	0.10	18.30	10.4	22
M401564		0.96	0.0036	0.02	1.36	3.8	<0.2	<10	170	0.36	0.14	0.37	0.12	30.1	6.9	24
M401565		0.73	0.0018	0.03	2.54	7.2	<0.2	<10	200	0.52	0.17	0.21	0.19	23.7	9.8	31
M401566		0.75	0.0017	0.05	1.54	5.7	<0.2	<10	180	0.40	0.16	0.30	0.13	25.9	7.0	27
M401567	Destroyed															
M401568		0.71	0.0008	0.08	2.07	6.5	<0.2	<10	230	0.43	0.15	0.17	0.17	16.15	6.0	28
M401569		0.72	0.0011	0.04	2.30	7.6	<0.2	<10	340	0.46	0.17	0.17	0.15	18.35	7.6	28
M401570		0.73	0.0019	0.04	1.70	6.1	<0.2	<10	950	0.75	0.14	0.60	0.10	16.55	5.9	22
M401571		0.72	0.0010	0.09	1.29	4.0	<0.2	<10	550	0.62	0.15	0.40	0.11	18.50	4.9	20
M401572		0.69	0.0052	0.03	1.09	3.1	<0.2	<10	420	0.44	0.09	0.30	0.05	16.50	4.9	19
M401573		0.77	0.0012	0.03	1.53	4.9	<0.2	<10	270	0.32	0.12	0.25	0.11	14.95	5.9	26
M401574		0.78	0.0005	0.03	1.01	3.2	<0.2	<10	260	0.33	0.10	0.23	0.08	16.05	5.0	20
M401575		0.77	0.0008	0.03	1.30	4.4	<0.2	<10	310	0.31	0.11	0.25	0.09	15.10	5.5	24
M401576		0.76	0.0018	0.17	1.27	3.3	<0.2	<10	480	0.46	0.15	0.25	0.10	15.55	4.8	21
M401577		0.72	0.0007	0.04	1.77	5.7	<0.2	<10	280	0.46	0.13	0.14	0.13	19.00	6.4	24
M401578		0.82	0.0011	0.09	1.88	6.3	<0.2	<10	290	0.43	0.17	0.17	0.15	19.50	7.5	27
M401579		0.73	0.0005	0.02	1.22	2.0	<0.2	<10	260	0.38	0.04	0.15	0.04	11.75	2.0	7
M401580		0.74	0.0009	0.05	2.20	7.2	<0.2	<10	310	0.59	0.16	0.22	0.10	19.10	7.8	35

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - B
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Cs ppm 0.05	ME-MS41 Cu ppm 0.2	ME-MS41 Fe % 0.01	ME-MS41 Ga ppm 0.05	ME-MS41 Ge ppm 0.05	ME-MS41 Hf ppm 0.02	ME-MS41 Hg ppm 0.01	ME-MS41 In ppm 0.005	ME-MS41 K % 0.01	ME-MS41 La ppm 0.2	ME-MS41 Li ppm 0.1	ME-MS41 Mg % 0.01	ME-MS41 Mn ppm 5	ME-MS41 Mo ppm 0.05	ME-MS41 Na % 0.01
M401541		1.19	10.6	1.37	3.84	<0.05	<0.02	0.04	0.008	0.10	3.9	2.1	0.10	445	3.44	0.01
M401542		1.18	11.2	3.27	9.81	0.05	0.07	0.02	0.023	0.07	7.9	16.4	0.43	214	1.64	0.01
M401543		4.09	7.8	0.86	1.82	<0.05	<0.02	0.04	0.006	0.15	1.6	5.5	0.12	354	0.43	<0.01
M401544		1.02	12.2	2.49	5.13	<0.05	0.04	0.03	0.019	0.11	5.7	13.2	0.29	351	0.93	0.01
M401545		1.07	20.6	2.61	5.56	0.05	0.03	0.03	0.024	0.09	9.2	13.1	0.48	404	0.87	0.01
M401546		0.96	18.1	2.62	5.11	<0.05	0.05	0.04	0.023	0.09	8.2	12.6	0.46	407	1.29	0.01
M401547		0.97	13.6	2.54	4.90	<0.05	0.07	0.04	0.021	0.10	9.4	11.0	0.42	297	1.22	0.01
M401548		0.98	11.4	2.49	5.93	<0.05	0.03	0.05	0.019	0.08	8.8	11.2	0.38	247	1.09	0.01
M401549		1.11	17.6	2.82	6.43	<0.05	0.08	0.06	0.028	0.10	11.9	15.2	0.57	376	0.86	0.01
M401550		0.94	12.9	2.82	6.28	<0.05	<0.02	0.05	0.021	0.12	7.3	13.1	0.45	244	1.06	0.01
M401551		1.12	14.4	2.98	6.21	<0.05	0.05	0.05	0.027	0.13	10.2	15.2	0.60	383	0.76	0.01
M401552		0.99	15.4	2.74	6.63	<0.05	0.04	0.05	0.026	0.10	10.9	13.5	0.50	480	1.06	0.01
M401553		0.68	7.7	1.62	2.97	<0.05	0.02	0.02	0.013	0.08	12.4	6.9	0.31	435	0.47	0.01
M401554		0.87	14.5	2.28	4.76	<0.05	0.06	0.02	0.016	0.12	8.7	11.7	0.41	338	0.66	0.01
M401555		0.72	13.7	2.75	6.00	<0.05	0.03	0.02	0.021	0.08	6.9	13.1	0.39	327	0.91	0.01
M401556		0.72	17.1	2.75	7.60	<0.05	0.03	0.05	0.016	0.08	8.2	10.8	0.33	251	1.18	0.01
M401557		0.85	14.7	2.67	6.44	<0.05	0.02	0.03	0.020	0.08	9.7	14.6	0.47	291	0.72	0.01
M401558		0.86	13.9	2.81	6.68	<0.05	0.02	0.02	0.020	0.10	9.3	11.6	0.48	415	0.96	0.01
M401559		0.06	3.1	1.61	2.55	<0.05	<0.02	0.01	<0.005	0.01	3.2	0.4	0.10	92	0.12	0.02
M401560		0.86	14.1	1.81	7.80	<0.05	<0.02	0.01	0.017	0.09	9.8	7.7	0.42	261	1.03	0.01
M401561		0.83	18.3	2.64	5.13	<0.05	0.05	0.02	0.020	0.11	12.8	12.1	0.51	543	0.66	0.01
M401562		0.77	16.5	2.52	5.50	<0.05	0.04	0.02	0.019	0.08	9.5	11.1	0.44	220	0.65	0.01
M401563		0.86	11.5	1.51	6.06	<0.05	<0.02	0.05	0.016	0.07	8.0	9.9	0.35	580	0.78	0.01
M401564		0.73	13.9	1.99	4.39	0.05	0.05	0.01	0.017	0.08	14.1	10.0	0.47	240	0.43	0.02
M401565		0.97	19.1	2.78	5.93	<0.05	0.11	0.03	0.023	0.10	9.2	13.7	0.48	416	0.67	0.01
M401566		0.76	17.0	2.37	5.33	<0.05	0.02	0.02	0.017	0.07	14.1	10.5	0.45	272	0.76	0.02
M401567																
M401568		0.90	13.7	2.74	7.31	<0.05	0.05	0.03	0.021	0.05	7.7	15.0	0.36	158	1.06	0.01
M401569		0.95	15.2	2.81	6.79	<0.05	0.07	0.02	0.023	0.09	9.5	18.0	0.43	211	0.82	0.01
M401570		1.24	11.5	2.40	4.94	<0.05	0.04	0.02	0.017	0.16	10.1	8.3	0.39	410	0.70	0.01
M401571		1.11	13.5	1.90	5.00	<0.05	<0.02	0.03	0.012	0.19	11.0	6.9	0.39	311	0.73	0.01
M401572		1.05	9.0	1.67	3.71	<0.05	<0.02	0.01	0.010	0.13	8.5	7.5	0.34	289	0.62	0.01
M401573		0.83	9.3	2.39	5.49	<0.05	<0.02	0.01	0.018	0.13	7.1	12.6	0.45	231	0.55	0.01
M401574		0.92	7.7	1.73	4.34	<0.05	<0.02	0.01	0.012	0.12	7.5	8.5	0.38	250	0.60	0.01
M401575		0.83	9.8	2.10	5.10	<0.05	0.02	0.01	0.014	0.11	7.1	10.4	0.44	221	0.63	0.01
M401576		0.65	11.5	1.95	6.23	<0.05	0.02	0.02	0.014	0.09	8.7	7.0	0.34	212	0.58	0.01
M401577		0.92	12.1	2.43	5.69	<0.05	<0.02	0.01	0.016	0.12	8.8	11.8	0.45	323	0.67	0.01
M401578		0.88	15.4	2.71	7.30	<0.05	<0.02	0.03	0.020	0.08	7.4	13.0	0.48	459	0.97	0.01
M401579		0.87	7.9	0.93	2.58	<0.05	0.02	0.01	0.007	0.08	3.5	3.5	0.13	269	0.37	0.01
M401580		1.15	12.6	2.89	7.53	<0.05	0.03	0.04	0.024	0.09	9.3	17.1	0.55	281	0.94	0.01



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - C
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401541		0.58	6.0	230	40.1	7.6	<0.001	0.03	0.28	1.1	0.3	0.3	15.5	<0.01	0.04	0.4
M401542		2.29	12.8	190	29.7	7.7	<0.001	0.02	0.37	3.4	0.3	0.8	15.3	<0.01	0.05	2.4
M401543		0.26	3.0	200	32.4	8.1	<0.001	0.05	0.12	0.8	0.2	<0.2	17.3	<0.01	0.01	0.8
M401544		1.23	13.0	280	16.5	8.8	<0.001	0.03	0.26	2.4	0.3	0.4	13.7	<0.01	0.05	1.6
M401545		1.14	22.0	330	31.9	8.8	<0.001	0.03	0.36	3.1	0.4	0.4	15.8	<0.01	0.07	1.8
M401546		1.25	19.7	430	27.2	8.3	<0.001	0.04	0.32	3.2	0.5	0.4	18.3	<0.01	0.12	1.7
M401547		1.27	15.2	230	33.5	8.9	0.001	0.02	0.35	3.4	0.5	0.4	12.2	<0.01	0.06	2.7
M401548		1.41	13.6	270	24.5	7.6	<0.001	0.02	0.35	3.0	0.4	0.5	14.2	0.01	0.03	1.7
M401549		1.75	21.0	340	23.7	9.9	<0.001	0.02	0.42	5.0	0.2	0.5	18.0	0.01	0.03	3.4
M401550		1.28	12.9	280	29.4	10.0	<0.001	0.02	0.35	3.1	0.3	0.5	12.9	<0.01	0.04	1.6
M401551		1.52	21.8	410	21.4	10.7	<0.001	0.02	0.31	4.3	0.5	0.6	17.2	<0.01	0.03	2.7
M401552		1.28	16.0	380	30.5	10.3	0.001	0.02	0.35	4.4	0.7	0.6	16.0	<0.01	0.05	2.7
M401553		0.53	8.5	610	16.2	5.9	<0.001	0.01	0.22	2.5	0.4	0.3	21.6	<0.01	0.02	2.4
M401554		0.95	12.7	480	27.8	9.0	<0.001	0.01	0.23	2.7	0.2	0.4	15.3	<0.01	0.03	2.3
M401555		1.33	13.8	290	42.0	8.4	<0.001	0.01	0.34	2.6	<0.2	0.4	12.8	<0.01	0.05	1.9
M401556		1.58	10.2	250	21.0	8.0	<0.001	0.02	0.34	2.5	0.4	0.5	16.8	<0.01	0.04	1.8
M401557		1.34	14.3	500	27.7	7.9	<0.001	0.02	0.26	3.1	0.7	0.4	17.6	<0.01	0.03	1.5
M401558		1.22	14.4	430	28.8	9.4	<0.001	0.02	0.32	3.1	0.3	0.5	19.2	<0.01	0.05	1.6
M401559		0.17	2.4	720	1.2	0.4	<0.001	0.01	<0.05	0.4	<0.2	0.2	13.0	<0.01	<0.01	<0.2
M401560		1.17	10.9	300	19.0	9.5	<0.001	0.02	0.18	2.9	<0.2	0.6	20.4	<0.01	0.02	0.7
M401561		1.04	18.4	890	17.4	10.3	<0.001	0.01	0.26	4.1	0.4	0.4	21.5	<0.01	0.04	2.8
M401562		1.34	15.1	630	8.6	8.5	<0.001	0.01	0.24	3.6	0.5	0.4	19.3	<0.01	0.03	1.9
M401563		0.70	12.4	540	10.1	8.3	<0.001	0.03	0.20	1.9	0.2	0.5	25.3	<0.01	0.03	0.2
M401564		1.05	15.0	660	8.7	8.6	<0.001	0.01	0.25	3.8	0.6	0.4	29.8	<0.01	0.01	2.6
M401565		1.37	21.2	440	11.9	10.1	<0.001	0.02	0.30	4.0	0.3	0.5	20.3	<0.01	0.04	3.1
M401566		1.06	16.0	510	8.9	7.5	<0.001	0.01	0.32	3.7	0.2	0.5	25.4	<0.01	0.02	1.7
M401567																
M401568		1.70	12.2	240	10.6	9.2	<0.001	0.01	0.41	3.3	0.4	0.6	19.5	<0.01	0.02	1.6
M401569		1.54	15.9	260	9.8	9.0	<0.001	0.02	0.34	3.4	0.2	0.6	15.2	<0.01	0.03	2.3
M401570		0.88	11.2	520	15.1	10.3	<0.001	0.02	0.21	3.7	0.2	0.4	38.7	<0.01	0.02	1.8
M401571		0.89	10.5	410	10.1	15.7	<0.001	0.02	0.20	2.2	0.3	0.4	31.7	<0.01	0.01	0.5
M401572		0.77	11.2	220	9.4	8.6	<0.001	0.02	0.18	1.9	0.4	0.3	25.1	<0.01	0.01	1.0
M401573		1.26	12.1	260	8.2	9.9	<0.001	0.01	0.24	2.6	0.2	0.4	18.1	<0.01	0.02	1.3
M401574		0.95	10.6	210	8.1	12.0	<0.001	0.01	0.20	2.0	<0.2	0.4	18.5	<0.01	0.01	0.8
M401575		1.25	12.5	150	8.7	12.2	0.001	0.01	0.24	2.6	0.2	0.4	19.2	<0.01	0.01	1.8
M401576		1.28	10.0	210	9.4	11.9	<0.001	0.01	0.20	2.6	<0.2	0.5	21.0	<0.01	0.01	1.4
M401577		0.98	13.5	250	11.7	13.6	<0.001	0.02	0.26	2.7	<0.2	0.4	12.5	<0.01	0.02	1.2
M401578		0.87	16.5	430	10.0	10.7	<0.001	0.04	0.35	2.3	0.3	0.5	19.1	<0.01	0.03	0.5
M401579		0.20	4.0	130	13.8	6.6	<0.001	0.01	0.12	0.9	0.2	<0.2	10.0	<0.01	0.01	1.0
M401580		1.89	16.8	360	8.1	9.5	<0.001	0.02	0.36	3.8	0.3	0.6	18.4	<0.01	0.02	1.9

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - D
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401541		0.040	0.06	0.28	40	0.11	1.38	25	<0.5
M401542		0.137	0.10	0.45	84	0.24	2.66	41	2.4
M401543		0.005	0.08	0.15	10	0.08	1.74	23	<0.5
M401544		0.036	0.08	0.35	43	0.20	2.34	40	1.1
M401545		0.054	0.10	0.51	50	0.21	3.48	51	0.9
M401546		0.059	0.10	0.55	49	0.26	3.64	48	1.1
M401547		0.071	0.09	0.57	52	0.25	4.16	45	2.2
M401548		0.088	0.09	0.52	59	0.19	3.85	38	0.9
M401549		0.108	0.10	0.75	66	0.21	5.46	55	2.9
M401550		0.066	0.09	0.45	61	0.20	3.37	48	0.5
M401551		0.094	0.09	0.55	65	0.23	5.08	58	1.7
M401552		0.061	0.09	0.80	64	0.24	5.42	56	1.4
M401553		0.060	0.05	0.69	35	0.13	7.17	44	0.9
M401554		0.060	0.07	0.43	47	0.17	4.69	44	2.0
M401555		0.075	0.07	0.36	61	0.21	2.98	46	1.0
M401556		0.090	0.07	0.38	69	0.18	3.00	39	1.2
M401557		0.071	0.08	0.49	58	0.17	4.77	50	0.6
M401558		0.083	0.08	0.52	65	0.17	4.40	59	0.6
M401559		0.084	<0.02	0.08	57	<0.05	1.46	23	<0.5
M401560		0.092	0.08	0.39	52	0.23	3.48	46	<0.5
M401561		0.088	0.10	0.61	57	0.16	7.19	53	1.8
M401562		0.089	0.08	0.45	57	0.28	5.22	41	1.3
M401563		0.075	0.08	0.44	43	0.20	3.78	44	<0.5
M401564		0.102	0.09	0.49	49	0.14	7.70	45	1.9
M401565		0.092	0.09	0.48	62	0.19	4.04	53	3.1
M401566		0.088	0.07	0.53	57	0.20	6.67	44	0.7
M401567									
M401568		0.079	0.08	0.37	71	0.19	3.30	36	1.7
M401569		0.064	0.08	0.40	64	0.31	3.47	44	2.3
M401570		0.039	0.07	0.47	49	0.15	11.20	50	1.2
M401571		0.063	0.07	0.45	46	0.14	5.43	52	<0.5
M401572		0.055	0.06	0.33	36	0.12	3.37	39	<0.5
M401573		0.073	0.07	0.31	57	0.21	2.65	53	<0.5
M401574		0.076	0.06	0.30	43	0.12	2.89	44	<0.5
M401575		0.072	0.07	0.34	51	0.13	2.92	42	0.9
M401576		0.077	0.07	0.40	54	0.19	3.33	31	0.6
M401577		0.057	0.07	0.39	52	0.16	2.99	50	<0.5
M401578		0.065	0.07	0.42	63	0.18	3.00	54	<0.5
M401579		0.005	0.05	0.16	14	0.06	1.16	20	<0.5
M401580		0.112	0.09	0.46	71	0.24	3.83	53	1.0



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - A
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401581		0.87	0.0010	0.03	1.75	5.0	<0.2	<10	210	0.44	0.10	0.14	0.08	17.60	6.1	20



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - B
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs	Cu	Fe	Ga	Ge	Hf	Hg	In	K	La	Li	Mg	Mn	Mo	Na
		ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	%	ppm	ppm	%
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01
M401581		1.50	14.7	1.93	4.31	<0.05	0.04	0.01	0.015	0.11	7.7	8.6	0.37	275	0.49	0.01

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - C
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401581		0.84	14.0	170	12.9	9.1	<0.001	0.02	0.27	2.5	0.3	0.3	12.2	<0.01	0.01	2.1

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - D
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
M401581		0.005	0.02	0.05	1	0.05	0.05	2	0.5
		0.033	0.08	0.32	40	0.13	3.16	38	1.0

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: Appendix 1
Total # Appendix Pages: 1
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195694

Method	CERTIFICATE COMMENTS
ME-MS41	Gold determinations by this method are semi-quantitative due to the small sample weight used (0.5g).



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 1
Finalized Date: 13-SEP-2012
This copy reported on
17-OCT-2012
Account: 092BCL

CERTIFICATE WH12195695

Project:

P.O. No.:

This report is for 85 Soil samples submitted to our lab in Whitehorse, YT, Canada on 21-AUG-2012.

The following have access to data associated with this certificate:

MICKI GORDIC

SAMPLE PREPARATION

ALS CODE	DESCRIPTION
WEI-21	Received Sample Weight
LOG-22	Sample login - Rcd w/o BarCode
SCR-41	Screen to -180um and save both

ANALYTICAL PROCEDURES


ALS CODE	DESCRIPTION	INSTRUMENT
Au-ST43	Super Trace Au - 25g AR	ICP-MS
ME-MS41	51 anal. aqua regia ICPMS	

To: 0926764 B.C. LTD.
ATTN: MICKI GORDIC
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

This is the Final Report and supersedes any preliminary report with this certificate number. Results apply to samples as submitted. All pages of this report have been checked and approved for release.

***** See Appendix Page for comments regarding this certificate *****

Signature:


Colin Ramshaw, Vancouver Laboratory Manager



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - A
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401651		0.45	0.0018	0.07	2.34	6.5	<0.2	<10	160	0.54	0.16	0.27	0.08	43.9	7.2	37
M401652		0.51	0.0016	0.04	2.19	6.4	<0.2	<10	120	0.49	0.11	0.22	0.13	27.9	8.8	28
M401653		0.58	0.0012	0.03	2.54	7.3	<0.2	<10	160	0.61	0.13	0.25	0.18	28.6	12.9	30
M401654		0.47	0.0017	0.03	2.34	7.3	<0.2	<10	130	0.58	0.11	0.23	0.14	28.9	12.4	27
M401655		0.47	0.0018	0.06	1.51	6.2	<0.2	<10	160	0.29	0.16	0.26	0.14	17.25	6.3	24
M401656		0.48	0.0007	0.05	2.28	7.9	<0.2	<10	150	0.53	0.13	0.26	0.16	21.2	11.0	27
M401657		0.47	0.0012	0.03	2.27	8.0	<0.2	<10	190	0.54	0.13	0.41	0.12	22.0	11.5	28
M401658		0.74	0.0021	0.05	1.21	3.2	<0.2	<10	160	0.43	0.07	0.44	0.04	29.4	6.8	15
M401659		0.66	0.0102	0.04	1.76	3.9	<0.2	<10	280	0.53	0.08	0.50	0.05	24.8	8.1	22
M401660		0.48	0.0059	0.07	1.90	4.4	<0.2	<10	320	0.45	0.09	0.82	0.10	20.2	10.9	24
M401661		0.53	0.0014	0.09	1.25	3.5	<0.2	<10	350	0.40	0.09	0.54	0.12	20.0	7.6	16
M401662		0.61	0.0030	0.14	2.12	5.0	<0.2	<10	770	0.92	0.12	1.15	0.12	38.2	9.6	26
M401663		0.49	0.0015	0.11	1.92	4.7	<0.2	<10	600	0.68	0.12	0.87	0.09	28.8	10.9	26
M401664		0.47	0.0006	0.09	1.05	1.9	<0.2	<10	260	0.38	0.05	0.21	0.02	16.20	4.3	9
M401665		0.54	0.0004	0.04	1.28	3.9	<0.2	<10	400	0.32	0.14	0.28	0.09	20.2	5.9	20
M401666		0.57	0.0013	0.04	1.63	4.0	<0.2	<10	430	0.58	0.11	0.34	0.06	28.2	7.3	23
M401667		0.62	0.0016	0.06	2.15	5.4	<0.2	<10	440	0.83	0.11	0.41	0.08	29.2	9.5	24
M401668		0.54	0.0009	0.03	2.07	5.5	<0.2	<10	200	0.51	0.11	0.20	0.11	26.6	9.1	22
M401669		0.41	0.0013	0.03	1.45	2.8	<0.2	<10	210	0.55	0.07	0.20	0.07	29.2	7.5	16
M401670		0.55	0.0018	0.03	2.10	5.9	<0.2	<10	210	0.49	0.11	0.18	0.10	26.4	10.5	22
M401671		0.51	0.0008	0.05	1.69	5.4	<0.2	<10	300	0.39	0.13	0.19	0.11	26.7	7.0	17
M401672		0.41	0.0017	0.04	1.17	6.7	<0.2	<10	200	0.29	0.15	0.20	0.14	20.9	7.5	18
M401673		0.55	0.0081	0.02	1.55	4.0	<0.2	<10	340	0.57	0.07	0.25	0.06	23.8	8.7	17
M401701		0.61	0.0015	0.06	1.01	3.5	<0.2	<10	120	0.29	0.23	0.22	0.18	15.65	6.3	16
M401702		0.48	0.0043	0.09	1.33	4.5	<0.2	<10	170	0.46	0.21	0.26	0.15	21.9	7.3	21
M401703		0.76	0.0027	0.12	1.55	5.4	<0.2	<10	250	0.42	0.35	0.25	0.12	21.7	9.3	23
M401704		0.67	0.0012	0.04	1.44	4.7	<0.2	<10	110	0.39	0.23	0.18	0.26	22.3	7.4	19
M401705		0.47	0.0014	0.15	1.88	5.5	<0.2	<10	200	0.63	0.24	0.17	0.11	31.2	6.5	17
M401706		0.67	0.0028	0.04	1.70	5.2	<0.2	<10	200	0.58	0.20	0.28	0.24	27.5	7.9	21
M401707		0.94	0.0012	0.05	1.67	3.6	<0.2	<10	300	0.70	0.14	0.31	0.19	48.0	7.0	13
M401708		0.75	0.0018	0.14	2.45	9.1	<0.2	<10	490	0.89	0.36	0.27	0.17	27.9	9.5	25
M401709		0.60	0.0013	0.07	1.41	3.1	<0.2	<10	230	0.34	0.21	0.19	0.11	13.75	5.6	22
M401710		0.52	0.0079	0.08	1.31	3.9	<0.2	<10	230	0.37	0.18	0.15	0.12	14.05	5.1	21
M401711		0.64	0.0026	0.08	2.02	5.9	<0.2	<10	230	0.57	0.27	0.25	0.16	22.8	5.5	26
M401712		0.57	0.0014	0.02	0.63	0.9	<0.2	<10	120	0.18	0.08	0.15	0.06	12.25	2.8	7
M401713		0.65	0.0045	0.06	1.26	2.7	<0.2	<10	250	0.41	0.19	0.22	0.08	19.95	4.8	13
M401714		0.56	0.0019	0.04	1.08	2.7	<0.2	<10	160	0.31	0.18	0.18	0.15	13.05	3.4	12
M401715		0.69	0.0042	0.04	1.03	2.3	<0.2	<10	170	0.29	0.16	0.21	0.08	14.75	3.9	12
M401716		0.71	0.0029	0.05	0.73	1.9	<0.2	<10	70	0.21	0.10	0.23	0.08	13.60	3.9	10
M401717		0.57	0.0016	0.06	1.69	3.3	<0.2	<10	180	0.36	0.19	0.26	0.14	17.65	4.4	25



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - B
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm 0.05	Cu ppm 0.2	Fe % 0.01	Ga ppm 0.05	Ge ppm 0.05	Hf ppm 0.02	Hg ppm 0.01	In ppm 0.005	K % 0.01	La ppm 0.2	Li ppm 0.1	Mg % 0.01	Mn ppm 5	Mo ppm 0.05	Na % 0.01
M401651		1.08	19.1	2.86	8.02	0.05	0.05	0.01	0.022	0.07	30.4	11.5	0.60	226	0.90	0.02
M401652		1.06	15.7	2.71	6.62	<0.05	0.02	0.03	0.022	0.09	11.0	17.1	0.62	307	0.60	0.01
M401653		1.37	21.7	2.92	6.99	0.06	0.04	0.02	0.027	0.13	11.3	16.9	0.68	381	0.61	0.01
M401654		0.99	17.4	2.80	6.06	0.06	0.05	0.03	0.024	0.08	11.8	15.4	0.55	273	0.67	0.01
M401655		0.97	8.4	2.51	8.13	<0.05	0.02	0.02	0.019	0.08	9.0	14.4	0.46	236	0.94	0.01
M401656		1.27	15.9	3.03	7.11	0.05	0.02	0.03	0.026	0.11	10.1	19.6	0.61	291	0.72	0.01
M401657		1.24	16.9	3.08	7.26	0.06	0.03	0.02	0.026	0.12	9.4	19.4	0.69	318	0.67	0.01
M401658		0.84	12.5	1.97	4.56	0.06	0.03	0.02	0.016	0.06	16.7	9.0	0.43	333	0.38	0.02
M401659		1.05	12.5	2.47	6.12	0.05	0.04	0.02	0.020	0.08	12.2	15.5	0.61	352	0.44	0.02
M401660		0.85	13.9	3.08	8.13	0.06	0.04	0.02	0.026	0.09	11.0	17.8	0.86	409	0.51	0.02
M401661		0.63	16.3	2.08	5.06	0.05	0.02	0.02	0.016	0.20	9.7	9.4	0.44	386	0.58	0.02
M401662		1.15	30.0	2.72	7.08	0.08	0.09	0.05	0.031	0.15	31.0	15.6	0.63	461	0.57	0.02
M401663		0.92	28.3	2.72	6.71	0.06	0.06	0.03	0.026	0.07	18.2	14.8	0.62	486	0.62	0.02
M401664		1.20	14.1	1.55	3.63	<0.05	0.02	0.02	0.011	0.06	8.6	5.2	0.17	133	0.43	0.02
M401665		1.33	9.9	2.23	6.54	<0.05	0.02	0.01	0.016	0.07	11.0	10.4	0.43	234	0.81	0.01
M401666		1.19	14.1	2.12	5.33	0.05	0.04	0.01	0.020	0.07	15.4	12.4	0.50	256	0.54	0.01
M401667		1.48	17.8	2.63	6.36	0.05	0.05	0.02	0.029	0.08	17.4	14.9	0.52	314	0.60	0.01
M401668		1.09	15.4	2.72	6.55	0.05	0.05	0.02	0.026	0.07	10.3	14.8	0.48	263	0.64	0.01
M401669		1.01	9.3	1.71	3.84	<0.05	0.04	0.01	0.015	0.10	10.4	8.6	0.36	341	0.36	0.01
M401670		1.67	14.9	3.00	6.79	0.05	0.05	0.02	0.023	0.10	11.6	18.1	0.47	335	1.08	0.01
M401671		1.62	10.0	2.51	6.84	<0.05	0.02	0.02	0.018	0.09	11.4	11.3	0.34	239	2.26	0.01
M401672		1.45	10.8	2.86	7.05	0.05	<0.02	0.02	0.017	0.12	9.7	6.8	0.33	474	1.73	0.01
M401673		1.78	8.6	2.37	4.79	0.05	0.03	0.01	0.019	0.10	10.2	14.9	0.44	360	1.40	0.01
M401701		1.14	20.2	2.18	4.05	<0.05	<0.02	0.01	0.016	0.04	7.5	5.9	0.28	265	2.84	0.02
M401702		1.27	18.8	2.40	4.63	0.05	0.02	0.02	0.021	0.05	12.2	6.8	0.34	305	3.29	0.01
M401703		1.46	18.4	3.01	6.02	0.06	0.02	0.02	0.027	0.06	10.5	7.8	0.38	602	5.80	0.01
M401704		1.12	18.0	2.36	4.64	0.05	0.03	0.02	0.021	0.06	9.8	9.6	0.33	370	1.48	0.01
M401705		1.30	67.0	2.83	5.47	0.06	0.02	0.07	0.027	0.05	18.1	7.6	0.23	294	2.44	0.01
M401706		2.08	15.5	2.61	5.55	0.06	0.02	0.02	0.024	0.15	14.9	12.1	0.45	573	1.74	0.01
M401707		1.54	10.4	2.91	6.44	0.08	0.03	0.02	0.041	0.10	24.8	9.7	0.38	562	2.40	0.01
M401708		2.37	20.1	4.08	7.97	0.06	0.02	0.03	0.035	0.09	13.9	11.6	0.41	602	4.68	0.01
M401709		1.21	13.5	2.04	5.89	<0.05	<0.02	0.02	0.018	0.03	6.9	8.4	0.35	337	1.76	0.01
M401710		1.12	15.5	2.48	5.68	<0.05	<0.02	0.03	0.016	0.03	7.1	6.3	0.30	179	1.76	0.01
M401711		1.48	13.8	2.52	6.35	<0.05	0.02	0.13	0.027	0.07	11.6	11.6	0.46	154	1.32	0.01
M401712		0.62	6.7	0.82	2.56	<0.05	<0.02	0.03	0.008	0.03	6.0	2.7	0.14	112	0.56	0.01
M401713		0.93	10.2	1.75	4.20	<0.05	<0.02	0.06	0.015	0.04	10.4	7.1	0.19	243	1.01	0.01
M401714		0.99	12.2	1.50	4.46	<0.05	<0.02	0.03	0.013	0.04	6.7	3.8	0.19	155	1.32	0.01
M401715		0.78	11.3	1.68	4.08	<0.05	<0.02	0.02	0.011	0.04	8.1	5.1	0.21	157	0.85	0.01
M401716		0.51	12.9	1.65	3.28	<0.05	<0.02	0.01	0.010	0.04	6.4	3.7	0.17	137	0.52	0.02
M401717		1.04	11.8	1.80	5.28	<0.05	<0.02	0.03	0.019	0.05	9.1	10.4	0.44	151	0.72	0.01



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 2 - C
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401651		1.77	16.6	360	8.1	8.8	<0.001	0.01	0.32	5.3	0.6	0.7	22.5	<0.01	0.03	2.4
M401652		1.21	20.2	410	7.2	10.1	<0.001	0.03	0.28	3.0	0.4	0.5	24.1	<0.01	0.02	1.2
M401653		1.52	23.9	460	8.1	14.6	<0.001	0.02	0.32	4.8	0.4	0.5	26.4	<0.01	0.05	2.7
M401654		1.62	24.2	420	8.2	9.7	<0.001	0.02	0.34	4.3	0.5	0.5	25.3	0.01	0.05	3.0
M401655		1.73	12.7	290	9.3	14.0	<0.001	0.01	0.25	3.5	0.3	0.7	25.4	<0.01	0.04	1.4
M401656		1.38	20.6	530	8.9	11.9	<0.001	0.02	0.29	4.2	0.4	0.5	21.8	<0.01	0.05	1.6
M401657		1.42	20.3	490	9.0	12.4	<0.001	0.02	0.27	4.4	0.4	0.5	27.6	<0.01	0.05	1.6
M401658		0.77	9.8	650	4.7	7.2	<0.001	0.01	0.16	3.7	0.3	0.3	25.7	<0.01	0.02	2.2
M401659		1.00	14.7	480	8.4	9.7	<0.001	0.01	0.17	4.6	0.3	0.4	29.3	<0.01	0.03	2.6
M401660		1.13	13.9	760	8.6	9.5	<0.001	0.02	0.17	5.5	0.3	0.5	41.6	<0.01	0.03	2.6
M401661		0.88	9.8	550	9.2	10.0	<0.001	0.03	0.17	2.8	0.4	0.3	31.3	<0.01	0.03	1.1
M401662		1.00	17.2	810	10.9	12.1	<0.001	0.05	0.23	6.8	0.9	0.5	62.1	0.01	0.06	1.8
M401663		1.07	17.2	810	9.9	8.5	<0.001	0.03	0.21	5.7	0.6	0.5	46.5	<0.01	0.04	1.8
M401664		0.43	6.0	700	4.0	6.0	<0.001	0.02	0.10	2.7	0.3	0.2	15.3	<0.01	0.02	0.7
M401665		1.32	10.6	310	9.3	12.7	<0.001	0.01	0.23	3.6	0.2	0.6	23.6	<0.01	0.03	1.8
M401666		1.08	14.5	520	11.7	8.5	<0.001	<0.01	0.19	4.4	0.3	0.5	24.7	<0.01	0.02	2.9
M401667		1.04	15.9	650	12.7	10.9	<0.001	0.01	0.22	5.0	0.4	0.5	29.0	<0.01	0.03	3.4
M401668		1.25	14.6	300	11.2	9.5	<0.001	0.01	0.24	4.1	0.3	0.5	17.7	<0.01	0.04	3.0
M401669		0.70	10.1	360	17.0	11.6	<0.001	<0.01	0.15	2.8	0.2	0.3	13.5	<0.01	0.02	3.2
M401670		1.19	14.5	350	11.7	10.9	<0.001	0.01	0.29	3.9	0.3	0.5	14.3	<0.01	0.03	3.0
M401671		1.21	10.8	390	11.0	10.2	<0.001	0.01	0.32	3.3	0.3	0.5	18.2	<0.01	0.03	2.0
M401672		1.07	9.3	390	10.3	13.6	<0.001	0.02	0.33	2.8	0.3	0.6	19.1	<0.01	0.04	0.9
M401673		0.87	11.3	250	9.6	9.1	<0.001	0.01	0.29	3.4	0.2	0.4	18.7	<0.01	0.02	3.2
M401701		0.60	10.4	670	116.0	5.6	<0.001	0.02	0.21	2.2	0.4	0.3	17.2	<0.01	0.03	0.7
M401702		0.67	13.3	840	98.3	7.9	<0.001	0.04	0.28	2.9	0.4	0.4	18.9	<0.01	0.04	0.6
M401703		0.65	13.0	840	156.0	10.2	<0.001	0.03	0.26	3.6	0.5	0.4	19.5	<0.01	0.05	1.0
M401704		1.14	14.0	460	55.5	9.9	<0.001	0.01	0.24	3.1	0.3	0.4	16.1	<0.01	0.04	2.2
M401705		0.71	9.1	960	103.0	8.7	<0.001	0.05	0.20	2.6	0.9	0.3	16.1	<0.01	0.06	0.3
M401706		1.07	14.4	750	50.5	20.9	<0.001	0.01	0.23	3.9	0.3	0.5	23.3	<0.01	0.03	1.9
M401707		0.63	8.7	990	42.5	13.7	<0.001	0.01	0.26	5.8	0.5	0.7	23.4	<0.01	0.02	3.0
M401708		0.86	14.4	870	104.0	13.7	<0.001	0.04	0.31	3.7	0.6	0.6	29.4	<0.01	0.06	0.8
M401709		0.35	9.1	800	31.8	5.6	<0.001	0.05	0.15	1.4	0.3	0.5	19.9	<0.01	0.03	<0.2
M401710		0.40	9.0	1000	27.0	4.5	<0.001	0.09	0.19	1.4	0.5	0.4	18.0	<0.01	0.04	<0.2
M401711		1.08	14.4	580	26.9	9.2	<0.001	0.02	0.26	3.9	0.4	0.5	19.6	<0.01	0.05	1.4
M401712		0.38	3.9	520	11.9	3.1	<0.001	0.02	0.11	1.1	0.3	0.2	11.4	<0.01	0.02	0.2
M401713		0.47	6.8	640	24.7	6.3	<0.001	0.03	0.20	1.8	0.4	0.3	20.9	<0.01	0.05	0.3
M401714		0.35	6.3	620	17.5	9.1	<0.001	0.05	0.23	0.9	<0.2	0.3	18.9	<0.01	0.04	<0.2
M401715		0.36	6.2	590	15.9	6.0	<0.001	0.03	0.19	1.3	0.2	0.3	18.8	<0.01	0.03	0.2
M401716		0.45	5.3	760	11.4	4.5	<0.001	0.02	0.14	1.3	<0.2	0.2	17.0	<0.01	0.02	0.4
M401717		0.47	11.3	650	22.5	6.8	<0.001	0.04	0.23	1.6	0.2	0.4	23.4	<0.01	0.03	0.2



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 2 - D
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401651		0.129	0.13	0.88	76	0.20	9.61	44	1.6
M401652		0.105	0.08	0.47	67	0.15	3.67	54	0.7
M401653		0.106	0.13	0.52	63	0.20	4.62	58	1.4
M401654		0.100	0.09	0.55	56	0.20	4.57	47	1.7
M401655		0.120	0.10	0.43	71	0.42	3.00	45	0.9
M401656		0.103	0.10	0.48	64	0.23	3.99	55	0.8
M401657		0.097	0.10	0.48	65	0.20	3.83	56	0.8
M401658		0.070	0.07	0.51	43	0.13	6.83	38	1.0
M401659		0.073	0.08	0.52	51	0.15	5.82	49	1.2
M401660		0.099	0.07	0.57	68	0.15	5.21	66	1.5
M401661		0.050	0.06	0.41	42	0.18	3.62	41	<0.5
M401662		0.048	0.09	1.28	52	0.18	30.2	60	2.0
M401663		0.073	0.09	1.48	57	0.22	11.85	53	1.6
M401664		0.038	0.06	0.43	37	0.08	5.05	24	<0.5
M401665		0.086	0.09	0.38	60	0.27	4.69	42	0.8
M401666		0.065	0.08	0.63	46	0.18	8.41	42	1.1
M401667		0.045	0.10	0.71	52	0.34	8.48	47	1.5
M401668		0.053	0.09	0.42	57	0.17	4.04	41	1.4
M401669		0.037	0.09	0.34	34	0.13	3.95	33	1.5
M401670		0.046	0.10	0.41	58	0.18	3.97	48	1.6
M401671		0.045	0.10	0.43	55	0.18	3.72	37	0.5
M401672		0.075	0.08	0.39	69	0.19	3.12	50	<0.5
M401673		0.030	0.09	0.44	43	0.15	3.42	40	1.2
M401701		0.070	0.06	0.42	54	0.11	3.72	46	<0.5
M401702		0.066	0.08	0.66	55	0.13	6.94	50	<0.5
M401703		0.075	0.10	0.69	68	0.15	5.32	67	<0.5
M401704		0.068	0.09	0.45	45	0.21	4.28	50	1.0
M401705		0.034	0.11	1.46	53	0.16	8.25	39	<0.5
M401706		0.074	0.15	0.84	44	0.15	7.51	78	0.5
M401707		0.054	0.10	1.39	34	0.08	14.25	93	0.6
M401708		0.023	0.17	1.46	59	0.18	9.67	75	<0.5
M401709		0.039	0.10	0.66	49	0.11	3.75	45	<0.5
M401710		0.045	0.11	0.90	58	0.13	4.31	38	<0.5
M401711		0.063	0.13	0.84	55	0.22	6.66	51	0.6
M401712		0.036	0.06	0.33	17	0.09	3.93	19	<0.5
M401713		0.040	0.08	0.77	43	0.13	7.27	41	<0.5
M401714		0.036	0.07	0.56	39	0.09	4.03	41	<0.5
M401715		0.045	0.07	0.47	44	0.11	4.25	38	<0.5
M401716		0.063	0.04	0.34	48	0.07	3.18	32	<0.5
M401717		0.051	0.07	0.64	50	0.13	4.63	49	<0.5



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - A
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg 0.02	Au-ST43 Au ppm 0.0001	ME-MS41 Ag ppm 0.01	ME-MS41 Al % 0.01	ME-MS41 As ppm 0.1	ME-MS41 Au ppm 0.2	ME-MS41 B ppm 10	ME-MS41 Ba ppm 10	ME-MS41 Be ppm 0.05	ME-MS41 Bi ppm 0.01	ME-MS41 Ca % 0.01	ME-MS41 Cd ppm 0.01	ME-MS41 Ce ppm 0.02	ME-MS41 Co ppm 0.1	ME-MS41 Cr ppm 1
M401718		0.56	0.0010	0.04	0.76	1.8	<0.2	<10	80	0.22	0.06	0.25	0.04	21.9	5.6	10
M401719		0.54	0.0016	0.10	1.54	3.4	<0.2	<10	690	0.54	0.13	0.27	0.14	23.8	5.2	19
M401720		0.53	0.0006	0.06	0.51	1.0	<0.2	<10	110	0.19	0.04	0.14	0.02	9.37	1.7	5
M401721		0.48	0.0020	0.12	1.11	1.9	<0.2	<10	150	0.23	0.12	0.20	0.08	16.45	3.7	15
M401722		0.45	0.0008	0.10	0.98	1.9	<0.2	<10	170	0.19	0.11	0.22	0.04	13.90	3.4	12
M401751		0.50	0.0015	0.03	2.26	6.4	<0.2	<10	90	0.50	0.10	0.21	0.12	24.5	11.2	29
M401752		0.60	0.0014	0.02	2.50	6.8	<0.2	<10	160	0.54	0.12	0.21	0.14	29.5	11.7	29
M401753		0.54	0.0026	0.04	2.02	6.3	<0.2	<10	130	0.44	0.13	0.25	0.12	20.9	8.0	27
M401754		0.56	0.0027	0.06	2.31	5.6	<0.2	<10	130	0.46	0.11	0.25	0.16	30.8	10.7	28
M401755		0.55	0.0027	0.03	2.34	5.2	<0.2	<10	160	0.49	0.10	0.32	0.10	21.3	9.0	23
M401756		0.63	0.0022	0.03	1.92	4.2	<0.2	<10	170	0.47	0.08	0.39	0.08	29.2	9.2	24
M401757		0.51	0.0010	0.04	2.14	6.8	<0.2	<10	160	0.43	0.13	0.25	0.16	23.5	9.0	29
M401758		0.58	0.0015	0.04	2.06	5.2	<0.2	<10	290	0.50	0.12	0.32	0.10	31.6	9.6	26
M401759		0.46	0.0026	0.05	2.24	8.1	<0.2	<10	150	0.42	0.17	0.22	0.17	18.00	7.8	35
M401760		0.58	0.0054	0.06	1.70	3.9	<0.2	<10	220	0.54	0.07	0.36	0.08	28.7	7.7	20
M401761		0.45	0.0012	0.03	1.02	3.3	<0.2	<10	90	0.18	0.12	0.15	0.07	13.85	2.7	12
M401762		0.47	0.0009	0.08	2.03	6.3	<0.2	<10	100	0.62	0.16	0.19	0.16	19.80	6.7	29
M401763		0.44	0.0014	0.05	2.33	7.0	<0.2	<10	180	0.54	0.13	0.23	0.16	25.6	9.8	27
M401764		0.57	0.0015	0.03	2.36	6.8	<0.2	<10	190	0.71	0.14	0.27	0.18	28.7	11.6	27
M401765		0.45	0.0031	0.05	2.32	7.3	<0.2	<10	130	0.49	0.13	0.23	0.15	21.8	9.6	28
M401766		0.52	0.0016	0.05	2.27	6.7	<0.2	<10	130	0.59	0.13	0.21	0.18	29.2	10.0	29
M401767		0.44	0.0011	0.05	2.11	6.6	<0.2	<10	150	0.54	0.12	0.29	0.13	26.3	9.3	29
M401768		0.54	0.0009	0.04	2.30	6.5	<0.2	<10	160	0.43	0.13	0.22	0.16	19.30	9.9	26
M401769		0.62	0.0012	0.05	2.60	6.5	<0.2	<10	320	0.81	0.12	0.39	0.08	33.7	10.6	30
M401770		0.56	0.0040	0.06	2.36	4.4	<0.2	<10	560	0.71	0.11	0.47	0.07	45.5	10.0	27
M401771		0.83	0.0017	0.02	1.46	2.8	<0.2	<10	370	0.55	0.08	0.30	0.05	29.2	4.4	17
M401772		0.65	0.0016	0.02	1.74	4.3	<0.2	<10	300	0.58	0.08	0.39	0.07	34.7	7.4	22
M401773		0.58	0.0024	0.02	1.67	5.5	<0.2	<10	330	0.48	0.09	0.38	0.08	35.4	8.5	25
M401774		0.55	0.0015	0.03	1.93	5.8	<0.2	<10	190	0.48	0.13	0.25	0.13	28.3	7.6	23
M401775		0.54	0.0013	0.03	2.14	8.7	<0.2	<10	170	0.40	0.16	0.23	0.21	20.4	9.0	28
M401776		0.53	0.0019	0.04	1.68	4.4	<0.2	<10	120	0.43	0.11	0.24	0.11	21.0	5.6	20
M401777		0.65	0.0031	0.02	1.90	7.9	<0.2	<10	140	0.40	0.12	0.20	0.15	25.4	10.6	28
M401778		0.61	0.0024	0.03	2.47	7.1	<0.2	<10	170	0.61	0.14	0.20	0.21	40.4	12.2	30
M401779		0.37	0.0017	0.11	3.04	8.5	<0.2	<10	100	0.60	0.13	0.24	0.13	19.75	9.4	44
M401780		0.55	0.0013	0.03	2.20	5.1	<0.2	<10	90	0.48	0.11	0.21	0.09	27.2	9.7	26
M401781		0.56	0.0016	0.04	2.39	5.8	<0.2	<10	110	0.56	0.10	0.21	0.16	25.7	10.9	27
M401782		0.61	0.0007	0.02	1.77	4.8	<0.2	<10	140	0.50	0.10	0.25	0.12	26.3	10.7	25
M401783		0.49	0.0020	0.03	1.24	3.9	<0.2	<10	180	0.39	0.08	0.23	0.07	24.8	7.1	20
M401784		0.48	0.0021	0.03	1.10	4.8	<0.2	<10	90	0.17	0.18	0.14	0.11	14.40	4.1	19
M401785		0.65	0.0016	0.05	1.92	7.0	<0.2	<10	140	0.40	0.11	0.19	0.17	24.5	8.7	25



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - B
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm	Cu ppm	Fe %	Ga ppm	Ge ppm	Hf ppm	Hg ppm	In ppm	K %	La ppm	Li ppm	Mg %	Mn ppm	Mo ppm	Na %
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01
M401718		0.40	12.6	1.55	2.95	<0.05	<0.02	0.02	0.008	0.03	9.6	4.4	0.19	344	0.39	0.03
M401719		1.76	18.2	2.22	5.65	<0.05	<0.02	0.03	0.017	0.06	12.8	12.8	0.38	219	2.48	0.02
M401720		0.34	7.7	0.69	1.67	<0.05	<0.02	0.02	<0.005	0.03	4.7	1.7	0.10	63	0.47	0.03
M401721		0.64	11.4	1.60	3.65	<0.05	<0.02	0.03	0.012	0.04	9.3	6.6	0.26	119	1.17	0.01
M401722		0.64	10.5	1.65	3.73	<0.05	<0.02	0.03	0.010	0.03	7.2	5.9	0.20	90	0.80	0.02
M401751		1.00	18.1	2.75	5.91	<0.05	0.05	0.03	0.023	0.08	9.9	14.1	0.58	335	0.58	0.01
M401752		1.09	19.3	2.92	6.94	<0.05	0.07	0.03	0.027	0.10	11.5	19.0	0.58	414	0.69	0.02
M401753		1.09	12.5	2.89	7.42	<0.05	0.02	0.04	0.020	0.09	10.2	18.6	0.54	323	0.81	0.01
M401754		1.18	16.7	2.82	6.29	<0.05	0.05	0.03	0.021	0.13	11.1	17.1	0.68	410	0.56	0.01
M401755		1.72	15.2	3.24	7.70	<0.05	0.04	0.02	0.025	0.14	10.2	27.9	0.77	346	0.56	0.01
M401756		1.20	14.3	2.76	6.35	0.05	0.02	0.01	0.021	0.12	14.8	17.0	0.68	442	0.40	0.02
M401757		1.14	14.7	2.60	6.74	<0.05	0.04	0.02	0.022	0.10	10.4	15.9	0.53	310	0.71	0.01
M401758		1.26	17.9	2.90	5.85	<0.05	0.04	0.02	0.023	0.12	13.2	16.2	0.63	437	0.49	0.01
M401759		1.26	14.8	3.24	8.07	<0.05	0.04	0.03	0.026	0.09	9.0	17.8	0.55	269	1.07	0.01
M401760		1.57	14.6	2.50	5.01	<0.05	0.03	0.01	0.020	0.10	14.2	15.2	0.58	420	0.49	0.01
M401761		0.75	10.3	1.53	6.32	<0.05	<0.02	0.02	0.012	0.05	6.3	3.9	0.15	76	1.01	0.01
M401762		1.11	14.8	2.80	6.64	<0.05	0.02	0.04	0.022	0.06	8.0	15.7	0.42	248	0.92	0.01
M401763		1.81	17.8	2.98	8.08	<0.05	<0.02	0.05	0.028	0.09	9.7	20.0	0.67	380	0.84	0.01
M401764		1.31	18.8	2.85	6.63	<0.05	0.05	0.03	0.029	0.12	10.2	18.3	0.58	338	0.83	0.02
M401765		2.70	14.7	3.75	8.41	<0.05	0.02	0.04	0.033	0.13	10.6	29.7	0.74	404	0.79	0.01
M401766		1.65	16.5	3.11	7.19	<0.05	0.02	0.03	0.027	0.11	11.2	18.9	0.70	440	0.65	0.02
M401767		1.25	12.9	2.92	6.43	<0.05	0.06	0.03	0.023	0.10	11.8	22.5	0.55	270	0.68	0.01
M401768		1.84	13.4	3.44	7.66	<0.05	0.05	0.04	0.028	0.19	10.1	22.1	0.73	362	0.69	0.01
M401769		2.69	14.9	3.36	8.64	<0.05	0.05	0.02	0.035	0.15	17.8	24.6	0.80	403	0.62	0.01
M401770		1.98	15.5	2.94	8.02	0.07	0.03	0.02	0.029	0.13	32.5	21.2	0.79	481	0.52	0.02
M401771		1.59	7.2	2.26	4.21	<0.05	<0.02	0.01	0.020	0.09	15.4	12.3	0.38	177	0.43	0.01
M401772		1.70	9.6	2.67	6.18	<0.05	<0.02	0.01	0.023	0.11	18.7	14.8	0.56	299	0.46	0.01
M401773		1.21	13.6	2.73	5.07	<0.05	0.02	0.01	0.020	0.10	15.6	13.5	0.51	420	0.50	0.01
M401774		1.13	12.0	2.58	5.72	<0.05	<0.02	0.02	0.021	0.08	11.0	14.8	0.43	304	0.74	0.01
M401775		1.11	15.2	3.70	8.75	<0.05	0.09	0.03	0.025	0.08	7.6	21.6	0.49	301	1.01	0.01
M401776		0.77	9.4	2.56	6.20	<0.05	0.02	0.02	0.020	0.07	10.8	14.1	0.44	256	0.67	0.01
M401777		1.10	12.6	3.01	7.33	0.06	0.04	0.03	0.022	0.08	9.5	16.0	0.43	523	1.03	0.01
M401778		1.17	21.1	2.89	6.14	0.06	0.06	0.03	0.026	0.11	13.8	15.8	0.61	453	0.79	0.01
M401779		1.13	14.6	3.54	6.94	0.05	0.06	0.06	0.031	0.09	9.3	20.8	0.63	266	0.85	0.01
M401780		0.92	12.4	2.31	4.57	<0.05	0.04	0.03	0.021	0.08	11.3	16.0	0.44	271	0.56	0.01
M401781		1.60	13.0	3.09	6.91	0.05	0.04	0.03	0.027	0.10	8.5	22.6	0.57	336	0.78	0.01
M401782		1.60	11.4	2.80	6.05	0.05	0.05	0.01	0.024	0.11	9.9	19.1	0.51	406	0.71	0.01
M401783		1.12	10.9	2.20	4.83	<0.05	0.02	0.02	0.016	0.11	10.1	11.4	0.41	307	0.83	0.01
M401784		1.03	6.7	2.13	8.67	<0.05	0.02	0.02	0.014	0.06	7.0	7.4	0.28	218	1.20	0.01
M401785		1.22	13.0	3.09	6.73	0.05	0.06	0.02	0.023	0.09	9.6	20.5	0.47	296	0.94	0.01



ALS Canada Ltd.

2103 Dollarton Hwy
North Vancouver BC V7H 0A7

Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: 3 - C
Total # Pages: 4 (A - D)
Plus Appendix Pages
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41 Nb ppm 0.05	ME-MS41 Ni ppm 0.2	ME-MS41 P ppm 10	ME-MS41 Pb ppm 0.2	ME-MS41 Rb ppm 0.1	ME-MS41 Re ppm 0.001	ME-MS41 S % 0.01	ME-MS41 Sb ppm 0.05	ME-MS41 Sc ppm 0.1	ME-MS41 Se ppm 0.2	ME-MS41 Sn ppm 0.2	ME-MS41 Sr ppm 0.2	ME-MS41 Ta ppm 0.01	ME-MS41 Te ppm 0.01	ME-MS41 Th ppm 0.2
M401718		0.41	5.4	850	5.0	2.8	<0.001	0.02	0.11	1.5	0.3	0.2	16.7	<0.01	<0.01	0.4
M401719		0.42	10.0	600	9.8	7.5	<0.001	0.05	0.22	2.0	0.4	0.4	30.7	<0.01	0.02	0.2
M401720		0.23	2.6	530	3.3	2.2	<0.001	0.03	0.08	0.7	0.2	<0.2	12.0	<0.01	<0.01	<0.2
M401721		0.44	6.5	710	9.4	4.8	<0.001	0.04	0.16	1.6	0.4	0.3	15.5	<0.01	<0.01	0.3
M401722		0.35	5.8	840	18.6	3.4	<0.001	0.03	0.12	1.3	0.3	0.2	17.0	<0.01	0.01	0.2
M401751		1.34	20.4	370	7.1	8.4	<0.001	0.02	0.29	4.0	0.3	0.4	23.0	<0.01	0.02	2.0
M401752		1.54	24.1	440	7.7	11.5	<0.001	0.02	0.29	4.8	0.6	0.5	18.7	0.01	0.01	2.8
M401753		1.27	15.3	600	7.2	9.9	<0.001	0.04	0.27	3.1	0.4	0.5	24.9	<0.01	0.03	1.1
M401754		1.16	19.0	500	6.8	12.3	<0.001	0.02	0.24	4.7	0.4	0.5	20.8	<0.01	0.03	2.9
M401755		0.86	13.8	670	8.0	12.3	<0.001	0.02	0.22	4.4	0.4	0.5	19.6	<0.01	0.02	2.4
M401756		1.06	15.1	840	5.5	12.4	<0.001	0.02	0.20	4.5	0.4	0.5	24.5	<0.01	0.01	2.3
M401757		1.53	17.5	460	7.4	10.3	<0.001	0.02	0.28	4.3	0.5	0.6	20.4	0.01	0.02	2.4
M401758		1.02	18.5	570	7.7	9.8	<0.001	0.01	0.24	4.5	0.5	0.5	21.7	<0.01	0.01	2.5
M401759		1.95	15.7	380	9.1	9.0	<0.001	0.02	0.34	4.1	0.3	0.6	19.1	0.01	0.03	2.2
M401760		0.83	13.1	740	7.5	9.7	<0.001	0.02	0.23	3.5	0.7	0.4	22.3	<0.01	0.01	1.9
M401761		0.70	5.0	250	7.6	6.4	<0.001	0.02	0.22	1.4	<0.2	0.7	16.6	<0.01	0.02	0.4
M401762		1.79	13.7	390	12.9	8.3	<0.001	0.03	0.34	2.9	0.3	0.6	15.9	0.01	0.01	2.0
M401763		0.96	19.1	430	10.8	12.1	<0.001	0.04	0.32	2.9	0.3	0.6	26.1	<0.01	0.03	0.5
M401764		1.85	22.0	460	12.3	12.5	0.001	0.03	0.33	4.3	0.5	0.6	22.6	<0.01	0.02	2.9
M401765		1.38	17.6	540	8.0	16.5	<0.001	0.04	0.28	4.7	0.3	0.6	17.5	<0.01	0.02	1.5
M401766		1.17	18.7	450	12.0	11.6	<0.001	0.03	0.27	3.8	0.5	0.6	14.5	<0.01	0.03	1.7
M401767		1.84	18.6	550	8.4	10.6	<0.001	0.03	0.25	4.3	0.6	0.5	21.1	<0.01	0.03	2.8
M401768		1.24	15.4	400	8.1	18.7	<0.001	0.02	0.25	4.8	0.3	0.6	17.8	<0.01	0.01	2.8
M401769		1.34	17.1	710	7.8	16.6	<0.001	0.02	0.25	6.6	0.3	0.7	28.5	<0.01	0.03	3.5
M401770		0.93	16.4	640	6.9	13.9	<0.001	0.02	0.21	7.3	0.7	0.6	35.5	<0.01	0.01	3.3
M401771		0.63	8.5	530	7.8	8.7	<0.001	0.01	0.17	3.1	0.4	0.4	19.9	<0.01	<0.01	3.0
M401772		0.81	12.0	860	6.7	11.5	<0.001	0.01	0.21	4.3	0.4	0.5	24.4	<0.01	<0.01	2.8
M401773		0.75	16.0	880	6.9	9.3	<0.001	0.01	0.23	4.1	0.7	0.4	24.0	<0.01	<0.01	2.7
M401774		1.06	13.9	560	9.0	8.8	<0.001	0.02	0.24	3.4	0.2	0.5	17.9	<0.01	0.01	2.0
M401775		2.14	18.9	360	12.3	9.0	<0.001	0.02	0.34	3.9	0.2	0.6	22.0	<0.01	0.03	2.3
M401776		1.07	9.6	500	8.7	8.2	<0.001	0.02	0.24	2.9	0.2	0.5	18.4	<0.01	<0.01	1.6
M401777		1.88	23.5	480	9.8	11.3	<0.001	0.02	0.32	3.7	0.4	0.5	18.6	0.01	0.05	2.9
M401778		1.63	26.4	350	10.4	12.4	<0.001	0.02	0.35	4.9	0.5	0.5	16.9	0.01	0.05	3.6
M401779		2.48	20.2	520	7.2	10.5	<0.001	0.03	0.32	5.6	0.7	0.5	17.8	0.02	0.07	2.3
M401780		1.50	16.7	500	5.9	8.7	<0.001	0.02	0.20	3.7	0.5	0.4	13.8	0.01	0.04	2.5
M401781		1.74	18.6	390	7.6	13.8	<0.001	0.02	0.25	4.8	0.4	0.6	17.5	0.01	0.05	2.6
M401782		1.54	16.2	580	7.4	14.4	<0.001	0.02	0.24	4.6	0.3	0.5	17.0	<0.01	0.03	3.0
M401783		1.19	12.7	340	7.3	12.1	<0.001	0.02	0.22	3.4	0.3	0.4	18.9	<0.01	0.03	2.1
M401784		2.06	7.9	210	10.6	9.3	<0.001	0.02	0.27	2.7	0.3	0.7	13.5	<0.01	0.04	1.4
M401785		1.75	19.0	350	8.9	11.4	<0.001	0.01	0.29	3.9	0.4	0.5	18.5	<0.01	0.05	3.0



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 3 - D
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401718		0.065	0.05	0.46	40	0.07	5.26	24	<0.5
M401719		0.033	0.10	0.89	55	0.11	7.88	47	<0.5
M401720		0.028	0.03	0.43	18	<0.05	2.85	11	<0.5
M401721		0.057	0.08	1.05	43	0.10	5.34	27	<0.5
M401722		0.055	0.06	0.62	46	0.35	3.87	30	<0.5
M401751		0.105	0.09	0.44	62	0.16	4.01	50	1.5
M401752		0.120	0.09	0.48	67	0.17	4.76	55	2.6
M401753		0.107	0.08	0.48	69	0.16	3.52	51	0.6
M401754		0.118	0.12	0.49	69	0.14	4.64	57	1.8
M401755		0.051	0.10	0.32	69	0.12	3.96	66	1.5
M401756		0.111	0.10	0.44	63	0.13	6.21	57	1.0
M401757		0.105	0.09	0.45	66	0.31	4.67	46	1.4
M401758		0.079	0.09	0.44	60	0.15	7.04	53	1.2
M401759		0.128	0.11	0.47	86	0.23	3.79	52	1.3
M401760		0.050	0.08	0.41	48	0.11	6.44	50	0.7
M401761		0.048	0.09	0.42	50	0.11	3.15	24	<0.5
M401762		0.096	0.09	0.60	70	0.22	4.30	50	0.7
M401763		0.055	0.09	0.50	66	0.14	4.39	61	<0.5
M401764		0.078	0.10	0.59	62	0.19	6.81	56	1.5
M401765		0.086	0.09	0.45	82	0.17	3.73	62	0.5
M401766		0.090	0.10	0.64	74	0.18	5.89	67	0.8
M401767		0.105	0.08	0.50	64	0.21	4.65	46	2.2
M401768		0.077	0.11	0.37	74	0.14	3.31	62	1.8
M401769		0.069	0.14	0.51	75	0.69	8.33	66	1.9
M401770		0.075	0.11	0.66	68	0.14	21.1	63	0.8
M401771		0.027	0.06	0.38	41	0.12	5.25	42	0.6
M401772		0.058	0.10	0.48	56	0.12	7.09	56	0.5
M401773		0.055	0.08	0.49	56	0.16	7.55	52	0.8
M401774		0.047	0.09	0.44	55	0.18	4.40	45	0.5
M401775		0.142	0.07	0.49	87	0.19	3.38	48	2.8
M401776		0.045	0.08	0.40	52	0.15	3.80	42	0.6
M401777		0.128	0.08	0.46	72	0.29	3.31	52	1.8
M401778		0.123	0.12	0.61	62	0.20	5.06	55	2.1
M401779		0.136	0.09	0.55	76	0.27	4.33	55	1.9
M401780		0.079	0.07	0.49	44	0.35	4.06	42	0.9
M401781		0.110	0.11	0.45	67	0.19	3.59	51	1.5
M401782		0.099	0.10	0.48	59	0.18	4.61	49	1.7
M401783		0.076	0.08	0.44	51	0.15	3.78	41	0.7
M401784		0.133	0.09	0.34	73	0.21	1.99	28	0.7
M401785		0.094	0.08	0.46	65	0.47	3.56	47	2.3



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - A
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	WEI-21 Recvd Wt. kg	Au-ST43 Au ppm	ME-MS41 Ag ppm	ME-MS41 Al %	ME-MS41 As ppm	ME-MS41 Au ppm	ME-MS41 B ppm	ME-MS41 Ba ppm	ME-MS41 Be ppm	ME-MS41 Bi ppm	ME-MS41 Ca %	ME-MS41 Cd ppm	ME-MS41 Ce ppm	ME-MS41 Co ppm	ME-MS41 Cr ppm
		0.02	0.0001	0.01	0.01	0.1	0.2	10	10	0.05	0.01	0.01	0.01	0.02	0.1	1
M401786		0.55	0.0008	0.04	2.00	8.1	<0.2	<10	190	0.48	0.16	0.25	0.13	21.4	10.5	26
M401787		0.52	0.0016	0.07	2.20	11.6	<0.2	<10	310	0.55	0.10	0.29	0.13	22.4	9.1	23
M401788		0.49	0.0014	0.04	1.79	6.8	<0.2	<10	290	0.40	0.15	0.33	0.18	19.40	6.9	29
M401789		0.51	0.0010	0.03	2.08	5.9	<0.2	<10	110	0.43	0.14	0.23	0.10	21.3	8.6	34
M401790		0.59	0.0009	0.02	1.99	9.1	<0.2	<10	160	0.47	0.13	0.24	0.13	23.3	8.5	26



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - B
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Cs ppm	Cu ppm	Fe %	Ga ppm	Ge ppm	Hf ppm	Hg ppm	In ppm	K %	La ppm	Li ppm	Mg %	Mn ppm	Mo ppm	Na %
		0.05	0.2	0.01	0.05	0.05	0.02	0.01	0.005	0.01	0.2	0.1	0.01	5	0.05	0.01
M401786		1.21	12.4	3.58	8.46	0.06	0.05	0.03	0.026	0.12	8.6	17.7	0.46	361	1.17	0.01
M401787		1.12	13.1	3.13	6.27	<0.05	0.04	0.02	0.025	0.10	10.2	18.6	0.44	294	1.02	0.01
M401788		1.03	11.0	3.09	7.76	<0.05	0.04	0.02	0.024	0.09	9.4	18.4	0.48	229	1.19	0.01
M401789		1.17	13.3	2.62	6.32	<0.05	0.05	0.03	0.023	0.08	10.3	15.2	0.54	277	0.78	0.01
M401790		1.42	14.4	3.32	8.07	<0.05	0.04	0.02	0.024	0.10	9.5	23.4	0.51	314	0.95	0.01



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - C
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41	ME-MS41
		Nb	Ni	P	Pb	Rb	Re	S	Sb	Sc	Se	Sn	Sr	Ta	Te	Th
		ppm	ppm	ppm	ppm	ppm	ppm	%	ppm	ppm	ppm	ppm	ppm	ppm	ppm	ppm
		0.05	0.2	10	0.2	0.1	0.001	0.01	0.05	0.1	0.2	0.2	0.2	0.01	0.01	0.2
M401786		2.23	20.5	460	11.4	12.7	<0.001	0.02	0.33	4.0	0.4	0.6	24.3	0.01	0.05	2.6
M401787		1.20	15.8	500	11.0	10.3	<0.001	0.02	0.35	4.6	0.4	0.5	23.9	<0.01	0.04	2.6
M401788		2.07	13.6	390	8.8	10.5	<0.001	0.02	0.32	4.0	0.4	0.6	27.9	<0.01	0.05	2.4
M401789		1.96	16.5	370	7.0	9.3	<0.001	0.01	0.27	4.7	0.4	0.6	17.4	0.01	0.04	2.9
M401790		1.77	15.6	380	9.3	10.7	<0.001	0.02	0.31	4.2	0.3	0.6	18.8	<0.01	0.04	2.7



ALS Canada Ltd.
 2103 Dollarton Hwy
 North Vancouver BC V7H 0A7
 Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
 6238 ASHWORTH AVENUE
 BURNABY BC V5E 3T7

Page: 4 - D
 Total # Pages: 4 (A - D)
 Plus Appendix Pages
 Finalized Date: 13-SEP-2012
 Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Sample Description	Method Analyte Units LOR	ME-MS41 Ti %	ME-MS41 Ti ppm	ME-MS41 U ppm	ME-MS41 V ppm	ME-MS41 W ppm	ME-MS41 Y ppm	ME-MS41 Zn ppm	ME-MS41 Zr ppm
		0.005	0.02	0.05	1	0.05	0.05	2	0.5
M401786		0.133	0.09	0.43	76	0.29	3.25	48	1.9
M401787		0.024	0.11	0.48	61	0.15	4.25	47	1.3
M401788		0.104	0.09	0.44	73	0.24	3.70	44	1.5
M401789		0.116	0.11	0.60	62	0.28	3.95	45	1.8
M401790		0.074	0.08	0.44	74	0.24	3.52	47	1.6

***** See Appendix Page for comments regarding this certificate *****



ALS Canada Ltd.
2103 Dollarton Hwy
North Vancouver BC V7H 0A7
Phone: 604 984 0221 Fax: 604 984 0218 www.alsglobal.com

To: 0926764 B.C. LTD.
6238 ASHWORTH AVENUE
BURNABY BC V5E 3T7

Page: Appendix 1
Total # Appendix Pages: 1
Finalized Date: 13-SEP-2012
Account: 092BCL

CERTIFICATE OF ANALYSIS WH12195695

Method	CERTIFICATE COMMENTS
ME-MS41	Gold determinations by this method are semi-quantitative due to the small sample weight used (0.5g).

Appendix 3 (Personnel and Contractors)

Contractors: Bros Exploration Ltd

Contractor	Daily Rate	Activity	Days
Louis Bissonnette	\$550.00	Soil sampling	5
Francois Tremblay	\$450.00	Soil Sampling	5
Guillaume Pendault	\$450.00	Soil Sampling	5
Samuel Leamy	\$450.00	Soil Sampling	5
TOTAL			

Contractors:

ALS Minerals, North Vancouver, BC -- Soil assays.

Appendix 4 (Statement of Expenditures)

Prospecting	5 days	\$9,500.00
Truck Rental	5 days	\$750.00
Expenses	N/A	\$3,758.48
Report preparation		\$4,366.27
Sample Analysis		\$9,279.36
TOTAL		\$27,654.11